SECTION 5
EXPLODED VIEWS

NOTE :

- Non-serviceable items with no part number and no description are not stocked because they are not required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remarks column.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

Note : Les composants indentifies par une trame et par une marque ⚠ sonte d'une importance critique pour la securite. Ne les remplacer que par des pieces du numero specifie.

Note : The components identified by shading and marked ⚠ are critical for safety. Replace only with the part numbers specified in the parts list.

5-1. CHASSIS

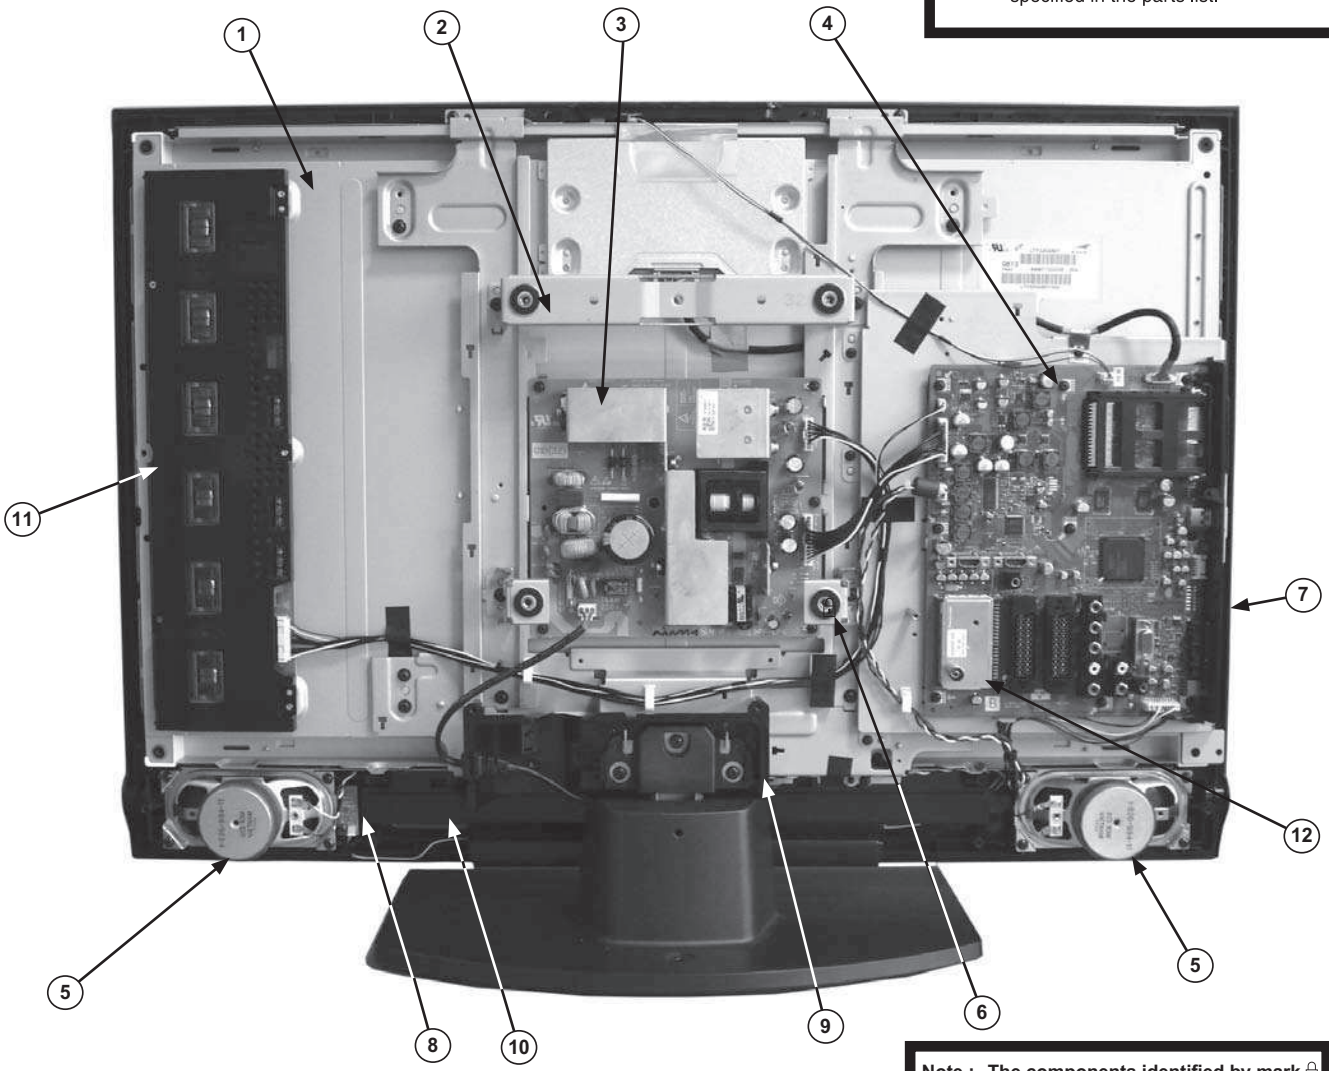

Note : **The components identified by mark 🔒 contain confidential information. Strictly follow the instructions when ever the components are repaired and/or replaced.**

REF.NO.		PART.NO	DESCRIPTION	REMARK
1	⚠	1-802-699-14	LCD PANEL (32INCH WXGA TFT)	
2		4-107-332-01	FRAME, VESA (TOP) (32)	
3		*1-474-099-11	POWER UNIT	
4 Rev 2.0	🔒	*1-857-143-11	MOUNTED PWB B (MAIN) (WE/OIRT/RUSS)	
Rev 2.0	🔒	*1-857-143-41	MOUNTED PWB B (MAIN) (UK)	
5		1-826-994-11	SPEAKER (12.6X5.7CM)	
6		4-107-333-01	FRAME, VESA (BOTTOM) (32)	
7		4-105-158-01	TERMINAL SIDE BKT	
8		4-105-160-01	GUIDE, RC (32)	
9		4-105-161-01	COVER, UNDER (32)	
10		4-105-162-01	BAR, UNDER (32)	
11		1-857-109-11	ETC-INVERTER MT BOARD	
12 Rev 2.0		1-693-777-11	TUNER, ENG37E10KF	

5-1. CHASSIS (cont)

Note : Les composants indentifies par une trame et par une marque ⚠ sonte d'une importance critique pour la securite. Ne les remplacer que par des pieces du numero specifie.

Note : The components identified by shading and marked ⚠ are critical for safety. Replace only with the part numbers specified in the parts list.

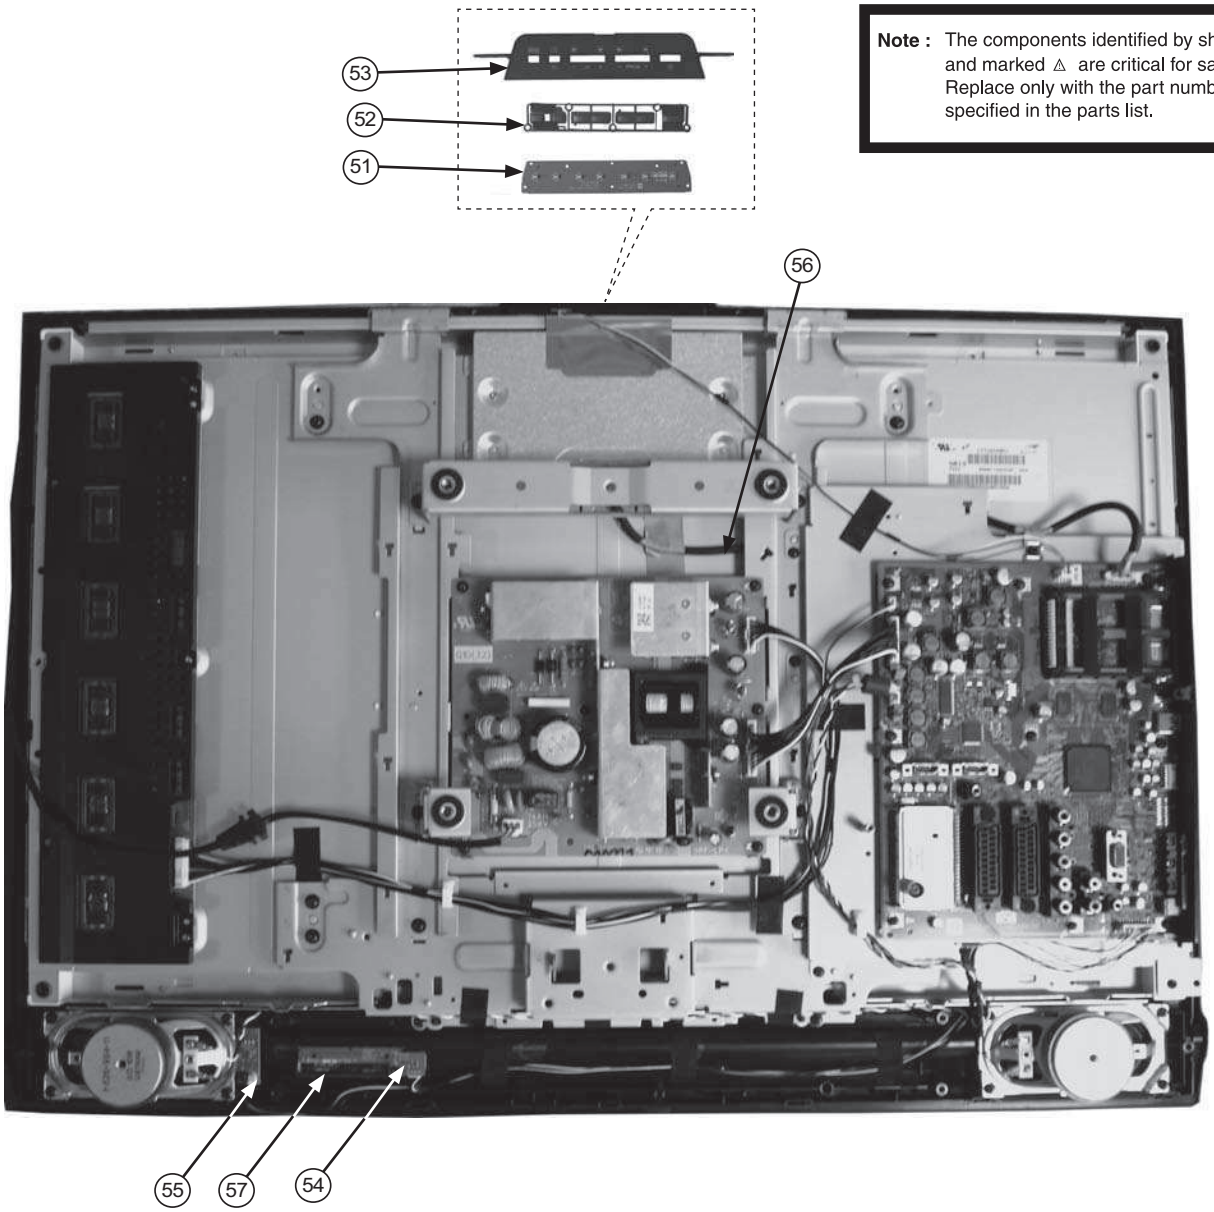

REF.NO.	PART.NO	DESCRIPTION	REMARK
51	*1-857-144-11	MOUNTED PWB H1 (KEY CONTROL)	
52	4-107-337-01	BUTTON	
53	4-107-338-01	BRACKET BUTTON	
54	*1-857-145-11	MOUNTED PWB H3 (LED)	
55	*1-857-146-11	MOUNTED PWB H4 (IR)	
56	*1-910-047-44	CONNECTOR ASSY LVDS 32	
57	4-105-159-01	GUIDE, LED (32)	

5-2. BEZEL & STAND ASSY

Note : Les composants indentifies par une trame et par une marque ⚠ sonte d'une importance critique pour la securite. Ne les remplacer que par des pieces du numero specifie.

Note : The components identified by shading and marked ⚠ are critical for safety. Replace only with the part numbers specified in the parts list.

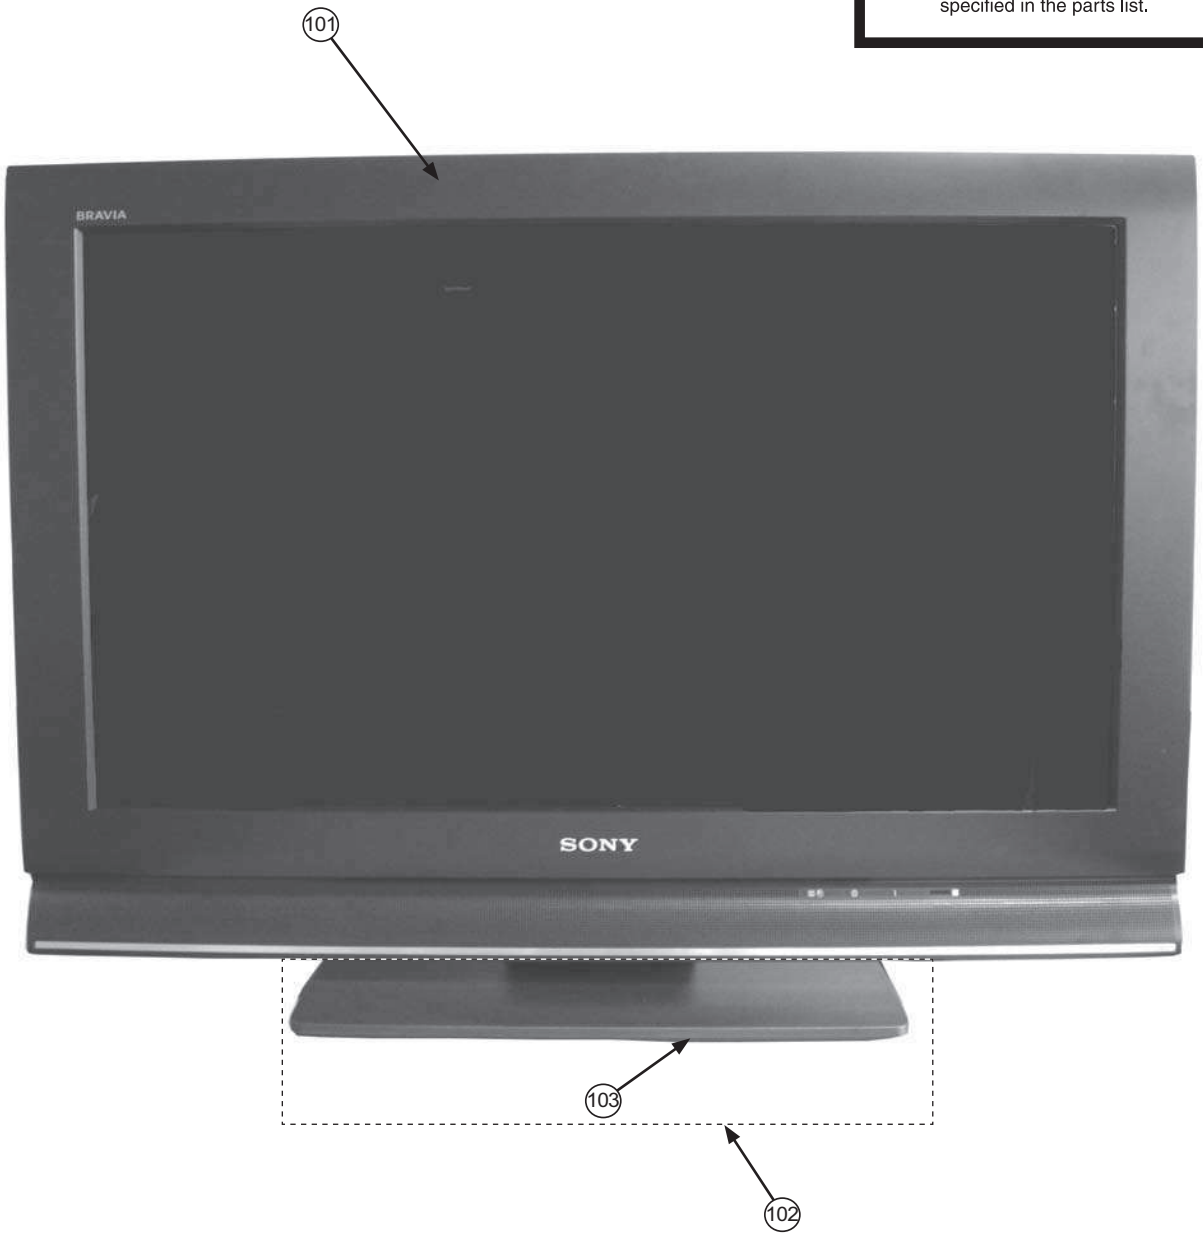

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
101	X-2319-142-1	BEZEL (32) ASSY					
102	X-2319-144-1	STAND ASSY	103				
103	4-105-164-01	COVER, STAND					

5-3. REAR COVER & POWER SUPPLY CORDS

Note : Les composants indentifies par une trame et par une marque ⚠ sonte d'une importance critique pour la securite. Ne les remplacer que par des pieces du numero specifie.

Note : The components identified by shading and marked ⚠ are critical for safety. Replace only with the part numbers specified in the parts list.

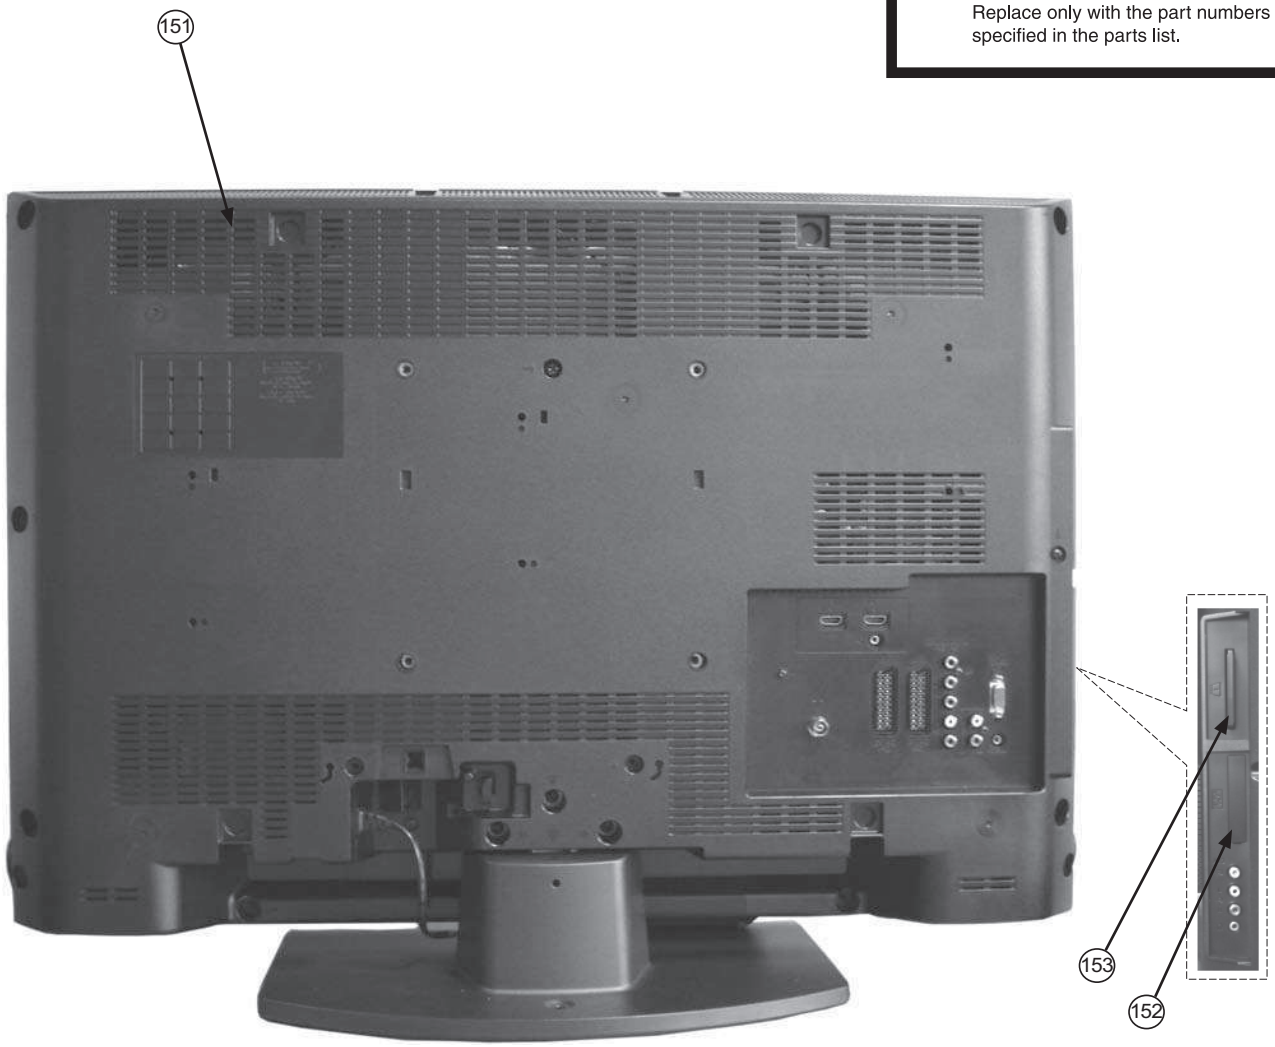

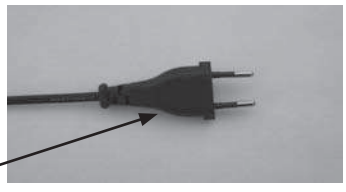

REF.NO.	PART.NO	DESCRIPTION	REMARK
151	X-2319-143-1	REAR COVER ASSY	
152	4-105-163-01	COVER,SERVICE	
153	*4-105-505-01	CARD,DUMMY PC	

REF.NO.		PART.NO	DESCRIPTION	REMARK
154	⚠	1-835-571-11	POWER SUPPLY CORD (WITH CONNECTOR)	(AEP)
155	⚠	1-835-572-11	POWER SUPPLY CORD (WITH CONNECTOR)	(UK)

REF.NO.	PART.NO	DESCRIPTION	REMARK

ACCESSORIES AND CONNECTORS

	1-910-047-44	CONNECTOR ASSY LVDS 32 (J3(B)-PANEL)
*	3-878-284-11	INSTRUCTION MANUAL (UK) ENGLISH
*	3-878-284-21	INSTRUCTION MANUAL (WE) GERMAN/SPANISH/ FRENCH/GREEK/ITALIAN/DUTCH/PORTUGUESE
*	3-878-284-31	INSTRUCTION MANUAL (OIRT) DANISH/FINNISH/ ENGLISH/NORWEGIAN/POLISH/RUSSIAN/SWEDISH
*	3-878-284-41	INSTRUCTION MANUAL (OIRT) CZECH/HUNGARIAN/ SLOVAK/TURKISH

REMOTE COMMANDER

	1-480-904-11	REMOTE COMMANDER (RM-ED014)

Note: Connector Harnesses (except the LVDS Connector Assy) are not serviceable parts in this model and so are not listed above.

9-883-411-03

Sony Corporation
Sony UK
Service Promotions Dept.

English
08KP7100-1
Printed in U.K.
© 2008.11