FC6092





Philips Domestic Appliances and Personal Care

ServiceManual

PRODUCT INFORMATION

- This product meets the requirements regarding interference suppression on radio and TV.
- After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.

TECHNICAL INFORMATION

Adapter AC / DC : 230 V / 21 V DC - 250 mA
 Rechargeable batteries : 10 x NiCd - 1700 mAh

Run time : 9.5 min.
Charging time : 16-18 hours
Charge indicator : LED

- Charging base : Standing, also wall mountable

- 12 V Operation : 5 m car cord provided for external 12 V DC connection

(no charging)

- Air flow system : Cyclonic action

- Accessories : Crevice, bendable crevice

and brush

- Application

environment : Dry

- Filter : 2-stage type, washable

- Dust capacity : 450 ml

Charge/Discharge indication

Charging : Blue LED lights up during chargingBattery Low : Blue LED blinks fast during discharge

after battery pack voltage drops below

 $9.5 \text{ V} \pm 0.2 \text{ V}$

REPAIR INSTRUCTIONS

- No specific issues


ASSEMBLY & DISASSEMBLY ADVICE

- To remove the back plate assy, first remove the rubber screw hole cover and the screw in the back plate.
- To open the cleaner, first remove the 6 screws and then gently open it up by using a screwdriver between both body sides at the front of the cleaner to unsnap both parts from each other.

OPTIONAL (accessories)

- No specific issues

Electrical diagram

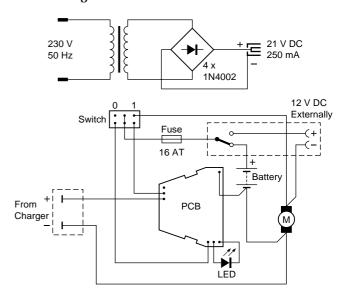


Published by Philips Domestic Appliances and Personal Care

Printed in the Netherlands

© Copyright reserved

Subject to modification



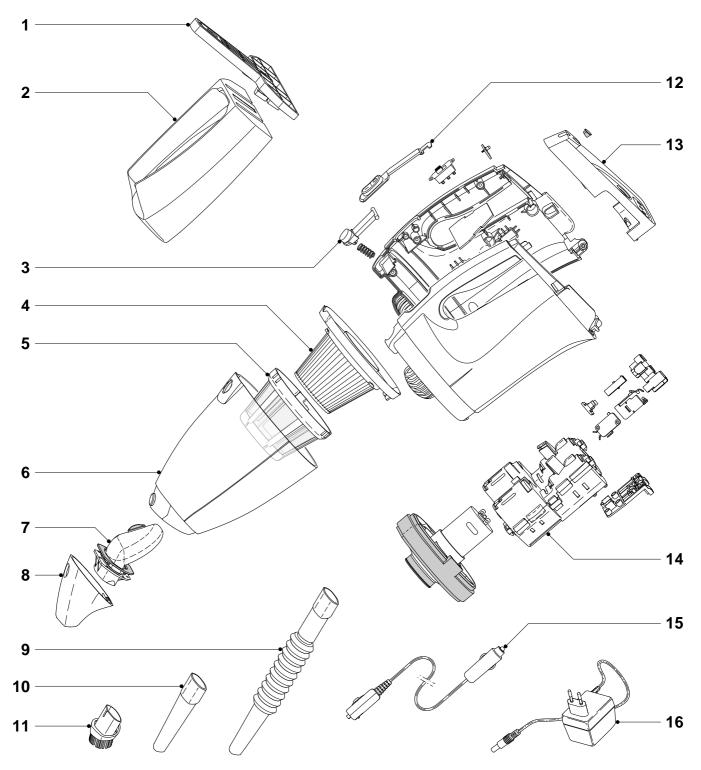

| Pos | Service code | Description |
|-----|----------------|-----------------------|
| 1 | 9965 000 36274 | Wall mount |
| 2 | 9965 000 36275 | Charging base assy |
| 3 | 9965 000 36276 | Nozzle release button |
| 4 | 9965 000 36262 | Inner filter assy |
| 5 | 9965 000 36263 | Mesh filter assy |
| 6 | 9965 000 36277 | Dust case assy |
| 7 | 9965 000 36265 | Stream control assy |
| 8 | 9965 000 36279 | Nose piece |
| 9 | 9965 000 36280 | Bendable crevice tool |
| 10 | 9965 000 36281 | Crevice tool |

| Pos | Service code | Description |
|-----|----------------|---------------------|
| 11 | 9965 000 36282 | Small brush |
| 12 | 9965 000 36270 | Switch cover |
| 13 | 9965 000 36278 | Back plate assy |
| 14 | 9965 000 36283 | Battery pack 12 V |
| 15 | 9965 000 36284 | Car plug assy |
| 16 | 9965 000 36285 | Charger WE |
| | 9965 000 41650 | Charger UK/Hongkong |
| | 9965 000 41651 | Charger Korea |
| | 9965 000 41652 | Charger Taiwan |
| | 9965 000 41649 | Charger PRC |