

SECTION 7

EXPLODED VIEWS


NOTE:

- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.

- Hardware (# mark) list and accessories and packing materials are given in the last of this parts list.
- Abbreviation
EE: East European model

The components identified by mark  or dotted line with mark  are critical for safety.
Replace only with part number specified.

7-1. MAIN SECTION

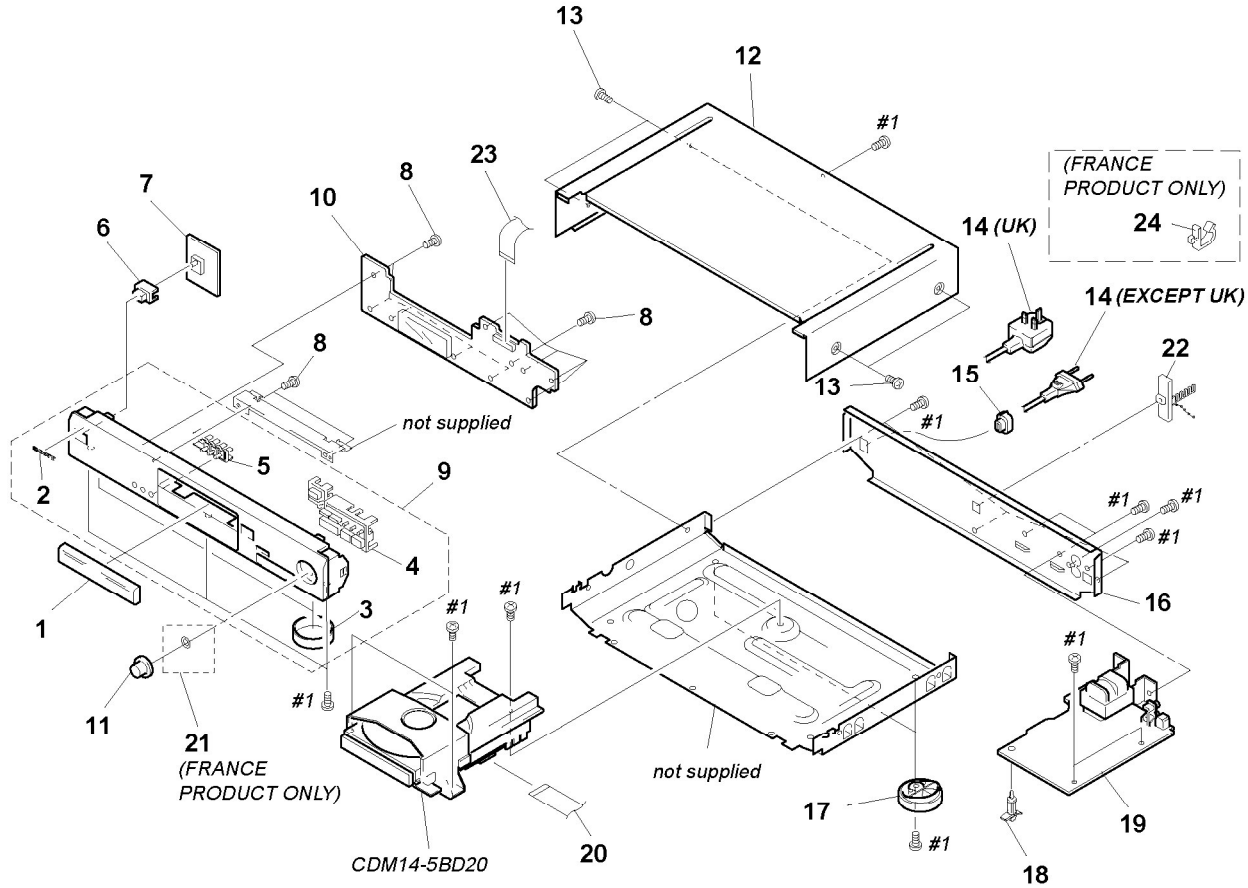

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	4-977-588-51	PANEL, LOADING (XE210)		* 16	4-988-712-01	PANEL, BACK (XE210:AEP,EE,CIS)	
1	4-977-588-61	PANEL, LOADING (XE310)				(FRANCE PRODUCT)	
2	4-963-404-21	EMBLEM (5-A), SONY					
3	4-977-593-01	RING (DIA. 50), ORNAMENTAL		* 16	4-988-712-11	PANEL, BACK (XE210:UK)(FRANCE PRODUCT)	
4	4-977-583-01	BUTTON (PLAY)		* 16	4-988-712-21	PANEL, BACK (XE310:AEP,EE,CIS)	
						(FRANCE PRODUCT)	
5	4-977-584-21	BUTTON (TIME)		* 16	4-988-712-31	PANEL, BACK (XE310:UK)(FRANCE PRODUCT)	
6	4-977-589-01	BUTTON (POWER)		* 16	4-979-971-51	PANEL, BACK (XE210:AEP,EE,CIS)	
* 7	1-658-840-21	POWER SW BOARD				(HUNGARY PRODUCT)	
8	4-951-620-01	SCREW (2.6X8), +BVTP		* 16	4-979-971-61	PANEL, BACK (XE210:UK)(HUNGARY PRODUCT)	
9	X-4947-866-1	PANEL ASSY, FRONT (XE210)					
				* 16	4-979-971-71	PANEL, BACK (XE310:AEP,EE,CIS)	
9	X-4947-867-1	PANEL ASSY, FRONT (XE310)				(HUNGARY PRODUCT)	
* 10	A-4699-465-A	PANEL BOARD, COMPLETE		* 16	4-979-971-81	PANEL, BACK (XE310:UK)(HUNGARY PRODUCT)	
11	4-977-590-01	KNOB (AMS)(FRANCE PRODUCT)		17	X-4947-207-1	FOOT ASSY (F50150S)	
11	4-986-500-01	KNOB (AMS)(HUNGARY PRODUCT)		* 18	4-954-051-51	HOLDER, PC BOARD	
* 12	4-978-901-21	CASE (408226)		* 19	A-4699-464-A	MAIN BOARD, COMPLETE	
13	3-363-099-01	SCREW (CASE 3 TP2)		20	1-776-100-11	WIRE (FLAT TYPE)(23 CORE)	
△ 14	1-575-651-21	CORD, POWER (EXCEPT UK)		21	3-354-981-01	SPRING (SUS), RING (FRANCE PRODUCT)	
△ 14	1-696-907-11	CORD, POWER (UK)		22	4-956-370-02	BAND, PLUG FIXED (UK)	
15	4-966-267-11	BUSIIING (FBS001), CORD		23	1-776-099-11	WIRE (FLAT TYPE)(21 CORE)	
				* 24	4-949-235-01	HOOK (EXCEPT UK)(FRANCE PRODUCT)	