


5. REPAIR PARTS LIST

5-1. EXPLODED VIEWS

5-1-1. OVERALL ASSEMBLY

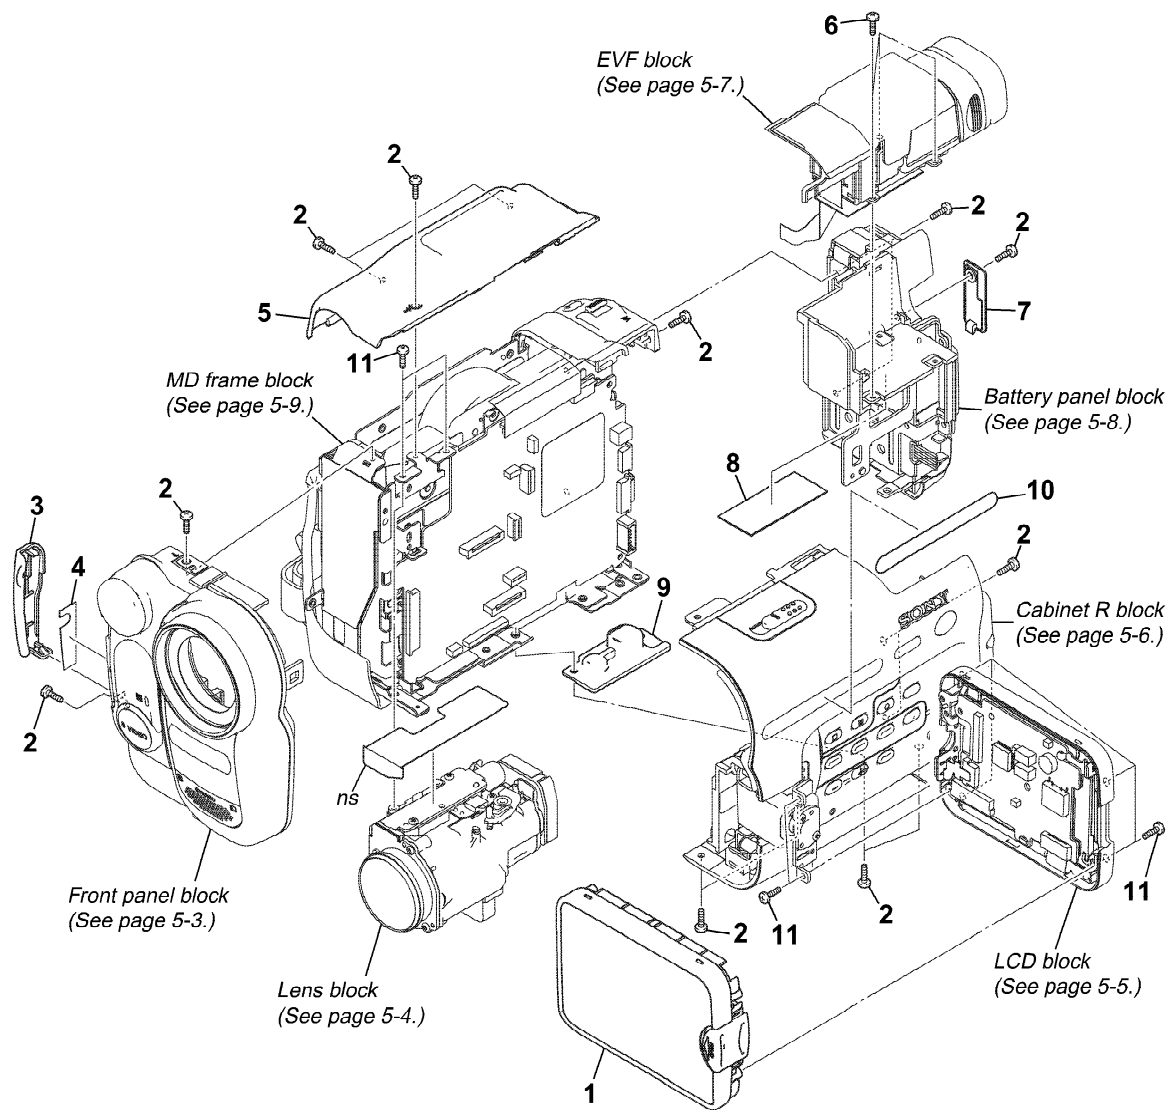

Ref. No.	Part No.	Description
1	X-3953-989-1	CABINET (C) (587) ASSY, P
2	3-080-203-31	SREW (M2), LOCK ACE, P2
3	3-087-813-01	COVER (51), JACK
4	3-087-812-21	SHEET (51), JACK (TRV255E)
4	3-087-812-31	SHEET (51), JACK (TRV260/TRV265/TRV265E)
5	3-087-811-01	CABINET (UPPER) (51)


Ref. No.	Part No.	Description
6	3-078-889-11	SCREW (M1.7)
7	3-087-810-01	LID (51), CPC
8	CAUTION	RETAINER (51), EVF FLEXIBLE
9	3-079-012-01	SCREW (30), TRIPOD
10	3-087-831-21	LABEL (51)
11	3-080-204-21	SCREW, TAPPING, P2

CAUTION :
For the part of 8 : RETAINER (51), EVF FLEXIBLE (3-088-616-01), cut WOVEN (T0.25), FABRIC NON (3-076-631-01) into the desired length and use it.

5. REPAIR PARTS LIST

5-1-2. FRONT PANEL BLOCK

ns: not supplied

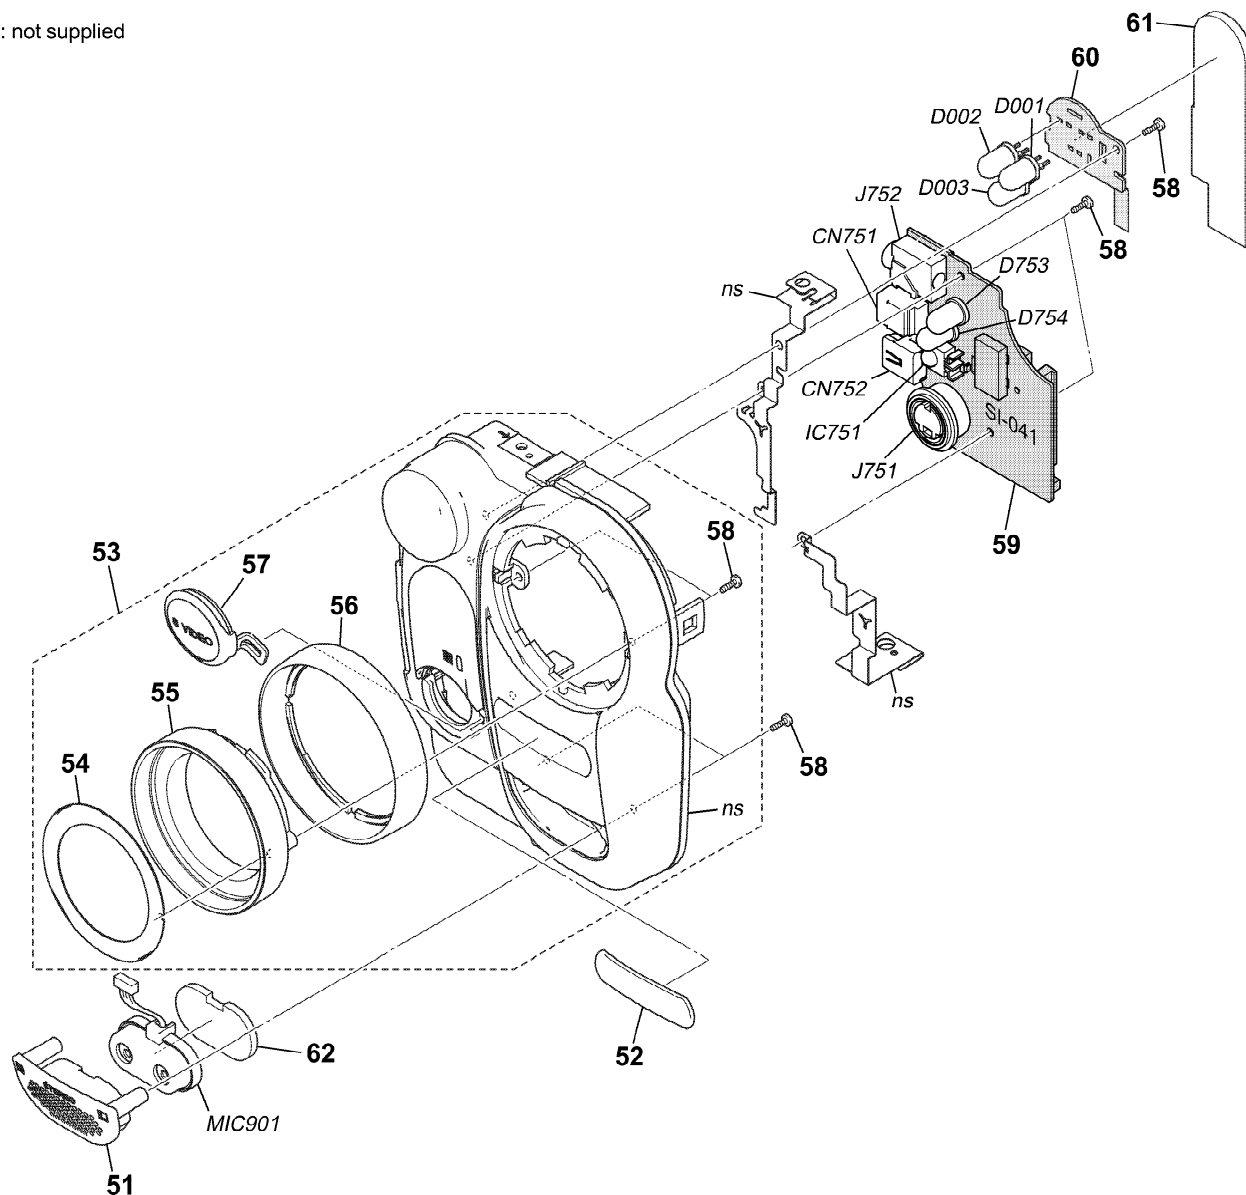


(Note) CN751, CN752, D753, D754, IC751, J751 and J752 are not included in SI-041 complete board.

Ref. No.	Part No.	Description
51	3-087-738-11	RETAINER (51), MICROPHONE
52	3-087-740-01	PLATE (51), MAGNIFICATION
53	X-3953-990-1	PANEL (587) ASSY, FRONT (TRV255E/TRV260)
53	X-3953-991-1	PANEL (590) ASSY, FRONT (TRV265/TRV265E)
54	3-087-739-01	PLATE (51), NAME
55	3-087-743-01	SCREW (51), FILTER
56	3-087-742-01	RING (51), FRONT
57	3-087-749-01	COVER (51), S TERMINAL
58	3-080-204-21	SCREW, TAPPING, P2
59	A-7111-952-A	SI-041 BOARD, COMPLETE (Note)
60	1-860-929-11	FP-792 FLEXIBLE BOARD
61	3-087-994-01	CUSHION (51), JACK
62	3-088-031-01	CUSHION (51), MICROPHONE

Ref. No.	Part No.	Description
CN751	1-794-276-11	CONNECTOR, SQUARE TYPE 4P (DV OUT/DV) (Note)
CN752	1-794-962-11	CONNECTOR, SQUARE TYPE (USB 5P) (USB) (Note)
D001	6-500-744-01	DIODE NSPW500BS-TL2 (VIDEO LIGHT)
D002	6-500-744-01	DIODE NSPW500BS-TL2 (VIDEO LIGHT)
D003	6-500-744-01	DIODE NSPW500BS-TL2 (VIDEO LIGHT)
D753	8-719-060-65	DIODE DCC3810 (IR EMITTER) (Note)
D754	8-719-060-65	DIODE DCC3810 (IR EMITTER) (Note)
IC751	6-704-975-01	IC RPM7240-V4 (Note)
J751	1-778-518-11	CONNECTOR, EXTERNAL (S VIDEO OUT) (Note)
J752	1-778-040-11	JACK, SMALL TYPE (A/V OUT) (Note)
MIC901	1-542-513-11	MICROPHONE

5. REPAIR PARTS LIST

5-1-3. LENS BLOCK

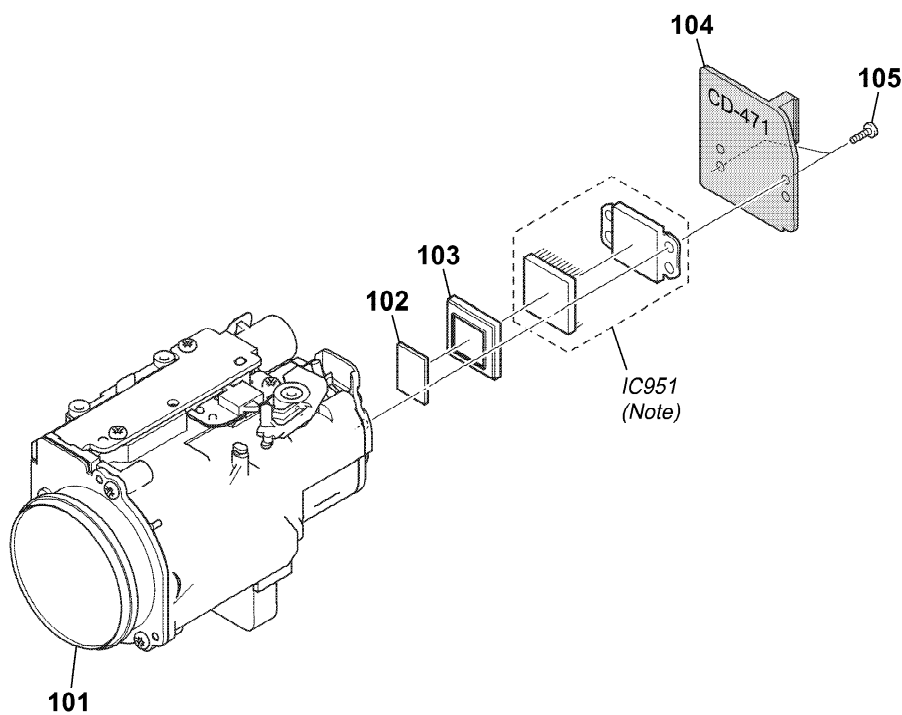


(Note) Be sure to read "Precuations for Replacement of CCD Imager" on page 4-8 when changing the CCD imager.

Ref. No.	Part No.	Description
101	8-848-765-01	DEVICE, LENS LSV-820A
102	1-758-554-11	FILTER BLOCK, OPTICAL
103	3-053-973-01	RUBBER (W), SEAL
104	A-7111-947-A	CD-471 BOARD, COMPLETE

Ref. No.	Part No.	Description
105	3-080-204-21	SCREW, TAPPING, P2
IC951	A-7013-401-A	CCD BLOCK ASSY (CCD IMAGER) (TRV255E/TRV265E) (Note)
IC951	A-7016-724-A	CCD BLOCK ASSY (CCD IMAGER) (TRV260/TRV265) (Note)

5. REPAIR PARTS LIST

5-1-4. LCD BLOCK

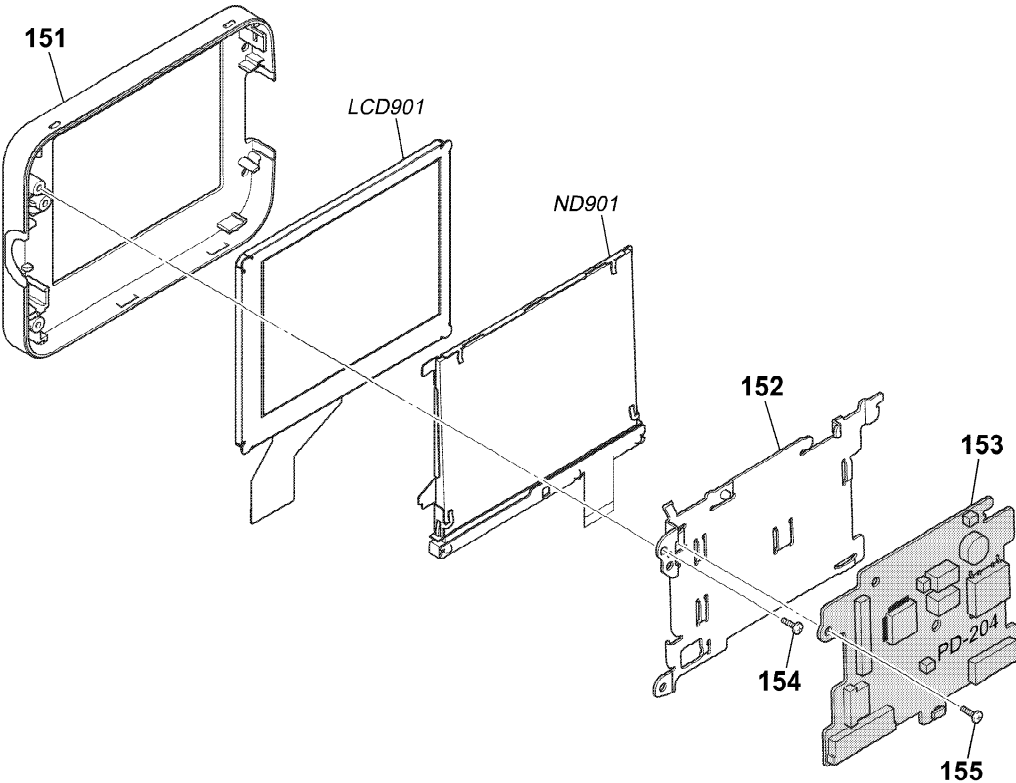

(Note) About PD-204 board and LCD module, discriminate LCD type on the machine referring to page 1-3, and replace the same type.


The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque $\triangle$ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
--	--

Ref. No.	Part No.	Description
151	3-087-780-01	CABINET (M) (51), P
152	3-087-781-01	FRAME (51), PANEL
153	A-7111-949-A	PD-204 BOARD, COMPLETE (TYPE S) (Note)
153	A-7111-948-A	PD-204 BOARD, COMPLETE (TYPE C) (Note)
154	3-080-204-21	SCREW, TAPPING, P2
155	3-078-889-11	SCREW (M1.7)

Ref. No.	Part No.	Description
LCD901	1-805-137-51	INDICATOR MODULE LIQUID CRYSTAL (TYPE S) (Note)
LCD901	1-805-138-21	INDICATOR MODULE LIQUID CRYSTAL (TYPE C) (Note)
$\triangle$ ND901	1-518-951-11	TUBE, FLUORESCENT, COLD CATHODE

5. REPAIR PARTS LIST

5-1-5. CABINET R BLOCK

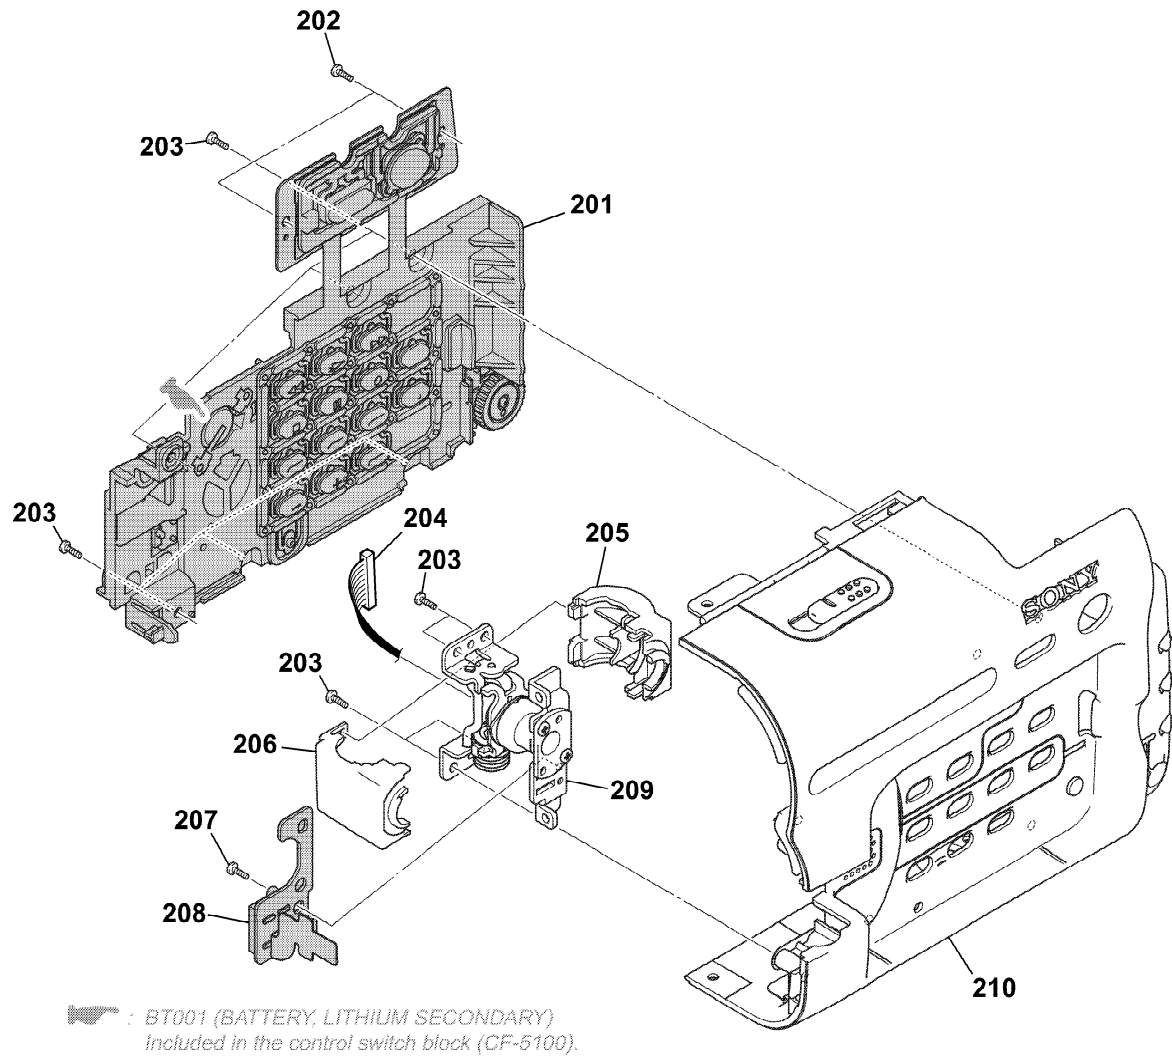


Ref. No.	Part No.	Description
201	1-478-416-21	KEY BLOCK, CONTROL (CF-5100)
202	3-080-206-11	SCREW, TAPPING, P2
203	3-080-205-21	SCREW, TAPPING, P2
204	1-962-648-11	HARNESS (PD-124)
205	3-087-826-01	COVER (M) (51), HINGE
206	3-087-825-11	COVER (C) (51), HINGE

Ref. No.	Part No.	Description
207	3-078-889-11	SCREW (M1.7)
208	1-478-418-11	KEY BLOCK, CONTROL (PR-5100)
209	X-3953-962-1	HINGE (51) ASSY
210	X-3954-043-1	CABINET (R) (585) ASSY (TRV255E)
210	X-3953-988-1	CABINET (R) (587) ASSY (TRV260/TRV265/TRV265E)

5. REPAIR PARTS LIST

5-1-6. EVF BLOCK

ns: not supplied

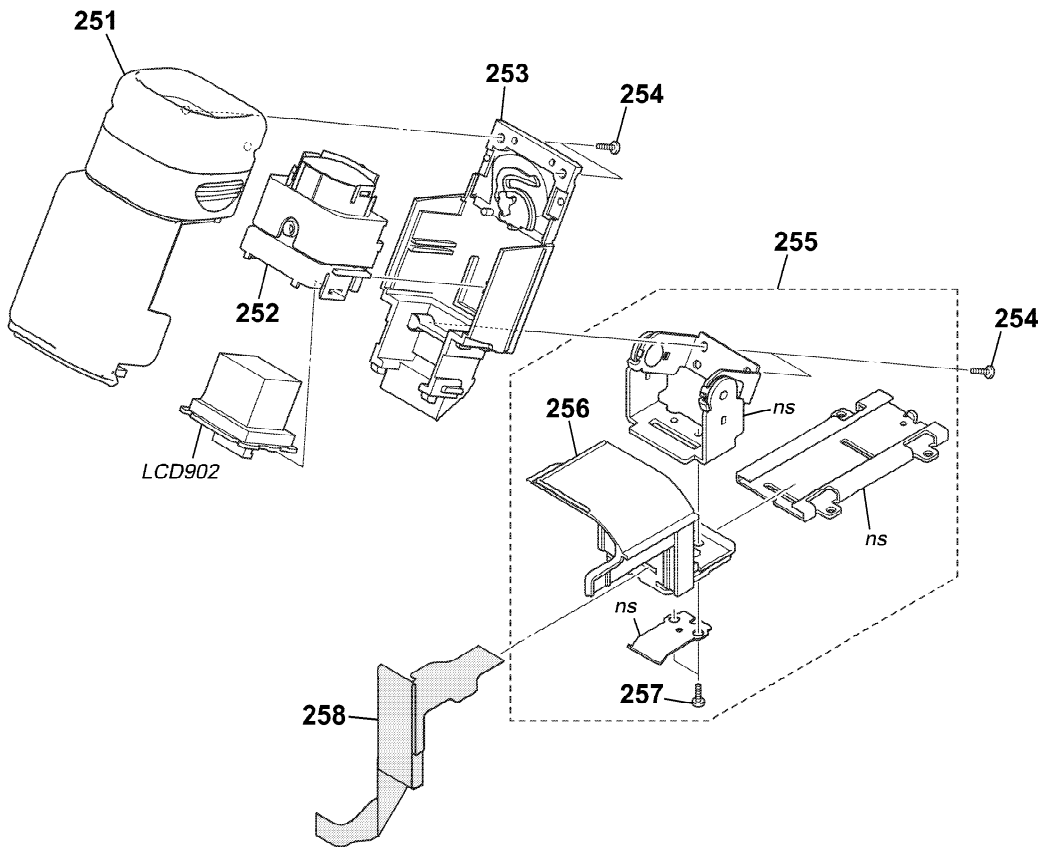


Ref. No.	Part No.	Description
251	X-3953-982-1	CABINET (UPPER) (587) ASSY, EVF
252	X-3951-166-1	LENS (M) ASSY, VF
253	X-3953-966-1	CABINET (LOWER) (515) ASSY, EVF
254	3-080-204-21	SCREW, TAPPING, P2
255	X-3953-967-1	BASE (51) ASSY, SLDE
256	3-087-788-01	BASE (51), SLIDE

Ref. No.	Part No.	Description
257	3-080-203-31	SCREW (M2), LOCK AGE, P2
258	1-860-928-11	FP-797 FLEXIBLE BOARD
LCD902	1-805-465-61	INDICATOR MODULE LIQUID CRYSTAL (TRV260/TRV265)
LCD902	1-805-465-81	INDICATOR MODULE LIQUID CRYSTAL (TRV255E/TRV265E)

5. REPAIR PARTS LIST

5-1-7. BATTERY PANEL BLOCK

ns: not supplied

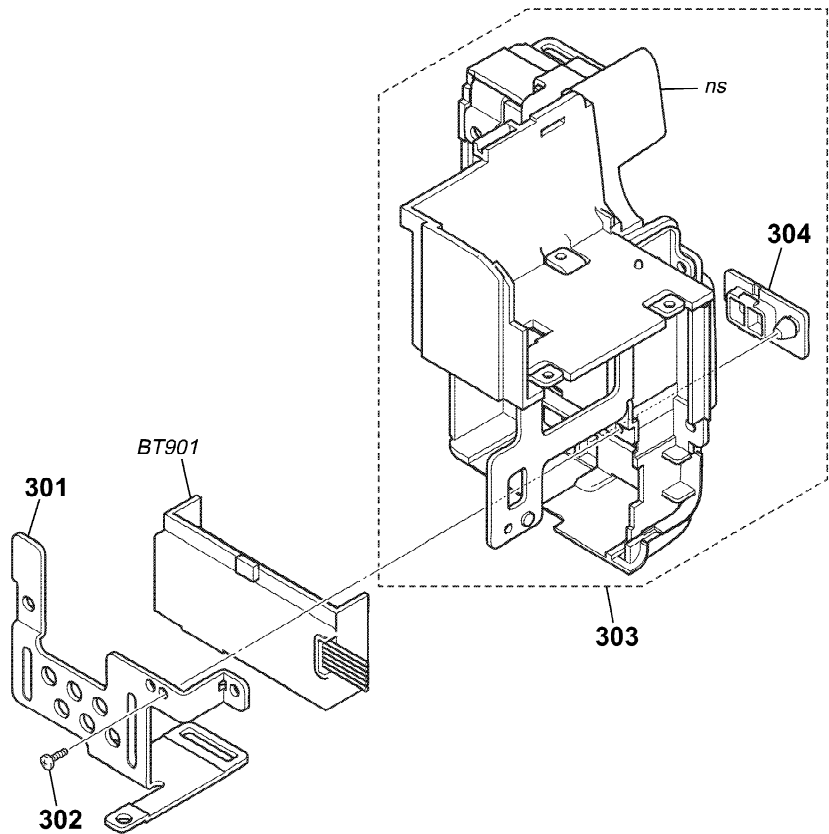


Ref. No.	Part No.	Description
301	3-087-799-01	SHEET METAL (LOWER) (51), STRAP
302	3-078-889-11	SCREW (M1.7)
303	X-3953-968-1	PANEL (515) ASSY, BATTERY

Ref. No.	Part No.	Description
304	3-072-305-01	LID (2500), JACK
BT901	1-694-772-11	TERMINAL BOARD, BATTERY

5. REPAIR PARTS LIST

5-1-8. MD FRAME BLOCK

ns: not supplied

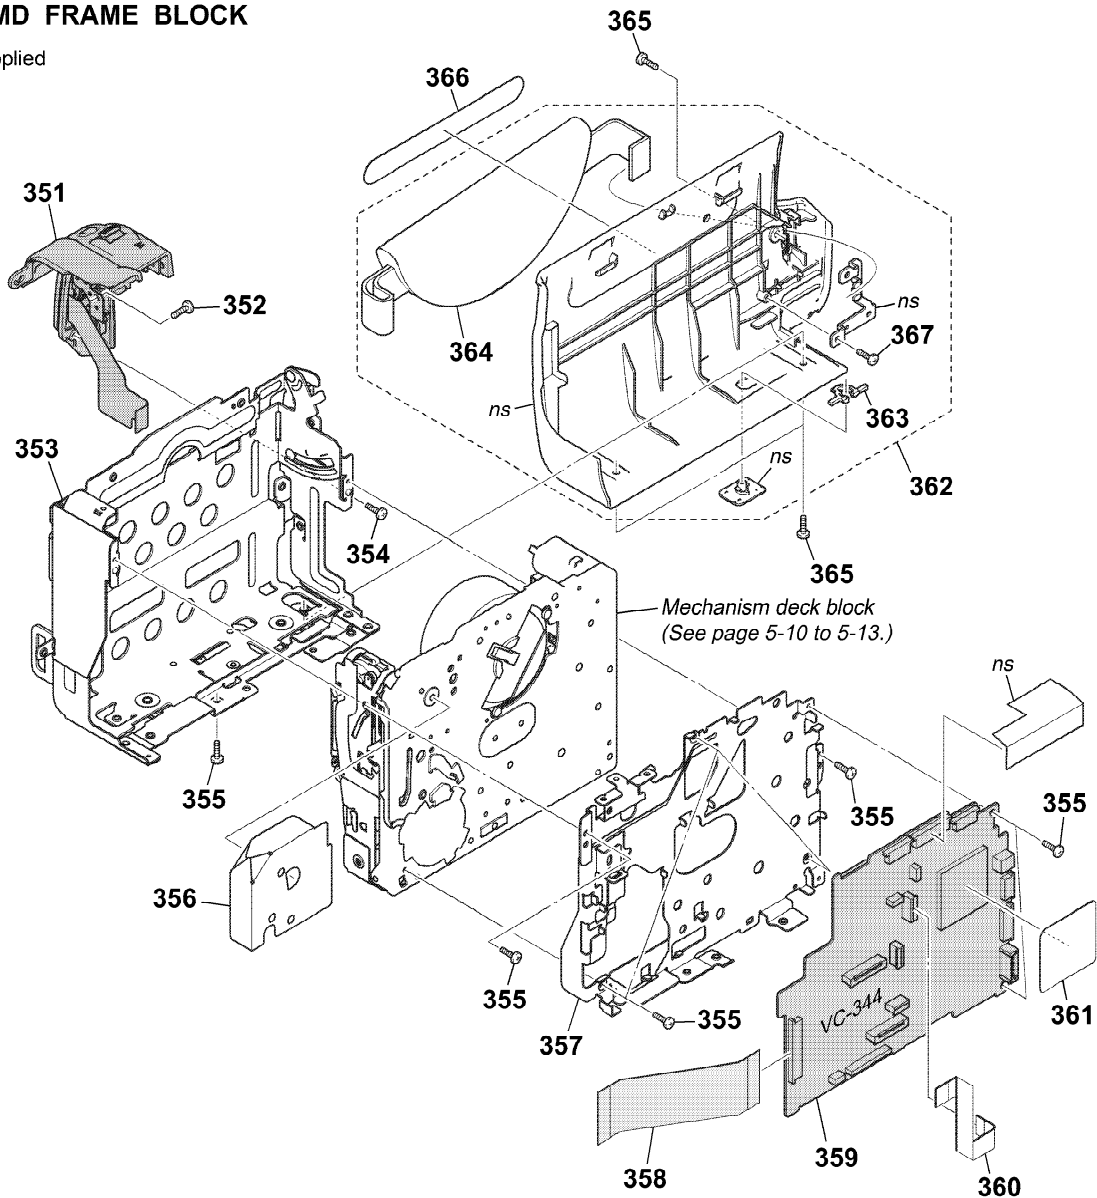


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
351	1-478-417-31	KEY BLOCK, CONTROL (SS-5100)	361	3-089-368-01	LABEL, FUSE REPLACEMENT (51) (TRV260)
352	3-080-253-01	SCREW (M1.7), LOCK ACE, P2	362	X-3953-957-1	CABINET (L) (51) ASSY
353	X-3953-958-2	FRAME (51) ASSY, CS	363	3-978-765-01	SLIDER, G LOCK
354	3-080-204-21	SCREW, TAPPING, P2	364	3-087-802-01	BELT (51), GRIP
355	3-078-889-11	SCREW (M1.7)	365	3-080-203-31	SREW (M2), LOCK ACE, P2
356	3-066-169-01	SHEET (30), MD	366	3-087-833-01	LABEL (L) (56) (TRV255E)
357	3-087-809-01	FRAME (51), MD	366	3-087-833-11	LABEL (L) (56) (TRV260)
358	1-860-927-11	FP-796 FLEXIBLE BOARD	366	3-087-833-31	LABEL (L) (56) (TRV265)
359	A-7112-398-A	VC-344 BOARD, COMPLETE (SERVICE)	366	3-087-833-41	LABEL (L) (56) (TRV265E)
360	1-827-980-11	CABLE, FLEXIBLE FLAT (FFC-005)	367	3-080-204-11	SCREW, TAPPING, P2

5. REPAIR PARTS LIST

5-1-9. CASSETTE COMPARTMENT ASSEMBLY, DRUM ASSEMBLY

ns: not supplied

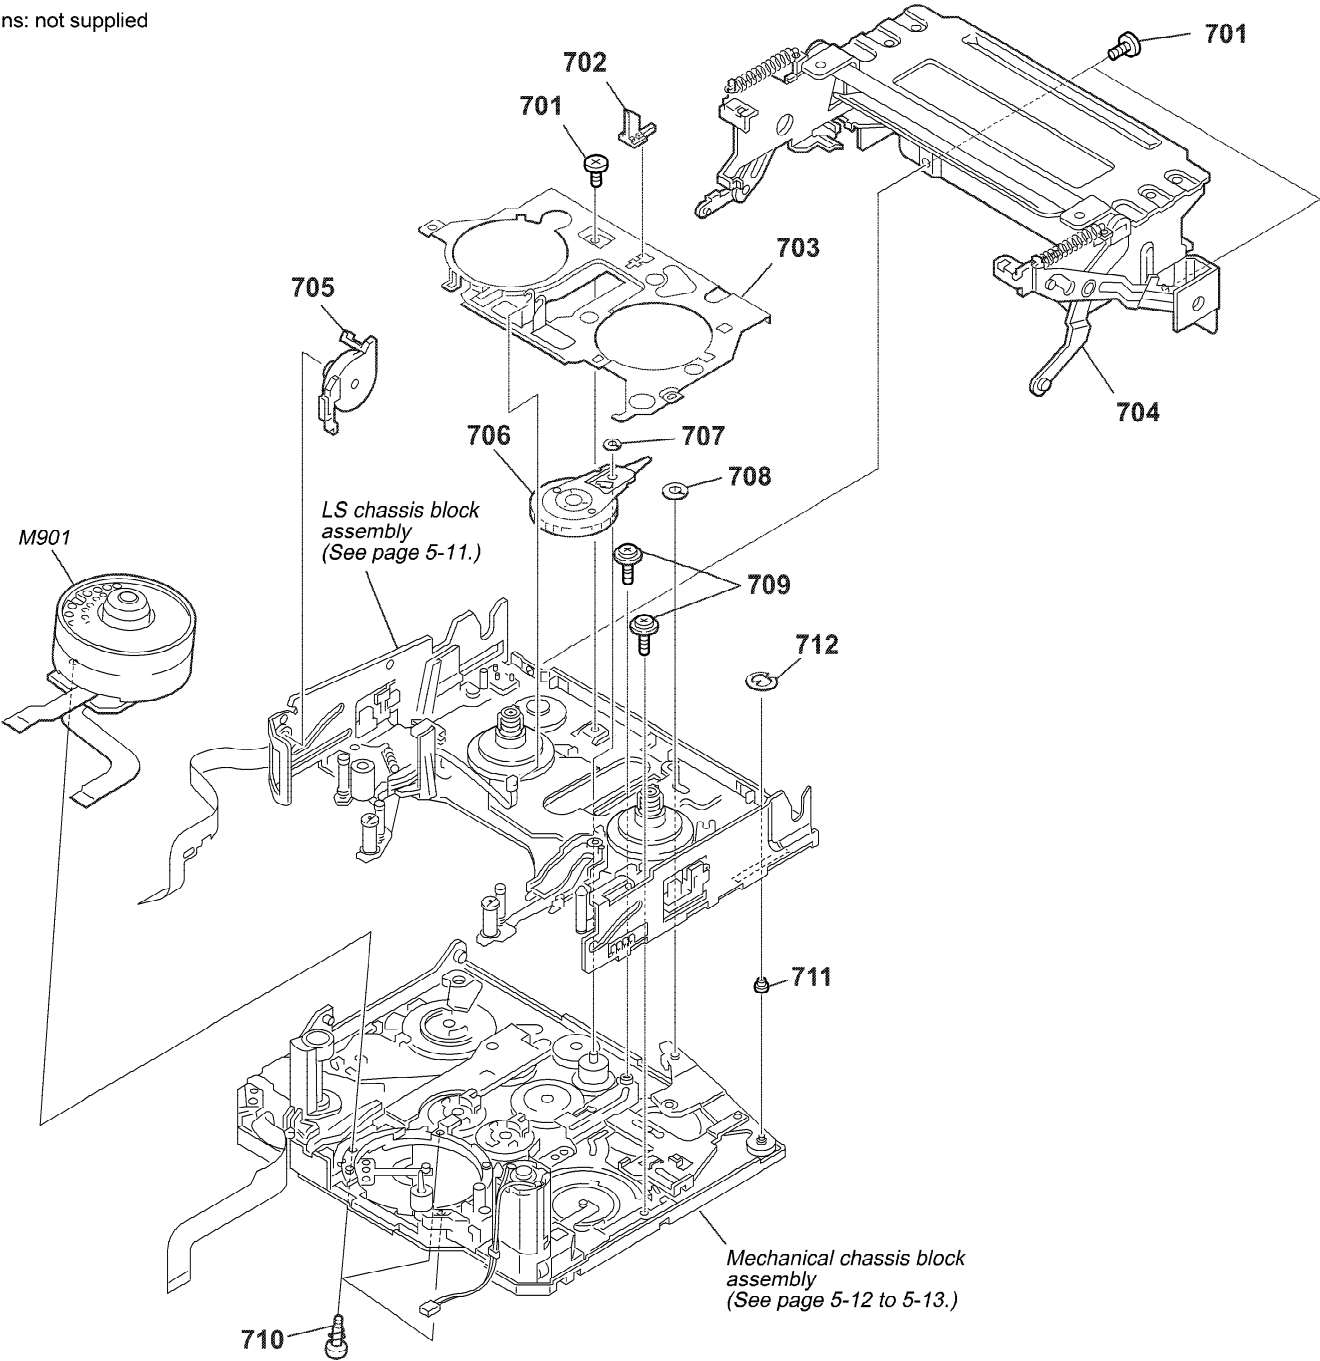


Ref. No.	Part No.	Description
701	3-065-932-01	PAN (2 MAIN M1.4X1.6), CAMERA
702	3-065-895-01	LEVER, REEL RELEASE
703	3-065-896-01	PLATE, BLIND
704	X-3951-298-1	CASSETTE COMPARTMENT ASSY
705	X-3951-302-1	DAMPER ASSY
706	X-3951-297-1	GEAR ASSY, R DRIVE
707	3-065-840-01	CUT (0.98X3X0.13), LUMILER (W)

Ref. No.	Part No.	Description
708	3-065-935-01	HLC CUT 1.8X4X0.5
709	3-947-503-01	SCREW (M1.4)
710	X-3951-299-1	SCREW ASSY, DRUM FITTING
711	3-074-309-01	ROLLER A, LS GUIDE
712	7-624-101-04	STOP RING 1.2 (E TYPE)
M901	A-7048-986-A	DRUM (DKH-04B-R) (SERVICE)

5. REPAIR PARTS LIST

5-1-10. LS CHASSIS BLOCK ASSEMBLY

ns: not supplied

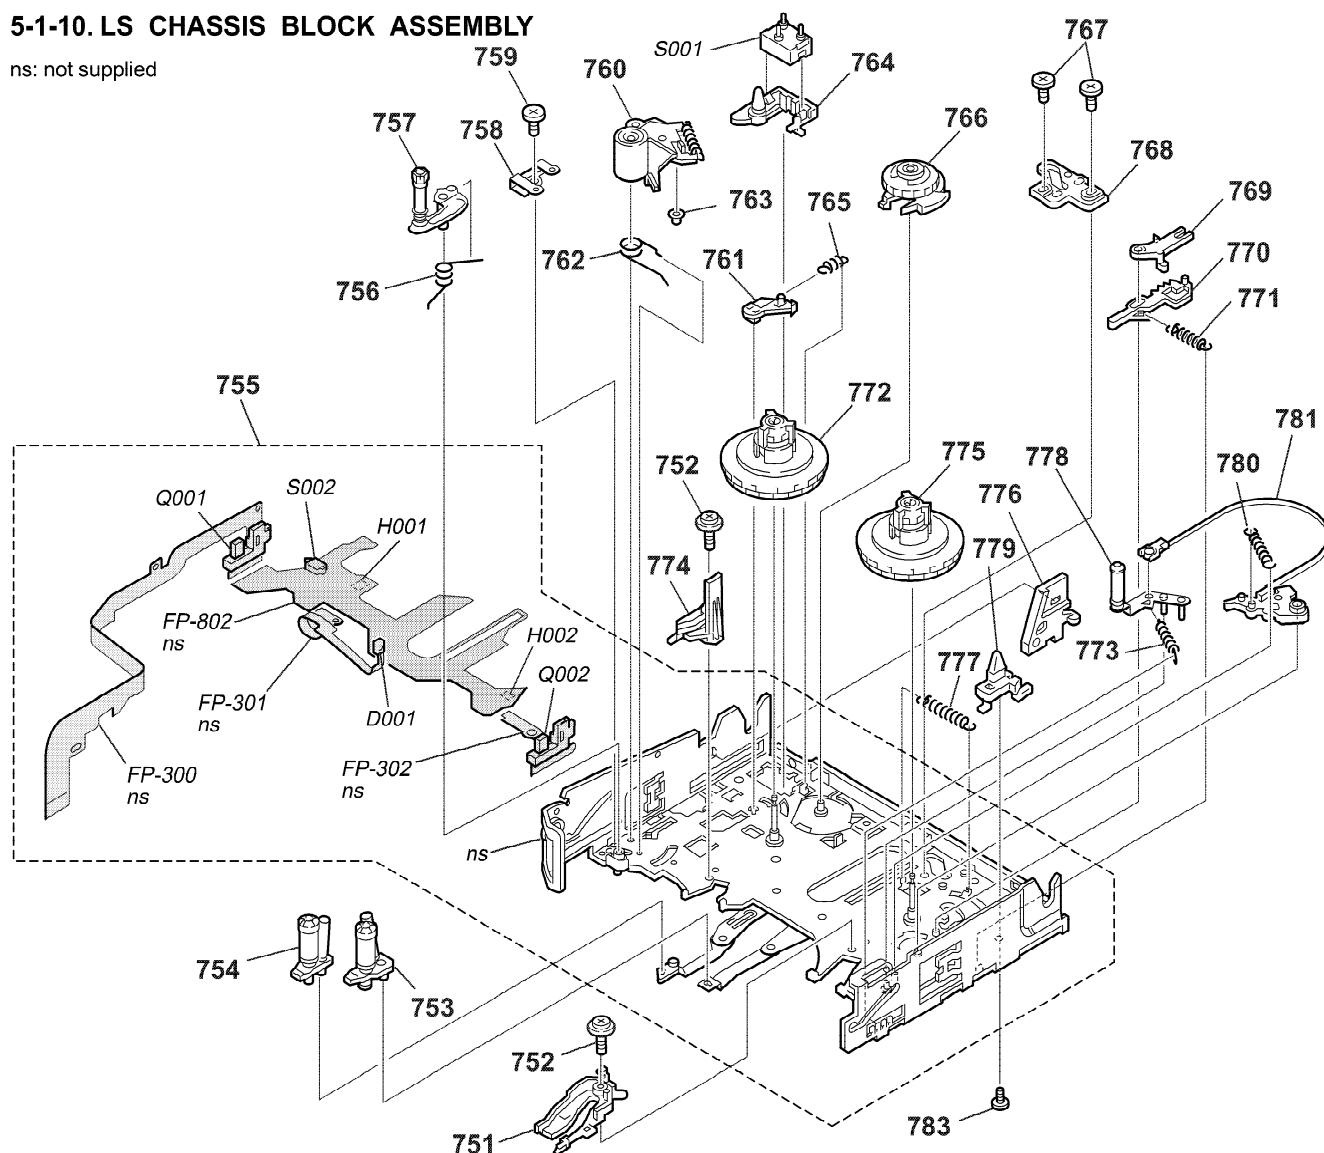


Ref. No.	Part No.	Description
751	3-065-822-02	RAIL (S), GUIDE
752	3-947-503-01	SCREW (M1.4)
753	A-7096-416-B	BASE (S) BLOCK ASSY, GUIDE
754	A-7096-415-A	BASE (T) BLOCK ASSY, GUIDE
755	A-7096-426-A	CHASSIS ASSY, LS
756	3-065-802-01	SPRING, TG7 ARM
757	A-7096-414-A	ARM BLOCK ASSY, TG7
758	3-065-801-01	RETAINER, TG7
759	3-065-932-01	PAN (2 MAIN M1.4X1.6), CAMERA
760	X-3951-303-1	ARM ASSY, PINCH
761	3-065-823-01	ARM, T RATCHET
762	3-065-794-01	ROAD (SPR), PINCH ARM
763	3-065-792-01	ROLLER, P LIM ARM
764	3-065-834-01	GUIDE (T), CASSETTE
765	3-065-824-01	SPRING, T RATCHET
766	A-7096-417-A	SOFT ASSY, T
767	3-071-650-01	SCREW (M1.7) (S)
768	3-065-832-01	PLATE, LS CAM
769	3-065-828-01	ARM, S RATCHET
770	3-065-829-01	PLATE, S RATCHET (RE)

Ref. No.	Part No.	Description
771	3-065-830-01	SPRING, S RATCHET
772	X-3951-288-1	TABLE (T) ASSY, REEL
773	3-065-819-01	SPRING, TG1 ARM
774	3-065-821-01	RAIL (T), GUIDE
775	X-3951-289-1	TABLE (S) ASSY, REEL
776	3-065-833-01	GUIDE, LOCK
777	3-065-831-01	PLATE (SPR), RE RETURN
778	X-3951-304-1	ARM ASSY, TG1
779	3-065-835-01	GUIDE (S), CASSETTE
780	3-065-820-01	SPRING, RVS ARM
781	X-3951-296-1	BAND (ASSY), BT
783	3-067-167-01	SCREW (M1.4X2), CAMERA TAPPING
D001	8-719-988-42	DIODE GL453 (TAPE LED)
H001	8-719-033-37	ELEMENT, HALL HW-105C (T REEL)
H002	8-719-033-37	ELEMENT, HALL HW-105C (S REEL)
Q001	8-729-907-25	PHOTO TRANSISTOR PT4850F (TAPE TOP)
Q002	8-729-907-25	PHOTO TRANSISTOR PT4850F (TAPE END)
S001	1-692-614-11	SWITCH, PUSH (3 KEY) (REC PROOF)
S002	1-572-688-11	SWITCH, PUSH LEVER (1 KEY) (C. C. LOCK)

5. REPAIR PARTS LIST

5-1-11. MECHANICAL CHASSIS BLOCK ASSEMBLY-1

ns: not supplied

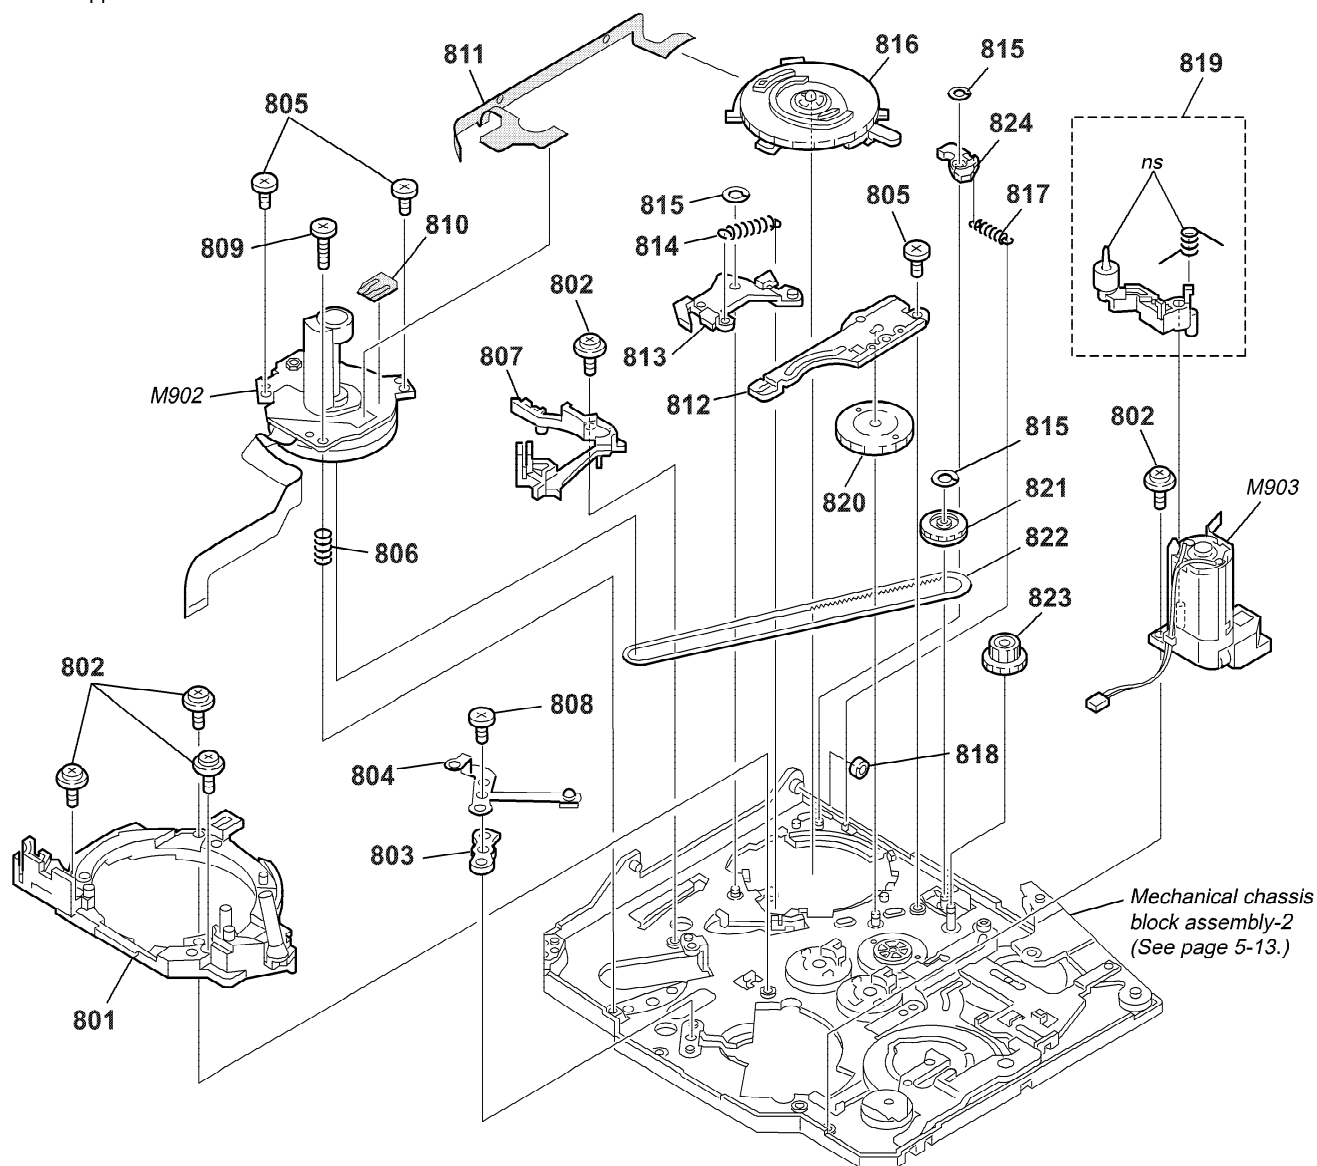


Ref. No.	Part No.	Description
801	A-7096-422-A	BASE ASSY, DRUM
802	3-947-503-01	SCREW (M1.4)
803	3-065-928-01	SPACER, GROUND
804	3-065-927-01	GROUND, DRUM
805	3-065-932-01	PAN (2 MAIN M1.4X1.6), CAMERA
806	3-067-154-01	SPRING, CAPSTAN
807	3-065-931-01	RAIL (T2), GUIDE
808	X-3947-398-1	SCREW ASSY, M1.7 PW
809	3-065-933-01	PAN (2 MAIN 1.4X4.5), CAMERA
810	1-677-049-11	FP-228 FLEXIBLE BOARD
811	1-680-434-11	FP-299 FLEXIBLE BOARD
812	3-065-877-01	PLATE (T), GUIDE LOCK
813	X-3951-301-1	PLATE ASSY, PINCH PRESSURE

Ref. No.	Part No.	Description
814	3-065-881-01	SPRING, P PRESSURE PLATE
815	3-065-934-01	HLW CUT 0.98X3X0.25
816	1-786-096-11	SWITCH, ROTARY
817	3-065-898-01	SPRING, EJECT ARM
818	3-065-870-01	ROLLER, LS GUIDE
819	A-7096-421-A	ARM ASSY, HCL
820	3-065-918-01	GEAR (2), CAM RELAY
821	A-7096-419-A	GEAR ASSY, CHANGE
822	3-065-902-01	BELT, TIMING
823	3-065-905-01	GEAR, RELAY
824	3-065-882-01	ARM, EJECT
M902	8-835-701-01	MOTOR, DC SCE13A/C-NP (CAPSTAN)
M903	A-7096-420-A	MOTOR ASSY, LD (LOADING)

5. REPAIR PARTS LIST

5-1-12. MECHANICAL CHASSIS BLOCK ASSEMBLY-2

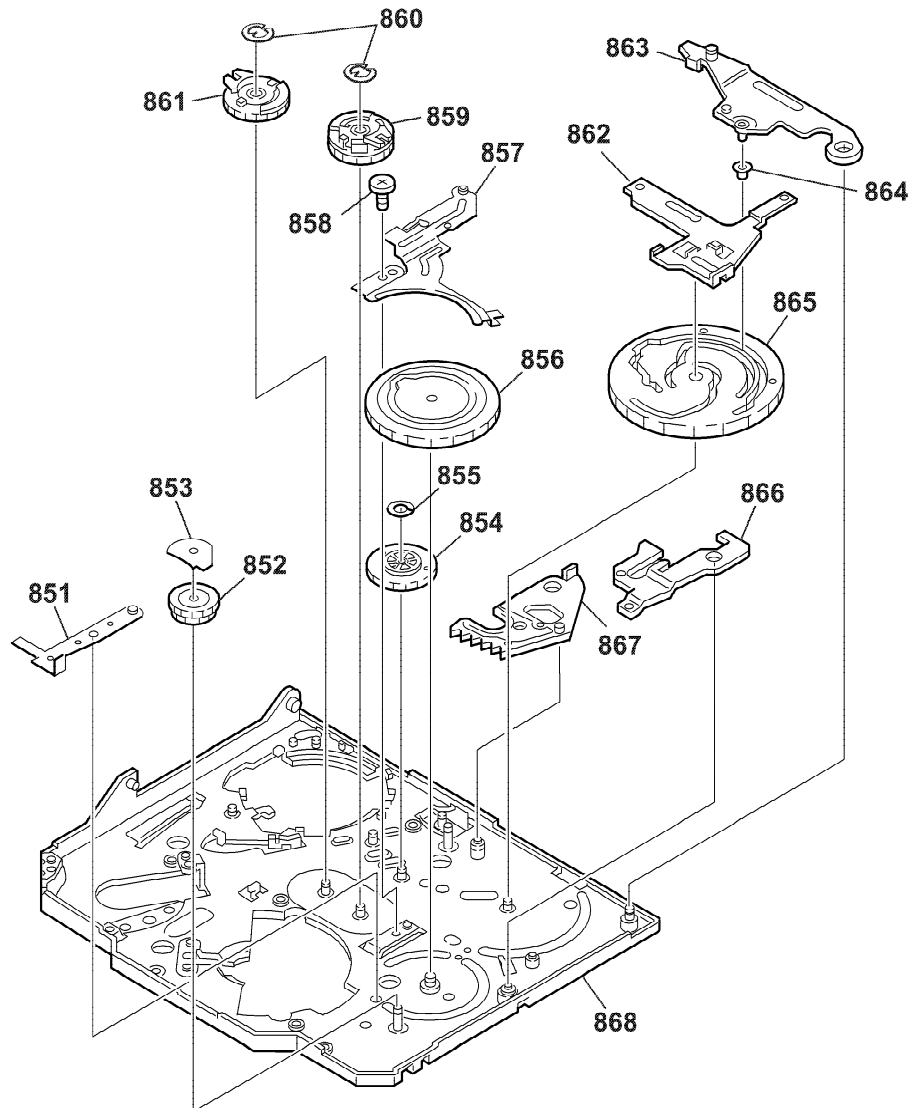

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
851	3-065-920-01	ARM, HC DRIVE	860	7-624-101-04	STOP RING 1.2 (E TYPE)
852	3-065-913-01	GEAR (4), LD	861	A-7096-412-A	GEAR (T) ASSY, GUIDE
853	3-065-914-01	SHEET, COVER	862	X-3951-307-1	PLATE ASSY, M SLIDE
854	3-065-917-01	GEAR (1), CAM RELAY	863	X-3951-305-1	ARM ASSY, LS
855	3-065-934-01	HLW CUT 0.98X3X0.25	864	3-065-901-01	ROLLER, LS ARM
856	3-065-915-01	GEAR (1), CAM	865	3-065-916-01	GEAR (2), CAM
857	3-065-878-01	PLATE (S), GUIDE LOCK	866	3-065-919-01	ARM, T1 LIMITTER
858	3-065-932-01	PAN (2 MAIN M1.4X1.6), CAMERA	867	X-3951-308-1	ARM ASSY, GL
859	A-7096-413-A	GEAR (S) ASSY, GUIDE	868	X-3951-300-2	CHASSIS ASSY, MECHANICAL

CD-471	FP-300	FP-301	FP-302	FP-792	FP-802	PD-204 (TYPE C)
--------	--------	--------	--------	--------	--------	-----------------

5-2. ELECTRICAL PARTS LIST

Ref. No.	Part No.	Description
A-7111-947-A	CD-471	BOARD, COMPLETE ***** (IC951 is not included in this complete board.)
< CAPACITOR >		
C951	1-126-395-11	ELECT CHIP 22uF 20% 16V
C953	1-128-994-21	ELECT CHIP 47uF 20% 10V
C955	1-164-360-11	CERAMIC CHIP 0.1uF 16V
< CONNECTOR >		
CN951	1-815-762-11	CONNECTOR, FFC/FPC 14P
< IC >		
IC951	A-7013-401-A	CCD BLOCK ASSY (CCD IMAGER) (Note) (TRV255E/TRV265E)
IC951	A-7016-724-A	CCD BLOCK ASSY (CCD IMAGER) (Note) (TRV260/TRV265)
< COIL >		
L951	1-469-528-91	INDUCTOR 100uH
< TRANSISTOR >		
Q951	8-729-117-73	TRANSISTOR 2SC4178-F14
< RESISTOR >		
R952	1-218-940-11	RES-CHIP 82 5% 1/16W
R953	1-218-959-11	RES-CHIP 3.3K 5% 1/16W
R970	1-216-864-11	SHORT CHIP 0
FP-300 FLEXIBLE BOARD (Not Supplied) *****		
< PHOTO TRANSISTOR >		
Q001	8-729-907-25	PHOTO TRANSISTOR PT4850F (TAPE TOP)
FP-301 FLEXIBLE BOARD (Not Supplied) *****		
< DIODE >		
D001	8-719-988-42	DIODE GL453S (TAPE LED)
FP-302 FLEXIBLE BOARD (Not Supplied) *****		
< PHOTO TRANSISTOR >		
Q002	8-729-907-25	PHOTO TRANSISTOR PT4850F (TAPE END)
1-860-929-11 FP-792 FLEXIBLE BOARD ***** (D001, D002 and D003 are not included in this flexible board.)		
< DIODE >		
D001	6-500-744-01	DIODE NSPW500BS-TL2 (VIDEO LIGHT)

Ref. No.	Part No.	Description
D002	6-500-744-01	DIODE NSPW500BS-TL2 (VIDEO LIGHT)
D003	6-500-744-01	DIODE NSPW500BS-TL2 (VIDEO LIGHT)
FP-802 FLEXIBLE BOARD (Not Supplied) *****		
< HOLE ELEMENT >		
H001	8-719-033-37	ELEMENT, HALL HW-105C (T REEL)
H002	8-719-033-37	ELEMENT, HALL HW-105C (S REEL)
< SWITCH >		
S001	1-692-614-11	SWITCH, PUSH (3 KEY) (REC PROOF)
S002	1-572-688-11	SWITCH, PUSH LEVER (1 KEY) (C.C. LOCK)
A-7111-949-A PD-204 BOARD, COMPLETE (TYPE C) *****		
< CAPACITOR >		
C6001	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6002	1-125-837-91	CERAMIC CHIP 1uF 10% 6.3V
C6003	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V
C6004	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V
C6005	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V
C6006	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V
C6007	1-115-566-11	CERAMIC CHIP 4.7uF 10% 10V
C6009	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6010	1-164-739-11	CERAMIC CHIP 560PF 5% 50V
C6011	1-163-023-00	CERAMIC CHIP 0.015uF 10% 50V
C6012	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6013	1-100-371-11	CERAMIC CHIP 12PF 5% 3.15KV
C6015	1-127-573-11	CERAMIC CHIP 1uF 10% 16V
C6019	1-104-847-11	TANTAL. CHIP 22uF 20% 4V
C6020	1-110-457-11	ELECT CHIP 3.3uF 20% 25V
C6022	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6024	1-127-573-11	CERAMIC CHIP 1uF 10% 16V
C6026	1-119-750-11	TANTAL. CHIP 22uF 20% 6.3V
C6027	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6028	1-115-407-11	ELECT CHIP 10uF 16V
< CONNECTOR >		
CN6001	1-794-997-11	PIN, CONNECTOR 20P
CN6003	1-764-709-11	FFC/CONNECTOR, FPC (LIF) 10P
CN6004	1-815-031-11	CONNECTOR, FFC/FPC (ZIF) 24P
CN6005	1-816-176-11	CONNECTOR, FFC/FPC (ZIF) 6P
< DIODE >		
D6004	8-719-073-01	DIODE MA111-(K8).S0
D6009	8-719-071-34	DIODE RB521S-30-TE61
< FERRITE BEAD >		
FB6001	1-414-760-21	FERRITE, EMI (SMD) (1608)
< IC >		
IC6001	6-705-329-01	IC CM7104L42-T4

Note: Be sure to read "Precautions for Replacement of CCD Imager" on page 4-8 when changing the CCD imager.

PD-204 (TYPE C)

PD-204 (TYPE S)

Ref. No.	Part No.	Description				
< COIL >						
L6001	1-469-527-91	INDUCTOR	47uH			
L6002	1-412-056-11	INDUCTOR	4.7uH			
L6003	1-428-878-11	INDUCTOR	82uH			
L6004	1-469-526-91	INDUCTOR	22uH			
< TRANSISTOR >						
Q6002	6-550-065-01	TRANSISTOR	CPH5504-TL-E			
< RESISTOR >						
R6005	1-216-824-11	METAL CHIP	1.8K	5%	1/10W	
R6009	1-218-975-11	RES-CHIP	68K	5%	1/16W	
R6010	1-218-969-11	RES-CHIP	22K	5%	1/16W	
R6012	1-208-707-11	METAL CHIP	10K	0.5%	1/16W	
R6013	1-208-935-11	METAL CHIP	100K	0.5%	1/16W	
R6014	1-218-949-11	RES-CHIP	470	5%	1/16W	
R6019	1-218-990-11	SHORT CHIP	0			
R6020	1-218-990-11	SHORT CHIP	0			
R6026	1-218-990-11	SHORT CHIP	0			
R6030	1-218-962-11	RES-CHIP	5.6K	5%	1/16W	
R6031	1-218-990-11	SHORT CHIP	0			
R6032	1-218-978-11	RES-CHIP	120K	5%	1/16W	
< COMPOSITION CIRCUIT BLOCK >						
RB6003	1-234-372-21	RES, NETWORK 100 x 4 (1005)				
< TRANSFORMER >						
△ T6001	1-435-786-31	TRANSFORMER, INVERTER				
A-7111-948-A		PD-204 BOARD, COMPLETE (TYPE S)				

< CAPACITOR >						
C6001	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C6002	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V	
C6003	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	
C6004	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	
C6005	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	
C6006	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	
C6007	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V	
C6009	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C6010	1-164-739-11	CERAMIC CHIP	560PF	5%	50V	
C6011	1-163-023-00	CERAMIC CHIP	0.015uF	10%	50V	
C6012	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C6013	1-100-371-11	CERAMIC CHIP	12PF	5%	3.15KV	
C6015	1-127-573-11	CERAMIC CHIP	1uF	10%	16V	
C6016	1-100-249-11	CERAMIC CHIP	0.01uF	10%	16V	
C6019	1-104-847-11	TANTAL. CHIP	22uF	20%	4V	
C6020	1-110-457-11	ELECT CHIP	3.3uF	20%	25V	
C6022	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C6024	1-127-573-11	CERAMIC CHIP	1uF	10%	16V	
C6026	1-119-750-11	TANTAL. CHIP	22uF	20%	6.3V	
C6027	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C6028	1-115-407-11	ELECT CHIP	10uF		16V	
C6029	1-125-827-91	CERAMIC CHIP	1uF	10%	25V	

Ref. No.	Part No.	Description			
< CONNECTOR >					
CN6001	1-794-997-11	PIN, CONNECTOR 20P			
CN6003	1-764-709-11	CONNECTOR, FFC/FPC (LIF) 10P			
CN6004	1-815-031-11	FFC/CONNECTOR, FPC (ZIF) 24P			
CN6005	1-816-176-11	CONNECTOR, FFC/FPC (ZIF) 6P			
< DIODE >					
D6004	8-719-988-61	DIODE 1SS355TE-17			
D6006	8-719-988-61	DIODE 1SS355TE-17			
D6009	8-719-071-34	DIODE RB521S-30-TE61			
< FERRITE BEAD >					
FB6001	1-414-760-21	FERRITE, EMI (SMD) (1608)			
< IC >					
IC6001	6-705-330-01	IC LRS57231			
< COIL >					
L6001	1-469-527-91	INDUCTOR	47uH		
L6002	1-412-056-11	INDUCTOR	4.7uH		
L6003	1-428-878-11	INDUCTOR	82uH		
L6004	1-469-526-91	INDUCTOR	22uH		
< TRANSISTOR >					
Q6002	6-550-065-01	TRANSISTOR	CPH5504-TL-E		
Q6004	8-729-054-48	TRANSISTOR	UP04601008S0		
Q6005	8-729-054-48	TRANSISTOR	UP04601008S0		
Q6008	6-550-242-01	TRANSISTOR	DTC114EMT2L		
Q6009	6-550-232-01	TRANSISTOR	2SA2029T2LQ/R		
< RESISTOR >					
R6005	1-216-824-11	METAL CHIP	1.8K	5%	
R6009	1-218-975-11	RES-CHIP	68K	5%	
R6010	1-218-969-11	RES-CHIP	22K	5%	
R6012	1-208-707-11	METAL CHIP	10K	0.5%	
R6013	1-208-935-11	METAL CHIP	100K	0.5%	
R6014	1-218-949-11	RES-CHIP	470	5%	
R6030	1-218-962-11	RES-CHIP	5.6K	5%	
R6039	1-218-960-11	RES-CHIP	3.9K	5%	
R6040	1-218-973-11	RES-CHIP	47K	5%	
R6041	1-218-953-11	RES-CHIP	1K	5%	
< COMPOSITION CIRCUIT BLOCK >					
RB6001	1-234-378-21	RES, NETWORK 10K x 4 (1005)			
RB6002	1-234-384-11	RES, NETWORK 1M x 4 (1005)			
RB6003	1-234-372-21	RES, NETWORK 100 x 4 (1005)			
< TRANSFORMER >					
△ T6001	1-435-786-31	TRANSFORMER, INVERTER			

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

DCR-TRV255E/TRV260/TRV265/TRV265E

SI-041

VC-344

Ref. No.	Part No.	Description
	A-7111-952-A	SI-041 BOARD, COMPLETE *****
		(CN751, CN752, D753, D754, IC751, J751 and J752 are not included in this complete board.)
		< CONNECTOR >
CN751	1-794-276-12	CONNECTOR, SQUARE TYPE 4P (DV OUT/DV)
CN752	1-794-962-11	CONNECTOR SQUARE TYPE (USB 5P) (USB)
CN753	1-816-232-21	PIN, CONNECTOR (PC BOARD) 4P
CN754	1-818-074-21	CONNECTOR, FFC/FPC (ZIF) 36P
		< DIODE >
D751	6-500-044-01	DIODE DF6A6.8FU (TE85R)
D752	6-500-044-01	DIODE DF6A6.8FU (TE85R)
D753	8-719-060-65	DIODE DCC3810 (IR EMITTER)
D754	8-719-060-65	DIODE DCC3810 (IR EMITTER)
D755	8-719-421-27	DIODE MA728
D756	6-500-009-01	DIODE RSE6.8XN-TR
D759	6-500-506-01	DIODE TLRMV1021 (T15SOY, F) (TALLY)
		< IC >
IC751	6-704-975-01	IC RPM7240-V4 (TRV265/TRV265E)
		< JACK >
J751	1-778-518-12	CONNECTOR, EXTERNAL (S VIDEO OUT)
J752	1-778-040-11	JACK, SMALL TYPE (AV OUT)
		< TRANSISTOR >
Q751	8-729-023-22	TRANSISTOR 2SD2114K
		< RESISTOR >
R752	1-216-806-11	METAL CHIP 56 5% 1/10W
R753	1-216-806-11	METAL CHIP 56 5% 1/10W
R756	1-216-864-11	SHORT CHIP 0
R757	1-216-864-11	SHORT CHIP 0
R763	1-216-821-11	METAL CHIP 1K 5% 1/10W
R764	1-216-833-11	METAL CHIP 10K 5% 1/10W
R765	1-216-833-11	METAL CHIP 10K 5% 1/10W
	A-7112-398-A	VC-344 BOARD, COMPLETE (SERVICE) *****
		< CAPACITOR >
C1001	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C1003	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
C1301	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C1302	1-107-819-11	CERAMIC CHIP 0.022uF 10% 16V
C1303	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C1304	1-164-942-11	CERAMIC CHIP 0.0068uF 10% 16V
C1305	1-100-251-11	CERAMIC CHIP 0.047uF 10% 10V
C1307	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C1308	1-164-940-11	CERAMIC CHIP 0.0033uF 10% 16V
C1309	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C1310	1-164-938-11	CERAMIC CHIP 0.0015uF 10% 50V
C1311	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C1312	1-125-837-91	CERAMIC CHIP 1uF 10% 6.3V

Ref. No.	Part No.	Description			
C1313	1-117-720-11	CERAMIC CHIP	4.7uF		10V
C1314	1-127-988-81	CERAMIC CHIP	15000PF	10%	16V
C1315	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1316	1-127-988-81	CERAMIC CHIP	15000PF	10%	16V
C1317	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1318	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C1319	1-164-506-11	CERAMIC CHIP	4.7uF		16V
C1320	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C1321	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V
C1322	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V
C1323	1-125-838-11	CERAMIC CHIP	2.2uF	10%	6.3V
C1324	1-127-861-11	CERAMIC CHIP	2.2uF	10%	16V
C1325	1-164-505-11	CERAMIC CHIP	2.2uF		16V
C1326	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V
C1327	1-127-861-11	CERAMIC CHIP	2.2uF	10%	16V
C1328	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C1329	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V
C1330	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C1331	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V
C1332	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C1333	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C1334	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C1335	1-164-505-11	CERAMIC CHIP	2.2uF		16V
C1336	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V
C1337	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V
C1338	1-127-861-11	CERAMIC CHIP	2.2uF	10%	16V
C1339	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V
C1340	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C1341	1-125-827-91	CERAMIC CHIP	1uF	10%	25V
C1342	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1343	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C1344	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C1345	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C1346	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C1347	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C1348	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C1349	1-104-847-11	TANTAL. CHIP	22uF	20%	4V
C1350	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C1351	1-104-847-11	TANTAL. CHIP	22uF	20%	4V
C1352	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C1355	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C1357	1-164-505-11	CERAMIC CHIP	2.2uF		16V
C1371	1-165-897-11	TANTAL. CHIP	22uF	20%	10V
C1373	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1501	1-164-858-11	CERAMIC CHIP	22PF	5%	50V
C1502	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1503	1-164-858-11	CERAMIC CHIP	22PF	5%	50V
C1504	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C1507	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C1508	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C1509	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1510	1-164-844-11	CERAMIC CHIP	4PF	0.25PF	50V
C1511	1-115-339-11	CERAMIC CHIP	0.1uF	10%	50V
C1512	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1515	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C1516	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C1518	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V

Ref. No.	Part No.	Description				Ref. No.	Part No.	Description			
C1523	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C3203	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C1524	1-104-847-11	TANTAL. CHIP	22uF	20%	4V	C3204	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1525	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V	C3205	1-117-863-11	CERAMIC CHIP	0.47uF	10%	6.3V
C1527	1-127-861-11	CERAMIC CHIP	2.2uF	10%	16V	C3206	1-100-249-11	CERAMIC CHIP	0.01uF	10%	16V
C1530	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V	C3208	1-117-863-11	CERAMIC CHIP	0.47uF	10%	6.3V
C1532	1-100-696-91	CERAMIC CHIP	1uF	10%	6.3V	C3210	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1552	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C3211	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1554	1-164-941-11	CERAMIC CHIP	0.0047uF	10%	16V	C3212	1-164-942-11	CERAMIC CHIP	0.0068uF	10%	16V
C1556	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V	C3213	1-164-942-11	CERAMIC CHIP	0.0068uF	10%	16V
C1558	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C3214	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1559	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C3215	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1560	1-164-935-11	CERAMIC CHIP	470PF	10%	50V	C3217	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1561	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C3218	1-164-874-11	CERAMIC CHIP	100PF	5%	50V
C1562	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V	C3219	1-164-872-11	CERAMIC CHIP	82PF	5%	50V
C1563	1-165-708-11	ELECT	47uF	20%	6.3V	C3220	1-164-874-11	CERAMIC CHIP	100PF	5%	50V
C1564	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V	C3221	1-164-878-11	CERAMIC CHIP	150PF	5%	50V
C1565	1-117-863-11	CERAMIC CHIP	0.47uF	10%	6.3V	C3223	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1566	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C3304	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1568	1-164-939-11	CERAMIC CHIP	0.0022uF	10%	50V	C3305	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C1571	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V	C3306	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1573	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V	C3309	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1574	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C3310	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C1575	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C3313	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1601	1-117-720-11	CERAMIC CHIP	4.7uF	10%	10V	C3314	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C2401	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C3319	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C2402	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C3320	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C2403	1-100-246-11	CERAMIC CHIP	0.001uF	10%	50V	C3321	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C2406	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V	C3322	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C2407	1-100-251-11	CERAMIC CHIP	0.047uF	10%	10V	C3326	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C2409	1-100-249-11	CERAMIC CHIP	0.01uF	10%	16V	C3327	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C2411	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C3328	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2412	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C3331	1-124-779-00	ELECT CHIP	10uF	20%	16V
C2413	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C3332	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C2414	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C3333	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C2415	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C3335	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C2416	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C3336	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2417	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C3338	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C2418	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C3339	1-164-882-11	CERAMIC CHIP	220PF	5%	16V
C2420	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C3341	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C2422	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V	C3342	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C2423	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C3344	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2424	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C3345	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2427	1-125-838-11	CERAMIC CHIP	2.2uF	10%	6.3V	C3357	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C2428	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C3358	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C2429	1-107-819-11	CERAMIC CHIP	0.022uF	10%	16V	C4003	1-107-819-11	CERAMIC CHIP	0.022uF	10%	16V
C2430	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V	C4004	1-165-875-11	CERAMIC CHIP	10uF	10%	10V
C2431	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V	C4005	1-165-875-11	CERAMIC CHIP	10uF	10%	10V
C2433	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C4501	1-100-249-11	CERAMIC CHIP	0.01uF	10%	16V
C2434	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V	C4503	1-164-850-11	CERAMIC CHIP	10PF	0.5PF	50V
C2435	1-119-923-11	CERAMIC CHIP	0.047uF	10%	10V	C4504	1-164-850-11	CERAMIC CHIP	10PF	0.5PF	50V
C2436	1-164-935-11	CERAMIC CHIP	470PF	10%	50V	C4505	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2437	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C4506	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2438	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C4507	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2439	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V	C4508	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2440	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C4509	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C2442	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C4510	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3201	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V	C4511	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3202	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V						

VC-344

Ref. No.	Part No.	Description			
C4512	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C4514	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C4515	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C4516	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C4517	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C4518	1-218-977-11	RES-CHIP	100K	5%	1/16W (Note)
C4519	1-218-977-11	RES-CHIP	100K	5%	1/16W (Note)
C4520	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C5002	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C5003	1-164-941-11	CERAMIC CHIP	0.0047uF	10%	16V
C5004	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C5005	1-164-856-81	CERAMIC CHIP	18PF	5%	50V
C5006	1-100-249-11	CERAMIC CHIP	0.01uF	10%	16V
C5008	1-164-856-81	CERAMIC CHIP	18PF	5%	50V
C5009	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C5010	1-124-778-00	ELECT CHIP	22uF	20%	6.3V
C5401	1-124-779-00	ELECT CHIP	10uF	20%	16V
C5404	1-124-779-00	ELECT CHIP	10uF	20%	16V
C5405	1-117-863-11	CERAMIC CHIP	0.47uF	10%	6.3V
C5408	1-124-779-00	ELECT CHIP	10uF	20%	16V
C5409	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C5410	1-124-779-00	ELECT CHIP	10uF	20%	16V
C5411	1-124-779-00	ELECT CHIP	10uF	20%	16V
C5413	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C5414	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C5416	1-100-252-11	CERAMIC CHIP	0.1uF	10%	6.3V
C5418	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C5419	1-124-779-00	ELECT CHIP	10uF	20%	16V
C5420	1-117-863-11	CERAMIC CHIP	0.47uF	10%	6.3V
C5421	1-117-863-11	CERAMIC CHIP	0.47uF	10%	6.3V
C5422	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C5423	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C5424	1-124-778-00	ELECT CHIP	22uF	20%	6.3V
C5427	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C5430	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C5431	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C5433	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C5435	1-117-863-11	CERAMIC CHIP	0.47uF	10%	6.3V
C5436	1-117-863-11	CERAMIC CHIP	0.47uF	10%	6.3V
C5437	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C5438	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C5439	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V
C5440	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C5441	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V
C5442	1-117-863-11	CERAMIC CHIP	0.47uF	10%	6.3V
C5443	1-117-863-11	CERAMIC CHIP	0.47uF	10%	6.3V
C5445	1-135-158-21	TANTAL. CHIP	15uF	20%	4V
C5446	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C6501	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C6502	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C6503	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C6504	1-124-779-00	ELECT CHIP	10uF	20%	16V
C6506	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C6507	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C6509	1-126-209-11	ELECT CHIP	100uF	20%	4V
C6510	1-124-778-00	ELECT CHIP	22uF	20%	6.3V

Ref. No.	Part No.	Description			
C6511	1-124-778-00	ELECT CHIP	22uF	20%	6.3V
C6512	1-126-209-11	ELECT CHIP	100uF	20%	4V
< CONNECTOR >					
CN1001	1-818-076-11	CONNECTOR, FFC/FPC (ZIF) 36P			
CN1003	1-794-998-31	PIN, CONNECTOR 20P			
CN1007	1-779-335-21	CONNECTOR, FFC/FPC 22P			
CN1008	1-794-057-21	PIN, CONNECTOR (PC BOARD) 2P			
CN1009	1-766-677-21	CONNECTOR, FFC/FPC 16P			
CN1011	1-766-677-21	CONNECTOR, FFC/FPC 16P			
CN1013	1-779-328-21	CONNECTOR, FFC/FPC 8P			
CN1501	1-779-331-11	FFC/CONNECTOR, FPC (LIF (NON-ZIF)) 14P			
CN1551	1-750-360-21	FFC/CONNECTOR, FPC (ZIF) 24P			
* CN2401	1-580-055-21	PIN, CONNECTOR (SMD) 2P			
CN2402	1-766-340-21	CONNECTOR, FFC/FPC 10P			
CN2403	1-816-179-11	CONNECTOR, FFC/FPC (ZIF) 22P			
CN2404	1-766-345-21	FFC/CONNECTOR, FPC (LIF (NON-ZIF)) 15P			
CN3201	1-766-341-21	CONNECTOR, FFC/FPC 11P			
CN4001	1-573-806-21	PIN, CONNECTOR (1.5MM)(SMD) 6P			
< DIODE >					
D1006	6-500-044-01	DIODE DF6A6.8FU (TE85R)			
D1007	6-500-044-01	DIODE DF6A6.8FU (TE85R)			
D1009	6-500-314-01	DIODE DAN222MT2L			
D1010	8-719-069-57	DIODE UDZSTE-176.8B			
D1011	6-500-776-01	DIODE MAZW068H0LS0			
D1012	6-500-776-01	DIODE MAZW068H0LS0			
D1301	8-719-027-76	DIODE 1SS357-TPH3			
D1302	6-500-314-01	DIODE DAN222MT2L			
D1303	8-719-074-08	DIODE MA4ZD03001S0			
D1305	8-719-074-08	DIODE MA4ZD03001S0			
D1306	8-719-074-08	DIODE MA4ZD03001S0			
D1501	8-719-082-63	DIODE 1SV329 (TPL3)			
D1551	8-719-073-01	DIODE MA111-(K8).S0			
D4001	8-719-074-08	DIODE MA4ZD03001S0			
D4002	6-500-776-01	DIODE MAZW068H0LS0			
D5001	8-719-073-01	DIODE MA111-(K8).S0			
< FUSE >					
△ F001	1-576-406-21	FUSE (1.4A/32V)			
△ F002	1-576-406-21	FUSE (1.4A/32V)			
△ F003	1-576-406-21	FUSE (1.4A/32V)			
△ F004	1-576-406-21	FUSE (1.4A/32V)			
< FERRITE BEAD >					
FB1501	1-414-760-21	FERRITE, EMI (SMD) (1608)			
FB1504	1-414-760-21	FERRITE, EMI (SMD) (1608)			
FB1601	1-414-760-21	FERRITE, EMI (SMD) (1608)			
FB2401	1-414-760-21	FERRITE, EMI (SMD) (1608)			
FB2402	1-500-283-11	INDUCTOR, FERRITE BEAD			
FB2403	1-500-283-11	INDUCTOR, FERRITE BEAD			
FB3301	1-414-760-21	FERRITE, EMI (SMD) (1608)			
FB3302	1-414-760-21	FERRITE, EMI (SMD) (1608)			
FB3303	1-414-760-21	FERRITE, EMI (SMD) (1608)			
FB4501	1-414-760-21	FERRITE, EMI (SMD) (1608)			
< IC >					
IC1001	6-702-302-01	IC TK11133CSCL-G			

Note: Resistors are mounted to the location where C4518, C4519 are printed.

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description
IC1301	6-705-264-01	IC MB44A120BPFV-G-BND-ERE1
IC1302	6-703-228-01	IC TK11160CSCL-G
IC1501	8-752-417-70	IC CXD2444AR-T4
IC1502	6-703-146-01	IC HD49337AFEB
IC1552	8-759-681-42	IC NJM12902V (TE2)
IC1553	8-759-637-96	IC uPD16877MA-6A5-E2
IC1554	8-759-693-13	IC NJM12904V (TE2)
IC1601	6-701-985-01	IC BH2220FVM-TR
IC2401	6-705-676-01	IC TB6550FG (O, EB)
IC3201	8-752-106-95	IC CXA3619R-T4
IC3301	8-752-418-16	IC CXD3164R
IC3302	8-759-566-52	IC SN104266PN-TEB
IC4501	6-803-882-01	IC MB91194APFF-G-155-BNDE1 (Note)
IC4502	6-705-122-01	IC BR25C320FV-WE2
IC5001	6-803-798-01	IC MB89097PFV-G-170-BND-ERE1
IC5401	6-701-074-01	IC LA74207W-TBM-E
IC5402	8-759-647-71	IC AK4550VT-E2
IC6501	6-705-159-01	IC NJM2570AV (TE2)
< COIL >		
L1301	1-416-670-11	INDUCTOR 33uH
L1302	1-419-354-21	INDUCTOR 22uH
L1303	1-419-354-21	INDUCTOR 22uH
L1304	1-416-670-11	INDUCTOR 33uH
L1305	1-419-354-21	INDUCTOR 22uH
L1306	1-419-354-21	INDUCTOR 22uH
L1307	1-419-354-21	INDUCTOR 22uH
L1308	1-469-523-91	INDUCTOR 2.2uH
L1309	1-469-524-91	INDUCTOR 4.7uH
L1310	1-412-056-11	INDUCTOR 4.7uH
L1311	1-469-525-91	INDUCTOR 10uH
L1312	1-469-524-91	INDUCTOR 4.7uH
L1313	1-469-524-91	INDUCTOR 4.7uH
L1314	1-469-524-91	INDUCTOR 4.7uH
L1315	1-469-526-91	INDUCTOR 22uH
L1316	1-469-527-91	INDUCTOR 47uH
L1317	1-469-524-91	INDUCTOR 4.7uH
L1318	1-469-524-91	INDUCTOR 4.7uH
L1319	1-469-524-91	INDUCTOR 4.7uH
L1320	1-469-524-91	INDUCTOR 4.7uH
L1501	1-400-588-11	INDUCTOR, LAMINATE CHIP 10uH
L1551	1-414-398-11	INDUCTOR 10uH
L1553	1-400-588-11	INDUCTOR, LAMINATE CHIP 10uH
L3201	1-400-588-11	INDUCTOR, LAMINATE CHIP 10uH
L3202	1-400-588-11	INDUCTOR, LAMINATE CHIP 10uH
L3203	1-414-406-41	INDUCTOR 220uH
L3204	1-400-197-11	INDUCTOR 12uH
L3305	1-400-588-11	INDUCTOR, LAMINATE CHIP 10uH
L3307	1-400-588-11	INDUCTOR, LAMINATE CHIP 10uH
L3310	1-400-588-11	INDUCTOR, LAMINATE CHIP 10uH
L3313	1-400-588-11	INDUCTOR, LAMINATE CHIP 10uH
L3320	1-400-588-11	INDUCTOR, LAMINATE CHIP 10uH
L3321	1-400-588-11	INDUCTOR, LAMINATE CHIP 10uH
L6501	1-400-588-11	INDUCTOR, LAMINATE CHIP 10uH
< TRANSISTOR >		
Q1001	8-729-402-84	TRANSISTOR XN4601
Q1002	6-550-242-01	TRANSISTOR DTC114EMT2L

Ref. No.	Part No.	Description
Q1301	6-550-232-01	TRANSISTOR 2SA2029T2LQ/R
Q1302	6-550-237-01	TRANSISTOR 2SC5658T2LQ/R
Q1303	8-729-054-50	TRANSISTOR UP04501008S0
Q1304	6-550-237-01	TRANSISTOR 2SC5658T2LQ/R
Q1305	6-550-405-01	TRANSISTOR CPH5815-TL-E
Q1306	6-550-405-01	TRANSISTOR CPH5815-TL-E
Q1307	6-550-405-01	TRANSISTOR CPH5815-TL-E
Q1308	6-550-405-01	TRANSISTOR CPH5815-TL-E
Q1309	6-550-405-01	TRANSISTOR CPH5815-TL-E
Q1310	6-550-405-01	TRANSISTOR CPH5815-TL-E
Q1311	6-550-560-01	TRANSISTOR CPH5819-TL-E
Q1312	6-550-232-01	TRANSISTOR 2SA2029T2LQ/R
Q1313	8-729-054-50	TRANSISTOR UP04501008S0
Q1314	8-729-054-49	TRANSISTOR UP04401008S0
Q1315	8-729-216-22	TRANSISTOR 2SA1162-G
Q1316	8-729-055-22	TRANSISTOR 2SA1734 (TE12L)
Q1317	8-729-054-50	TRANSISTOR UP04501008S0
Q1318	6-550-232-01	TRANSISTOR 2SA2029T2LQ/R
Q1320	8-729-054-50	TRANSISTOR UP04501008S0
Q1324	6-550-237-01	TRANSISTOR 2SC5658T2LQ/R
Q1325	8-729-054-49	TRANSISTOR UP04401008S0
Q1551	6-550-758-01	TRANSISTOR DTC113TMT2L
Q1554	6-550-237-01	TRANSISTOR 2SC5658T2LQ/R
Q1555	8-729-054-51	TRANSISTOR UP04116008S0
Q2401	6-550-283-01	TRANSISTOR UNR32A600LS0
Q3202	8-729-054-48	TRANSISTOR UP04601008S0
Q3203	6-550-234-01	TRANSISTOR UNR32A300LS0
Q3204	6-550-232-01	TRANSISTOR 2SA2029T2LQ/R
Q3205	8-729-047-19	TRANSISTOR 2SA1965-S-TL
Q3303	6-550-383-01	TRANSISTOR HN4A71FK (TE85R)
Q3307	6-550-239-01	TRANSISTOR DTA144EMT2L
Q3308	8-729-054-49	TRANSISTOR UP04401008S0
Q4001	6-550-237-01	TRANSISTOR 2SC5658T2LQ/R
Q4002	8-729-056-54	TRANSISTOR TPCS8302 (TE12L)
Q4003	8-729-055-22	TRANSISTOR 2SA1734 (TE12L)
Q4004	6-550-234-01	TRANSISTOR UNR32A300LS0
Q4501	6-550-234-01	TRANSISTOR UNR32A300LS0
Q4502	6-550-237-01	TRANSISTOR 2SC5658T2LQ/R
Q5001	8-729-041-43	TRANSISTOR HN1L02FU (TE85R)
Q5401	8-729-054-52	TRANSISTOR UP04216008S0
Q5403	6-550-240-01	TRANSISTOR DTA114TMT2L
Q5408	8-729-921-51	TRANSISTOR 2SD1834-T100
< RESISTOR >		
R1001	1-218-949-11	RES-CHIP 470 5% 1/16W
R1003	1-218-954-11	RES-CHIP 1.2K 5% 1/16W
R1005	1-218-957-11	RES-CHIP 2.2K 5% 1/16W
R1006	1-211-977-11	METAL CHIP 22 0.5% 1/10W
R1007	1-208-683-11	METAL CHIP 1K 0.5% 1/16W
R1008	1-208-707-11	METAL CHIP 10K 0.5% 1/16W
R1009	1-218-953-11	RES-CHIP 1K 5% 1/16W
R1014	1-218-940-11	RES-CHIP 82 5% 1/16W
R1025	1-218-990-11	SHORT CHIP 0
R1029	1-218-943-11	RES-CHIP 150 5% 1/16W
R1031	1-218-990-11	SHORT CHIP 0
R1032	1-218-943-11	RES-CHIP 150 5% 1/16W
R1034	1-218-953-11	RES-CHIP 1K 5% 1/16W
R1301	1-218-961-11	RES-CHIP 4.7K 5% 1/16W

Note: Changing the data is needs when IC4501 is replaced.
Please refer to change of IC4501 in page 1-6.

DCR-TRV255E/TRV260/TRV265/TRV265E

VC-344

Ref. No.	Part No.	Description			
R1302	1-218-953-11	RES-CHIP	1K	5%	1/16W
R1303	1-220-200-81	RES-CHIP	30K	5%	1/16W
R1304	1-218-973-11	RES-CHIP	47K	5%	1/16W
R1305	1-218-977-11	RES-CHIP	100K	5%	1/16W
R1306	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R1307	1-218-970-11	RES-CHIP	27K	5%	1/16W
R1308	1-218-971-11	RES-CHIP	33K	5%	1/16W
R1309	1-218-963-11	RES-CHIP	6.8K	5%	1/16W
R1310	1-218-977-11	RES-CHIP	100K	5%	1/16W
R1311	1-218-969-11	RES-CHIP	22K	5%	1/16W
R1312	1-218-977-11	RES-CHIP	100K	5%	1/16W
R1313	1-218-949-11	RES-CHIP	470	5%	1/16W
R1314	1-218-953-11	RES-CHIP	1K	5%	1/16W
R1315	1-218-953-11	RES-CHIP	1K	5%	1/16W
R1316	1-208-709-11	METAL CHIP	12K	0.5%	1/16W
R1317	1-218-967-11	RES-CHIP	15K	5%	1/16W
R1318	1-218-978-11	RES-CHIP	120K	5%	1/16W
R1319	1-208-715-11	METAL CHIP	22K	0.5%	1/16W
R1323	1-218-969-11	RES-CHIP	22K	5%	1/16W
R1324	1-218-969-11	RES-CHIP	22K	5%	1/16W
R1326	1-218-969-11	RES-CHIP	22K	5%	1/16W
R1327	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R1328	1-208-707-11	METAL CHIP	10K	0.5%	1/16W
R1329	1-208-943-11	METAL CHIP	220K	0.5%	1/16W
R1330	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R1331	1-208-721-11	METAL CHIP	39K	0.5%	1/16W
R1332	1-208-908-11	METAL CHIP	7.5K	0.5%	1/16W
R1333	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R1334	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R1335	1-218-964-11	RES-CHIP	8.2K	5%	1/16W
R1336	1-218-977-11	RES-CHIP	100K	5%	1/16W
R1337	1-218-949-11	RES-CHIP	470	5%	1/16W
R1338	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W
R1339	1-218-973-11	RES-CHIP	47K	5%	1/16W
R1340	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R1343	1-218-977-11	RES-CHIP	100K	5%	1/16W
R1344	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R1347	1-218-977-11	RES-CHIP	100K	5%	1/16W
R1348	1-208-715-11	METAL CHIP	22K	0.5%	1/16W
R1349	1-218-963-11	RES-CHIP	6.8K	5%	1/16W
R1350	1-208-707-11	METAL CHIP	10K	0.5%	1/16W
R1357	1-218-990-11	SHORT CHIP	0		
R1358	1-208-943-11	METAL CHIP	220K	0.5%	1/16W
R1359	1-208-931-11	METAL CHIP	68K	0.5%	1/16W
R1503	1-218-977-11	RES-CHIP	100K	5%	1/16W
R1509	1-218-989-11	RES-CHIP	1M	5%	1/16W
R1512	1-218-985-11	RES-CHIP	470K	5%	1/16W
R1521	1-218-937-11	RES-CHIP	47	5%	1/16W
R1523	1-218-990-11	SHORT CHIP	0		
R1532	1-218-990-11	SHORT CHIP	0		
R1533	1-218-971-11	RES-CHIP	33K	5%	1/16W
R1560	1-208-635-11	METAL CHIP	10	0.5%	1/16W
R1561	1-218-989-11	RES-CHIP	1M	5%	1/16W
R1562	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R1563	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1564	1-218-981-11	RES-CHIP	220K	5%	1/16W
R1565	1-218-985-11	RES-CHIP	470K	5%	1/16W

Ref. No.	Part No.	Description			
R1566	1-218-985-11	RES-CHIP	470K	5%	1/16W
R1567	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R1568	1-218-963-11	RES-CHIP	6.8K	5%	1/16W
R1570	1-218-985-11	RES-CHIP	470K	5%	1/16W
R1573	1-218-947-11	RES-CHIP	330	5%	1/16W
R1575	1-218-953-11	RES-CHIP	1K	5%	1/16W
R1576	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1577	1-218-973-11	RES-CHIP	47K	5%	1/16W
R1581	1-208-715-11	METAL CHIP	22K	0.5%	1/16W
R1582	1-208-707-11	METAL CHIP	10K	0.5%	1/16W
R1583	1-218-983-11	RES-CHIP	330K	5%	1/16W
R1584	1-218-985-11	RES-CHIP	470K	5%	1/16W
R2401	1-218-973-11	RES-CHIP	47K	5%	1/16W
R2402	1-218-983-11	RES-CHIP	330K	5%	1/16W
R2403	1-218-949-11	RES-CHIP	470	5%	1/16W
R2404	1-218-946-11	RES-CHIP	270	5%	1/16W
R2418	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2419	1-216-789-11	METAL CHIP	2.2	5%	1/10W
R2421	1-216-789-11	METAL CHIP	2.2	5%	1/10W
R2422	1-216-789-11	METAL CHIP	2.2	5%	1/10W
R2423	1-218-971-11	RES-CHIP	33K	5%	1/16W
R2424	1-218-990-11	SHORT CHIP	0		
R2428	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2434	1-216-808-11	METAL CHIP	82	5%	1/10W
R2442	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3210	1-208-715-11	METAL CHIP	22K	0.5%	1/16W
R3212	1-208-709-11	METAL CHIP	12K	0.5%	1/16W
R3214	1-220-196-11	RES-CHIP	13K	5%	1/16W
R3216	1-208-701-11	METAL CHIP	5.6K	0.5%	1/16W
R3218	1-208-715-11	METAL CHIP	22K	0.5%	1/16W
R3219	1-208-715-11	METAL CHIP	22K	0.5%	1/16W
R3220	1-218-971-11	RES-CHIP	33K	5%	1/16W
R3221	1-218-945-11	RES-CHIP	220	5%	1/16W
R3222	1-218-945-11	RES-CHIP	220	5%	1/16W
R3223	1-218-945-11	RES-CHIP	220	5%	1/16W
R3224	1-218-945-11	RES-CHIP	220	5%	1/16W
R3225	1-218-946-11	RES-CHIP	270	5%	1/16W
R3226	1-218-945-11	RES-CHIP	220	5%	1/16W
R3229	1-218-941-81	RES-CHIP	100	5%	1/16W
R3230	1-218-938-11	RES-CHIP	56	5%	1/16W
R3231	1-218-950-11	RES-CHIP	560	5%	1/16W
R3232	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3233	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3234	1-218-966-11	RES-CHIP	12K	5%	1/16W
R3235	1-218-969-11	RES-CHIP	22K	5%	1/16W
R3313	1-208-707-11	METAL CHIP	10K	0.5%	1/16W
R3314	1-208-707-11	METAL CHIP	10K	0.5%	1/16W
R3315	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3316	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R3326	1-208-677-11	METAL CHIP	560	0.5%	1/16W
R3330	1-208-677-11	METAL CHIP	560	0.5%	1/16W
R3332	1-208-675-11	METAL CHIP	470	0.5%	1/16W
R3335	1-208-677-11	METAL CHIP	560	0.5%	1/16W
R3343	1-218-951-11	RES-CHIP	680	5%	1/16W
R3350	1-218-946-11	RES-CHIP	270	5%	1/16W
R3353	1-208-709-11	METAL CHIP	12K	0.5%	1/16W
R3356	1-208-709-11	METAL CHIP	12K	0.5%	1/16W
R3361	1-218-864-11	METAL CHIP	5.1K	0.5%	1/10W


Ref. No.	Part No.	Description			
R3365	1-218-955-11	RES-CHIP	1.5K	5%	1/16W
R3397	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4001	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4003	1-216-864-11	SHORT CHIP	0		
R4004	1-216-864-11	SHORT CHIP	0		
R4006	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4007	1-218-989-11	RES-CHIP	1M	5%	1/16W
R4008	1-216-797-11	METAL CHIP	10	5%	1/10W
R4009	1-218-954-11	RES-CHIP	1.2K	5%	1/16W
R4010	1-218-963-11	RES-CHIP	6.8K	5%	1/16W
R4501	1-218-941-81	RES-CHIP	100	5%	1/16W
R4502	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4507	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4510	1-218-973-11	RES-CHIP	47K	5%	1/16W
R4512	1-218-985-11	RES-CHIP	470K	5%	1/16W
R4514	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4519	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4524	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4535	1-218-990-11	SHORT CHIP	0		
R4536	1-218-973-11	RES-CHIP	47K	5%	1/16W
R4537	1-218-977-11	RES-CHIP	100K	5%	1/16W
R5015	1-218-973-11	RES-CHIP	47K	5%	1/16W
R5016	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R5017	1-218-989-11	RES-CHIP	1M	5%	1/16W
R5018	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R5019	1-219-570-11	METAL CHIP	10M	5%	1/10W
R5020	1-218-985-11	RES-CHIP	470K	5%	1/16W
R5021	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R5022	1-218-990-11	SHORT CHIP	0		
R5023	1-218-953-11	RES-CHIP	1K	5%	1/16W
R5024	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5027	1-218-989-11	RES-CHIP	1M	5%	1/16W
R5034	1-218-949-11	RES-CHIP	470	5%	1/16W
R5051	1-218-977-11	RES-CHIP	100K	5%	1/16W
R5403	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R5407	1-218-973-11	RES-CHIP	47K	5%	1/16W
R5416	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R5417	1-218-973-11	RES-CHIP	47K	5%	1/16W
R5418	1-218-977-11	RES-CHIP	100K	5%	1/16W
R5421	1-216-821-11	METAL CHIP	1K	5%	1/10W
R5422	1-216-821-11	METAL CHIP	1K	5%	1/10W
R5429	1-218-955-11	RES-CHIP	1.5K	5%	1/16W
R5430	1-218-955-11	RES-CHIP	1.5K	5%	1/16W
R5431	1-218-951-11	RES-CHIP	680	5%	1/16W
R5432	1-218-951-11	RES-CHIP	680	5%	1/16W
R5441	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R5442	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R6507	1-208-715-11	METAL CHIP	22K	0.5%	1/16W
R6509	1-218-965-11	RES-CHIP	10K	5%	1/16W
< COMPOSITION CIRCUIT BLOCK >					
RB1551	1-234-379-21	RES, NETWORK 22K x 4 (1005)			
RB1552	1-234-375-21	RES, NETWORK 1K x 4 (1005)			
RB1553	1-234-380-21	RES, NETWORK 47K x 4 (1005)			
RB2401	1-234-378-21	RES, NETWORK 10K x 4 (1005)			
RB3201	1-234-379-21	RES, NETWORK 22K x 4 (1005)			
RB3202	1-234-376-21	RES, NETWORK 2.2K x 4 (1005)			

Ref. No.	Part No.	Description
RB3303	1-234-714-11	RES, NETWORK 56 x 4 (1005)
RB3304	1-234-377-21	RES, NETWORK 4.7K x 4 (1005)
RB3305	1-234-376-21	RES, NETWORK 2.2K x 4 (1005)
RB3307	1-234-714-11	RES, NETWORK 56 x 4 (1005)
RB4501	1-234-381-21	RES, NETWORK 100K x 4 (1005)
RB4508	1-234-378-21	RES, NETWORK 10K x 4 (1005)
RB4509	1-234-381-21	RES, NETWORK 100K x 4 (1005)
RB4510	1-234-381-21	RES, NETWORK 100K x 4 (1005)
RB4511	1-234-375-21	RES, NETWORK 1K x 4 (1005)
RB4512	1-234-384-11	RES, NETWORK 1M x 4 (1005)
RB4514	1-234-381-21	RES, NETWORK 100K x 4 (1005)
RB4515	1-234-375-21	RES, NETWORK 1K x 4 (1005)
RB5001	1-234-375-21	RES, NETWORK 1K x 4 (1005)
RB5002	1-234-375-21	RES, NETWORK 1K x 4 (1005)
RB5006	1-234-375-21	RES, NETWORK 1K x 4 (1005)
RB5007	1-234-375-21	RES, NETWORK 1K x 4 (1005)
RB5008	1-234-375-21	RES, NETWORK 1K x 4 (1005)
RB5009	1-234-383-21	RES, NETWORK 470K x 4 (1005)
RB5011	1-234-381-21	RES, NETWORK 100K x 4 (1005)
RB5401	1-234-381-21	RES, NETWORK 100K x 4 (1005)
RB5402	1-234-375-21	RES, NETWORK 1K x 4 (1005)
RB6501	1-234-702-11	RES, NETWORK 68 x 4 (1005)
< VIBRATOR >		
X1501	1-767-586-11	VIBRATOR, CRYSTAL (27MHz)
X4501	1-760-655-41	VIBRATOR, CRYSTAL (20MHz)
X5001	1-795-244-11	VIBRATOR, CERAMIC (10MHz)
X5002	1-760-458-21	VIBRATOR, CRYSTAL (32.768kHz)

Checking supplied accessories.




Conversion 2P adaptor (1)
△ 1-569-008-12 (E)

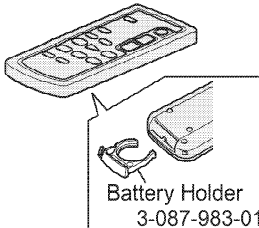

Battery Holder
3-087-983-01



21-pin adaptor (1)
1-770-783-21
(AEP, UK, NE, EE)

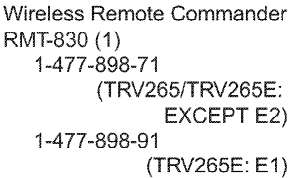


Wireless Remote Commander
RMT-830 (1)
1-477-898-71
(TRV265/TRV265E:
EXCEPT E2)
1-477-898-91
(TRV265E: E1)


(Note)E1: No indication of country of origin.
E2: There is indication of country of origin.




Conversion 2P adaptor (1)
△ 1-569-007-12 (JE)

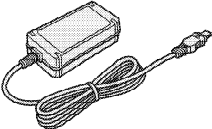


AC-L15A/L15B AC Adaptor (1)
△ 1-477-533-32
(Middle East area)
△ 1-477-533-51
(EXCEPT Middle East area)




Rechargeable battery pack
NP-FM30 (1)
△ A-7096-387-A (US, CND)
△ A-7096-388-B
(EXCEPT US, CND)




Power cord (1)
△ 1-696-819-21 (AUS)
△ 1-769-608-11 (AEP, NE, EE, E)
△ 1-783-374-11 (UK)
△ 1-790-542-12 (US, CND)
△ 1-827-160-11 (JE)




Shoulder strap (1)
3-987-015-01




CD-ROM
(SPVD-012 (V) USB Driver) (1)
3-086-790-01 (US, CND)
(SPVD-012 USB Driver) (1)
3-087-821-01
(EXCEPT US, CND)



Lens cap (1)
X-3952-971-1



Cap string (1)
3-979-194-12



USB cable (1)
1-823-931-21



A/V connecting cable (1)
1-824-097-41

Other accessories

CAMERA OPERATIONS GUIDE

3-087-918-11	MANUAL, INSTRUCTION (ENGLISH) (TRV260/TRV265)
3-087-918-21	MANUAL, INSTRUCTION (FRENCH) (TRV260: CND)
3-087-918-31	MANUAL, INSTRUCTION (SPANISH, PORTUGUESE) (TRV260: E/TRV265)
3-087-918-41	MANUAL, INSTRUCTION (TRADITIONAL CHINESE) (TRV265: E)
3-087-918-51	MANUAL, INSTRUCTION (KOREA) (TRV265: JE)
3-087-918-61	MANUAL, INSTRUCTION (ARABIC) (TRV265: E)
3-087-919-11	MANUAL, INSTRUCTION (ENGLISH) (TRV255E: AEP, UK/TRV265E: AEP, UK, E, JE, AUS)
3-087-919-21	MANUAL, INSTRUCTION (FRENCH) (TRV255E: AEP/TRV265E: AEP, E, JE)
3-087-919-31	MANUAL, INSTRUCTION (SPANISH, PORTUGUESE) (TRV255E: AEP/TRV265E: AEP)
3-087-919-41	MANUAL, INSTRUCTION (ITALIAN, GREEK) (TRV255E: AEP/TRV265E: AEP)
3-087-919-51	MANUAL, INSTRUCTION (GERMAN, DUTCH) (TRV255E: AEP/TRV265E: AEP)
3-087-919-61	MANUAL, INSTRUCTION (SWEDISH, RUSSIAN) (TRV255E: NE/TRV265E: NE, JE)
3-087-919-71	MANUAL, INSTRUCTION (DANISH, FINNISH) (TRV255E: NE/TRV265E: NE)
3-087-919-81	MANUAL, INSTRUCTION (POLISH, CZECH) (TRV255E: EE/TRV265E: EE)
3-087-919-91	MANUAL, INSTRUCTION (HUNGALIAN, SLOVAKIAN) (TRV255E: EE/TRV265E: EE)
3-087-920-11	MANUAL, INSTRUCTION (ARABIC, PERSIAN) (TRV265E: E)
3-087-920-31	MANUAL, INSTRUCTION (SIMPLIFIED CHINESE) (TRV265E: E, JE)

COMPUTER APPLICATIONS GUIDE

3-087-936-11	MANUAL, (PC) INSTRUCTION (ENGLISH) (TRV255E: UK/TRV260/TRV265/TRV265E: UK, E, AUS, JE)
3-087-936-21	MANUAL, (PC) INSTRUCTION (FRENCH) (TRV255E: AEP/TRV260: CND/TRV265E: AEP, E, JE)
3-087-936-31	MANUAL, (PC) INSTRUCTION (GERMAN, DUTCH) (TRV255E: AEP/TRV265E: AEP)
3-087-936-41	MANUAL, (PC) INSTRUCTION (SPANISH, PORTUGUESE) (TRV255E/TRV260: E/TRV265/TRV265E: AEP)
3-087-936-51	MANUAL, (PC) INSTRUCTION (ITALIAN, GREEK) (TRV255E: AEP/TRV265E: AEP)
3-087-936-61	MANUAL, (PC) INSTRUCTION (SWEDISH, RUSSIAN) (TRV255E: NE/TRV265E: NE, JE)
3-087-936-71	MANUAL, (PC) INSTRUCTION (DANISH, FINNISH) (TRV255E: NE/TRV265E: NE)
3-087-936-81	MANUAL, (PC) INSTRUCTION (POLISH, CZECH) (TRV255E: EE/TRV265E: EE)
3-087-936-91	MANUAL, (PC) INSTRUCTION (HUNGARIAN, SLOVAKIAN) (TRV255E: EE/TRV265E: EE)
3-087-937-11	MANUAL, (PC) INSTRUCTION (ARABIC, PERSIAN) (TRV265: E/TRV265E: E)
3-087-937-21	MANUAL, (PC) INSTRUCTION (TRADITIONAL CHINESE) (TRV265: E)
3-087-937-31	MANUAL, (PC) INSTRUCTION (SIMPLIFIED CHINESE) (TRV265E: E, JE)
3-087-937-41	MANUAL, (PC) INSTRUCTION (KOREA) (TRV265: JE)

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

5-22E

