

SECTION 6
REPAIR PARTS LIST

6-1. EXPLODED VIEWS

NOTE:


- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- The mechanical parts with no reference number in the exploded views are not supplied.
- Abbreviation
AUS: Australian model
JE: Tourist model
CND: Canadian model
CN: Chinese model
HK: Hong Kong model

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.


Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

6-1-1.OVERALL SECTION

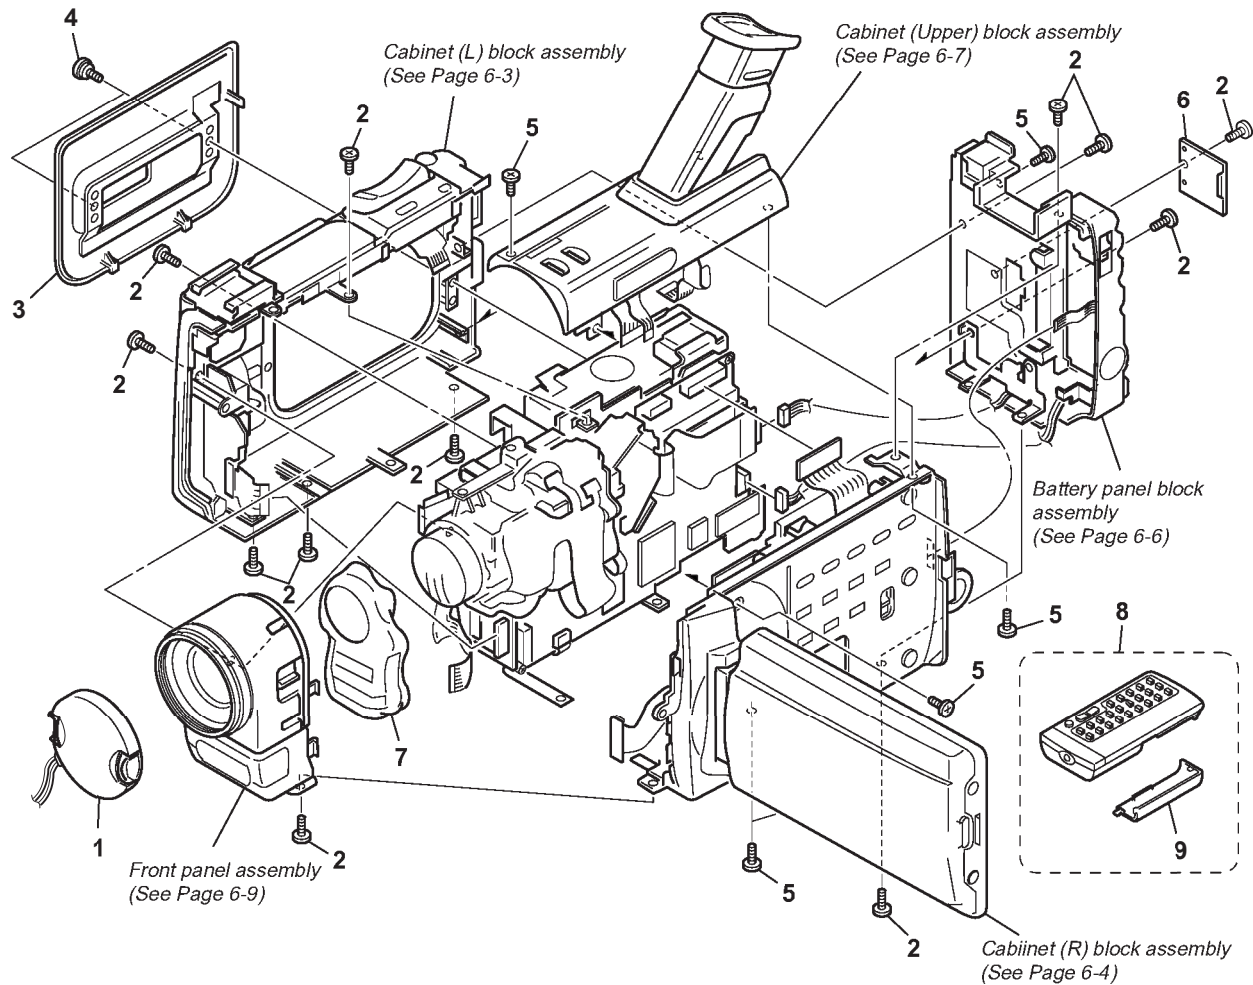


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
1	X-3948-941-1	CAP ASSY, LENS		6	3-051-885-01	COVER, CPC	
2	3-968-729-01	SCREW (M2), LOCK ACE, P2		7	3-052-033-01	SHEET, ACOUSTIC ISOLATION	
3	X-3948-999-1	LID ASSY, CASSETTE		8	1-475-950-21	REMOTE COMMANDER (RMT-811) (900/900E)	
4	3-989-746-01	SCREW (M2 STEP)		8	1-475-950-31	REMOTE COMMANDER (RMT-812) (890E)	
5	3-968-729-71	SCREW (M2), LOCK ACE, P2		9	3-053-056-01	LID, BATTERY CASE	

6-1-2. MECHANISM FRAME SECTION

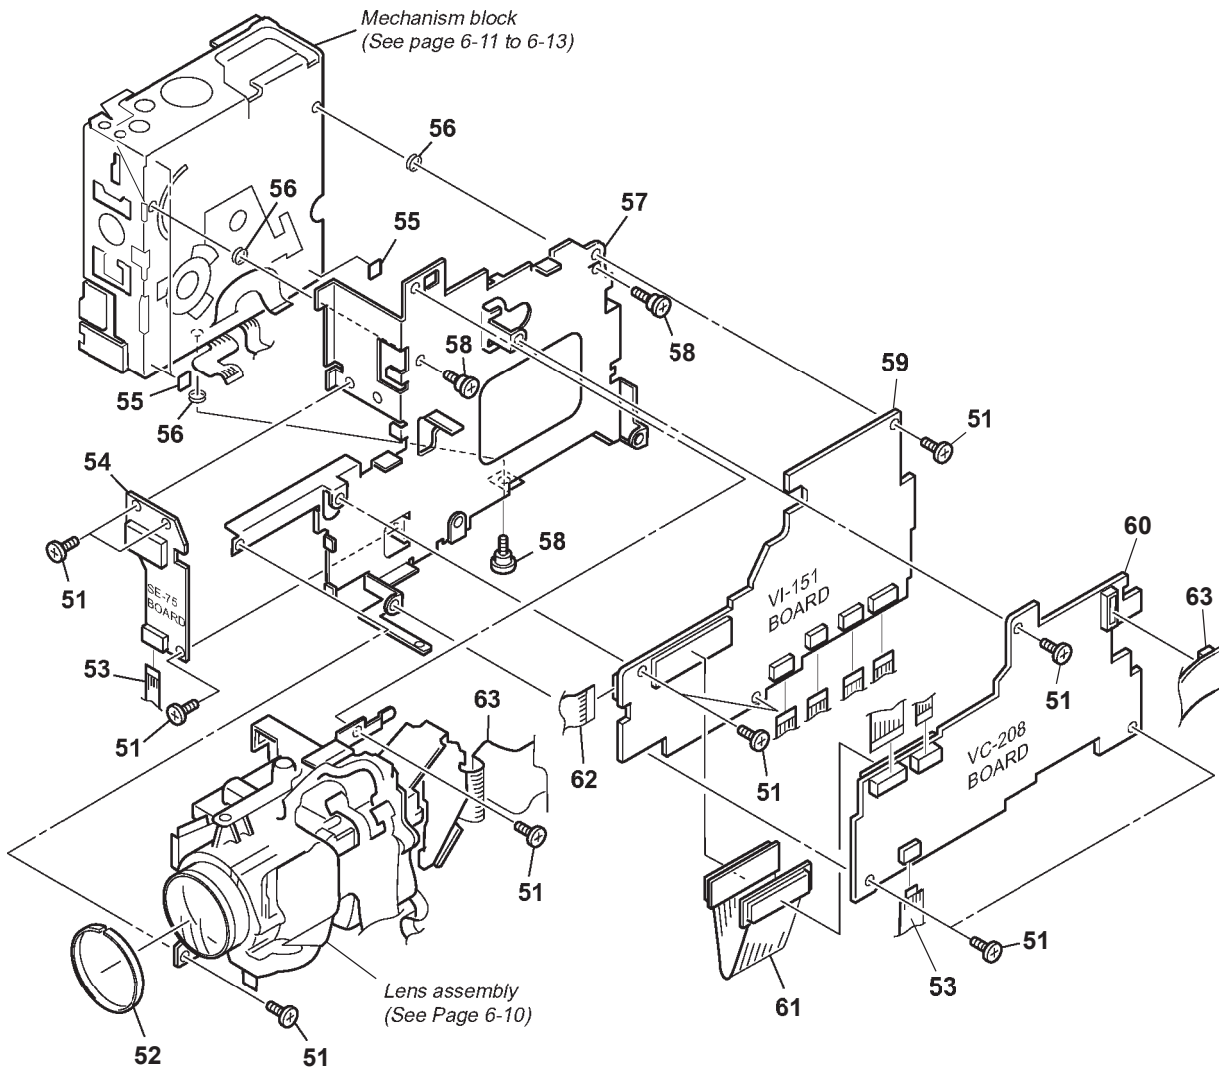


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
51	3-968-729-51	SCREW (M2), LOCK ACE, P2		59	A-7094-030-A	VI-151 BOARD, COMPLETE (890E)	
52	3-052-621-01	CUSHION, LENS		59	A-7094-068-A	VI-151 BOARD, COMPLETE (900/900E)	
53	1-670-982-11	FP-14 FLEXIBLE BOARD		60	A-7094-031-A	VC-208 BOARD, COMPLETE (890E)	
54	A-7073-675-A	SE-75 BOARD, COMPLETE		60	A-7094-069-A	VC-208 BOARD, COMPLETE (900)	
55	3-975-921-01	SHEET, VIBRATION PROOF		60	A-7094-071-A	VC-208 BOARD, COMPLETE (900E)	
* 56	3-052-802-01	PIN, MD GROUND		61	1-670-976-21	FP-8 FLEXIBLE BOARD	
57	X-3948-939-1	FRAME ASSY, MD		62	1-670-980-11	FP-12 FLEXIBLE BOARD	
58	3-988-464-01	SCREW (M2), STEP		63	A-7073-676-A	CD-202 BOARD, MOUNT	

6-1-3. CABINET (L) SECTION

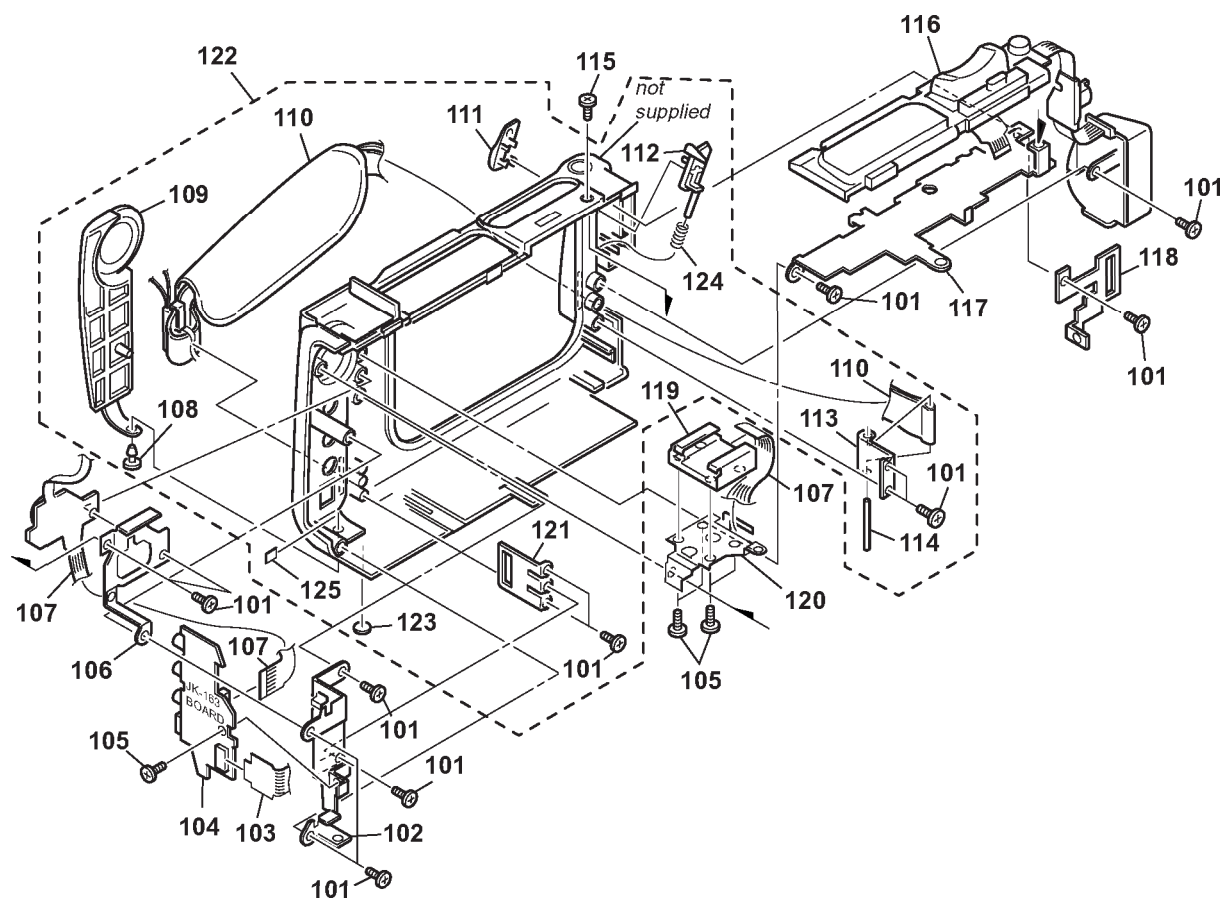


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
101	3-948-339-01	SCREW 0-NO. +P2 TAPPING B2		116	1-475-949-21	SWITCH BLOCK, CONTROL (FK4880)	
102	3-051-902-01	SHEET METAL, JK					(900,900E)
103	1-670-979-11	FP-11 FLEXIBLE BOARD		116	1-475-949-31	SWITCH BLOCK, CONTROL (FK4880)(890E)	
104	A-7073-677-A	JK-163 BOARD, COMPLETE		117	3-051-904-01	FRAME, FK	
105	3-968-729-51	SCREW (M2), LOCK ACE, P2		118	3-051-900-01	SHEET METAL (UPPER), STRAP	
				119	1-774-867-31	CONNECTOR, EXTERNAL (HOT SHOE) 8P	
106	3-051-901-01	SHEET METAL, S TERMINAL		120	3-051-903-01	RETAINER, SHOE	
107	1-670-990-21	FP-23 FLEXIBLE BOARD		121	3-051-871-01	BRACKET (FRONT), BELT	
108	3-051-930-01	PIN, JACK		122	X-3949-000-1	CABINET (L) ASSY (900)	
109	3-051-899-01	COVER, JACK		122	X-3949-045-1	CABINET (L) ASSY (900E)	
110	3-051-873-01	BELT, GRIP		122	X-3949-061-1	CABINET (L) ASSY (890E)	
111	3-051-864-01	BUTTON, EJECT					
112	3-051-865-01	LOCK, EJECT		* 123	3-051-944-01	FOOT, RUBBER	
113	3-051-866-01	BRACKET (REAR), BELT		124	3-302-492-00	SPRING, COMPRESSION	
	3-703-357-08	PIN (DIA. 1.6 SERISE)		* 125	3-052-738-01	SPACER (JC)	
115	3-968-729-01	SCREW (M2), LOCK ACE, P2					

6-1-4. CABINET (R) SECTION

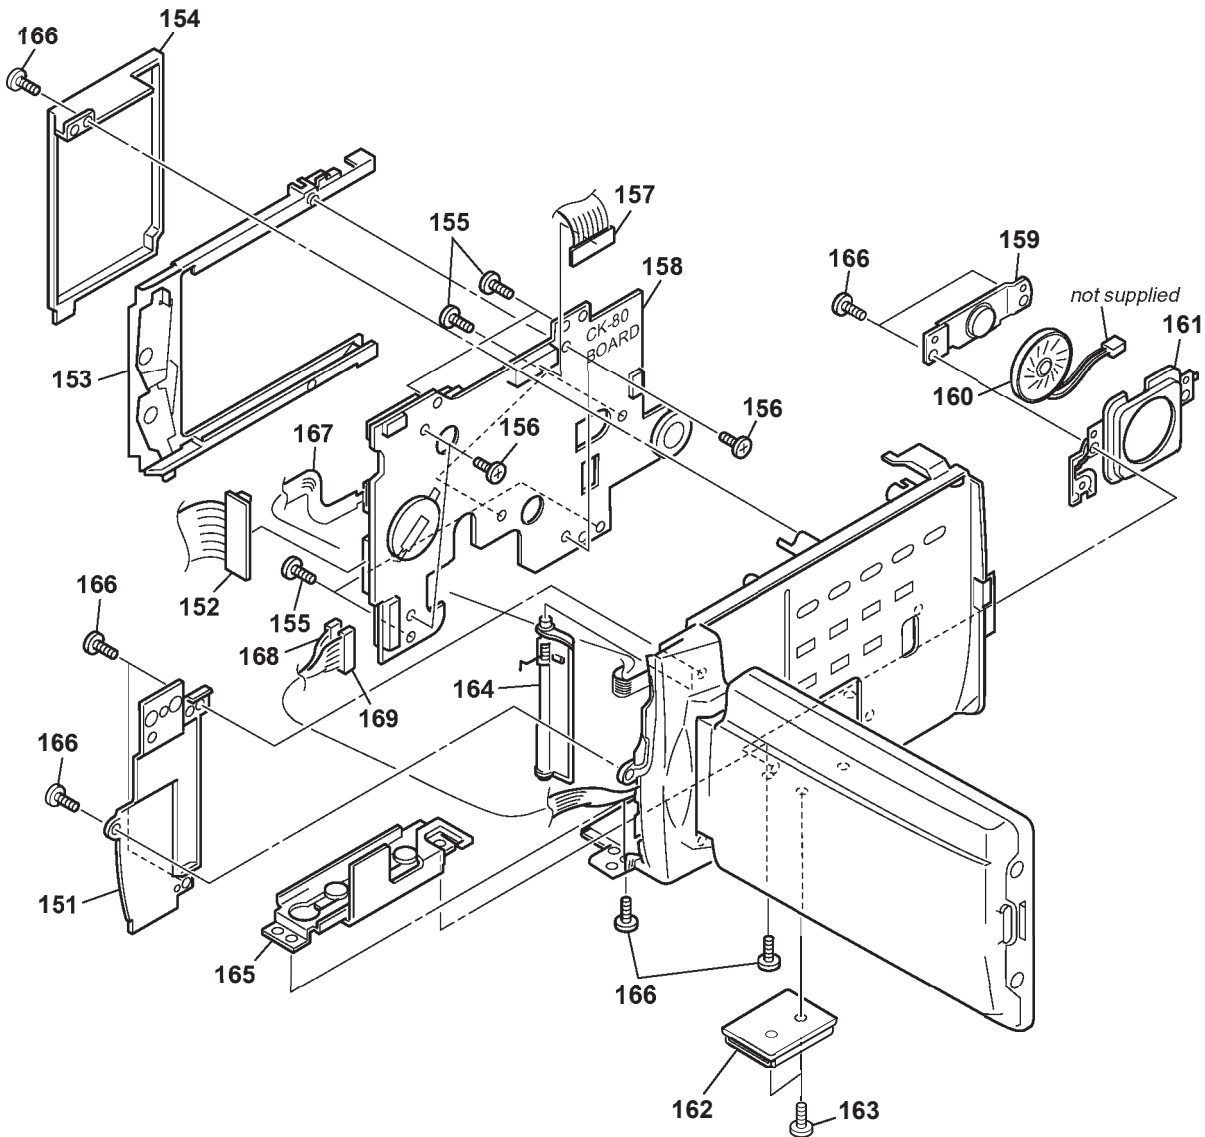

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
* 151	3-051-920-01	LID, LCD HINGE		* 161	3-051-906-01	HOLDER, SP	
152	1-670-981-21	FP-13 FLEXIBLE BOARD		162	3-051-913-01	STAND	
153	3-052-482-01	EJECTOR, CARD		163	3-968-729-71	SCREW (M2), LOCK ACE, P2	
* 154	3-051-918-01	COVER, PM		164	X-3948-942-1	PLATE ASSY, BLIND	
155	3-989-735-41	SCREW (M1.7), LOCK ACE, P2		165	X-3948-945-1	SLIDE ASSY, PM	
156	3-051-931-01	SCREW (M2), LOCK ACE		166	3-968-729-51	SCREW (M2), LOCK ACE, P2	
157	1-670-977-21	FP-9 FLEXIBLE BOARD		167	1-670-983-21	FP-16 FLEXIBLE BOARD	
158	A-7073-678-A	CK-80 BOARD, COMPLETE		168	1-958-983-11	HARNESS (CP-81) 12PIN	
* 159	X-3948-943-1	PLATE ASSY, SP FIXED		169	1-958-984-11	HARNESS (CP-82) 13PIN	
160	1-505-619-11	SPEAKER (2.0 CM)					

6-1-5.LCD PANEL SECTION

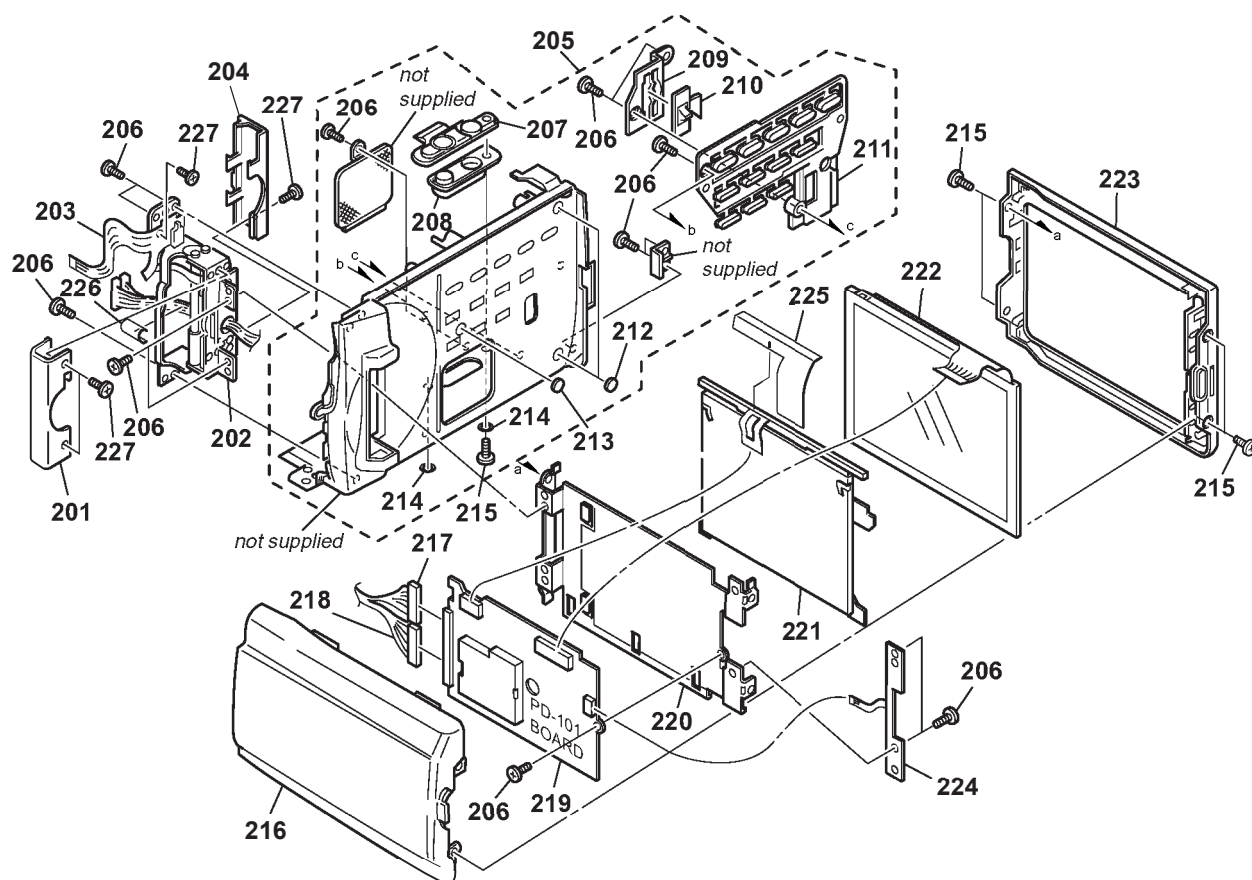


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
201	3-051-921-01	COVER (FRONT), HINGE		216	X-3949-004-1	CABINET (C) ASSY, P(900)	
202	X-3948-944-1	HINGE ASSY		216	X-3949-046-1	CABINET (C) ASSY, P(900E,AE,UK)	
203	1-670-983-21	FP-16 FLEXIBLE BOARD		216	X-3949-062-1	CABINET (C) ASSY, P(890E)	
204	3-051-922-01	COVER (REAR), HINGE		216	X-3949-063-1	CABINET (C) ASSY, P(900E,E,HK,AUS,JE,CN)	
205	X-3948-998-1	CABINET (R) ASSY		217	1-958-983-11	HARNESS (CP-81) 12PIN	
206	3-968-729-51	SCREW (M2), LOCK ACE, P2		218	1-958-984-11	HARNESS (CP-82) 13PIN	
207	3-051-840-01	SCREW, TRIPOD		219	A-7073-679-A	PD-101 BOARD, COMPLETE	
208	3-051-842-01	HOLDER, TRIPOD SCREW		220	X-3948-961-1	FRAME ASSY, PANEL	
209	3-051-839-01	COVER, SS MODE KNOB		△ 221	1-517-754-21	TUBE, FLUORESCENT, COLD CATHODE	
210	3-051-835-01	KNOB, SS MODE		222	1-803-274-21	MODULE, CRYSTAL INDICATION	
211	3-051-834-01	BUTTON, R		223	X-3949-003-1	CABINET (M) ASSY, P	
212	3-959-978-02	CUSHION, PANEL		224	1-670-986-21	FP-19 FLEXIBLE BOARD	
213	3-052-521-01	CUSHION (2), PANEL		* 225	3-051-932-01	COVER, LIGHT GUIDE FLEXIBLE	
214	3-051-848-01	WASHER, TRIPOD SCREW		226	3-846-067-21	SPACER (C)	
215	3-968-729-71	SCREW (M2), LOCK ACE, P2		227	3-973-497-91	SCREW (M1.7), 0-NO. +P 2	

Note :
The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.


Note :
Les composants identifiés par une marque △ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

6-1-6. BATTERY PANEL SECTION

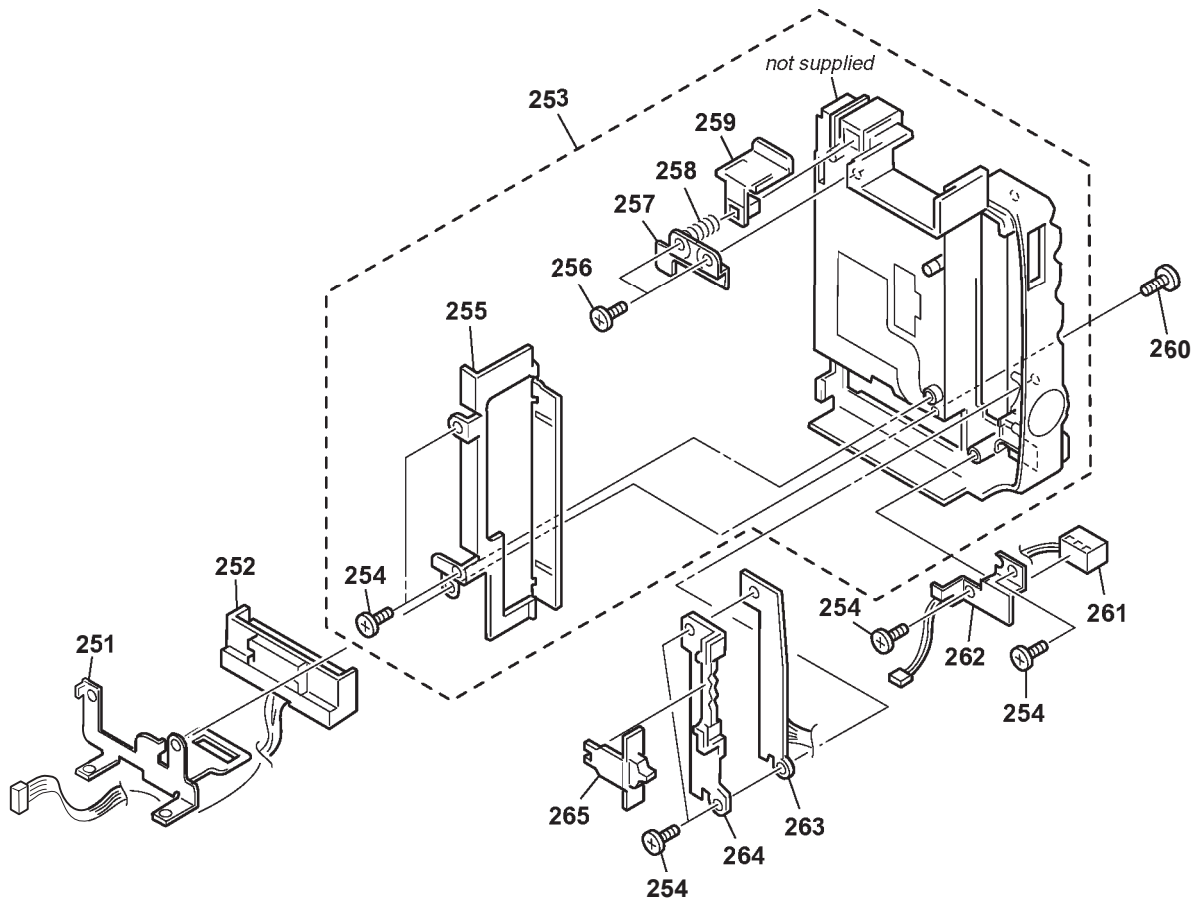


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
251	3-051-905-01	SHEET METAL (LOWER), STRAP		259	3-051-950-01	CLAW, BT LOCK	
252	1-694-411-11	TERMINAL BOARD, BATTERY		260	3-968-729-71	SCREW (M2), LOCK ACE, P2	
253	X-3949-001-1	PANEL ASSY, BATTERY		261	1-785-247-11	CONNECTOR, DC-IN	
254	3-948-339-01	SCREW, TAPPING B2		262	3-051-915-01	PLATE, DC FIXED	
255	X-3948-957-1	DOOR ASSY, PM		263	1-670-985-21	FP-18 FLEXIBLE BOARD	
256	3-713-791-71	SCREW (M1.7X4)		264	3-051-917-01	HOLDER, AL KNOB	
257	3-051-951-01	COVER, BT LOCK		265	3-051-916-01	KNOB, AL	
258	3-052-017-01	SPRING, BT LOCK					

6-1-7. CABINET (UPPER) SECTION

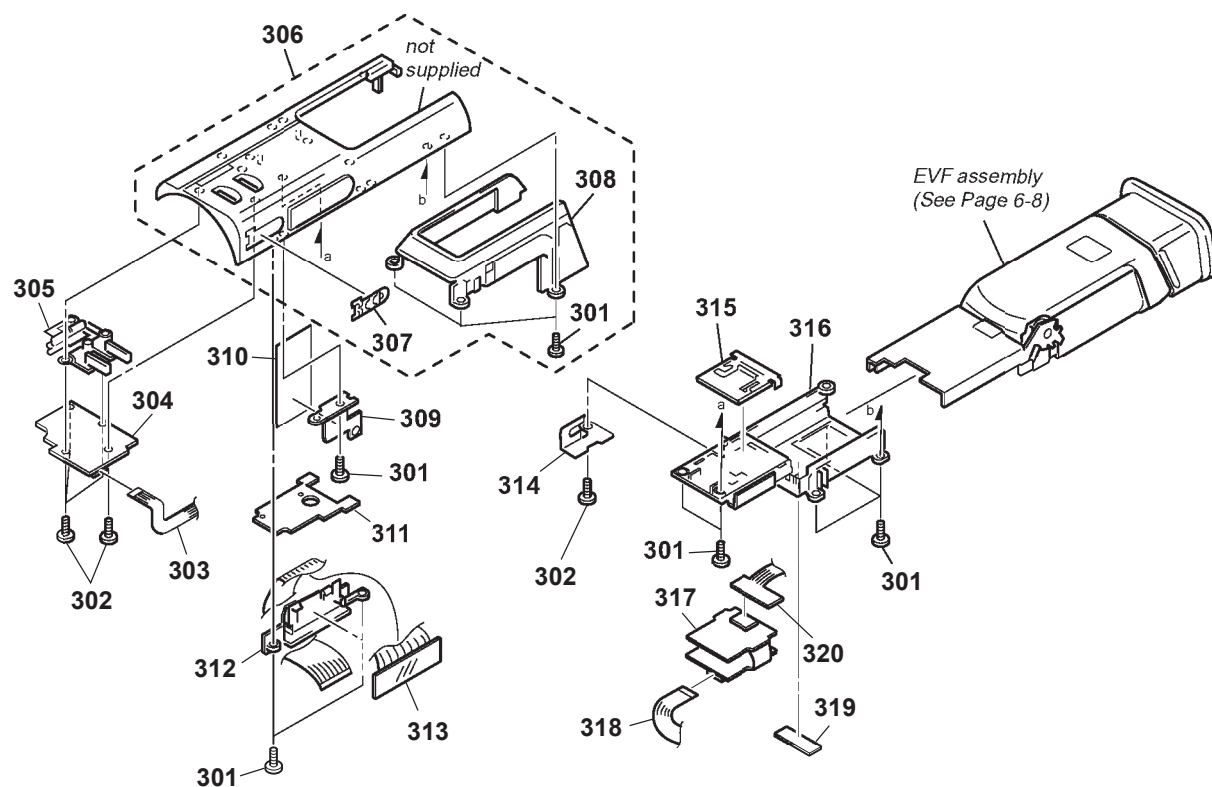


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
301	3-968-729-01	SCREW (M2), LOCK ACE, P2		* 311	3-051-894-01	RETAINER, SLIDER	
302	3-968-729-51	SCREW (M2), LOCK ACE, P2		* 312	3-051-893-01	RETAINER, LCD	
303	1-670-984-11	FP-17 FLEXIBLE BOARD		313	A-7093-972-A	PANEL BLOCK ASSY, INDICATION	
304	A-7073-684-A	ED-48 BOARD, COMPLETE		* 314	3-051-898-01	PLATE, SLIDER GROUND	
305	3-051-892-01	BUTTON, EDIT		315	3-051-923-01	PLATE, VF CLICK	
306	X-3949-005-1	CABINET (UPPER) ASSY		316	3-051-897-01	BASE, VF SLIDE	
307	3-963-933-01	EMBLEM, CDD		317	A-7073-682-A	VF-121 BOARD, COMPLETE	
* 308	3-051-869-01	COVER, SIDE		318	1-670-978-11	FP-10 FLEXIBLE BOARD	
* 309	3-051-895-01	JOINT, U-R		319	3-831-441-11	CUSHION	
* 310	3-052-917-01	SHEET, U-R (890E/900:CND,E,HK,JE,900E)		320	1-670-987-21	FP-20 FLEXIBLE BOARD	

6-1-8.EVF SECTION

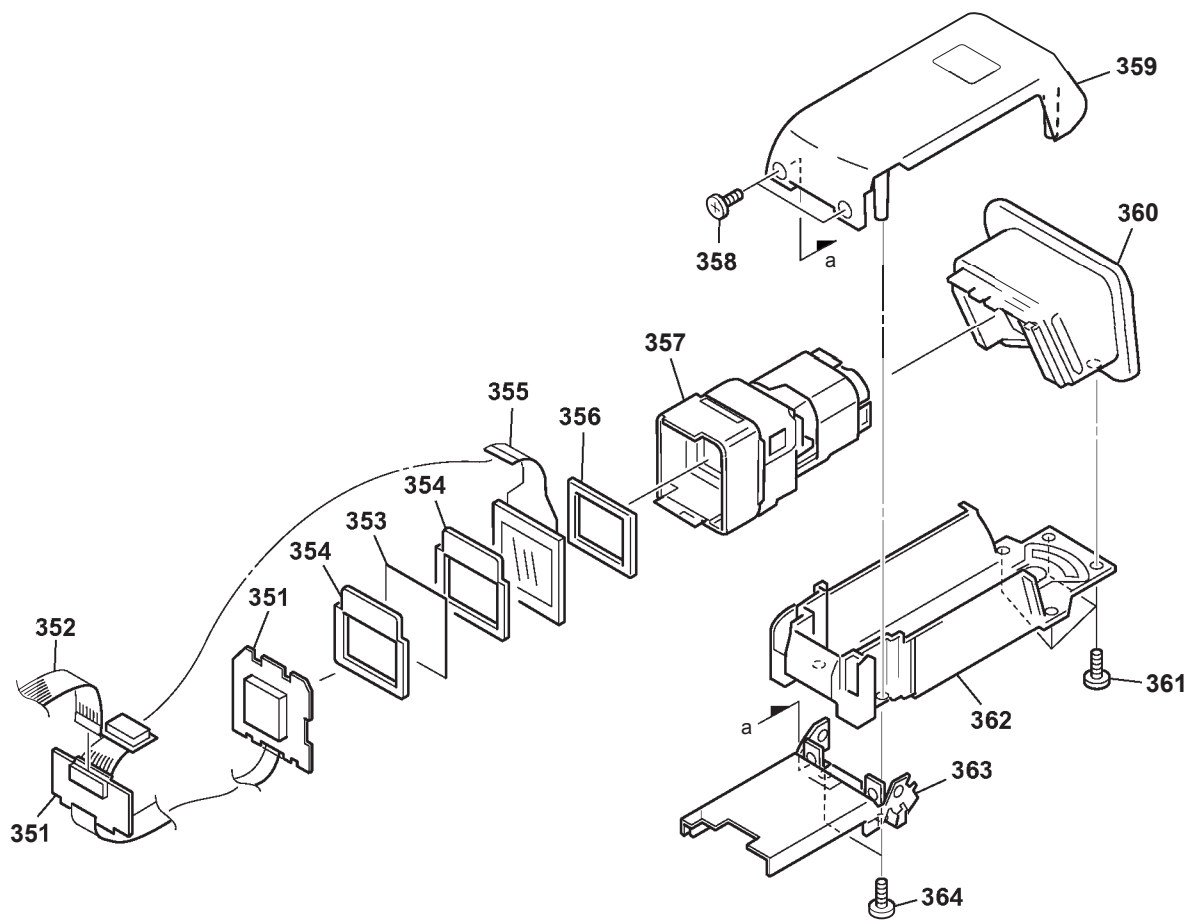


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
351	A-7073-683-A	LB-55 BOARD, COMPLETE		358	3-968-729-01	SCREW (M2), LOCK ACE, P2	
352	1-670-987-21	FP-20 FLEXIBLE BOARD		359	3-051-896-01	CABINET (UPPER), EVF	
* 353	3-988-563-01	ILLUMINATOR (458), BL		360	X-3948-951-1	CUP ASSY, EYE	
354	3-989-416-01	CUSHION (458), LCD		361	3-713-791-01	SCREW (M1.7X5), TAPPING, P2	
355	8-753-023-51	LCX027AK-1		362	X-3948-962-1	CABINET (LOWER) ASSY, EVF	
* 356	3-960-302-11	CUSHION (1), LCD		363	X-3948-963-1	SLIDER ASSY, VF	
357	X-3948-473-1	LENS ASSY (458), VF		364	3-713-791-21	SCREW (M1.7X8), TAPPING, P2	

6-1-9. FRONT PANEL SECTION

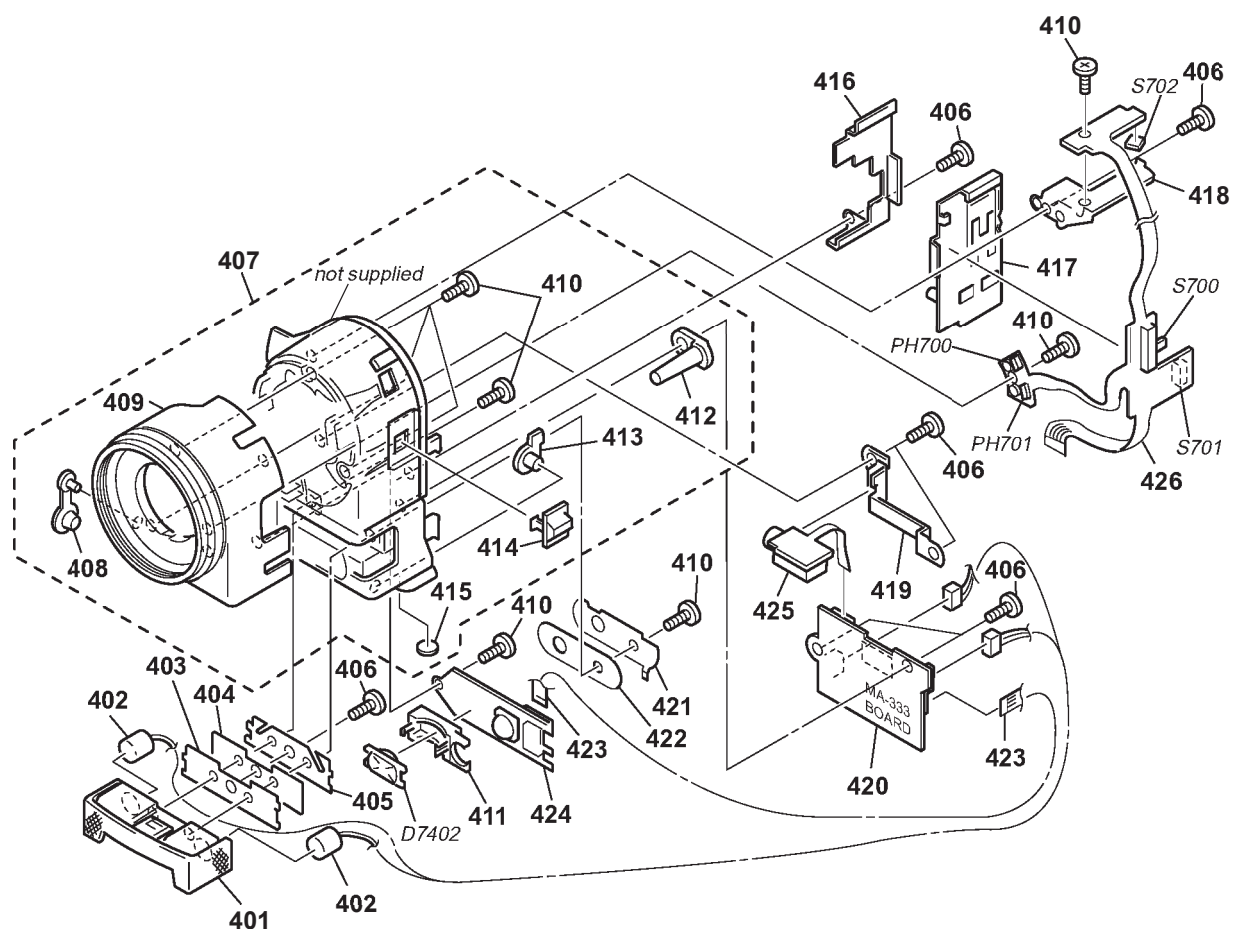


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
401	X-3948-950-1	GRILLE ASSY, MICROPHONE		417	X-3948-949-1	RETAINER ASSY, MF	
402	1-418-014-11	MICROPHONE UNIT		418	X-3948-954-1	RETAINER ASSY, ND	
403	3-051-926-01	LID, MICROPHONE		* 419	3-051-887-01	RETAINER, JACK	
* 404	3-051-927-01	PLATE, MICROPHONE CLOSE UP		420	A-7073-680-A	MA-333 BOARD, COMPLETE	
405	3-051-928-01	PLATE, VIBRATION PROOF		* 421	3-051-888-01	RETAINER, MICROPHONE	
406	3-948-339-01	SCREW, TAPPING B2		422	3-051-891-01	CUSHION, MICROPHONE RETAINER	
407	X-3949-002-1	PANEL ASSY, FRONT		423	1-670-991-11	FP-37 FLEXIBLE BOARD	
408	3-051-942-01	LID, MICROPHONE JACK		424	A-7073-681-A	RI-10 BOARD, COMPLETE	
409	3-051-907-11	COVER, FRONT		425	1-670-989-21	FP-22 FLEXIBLE BOARD	
410	3-968-729-51	SCREW (M2), LOCK ACE, P2		426	1-670-988-21	FP-21 FLEXIBLE BOARD	(INCLUDE S700,S701,S702)
411	3-719-845-01	SCREW (B2X4), TAPPING		D7402	8-719-061-86	DIODE DCR2810 (R)	
* 412	3-051-912-01	TALLY, FRONT		PH700	8-749-014-54	HIC QNA1312K01S0	
* 413	3-051-940-01	WINDOW, SIDE IR		PH701	8-749-014-54	HIC QNA1312K01S0	
414	3-051-935-01	MF KNOB		S700	1-771-487-21	SWITCH, SLIDE	
* 415	3-051-944-01	FOOT, RUBBER		S701	1-762-851-21	SWITCH, TACT	
* 416	3-051-929-01	REINFORCEMENT, MF		S702	1-762-851-21	SWITCH, TACT	

6-1-10. LENS BLOCK SECTION

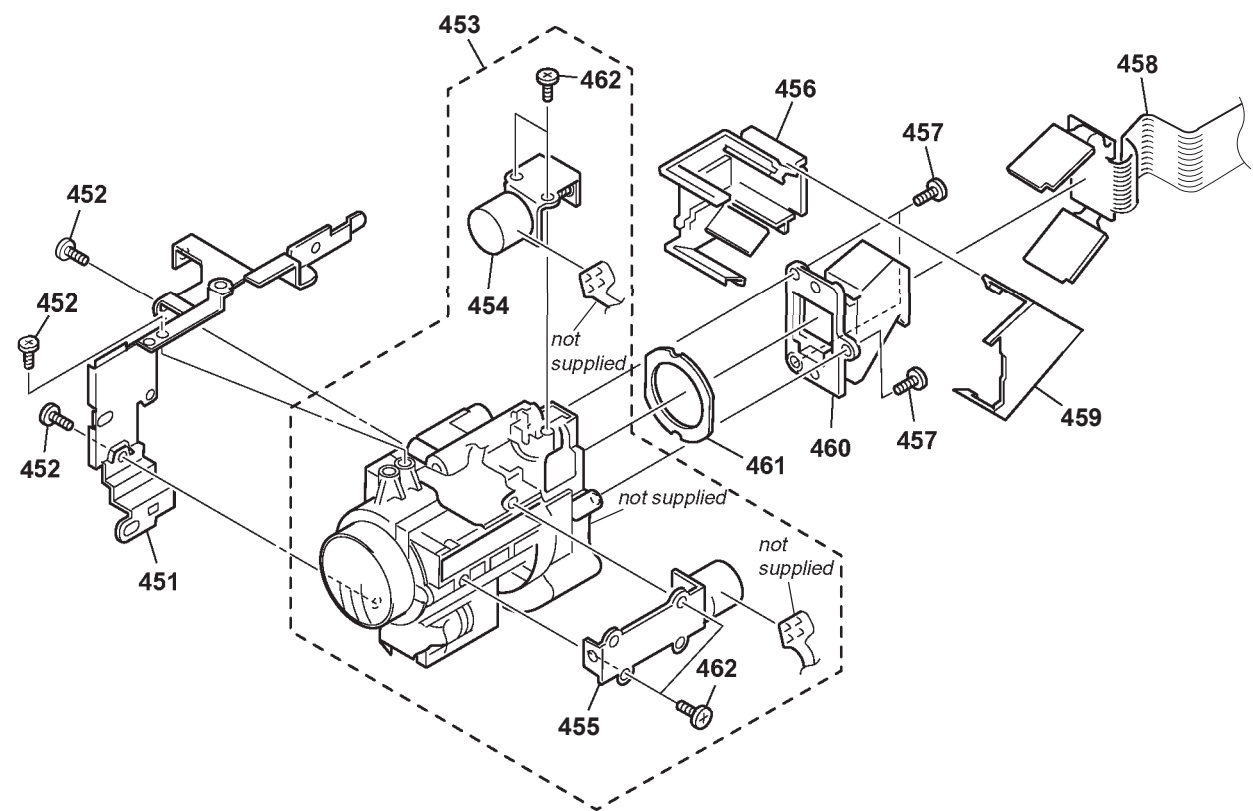


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
451	3-051-924-01	FRAME, LENS		457	3-713-791-61	SCREW (M1.7X7), TAPPING, P2	
452	3-948-339-01	SCREW, TAPPING B2		458	A-7073-676-A	CD-202 BOARD, MOUNT	
453	1-758-174-11	LENS, ZOOM (VCL-4312VA)		459	X-3948-953-1	COVER (R) ASSY, PRISM	
454	3-709-428-01	MOTOR, FOCUS		460	A-7030-948-A	PRISM ASSY (INCLUDE 3CCD)(890E/900E)	
455	3-709-429-01	MOTOR, ZOOM		460	A-7093-999-A	PRISM ASSY (INCLUDE 3CCD)(900)	
456	X-3948-952-1	COVER (L) ASSY, PRISM		461	3-989-731-01	RUBBER, SEAL	

6-1-11. CASSETTE COMPARTMENT, DRUM AND REEL TABLE ASSEMBLY

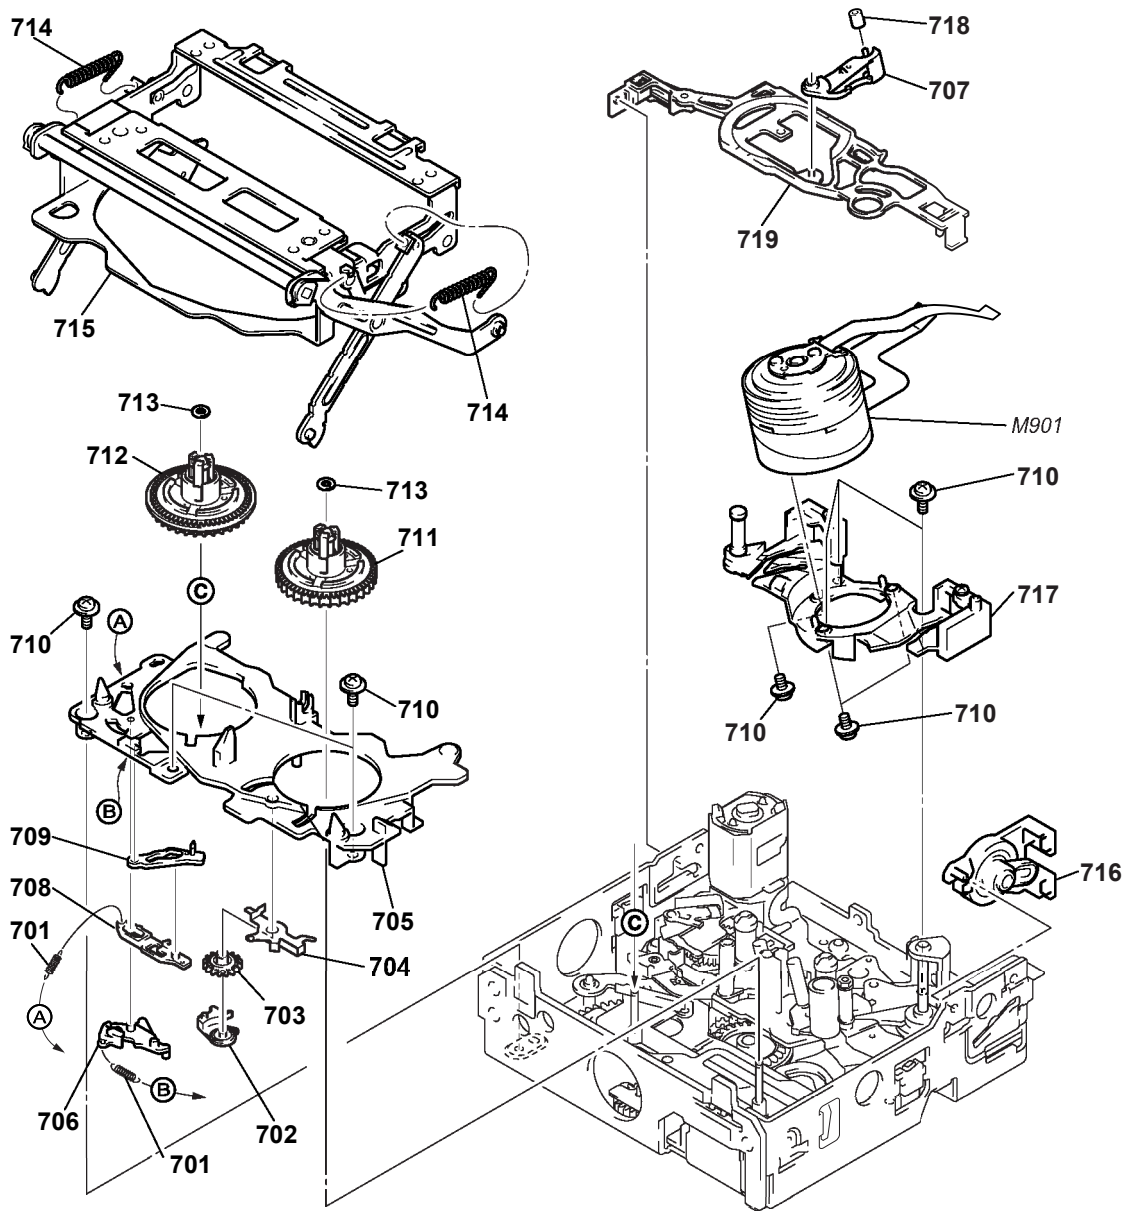


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
701	3-988-312-01	SPRING, EXTENSION		711	X-3948-445-1	TABLE (T) ASSY, REEL	
702	3-988-220-01	BRAKE (T)		712	X-3948-444-1	TABLE (S) ASSY, REEL	
703	3-988-221-01	GEAR (T), BRAKE		713	3-989-465-01	WASHER, STOPPER	
704	3-988-222-01	SPRING (T), BRAKE		714	3-988-298-01	SPRING EXTENSION	
705	3-988-215-02	BASE, CASSETTE		715	X-3948-441-2	CASSETTE COMPARTMENT ASSY	
706	3-988-217-01	ARM (S), RESET		716	X-3948-443-2	DAMPER ASSY	
707	3-988-281-02	ARM, HC		717	A-7093-612-A	DRUM BASE BLOCK ASSY	
708	3-988-219-01	RACK (S), BRAKE		718	3-988-282-01	ROLLER, HC	
709	3-988-218-01	BRAKE (S)		719	3-988-283-01	STOPPER, TAPE FALL	
710	3-947-503-01	SCREW (M1.4X2.5)		M901	A-7048-887-A	DRUM ASSY (DEH-11B-R)	

6-1-12. TAPE GUIDE, PINCH SLIDER ASSEMBLY AND BRAKE SLIDER ASSEMBLY

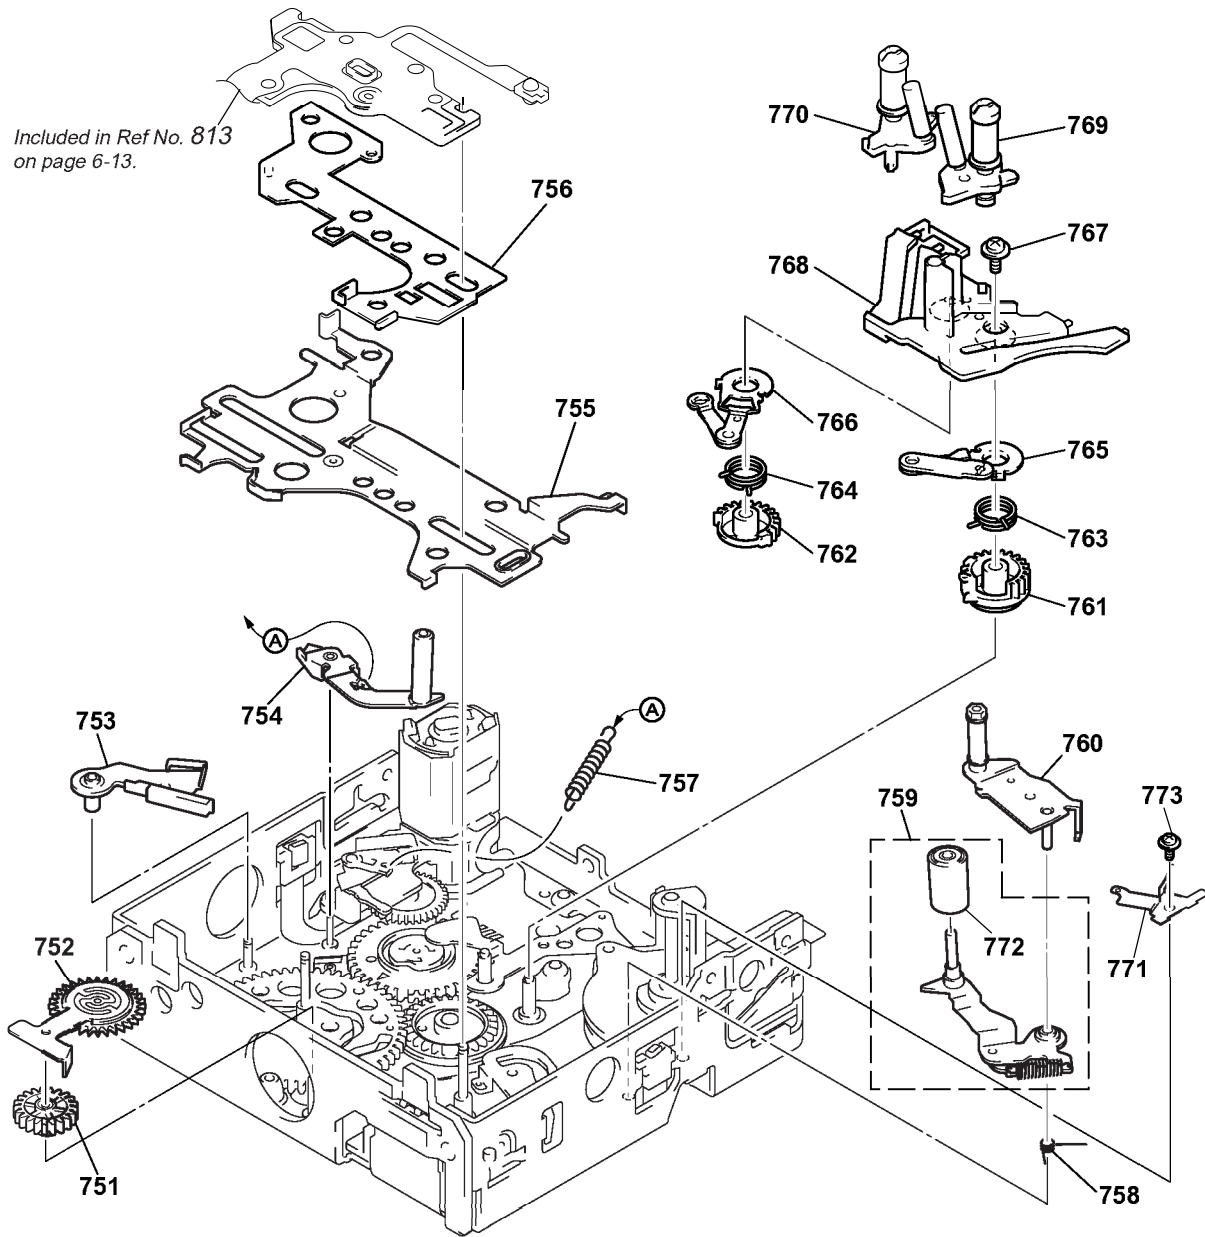

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
751	3-988-263-01	GEAR, RELAY		763	3-988-258-01	SPRING (GLT), TORSION	
752	X-3948-442-2	GEAR ASSY, GOOSENECK		764	3-988-253-01	SPRING (GLS), TORSION	
753	X-3948-435-2	PLATE ASSY, TG1 ADJUSTMENT		765	X-3948-440-1	ARM (T) ASSY, GL	
754	X-3948-434-1	ARM ASSY, TG1		766	X-3948-439-2	ARM (S) ASSY, GL	
755	X-3948-428-2	SLIDER ASSY, PINCH		767	3-947-503-01	SCREW (M1.4X2.5)	
756	X-3948-766-1	SLIDER ASSY, BRAKE		768	3-988-242-01	RAIL, GUIDE	
757	3-988-270-01	SPRING (TG1), TENSION COIL		769	X-3948-438-3	COASTER (T) ASSY	
758	3-988-233-01	SPRING (TG7/LD), TORSION		770	X-3948-437-1	COASTER (S) ASSY	
759	X-3948-433-2	ARM ASSY, PINCH		771	3-988-690-02	SPRING, TG7 RETAINER	
760	A-7093-501-A	ARM BLOCK ASSY, TG7		772	X-3748-630-2	ROLLER ASSY (DIA. 5.6), PINCH	
761	3-988-257-01	GEAR (T), GL		773	3-053-083-01	SCREW (M1.4X5)	
762	3-988-252-02	GEAR (S), GL					

6-1-13. EACH GEARS AND LOADING / CAPSTAN MOTOR ASSEMBLY

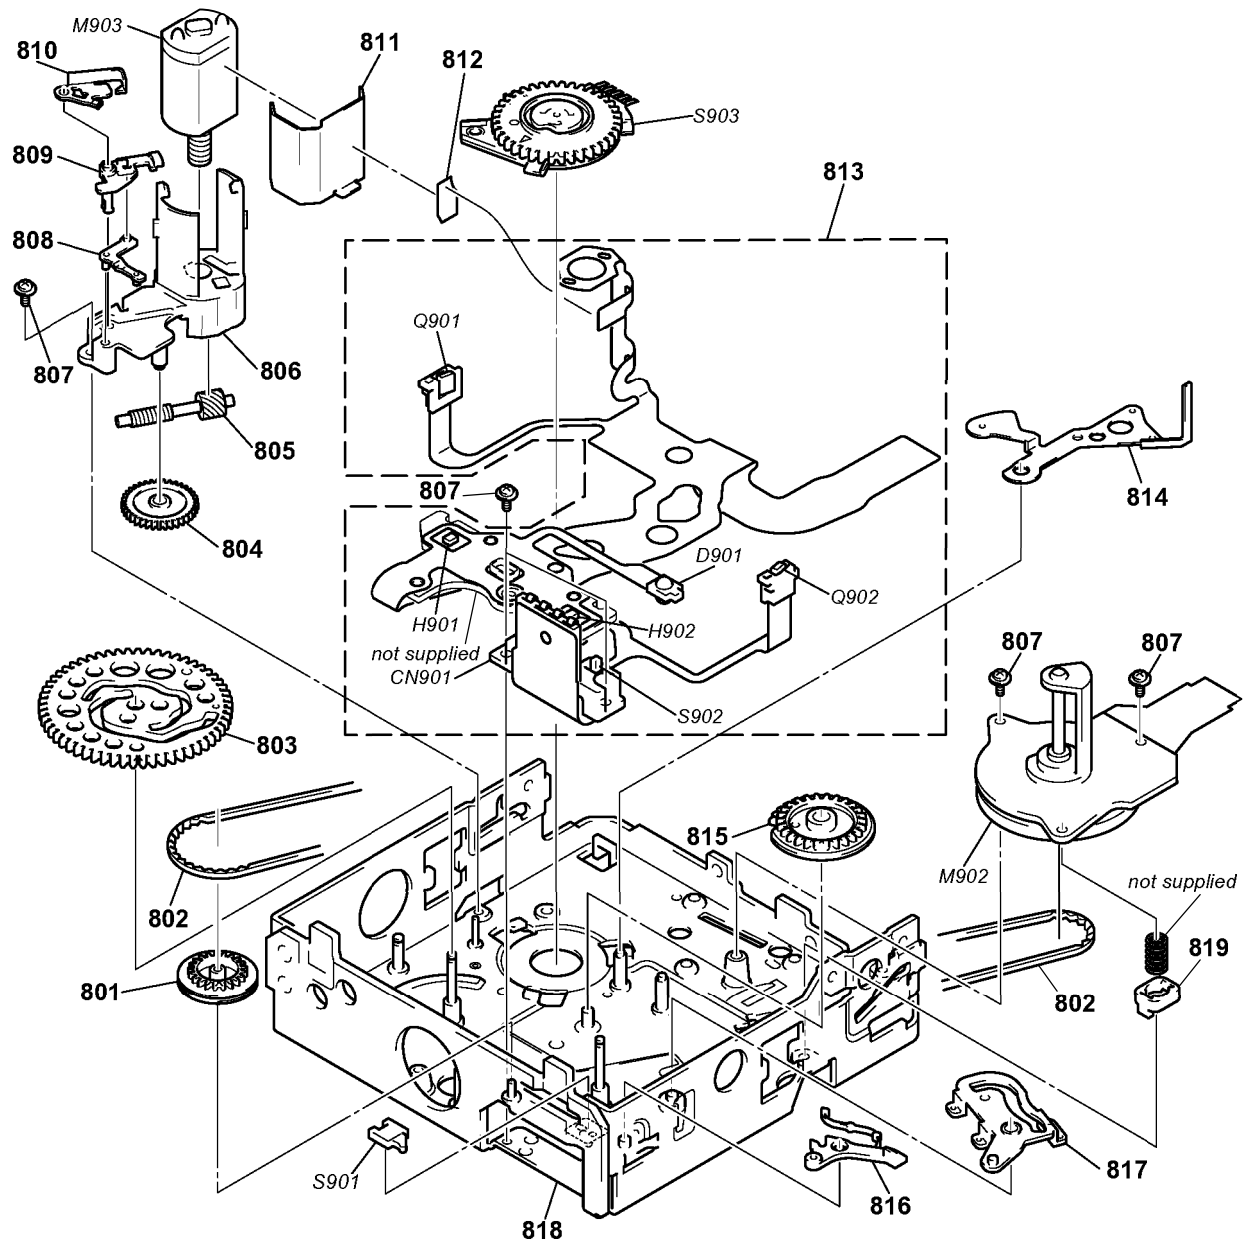

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
801	3-988-274-01	PULLEY, CONVERSION		816	3-988-223-01	ARM, EJECT	
802	3-988-276-02	BELT, TIMING		817	3-988-224-01	ARM, PINCH PRESS	
803	3-988-216-01	GEAR, CAM		818	X-3948-431-2	CHASSIS ASSY	
804	3-988-211-01	GEAR, DECELERATION		819	3-050-170-01	HOLDER	
805	3-988-210-01	SHAFT, WORM		CN901	1-784-723-11	PIN, CONNECTOR 4P	
806	3-988-207-01	HOLDER, MOTOR		D901	8-719-067-13	DIODE GL453K	
807	3-947-503-01	SCREW (M1.4X2.5)		H901	8-719-061-28	DIODE HW-105C-FT-V (S REEL)	
808	3-988-303-01	ARM, SPRING HOOK DRIVING		H902	8-719-061-28	DIODE HW-105C-FT-V (T REEL)	
809	3-988-271-01	BASE, SPRING HOOK FULCRUM		M902	8-835-606-01	MOTOR, DC SCD15A/C-NP (CAPSTAN)	
810	3-988-302-01	HOOK, TG1 SPRING		M903	X-3948-346-1	MOTOR ASSY, LOADING	
811	3-988-208-01	SHIELD, MOTOR		Q901	8-729-907-25	PHOTO TRANSISTOR PT4850F(TAPE END)	
812	1-657-785-11	FP-248 FLEXIBLE BOARD (DEW SENSOR)		Q902	8-729-907-25	PHOTO TRANSISTOR PT4850F(TAPE TOP)	
813	A-7073-418-A	FP-594 BOARD, COMPLETE		S901	1-771-039-51	SWITCH, PUSH (CASSETTE IN)	
814	3-988-280-03	ARM, HC DRIVING		S902	1-572-719-32	SWITCH, PUSH (1 KEY) (REC PROOF)	
815	3-988-239-01	GEAR, GL DRIVING		S903	1-771-325-11	ENCODER, ROTARY (SWITCH) (MODE)	

6-2. ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- CAPACITORS:
uF: μ F
- RESISTORS
All resistors are in ohms.
METAL: metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F: nonflammable
- COILS
uH: μ H
- SEMICONDUCTORS
In each case, u: μ , for example:
uA..., μ A..., uPA..., μ PA...,
uPB..., μ PB..., uPC..., μ PC...,
uPD..., μ PD...

When indicating parts by reference number, please include the board name.

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- Abbreviation
AUS: Australian model
JE: Tourist model
CND: Canadian model
CN: Chinese model
HK: Hong Kong model

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
	A-7073-676-A	CD-202 BOARD, MOUNT ***** (Ref.No.:10,000Series) (IC100,101,102 is not included in this complete board.)			A-7073-678-A	CK-80 BOARD, COMPLETE ***** (Ref.No.:10,000Series)	
		< CAPACITOR >			3-051-919-01	SHEET, LI PROTECTION	
						< BATTERY >	
C100	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V		Δ BT7200	1-528-724-21	BATTERY, V/L RECHARGEABLE	
C101	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V				< CAPACITOR >	
C102	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V					
C103	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V					
C105	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V		C7200	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C106	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V				< CONNECTOR >	
C107	1-135-210-11	TANTALUM CHIP 4.7uF 20% 10V		CN7200	1-779-064-11	PIN, CONNECTOR (PC BOARD) 12P	
C108	1-113-994-11	TANTAL. CHIP 6.8uF 20% 16V		CN7201	1-779-065-11	PIN, CONNECTOR (PC BOARD) 13P	
C110	1-164-360-11	CERAMIC CHIP 0.1uF 16V		CN7202	1-691-370-11	CONNECTOR, FFC/FPC 6P	
C111	1-135-210-11	TANTALUM CHIP 4.7uF 20% 10V		CN7203	1-766-336-21	CONNECTOR, FFC/FPC 6P	
C112	1-164-360-11	CERAMIC CHIP 0.1uF 16V		CN7204	1-784-939-11	CONNECTOR, BOARD TO BOARD 60P	
C115	1-113-994-11	TANTAL. CHIP 6.8uF 20% 16V		* CN7205	1-695-320-21	PIN, CONNECTOR (1.5MM)(SMD) 2P	
C117	1-135-210-11	TANTALUM CHIP 4.7uF 20% 10V		CN7207	1-766-354-21	CONNECTOR, FFC/FPC 24P	
C118	1-113-994-11	TANTAL. CHIP 6.8uF 20% 16V		CN7209	1-785-239-11	CONNECTOR, EXTERNAL	
C119	1-164-360-11	CERAMIC CHIP 0.1uF 16V		CN7210	1-764-680-21	CONNECTOR, FFC/FPC (ZIF) 8P	
		< CONNECTOR >				< DIODE >	
CN100	1-785-433-21	CONNECTOR, BOARD TO BOARD 40P		D7200	8-719-064-61	DIODE 01BZA8.2(TB85L)	
		< COIL >		D7201	8-719-064-61	DIODE 01BZA8.2(TB85L)	
L100	1-412-963-11	INDUCTOR 100uH		D7202	8-719-404-49	DIODE MA111-TX	
L101	1-412-963-11	INDUCTOR 100uH		D7203	8-719-420-14	DIODE MA8082-TX	
L102	1-412-963-11	INDUCTOR 100uH		D7204	8-719-064-61	DIODE 01BZA8.2(TB85L)	
		< TRANSISTOR >		D7206	8-719-064-61	DIODE 01BZA8.2(TB85L)	
Q100	8-729-117-73	TRANSISTOR 2SC4178-F13F14-T1		D7207	8-719-064-61	DIODE 01BZA8.2(TB85L)	
Q101	8-729-117-73	TRANSISTOR 2SC4178-F13F14-T1		D7211	8-719-064-61	DIODE 01BZA8.2(TB85L)	
Q102	8-729-117-73	TRANSISTOR 2SC4178-F13F14-T1		D7212	8-719-064-61	DIODE 01BZA8.2(TB85L)	
		< RESISTOR >		D7214	8-719-064-61	DIODE 01BZA8.2(TB85L)	
R100	1-216-864-11	METAL CHIP 0 5% 1/16W		D7215	8-719-064-61	DIODE 01BZA8.2(TB85L)	
R101	1-216-864-11	METAL CHIP 0 5% 1/16W				< IC >	
R102	1-216-864-11	METAL CHIP 0 5% 1/16W		IC7200	8-759-494-53	IC BU9729K-E2	
R103	1-216-829-11	METAL CHIP 4.7K 5% 1/16W				< TRANSISTOR >	
R104	1-216-829-11	METAL CHIP 4.7K 5% 1/16W		Q7200	8-729-230-63	TRANSISTOR 2SD1819A-QRS-TX	
R105	1-216-829-11	METAL CHIP 4.7K 5% 1/16W		Q7201	8-729-804-41	TRANSISTOR 2SB1122-ST-TD	

JK-163**LB-55****MA-333**

Ref. No.	Part No.	Description	Remarks
	A-7073-677-A	JK-163 BOARD, COMPLETE ***** (Ref.No.:10,000Series)	
< CAPACITOR >			
C7100	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C7101	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C7102	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C7103	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C7104	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
< CONNECTOR >			
CN7100	1-779-369-11	CONNECTOR, SQUARE TYPE(INDI)4P	
CN7101	1-779-331-11	CONNECTOR, FFC/FPC 14P	
CN7102	1-784-423-21	CONNECTOR, FFC/FPC (ZIF) 39P	
< DIODE >			
D7100	8-719-064-61	DIODE 01BZA8.2(TE85L)	
D7102	8-719-064-61	DIODE 01BZA8.2(TE85L)	
D7103	8-719-064-61	DIODE 01BZA8.2(TE85L)	
D7104	8-719-064-61	DIODE 01BZA8.2(TE85L)	
D7105	8-719-064-61	DIODE 01BZA8.2(TE85L)	
D7106	8-719-064-61	DIODE 01BZA8.2(TE85L)	
< FERRITE BEAD >			
FB710	1-500-444-11	FERRITE 0UH	
FB711	1-500-444-11	FERRITE 0UH	
FB712	1-500-444-11	FERRITE 0UH	
FB713	1-500-444-11	FERRITE 0UH	
FB714	1-500-444-11	FERRITE 0UH	
FB715	1-500-444-11	FERRITE 0UH	
FB716	1-500-444-11	FERRITE 0UH	
FB717	1-500-444-11	FERRITE 0UH	
FB718	1-500-444-11	FERRITE 0UH	
< JACK >			
J7100	1-565-276-31	JACK, ULTRA SMALL 1P (LANC)	
J7101	1-563-282-21	JACK, SMALL TYPE (HEADPHONE)	
J7102	1-778-040-11	JACK, SMALL TYPE (AUDIO/VIDEO)	
< COIL >			
L7100	1-414-757-11	INDUCTOR 100uH	
L7101	1-414-757-11	INDUCTOR 100uH	
L7102	1-414-757-11	INDUCTOR 100uH	
L7103	1-414-757-11	INDUCTOR 100uH	
L7104	1-414-751-11	INDUCTOR 1uH	
< RESISTOR >			
R7102	1-216-864-11	METAL CHIP 0 5% 1/16W	
< VARISTOR >			
VDR711	1-801-862-11	VARISTOR, CHIP	
VDR714	1-801-862-11	VARISTOR, CHIP	
VDR715	1-801-862-11	VARISTOR, CHIP	
VDR717	1-801-862-11	VARISTOR, CHIP	
VDR718	1-801-862-11	VARISTOR, CHIP	

Ref. No.	Part No.	Description	Remarks
	A-7073-683-A	LB-55 BOARD, COMPLETE ***** (Ref.No.:10,000Series)	
< CAPACITOR >			
C5201	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C5202	1-113-642-11	TANTAL. CHIP 47uF 20% 10V	
C5203	1-115-566-11	CERAMIC CHIP 4.7uF 10% 10V	
C5205	1-107-682-11	CERAMIC CHIP 1uF 10% 16V	
△ C5206	1-163-020-00	CERAMIC CHIP 0.0082uF 10% 50V	
△ C5207	1-163-020-00	CERAMIC CHIP 0.0082uF 10% 50V	
△ C5208	1-163-020-00	CERAMIC CHIP 0.0082uF 10% 50V	
< CONNECTOR >			
CN5201	1-784-421-11	CONNECTOR, FFC/FPC (ZIF) 27P	
CN5202	1-691-354-21	CONNECTOR, FFC/FPC (ZIF) 16P	
< DIODE >			
△ D5201	8-719-056-49	DIODE 1SS370(TE85L)	
< COIL >			
L5201	1-412-031-11	INDUCTOR CHIP 47uH	
L5202	1-412-029-11	INDUCTOR CHIP 10uH	
< FLUORESCENT INDICATOR >			
△ ND5201	1-517-758-11	TUBE, FLUORESCENT (0.55 INCH)	
< TRANSISTOR >			
△ Q5201	8-729-039-24	TRANSISTOR FX216-TL1	
< RESISTOR >			
R5201	1-216-839-11	METAL CHIP 33K 5% 1/16W	
R5202	1-216-809-11	METAL CHIP 100 5% 1/16W	
< TRANSFORMER >			
△ T5201	1-426-848-51	TRANSFORMER, INVERTER	

A-7073-680-A MA-333 BOARD, COMPLETE

(Ref.No.:10,000Series)

< CAPACITOR >			
C7300	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V	
C7301	1-162-966-11	CERAMIC CHIP 0.0022uF 10% 50V	
C7305	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C7306	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	
C7307	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	
C7308	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V	
C7309	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V	
C7310	1-162-968-11	CERAMIC CHIP 0.0047uF 10% 50V	
C7312	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
C7313	1-162-967-11	CERAMIC CHIP 0.0033uF 10% 50V	

Note :

The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

Note :

Les composants identifiés par une marque △ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C7314	1-162-967-11	CERAMIC CHIP 0.0033uF 10%	50V	< IC >			
C7315	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V	IC7301	8-759-248-31	IC BA7780KV-E2	
C7316	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V	IC7302	8-759-633-55	IC M5222FP-E1	
C7317	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	IC7303	8-759-111-56	IC uPC4572G2-E2	
C7318	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	< TRANSISTOR >			
C7319	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	Q7300	8-729-140-75	TRANSISTOR 2SD999-T1-CLCK	
C7320	1-162-927-11	CERAMIC CHIP 100PF 5%	50V	Q7301	8-729-141-48	TRANSISTOR 2SB624-T1BV4	
C7321	1-162-927-11	CERAMIC CHIP 100PF 5%	50V	Q7302	8-729-037-53	TRANSISTOR 2SB1462J-QR(TX).SO	
C7322	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	Q7303	8-729-037-72	TRANSISTOR UN9211J-(TX).SO	
C7323	1-104-913-11	TANTAL. CHIP 10uF 20%	16V	Q7304	8-729-037-53	TRANSISTOR 2SB1462J-QR(K8).SO	
C7324	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	< RESISTOR >			
C7325	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	R7302	1-216-864-11	METAL CHIP 0 5% 1/16W	
C7326	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	R7303	1-216-805-11	METAL CHIP 47 5% 1/16W	
C7327	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	R7304	1-216-821-11	METAL CHIP 1K 5% 1/16W	
C7328	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	R7305	1-216-837-11	METAL CHIP 22K 5% 1/16W	
C7329	1-164-245-11	CERAMIC CHIP 0.015uF 10%	25V	R7306	1-216-831-11	METAL CHIP 6.8K 5% 1/16W	
C7330	1-162-966-11	CERAMIC CHIP 0.0022uF 10%	50V	R7309	1-216-835-11	METAL CHIP 15K 5% 1/16W	
C7331	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	R7310	1-216-835-11	METAL CHIP 15K 5% 1/16W	
C7332	1-162-966-11	CERAMIC CHIP 0.0022uF 10%	50V	R7311	1-216-839-11	METAL CHIP 33K 5% 1/16W	
C7333	1-164-245-11	CERAMIC CHIP 0.015uF 10%	25V	R7312	1-216-836-11	METAL CHIP 18K 5% 1/16W	
C7338	1-164-227-11	CERAMIC CHIP 0.022uF 10%	25V	R7313	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
C7339	1-164-227-11	CERAMIC CHIP 0.022uF 10%	25V	R7314	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
C7340	1-164-245-11	CERAMIC CHIP 0.015uF 10%	25V	R7315	1-216-831-11	METAL CHIP 6.8K 5% 1/16W	
C7341	1-164-245-11	CERAMIC CHIP 0.015uF 10%	25V	R7316	1-216-831-11	METAL CHIP 6.8K 5% 1/16W	
C7342	1-162-962-11	CERAMIC CHIP 470PF 10%	50V	R7317	1-216-821-11	METAL CHIP 1K 5% 1/16W	
C7343	1-162-962-11	CERAMIC CHIP 470PF 10%	50V	R7318	1-216-821-11	METAL CHIP 1K 5% 1/16W	
C7344	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	R7319	1-216-835-11	METAL CHIP 15K 5% 1/16W	
C7345	1-115-156-11	CERAMIC CHIP 1uF 10V	10V	R7320	1-216-829-11	METAL CHIP 4.7K 5% 1/16W	
C7346	1-115-156-11	CERAMIC CHIP 1uF 10V	10V	R7321	1-216-833-11	METAL CHIP 10K 5% 1/16W	
C7347	1-164-156-11	CERAMIC CHIP 0.1uF 25V	25V	R7322	1-216-835-11	METAL CHIP 15K 5% 1/16W	
C7350	1-135-259-11	TANTAL. CHIP 10uF 20%	6.3V	R7323	1-216-800-11	RES,CHIP 18 5% 1/16W	
C7351	1-109-982-11	CERAMIC CHIP 1uF 10%	10V	R7324	1-216-835-11	METAL CHIP 15K 5% 1/16W	
C7352	1-109-982-11	CERAMIC CHIP 1uF 10%	10V	R7326	1-216-829-11	METAL CHIP 4.7K 5% 1/16W	
C7353	1-104-852-11	TANTAL. CHIP 22uF 20%	6.3V	R7327	1-216-833-11	METAL CHIP 10K 5% 1/16W	
C7354	1-135-259-11	TANTAL. CHIP 10uF 20%	6.3V	R7328	1-216-839-11	METAL CHIP 33K 5% 1/16W	
C7355	1-135-259-11	TANTAL. CHIP 10uF 20%	6.3V	R7329	1-216-001-00	METAL CHIP 10 5% 1/10W	
C7356	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V	R7331	1-216-835-11	METAL CHIP 15K 5% 1/16W	
C7357	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V	R7332	1-216-839-11	METAL CHIP 33K 5% 1/16W	
< CONNECTOR >				R7335	1-216-841-11	METAL CHIP 47K 5% 1/16W	
* CN7300	1-695-320-21	PIN, CONNECTOR (1.5MM)(SMD) 2P		R7337	1-216-795-11	RES,CHIP 6.8 5% 1/16W	
CN7301	1-580-055-21	PIN, CONNECTOR 2P		R7339	1-216-821-11	METAL CHIP 1K 5% 1/16W	
CN7302	1-766-340-21	CONNECTOR, FFC/FPC 10P		R7342	1-216-829-11	METAL CHIP 4.7K 5% 1/16W	
CN7303	1-766-335-21	CONNECTOR, FFC/FPC 5P		R7344	1-216-839-11	METAL CHIP 33K 5% 1/16W	
CN7304	1-779-337-11	CONNECTOR, FFC/FPC 26P		R7345	1-216-834-11	METAL CHIP 12K 5% 1/16W	
CN7305	1-779-327-11	CONNECTOR, FFC/FPC 6P		R7347	1-216-839-11	METAL CHIP 33K 5% 1/16W	
< DIODE >				R7348	1-216-818-11	METAL CHIP 560 5% 1/16W	
D7300	8-719-061-82	DIODE TLSU1002(TPX1,SONY)		R7350	1-216-837-11	METAL CHIP 22K 5% 1/16W	
D7304	8-719-064-61	DIODE 01BZA8.2(TE85L)		R7351	1-216-849-11	METAL CHIP 220K 5% 1/16W	
D7305	8-719-420-14	DIODE MA8082-TX		R7352	1-216-833-11	METAL CHIP 10K 5% 1/16W	
< FERRITE BEAD >				R7353	1-216-833-11	METAL CHIP 10K 5% 1/16W	
FB730	1-500-444-11	FERRITE 0UH		R7354	1-216-845-11	METAL CHIP 100K 5% 1/16W	
FB731	1-500-444-11	FERRITE 0UH		R7355	1-216-837-11	METAL CHIP 22K 5% 1/16W	
				R7356	1-216-837-11	METAL CHIP 22K 5% 1/16W	
				R7357	1-216-821-11	METAL CHIP 1K 5% 1/16W	
				R7358	1-216-821-11	METAL CHIP 1K 5% 1/16W	
				R7359	1-216-841-11	METAL CHIP 47K 5% 1/16W	

Ref. No.	Part No.	Description	Remarks
R7360	1-216-841-11	METAL CHIP 47K 5%	1/16W
R7361	1-216-815-11	METAL CHIP 330 5%	1/16W
R7363	1-216-848-11	METAL CHIP 180K 5%	1/16W

A-7073-679-A PD-101 BOARD, COMPLETE

(Ref.No.:10,000Series)

< CAPACITOR >

C5501	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C5502	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C5503	1-164-943-11	CERAMIC CHIP 0.01uF 10%	16V
C5504	1-164-943-11	CERAMIC CHIP 0.01uF 10%	16V
C5505	1-164-943-11	CERAMIC CHIP 0.01uF 10%	16V
C5506	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C5507	1-104-752-11	TANTAL. CHIP 33uF 20%	6.3V
C5508	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C5509	1-135-221-11	TANTAL. CHIP 3.3uF 20%	4V
C5510	1-104-852-11	TANTAL. CHIP 22uF 20%	10V
C5512	1-104-851-11	TANTAL. CHIP 10uF 20%	10V
C5513	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C5514	1-110-501-11	CERAMIC CHIP 0.33uF 10%	16V
C5515	1-110-501-11	CERAMIC CHIP 0.33uF 10%	16V
C5516	1-110-501-11	CERAMIC CHIP 0.33uF 10%	16V
C5517	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C5520	1-164-933-11	CERAMIC CHIP 220PF 10%	16V
C5521	1-164-933-11	CERAMIC CHIP 220PF 10%	16V
C5522	1-164-933-11	CERAMIC CHIP 220PF 10%	16V
C5602	1-113-985-11	TANTAL. CHIP 10uF 20%	20V
C5603	1-107-725-11	CERAMIC CHIP 0.1uF 10%	16V
C5604	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C5605	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C5607	1-164-004-11	CERAMIC CHIP 0.1uF 10%	25V
C5608	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C5610	1-164-872-11	CERAMIC CHIP 82PF 5%	16V
C5611	1-164-004-11	CERAMIC CHIP 0.1uF 10%	25V
C5612	1-164-872-11	CERAMIC CHIP 82PF 5%	16V
C5613	1-164-739-11	CERAMIC CHIP 560PF 5%	50V
C5616	1-109-982-11	CERAMIC CHIP 1uF 10%	10V
C5618	1-104-916-11	TANTAL. CHIP 6.8uF 20%	20V
C5619	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
C5620	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C5621	1-113-985-11	TANTAL. CHIP 10uF 20%	20V
C5622	1-107-682-11	CERAMIC CHIP 1uF 10%	16V
C5624	1-164-004-11	CERAMIC CHIP 0.1uF 10%	25V
C5701	1-113-991-11	TANTAL. CHIP 33uF 20%	16V
C5702	1-109-982-11	CERAMIC CHIP 1uF 10%	10V
C5703	1-164-661-11	CERAMIC CHIP 0.018uF 10%	50V
C5704	1-164-004-11	CERAMIC CHIP 0.1uF 10%	25V
△ C5705	1-113-521-11	CERAMIC CHIP 12PF 10%	3KV
C5706	1-164-943-11	CERAMIC CHIP 0.01uF 10%	16V

< CONNECTOR >

CN5601	1-573-364-11	CONNECTOR, FFC/FPC 24P
CN5701	1-764-709-11	CONNECTOR, FFC/FPC (LIF) 10P
CN5802	1-779-064-11	PIN, CONNECTOR (PC BOARD) 12P
CN5803	1-779-065-11	PIN, CONNECTOR (PC BOARD) 13P
CN5805	1-573-346-21	CONNECTOR, FFC/FPC 6P

Ref. No.	Part No.	Description	Remarks
		< DIODE >	

D5602	8-713-102-80	DIODE 1T369-01-T8A	
D5604	8-719-422-31	DIODE MA8047-M-TX	
△ D5704	8-719-404-49	DIODE MA111-TX	
D5801	8-719-062-16	DIODE 01ZA8.2(TPL3)	
D5802	8-719-062-16	DIODE 01ZA8.2(TPL3)	

< IC >

IC5501	8-759-530-19	IC MB40D001PFV-G-BND-ER	
IC5502	8-759-539-27	IC IR3Y37A4	
IC5601	8-759-544-46	IC LZ9GH204	
IC5602	8-759-327-01	IC NJM062V(TE2)	
IC5701	8-759-075-70	IC TA75S393F-TE85R	

< COIL >

L5500	1-414-754-11	INDUCTOR 10uH	
L5501	1-414-756-11	INDUCTOR 47uH	
L5502	1-414-754-11	INDUCTOR 10uH	
L5503	1-414-754-11	INDUCTOR 10uH	
L5603	1-414-754-11	INDUCTOR 10uH	

L5604	1-414-754-11	INDUCTOR 10uH	
L5605	1-412-945-11	INDUCTOR 3.3uH	
L5701	1-416-666-11	INDUCTOR 0uH	

< TRANSISTOR >

Q5605	8-729-037-52	TRANSISTOR 2SD2216J-QR(K8).SO	
Q5606	8-729-037-53	TRANSISTOR 2SB1462J-QR(K8).SO	
Q5607	8-729-037-52	TRANSISTOR 2SD2216J-QR(K8).SO	
Q5608	8-729-037-53	TRANSISTOR 2SB1462J-QR(K8).SO	
△ Q5701	8-729-039-43	TRANSISTOR FP216-TL	

Q5702	8-729-042-59	TRANSISTOR UN9112J-(K8).SO	
-------	--------------	----------------------------	--

< RESISTOR >

R5500	1-218-990-11	SHORT 0	
R5501	1-218-972-11	RES,CHIP 39K 5%	1/16W
R5505	1-218-973-11	RES,CHIP 47K 5%	1/16W
R5508	1-208-719-11	RES,CHIP 33K 0.50%	1/16W
R5509	1-208-711-11	RES,CHIP 15K 0.50%	1/16W
R5510	1-218-969-11	RES,CHIP 22K 5%	1/16W
R5511	1-218-966-11	RES,CHIP 12K 5%	1/16W
R5512	1-218-969-11	RES,CHIP 22K 5%	1/16W
R5513	1-218-966-11	RES,CHIP 12K 5%	1/16W
R5514	1-218-965-11	RES,CHIP 10K 5%	1/16W
R5515	1-218-972-11	RES,CHIP 39K 5%	1/16W
R5516	1-218-969-11	RES,CHIP 22K 5%	1/16W
R5517	1-218-967-11	RES,CHIP 15K 5%	1/16W
R5518	1-218-971-11	RES,CHIP 33K 5%	1/16W
R5520	1-218-984-11	RES,CHIP 390K 5%	1/16W
R5521	1-208-709-11	RES,CHIP 12K 0.50%	1/16W
R5522	1-208-721-11	RES,CHIP 39K 0.50%	1/16W
R5528	1-218-977-11	RES,CHIP 100K 5%	1/16W
R5532	1-218-990-11	SHORT 0	
R5540	1-218-941-11	RES,CHIP 100 5%	1/16W

Note :

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Note :

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

PD-101

RI-10

SE-75

VC-208

Ref. No.	Part No.	Description			Remarks
R5541	1-218-941-11	RES,CHIP	100	5%	1/16W
R5542	1-218-941-11	RES,CHIP	100	5%	1/16W
R5601	1-218-990-11	SHORT	0		
R5603	1-218-990-11	SHORT	0		
R5604	1-218-990-11	SHORT	0		
R5607	1-218-990-11	SHORT	0		
R5608	1-218-990-11	SHORT	0		
R5610	1-218-977-11	RES,CHIP	100K	5%	1/16W
R5614	1-218-987-11	RES,CHIP	680K	5%	1/16W
R5615	1-218-980-11	RES,CHIP	180K	5%	1/16W
R5620	1-218-965-11	RES,CHIP	10K	5%	1/16W
R5621	1-218-989-11	RES,CHIP	1M	5%	1/16W
R5622	1-218-989-11	RES,CHIP	1M	5%	1/16W
R5623	1-218-975-11	RES,CHIP	68K	5%	1/16W
R5624	1-218-969-11	RES,CHIP	22K	5%	1/16W
R5627	1-208-927-11	RES,CHIP	47K	0.50%	1/16W
R5628	1-218-990-11	SHORT	0		
R5629	1-218-975-11	RES,CHIP	68K	5%	1/16W
R5630	1-218-973-11	RES,CHIP	47K	5%	1/16W
R5634	1-218-961-11	RES,CHIP	4.7K	5%	1/16W
R5640	1-208-935-11	RES,CHIP	100K	0.50%	1/16W
R5641	1-208-719-11	RES,CHIP	33K	0.50%	1/16W
R5643	1-218-974-11	RES,CHIP	56K	5%	1/16W
R5644	1-218-971-11	RES,CHIP	33K	5%	1/16W
R5649	1-218-990-11	SHORT	0		
R5651	1-208-719-11	RES,CHIP	33K	0.50%	1/16W
R5652	1-208-715-11	RES,CHIP	22K	0.50%	1/16W
R5653	1-208-721-11	RES,CHIP	39K	0.50%	1/16W
R5654	1-208-719-11	RES,CHIP	33K	0.50%	1/16W
R5657	1-218-990-11	SHORT	0		
R5658	1-218-990-11	SHORT	0		
R5659	1-218-990-11	SHORT	0		
R5660	1-218-990-11	SHORT	0		
R5661	1-218-990-11	SHORT	0		
R5669	1-218-990-11	SHORT	0		
R5670	1-218-990-11	SHORT	0		
R5671	1-218-990-11	SHORT	0		
R5674	1-218-990-11	SHORT	0		
R5676	1-218-990-11	SHORT	0		
R5679	1-218-937-11	RES,CHIP	47	5%	1/16W
R5680	1-218-937-11	RES,CHIP	47	5%	1/16W
R5681	1-218-937-11	RES,CHIP	47	5%	1/16W
R5685	1-218-973-11	RES,CHIP	47K	5%	1/16W
R5686	1-218-973-11	RES,CHIP	47K	5%	1/16W
R5687	1-218-961-11	RES,CHIP	4.7K	5%	1/16W
R5688	1-216-864-11	METAL CHIP	0	5%	1/16W
R5695	1-218-990-11	SHORT	0		
R5699	1-218-969-11	RES,CHIP	22K	5%	1/16W
R5703	1-216-055-00	METAL CHIP	1.8K	5%	1/10W
R5704	1-216-055-00	METAL CHIP	1.8K	5%	1/10W
R5705	1-218-977-11	RES,CHIP	100K	5%	1/16W
R5706	1-218-963-11	RES,CHIP	6.8K	5%	1/16W
R5707	1-218-969-11	RES,CHIP	22K	5%	1/16W
R5708	1-218-942-11	RES,CHIP	120	5%	1/16W
R5709	1-218-949-11	RES,CHIP	470	5%	1/16W
R5710	1-218-990-11	SHORT	0		
R5801	1-218-954-11	RES,CHIP	1.2K	5%	1/16W
R5802	1-218-955-11	RES,CHIP	1.5K	5%	1/16W
R5803	1-218-959-11	RES,CHIP	3.3K	5%	1/16W
R5804	1-218-963-11	RES,CHIP	6.8K	5%	1/16W

Ref. No.	Part No.	Description			Remarks
R5805	1-218-965-11	RES,CHIP	10K	5%	1/16W
R5807	1-218-990-11	SHORT	0		
< TRANSFORMER >					
△ T5701	1-431-754-21	TRANSFORMER, INVERTER			
A-7073-681-A RI-10 BOARD, COMPLETE					

(Ref.No.:10,000Series)					
* 3-052-742-01		HOLDER, LED			
< CONNECTOR >					
CN7401	1-750-333-11	CONNECTOR, FFC/FPC (ZIF) 6P			
< DIODE >					
D7401	8-719-404-49	DIODE MA111-TX			
D7402	8-719-061-86	DIODE DCR2810			
D7403	8-719-067-44	DIODE CL-310IRS-X-TU			
< IC >					
IC7401	8-749-013-13	IC RS-70-TU			
A-7073-675-A SE-75 BOARD, COMPLETE					

(Ref.No.:10,000Series)					
< CAPACITOR >					
C450	1-164-360-11	CERAMIC CHIP	0.1uF	16V	
C451	1-135-201-11	TANTALUM CHIP	10uF	20%	4V
< CONNECTOR >					
CN450	1-774-631-21	CONNECTOR, FFC/FPC 6P			
< COIL >					
L450	1-414-754-11	INDUCTOR	10uH		
< SENSOR >					
SE450	1-803-042-31	SENSOR, ANGULAR VELOCITY (YAW)			
SE451	1-803-042-41	SENSOR, ANGULAR VELOCITY (PITCH)			
A-7094-031-A VC-208 BOARD, COMPLETE (890E)					

A-7094-069-A VC-208 BOARD, COMPLETE (900)					

A-7094-071-A VC-208 BOARD, COMPLETE (900E)					

(Ref.No.:10,000Series)					
< CAPACITOR >					
C201	1-107-682-11	CERAMIC CHIP	1uF	10%	16V
C202	1-107-682-11	CERAMIC CHIP	1uF	10%	16V
C203	1-107-682-11	CERAMIC CHIP	1uF	10%	16V
C204	1-107-682-11	CERAMIC CHIP	1uF	10%	16V
C205	1-107-682-11	CERAMIC CHIP	1uF	10%	16V

Note :
The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Note :
Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

VC-208

Ref. No.	Part No.	Description	Remarks			Ref. No.	Part No.	Description	Remarks		
C206	1-107-682-11	CERAMIC CHIP	1uF	10%	16V	C359	1-162-958-11	CERAMIC CHIP	270PF	5%	50V
C207	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C360	1-164-942-11	CERAMIC CHIP	0.0068uF	10%	16V
C208	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C361	1-164-942-11	CERAMIC CHIP	0.0068uF	10%	16V
C209	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C368	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C211	1-109-982-11	CERAMIC CHIP	1uF	10%	10V	C370	1-164-940-11	CERAMIC CHIP	0.0033uF	10%	16V
C212	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C371	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C213	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C372	1-107-819-11	CERAMIC CHIP	0.022uF	10%	16V
C214	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C373	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C215	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C374	1-107-819-11	CERAMIC CHIP	0.022uF	10%	16V
C217	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C375	1-164-940-11	CERAMIC CHIP	0.0033uF	10%	16V
C218	1-107-820-11	CERAMIC CHIP	0.1uF		16V	C376	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C219	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C377	1-135-151-21	TANTALUM CHIP	4.7uF	20%	4V
C220	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C379	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C221	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C400	1-104-847-11	TANTAL. CHIP	22uF	20%	4V
C222	1-113-988-11	TANTAL. CHIP	68uF	20%	4V	C401	1-104-847-11	TANTAL. CHIP	22uF	20%	4V
C227	1-115-156-11	CERAMIC CHIP	1uF		10V	C402	1-164-677-11	CERAMIC CHIP	0.033uF	10%	16V
C228	1-164-850-11	CERAMIC CHIP	10PF	0.5PF	16V	C403	1-164-677-11	CERAMIC CHIP	0.033uF	10%	16V
C229	1-164-937-11	CERAMIC CHIP	0.001uF	10%	16V	C404	1-107-819-11	CERAMIC CHIP	0.022uF	10%	16V
C230	1-164-937-11	CERAMIC CHIP	0.001uF	10%	16V	C405	1-107-819-11	CERAMIC CHIP	0.022uF	10%	16V
C231	1-164-846-11	CERAMIC CHIP	6PF	0.5PF	16V	C406	1-107-819-11	CERAMIC CHIP	0.022uF	10%	16V
C232	1-107-820-11	CERAMIC CHIP	0.1uF		16V	C407	1-107-819-11	CERAMIC CHIP	0.022uF	10%	16V
C233	1-135-201-11	TANTALUM CHIP	10uF	20%	4V	C408	1-104-908-11	TANTAL. CHIP	47uF	20%	4V
C234	1-104-847-11	TANTAL. CHIP	22uF	20%	4V	C409	1-104-908-11	TANTAL. CHIP	47uF	20%	4V
C235	1-107-820-11	CERAMIC CHIP	0.1uF		16V	C410	1-104-908-11	TANTAL. CHIP	47uF	20%	4V
C236	1-135-201-11	TANTALUM CHIP	10uF	20%	4V	C411	1-104-908-11	TANTAL. CHIP	47uF	20%	4V
C237	1-115-156-11	CERAMIC CHIP	1uF		10V	C414	1-135-201-11	TANTALUM CHIP	10uF	20%	4V
C238	1-164-850-11	CERAMIC CHIP	10PF	0.5PF	16V	C415	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C239	1-164-850-11	CERAMIC CHIP	10PF	0.5PF	16V	C500	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C240	1-164-346-11	CERAMIC CHIP	1uF		16V	C501	1-164-941-11	CERAMIC CHIP	0.0047uF	10%	16V
C247	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	C502	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C248	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	C503	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C249	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	C504	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C250	1-164-850-11	CERAMIC CHIP	10PF	0.5PF	16V	C505	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C252	1-115-156-11	CERAMIC CHIP	1uF		10V	C506	1-164-935-11	CERAMIC CHIP	470PF	10%	16V
C253	1-115-156-11	CERAMIC CHIP	1uF		10V	C507	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V
C254	1-115-156-11	CERAMIC CHIP	1uF		10V	C506	1-164-939-11	CERAMIC CHIP	0.0022uF	10%	16V
C255	1-135-201-11	TANTALUM CHIP	10uF	20%	4V	C508	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C256	1-135-201-11	TANTALUM CHIP	10uF	20%	4V	C509	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V
C257	1-135-201-11	TANTALUM CHIP	10uF	20%	4V	C510	1-164-937-11	CERAMIC CHIP	0.001uF	10%	16V
C258	1-135-201-11	TANTALUM CHIP	10uF	20%	4V	C511	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C259	1-135-201-11	TANTALUM CHIP	10uF	20%	4V	C512	1-164-939-11	CERAMIC CHIP	0.0022uF	10%	16V
C260	1-135-201-11	TANTALUM CHIP	10uF	20%	4V	C514	1-115-156-11	CERAMIC CHIP	1uF		10V
C262	1-104-852-11	TANTAL. CHIP	22uF	20%	10V	C515	1-104-847-11	TANTAL. CHIP	22uF	20%	4V
C300	1-107-820-11	CERAMIC CHIP	0.1uF		16V	C516	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C301	1-107-820-11	CERAMIC CHIP	0.1uF		16V	C517	1-104-752-11	TANTAL. CHIP	33uF	20%	6.3V
C302	1-107-820-11	CERAMIC CHIP	0.1uF		16V	C518	1-115-156-11	CERAMIC CHIP	1uF		10V
C303	1-135-201-11	TANTALUM CHIP	10uF	20%	4V	C519	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C305	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C520	1-164-941-11	CERAMIC CHIP	0.0047uF	10%	16V
C306	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C521	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C307	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C522	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C308	1-104-847-11	TANTAL. CHIP	22uF	20%	4V	C523	1-164-935-11	CERAMIC CHIP	470PF	10%	16V
C309	1-107-820-11	CERAMIC CHIP	0.1uF		16V	C523	1-164-939-11	CERAMIC CHIP	0.0022uF	10%	16V
C310	1-107-820-11	CERAMIC CHIP	0.1uF		16V	C524	1-110-501-11	CERAMIC CHIP	0.33uF	10%	16V
C311	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C525	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V
C351	1-110-501-11	CERAMIC CHIP	0.33uF	10%	16V	C526	1-164-937-11	CERAMIC CHIP	0.001uF	10%	16V
C353	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V	C527	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C354	1-110-501-11	CERAMIC CHIP	0.33uF	10%	16V	C528	1-164-939-11	CERAMIC CHIP	0.0022uF	10%	16V
C355	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V	C530	1-115-156-11	CERAMIC CHIP	1uF		10V
C357	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	C531	1-104-847-11	TANTAL. CHIP	22uF	20%	4V
C358	1-162-958-11	CERAMIC CHIP	270PF	5%	50V	C701	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V

Ref. No.	Part No.	Description				Remarks	Ref. No.	Part No.	Description				Remarks
C702	1-107-820-11	CERAMIC CHIP	0.1uF			16V	C1216	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C703	1-104-851-11	TANTAL. CHIP	10uF	20%		10V	C1217	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	
C705	1-107-820-11	CERAMIC CHIP	0.1uF			16V	C1218	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	
C721	1-164-935-11	CERAMIC CHIP	470PF	10%		16V	C1219	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	
C722	1-164-935-11	CERAMIC CHIP	470PF	10%		16V	C1220	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	
C723	1-164-939-11	CERAMIC CHIP	0.0022uF	10%		16V	C1221	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	
C724	1-164-939-11	CERAMIC CHIP	0.0022uF	10%		16V	C1222	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	
C725	1-164-937-11	CERAMIC CHIP	0.001uF	10%		16V	C1223	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	
C726	1-164-937-11	CERAMIC CHIP	0.001uF	10%		16V	C1224	1-164-874-11	CERAMIC CHIP	100PF	5%	16V	
C727	1-125-777-11	CERAMIC CHIP	0.1uF	10%		10V	C1225	1-164-842-11	CERAMIC CHIP	2PF	0.25PF	16V	
C728	1-125-777-11	CERAMIC CHIP	0.1uF	10%		10V	C1226	1-164-854-11	CERAMIC CHIP	15PF	5%	16V	
C729	1-218-990-11	SHORT 0		(900/900E)			C1227	1-164-874-11	CERAMIC CHIP	100PF	5%	16V	
C730	1-125-777-11	CERAMIC CHIP	0.1uF	10%		10V	C1228	1-164-850-11	CERAMIC CHIP	18PF	5%	16V	
C731	1-164-878-11	CERAMIC CHIP	150PF	5%		16V	C1229	1-164-850-11	CERAMIC CHIP	18PF	5%	16V	
C732	1-164-878-11	CERAMIC CHIP	150PF	5%		16V	C1230	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	
C733	1-115-566-11	CERAMIC CHIP	4.7uF	10%		10V	C1231	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C734	1-115-566-11	CERAMIC CHIP	4.7uF	10%		10V	C1232	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C735	1-115-566-11	CERAMIC CHIP	4.7uF	10%		10V	C1233	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C736	1-115-566-11	CERAMIC CHIP	4.7uF	10%		10V	C1234	1-164-874-11	CERAMIC CHIP	100PF	5%	16V	
C738	1-115-566-11	CERAMIC CHIP	4.7uF	10%		10V	C1235	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	
C740	1-104-851-11	TANTAL. CHIP	10uF	20%		10V	< CONNECTOR >						
C742	1-135-259-11	TANTAL. CHIP	10uF	20%		6.3V	CN200	1-785-432-21	CONNECTOR, BOARD TO BOARD 40P				
C743	1-115-566-11	CERAMIC CHIP	4.7uF	10%		10V	CN351	1-691-346-11	CONNECTOR, FFC/FPC 8P				
C751	1-107-820-11	CERAMIC CHIP	0.1uF			16V	CN400	1-766-336-21	CONNECTOR, FFC/FPC 6P				
C752	1-107-820-11	CERAMIC CHIP	0.1uF			16V	CN500	1-766-687-21	CONNECTOR, FFC/FPC 26P				
C753	1-135-259-11	TANTAL. CHIP	10uF	20%		6.3V	CN900	1-779-518-41	CONNECTOR, BOARD TO BOARD 100P				
C754	1-107-820-11	CERAMIC CHIP	0.1uF			16V	< DIODE >						
C755	1-107-820-11	CERAMIC CHIP	0.1uF			16V	D204	8-713-103-84	DIODE	1T379-01-T8A			
C756	1-164-935-11	CERAMIC CHIP	470PF	10%		16V	D500	8-719-056-23	DIODE	MA2S111-(K8).SO			
C757	1-107-820-11	CERAMIC CHIP	0.1uF			16V	D501	8-719-056-23	DIODE	MA2S111-(K8).SO			
C758	1-107-820-11	CERAMIC CHIP	0.1uF			16V	D721	8-719-066-16	DIODE	RB491D-T146			
C759	1-135-259-11	TANTAL. CHIP	10uF	20%		6.3V	D722	8-719-066-34	DIODE	RB461F-T106			
C760	1-107-820-11	CERAMIC CHIP	0.1uF			16V	D723	8-719-056-48	DIODE	1SS388(TPL3)			
C761	1-107-820-11	CERAMIC CHIP	0.1uF			16V	D724	8-719-056-48	DIODE	1SS388(TPL3)			
C762	1-107-820-11	CERAMIC CHIP	0.1uF			16V	D1200	8-719-071-32	DIODE	HVC350BTRF		(900/900E)	
C763	1-135-259-11	TANTAL. CHIP	10uF	20%		6.3V	D1201	8-719-071-32	DIODE	HVC350BTRF		(900/900E)	
C764	1-107-820-11	CERAMIC CHIP	0.1uF			16V	< FERRITE BEAD >						
C765	1-107-820-11	CERAMIC CHIP	0.1uF			16V	FB200	1-414-445-11	FERRITE	0UH			
C766	1-135-259-11	TANTAL. CHIP	10uF	20%		6.3V	FB201	1-414-444-11	FERRITE	0UH		(890E)	
C767	1-107-820-11	CERAMIC CHIP	0.1uF			16V	FB201	1-469-311-22	FERRITE	0UH		(900/900E)	
C768	1-135-259-11	TANTAL. CHIP	10uF	20%		6.3V	FB202	1-414-445-11	FERRITE	0UH			
C770	1-107-820-11	CERAMIC CHIP	0.1uF			16V	FB203	1-414-445-11	FERRITE	0UH			
C771	1-135-259-11	TANTAL. CHIP	10uF	20%		6.3V	FB204	1-414-445-11	FERRITE	0UH			
C772	1-107-820-11	CERAMIC CHIP	0.1uF			16V	FB300	1-414-445-11	FERRITE	0UH			
C1200	1-164-943-11	CERAMIC CHIP	0.01uF	10%		16V	FB301	1-414-445-11	FERRITE	0UH			
C1201	1-109-982-11	CERAMIC CHIP	1uF	10%		10V	FB501	1-414-445-11	FERRITE	0UH			
C1202	1-135-259-11	TANTAL. CHIP	10uF	20%		6.3V	FB752	1-543-955-11	FERRITE	0UH		(900/900E)	
C1203	1-104-851-11	TANTAL. CHIP	10uF	20%		10V	FB752	1-543-955-22	FERRITE	0UH		(890E)	
C1204	1-135-210-11	TANTALUM CHIP	4.7uF	20%		10V	FB754	1-543-955-11	FERRITE	0UH		(900/900E)	
C1205	1-135-210-11	TANTALUM CHIP	4.7uF	20%		10V	FB754	1-543-955-22	FERRITE	0UH		(890E)	
C1206	1-164-943-11	CERAMIC CHIP	0.01uF	10%		16V	< IC >						
C1207	1-135-259-11	TANTAL. CHIP	10uF	20%		6.3V	IC203	8-752-083-11	IC	CXA2107R-T4			
C1208	1-164-943-11	CERAMIC CHIP	0.01uF	10%		16V	IC204	8-752-393-81	IC	CXD2462R-T4			
C1209	1-109-982-11	CERAMIC CHIP	1uF	10%		10V	IC205	8-759-561-39	IC	ADS933Y/2K			
C1210	1-164-943-11	CERAMIC CHIP	0.01uF	10%		16V	IC206	8-759-561-39	IC	ADS933Y/2K			
C1211	1-164-943-11	CERAMIC CHIP	0.01uF	10%		16V	IC207	8-759-561-39	IC	ADS933Y/2K			
C1212	1-135-259-11	TANTAL. CHIP	10uF	20%		6.3V							
C1213	1-164-943-11	CERAMIC CHIP	0.01uF	10%		16V							
C1214	1-164-943-11	CERAMIC CHIP	0.01uF	10%		16V							
C1215	1-164-937-11	CERAMIC CHIP	0.001uF	10%		16V							

VC-208

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
IC208	8-759-387-31	IC TC75S55F(Te85R)		< TRANSISTOR >			
IC300	8-752-392-06	IC CXD3116R-T6		Q200	8-729-037-74	TRANSISTOR UN9213J-(K8).SO	
IC301	8-759-445-93	IC AK6440AM-E2		Q201	8-729-042-58	TRANSISTOR UN9111J-(K8).SO	
IC302	8-752-896-42	IC CXP912032-078R	(890E)	Q301	8-729-037-72	TRANSISTOR UN9211J-(K8).SO	
IC302	8-752-897-31	IC CXP912032-089R-T6	(900/900E)	Q351	8-729-037-53	TRANSISTOR 2SB1462J-QR(K8).SO	
IC305	8-759-426-25	IC MB88346LPFV-G-BND-ER		Q352	8-729-037-74	TRANSISTOR UN9213J-(K8).SO	
IC351	8-759-359-49	IC NJM3414AV(Te2)		Q353	8-729-037-76	TRANSISTOR UN9215J-(K8).SO	
IC352	8-759-359-49	IC NJM3414AV(Te2)		Q354	8-729-013-31	TRANSISTOR 2SA1588-OY-TE85L	
IC354	8-759-058-45	IC NJM3403AV(Te2)		Q500	8-729-037-53	TRANSISTOR 2SB1462J-QR(K8).SO	
IC355	8-759-050-51	IC SN74HCT04APW-E20		Q501	8-729-037-52	TRANSISTOR 2SD2216J-QR(K8).SO	
IC356	8-759-058-45	IC NJM3403AV(Te2)		Q502	8-729-037-52	TRANSISTOR 2SD2216J-QR(K8).SO	
IC357	8-759-075-66	IC TA75S01F(Te85R)		Q503	8-729-037-52	TRANSISTOR 2SD2216J-QR(K8).SO	
IC400	8-759-489-19	IC uPC6756GR-8JG-E2		Q504	8-729-037-52	TRANSISTOR 2SD2216J-QR(K8).SO	
IC500	8-759-492-31	IC MPC17A134VMEL		Q505	8-729-037-53	TRANSISTOR 2SB1462J-QR(K8).SO	
IC501	8-759-444-87	IC NJM324V(Te2)		Q701	8-729-046-00	TRANSISTOR CPH6301-TL	
IC502	8-759-444-87	IC NJM324V(Te2)		Q702	8-729-037-74	TRANSISTOR UN9213J-(K8).SO	
IC701	8-759-540-05	IC HG71C112TE		Q721	8-729-043-94	TRANSISTOR CPH3106-PM-TL	
IC721	8-759-492-30	IC MB3817PFV-G-BND		Q722	8-729-043-94	TRANSISTOR CPH3106-PM-TL	
IC722	8-759-492-30	IC MB3817PFV-G-BND		Q727	8-729-024-48	TRANSISTOR 2SK1830-TE85L	
IC751	8-759-564-79	IC HD6437042AP07XSZ	(890E)	Q751	8-729-037-74	TRANSISTOR UN9213J-(K8).SO	
IC751	8-759-567-99	IC HD6437042AP10XSZ	(900/900E)	Q752	8-729-037-74	TRANSISTOR UN9213J-(K8).SO	
IC752	8-759-543-83	IC KM416V1204CT-L6T		Q753	8-729-037-74	TRANSISTOR UN9213J-(K8).SO	
IC753	8-759-234-20	IC TC7S08F(Te85R)		Q754	8-729-037-61	TRANSISTOR UN9113J-(K8).SO	
IC754	8-759-327-60	IC TC7W125FU-TE12R		Q1200	8-729-807-86	TRANSISTOR 2SB1295-UL5-TB (900/900E)	
IC755	8-759-196-96	IC TC7SH08FU-TE85R		Q1201	8-729-037-52	TRANSISTOR 2SD2216J-QR(K8).SO	(900/900E)
IC756	8-752-392-26	IC CXD3133R		Q1202	8-729-037-52	TRANSISTOR 2SD2216J-QR(K8).SO	(900/900E)
IC757	8-759-547-24	IC RL5V834/E2H		Q1203	8-729-037-52	TRANSISTOR 2SD2216J-QR(K8).SO	(900/900E)
IC758	8-759-499-07	IC MB81V4260S-70LPFTN-G-ER		Q1204	8-729-037-52	TRANSISTOR 2SD2216J-QR(K8).SO	(900/900E)
IC759	8-759-547-46	IC MSM9831-SGX4880MAZ060		Q1205	8-729-037-52	TRANSISTOR 2SD2216J-QR(K8).SO	(900/900E)
IC760	8-759-445-93	IC AK6440AM-E2		Q1206	8-729-037-53	TRANSISTOR 2SB1462J-QR(K8).SO	(900/900E)
IC1200	8-759-553-76	IC SC371053FTAEB	(900/900E)	Q1207	8-729-037-53	TRANSISTOR 2SB1462J-QR(K8).SO	(900/900E)
< COIL >				Q1208	8-729-037-76	TRANSISTOR UN9215J-(K8).SO (900/900E)	
L200	1-414-754-11	INDUCTOR 10uH		Q1209	8-729-807-86	TRANSISTOR 2SB1295-UL5-TB (900/900E)	
L201	1-414-754-11	INDUCTOR 10uH		< RESISTOR >			
L300	1-414-754-11	INDUCTOR 10uH		R200	1-218-977-11	RES,CHIP 100K 5% 1/16W	
L301	1-414-754-11	INDUCTOR 10uH		R201	1-218-935-11	RES,CHIP 33 5% 1/16W	
L351	1-414-754-11	INDUCTOR 10uH		R202	1-218-985-11	RES,CHIP 470K 5% 1/16W	
L352	1-412-963-11	INDUCTOR 100uH		R203	1-218-934-11	RES,CHIP 27 5% 1/16W	
L400	1-414-754-11	INDUCTOR 10uH		R204	1-218-935-11	RES,CHIP 33 5% 1/16W	
L500	1-414-754-11	INDUCTOR 10uH		R205	1-218-935-11	RES,CHIP 33 5% 1/16W	
L501	1-414-754-11	INDUCTOR 10uH		R207	1-218-990-11	SHORT 0	
L503	1-414-754-11	INDUCTOR 10uH		R208	1-218-990-11	SHORT 0	
L721	1-416-344-11	INDUCTOR 0uH		R209	1-218-990-11	SHORT 0	
L722	1-416-344-11	INDUCTOR 0uH		R210	1-218-990-11	SHORT 0	
L723	1-416-345-11	INDUCTOR 0uH		R211	1-218-990-11	SHORT 0	
L724	1-416-345-11	INDUCTOR 0uH		R212	1-218-990-11	SHORT 0	
L725	1-414-396-21	INDUCTOR 4.7uH		R213	1-218-989-11	RES,CHIP 1M 5% 1/16W	
L726	1-216-296-91	SHORT 0	(900/900E)	R214	1-218-989-11	RES,CHIP 1M 5% 1/16W	
L727	1-414-396-21	INDUCTOR 4.7uH		R215	1-218-989-11	RES,CHIP 1M 5% 1/16W	
L751	1-414-754-11	INDUCTOR 10uH					
L752	1-414-754-11	INDUCTOR 10uH					
L754	1-414-754-11	INDUCTOR 10uH					
L1200	1-414-754-11	INDUCTOR 10uH	(900/900E)				
L1201	1-414-754-11	INDUCTOR 10uH	(900/900E)				
L1202	1-412-942-21	INDUCTOR 1.8uH	(900/900E)				
L1203	1-412-957-11	INDUCTOR 33uH	(900/900E)				
L1204	1-412-957-11	INDUCTOR 33uH	(900/900E)				
L1205	1-414-754-11	INDUCTOR 10uH	(900/900E)				

Ref. No.	Part No.	Description			Remarks	Ref. No.	Part No.	Description			Remarks
R216	1-218-957-11	RES,CHIP	2.2K	5%	1/16W	R373	1-218-977-11	RES,CHIP	100K	5%	1/16W
R217	1-208-712-11	RES,CHIP	16K	0.50%	1/16W	R374	1-208-939-11	RES,CHIP	150K	0.50%	1/16W
R218	1-208-683-11	RES,CHIP	1K	0.50%	1/16W	R375	1-208-939-11	RES,CHIP	150K	0.50%	1/16W
R220	1-208-947-11	RES,CHIP	330K	0.50%	1/16W	R376	1-218-977-11	RES,CHIP	100K	5%	1/16W
R221	1-218-985-11	RES,CHIP	470K	0.50%	1/16W	R377	1-208-715-11	RES,CHIP	22K	0.50%	1/16W
R222	1-208-713-11	RES,CHIP	18K	0.50%	1/16W	R378	1-208-715-11	RES,CHIP	22K	0.50%	1/16W
R223	1-208-713-11	RES,CHIP	18K	0.50%	1/16W	R379	1-208-707-11	RES,CHIP	10K	0.50%	1/16W
R224	1-208-713-11	RES,CHIP	18K	0.50%	1/16W	R380	1-208-707-11	RES,CHIP	10K	0.50%	1/16W
R225	1-208-713-11	RES,CHIP	18K	0.50%	1/16W	R381	1-218-975-11	RES,CHIP	68K	5%	1/16W
R226	1-208-713-11	RES,CHIP	18K	0.50%	1/16W	R382	1-218-975-11	RES,CHIP	68K	5%	1/16W
R227	1-208-713-11	RES,CHIP	18K	0.50%	1/16W	R383	1-218-975-11	RES,CHIP	68K	5%	1/16W
R236	1-218-990-11	SHORT	0			R384	1-218-975-11	RES,CHIP	68K	5%	1/16W
R237	1-218-965-11	RES,CHIP	10K	5%	1/16W	R385	1-218-975-11	RES,CHIP	68K	5%	1/16W
R300	1-218-977-11	RES,CHIP	100K	5%	1/16W	R386	1-218-975-11	RES,CHIP	68K	5%	1/16W
R301	1-218-973-11	RES,CHIP	47K	5%	1/16W	R387	1-218-953-11	RES,CHIP	1K	5%	1/16W
R302	1-218-953-11	RES,CHIP	1K	5%	1/16W	R388	1-218-973-11	RES,CHIP	47K	5%	1/16W
R303	1-218-973-11	RES,CHIP	47K	5%	1/16W	R389	1-218-953-11	RES,CHIP	1K	5%	1/16W
R304	1-218-977-11	RES,CHIP	100K	5%	1/16W	R390	1-218-965-11	RES,CHIP	10K	5%	1/16W
R305	1-218-953-11	RES,CHIP	1K	5%	1/16W	R391	1-218-985-11	RES,CHIP	470K	0.50%	1/16W
R306	1-218-977-11	RES,CHIP	100K	5%	1/16W	R392	1-208-715-11	RES,CHIP	22K	0.50%	1/16W
R307	1-218-977-11	RES,CHIP	100K	5%	1/16W	R393	1-208-931-11	RES,CHIP	68K	0.50%	1/16W
R308	1-218-977-11	RES,CHIP	100K	5%	1/16W	R394	1-208-935-11	RES,CHIP	100K	0.50%	1/16W
R309	1-218-953-11	RES,CHIP	1K	5%	1/16W	R395	1-208-931-11	RES,CHIP	68K	0.50%	1/16W
R311	1-218-989-11	RES,CHIP	1M	5%	1/16W	R396	1-208-935-11	RES,CHIP	100K	0.50%	1/16W
R314	1-218-957-11	RES,CHIP	2.2K	5%	1/16W	R400	1-218-969-11	RES,CHIP	22K	5%	1/16W
R316	1-218-961-11	RES,CHIP	4.7K	5%	1/16W	R401	1-218-969-11	RES,CHIP	22K	5%	1/16W
R317	1-218-961-11	RES,CHIP	4.7K	5%	1/16W	R402	1-218-969-11	RES,CHIP	22K	5%	1/16W
R318	1-218-977-11	RES,CHIP	100K	5%	1/16W	R403	1-218-969-11	RES,CHIP	22K	5%	1/16W
R320	1-218-957-11	RES,CHIP	2.2K	5%	1/16W	R404	1-218-965-11	RES,CHIP	10K	5%	1/16W
R325	1-218-973-11	RES,CHIP	47K	5%	1/16W	R405	1-218-965-11	RES,CHIP	10K	5%	1/16W
R326	1-218-973-11	RES,CHIP	47K	5%	1/16W	R406	1-218-989-11	RES,CHIP	1M	5%	1/16W
R327	1-218-953-11	RES,CHIP	1K	5%	1/16W	R409	1-218-989-11	RES,CHIP	1M	5%	1/16W
R328	1-218-953-11	RES,CHIP	1K	5%	1/16W	R500	1-218-975-11	RES,CHIP	68K	5%	1/16W
R329	1-218-977-11	RES,CHIP	100K	5%	1/16W	R501	1-218-961-11	RES,CHIP	4.7K	5%	1/16W
R330	1-218-977-11	RES,CHIP	100K	5%	1/16W	R502	1-216-295-91	SHORT	0		
R331	1-218-977-11	RES,CHIP	100K	5%	1/16W	R503	1-218-975-11	RES,CHIP	68K	5%	1/16W
R332	1-218-989-11	RES,CHIP	1M	5%	1/16W	R505	1-218-953-11	RES,CHIP	1K	5%	1/16W
R333	1-218-989-11	RES,CHIP	1M	5%	1/16W	R506	1-218-989-11	RES,CHIP	1M	5%	1/16W
R334	1-218-953-11	RES,CHIP	1K	5%	1/16W	R507	1-218-957-11	RES,CHIP	2.2K	5%	1/16W
R336	1-218-990-11	SHORT	0			R508	1-218-965-11	RES,CHIP	10K	5%	1/16W
R337	1-218-990-11	SHORT	0	(890E)		R509	1-218-981-11	RES,CHIP	220K	5%	1/16W
R353	1-208-675-11	RES,CHIP	470	0.50%	1/16W	R510	1-218-985-11	RES,CHIP	470K	5%	1/16W
R354	1-208-927-11	RES,CHIP	47K	0.50%	1/16W	R511	1-218-985-11	RES,CHIP	470K	5%	1/16W
R355	1-208-713-11	RES,CHIP	18K	0.50%	1/16W	R512	1-218-957-11	RES,CHIP	2.2K	5%	1/16W
R357	1-208-719-11	RES,CHIP	33K	0.50%	1/16W	R513	1-218-967-11	RES,CHIP	15K	5%	1/16W
R358	1-218-985-11	RES,CHIP	470K	0.50%	1/16W	R514	1-218-969-11	RES,CHIP	22K	5%	1/16W
R359	1-208-719-11	RES,CHIP	33K	0.50%	1/16W	R515	1-218-985-11	RES,CHIP	470K	5%	1/16W
R360	1-208-927-11	RES,CHIP	47K	0.50%	1/16W	R516	1-218-953-11	RES,CHIP	1K	5%	1/16W
R361	1-208-683-11	RES,CHIP	1K	0.50%	1/16W	R517	1-218-953-11	RES,CHIP	1K	5%	1/16W
R362	1-208-719-11	RES,CHIP	33K	0.50%	1/16W	R518	1-218-947-11	RES,CHIP	330	5%	1/16W
R363	1-208-715-11	RES,CHIP	22K	0.50%	1/16W	R519	1-218-969-11	RES,CHIP	22K	5%	1/16W
R364	1-208-719-11	RES,CHIP	33K	0.50%	1/16W	R520	1-218-953-11	RES,CHIP	1K	5%	1/16W
R365	1-208-927-11	RES,CHIP	47K	0.50%	1/16W	R521	1-218-965-11	RES,CHIP	10K	5%	1/16W
R366	1-208-683-11	RES,CHIP	1K	0.50%	1/16W	R522	1-218-973-11	RES,CHIP	47K	5%	1/16W
R367	1-218-977-11	RES,CHIP	100K	5%	1/16W	R523	1-216-295-91	SHORT	0		
R368	1-218-979-11	RES,CHIP	150K	5%	1/16W	R525	1-218-953-11	RES,CHIP	1K	5%	1/16W
R369	1-218-977-11	RES,CHIP	100K	5%	1/16W	R526	1-218-989-11	RES,CHIP	1M	5%	1/16W
R370	1-218-979-11	RES,CHIP	150K	5%	1/16W	R527	1-218-957-11	RES,CHIP	2.2K	5%	1/16W
R371	1-208-927-11	RES,CHIP	47K	0.50%	1/16W	R528	1-218-965-11	RES,CHIP	10K	5%	1/16W
R372	1-208-927-11	RES,CHIP	47K	0.50%	1/16W	R529	1-218-981-11	RES,CHIP	220K	5%	1/16W

VC-208

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
R530	1-218-985-11	RES,CHIP	470K 5% 1/16W	R775	1-218-977-11	RES,CHIP	100K 5% 1/16W
R531	1-218-985-11	RES,CHIP	470K 5% 1/16W	R776	1-218-977-11	RES,CHIP	100K 5% 1/16W
R532	1-218-957-11	RES,CHIP	2.2K 5% 1/16W	R777	1-218-977-11	RES,CHIP	100K 5% 1/16W
R533	1-218-967-11	RES,CHIP	15K 5% 1/16W	R778	1-218-977-11	RES,CHIP	100K 5% 1/16W
R534	1-218-969-11	RES,CHIP	22K 5% 1/16W	R779	1-218-977-11	RES,CHIP	100K 5% 1/16W
R535	1-218-985-11	RES,CHIP	470K 5% 1/16W	R780	1-218-977-11	RES,CHIP	100K 5% 1/16W
R536	1-218-953-11	RES,CHIP	1K 5% 1/16W	R781	1-218-977-11	RES,CHIP	100K 5% 1/16W
R537	1-218-953-11	RES,CHIP	1K 5% 1/16W	R782	1-218-977-11	RES,CHIP	100K 5% 1/16W
R538	1-218-947-11	RES,CHIP	330 5% 1/16W	R783	1-218-977-11	RES,CHIP	100K 5% 1/16W
R539	1-218-969-11	RES,CHIP	22K 5% 1/16W	R784	1-218-977-11	RES,CHIP	100K 5% 1/16W
R540	1-218-953-11	RES,CHIP	1K 5% 1/16W	R785	1-218-977-11	RES,CHIP	100K 5% 1/16W
R541	1-218-965-11	RES,CHIP	10K 5% 1/16W	R786	1-218-977-11	RES,CHIP	100K 5% 1/16W
R542	1-218-973-11	RES,CHIP	47K 5% 1/16W	R787	1-218-977-11	RES,CHIP	100K 5% 1/16W
R543	1-218-973-11	RES,CHIP	47K 5% 1/16W	R788	1-218-990-11	SHORT 0	
R544	1-218-990-11	SHORT 0		R789	1-218-965-11	RES,CHIP	10K 5% 1/16W
R545	1-218-961-11	RES,CHIP	4.7K 5% 1/16W	R790	1-218-965-11	RES,CHIP	10K 5% 1/16W
R701	1-218-989-11	RES,CHIP	1M 5% 1/16W	R791	1-218-977-11	RES,CHIP	100K 5% 1/16W
R702	1-218-977-11	RES,CHIP	100K 5% 1/16W	R792	1-218-965-11	RES,CHIP	10K 5% 1/16W
R703	1-218-977-11	RES,CHIP	100K 5% 1/16W	R793	1-218-977-11	RES,CHIP	100K 5% 1/16W
R704	1-216-295-91	SHORT 0		R794	1-218-953-11	RES,CHIP	1K 5% 1/16W
R705	1-218-961-11	RES,CHIP	4.7K 5% 1/16W	R795	1-107-820-11	CERAMIC CHIP	0.1MF 16V
R721	1-218-937-11	RES,CHIP	47 5% 1/16W	R797	1-218-977-11	RES,CHIP	100K 5% 1/16W
R722	1-218-943-11	RES,CHIP	150 5% 1/16W	R800	1-218-990-11	SHORT 0	
R723	1-218-965-11	RES,CHIP	10K 5% 1/16W	R801	1-218-990-11	SHORT 0	
R724	1-218-965-11	RES,CHIP	10K 5% 1/16W	R802	1-218-990-11	SHORT 0	
R725	1-218-967-11	RES,CHIP	15K 5% 1/16W	R804	1-218-977-11	RES,CHIP	100K 5% 1/16W
R727	1-218-967-11	RES,CHIP	15K 5% 1/16W	R806	1-218-977-11	RES,CHIP	100K 5% 1/16W
R728	1-208-715-11	RES,CHIP	22K 0.50% 1/16W	R807	1-218-990-11	SHORT 0	
R729	1-208-719-11	RES,CHIP	33K 0.50% 1/16W	R808	1-218-990-11	SHORT 0	
R730	1-208-927-11	RES,CHIP	47K 0.50% 1/16W	R809	1-216-809-11	METAL CHIP	100 5% 1/16W
R731	1-208-697-11	RES,CHIP	3.9K 0.50% 1/16W	R810	1-218-990-11	SHORT 0	
R732	1-208-927-11	RES,CHIP	47K 0.50% 1/16W	R920	1-218-990-11	SHORT 0	
R733	1-208-927-11	RES,CHIP	47K 0.50% 1/16W	R1202	1-218-977-11	RES,CHIP	100K 5% 1/16W
R740	1-218-990-11	SHORT 0		R1203	1-218-977-11	RES,CHIP	100K 5% 1/16W
R741	1-208-927-11	RES,CHIP	47K 0.50% 1/16W	R1204	1-218-973-11	RES,CHIP	47K 5% 1/16W
R742	1-218-977-11	RES,CHIP	100K 5% 1/16W	R1205	1-218-950-11	RES,CHIP	560 5% 1/16W
R743	1-218-989-11	RES,CHIP	1M 5% 1/16W	R1206	1-218-977-11	RES,CHIP	100K 5% 1/16W
R744	1-218-977-11	RES,CHIP	100K 5% 1/16W	R1207	1-218-953-11	RES,CHIP	1K 5% 1/16W
R745	1-218-990-11	SHORT 0		R1208	1-218-959-11	RES,CHIP	3.3K 5% 1/16W
R751	1-218-977-11	RES,CHIP	100K 5% 1/16W	R1209	1-218-979-11	RES,CHIP	150K 5% 1/16W
R754	1-218-977-11	RES,CHIP	100K 5% 1/16W	R1210	1-218-953-11	RES,CHIP	1K 5% 1/16W
R755	1-218-977-11	RES,CHIP	100K 5% 1/16W	R1211	1-218-965-11	RES,CHIP	10K 5% 1/16W
R756	1-218-958-11	RES,CHIP	2.7K 5% 1/16W	R1212	1-218-953-11	RES,CHIP	1K 5% 1/16W
R757	1-218-946-11	RES,CHIP	270 5% 1/16W	R1213	1-218-957-11	RES,CHIP	2.2K 5% 1/16W
R758	1-218-944-11	RES,CHIP	180 5% 1/16W	R1214	1-218-953-11	RES,CHIP	1K 5% 1/16W
R759	1-218-932-11	RES,CHIP	18 5% 1/16W	R1215	1-218-953-11	RES,CHIP	1K 5% 1/16W
R760	1-218-990-11	SHORT 0		R1216	1-218-959-11	RES,CHIP	3.3K 5% 1/16W
R761	1-218-990-11	SHORT 0		R1217	1-218-952-11	RES,CHIP	820 5% 1/16W
R763	1-218-973-11	RES,CHIP	47K 5% 1/16W	R1218	1-218-965-11	RES,CHIP	10K 5% 1/16W
R764	1-218-973-11	RES,CHIP	47K 5% 1/16W	R1219	1-218-965-11	RES,CHIP	10K 5% 1/16W
R765	1-218-977-11	RES,CHIP	100K 5% 1/16W	R1266	1-216-864-11	METAL CHIP	0 5% 1/16W
R766	1-218-977-11	RES,CHIP	100K 5% 1/16W	R1267	1-218-965-11	RES,CHIP	10K 5% 1/16W
R767	1-218-977-11	RES,CHIP	100K 5% 1/16W	R1268	1-218-965-11	RES,CHIP	10K 5% 1/16W
R768	1-218-977-11	RES,CHIP	100K 5% 1/16W	R1269	1-218-941-11	RES,CHIP	100 5% 1/16W
R769	1-218-977-11	RES,CHIP	100K 5% 1/16W	R1270	1-218-989-11	RES,CHIP	1M 5% 1/16W
R770	1-218-977-11	RES,CHIP	100K 5% 1/16W	R1271	1-218-977-11	RES,CHIP	100K 5% 1/16W
R771	1-218-977-11	RES,CHIP	100K 5% 1/16W				
R772	1-218-977-11	RES,CHIP	100K 5% 1/16W				
R773	1-218-977-11	RES,CHIP	100K 5% 1/16W				
R774	1-218-977-11	RES,CHIP	100K 5% 1/16W				

Ref. No.	Part No.	Description	Remarks			
< VIBRATOR >						
X200	1-767-586-21	VIBRATOR, CRYSTAL (27MHz)				
X300	1-767-450-11	VIBRATOR, CERAMIC				
X751	1-781-069-21	VIBRATOR,LITHIUM NIOBATE (6.875MHz)				
X1200	1-781-068-21	VIBRATOR, CRYSTAL (40.5MHz) (900/900E)				
A-7073-682-A		VF-121 BOARD, COMPLETE				

(Ref.No.:10,000Series)						
< CAPACITOR >						
C5001	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	
C5002	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	
C5003	1-135-179-21	TANTAL. CHIP	2.2uF	20%	16V	
C5004	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	
C5005	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	
C5006	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	
C5007	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V	
C5008	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V	
C5009	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V	
C5010	1-135-179-21	TANTAL. CHIP	2.2uF	20%	16V	
C5011	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	
C5012	1-164-505-11	CERAMIC CHIP	2.2uF		16V	
C5013	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V	
C5015	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	
C5016	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V	
C5017	1-164-933-11	CERAMIC CHIP	220PF	10%	16V	
C5018	1-164-933-11	CERAMIC CHIP	220PF	10%	16V	
C5019	1-164-933-11	CERAMIC CHIP	220PF	10%	16V	
C5020	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C5101	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V	
C5102	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	
C5103	1-104-851-11	TANTAL. CHIP	10uF	20%	10V	
C5104	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
C5105	1-104-916-11	TANTAL. CHIP	6.8uF	20%	20V	
C5106	1-164-939-11	CERAMIC CHIP	0.0022uF	10%	16V	
C5108	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V	
C5109	1-107-819-11	CERAMIC CHIP	0.022uF	10%	16V	
C5110	1-107-819-11	CERAMIC CHIP	0.022uF	10%	16V	
C5111	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	
C5112	1-109-982-11	CERAMIC CHIP	1uF	10%	10V	
C5113	1-164-878-11	CERAMIC CHIP	150PF	5%	16V	
C5114	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	
C5115	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V	
C5116	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	
C5117	1-164-940-11	CERAMIC CHIP	0.0033uF	10%	16V	
C5118	1-164-858-11	CERAMIC CHIP	22PF	5%	16V	
C5119	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	
C5120	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	
C5121	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	
C5122	1-164-940-11	CERAMIC CHIP	0.0033uF	10%	16V	
C5123	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
< CONNECTOR >						
CN5001	1-784-420-11	CONNECTOR, FFC/FPC (ZIF) 21P				
CN5101	1-778-596-21	CONNECTOR, BOARD TO BOARD 30P				

Ref. No.	Part No.	Description	Remarks			
< DIODE >						
D5101	8-719-043-70	DIODE MA6S121-(TX)				
D5102	8-713-102-80	DIODE 1T369-01-T8A				
< IC >						
IC5001	8-759-546-65	IC CXA8115AR-T4				
IC5002	8-759-530-19	IC MB40D001PFV-G-BND-ER				
IC5101	8-759-097-75	IC MB3789PFV-G-BND-ER				
IC5102	8-752-392-33	IC CXD2458AR-T4				
< COIL >						
L5001	1-414-754-11	INDUCTOR 10uH				
L5002	1-414-754-11	INDUCTOR 10uH				
L5101	1-412-033-11	INDUCTOR CHIP 220uH				
L5102	1-414-756-11	INDUCTOR 47uH				
L5103	1-412-947-11	INDUCTOR 4.7uH				
< TRANSISTOR >						
Q5101	8-729-013-72	TRANSISTOR RN2105-TE85L				
Q5102	8-729-037-61	TRANSISTOR UN9113J-(K8).SO				
Q5103	8-729-037-74	TRANSISTOR UN9213J-(K8).SO				
< RESISTOR >						
R5001	1-218-990-11	SHORT	0			
R5003	1-218-990-11	SHORT	0			
R5005	1-218-971-11	RES,CHIP	33K	5%	1/16W	
R5008	1-218-969-11	RES,CHIP	22K	5%	1/16W	
R5016	1-218-990-11	SHORT	0			
R5018	1-218-990-11	SHORT	0			
R5020	1-218-975-11	RES,CHIP	68K	5%	1/16W	
R5021	1-218-971-11	RES,CHIP	33K	5%	1/16W	
R5022	1-218-985-11	RES,CHIP	470K	5%	1/16W	
R5023	1-218-972-11	RES,CHIP	39K	5%	1/16W	
R5024	1-218-972-11	RES,CHIP	39K	5%	1/16W	
R5025	1-218-975-11	RES,CHIP	68K	5%	1/16W	
R5026	1-218-971-11	RES,CHIP	33K	5%	1/16W	
R5027	1-218-973-11	RES,CHIP	47K	5%	1/16W	
R5028	1-218-972-11	RES,CHIP	39K	5%	1/16W	
R5029	1-218-990-11	SHORT	0			
R5030	1-218-941-11	RES,CHIP	100	5%	1/16W	
R5031	1-218-941-11	RES,CHIP	100	5%	1/16W	
R5035	1-218-941-11	RES,CHIP	100	5%	1/16W	
R5038	1-218-990-11	SHORT	0			
R5039	1-218-990-11	SHORT	0			
R5040	1-216-861-11	METAL CHIP	2.2M	5%	1/16W	
R5041	1-216-839-11	METAL CHIP	33K	5%	1/16W	
R5043	1-218-990-11	SHORT	0			
R5045	1-218-941-11	RES,CHIP	100	5%	1/16W	
R5046	1-218-941-11	RES,CHIP	100	5%	1/16W	
R5047	1-218-941-11	RES,CHIP	100	5%	1/16W	
R5101	1-216-864-11	METAL CHIP	0	5%	1/16W	
R5102	1-218-901-11	RES,CHIP	180K	0.50%	1/16W	
R5103	1-218-975-11	RES,CHIP	68K	5%	1/16W	
R5104	1-218-974-11	RES,CHIP	56K	5%	1/16W	
R5105	1-218-887-11	RES,CHIP	47K	0.50%	1/16W	
R5106	1-218-975-11	RES,CHIP	68K	5%	1/16W	
R5107	1-218-970-11	RES,CHIP	27K	5%	1/16W	
R5108	1-218-982-11	RES,CHIP	270K	5%	1/16W	

VF-121**VI-151**

Ref. No.	Part No.	Description			Remarks
R5109	1-218-973-11	RES,CHIP	47K	5%	1/16W
R5110	1-218-974-11	RES,CHIP	56K	5%	1/16W
R5111	1-218-965-11	RES,CHIP	10K	5%	1/16W
R5113	1-218-979-11	RES,CHIP	150K	5%	1/16W
R5114	1-218-954-11	RES,CHIP	1.2K	5%	1/16W
R5115	1-218-980-11	RES,CHIP	180K	5%	1/16W
R5116	1-218-969-11	RES,CHIP	22K	5%	1/16W
R5117	1-218-985-11	RES,CHIP	470K	5%	1/16W
R5118	1-218-983-11	RES,CHIP	330K	5%	1/16W
R5119	1-218-971-11	RES,CHIP	33K	5%	1/16W
R5120	1-218-989-11	RES,CHIP	1M	5%	1/16W
R5121	1-218-974-11	RES,CHIP	56K	5%	1/16W
R5123	1-218-965-11	RES,CHIP	10K	5%	1/16W
R5125	1-218-971-11	RES,CHIP	33K	5%	1/16W
R5127	1-218-990-11	SHORT	0		
R5128	1-218-953-11	RES,CHIP	1K	5%	1/16W
R5134	1-218-990-11	SHORT	0		
R5136	1-218-990-11	SHORT	0		

A-7094-030-A VI-151 BOARD, COMPLETE (890E)

A-7094-068-A VI-151 BOARD, COMPLETE (900/900E)

(Ref.No.:10,000Series)

< CAPACITOR >

C1400	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1401	1-109-994-11	CERAMIC CHIP	2.2uF	10%	10V
C1402	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1403	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1404	1-104-851-11	TANTAL. CHIP	10uF	20%	10V
C1405	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1406	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1407	1-104-851-11	TANTAL. CHIP	10uF	20%	10V
C1409	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C1410	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1412	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1413	1-104-851-11	TANTAL. CHIP	10uF	20%	10V
C1414	1-104-851-11	TANTAL. CHIP	10uF	20%	10V
C1415	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V
C1416	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V
C1417	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C1418	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C1419	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1420	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V
C1421	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1422	1-135-149-21	TANTALUM CHIP	2.2uF	20%	10V
C1423	1-128-829-91	TANTAL. CHIP	220uF	20%	6.3V
C1424	1-104-851-11	TANTAL. CHIP	10uF	20%	10V
C1424	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V
C1425	1-164-668-11	CERAMIC CHIP	510PF	5%	50V
C1426	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1427	1-164-864-11	CERAMIC CHIP	39PF	5%	16V
C1428	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V
C1429	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C1430	1-164-862-11	CERAMIC CHIP	33PF	5%	16V
C1431	1-164-844-11	CERAMIC CHIP	4PF	0.25PF	16V
C1432	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V
C1433	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1434	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C1435	1-109-982-11	CERAMIC CHIP	1uF	10%	10V

C1436	1-135-149-21	TANTALUM CHIP	2.2uF	20%	10V
C1437	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1438	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1439	1-128-829-91	TANTAL. CHIP	220uF	20%	6.3V
C1440	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1441	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C1442	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1444	1-104-847-11	TANTAL. CHIP	22uF	20%	4V
C1445	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1446	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1447	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1449	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1450	1-104-851-11	TANTAL. CHIP	10uF	20%	10V
C1451	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1452	1-164-858-11	CERAMIC CHIP	22PF	5%	16V
C1503	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1505	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1506	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1507	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1512	1-104-847-11	TANTAL. CHIP	22uF	20%	4V
C1513	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C1600	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C1601	1-164-937-11	CERAMIC CHIP	0.001uF	10%	16V
C1602	1-164-937-11	CERAMIC CHIP	0.001uF	10%	16V
C1603	1-164-937-11	CERAMIC CHIP	0.001uF	10%	16V
C1604	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1606	1-164-850-11	CERAMIC CHIP	10PF	0.5PF	16V
C1607	1-164-850-11	CERAMIC CHIP	10PF	0.5PF	16V
C1609	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1610	1-164-933-11	CERAMIC CHIP	220PF	10%	16V
C1611	1-164-858-11	CERAMIC CHIP	22PF	5%	16V
C1612	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1613	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1614	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1615	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1617	1-135-149-21	TANTALUM CHIP	2.2uF	20%	10V
C1618	1-164-882-11	CERAMIC CHIP	220PF	5%	16V
C1619	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C1620	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C1621	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C1622	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C1623	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C1804	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1833	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1834	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1837	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1838	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1840	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1844	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1845	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C1846	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1847	1-104-851-11	TANTAL. CHIP	10uF	20%	10V
C1850	1-164-866-11	CERAMIC CHIP	47PF	5%	16V
C1852	1-164-677-11	CERAMIC CHIP	0.033uF	10%	16V
C1854	1-164-866-11	CERAMIC CHIP	47PF	5%	16V
C1856	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1860	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1869	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1875	1-104-851-11	TANTAL. CHIP	10uF	20%	10V
C1878	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V

Ref. No.	Part No.	Description			Remarks	Ref. No.	Part No.	Description			Remarks
C1881	1-164-935-11	CERAMIC CHIP	470PF	10%	16V	C2056	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1884	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2206	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C1885	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C2210	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C1886	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C2211	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C1887	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2212	1-119-749-11	TANTAL. CHIP	33uF	20%	4V
C1888	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2213	1-104-851-11	TANTAL. CHIP	10uF	20%	10V
C1889	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2215	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1890	1-164-935-11	CERAMIC CHIP	470PF	10%	16V	C2216	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1891	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2217	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1901	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2218	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1903	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	C2219	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1904	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2220	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1909	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C2221	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1910	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2222	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1914	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2223	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1915	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	C2224	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C1933	1-135-180-21	TANTALUM CHIP	3.3uF	20%	6.3V	C2225	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C2001	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V	C2226	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C2002	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V	C2227	1-107-819-11	CERAMIC CHIP	0.022uF	10%	16V
C2003	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2232	1-164-858-11	CERAMIC CHIP	22PF	5%	16V
C2004	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2233	1-164-854-11	CERAMIC CHIP	15PF	5%	16V
C2007	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	C2234	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C2008	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	C2237	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C2009	1-110-569-11	TANTAL. CHIP	47uF	20%	6.3V	C2238	1-135-091-00	TANTALUM CHIP	1uF	20%	16V
C2010	1-110-569-11	TANTAL. CHIP	47uF	20%	6.3V	C2239	1-164-942-11	CERAMIC CHIP	0.0068uF	10%	16V
C2012	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V	C2400	1-164-937-11	CERAMIC CHIP	0.001uF	10%	16V
C2014	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	C2402	1-164-850-11	CERAMIC CHIP	10PF	0.5PF	16V
C2015	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2403	1-164-850-11	CERAMIC CHIP	10PF	0.5PF	16V
C2016	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V	C2405	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C2017	1-164-874-11	CERAMIC CHIP	100PF	5%	16V	C2408	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C2018	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	C2409	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C2022	1-107-686-11	TANTAL. CHIP	4.7uF	20%	16V	C2410	1-109-982-11	CERAMIC CHIP	1uF	10%	10V
C2024	1-135-091-00	TANTALUM CHIP	1uF	20%	16V	C2500	1-164-941-11	CERAMIC CHIP	0.0047uF	10%	16V
C2025	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	C2507	1-164-937-11	CERAMIC CHIP	0.001uF	10%	16V
C2027	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2546	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C2028	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V	C2550	1-164-739-11	CERAMIC CHIP	560PF	5%	50V
C2029	1-109-982-11	CERAMIC CHIP	1uF	10%	10V	C2551	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2030	1-164-874-11	CERAMIC CHIP	100PF	5%	16V	C2552	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2031	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V	C2553	1-135-091-00	TANTALUM CHIP	1uF	20%	16V
C2032	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	C2554	1-164-941-11	CERAMIC CHIP	0.0047uF	10%	16V
C2033	1-109-982-11	CERAMIC CHIP	1uF	10%	10V	C2555	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2034	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2556	1-164-937-11	CERAMIC CHIP	0.001uF	10%	16V
C2035	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2557	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2036	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V	C2558	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2037	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	C2559	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2038	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2561	1-107-686-11	TANTAL. CHIP	4.7uF	20%	16V
C2039	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2562	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C2040	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	C2563	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C2041	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	C2564	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V
C2042	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	C2565	1-162-959-11	CERAMIC CHIP	330PF	5%	50V
C2044	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2566	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2045	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	C2567	1-107-686-11	TANTAL. CHIP	4.7uF	20%	16V
C2046	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2569	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2047	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2570	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C2048	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	C2572	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2049	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	C2573	1-107-686-11	TANTAL. CHIP	4.7uF	20%	16V
C2051	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2574	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C2053	1-164-943-11	CERAMIC CHIP	0.01uF	10%	16V	C2575	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2054	1-164-245-11	CERAMIC CHIP	0.015uF	10%	25V	C2576	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2055	1-164-245-11	CERAMIC CHIP	0.015uF	10%	25V	C2577	1-107-686-11	TANTAL. CHIP	4.7uF	20%	16V

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C2579	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	C3251	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C2582	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	C3252	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C2583	1-107-686-11	TANTAL. CHIP	4.7uF 20% 16V	C3253	1-104-851-11	TANTAL. CHIP	10uF 20% 10V
C2585	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	C3254	1-107-819-11	CERAMIC CHIP	0.022uF 10% 16V
C2586	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	C3255	1-107-819-11	CERAMIC CHIP	0.022uF 10% 16V
C2587	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	C3256	1-104-851-11	TANTAL. CHIP	10uF 20% 10V
C2588	1-125-777-11	CERAMIC CHIP	0.1uF 10% 10V	C3257	1-104-851-11	TANTAL. CHIP	10uF 20% 10V
C2589	1-164-943-11	CERAMIC CHIP	0.01uF 10% 16V	C3258	1-104-851-11	TANTAL. CHIP	10uF 20% 10V
C2590	1-164-874-11	CERAMIC CHIP	100PF 5% 16V	C3259	1-135-214-21	TANTAL. CHIP	4.7uF 20% 20V
C2591	1-164-874-11	CERAMIC CHIP	100PF 5% 16V	C3260	1-164-505-11	CERAMIC CHIP	2.2uF 16V
C3200	1-107-819-11	CERAMIC CHIP	0.022uF 10% 16V	C3261	1-109-982-11	CERAMIC CHIP	1uF 10% 10V
C3201	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C3262	1-164-505-11	CERAMIC CHIP	2.2uF 16V
C3202	1-165-176-11	CERAMIC CHIP	0.047uF 10% 16V	C3263	1-107-819-11	CERAMIC CHIP	0.022uF 10% 16V
C3203	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C3264	1-113-985-11	TANTAL. CHIP	10uF 20% 20V
C3204	1-165-176-11	CERAMIC CHIP	0.047uF 10% 16V	C3265	1-164-505-11	CERAMIC CHIP	2.2uF 16V
C3205	1-107-819-11	CERAMIC CHIP	0.022uF 10% 16V	C3266	1-115-467-11	CERAMIC CHIP	0.22uF 10% 10V
C3206	1-104-913-11	TANTAL. CHIP	10uF 20% 16V	C3267	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C3207	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C3269	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V
C3208	1-104-913-11	TANTAL. CHIP	10uF 20% 16V	C3270	1-119-751-11	TANTAL. CHIP	22uF 20% 16V
C3209	1-164-874-11	CERAMIC CHIP	100PF 5% 16V	C3271	1-109-982-11	CERAMIC CHIP	1uF 10% 10V
C3210	1-119-751-11	TANTAL. CHIP	22uF 20% 16V	< CONNECTOR >			
C3211	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	QN1810	1-573-350-11	CONNECTOR, FFC/FPC 10P	
C3212	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V	QN2901	1-779-519-31	CONNECTOR, BOARD TO BOARD 100P	
C3213	1-104-913-11	TANTAL. CHIP	10uF 20% 16V	QN2902	1-784-421-11	CONNECTOR, FFC/FPC (ZIF) 27P	
C3215	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	QN2903	1-784-423-21	CONNECTOR, FFC/FPC (ZIF) 39P	
C3216	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V	QN2904	1-750-303-41	CONNECTOR, BOARD TO BOARD 20P	
C3217	1-162-962-11	CERAMIC CHIP	470PF 10% 50V	QN2905	1-779-334-11	CONNECTOR, FFC/FPC 20P	
C3218	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	QN2906	1-774-602-41	CONNECTOR, BOARD TO BOARD 60P	
C3219	1-162-960-11	CERAMIC CHIP	220PF 10% 50V	QN2907	1-766-348-21	CONNECTOR, FFC/FPC 18P	
C3220	1-164-874-11	CERAMIC CHIP	100PF 5% 16V	QN2911	1-766-647-21	CONNECTOR, FFC/FPC 11P	
C3221	1-164-505-11	CERAMIC CHIP	2.2uF 16V	QN2912	1-784-421-11	CONNECTOR, FFC/FPC (ZIF) 27P	
C3222	1-115-566-11	CERAMIC CHIP	4.7uF 10% 10V	QN2913	1-784-421-11	CONNECTOR, FFC/FPC (ZIF) 27P	
C3223	1-115-566-11	CERAMIC CHIP	4.7uF 10% 10V	QN3200	1-580-057-11	PIN, CONNECTOR 4P	
C3224	1-164-939-11	CERAMIC CHIP	0.0022uF 10% 16V	QN3201	1-691-550-11	PIN, CONNECTOR (1.5MM)(SMD) 3P	
C3225	1-164-940-11	CERAMIC CHIP	0.0033uF 10% 16V	< DIODE >			
C3226	1-164-939-11	CERAMIC CHIP	0.0022uF 10% 16V	D1600	8-719-055-86	DIODE KV1470TL1-3	
C3227	1-164-939-11	CERAMIC CHIP	0.0022uF 10% 16V	D2200	8-719-421-27	DIODE MA728-TX	
C3228	1-164-940-11	CERAMIC CHIP	0.0033uF 10% 16V	D2201	8-719-421-27	DIODE MA728-TX	
C3229	1-164-939-11	CERAMIC CHIP	0.0022uF 10% 16V	D2203	8-719-056-23	DIODE MA2S111-(K8).SO	
C3230	1-164-939-11	CERAMIC CHIP	0.0022uF 10% 16V	D2206	8-719-056-23	DIODE MA2S111-(K8).SO	
C3231	1-115-566-11	CERAMIC CHIP	4.7uF 10% 10V	D2207	8-719-421-27	DIODE MA728-TX	
C3232	1-115-566-11	CERAMIC CHIP	4.7uF 10% 10V	D2208	8-719-421-27	DIODE MA728-TX	
C3233	1-115-566-11	CERAMIC CHIP	4.7uF 10% 10V	D2500	8-719-056-23	DIODE MA2S111-(K8).SO	
C3234	1-115-566-11	CERAMIC CHIP	4.7uF 10% 10V	D3200	8-719-421-27	DIODE MA728-TX	
C3235	1-115-566-11	CERAMIC CHIP	4.7uF 10% 10V	D3201	8-719-420-14	DIODE MA8082-TX	
C3236	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	D3202	8-719-420-14	DIODE MA8082-TX	
C3237	1-104-851-11	TANTAL. CHIP	10uF 20% 10V	D3203	8-719-420-14	DIODE MA8082-TX	
C3238	1-115-566-11	CERAMIC CHIP	4.7uF 10% 10V	D3204	8-719-056-48	DIODE 1SS388(TPL3)	
C3239	1-115-566-11	CERAMIC CHIP	4.7uF 10% 10V	D3205	8-719-066-34	DIODE RB461F-T106	
C3240	1-115-566-11	CERAMIC CHIP	4.7uF 10% 10V	D3206	8-719-066-34	DIODE RB461F-T106	
C3241	1-115-566-11	CERAMIC CHIP	4.7uF 10% 10V	D3207	8-719-066-34	DIODE RB461F-T106	
C3242	1-115-566-11	CERAMIC CHIP	4.7uF 10% 10V	D3208	8-719-056-48	DIODE 1SS388(TPL3)	
C3243	1-115-566-11	CERAMIC CHIP	4.7uF 10% 10V	D3209	8-719-066-34	DIODE RB461F-T106	
C3244	1-109-982-11	CERAMIC CHIP	1uF 10% 10V	D3210	8-719-066-34	DIODE RB461F-T106	
C3245	1-164-505-11	CERAMIC CHIP	2.2uF 16V	D3211	8-719-066-34	DIODE RB461F-T106	
C3246	1-164-505-11	CERAMIC CHIP	2.2uF 16V				
C3247	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V				
C3248	1-164-505-11	CERAMIC CHIP	2.2uF 16V				
C3249	1-165-319-11	CERAMIC CHIP	0.1uF 50V				
C3250	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V				

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
D3212	8-719-066-16	DIODE RB491D-T146		L1811	1-414-754-11	INDUCTOR 10uH	
D3213	8-719-027-77	DIODE MA796-TX		L2004	1-414-754-11	INDUCTOR 10uH	
D3214	8-719-066-34	DIODE RB461F-T106		L2005	1-414-754-11	INDUCTOR 10uH	
D3215	8-719-066-34	DIODE RB461F-T106		L2201	1-414-754-11	INDUCTOR 10uH	
D3216	8-719-056-48	DIODE 1SS388(TPL3)		L2202	1-414-751-11	INDUCTOR 1uH	
D3217	8-719-056-48	DIODE 1SS388(TPL3)		L2400	1-414-754-11	INDUCTOR 10uH	
D3220	8-719-056-48	DIODE 1SS388(TPL3)		L2511	1-414-754-11	INDUCTOR 10uH	
D3221	8-719-056-48	DIODE 1SS388(TPL3)		L2512	1-414-754-11	INDUCTOR 10uH	
D3223	8-719-056-48	DIODE 1SS388(TPL3)		L3204	1-416-345-11	INDUCTOR 0uH	
D3224	8-719-056-48	DIODE 1SS388(TPL3)		L3205	1-416-346-11	INDUCTOR 0uH	
D3226	8-719-056-23	DIODE MA2S111-(K8).SO		L3206	1-416-345-11	INDUCTOR 0uH	
D3227	8-719-056-23	DIODE MA2S111-(K8).SO		L3207	1-416-345-11	INDUCTOR 0uH	
< IC >				L3208	1-416-345-11	INDUCTOR 0uH	
IC1400	8-759-430-57	IC M62367GP-75ED		L3209	1-416-345-11	INDUCTOR 0uH	
IC1402	8-759-534-25	IC AN2222FBQ-EB		L3210	1-414-396-21	INDUCTOR 4.7uH	
IC1403	8-759-498-52	IC LA9511W-TBM		L3211	1-414-396-21	INDUCTOR 4.7uH	
IC1501	8-759-535-44	IC M65511WG-600D		L3212	1-414-396-21	INDUCTOR 4.7uH	
IC1502	8-759-547-25	IC MB90097PFV-G-110-BND-ER		L3213	1-414-396-21	INDUCTOR 4.7uH	
IC1600	8-759-545-03	IC HG73C037BPTL		L3214	1-414-396-21	INDUCTOR 4.7uH	
IC1601	8-752-390-00	IC CXD3129R-T6		L3215	1-414-396-21	INDUCTOR 4.7uH	
IC1602	8-752-392-25	IC CXD3200R-T6		L3216	1-414-396-21	INDUCTOR 4.7uH	
IC1814	8-752-086-52	IC CXA2071R-T4		L3217	1-414-396-21	INDUCTOR 4.7uH	
IC1816	8-752-086-53	IC CXA2072R-T4		L3218	1-414-396-21	INDUCTOR 4.7uH	
IC1900	8-759-534-27	IC F712504BPM-TEB		< LINE FILTER >			
IC2001	8-759-566-17	IC AN2902FHQ-EB		LF3200	1-411-957-11	FILTER, COMMON MODE	
IC2002	8-759-557-16	IC PCM3006T/T2		< IC LINK >			
IC2200	8-759-398-90	IC S-81236PG-P7-T1		△ PS2200	1-576-122-21	LINK, IC (0.4A)	
IC2201	8-759-424-79	IC S-8423YFS-T2		△ PS3200	1-533-760-21	FUSE (SMD) 1.4A	
IC2203	8-759-536-72	IC TL1596CPWR		△ PS3201	1-533-760-21	FUSE (SMD) 1.4A	
IC2204	8-759-566-97	IC S579286GCB-TEB		△ PS3202	1-533-760-21	FUSE (SMD) 1.4A	
IC2401	8-759-566-14	IC MB91191LGA-G-120-BND-ER		△ PS3203	1-533-760-21	FUSE (SMD) 1.4A	
IC2404	8-759-445-94	IC AK6480AM-E2		△ PS3204	1-533-760-21	FUSE (SMD) 1.4A	
IC2503	8-759-431-30	IC CXA8062R-EB		△ PS3205	1-533-760-21	FUSE (SMD) 1.4A	
IC2504	8-759-385-94	IC CXA8053Q-TE-B		△ PS3206	1-533-760-21	FUSE (SMD) 1.4A	
IC2505	8-759-434-46	IC TA8486F(EL)		< TRANSISTOR >			
IC3200	8-759-491-09	IC MB4488PFV-G-BND-ER		Q1400	8-729-037-52	TRANSISTOR 2SD2216J-QR(K8).SO (900/900E)	
< COIL >				Q1402	8-729-037-61	TRANSISTOR UN9113J-(K8).SO (900/900E)	
L1400	1-414-754-11	INDUCTOR 10uH		Q1403	8-729-040-77	TRANSISTOR 2SC5376-B(Te85L) (900/900E)	
L1401	1-412-957-11	INDUCTOR 33uH		Q1404	8-729-037-53	TRANSISTOR 2SB1462J-QR(K8).SO	
L1402	1-412-948-11	INDUCTOR 5.6uH		Q1405	8-729-040-77	TRANSISTOR 2SC5376-B(Te85L) (900/900E)	
L1403	1-412-957-11	INDUCTOR 33uH		Q1406	8-729-040-77	TRANSISTOR 2SC5376-B(Te85L) (900/900E)	
L1404	1-414-754-11	INDUCTOR 10uH		Q1407	8-729-122-63	TRANSISTOR 2SA1226-T1E3E4	
L1405	1-414-755-11	INDUCTOR 22uH (890E/900:US)		Q1500	8-729-037-52	TRANSISTOR 2SD2216J-QR(K8).SO	
L1500	1-414-757-11	INDUCTOR 100uH		Q1501	8-729-037-52	TRANSISTOR 2SD2216J-QR(K8).SO	
L1501	1-414-757-11	INDUCTOR 100uH		Q1502	8-729-037-52	TRANSISTOR 2SD2216J-QR(K8).SO	
L1601	1-412-941-11	INDUCTOR 1.5uH		Q1810	8-729-037-53	TRANSISTOR 2SB1462J-QR(K8).SO	
L1602	1-414-754-11	INDUCTOR 10uH		Q2003	8-729-037-61	TRANSISTOR UN9113J-(K8).SO	
L1603	1-414-754-11	INDUCTOR 10uH		Q2004	8-729-037-71	TRANSISTOR UN9210J-(K8).SO	
L1604	1-414-754-11	INDUCTOR 10uH		Q2005	8-729-037-71	TRANSISTOR UN9210J-(K8).SO	
L1605	1-414-754-11	INDUCTOR 10uH		Q2006	8-729-037-52	TRANSISTOR 2SD2216J-QR(K8).SO	
L1803	1-414-754-11	INDUCTOR 10uH					
L1808	1-414-754-11	INDUCTOR 10uH					

Note :
The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

Note :
Les composants identifiés par une marque △ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
Q2007	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO	Q3234	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO
Q2008	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO	Q3235	8-729-037-53	TRANSISTOR	2SB1462J-QR(K8).SO
Q2009	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO	Q3236	8-729-037-53	TRANSISTOR	2SB1462J-QR(K8).SO
Q2011	8-729-037-63	TRANSISTOR	UN9115J-(K8).SO	Q3237	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO
Q2012	8-729-037-63	TRANSISTOR	UN9115J-(K8).SO	Q3238	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO
Q2013	8-729-037-74	TRANSISTOR	UN9213J-(K8).SO	Q3239	8-729-037-53	TRANSISTOR	2SB1462J-QR(K8).SO
Q2014	8-729-024-39	TRANSISTOR	2SD1511-R/S(TX)	Q3240	8-729-037-53	TRANSISTOR	2SB1462J-QR(K8).SO
Q2200	8-729-037-74	TRANSISTOR	UN9213J-(K8).SO	Q3241	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO
Q2201	8-729-037-74	TRANSISTOR	UN9213J-(K8).SO	Q3242	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO
Q2202	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO	Q3243	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO
Q2203	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO	Q3244	8-729-037-53	TRANSISTOR	2SB1462J-QR(K8).SO
Q2206	8-729-041-43	TRANSISTOR	HN1L02FU(TB5R)	Q3245	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO
Q2211	8-729-042-58	TRANSISTOR	UN9111J-(K8).SO	Q3246	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO
Q2212	8-729-028-27	TRANSISTOR	2SK2009(TB5L)	Q3247	8-729-037-53	TRANSISTOR	2SB1462J-QR(K8).SO
Q2213	8-729-427-70	TRANSISTOR	XP4401-TXE	Q3248	8-729-037-74	TRANSISTOR	UN9213J-(K8).SO
Q2214	8-729-037-61	TRANSISTOR	UN9113J-(K8).SO	Q3249	8-729-037-53	TRANSISTOR	2SB1462J-QR(K8).SO
Q2216	8-729-141-48	TRANSISTOR	2SB624-T1BV4	Q3250	8-729-041-23	TRANSISTOR	NDS356AP
Q2217	8-729-037-72	TRANSISTOR	UN9211J-(K8).SO	Q3251	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO
Q2218	8-729-037-72	TRANSISTOR	UN9211J-(K8).SO	Q3252	8-729-037-74	TRANSISTOR	UN9213J-(K8).SO
Q2219	8-729-037-72	TRANSISTOR	UN9211J-(K8).SO	Q3253	8-729-037-53	TRANSISTOR	2SB1462J-QR(K8).SO
Q2220	8-729-037-74	TRANSISTOR	UN9213J-(K8).SO	Q3254	8-729-037-74	TRANSISTOR	UN9213J-(K8).SO
Q2221	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO	< RESISTOR >			
Q2505	8-729-037-74	TRANSISTOR	UN9213J-(K8).SO	R1400	1-218-981-11	RES,CHIP	220K 5% 1/16W
Q2506	8-729-141-48	TRANSISTOR	2SB624-T1BV4	R1401	1-218-941-11	RES,CHIP	100 5% 1/16W
Q2507	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO	R1403	1-218-961-11	RES,CHIP	4.7K 5% 1/16W
Q2901	8-729-037-72	TRANSISTOR	UN9211J-(K8).SO	R1404	1-218-973-11	RES,CHIP	47K 5% 1/16W
Q3200	8-729-024-48	TRANSISTOR	2SK1830-TEB5L	R1405	1-218-973-11	RES,CHIP	47K 5% 1/16W
△ Q3201	8-729-036-43	TRANSISTOR	HAT1023R-EL	R1406	1-218-969-11	RES,CHIP	22K 5% 1/16W
△ Q3202	8-729-036-43	TRANSISTOR	HAT1023R-EL	R1407	1-218-961-11	RES,CHIP	4.7K 5% 1/16W
Q3203	8-729-804-41	TRANSISTOR	2SB1122-ST-TD	R1408	1-218-961-11	RES,CHIP	4.7K 5% 1/16W
Q3204	8-729-037-74	TRANSISTOR	UN9213J-(K8).SO	R1409	1-218-965-11	RES,CHIP	10K 5% 1/16W
Q3205	8-729-024-48	TRANSISTOR	2SK1830-TEB5L	R1410	1-218-961-11	RES,CHIP	4.7K 5% 1/16W
Q3206	8-729-822-05	TRANSISTOR	2SD1622-ST-TD	R1411	1-218-953-11	RES,CHIP	1K 5% 1/16W
Q3207	8-729-037-53	TRANSISTOR	2SB1462J-QR(K8).SO	R1412	1-218-967-11	RES,CHIP	15K 5% 1/16W
Q3208	8-729-804-41	TRANSISTOR	2SB1122-ST-TD	R1413	1-218-965-11	RES,CHIP	10K 5% 1/16W
Q3209	8-729-043-94	TRANSISTOR	CPH3106-PM-TL	R1414	1-218-969-11	RES,CHIP	22K 5% 1/16W
Q3210	8-729-043-94	TRANSISTOR	CPH3106-PM-TL	R1415	1-218-949-11	RES,CHIP	470 5% 1/16W
Q3211	8-729-043-94	TRANSISTOR	CPH3106-PM-TL	R1416	1-218-989-11	RES,CHIP	1M 5% 1/16W
Q3212	8-729-043-94	TRANSISTOR	CPH3106-PM-TL	R1417	1-218-965-11	RES,CHIP	10K 5% 1/16W
Q3213	8-729-043-94	TRANSISTOR	CPH3106-PM-TL	R1418	1-218-969-11	RES,CHIP	22K 5% 1/16W
Q3214	8-729-043-94	TRANSISTOR	CPH3106-PM-TL	R1419	1-218-953-11	RES,CHIP	1K 5% 1/16W
Q3215	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO	R1420	1-208-715-11	RES,CHIP	22K 0.50% 1/16W
Q3216	8-729-017-61	TRANSISTOR	2SB1581-T1	R1421	1-218-953-11	RES,CHIP	1K 5% 1/16W
Q3217	8-729-037-53	TRANSISTOR	2SB1462J-QR(K8).SO	R1422	1-218-947-11	RES,CHIP	330 5% 1/16W
Q3218	8-729-041-24	TRANSISTOR	NDS355AN	R1423	1-218-953-11	RES,CHIP	1K 5% 1/16W
Q3219	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO	R1424	1-218-971-11	RES,CHIP	33K 5% 1/16W
Q3220	8-729-041-24	TRANSISTOR	NDS355AN	R1425	1-218-935-11	RES,CHIP	33 5% 1/16W
Q3221	8-729-041-24	TRANSISTOR	NDS355AN	R1426	1-218-965-11	RES,CHIP	10K 5% 1/16W
Q3222	8-729-041-24	TRANSISTOR	NDS355AN	R1427	1-218-949-11	RES,CHIP	470 5% 1/16W
Q3223	8-729-041-24	TRANSISTOR	NDS355AN	R1429	1-218-979-11	RES,CHIP	150K 5% 1/16W
Q3224	8-729-041-24	TRANSISTOR	NDS355AN	R1430	1-218-953-11	RES,CHIP	1K 5% 1/16W
Q3225	8-729-037-74	TRANSISTOR	UN9213J-(K8).SO	R1431	1-218-979-11	RES,CHIP	150K 5% 1/16W
Q3226	8-729-042-56	TRANSISTOR	MGSF3455VT1				
Q3227	8-729-037-61	TRANSISTOR	UN9113J-(K8).SO				
Q3228	8-729-037-74	TRANSISTOR	UN9213J-(K8).SO				
Q3229	8-729-037-74	TRANSISTOR	UN9213J-(K8).SO				
Q3230	8-729-041-23	TRANSISTOR	NDS356AP				
Q3231	8-729-041-23	TRANSISTOR	NDS356AP				
Q3232	8-729-037-52	TRANSISTOR	2SD2216J-QR(K8).SO				
Q3233	8-729-037-53	TRANSISTOR	2SB1462J-QR(K8).SO				

Note :

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Note :

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description			Remarks	Ref. No.	Part No.	Description			Remarks
R1432	1-218-965-11	RES,CHIP	10K	5%	1/16W	R1695	1-218-938-11	RES,CHIP	56	0.50%	1/16W
R1433	1-218-953-11	RES,CHIP	1K	5%	1/16W	R1696	1-208-707-11	RES,CHIP	10K	0.50%	1/16W
R1434	1-218-965-11	RES,CHIP	10K	5%	1/16W	R1697	1-208-707-11	RES,CHIP	10K	0.50%	1/16W
R1435	1-218-950-11	RES,CHIP	560	5%	1/16W	R1698	1-218-938-11	RES,CHIP	56	0.50%	1/16W
R1436	1-218-963-11	RES,CHIP	6.8K	5%	1/16W	R1699	1-218-938-11	RES,CHIP	56	0.50%	1/16W
R1437	1-218-949-11	RES,CHIP	470	5%	1/16W	R1826	1-218-979-11	RES,CHIP	150K	5%	1/16W
R1438	1-218-935-11	RES,CHIP	33	5%	1/16W	R1828	1-218-949-11	RES,CHIP	470	5%	1/16W
R1439	1-218-935-11	RES,CHIP	33	5%	1/16W	R1834	1-218-969-11	RES,CHIP	22K	5%	1/16W
R1440	1-218-965-11	RES,CHIP	10K	5%	1/16W	R1836	1-218-965-11	RES,CHIP	10K	5%	1/16W
R1444	1-218-947-11	RES,CHIP	330	5%	1/16W	R1837	1-218-965-11	RES,CHIP	10K	5%	1/16W
R1445	1-218-935-11	RES,CHIP	33	5%	1/16W	R1838	1-218-969-11	RES,CHIP	22K	5%	1/16W
R1446	1-218-935-11	RES,CHIP	33	5%	1/16W	R1843	1-218-831-11	RES,CHIP	220	0.50%	1/16W
R1447	1-218-935-11	RES,CHIP	33	5%	1/16W	R1848	1-218-965-11	RES,CHIP	10K	5%	1/16W
R1452	1-218-955-11	RES,CHIP	1.5K	5%	1/16W	R1852	1-218-961-11	RES,CHIP	4.7K	5%	1/16W
R1453	1-218-939-11	RES,CHIP	68	5%	1/16W	R1855	1-218-831-11	RES,CHIP	220	0.50%	1/16W
R1454	1-218-989-11	RES,CHIP	1M	5%	1/16W	R1857	1-218-831-11	RES,CHIP	220	0.50%	1/16W
R1455	1-218-957-11	RES,CHIP	2.2K	5%	1/16W	R1859	1-218-831-11	RES,CHIP	220	0.50%	1/16W
R1456	1-218-935-11	RES,CHIP	33	5%	1/16W	R1869	1-218-966-11	RES,CHIP	12K	5%	1/16W
R1507	1-218-949-11	RES,CHIP	470	5%	1/16W	R1870	1-218-965-11	RES,CHIP	10K	5%	1/16W
R1508	1-218-959-11	RES,CHIP	3.3K	5%	1/16W	R1871	1-218-939-11	RES,CHIP	68	5%	1/16W
R1509	1-218-961-11	RES,CHIP	4.7K	5%	1/16W	R1872	1-218-990-11	SHORT	0		
R1510	1-218-949-11	RES,CHIP	470	5%	1/16W	R1874	1-218-989-11	RES,CHIP	1M	5%	1/16W
R1511	1-218-959-11	RES,CHIP	3.3K	5%	1/16W	R1875	1-218-965-11	RES,CHIP	10K	5%	1/16W
R1512	1-218-961-11	RES,CHIP	4.7K	5%	1/16W	R1876	1-218-963-11	RES,CHIP	6.8K	5%	1/16W
R1513	1-218-955-11	RES,CHIP	1.5K	5%	1/16W	R1879	1-218-966-11	RES,CHIP	12K	5%	1/16W
R1514	1-218-949-11	RES,CHIP	470	5%	1/16W	R1909	1-218-931-11	RES,CHIP	15	5%	1/16W
R1515	1-218-961-11	RES,CHIP	4.7K	5%	1/16W	R1938	1-218-977-11	RES,CHIP	100K	5%	1/16W
R1516	1-218-951-11	RES,CHIP	680	5%	1/16W	R1939	1-218-990-11	SHORT	0		
R1517	1-218-990-11	SHORT	0			R1940	1-218-990-11	SHORT	0		
R1519	1-218-990-11	SHORT	0			R1941	1-218-990-11	SHORT	0		
R1521	1-218-947-11	RES,CHIP	330	5%	1/16W	R1942	1-218-990-11	SHORT	0		
R1522	1-216-864-11	METAL CHIP	0	5%	1/16W	R1943	1-218-990-11	SHORT	0		
R1618	1-218-961-11	RES,CHIP	4.7K	5%	1/16W	R1945	1-218-990-11	SHORT	0		
R1619	1-218-947-11	RES,CHIP	330	5%	1/16W	R2017	1-218-936-11	RES,CHIP	39	5%	1/16W
R1621	1-218-965-11	RES,CHIP	10K	5%	1/16W	R2018	1-218-935-11	RES,CHIP	33	5%	1/16W
R1622	1-218-965-11	RES,CHIP	10K	5%	1/16W	R2019	1-218-953-11	RES,CHIP	1K	5%	1/16W
R1623	1-218-990-11	SHORT	0			R2021	1-218-965-11	RES,CHIP	10K	5%	1/16W
R1624	1-218-990-11	SHORT	0			R2022	1-218-965-11	RES,CHIP	10K	5%	1/16W
R1625	1-218-990-11	SHORT	0			R2023	1-218-953-11	RES,CHIP	1K	5%	1/16W
R1626	1-218-990-11	SHORT	0			R2028	1-218-973-11	RES,CHIP	47K	5%	1/16W
R1627	1-218-990-11	SHORT	0			R2029	1-218-973-11	RES,CHIP	47K	5%	1/16W
R1628	1-218-990-11	SHORT	0			R2031	1-218-965-11	RES,CHIP	10K	5%	1/16W
R1629	1-218-990-11	SHORT	0			R2032	1-218-965-11	RES,CHIP	10K	5%	1/16W
R1630	1-218-990-11	SHORT	0			R2038	1-218-973-11	RES,CHIP	47K	5%	1/16W
R1632	1-218-849-11	RES,CHIP	1.2K	0.50%	1/16W	R2040	1-218-969-11	RES,CHIP	22K	5%	1/16W
R1633	1-208-703-11	RES,CHIP	6.8K	0.50%	1/16W	R2041	1-218-965-11	RES,CHIP	10K	5%	1/16W
R1635	1-218-849-11	RES,CHIP	1.2K	0.50%	1/16W	R2052	1-218-990-11	SHORT	0		
R1638	1-218-990-11	SHORT	0			R2053	1-218-990-11	SHORT	0		
R1639	1-218-990-11	SHORT	0			R2054	1-218-960-11	RES,CHIP	3.9K	5%	1/16W
R1641	1-218-990-11	SHORT	0			R2055	1-218-971-11	RES,CHIP	33K	5%	1/16W
R1642	1-218-990-11	SHORT	0			R2056	1-218-936-11	RES,CHIP	39	5%	1/16W
R1644	1-218-990-11	SHORT	0			R2057	1-218-935-11	RES,CHIP	33	5%	1/16W
R1647	1-218-990-11	SHORT	0			R2058	1-218-957-11	RES,CHIP	2.2K	5%	1/16W
R1649	1-218-990-11	SHORT	0			R2059	1-218-957-11	RES,CHIP	2.2K	5%	1/16W
R1651	1-218-990-11	SHORT	0			R2060	1-218-957-11	RES,CHIP	2.2K	5%	1/16W
R1652	1-218-990-11	SHORT	0			R2061	1-218-957-11	RES,CHIP	2.2K	5%	1/16W
R1653	1-218-990-11	SHORT	0			R2062	1-218-949-11	RES,CHIP	470	5%	1/16W
R1654	1-218-990-11	SHORT	0			R2063	1-218-949-11	RES,CHIP	470	5%	1/16W
R1689	1-218-937-11	RES,CHIP	47	5%	1/16W	R2064	1-218-953-11	RES,CHIP	1K	5%	1/16W
R1694	1-218-938-11	RES,CHIP	56	0.50%	1/16W	R2065	1-218-951-11	RES,CHIP	680	5%	1/16W

VI-151

Ref. No.	Part No.	Description			Remarks	Ref. No.	Part No.	Description			Remarks
R2066	1-218-965-11	RES,CHIP	10K	5%	1/16W	R2271	1-216-791-11	METAL CHIP	3.3	5%	1/16W
R2201	1-218-953-11	RES,CHIP	1K	5%	1/16W	R2272	1-218-961-11	RES,CHIP	4.7K	5%	1/16W
R2203	1-218-953-11	RES,CHIP	1K	5%	1/16W	R2273	1-218-959-11	RES,CHIP	3.3K	5%	1/16W
R2204	1-218-953-11	RES,CHIP	1K	5%	1/16W	R2274	1-218-959-11	RES,CHIP	3.3K	5%	1/16W
R2205	1-218-977-11	RES,CHIP	100K	5%	1/16W	R2275	1-218-959-11	RES,CHIP	3.3K	5%	1/16W
R2206	1-218-945-11	RES,CHIP	220	5%	1/16W	R2276	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2207	1-218-957-11	RES,CHIP	2.2K	5%	1/16W	R2277	1-218-941-11	RES,CHIP	100	5%	1/16W
R2208	1-218-961-11	RES,CHIP	4.7K	5%	1/16W	R2278	1-218-941-11	RES,CHIP	100	5%	1/16W
R2209	1-218-973-11	RES,CHIP	47K	5%	1/16W	R2279	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2210	1-218-977-11	RES,CHIP	100K	5%	1/16W	R2280	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2213	1-218-953-11	RES,CHIP	1K	5%	1/16W	R2281	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2214	1-218-953-11	RES,CHIP	1K	5%	1/16W	R2282	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2215	1-218-985-11	RES,CHIP	470K	5%	1/16W	R2283	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2221	1-218-985-11	RES,CHIP	470K	5%	1/16W	R2284	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2222	1-218-985-11	RES,CHIP	470K	5%	1/16W	R2285	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2223	1-218-985-11	RES,CHIP	470K	5%	1/16W	R2286	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2224	1-218-985-11	RES,CHIP	470K	5%	1/16W	R2287	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2225	1-218-985-11	RES,CHIP	470K	5%	1/16W	R2288	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2226	1-218-985-11	RES,CHIP	470K	5%	1/16W	R2289	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2227	1-218-977-11	RES,CHIP	100K	5%	1/16W	R2290	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2229	1-218-985-11	RES,CHIP	470K	5%	1/16W	R2291	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2230	1-218-985-11	RES,CHIP	470K	5%	1/16W	R2292	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2231	1-218-973-11	RES,CHIP	47K	5%	1/16W	R2293	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2232	1-218-965-11	RES,CHIP	10K	5%	1/16W	R2294	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2233	1-218-958-11	RES,CHIP	2.7K	5%	1/16W	R2295	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2234	1-218-934-11	RES,CHIP	27	5%	1/16W	R2296	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2235	1-218-989-11	RES,CHIP	1M	5%	1/16W	R2297	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2236	1-218-985-11	RES,CHIP	470K	0.50%	1/16W	R2298	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2237	1-218-985-11	RES,CHIP	470K	0.50%	1/16W	R2299	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2238	1-218-989-11	RES,CHIP	1M	0.50%	1/16W	R2300	1-218-989-11	RES,CHIP	1M	5%	1/16W
R2239	1-218-989-11	RES,CHIP	1M	0.50%	1/16W	R2301	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2240	1-218-977-11	RES,CHIP	100K	5%	1/16W	R2302	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2241	1-218-977-11	RES,CHIP	100K	5%	1/16W	R2303	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2242	1-218-977-11	RES,CHIP	100K	5%	1/16W	R2304	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2245	1-218-953-11	RES,CHIP	1K	5%	1/16W	R2401	1-218-985-11	RES,CHIP	470K	5%	1/16W
R2246	1-218-989-11	RES,CHIP	1M	5%	1/16W	R2405	1-218-977-11	RES,CHIP	100K	5%	1/16W
R2247	1-218-977-11	RES,CHIP	100K	5%	1/16W	R2406	1-218-977-11	RES,CHIP	100K	5%	1/16W
R2248	1-218-989-11	RES,CHIP	1M	5%	1/16W	R2407	1-218-977-11	RES,CHIP	100K	5%	1/16W
R2249	1-218-989-11	RES,CHIP	1M	5%	1/16W	R2408	1-218-977-11	RES,CHIP	100K	5%	1/16W
R2250	1-218-989-11	RES,CHIP	1M	5%	1/16W	R2409	1-218-985-11	RES,CHIP	470K	5%	1/16W
R2251	1-218-989-11	RES,CHIP	1M	5%	1/16W	R2410	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2252	1-218-989-11	RES,CHIP	1M	5%	1/16W	R2411	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2253	1-218-989-11	RES,CHIP	1M	5%	1/16W	R2415	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2254	1-218-989-11	RES,CHIP	1M	5%	1/16W	R2416	1-218-985-11	RES,CHIP	470K	5%	1/16W
R2255	1-218-989-11	RES,CHIP	1M	5%	1/16W	R2417	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2256	1-218-953-11	RES,CHIP	1K	5%	1/16W	R2418	1-218-985-11	RES,CHIP	470K	5%	1/16W
R2257	1-218-973-11	RES,CHIP	47K	5%	1/16W	R2419	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2258	1-218-985-11	RES,CHIP	470K	5%	1/16W	R2420	1-218-985-11	RES,CHIP	470K	5%	1/16W
R2259	1-218-985-11	RES,CHIP	470K	5%	1/16W	R2421	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2260	1-218-985-11	RES,CHIP	470K	5%	1/16W	R2422	1-218-985-11	RES,CHIP	470K	5%	1/16W
R2261	1-218-989-11	RES,CHIP	1M	5%	1/16W	R2423	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2262	1-219-570-11	RES,CHIP	10M	5%	1/16W	R2424	1-218-985-11	RES,CHIP	470K	5%	1/16W
R2263	1-218-962-11	RES,CHIP	5.6K	5%	1/16W	R2425	1-218-990-11	SHORT	0		
R2264	1-218-957-11	RES,CHIP	2.2K	5%	1/16W	R2426	1-218-990-11	SHORT	0		
R2265	1-218-977-11	RES,CHIP	100K	5%	1/16W	R2427	1-218-990-11	SHORT	0		
R2266	1-218-985-11	RES,CHIP	470K	5%	1/16W	R2428	1-218-990-11	SHORT	0		
R2267	1-218-985-11	RES,CHIP	470K	5%	1/16W	R2429	1-208-943-11	RES,CHIP	220K	0.50%	1/16W
R2268	1-218-949-11	RES,CHIP	470	5%	1/16W	R2430	1-208-927-11	RES,CHIP	47K	0.50%	1/16W
R2269	1-218-955-11	RES,CHIP	1.5K	5%	1/16W	R2432	1-218-977-11	RES,CHIP	100K	5%	1/16W
R2270	1-218-985-11	RES,CHIP	470K	5%	1/16W	R2433	1-218-977-11	RES,CHIP	100K	5%	1/16W

Ref. No.	Part No.	Description			Remarks	Ref. No.	Part No.	Description			Remarks
R2434	1-218-977-11	RES,CHIP	100K	5%	1/16W	R2905	1-218-961-11	RES,CHIP	4.7K	5%	1/16W
R2436	1-218-977-11	RES,CHIP	100K	5%	1/16W	R2906	1-218-990-11	SHORT	0		
R2439	1-218-977-11	RES,CHIP	100K	5%	1/16W	R2907	1-218-990-11	SHORT	0		
R2440	1-218-977-11	RES,CHIP	100K	5%	1/16W	R3200	1-218-989-11	RES,CHIP	1M	5%	1/16W
R2441	1-218-985-11	RES,CHIP	470K	5%	1/16W	R3201	1-218-989-11	RES,CHIP	1M	5%	1/16W
R2442	1-218-990-11	SHORT	0			R3202	1-218-849-11	RES,CHIP	3.3K	0.50%	1/16W
R2445	1-218-961-11	RES,CHIP	4.7K	5%	1/16W	R3203	1-216-150-91	RES,CHIP	10	5%	1/8W
R2505	1-218-965-11	RES,CHIP	10K	5%	1/16W	R3204	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2506	1-208-707-11	RES,CHIP	10K	0.50%	1/16W	R3205	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2507	1-218-965-11	RES,CHIP	10K	5%	1/16W	R3206	1-218-961-11	RES,CHIP	4.7K	5%	1/16W
R2508	1-218-965-11	RES,CHIP	10K	5%	1/16W	R3207	1-218-849-11	RES,CHIP	3.3K	0.50%	1/16W
R2510	1-218-959-11	RES,CHIP	3.3K	5%	1/16W	R3208	1-218-973-11	RES,CHIP	47K	5%	1/16W
R2511	1-208-935-11	RES,CHIP	100K	0.50%	1/16W	R3209	1-208-715-11	RES,CHIP	22K	0.50%	1/16W
R2512	1-218-990-11	SHORT	0			R3210	1-218-981-11	RES,CHIP	220K	5%	1/16W
R2517	1-218-989-11	RES,CHIP	1M	5%	1/16W	R3211	1-216-296-91	SHORT	0		
R2530	1-218-971-11	RES,CHIP	33K	5%	1/16W	R3212	1-208-707-11	RES,CHIP	10K	0.50%	1/16W
R2531	1-217-671-11	METAL CHIP	1	5%	1/10W	R3213	1-208-935-11	RES,CHIP	100K	0.50%	1/16W
R2532	1-217-671-11	METAL CHIP	1	5%	1/10W	R3214	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2533	1-217-671-11	METAL CHIP	1	5%	1/10W	R3215	1-216-296-91	SHORT	0		
R2534	1-218-940-11	RES,CHIP	82	5%	1/16W	R3216	1-216-296-91	SHORT	0		
R2546	1-218-979-11	RES,CHIP	150K	5%	1/16W	R3217	1-218-953-11	RES,CHIP	1K	5%	1/16W
R2547	1-218-965-11	RES,CHIP	10K	5%	1/16W	R3218	1-208-715-11	RES,CHIP	22K	0.50%	1/16W
R2549	1-218-961-11	RES,CHIP	4.7K	5%	1/16W	R3219	1-218-849-11	RES,CHIP	1.2K	0.50%	1/16W
R2550	1-218-961-11	RES,CHIP	4.7K	5%	1/16W	R3220	1-208-715-11	RES,CHIP	22K	0.50%	1/16W
R2551	1-208-675-11	RES,CHIP	470	0.50%	1/16W	R3221	1-218-969-11	RES,CHIP	22K	5%	1/16W
R2552	1-218-965-11	RES,CHIP	10K	5%	1/16W	R3222	1-218-965-11	RES,CHIP	10K	5%	1/16W
R2553	1-218-965-11	RES,CHIP	10K	5%	1/16W	R3223	1-208-707-11	RES,CHIP	10K	0.50%	1/16W
R2554	1-218-965-11	RES,CHIP	10K	5%	1/16W	R3224	1-208-931-11	RES,CHIP	68K	0.50%	1/16W
R2556	1-218-978-11	RES,CHIP	120K	5%	1/16W	R3225	1-218-970-11	RES,CHIP	27K	5%	1/16W
R2557	1-218-986-11	RES,CHIP	560K	5%	1/16W	R3226	1-218-973-11	RES,CHIP	47K	5%	1/16W
R2558	1-218-953-11	RES,CHIP	1K	5%	1/16W	R3227	1-218-977-11	RES,CHIP	100K	5%	1/16W
R2559	1-218-969-11	RES,CHIP	22K	5%	1/16W	R3228	1-218-969-11	RES,CHIP	22K	5%	1/16W
R2560	1-218-969-11	RES,CHIP	22K	5%	1/16W	R3230	1-218-965-11	RES,CHIP	10K	5%	1/16W
R2564	1-217-671-11	METAL CHIP	1	5%	1/10W	R3231	1-208-927-11	RES,CHIP	47K	0.50%	1/16W
R2565	1-217-671-11	METAL CHIP	1	5%	1/10W	R3232	1-218-969-11	RES,CHIP	22K	5%	1/16W
R2566	1-218-941-11	RES,CHIP	100	5%	1/16W	R3233	1-208-927-11	RES,CHIP	47K	0.50%	1/16W
R2567	1-218-941-11	RES,CHIP	100	5%	1/16W	R3234	1-218-971-11	RES,CHIP	33K	5%	1/16W
R2568	1-218-941-11	RES,CHIP	100	5%	1/16W	R3235	1-208-715-11	RES,CHIP	22K	0.50%	1/16W
R2569	1-218-957-11	RES,CHIP	2.2K	5%	1/16W	R3236	1-218-965-11	RES,CHIP	10K	5%	1/16W
R2570	1-218-977-11	RES,CHIP	100K	5%	1/16W	R3237	1-208-927-11	RES,CHIP	47K	0.50%	1/16W
R2571	1-218-970-11	RES,CHIP	27K	5%	1/16W	R3238	1-218-974-11	RES,CHIP	56K	0.50%	1/16W
R2572	1-218-965-11	RES,CHIP	10K	5%	1/16W	R3239	1-208-715-11	RES,CHIP	22K	0.50%	1/16W
R2573	1-218-949-11	RES,CHIP	470	5%	1/16W	R3240	1-208-935-11	RES,CHIP	100K	0.50%	1/16W
R2574	1-217-671-11	METAL CHIP	1	5%	1/10W	R3241	1-218-945-11	RES,CHIP	220	5%	1/16W
R2575	1-217-671-11	METAL CHIP	1	5%	1/10W	R3242	1-208-709-11	RES,CHIP	12K	0.50%	1/16W
R2576	1-217-671-11	METAL CHIP	1	5%	1/10W	R3243	1-208-697-11	RES,CHIP	3.9K	0.50%	1/16W
R2577	1-217-671-11	METAL CHIP	1	5%	1/10W	R3244	1-208-697-11	RES,CHIP	3.9K	0.50%	1/16W
R2578	1-218-973-11	RES,CHIP	47K	5%	1/16W	R3245	1-208-691-11	RES,CHIP	2.2K	0.50%	1/16W
R2579	1-218-965-11	RES,CHIP	10K	5%	1/16W	R3246	1-216-296-91	SHORT	0		
R2580	1-218-935-11	RES,CHIP	33	5%	1/16W	R3247	1-218-965-11	RES,CHIP	10K	5%	1/16W
R2581	1-218-935-11	RES,CHIP	33	5%	1/16W	R3248	1-218-945-11	RES,CHIP	220	5%	1/16W
R2582	1-218-961-11	RES,CHIP	4.7K	5%	1/16W	R3249	1-218-945-11	RES,CHIP	220	5%	1/16W
R2583	1-218-965-11	RES,CHIP	10K	5%	1/16W	R3250	1-218-969-11	RES,CHIP	22K	5%	1/16W
R2585	1-218-959-11	RES,CHIP	3.3K	5%	1/16W	R3251	1-218-973-11	RES,CHIP	47K	5%	1/16W
R2586	1-218-944-11	RES,CHIP	180	5%	1/16W	R3252	1-218-941-11	RES,CHIP	100	5%	1/16W
R2587	1-218-969-11	RES,CHIP	22K	5%	1/16W	R3253	1-218-941-11	RES,CHIP	100	5%	1/16W
R2599	1-217-671-11	METAL CHIP	1	5%	1/10W	R3254	1-208-927-11	RES,CHIP	47K	0.50%	1/16W
R2901	1-217-671-11	METAL CHIP	1	5%	1/10W	R3255	1-218-945-11	RES,CHIP	220	5%	1/16W
R2902	1-217-671-11	METAL CHIP	1	5%	1/10W	R3256	1-218-947-11	RES,CHIP	330	5%	1/16W
R2903	1-218-990-11	SHORT	0			R3257	1-218-973-11	RES,CHIP	47K	5%	1/16W

VI-151

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
R3258	1-218-965-11	RES,CHIP	10K 5% 1/16W			MISCELLANEOUS	
R3259	1-208-719-11	RES,CHIP	33K 0.50% 1/16W			*****	
R3260	1-208-715-11	RES,CHIP	22K 0.50% 1/16W				
R3261	1-218-965-11	RES,CHIP	10K 5% 1/16W	53	1-670-982-11	FP-14 FLEXIBLE BOARD	
R3262	1-218-989-11	RES,CHIP	1M 5% 1/16W	61	1-670-976-21	FP-8 FLEXIBLE BOARD	
				62	1-670-980-11	FP-12 FLEXIBLE BOARD	
R3263	1-216-864-11	METAL CHIP	0 5% 1/16W	103	1-670-979-11	FP-11 FLEXIBLE BOARD	
R3264	1-218-981-11	RES,CHIP	220K 5% 1/16W	107	1-670-990-21	FP-23 FLEXIBLE BOARD	
R3265	1-218-973-11	RES,CHIP	47K 5% 1/16W				
R3266	1-218-969-11	RES,CHIP	22K 5% 1/16W	116	1-475-949-21	SWITCH BLOCK, CONTROL (FK4880)	(900/900E)
R3267	1-218-989-11	RES,CHIP	1M 5% 1/16W	116	1-475-949-31	SWITCH BLOCK, CONTROL (FK4880)(890E)	
				119	1-774-867-31	CONNECTOR,EXTERNAL(HOT SHOE)8P	
R3268	1-218-981-11	RES,CHIP	220K 5% 1/16W	152	1-670-981-21	FP-13 FLEXIBLE BOARD	
R3269	1-218-977-11	RES,CHIP	100K 5% 1/16W	157	1-670-977-21	FP-9 FLEXIBLE BOARD	
R3270	1-218-989-11	RES,CHIP	1M 5% 1/16W				
R3271	1-218-977-11	RES,CHIP	100K 5% 1/16W	160	1-505-619-11	SPEAKER (2.0 OM)	
R3272	1-218-973-11	RES,CHIP	47K 5% 1/16W	167	1-670-983-21	FP-16 FLEXIBLE BOARD	
				168	1-958-983-11	HARNESS (CP-81) 12PIN	
R3273	1-218-965-11	RES,CHIP	10K 5% 1/16W	169	1-958-984-11	HARNESS (CP-82) 13PIN	
R3274	1-218-977-11	RES,CHIP	100K 5% 1/16W	203	1-670-983-21	FP-16 FLEXIBLE BOARD	
R3275	1-218-988-11	RES,CHIP	820K 5% 1/16W				
R3276	1-218-977-11	RES,CHIP	100K 5% 1/16W	217	1-958-983-11	HARNESS (CP-81)	
R3277	1-218-969-11	RES,CHIP	22K 5% 1/16W	218	1-958-984-11	HARNESS (CP-82)	
				△ 221	1-517-754-21	TUBE, FLUORESCENT,COLD CATHODE	
R3278	1-208-949-11	RES,CHIP	390K 0.50% 1/16W	222	1-803-274-21	MODULE, CRYSTAL INDICATION	
R3279	1-208-927-11	RES,CHIP	47K 0.50% 1/16W	224	1-670-986-21	FP-19 FLEXIBLE BOARD	
R3280	1-218-978-11	RES,CHIP	120K 0.50% 1/16W				
R3281	1-208-939-11	RES,CHIP	150K 0.50% 1/16W	252	1-694-411-11	TERMINAL BOARD, BATTERY	
R3282	1-208-927-11	RES,CHIP	47K 0.50% 1/16W	261	1-785-247-11	CONNECTOR, DC-IN	
				303	1-670-984-11	FP-17 FLEXIBLE BOARD	
R3283	1-208-935-11	RES,CHIP	100K 0.50% 1/16W	318	1-670-978-11	FP-10 FLEXIBLE BOARD	
R3284	1-208-719-11	RES,CHIP	33K 0.50% 1/16W	320	1-670-987-21	FP-20 FLEXIBLE BOARD	
R3285	1-208-943-11	RES,CHIP	220K 0.50% 1/16W				
R3286	1-208-947-11	RES,CHIP	330K 0.50% 1/16W	352	1-670-987-21	FP-20 FLEXIBLE BOARD	
R3287	1-208-935-11	RES,CHIP	100K 0.50% 1/16W	355	8-753-023-51	LCX027AK-1	
				402	1-418-014-11	MICROPHONE UNIT	
R3288	1-218-977-11	RES,CHIP	100K 5% 1/16W	423	1-670-991-11	FP-37 FLEXIBLE BOARD	
R3289	1-218-977-11	RES,CHIP	100K 5% 1/16W	425	1-670-989-21	FP-22 FLEXIBLE BOARD	
R3290	1-218-969-11	RES,CHIP	22K 5% 1/16W				
R3291	1-218-989-11	RES,CHIP	1M 5% 1/16W	426	1-670-988-21	FP-21 FLEXIBLE BOARD	(INCLUDE S700,S701,S702)
R3292	1-218-977-11	RES,CHIP	100K 5% 1/16W	453	1-758-174-11	LENS, ZOOM (VCL-4312VA)	
				CN901	1-784-723-11	PIN, CONNECTOR 4P	
R3293	1-218-981-11	RES,CHIP	220K 5% 1/16W	D7402	8-719-061-86	DIODE DCR2810 (R)	
R3294	1-208-943-11	RES,CHIP	220K 0.50% 1/16W	D901	8-719-067-13	DIODE GL453K	
R3295	1-218-978-11	RES,CHIP	120K 0.50% 1/16W				
R3296	1-208-941-11	RES,CHIP	180K 0.50% 1/16W	H901	8-719-061-28	DIODE HW-105C-FT-V (S REEL)	
R3297	1-218-990-11	SHORT	0	H902	8-719-061-28	DIODE HW-105C-FT-V (T REEL)	
				M901	A-7048-887-A	DRUM ASSY (DEH-11B-R)	
R3298	1-208-943-11	RES,CHIP	220K 0.50% 1/16W	M902	8-835-606-01	MOTOR, DC SCD15A/C-NP (CAPSTAN)	
R3299	1-208-721-11	RES,CHIP	39K 0.50% 1/16W	M903	X-3948-346-1	MOTOR ASSY, LOADING	
R3300	1-218-965-11	RES,CHIP	10K 5% 1/16W				
R3301	1-218-990-11	SHORT	0	PH700	8-749-014-54	HIC CNA1312K01S0	
R3302	1-218-953-11	RES,CHIP	1K 5% 1/16W	PH701	8-749-014-54	HIC CNA1312K01S0	
				Q901	8-729-907-25	PHOTO TRANSISTOR PT4850F(TAPE END)	
R3303	1-218-953-11	RES,CHIP	1K 5% 1/16W	Q902	8-729-907-25	PHOTO TRANSISTOR PT4850F(TAPE TOP)	
				S700	1-771-487-21	SWITCH, SLIDE	
< TRANSFORMER >				S701	1-762-851-21	SWITCH, TACT	
T3200	1-433-417-21	TRANSFORMER, DC-DC CONVERTER		S702	1-762-851-21	SWITCH, TACT	
T3201	1-429-565-21	TRANSFORMER, CONVERTER		S901	1-771-039-51	SWITCH, PUSH (CASSETTE IN)	
				S902	1-572-719-32	SWITCH, PUSH (1 KEY) (REC PROOF)	
< VIBRATOR >				S903	1-771-325-11	ENCODER, ROTARY (SWITCH) (MODE)	
X1600	1-767-399-11	VIBRATOR, CRYSTAL (24.576MHz)					
X2200	1-767-450-11	VIBRATOR, CERAMIC (20MHz)					
X2201	1-760-458-21	VIBRATOR, CRYSTAL (32.768KHz)					
X2400	1-760-655-41	VIBRATOR, CRYSTAL (20MHz)					

Note :

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Note :

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remarks
		ACCESSORIES *****	
△	1-475-599-11	ADAPTOR, AC (AC-L10)	
	1-475-950-21	REMOTE COMMANDER (RMT-811) (900,900E)	
	1-475-950-31	REMOTE COMMANDER (RMT-812) (890E)	
△	1-569-007-11	ADAPTOR, CONVERSION 2P (900:JE/900E:JE)	
△	1-569-008-21	ADAPTOR, CONVERSION 2P	
	1-573-291-11	CONNECTOR, CONVERSION 21-PIN (890E/900E:AEP,UK)	
△	1-690-827-12	CORD SET, POWER (INCLUDE NOISE FILTER) (890E:AEP/900E:AEP)	
△	1-696-819-11	CORD, POWER (900E:AUS)	
	1-759-671-11	ADAPTOR, FLOPPY DISK	
	1-765-080-11	AV CONNECTING CABLE (1.5M) (EXCEPT AEP,UK)	
* △	1-769-322-11	CORD, POWER 2P (900:JE/900E:JE)	
△	1-769-608-11	CORD, POWER (900:E/900E:E)	
△	1-775-549-21	CORD, POWER (900:US,CND)	
△	1-775-843-21	CORD, POWER (WITH FILTER) (UK)	
	1-777-433-21	AV CONNECTING CABLE (1.5M) (890E/900E:AEP,UK)	
△	1-782-476-11	CORD, POWER (900E:CN)	
△	1-783-374-11	CORD, POWER (900:HK/900E:HK)	
	3-864-632-11	MANUAL, INSTRUCTION (ENGLISH) (900:US,CND)	
	3-864-632-21	MANUAL, INSTRUCTION (FRENCH) (900:CND)	
	3-864-632-31	MANUAL, INSTRUCTION (ENGLISH/RUSSIAN) (890E/900E:AEP,UK)	
	3-864-632-41	MANUAL, INSTRUCTION (GERMAN/ITALIAN) (890E:AEP/900E:AEP)	
	3-864-632-51	MANUAL, INSTRUCTION (FRENCH/DUTCH) (890E:AEP/900E:AEP)	
	3-864-632-61	MANUAL, INSTRUCTION (SPANISH/PORTUGUESE) (890E:AEP/900E:AEP)	
	3-864-632-71	MANUAL, INSTRUCTION (KOREAN) (900:JE)	
	3-865-177-11	MANUAL, INSTRUCTION (ENGLISH/RUSSIAN) (900E:E,HK,AUS,JE,CN)	
	3-865-177-21	MANUAL, INSTRUCTION (FRENCH/GERMAN) (900E:E,HK,JE,CN)	
	3-865-177-31	MANUAL, INSTRUCTION (ARABIC/PERSIAN) (900E:E,CN)	
	3-865-177-41	MANUAL, INSTRUCTION (TRADITIONAL CHINESE) (900E:HK)	
	3-865-177-51	MANUAL, INSTRUCTION (SIMPLIFIED CHINESE) (900E:E,JE,CN)	
	3-865-177-61	MANUAL, INSTRUCTION (ENGLISH) (900:E,HK,JE)	
	3-865-177-71	MANUAL, INSTRUCTION (SPANISH/PORTUGUESE) (900:E,HK,JE)	
	3-865-177-81	MANUAL, INSTRUCTION (TRADITIONAL CHINESE) (900:E,HK)	
	3-865-177-91	MANUAL, INSTRUCTION (KOREAN) (900:E)	
	3-987-015-01	BELT (S), SHOULDER	
	X-3948-940-1	HOOD ASSY, LENS	
	A-7093-731-A	NP-F330 BATTERY PACK (900:US,CND)	
	A-7093-732-A	NP-F330 BATTERY PACK (EXCEPT 900:US,CND)	

Note :

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Note :

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.