

5. REPAIR PARTS LIST


DISASSEMBLY

HARDWARE LIST

5-1. EXPLODED VIEWS

5-1-1. LCD SECTION

ns: not supplied

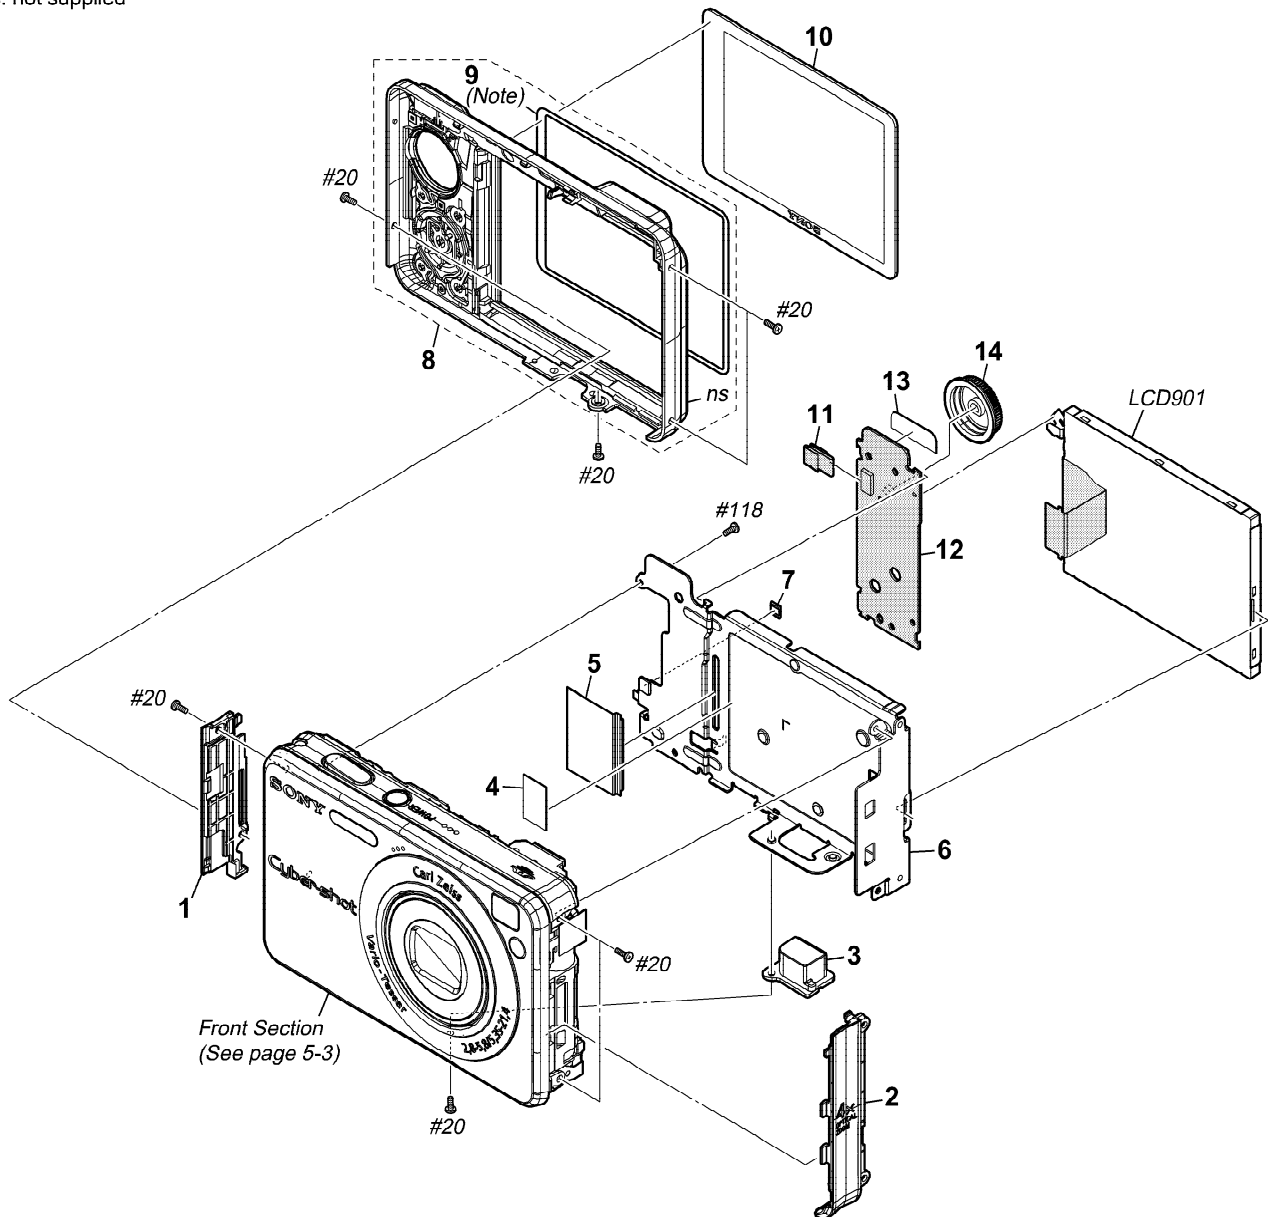

Note: Refer to "HELP 1: LCD Window Adhesive Sheet Kit" when replace the LCD window adhesive sheet kit.

Ref. No.	Part No.	Description
1	3-289-769-01	CABINET (L), SIDE (SILVER/BLACK)
1	3-289-769-21	CABINET (L), SIDE (PINK)
2	3-289-776-01	CABINET (R), SIDE (SILVER/BLACK)
2	3-289-776-21	CABINET (R), SIDE (PINK)
3	3-289-757-01	SCREW, TRIPOD
* 4	3-289-782-01	SHEET, LCD FLEXIBLE FIXED
* 5	3-289-763-01	SHEET, LCD INSULATING
* 6	3-289-759-01	FRAME, LCD
* 7	3-093-800-01	GASKET (230)
8	X-2188-887-1	CABINET (REAR (130SL)) ASSY (SILVER)
8	X-2188-888-1	CABINET (REAR (130BK)) ASSY (BLACK)


Ref. No.	Part No.	Description
8	X-2188-889-1	CABINET (REAR (130PK)) ASSY (PINK)
9	3-289-745-01	SHEET KIT, LCD WINDOW ADHESIVE (Note)
10	3-289-766-01	WINDOW, LCD
11	1-875-540-11	SW-533 FLEXIBLE BOARD
12	A-1494-316-A	SW-520 BOARD, COMPLETE
* 13	3-289-767-01	SHEET, ZOOM BLIND
14	3-289-762-01	DIAL, MODE
LCD901	8-753-296-94	ACX358AKR-3
#20	2-635-591-31	SCREW (M1.4), NEW TRUSTAR P2 (Silver)
#118	2-655-580-01	SCREW 0+P2 M1.4 NEWTRU-STAR (Black)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-2. FRONT SECTION

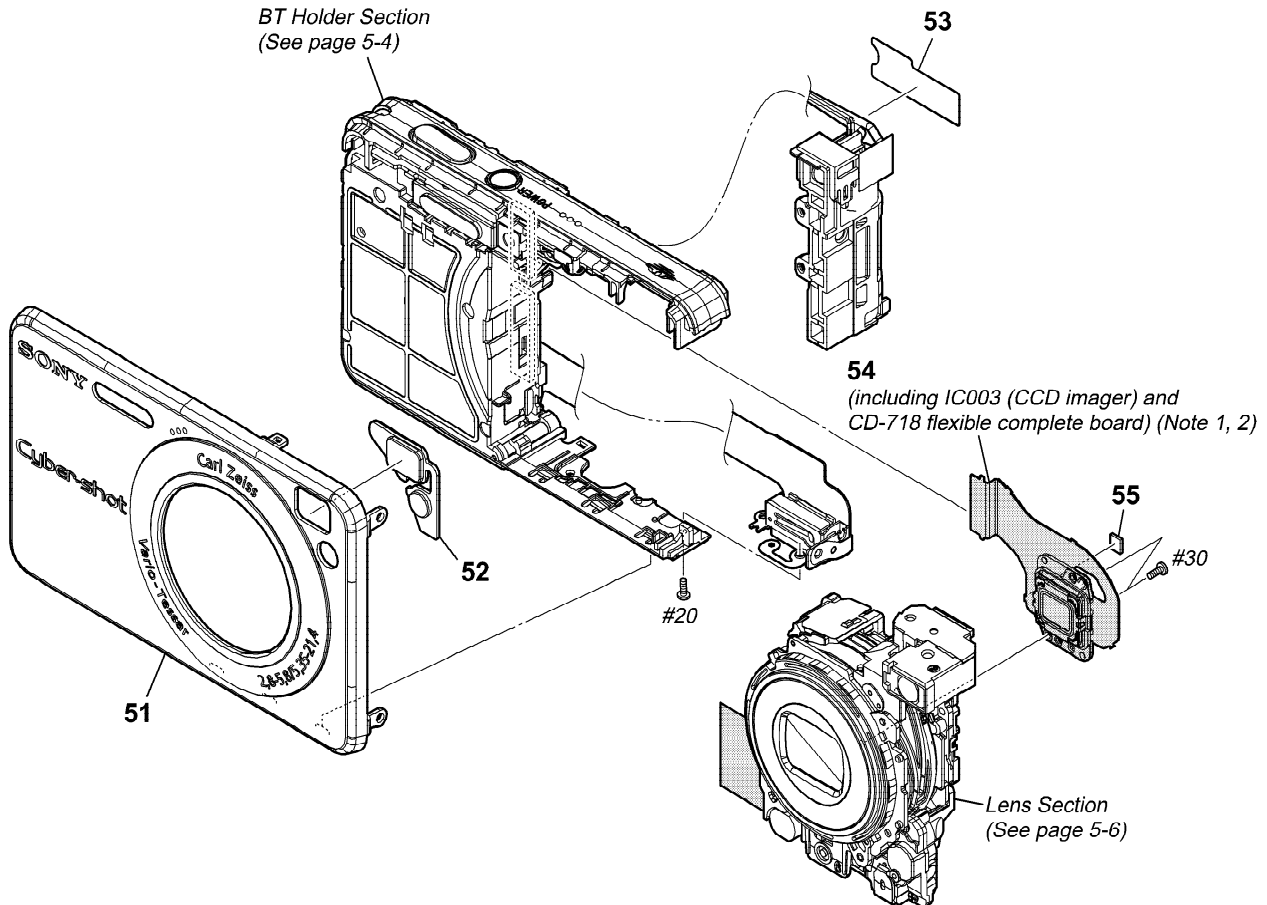

Note 1: Be sure to read "Precautions for Replacement of Imager" on page 4-2.

Note 2: There are two types of modules used in the CCD BLOCK ASSY.
They are interchangeable and only one type is available for repair part.

Ref. No.	Part No.	Description
51	X-2188-880-1	CABINET (FRONT (8.1SL)) ASSY (SILVER)
51	X-2188-881-1	CABINET (FRONT (8.1BK)) ASSY (BLACK)
51	X-2188-882-1	CABINET (FRONT (8.1PK)) ASSY (PINK)
52	3-289-768-01	WINDOW, OVf
* 53	3-289-781-01	TAPE (AF)
54	A-1543-223-A	SERVICE, CCD BLOCK ASSY (including IC003 (CCD imager) and CD-718 flexible complete board) (Note 1, 2)

Ref. No.	Part No.	Description
* 55	3-289-764-01	GASKET (280)
#20	2-635-591-31	SCREW (M1.4), NEW TRUSTAR P2 (Silver)
#30	3-086-156-11	SCREW B1.2 (White)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-3. BT HOLDER SECTION

ns: not supplied

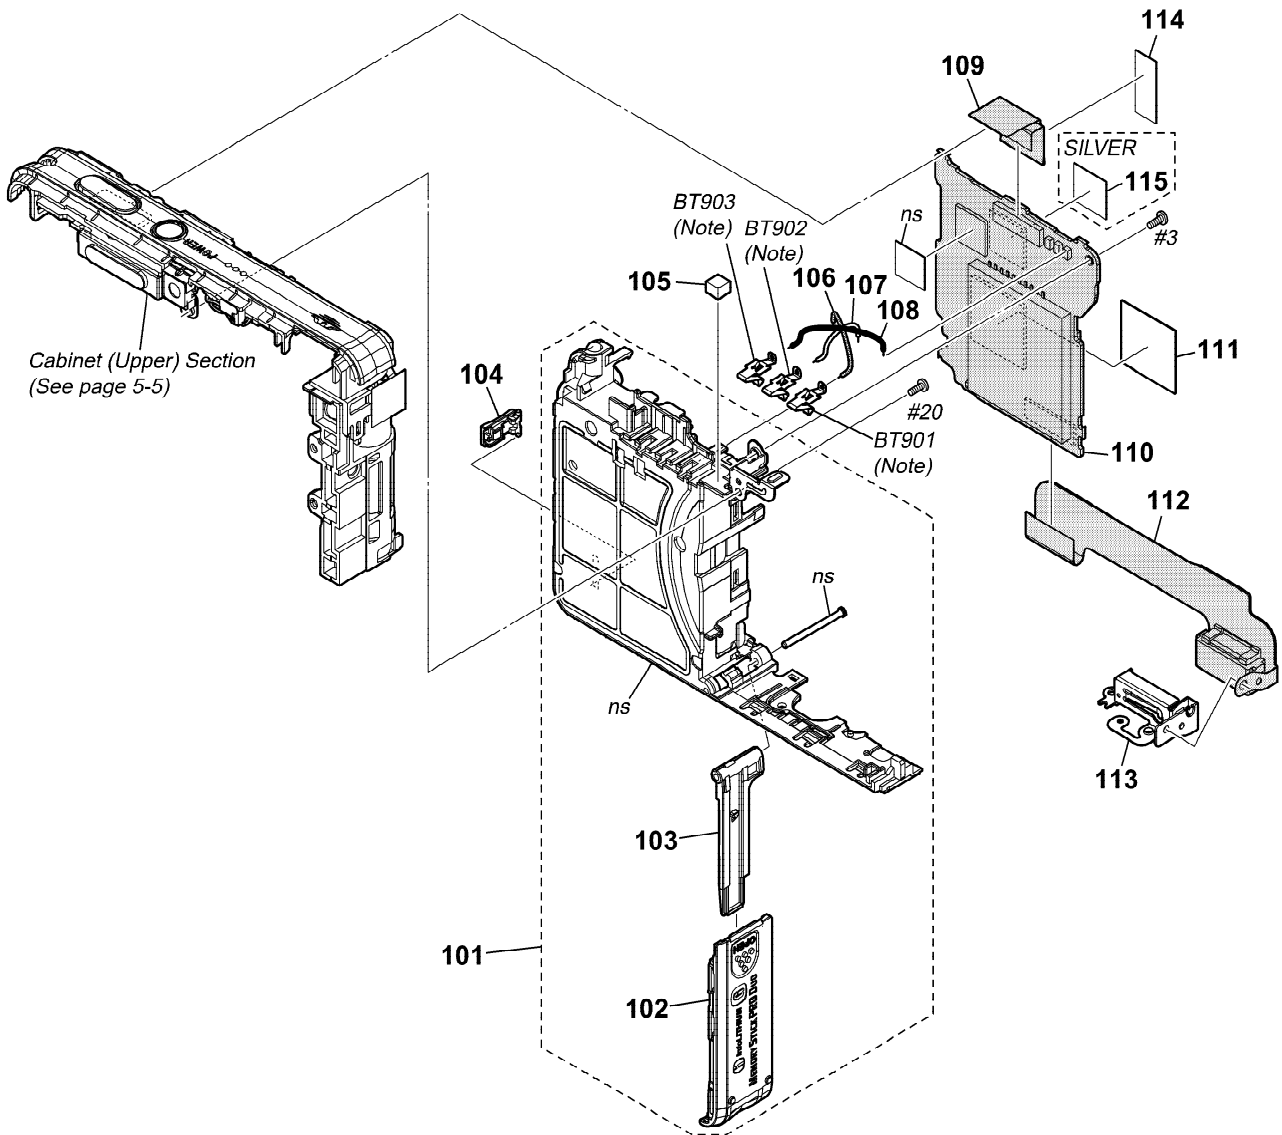

Note: Refer to "HELP 7: Installation method of battery terminal board" when changing the battery terminal board.

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
101	X-2188-901-1	HOLDER (SL) ASSY, BT (SILVER)
101	X-2188-902-1	HOLDER (BK) ASSY, BT (BLACK)
101	X-2188-904-1	HOLDER (PK) ASSY, BT (PINK)
* 102	3-288-271-01	LID, BT (SILVER)
* 102	3-288-271-11	LID, BT (BLACK)
* 102	3-288-271-31	LID, BT (PINK)
* 103	3-288-272-01	PLATE, BT HINGE
* 104	3-289-756-01	LID, DC (SILVER/BLACK)
* 104	3-289-756-21	LID, DC (PINK)
* 105	3-292-292-01	CUSHION, ST LIGHT INTERCEPTION
106	1-965-766-11	HARNESS (HN-067) (Red)
107	1-965-767-11	HARNESS (HN-068) (White)
108	1-965-768-11	HARNESS (HN-069) (Black)


<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
109	1-874-856-11	ST-188 FLEXIBLE BOARD
110	A-1512-916-A	SY-190 BOARD, COMPLETE (SERVICE)
* 111	3-289-783-01	SHEET (SY), RADIATION
112	A-1494-320-A	MC-189 FLEXIBLE BOARD, COMPLETE
* 113	3-289-758-01	SHEET METAL, MULTI FIXED
* 114	3-298-230-01	TAPE (N2)
* 115	3-300-951-01	SHEET (60280SL), ELECTROSTATIC (SILVER)
BT901	1-780-456-21	TERMINAL BOARD, BATTERY (Note)
BT902	1-780-456-21	TERMINAL BOARD, BATTERY (Note)
BT903	1-780-456-21	TERMINAL BOARD, BATTERY (Note)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#20	2-635-591-31	SCREW (M1.4), NEW TRUSTAR P2 (Silver)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-4. CABINET (UPPER) SECTION

ns: not supplied

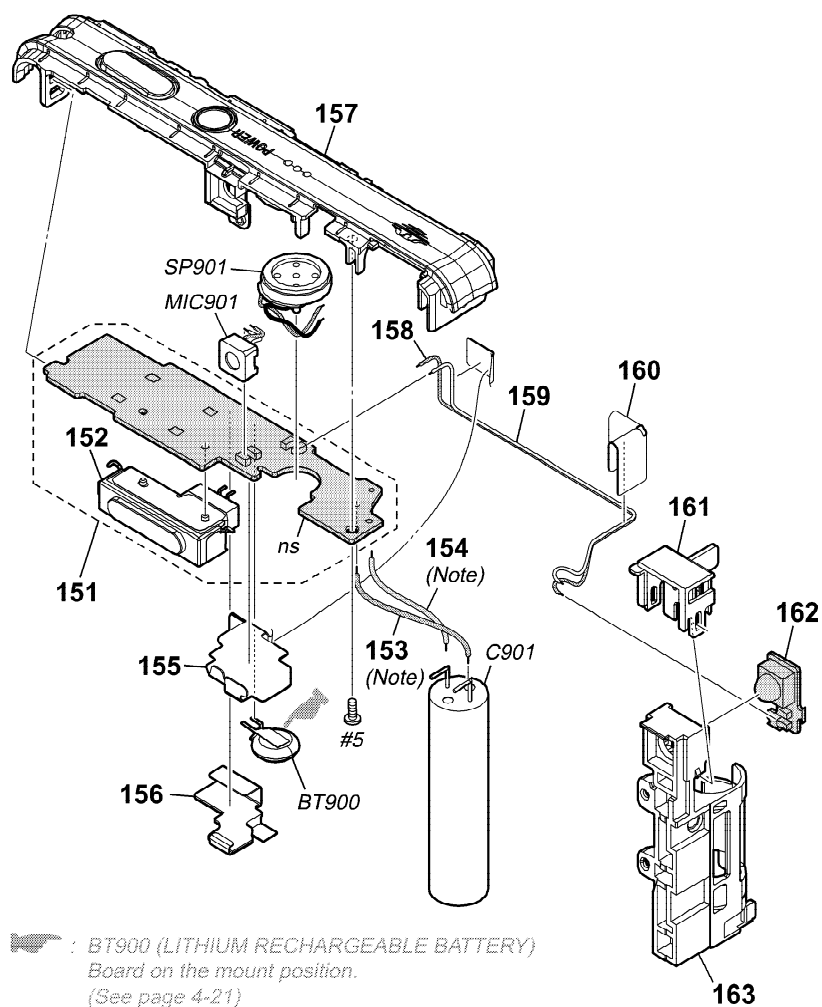

Note: Refer to "HELP 6: Sheets and Harness of ST-180 Board" when replace harness (HN-059/060).

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description
151	A-1494-315-A	ST-180 BOARD, COMPLETE
△*152	1-480-556-11	FLASH UNIT
153	1-965-681-11	HARNESS (HN-060) (Blue) (Note)
154	1-965-680-11	HARNESS (HN-059) (Pink) (Note)
* 155	3-289-779-01	SHEET, LITHIUM INSULATING
* 156	3-289-778-01	SHEET, ST INSULATING
157	X-2188-898-1	CABINET (UPPER (SL/BK)) ASSY (SILVER/BLACK)
157	X-2188-900-1	CABINET (UPPER (PK)) ASSY (PINK)
158	1-965-683-11	HARNESS (HN-062) (Gray)
159	1-965-682-11	HARNESS (HN-061) (Yellow)


Ref. No.	Part No.	Description
* 160	3-289-765-01	SHEET, CAPACITOR PROTECTION
* 161	3-289-761-01	RETAINER, AF
162	A-1494-317-A	AF-112 BOARD, COMPLETE
* 163	3-289-760-01	HOLDER, CAPACITOR
△BT900	1-756-710-12	LITHIUM RECHARGEABLE BATTERY
△*C901	1-114-606-11	ELECT 62uF 315V
MIC901	1-542-721-21	MICROPHONE BLOCK
SP901	1-826-403-61	LOUDSPEAKER (1.0CM)
#5	3-080-204-01	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-5. LENS SECTION

ns: not supplied

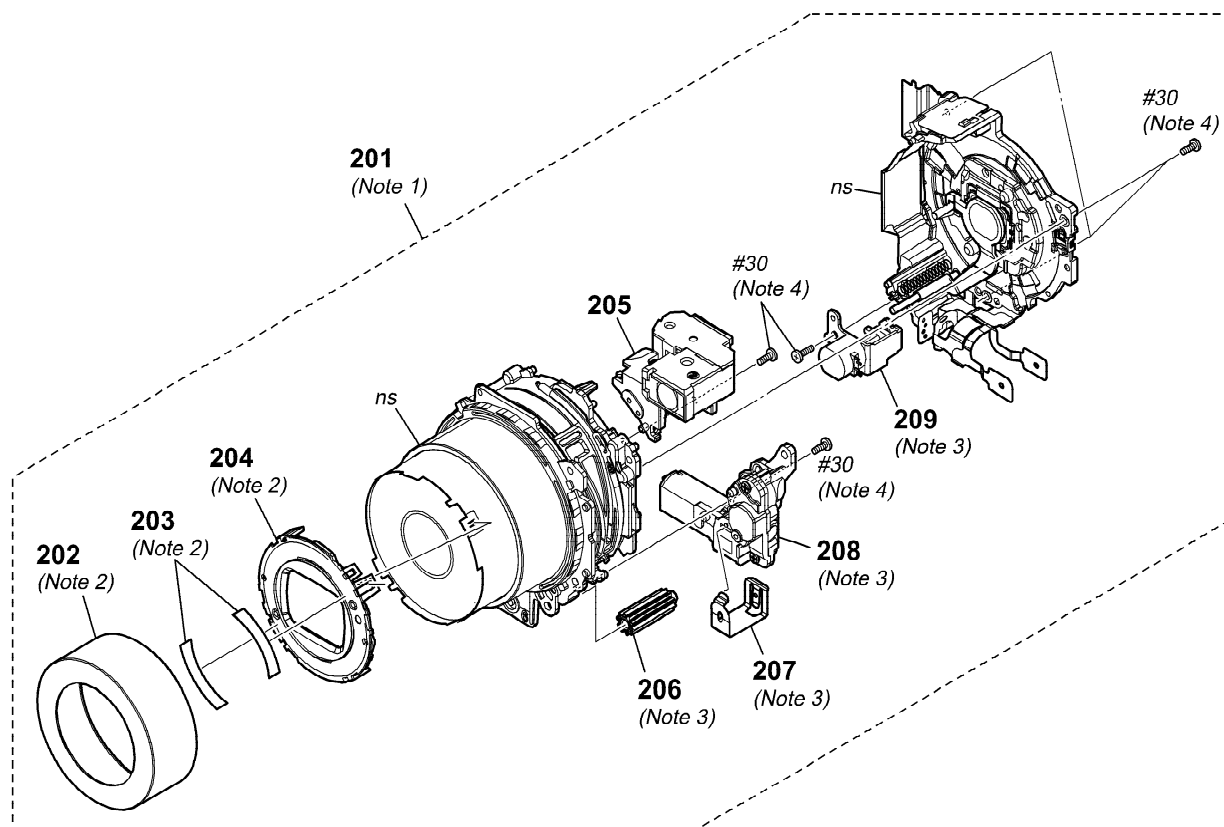

Note 1: Refer to "2-3. Precautions when Holding the Lens Block" on page 2-6 when detach or replace the lens block.

Note 2: Refer to "2-4. Barrier Assy Replacing Method" on page 2-7 when replace the barrier assy.

Note 3: Refer to "2-5. Lens Motor Replacing Method" on page 2-8 when replace the zoom gear block or the optical stepping motor.

Note 4: Tightening torque = $0.049 \pm 0.01 \text{ N}\cdot\text{m}$ ($0.5 \pm 0.1 \text{ kgf}\cdot\text{cm}$)

Ref. No.	Part No.	Description
201	A-1512-913-A	LSV-1250A (SERVICE) (Note 1)
202	3-278-941-01	RING A (Y), ORNAMENTAL (Note 2)
203	2-691-890-11	TAPE, BARRIER (Note 2)
204	A-1437-489-A	BARRIER ASSY (SDPW) (Note 2)
205	1-788-635-11	FINDER, OPTICAL (1250)

Ref. No.	Part No.	Description
206	X-2187-865-1	GEAR (S), NARUTO (Note 3)
207	3-268-545-01	PLATE SPRING, FG (Note 3)
208	1-480-381-11	GEAR BLOCK, ZOOM (1250) (Note 3)
209	1-787-672-11	STEPPING MOTOR, OPTICAL (F1250) (Note 3)
#30	3-086-156-11	SCREW B1.2 (White) (Note 4)

5-2. ELECTRICAL PARTS LIST

Ref. No.	Part No.	Description
	A-1494-317-A	AF-112 BOARD, COMPLETE *****
		< DIODE >
* D201	6-501-861-01	DIODE CL-360S-TD4-X-TL (SELF-TIMER/SMILE SHUTTER/AF ILLUMINATOR)
	A-1543-223-A	SERVICE, CCD BLOCK ASSY (Note 1, 2) (Not supplied) CD-718 FLEXIBLE BOARD, COMPLETE ***** (IC003 (CCD imager) and CD-718 flexible complete board are not supplied, but there are included in CCD block assy.)
		< CAPACITOR >
* C003	1-114-582-11	CERAMIC CHIP 0.1uF 10% 16V
	C005	1-125-777-11 CERAMIC CHIP 0.1uF 10% 10V
* C009	1-114-582-11	CERAMIC CHIP 0.1uF 10% 16V
* C010	1-114-582-11	CERAMIC CHIP 0.1uF 10% 16V
		< IC >
IC003	(Not supplied)	ICX636EQP-H (Note 1) (IC003 is supplied including in the CCD block assy.)
	A-1494-320-A	MC-189 FLEXIBLE BOARD, COMPLETE ***** (CN001 (multi connector) is not supplied, but this is included in MC-189 flexible complete board.)
		< CONNECTOR >
CN001	(Not supplied)	CONNECTOR, MULTIPLE (SOCKET) (MULTI CONNECTOR)
		< LINE FILTER >
LF001	1-457-223-11	COMMON MODE CHOKE COIL
		< RESISTOR >
R004	1-218-953-11	RES-CHIP 1K 5% 1/16W
	A-1494-315-A	ST-180 BOARD, COMPLETE ***** (BT900 (lithium battery) is not included in ST-180 complete board.)
△*	1-480-556-11	FLASH UNIT
		< BATTERY >
△ BT900	1-756-710-12	LITHIUM RECHARGEABLE BATTERY
		< CAPACITOR >
	C001	1-112-717-91 CERAMIC CHIP 1uF 10% 6.3V
	C002	1-100-611-91 CERAMIC CHIP 22uF 20% 6.3V
△ C005	1-100-758-11	CERAMIC CHIP 0.047uF 10% 250V
	C006	1-164-933-11 CERAMIC CHIP 220PF 10% 50V
* C008	1-112-746-11	CERAMIC CHIP 4.7uF 10% 6.3V

Ref. No.	Part No.	Description
		< CONNECTOR >
* CN002	1-817-391-81	CONNECTOR, FPC (ZIF) 31P
		< DIODE >
△ D001	6-501-096-01	DIODE CRF02 (TE85R)
	D003	6-500-619-01 DIODE RB520S-40TE61
	D101	6-500-594-01 DIODE CL-196SYG-CD-T (AE/AF LOCK)
* D102	6-502-311-01	DIODE LNJ426W830S0 (FLASH CHARGE/RECORD)
	D103	6-500-594-01 DIODE CL-196SYG-CD-T (POWER)
		< IC >
IC001	6-707-555-01	IC TPS65552RGTR
		< COIL >
* L001	1-400-820-11	INDUCTOR 2.2uH
		< TRANSISTOR >
△*Q001	6-551-686-01	TRANSISTOR TIG030TS-S-TL-E
		< RESISTOR >
	R001	1-218-989-11 RES-CHIP 1M 5% 1/16W
	R002	1-218-941-81 RES-CHIP 100 5% 1/16W
△ R003	1-216-121-11	RES-CHIP 1M 5% 1/10W
	R005	1-218-863-11 METAL CHIP 4.7K 0.5% 1/10W
		< SWITCH >
S101	1-786-819-22	TACTILE SWITCH (SHUTTER)
S102	1-771-844-21	SWITCH, TACTILE (SMD) (POWER)
		< TRANSFORMER >
△ T001	1-445-108-21	TRANSFORMER, D.C-D.C CONVERTER

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

Note 1: Be sure to read "Precautions for Replacement of Imager" on page 4-2 when changing the imager.

Note 2: There are two types of modules used in the CCD BLOCK ASSY.
They are interchangeability and only one type is available for repair part.

• Refer to page 5-1 for mark △.


Ref. No.	Part No.	Description
	A-1494-316-A	SW-520 BOARD, COMPLETE

		(S010 (Mode dial) is not supplied, but this is included in SW-520 complete board.)
		< CONNECTOR >
* CN001	1-820-634-51	CONNECTOR, FPC (LIF (NON-ZIF))
		< COMPOSITION CIRCUIT BLOCK >
RB001	1-234-376-11	RES, NETWORK 2.2K (1005X4)
RB002	1-234-376-11	RES, NETWORK 2.2K (1005X4)
RB003	1-234-376-11	RES, NETWORK 2.2K (1005X4)
RB004	1-234-376-11	RES, NETWORK 2.2K (1005X4)
		< SWITCH >
* S001	1-786-914-31	SWITCH, TACTILE (MENU)
* S002	1-786-914-31	SWITCH, TACTILE (HOME)
* S003	1-786-914-31	SWITCH, TACTILE (W (ZOOM))
* S004	1-786-914-31	SWITCH, TACTILE (◀ (MACRO))
* S005	1-786-914-31	SWITCH, TACTILE (▼ (SELF-TIMER))
* S006	1-786-914-31	SWITCH, TACTILE (▲ (DISP))
* S007	1-786-914-31	SWITCH, TACTILE (●)
* S008	1-786-914-31	SWITCH, TACTILE (T (ZOOM))
* S009	1-786-914-31	SWITCH, TACTILE (▶ (FLASH))
S010	(Not supplied)	ROTARY SWITCH (MODE DIAL)
* S011	1-786-914-31	SWITCH, TACTILE (SLIDESHOW)
* S012	1-786-914-31	SWITCH, TACTILE (▶)

Electrical parts list of the SY-190 board is not shown.
Pages 5-9 to 5-12 are not shown.


Checking supplied accessories.

Note: This item is supplied with the unit as an accessory, but is not prepared as a service part.

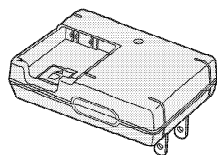

Battery Charger
BC-CSGB/BC-CSGC

△ 1-480-175-21 (US, CND)

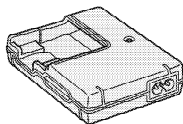

Battery Charger
BC-CSGB/BC-CSGC

△ 1-480-175-31
(EXCEPT US, CND)




Instruction Manual

- 3-286-605-11 (ENGLISH) (CND, AEP, UK, E, HK)
- 3-286-605-21 (FRENCH, ITALIAN) (CND, AEP)
- 3-286-605-31 (SPANISH, PORTUGUESE) (AEP, E, AR)
- 3-286-605-41 (GERMAN, DUTCH) (AEP)
- 3-286-605-51 (TRADITIONAL CHINESE, SIMPLIFIED CHINESE) (E, HK)
- 3-286-605-61 (RUSSIAN, UKRAINIAN) (AEP)
- 3-286-605-71 (ARABIC, PERSIAN) (E)
- 3-286-605-81 (KOREAN) (KR)
- 3-286-605-91 (POLISH, CZECH) (AEP)
- 3-286-606-11 (HUNGARIAN, SLOVAK) (AEP)
- 3-286-606-21 (SWEDISH, FINNISH) (AEP)
- 3-286-606-31 (NORWEGIAN, DANISH) (AEP)
- 3-286-606-41 (THAI, MALAY) (E)
- 3-286-606-51 (TURKISH, GREEK) (AEP)
- 3-286-606-61 (ENGLISH, SPANISH) (US)
- 3-286-606-71 (SIMPLIFIED CHINESE) (CH)



Power Cord

- △ 1-783-952-61 (AR)
- △ 1-824-910-71 (AEP, E)
- △ 1-832-121-31 (CH)
- △ 1-827-269-12 (UK, HK)
- △ 1-833-892-21 (KR)




USB, A/V Cable for
Multi-use Terminal
1-834-813-11




Conversion (2P) Adaptor

△ 1-569-008-12 (E: NTSC)



Rechargeable Battery Pack
NP-BG1

(Note)




Battery Case
(Note)



Wrist Strap

2-050-981-01



CD-ROM

"Cyber-shot application software"
"Cyber-shot Handbook"
"Cyber-shot Step-up Guide"
3-286-601-01



Cyber-shot Handbook (PDF)

The CD-ROM supplied contains all of language version of the Cyber-shot Handbook (PDF) for printing.

- The printed matter is not supplied. If required, please order it with the part number below.

- (Only for destination Japanese model)


日本国内については日本語のみが印刷での部品供給可能です。

- | | |
|--------------------------------------|----------------------------|
| * 3-286-602-01 (JAPANESE) | * 3-286-603-11 (RUSSIAN) |
| * 3-286-602-11 (ENGLISH) | * 3-286-603-21 (ARABIC) |
| * 3-286-602-21 (FRENCH) | * 3-286-603-31 (PERSIAN) |
| * 3-286-602-31 (ITALIAN) | * 3-286-603-41 (KOREAN) |
| * 3-286-602-41 (SPANISH) | * 3-286-603-51 (POLISH) |
| * 3-286-602-51 (PORTUGUESE) | * 3-286-603-61 (CZECH) |
| * 3-286-602-61 (GERMAN) | * 3-286-603-71 (HUNGARIAN) |
| * 3-286-602-71 (DUTCH) | * 3-286-603-81 (SLOVAK) |
| * 3-286-602-81 (TRADITIONAL CHINESE) | * 3-286-603-91 (SWEDISH) |
| * 3-286-602-91 (SIMPLIFIED CHINESE) | * 3-286-604-11 (FINNISH) |
| | * 3-286-604-21 (NORWEGIAN) |
| | * 3-286-604-31 (DANISH) |
| | * 3-286-604-41 (THAI) |
| | * 3-286-604-51 (MALAY) |
| | * 3-286-604-61 (TURKISH) |
| | * 3-286-604-71 (GREEK) |
| | * 3-286-604-81 (UKRAINIAN) |


• Refer to page 5-1 for mark △.

HARDWARE LIST (1/7)


#1: M1.7 X 2.5
(Black)
2-635-562-11

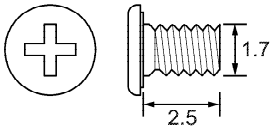


#2: M1.7 X 4.0
(Black)
2-635-562-31

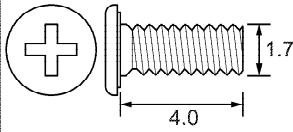


#3: M1.7 X 2.5
(Red)
2-660-401-01

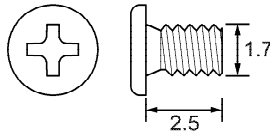


#4: M1.4 X 2.5 (Tapping)
(Dark Silver)
3-348-998-81

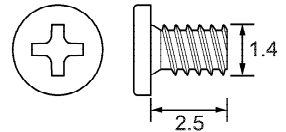


#5: M1.7 X 3.5 (Tapping)
(Black)
3-080-204-01

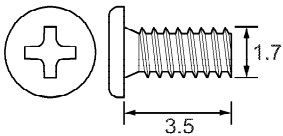


#6: M1.4 X 1.7
(Silver)
2-598-474-01

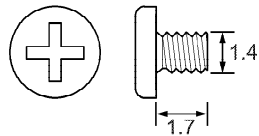


#7: M1.7 X 1.6
(Black)
7-627-552-18

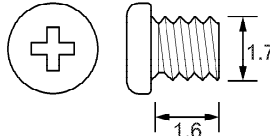


#8: M1.7 X 3.5 (Tapping)
(Silver)
3-078-890-01

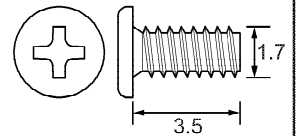


#9: M1.7 X 5.0 (Tapping)
(Silver)
3-078-890-21

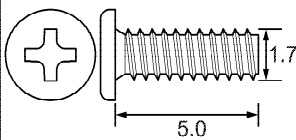


#10: M1.7 X 4.0
(Silver)
2-599-475-31

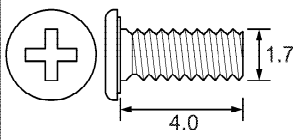


#11: M1.7 X 4.0 (Tapping)
(Silver)
3-078-890-11

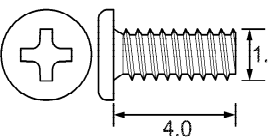


#12: M1.7 X 5.0 (Tapping)
(Black)
3-080-204-21

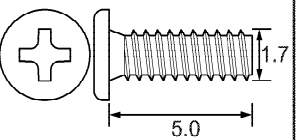


#13: M1.7 X 2.5 (Tapping)
(Silver)
3-085-397-01

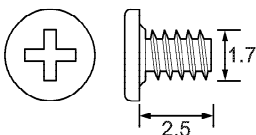


#14: M1.7 X 2.5
(Silver)
2-599-475-11

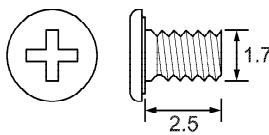


#15: M1.4 X 1.5
(Silver)
3-062-214-01

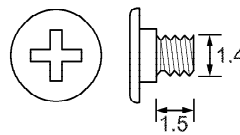


#16: M1.4 X 2.5
(Silver)
2-586-337-01

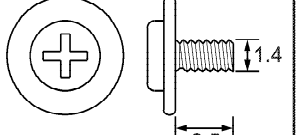


#17: M1.7 X 1.5
(Silver)
2-586-389-01

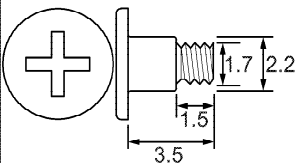


#18: M1.4 X 2.5
(Silver)
2-635-591-21

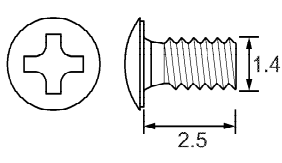

#19: M1.2 X 4.0 (Tapping)
(Red)
3-086-156-21

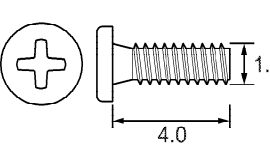


#20: M1.4 X 3.0
(Silver)
2-635-591-31

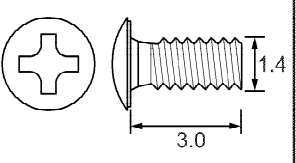


HARDWARE LIST (2/7)


#21: M1.4 X 3.0
(Black)
2-662-396-21

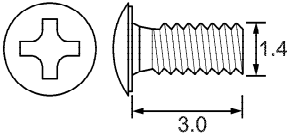


#22: M1.7 X 5.0 (Tapping)
(Silver)
3-083-261-01

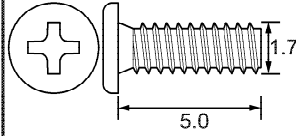


#23: M1.7 X 4.0 (Tapping)
(Black)
3-080-204-11

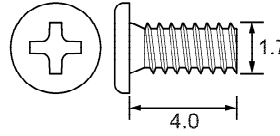


#24: B1.7 X 5.5 (Tapping)
(Black)
4-679-805-11

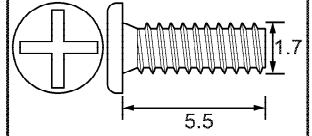


#25: M1.7 X 3.0
(Black)
2-635-562-21

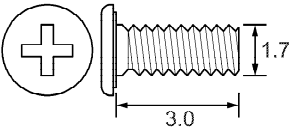


#26: M1.4 X 2.0
(Silver)
2-635-591-11

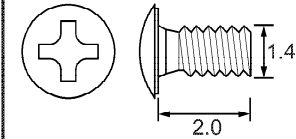


#27: M1.4 X 2.0
(Black)
2-662-396-11

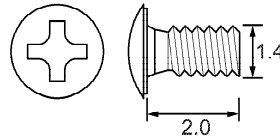


#28: M1.4 X 4.0 (Tapping)
(Silver)
3-348-998-61

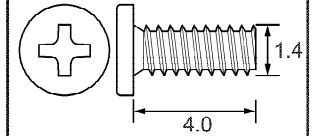


#29: M1.4 X 2.5
(Black)
2-662-396-01

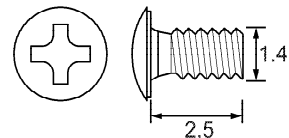


#30: M1.2 X 4.0 (Tapping)
(White)
3-086-156-11

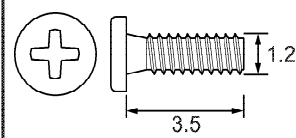


#31: M3.0 X 4.0
(Silver)
2-102-434-01

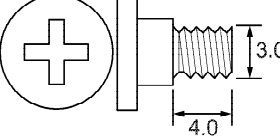


#32: M2.0 X 4.5 (Tapping)
(Silver)
2-102-498-01

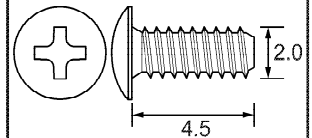


#33: M3.0 X 6.0
(Silver)
3-077-331-21

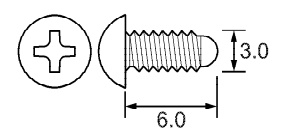


#34: M3.0 X 8.0
(Black)
3-077-331-41

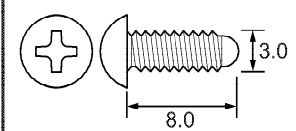


#35: M4.0 X 6.0 (Tapping)
(Silver)
3-975-291-02

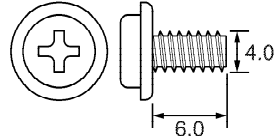


#36: M3.0 X 6.0
(Silver)
4-886-821-11

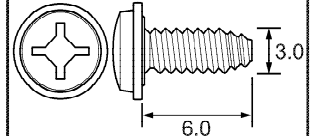


#37: M2.0 X 6.0 (Tapping)
(Black)
3-080-206-31

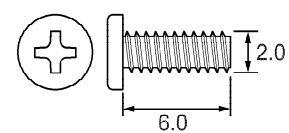


#38: M3.0 X 20.0 (Tapping)
(Silver)
7-685-651-79

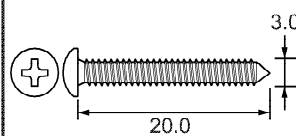

#39: M2.6 X 5.0 (Tapping)
(Black)
7-685-791-09

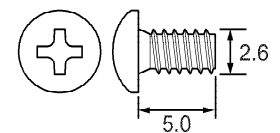


#40: M2.0 X 4.0 (Tapping)
(Silver)
7-685-851-04

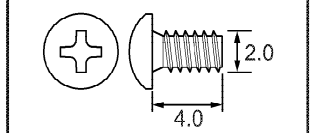


HARDWARE LIST (3/7)


#41: M3.0 X 8.0 (Tapping)
(Silver)
3-065-748-01

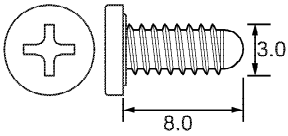


#42: M2.0 X 4.0 (Tapping)
(Silver)
7-628-253-00

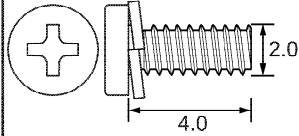


#43: M1.7 X 4.0
(Red)
2-660-401-31

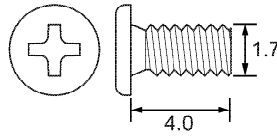


#44: M1.7 X 3.0 (Tapping)
(Silver)
3-078-890-61

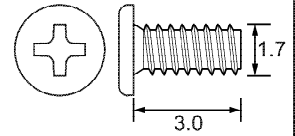


#45: M1.4 X 2.5
(Silver)
2-587-151-01

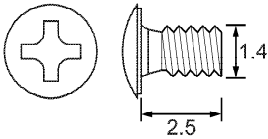


#46: M1.7 X 3.0
(Red)
2-660-401-11

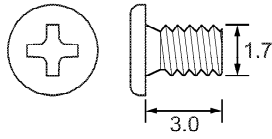


#47: M1.4 X 3.0 (Tapping)
(Silver)
2-665-774-01

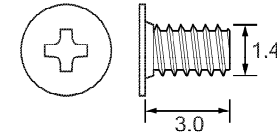


#48: M1.7 X 2.5
(Silver)
3-973-497-91

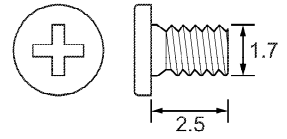


#49: M2.0 X 4.0
(Black)
2-630-005-31

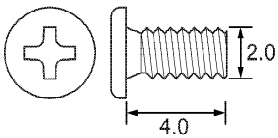


#50: M2.0 X 3.0
(Red)
2-891-494-11

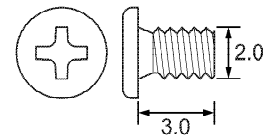


#51: M2.0 X 2.5
(Silver)
3-073-686-01

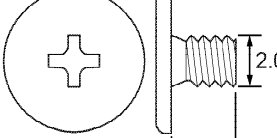


#52: M2.0 X 4.0 (Tapping)
(Black)
3-080-206-11

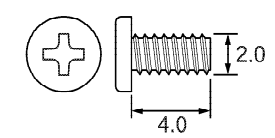


#53: M2.0 X 5.0 (Tapping)
(Black)
3-080-206-21

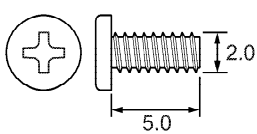


#54: M1.75 X 6.0 (Tapping)
(Black)
3-318-203-11

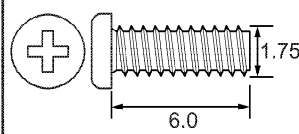


#55: M2.0 X 4.0
(Silver)
2-655-582-11

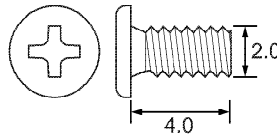


#56: M2.0 X 3.5
(Silver)
3-067-187-11

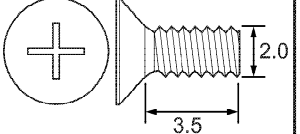


#57: M1.7 X 4.0
(Black)
7-627-852-18

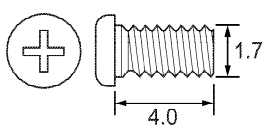


#58: M2.0 X 6.0 (Tapping)
(Silver)
3-719-408-11

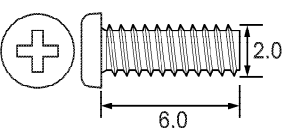

#59: M2.0 X 5.0 (Tapping)
(Silver)
3-080-205-21

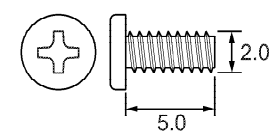


#60: M2.6 X 5.0
(Black)
3-061-062-11

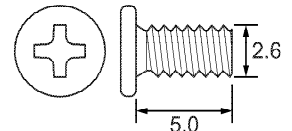


HARDWARE LIST (4/7)


#61: M3.0 X 10.0
(Black)
7-682-549-09

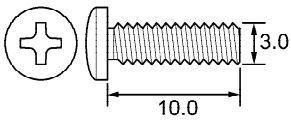


#62: M2.0 X 3.0
(Silver)
3-080-202-21

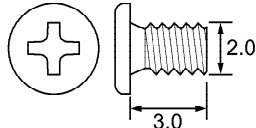


#63: M5.0 X 12.5
(Black)
3-060-811-21

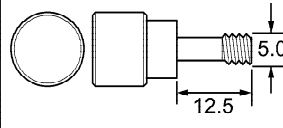


#64: M1.7 X 5.0 (Tapping)
(Silver)
2-666-551-21

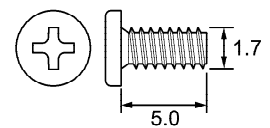


#65: M1.4 X 3.5
(Silver)
2-635-591-01

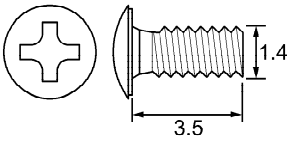


#66: M1.4 X 1.4
(Silver)
2-635-591-41

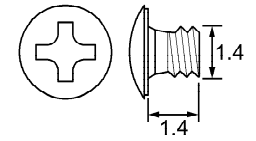


#67: M1.4 X 2.0
(Silver)
3-389-523-16

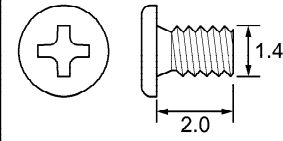


#68: M1.7 X 4.0
(Silver)
2-655-581-01

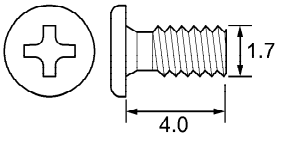


#69: M1.7 X 3.0
(Silver)
2-599-475-21

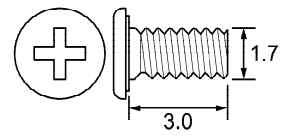


#70: M1.7 X 5.0
(Silver)
2-599-475-41

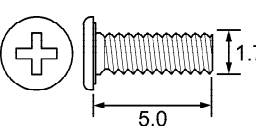


#71: M1.4 X 2.0
(Red)
3-208-537-01

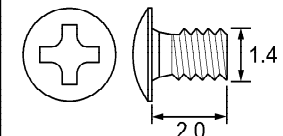


#72: M1.4 X 2.0
(Silver)
4-663-621-41

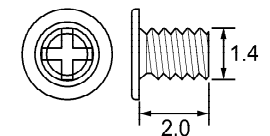


#73: M1.2 X 4.0 (Tapping)
(Black)
3-086-156-61

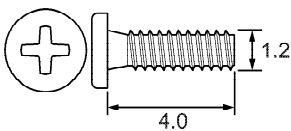


#74: M1.7 X 6.0 (Tapping)
(Silver)
2-666-551-31

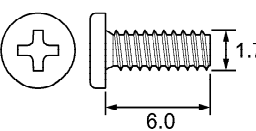


#75: M1.7 X 3.5 (Tapping)
(Silver)
2-666-551-01

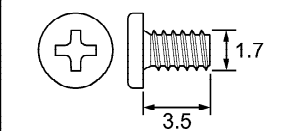


#76: M1.7 X 4.0 (Tapping)
(Silver)
2-666-551-11

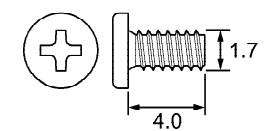


#77: M1.2 X 5.0 (Tapping)
(Silver)
3-086-156-31

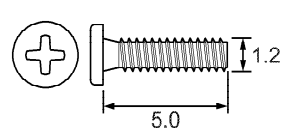


#78: M1.4 X 3.5
(Red)
3-208-537-11

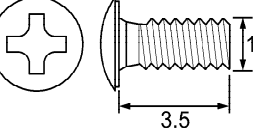

#79: M1.4 X 2.0
(Silver)
2-587-151-11

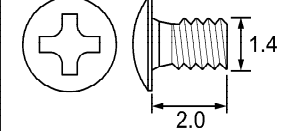


#80: M1.4 X 2.0
(Black)
3-279-411-01

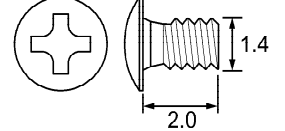


HARDWARE LIST (5/7)


#81: M1.7 X 2.5
(Silver)
2-515-756-01

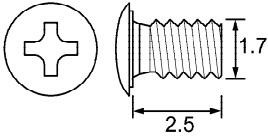


#82: M1.4 X 1.4
(Silver)
3-272-251-01

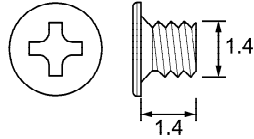


#83: M1.7 X 7.0 (Tapping)
(Black)
3-080-204-41

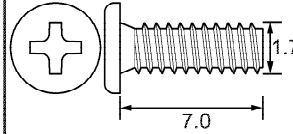


#84: M2.0 X 3.0
(Silver)
3-072-453-11

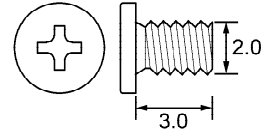


#85: M1.7 X 2.5
(Black)
2-515-483-11

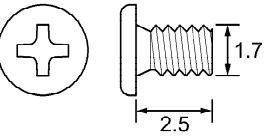


#86: M1.7 X 4.0 (Tapping)
(Silver)
2-695-434-21

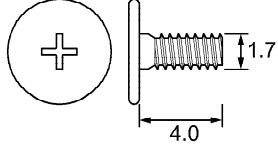


#87: M1.6 X 5.3
(Black)
2-689-328-01

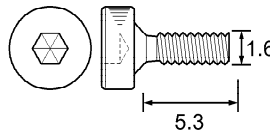


#88: M1.6 X 5.9 (Tapping)
(Silver)
2-689-015-01

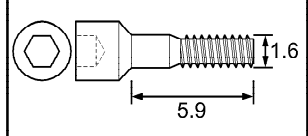


#89: M2.0 X 5.5 (Tapping)
(Silver)
2-695-575-01

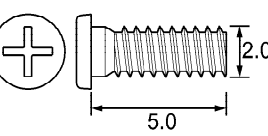


#90: M1.7 X 3.0
(Silver)
3-271-395-01

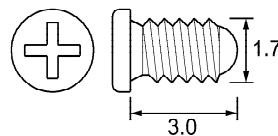


#91: M1.7 X 3.0 (Tapping)
(Silver)
2-695-434-11

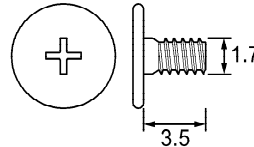


#92: M2.0 X 3.9
(Black)
3-268-954-01

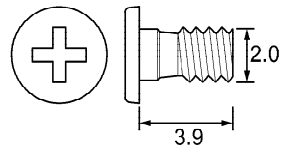


#93: M1.7 X 3.5 (Tapping)
(Silver)
3-254-082-01

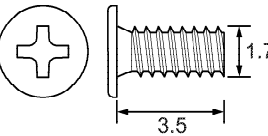


#94: M1.7 X 4.0
(Black)
2-515-483-31

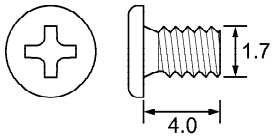


#95: M3.0 X 8.0 (Tapping)
(Black)
7-685-646-79

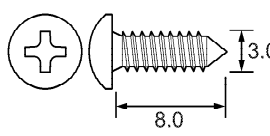


#96: M1.4 X 2.5
(Silver)
2-587-151-21

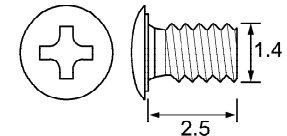


#97: M1.4 X 2.5
(Black)
2-662-396-31

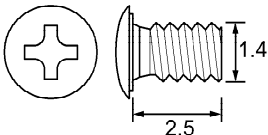


#98: M3.0 X 8.0
(Silver)
3-077-331-01

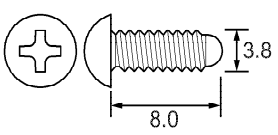

#99: M2.5 X 6.0 (Tapping)
(Silver)
3-776-750-02

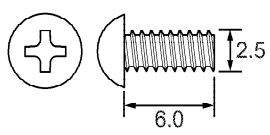


#100: M2.0 X 6.0
(Black)
3-080-203-51

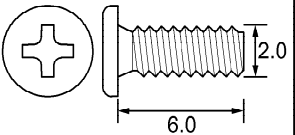


HARDWARE LIST (6/7)


#101: M2.0 X 5.0
(Silver)
7-621-555-39

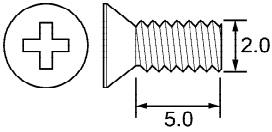


#102: M2.6 X 8.0
(Black)
7-621-284-30

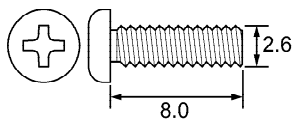


#103: M2.6 X 10.0
(Silver)
7-685-794-09

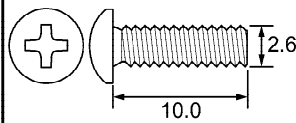


#104: M3.0 X 8.0
(Black)
7-682-548-09

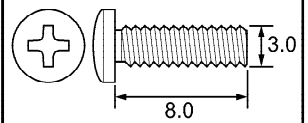


#105: M2.0 X 4.0
(Red)
2-891-494-31

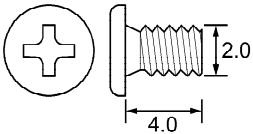


#106: M2.0 X 6.0
(Black)
3-713-786-11

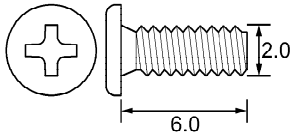


#107: M2.0 X 5.0
(Silver)
3-032-750-01

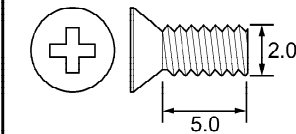


#108: M1.7 X 3.0 (Tapping)
(Black)
2-695-430-01

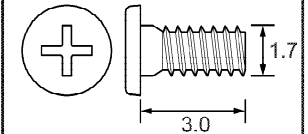


#109: M1.7 X 3.0
(Black)
2-515-483-21

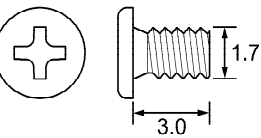


#110: M2.0 X 3.0
(Black)
2-630-005-21

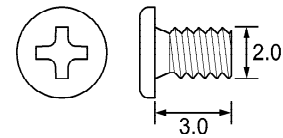


#111: M1.7 X 4.0 (Tapping)
(Black)
2-887-124-01

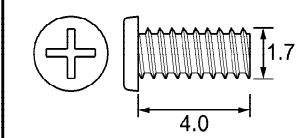


#112: M1.4 X 5.0
(Black)
2-178-410-11

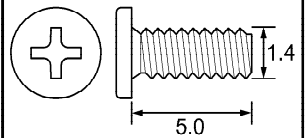


#113: M1.7 X 5.0
(Black)
2-635-562-41

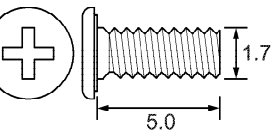


#114: M2.0 X 5.5 (Tapping)
(Silver)
2-698-464-01

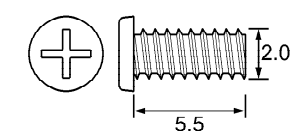


#115: M1.4 X 3.5 (Tapping)
(Silver)
3-348-998-51

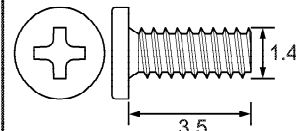


#116: M2.0 X 3.5 (Tapping)
(Silver)
2-695-435-01

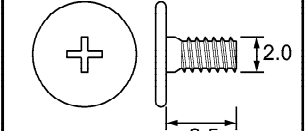


#117: M1.7 X 4.5 (Tapping)
(Silver)
2-695-429-31

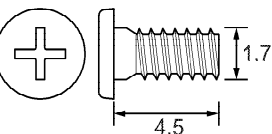


#118: M1.4 X 2.0
(Black)
2-655-580-01

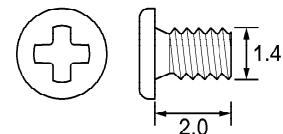

#119: M2.6 X 5.0
(Black)
7-627-556-58

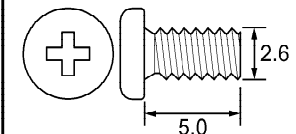


#120: M2.6 X 6.0
(Silver)
7-621-770-67

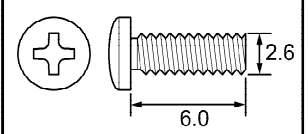


HARDWARE LIST (7/7)


#121: M2.0 X 4.0 (Tapping)
(Silver)
3-080-205-11

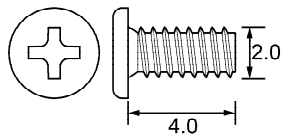


#122: M3.0 X 6.0
(Black)
7-682-547-09

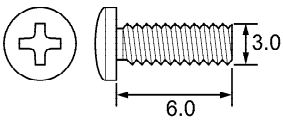

#123: M4.0 X 8.0
(Black)
7-682-561-09

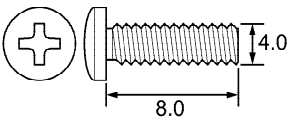

#124: M1.7 X 2.0
(Silver)
2-599-475-01

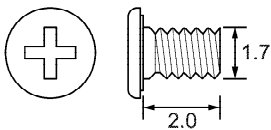

Revision History

Ver.	Date	History	Contents	S.M. Rev. issued
1.0	2008.01	Official Release	—	—