



## SECTION 5 REPAIR PARTS LIST

### 5-1. EXPLODED VIEWS


#### NOTE:

- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.

The components identified by mark  $\triangle$  or dotted line with mark  $\triangle$  are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque  $\triangle$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

#### 5-1-1. MAIN SECTION

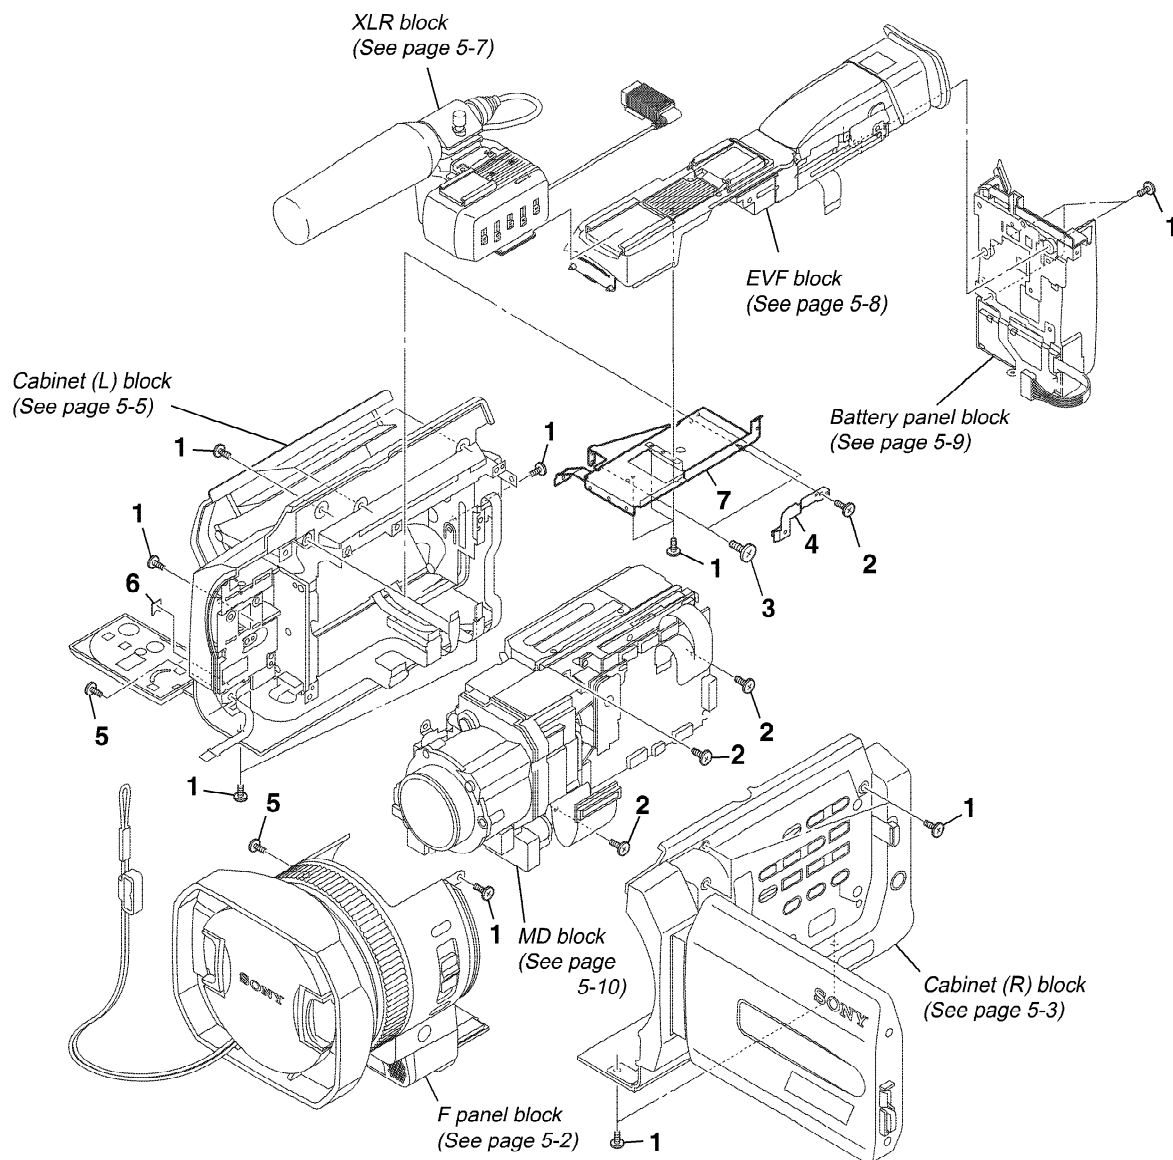


| Ref. No. | Part No.     | Description                 |
|----------|--------------|-----------------------------|
| 1        | 3-989-735-81 | SCREW (M1.7), LOCK ACE, P2  |
| 2        | 3-989-859-01 | SCREW (M1.7) STEP, HEAD     |
| 3        | 3-713-791-31 | SCREW (M1.7X6), TAPPING, P2 |
| 4        | X-3952-813-1 | RETAINER (B) ASSY, MF KNOB  |

| Ref. No. | Part No.     | Description                |
|----------|--------------|----------------------------|
| 5        | 3-055-573-21 | SCREW (M1.7), LOCK ACE, P2 |
| 6        | 3-076-834-01 | SHEET, AF BLIND            |
| 7        | X-3952-923-1 | CHASSIS ASSY, TOP          |

5-1-2. F PANEL BLOCK

ns : not supplied

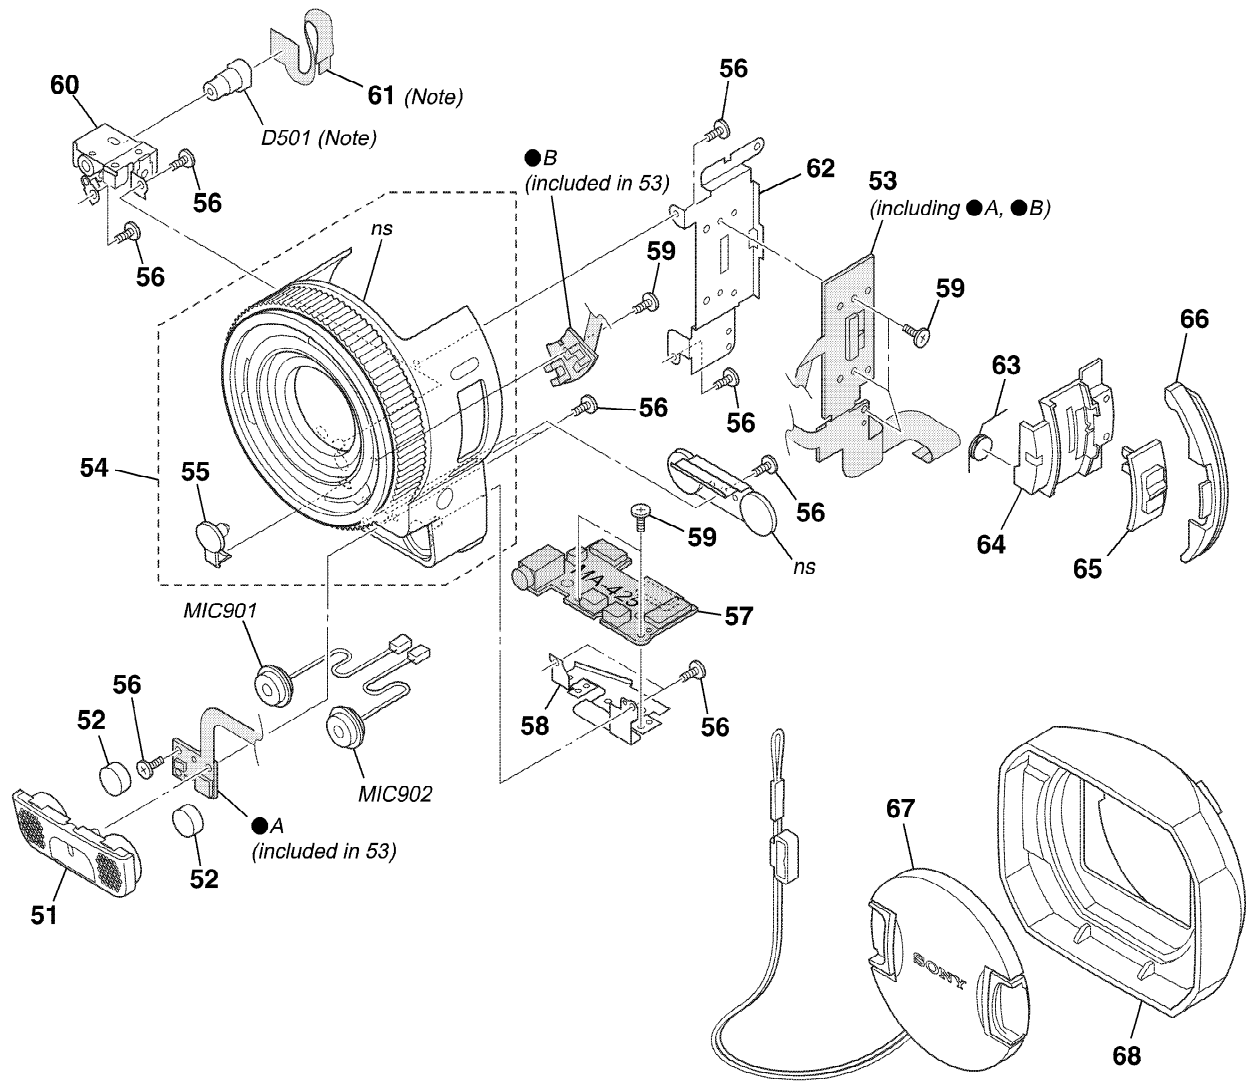

**Note :**  
Be sure to read "SERVICE NOTE" on page 1-3 when replacing the laser unit (D501) and the FP-500 flexible board.


| Ref. No. | Part No.     | Description                 |
|----------|--------------|-----------------------------|
| 51       | X-3952-617-1 | GRILLE ASSY, MICROPHONE     |
| 52       | 3-076-349-01 | SHEET, GRILLE               |
| 53       | A-7078-341-A | FP-504 BOARD, COMPLETE      |
| 54       | X-3952-656-1 | PANEL ASSY, FRONT           |
| 55       | 3-076-276-01 | COVER, MICROPHONE JACK      |
| 56       | 3-713-791-01 | SCREW (M1.7X4), TAPPING, P2 |
| 57       | A-7078-515-A | MOUNTED PWB, MA-425         |
| 58       | 3-076-348-01 | BRACKET, MA                 |
| 59       | 4-974-725-01 | SCREW (M1.7X2.5), P         |
| 60       | X-3952-608-1 | BRACKET ASSY, AF LASER      |

| Ref. No. | Part No.     | Description                 |
|----------|--------------|-----------------------------|
| 61       | 1-685-298-12 | FP-500 FLEXIBLE             |
| 62       | 3-076-354-01 | PLATE (A), MF KNOB RETAINER |
| 63       | 3-076-353-01 | SPRING, MF KNOB RETURN      |
| 64       | 3-076-351-01 | RETAINER, MF KNOB           |
| 65       | 3-076-350-02 | KNOB, MF                    |
| 66       | 3-076-352-01 | PLATE, ORNAMENTAL           |
| 67       | X-3952-595-1 | CAP ASSY, LENS              |
| 68       | X-3952-594-1 | HOOD ASSY                   |
| △ D501   | 1-804-531-11 | LASER UNIT                  |
| MIC901   | 1-542-312-11 | MICROPHONE (Lch)            |
| MIC902   | 1-542-312-11 | MICROPHONE (Rch)            |

|                                                                                                                                                           |                                                                                                                                                                     |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>Note :</b><br/>The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.</p> | <p><b>Note :</b><br/>Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.</p> |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|

### 5-1-3. CABINET (R) BLOCK

ns : not supplied

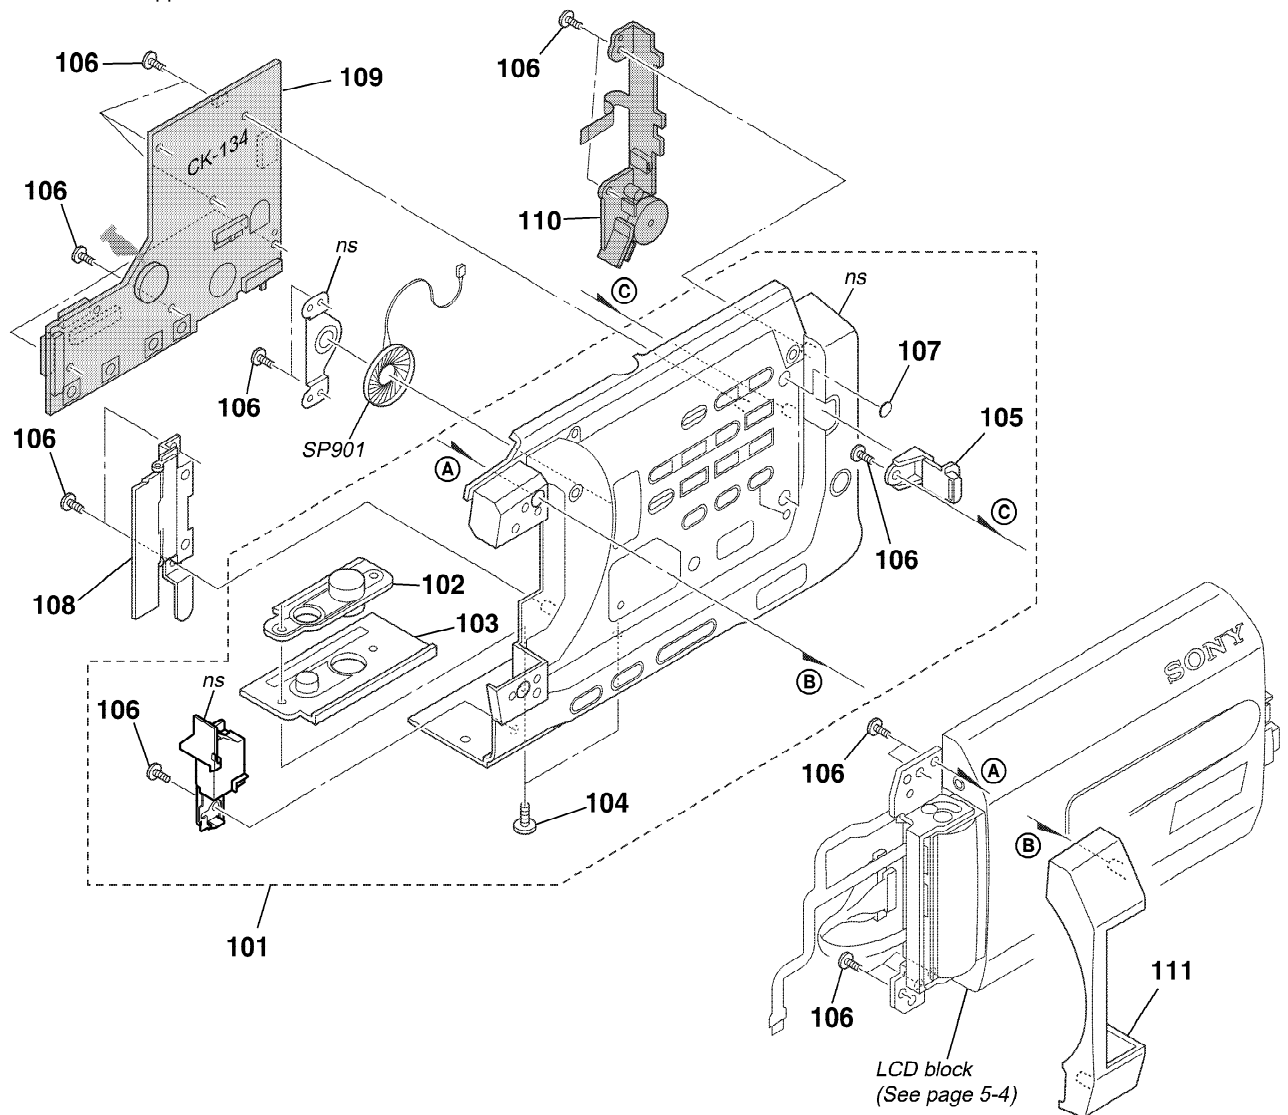

 : BT5201 (BATTERY, LITHIUM SECONDARY)  
Board on the mount position. (See page 4-105.)

**CAUTION :**


Danger of explosion if battery is incorrectly replaced.  
Replace only with the same or equivalent type.

| <u>Ref. No.</u> | <u>Part No.</u> | <u>Description</u>         |
|-----------------|-----------------|----------------------------|
| 101             | X-3952-654-1    | CABINET (R) ASSY           |
| 102             | 3-051-840-01    | SCREW, TRIPOD              |
| 103             | 3-076-305-01    | BASE, TRIPOD TABLE         |
| 104             | 3-958-217-01    | SCREW (M2)                 |
| 105             | 3-076-299-01    | CLAW, PANEL LOCK           |
| 106             | 3-989-735-51    | SCREW (M1.7), LOCK ACE, P2 |

| <u>Ref. No.</u> | <u>Part No.</u> | <u>Description</u>             |
|-----------------|-----------------|--------------------------------|
| 107             | 3-077-269-01    | CUSHION, PANEL                 |
| 108             | X-3952-655-1    | LID ASSY, HINGE BLIND          |
| 109             | A-7078-514-A    | CK-134 BOARD, COMPLETE         |
| 110             | 1-477-338-11    | SWITCH BLOCK, CONTROL (KP1870) |
| 111             | 3-076-344-11    | CABINET (HINGE)                |
| SP901           | 1-529-857-21    | SPEAKER (1.6 CM)               |

5-1-4. LCD BLOCK

ns : not supplied

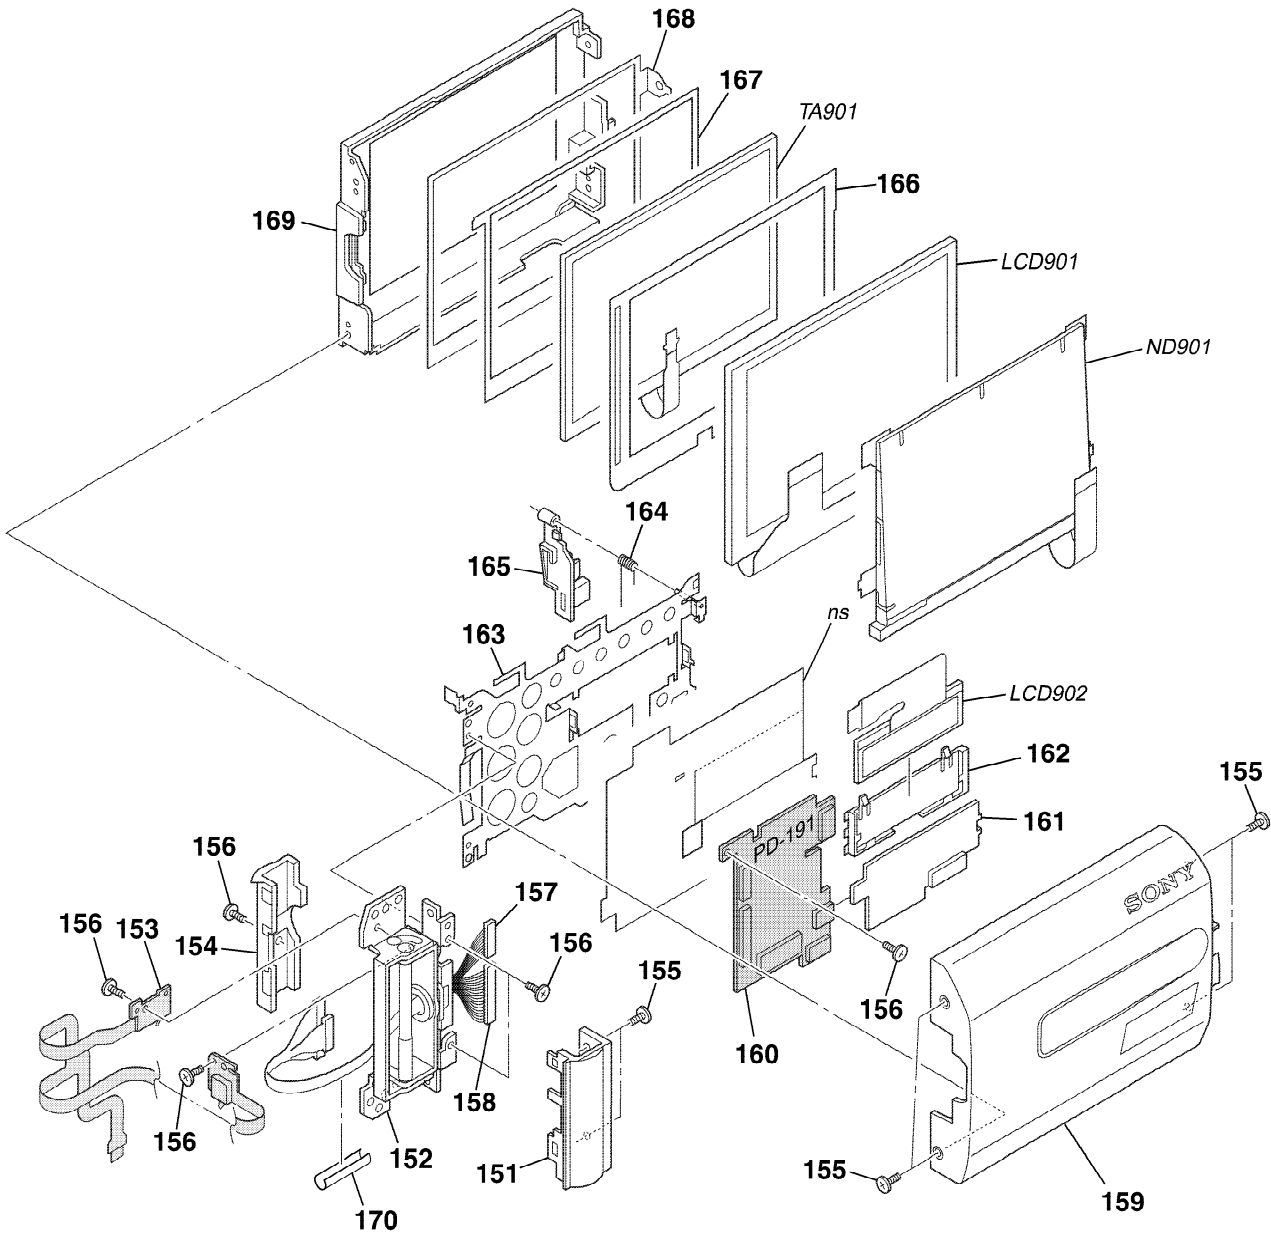


| Ref. No. | Part No.     | Description                |
|----------|--------------|----------------------------|
| 151      | 3-076-448-11 | COVER (FRONT), HINGE       |
| 152      | X-3952-604-1 | HINGE ASSY                 |
| 153      | A-7078-342-A | FP-495 BOARD, COMPLETE     |
| 154      | 3-076-447-11 | COVER (REAR), HINGE        |
| 155      | 3-989-735-51 | SCREW (M1.7), LOCK ACE, P2 |
| 156      | 4-974-725-01 | SCREW (M1.7X2.5), P        |
| 157      | 1-961-814-11 | HARNESS (PC-087)           |
| 158      | 1-961-815-11 | HARNESS (PC-088)           |
| 159      | X-3952-653-1 | P CABINET (C) ASSY         |
| 160      | A-7078-516-A | PD-191 BOARD, COMPLETE     |
| △ 161    | 1-477-187-11 | TRANSFORMER UNIT, INVERTER |
| 162      | 3-055-289-01 | HOLDER, LCD                |

| Ref. No. | Part No.     | Description                    |
|----------|--------------|--------------------------------|
| 163      | X-3952-612-1 | FRAME ASSY, P                  |
| 164      | 3-076-453-01 | SPRING (P), TORSION COIL       |
| 165      | 3-076-449-01 | BUTTON, OPEN                   |
| 166      | 3-076-451-01 | CUSHION (L)                    |
| 167      | 3-076-450-01 | CUSHION (C)                    |
| 168      | 3-076-452-01 | PLATE (P), GROUND              |
| 169      | 3-076-446-11 | CABINET (M), P                 |
| 170      | 3-076-631-01 | TAPE (H)                       |
| TA901    | 1-477-189-11 | PANEL, TOUCH                   |
| △ ND901  | 1-518-797-11 | TUBE, FLUORESCENT,COLD CATHODE |
| LCD901   | 1-804-599-21 | INDICATOR MODULE LIQUID CRYST  |
| LCD902   | A-7096-726-A | INDICATION LCD BLOCK ASSY      |

|                                                                                                                                                   |                                                                                                                                                             |
|---------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Note :</b><br>The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified. | <b>Note :</b><br>Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié. |
|---------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|

**5-1-5. CABINET (L) BLOCK**


ns : not supplied

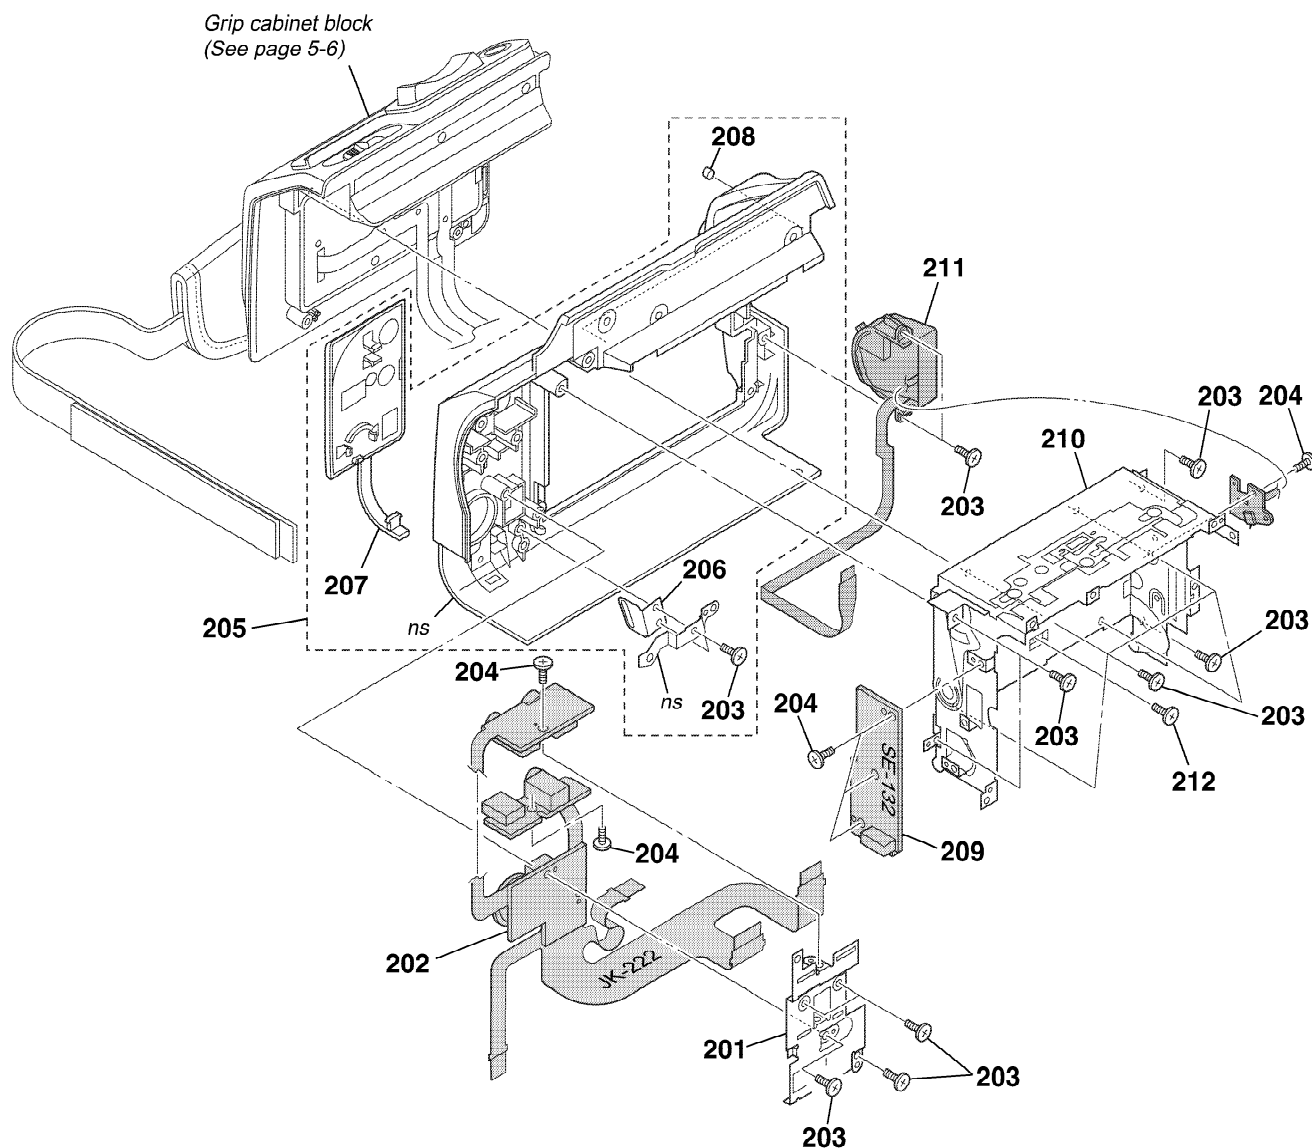

| Ref. No. | Part No.     | Description                 |
|----------|--------------|-----------------------------|
| 201      | 3-076-343-01 | BRACKET, JK                 |
| 202      | A-7078-332-A | JK-222 BOARD, COMPLETE      |
| 203      | 3-713-791-01 | SCREW (M1.7X4), TAPPING, P2 |
| 204      | 4-974-725-01 | SCREW (M1.7X2.5), P         |
| 205      | X-3952-652-1 | CABINET (L) ASSY            |
| 206      | 3-076-309-01 | BRACKET (FRONT), GRIP BELT  |

| Ref. No. | Part No.     | Description                    |
|----------|--------------|--------------------------------|
| 207      | X-3952-618-1 | COVER ASSY, TERMINAL           |
| 208      | 3-077-139-01 | CUSHION, (LG)                  |
| 209      | A-7078-339-A | SE-132 BOARD, COMPLETE         |
| 210      | X-3952-593-1 | CS FRAME ASSY                  |
| 211      | 1-477-337-33 | SWITCH BLOCK, CONTROL (PS1870) |
| 212      | 3-713-791-01 | SCREW (M1.7X4), TAPPING, P2    |

5-1-6. GRIP CABINET BLOCK

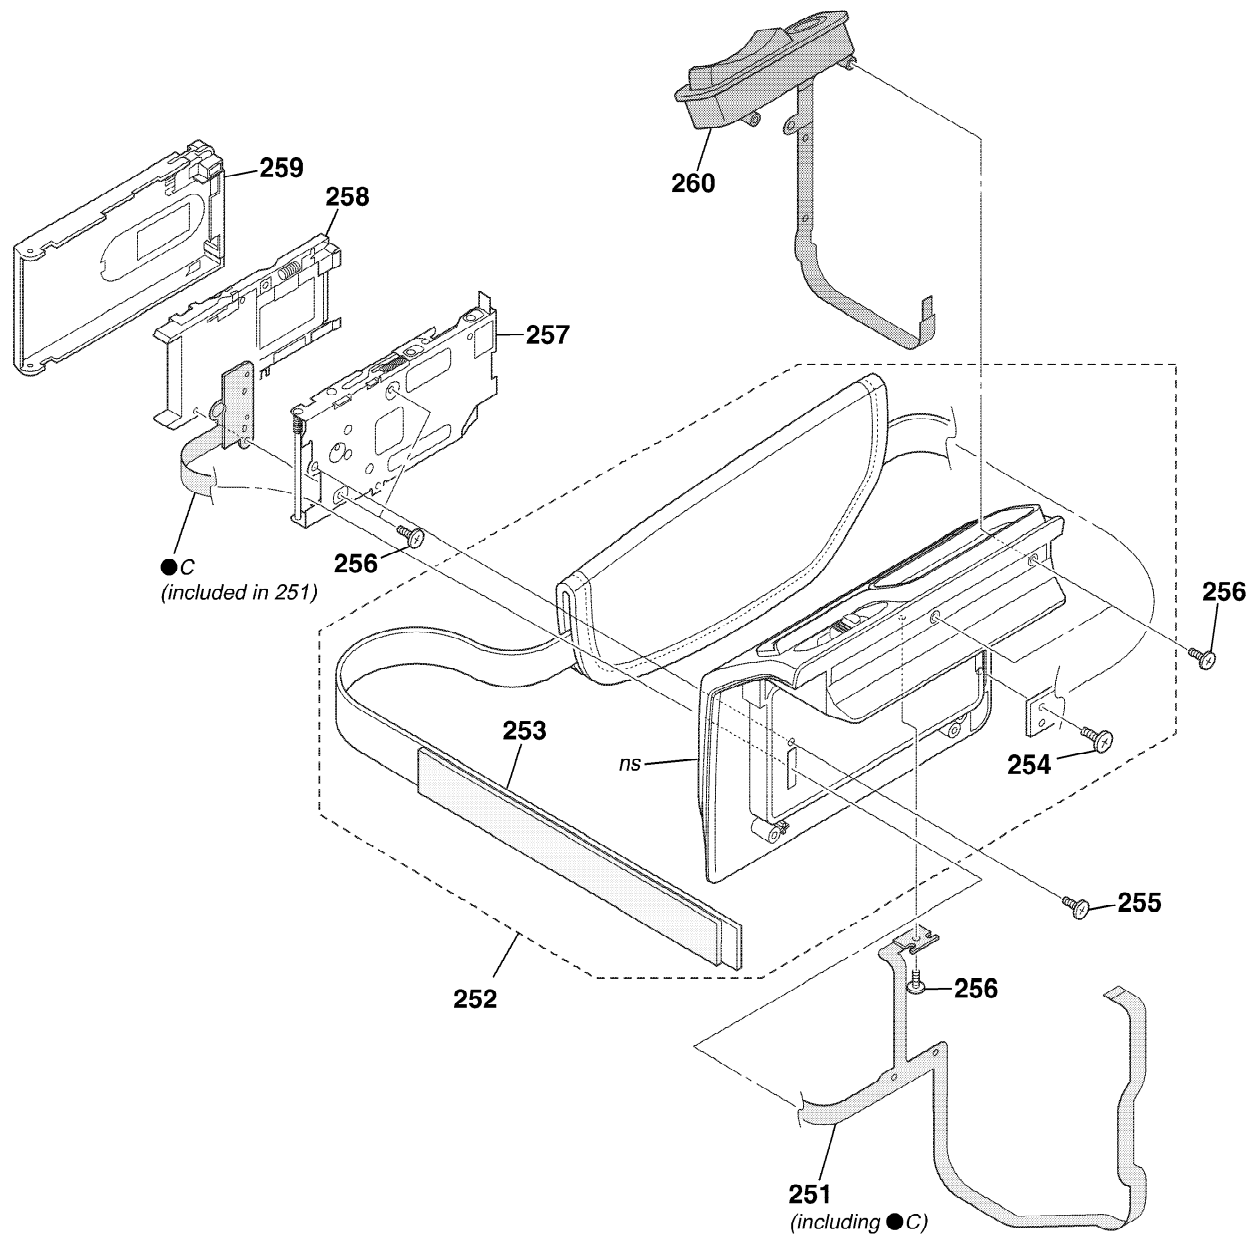


| Ref. No. | Part No.     | Description         |
|----------|--------------|---------------------|
| 251      | 1-685-299-22 | FP-503 FLEXIBLE     |
| 252      | X-3952-660-1 | CABINET ASSY, GRIP  |
| 253      | 3-076-322-11 | BELT, GRIP          |
| 254      | 3-679-362-11 | SCREW               |
| 255      | 4-974-725-01 | SCREW (M1.7X2.5), P |

| Ref. No. | Part No.     | Description                    |
|----------|--------------|--------------------------------|
| 256      | 3-713-791-01 | SCREW (M1.7X4), TAPPING, P2    |
| 257      | X-3952-598-1 | CHASSIS ASSY, MS               |
| 258      | 1-785-593-31 | CONNECTOR, MEMORY STICK        |
| 259      | X-3952-624-1 | CABINET ASSY, MS               |
| 260      | 1-477-339-22 | SWITCH BLOCK, CONTROL (CF1870) |

**5-1-7. XLR BLOCK**


ns : not supplied

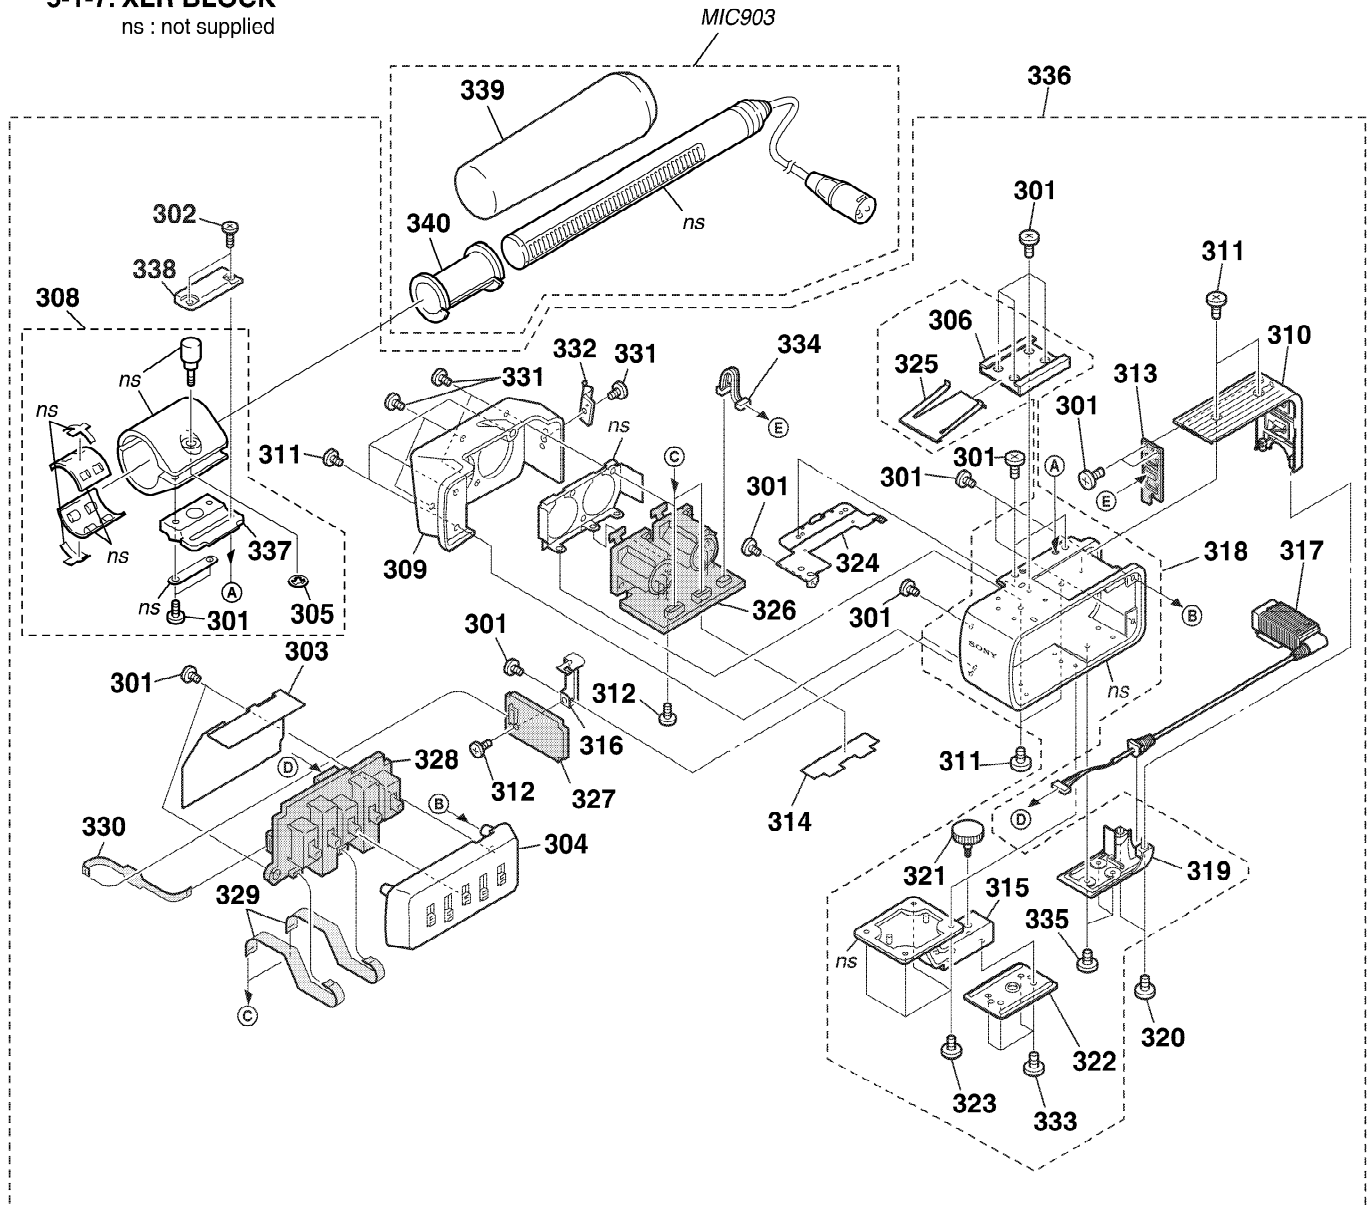

| Ref. No. | Part No.     | Description                  |
|----------|--------------|------------------------------|
| 301      | 3-948-339-61 | TAPPING                      |
| 302      | 7-682-549-09 | SCREW +B 3X10                |
| * 303    | 3-060-814-01 | INSULATED PLATE, SW          |
| 304      | X-3950-603-3 | CABINET (L) ASSY, HANDLE     |
| 305      | 3-165-904-01 | WASHER, SCREW STOPPER        |
| 306      | 3-069-286-01 | SHOE, ACCESSORY              |
| 308      | X-3950-604-5 | HOLDER ASSY, MICROPHONE      |
| 309      | 3-060-813-02 | CABINET (R), HANDLE          |
| 310      | X-3952-786-1 | REAR SUB ASSY, XL CABINET    |
| 311      | 3-968-729-61 | SCREW (M2X3), LOCK ACE, P2   |
| 312      | 3-968-729-51 | SCREW (M2), LOCK ACE, P2     |
| 313      | A-7078-396-A | XK-001 (UPD) BOARD, COMPLETE |
| 314      | 3-063-408-01 | SHEET, XLR                   |
| 315      | 3-077-771-01 | FOOT, XL                     |
| * 316    | 3-060-815-01 | BRACKET, DD                  |
| 317      | 1-961-918-11 | HARNESS (XH-050)             |
| 318      | X-3952-785-1 | CENTER ASSY, XL CABINET      |
| 319      | 3-077-773-01 | BOTTOM, XL CABINET           |
| 320      | 3-713-791-71 | SCREW (M1.7X4)               |
| 321      | 3-077-767-01 | XL KNOB                      |

| Ref. No. | Part No.     | Description                  |
|----------|--------------|------------------------------|
| 322      | 3-077-768-01 | XL SHOE PLATE                |
| 323      | 3-945-884-11 | SCREW (2X6)                  |
| 324      | 3-064-629-01 | RETAINER (UPPER) D, HOLDER   |
| 325      | 3-688-754-11 | SPRING                       |
| 326      | A-7078-393-A | XM-002 (UPD) BOARD, COMPLETE |
| 327      | A-7078-395-A | XD-002 (UPD) BOARD, COMPLETE |
| 328      | A-7078-394-A | XS-002 (UPD) BOARD, COMPLETE |
| 329      | 1-678-052-11 | FP-217 FLEXIBLE              |
| 330      | 1-678-053-11 | FP-218 FLEXIBLE              |
| 331      | 3-061-062-01 | BOLT (M2.6)                  |
| * 332    | 3-678-684-00 | HOLDER, CABLE                |
| 333      | 3-053-121-11 | BOLT (M2), SPRING            |
| 334      | 1-961-917-11 | HARNESS (XK-050)             |
| 335      | 3-053-121-31 | BOLT (M2), SPRING            |
| 336      | A-7013-029-A | XLR BLOCK ASSY               |
| 337      | 3-060-810-01 | BASE, MICROPHONE HOLDER      |
| 338      | 3-064-629-01 | RETAINER (UPPER) D, HOLDER   |
| 339      | 3-048-481-01 | SCREEN, WINDOW               |
| * 340    | 3-179-882-01 | SPACER, MICROPHONE           |
| MIC903   | 8-814-298-90 | MICROPHONE ECM-NV1           |

5-1-8. EVF BLOCK

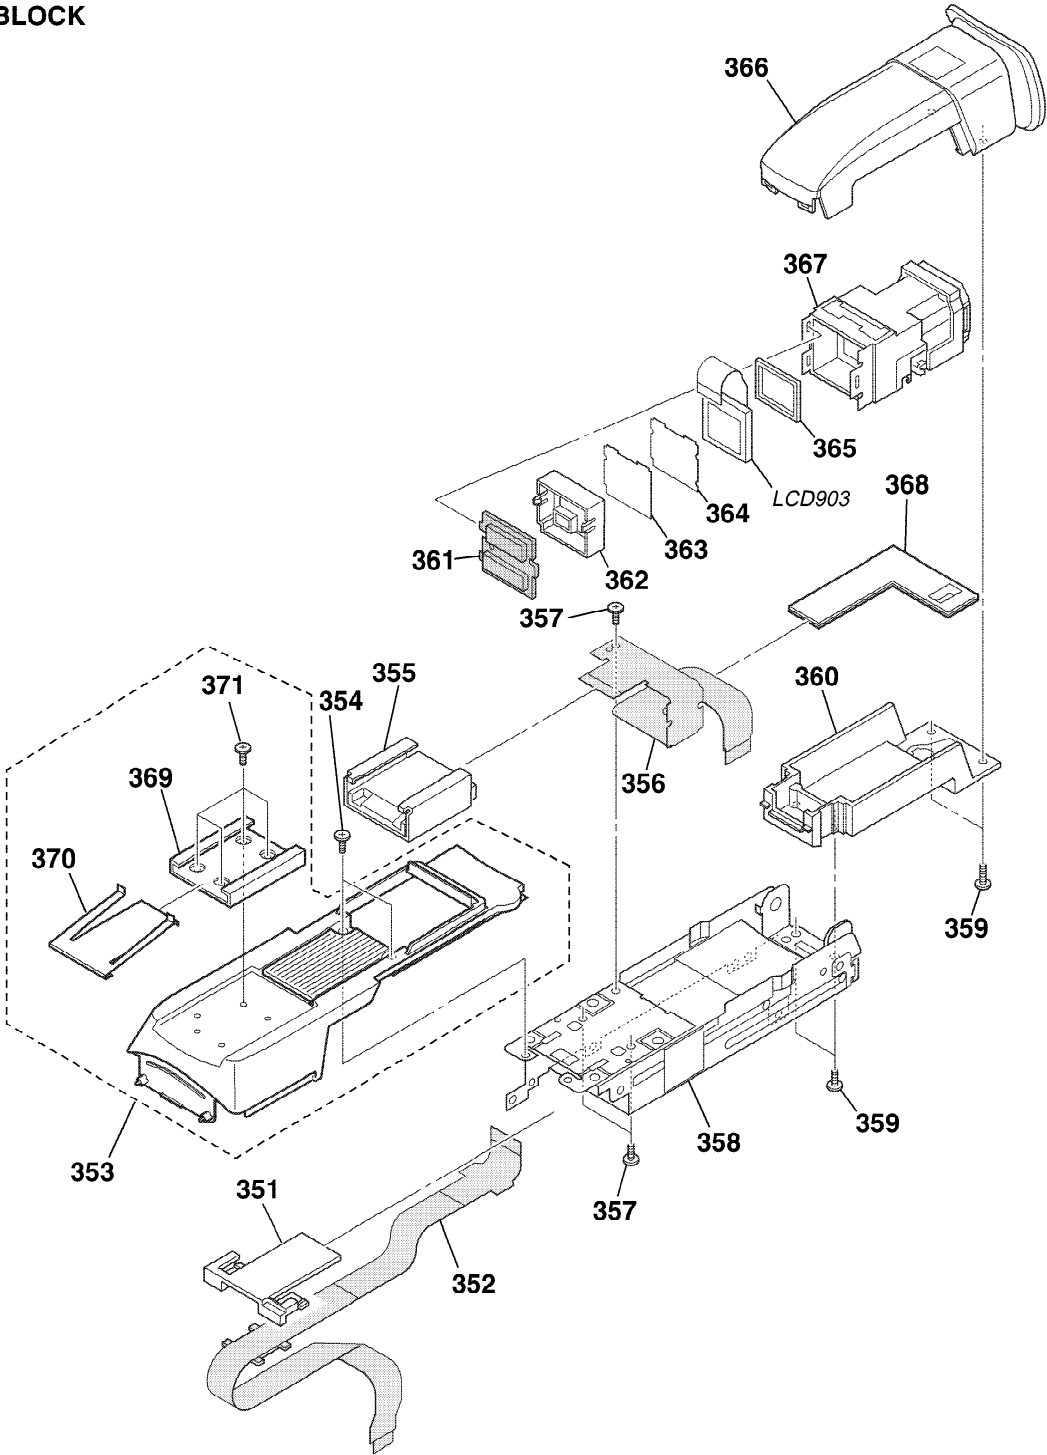


| Ref. No. | Part No.     | Description                    |
|----------|--------------|--------------------------------|
| 351      | 3-076-345-01 | HOLDER, VF FLEXIBLE            |
| 352      | 1-685-301-12 | FP-547 FLEXIBLE                |
| 353      | X-3952-787-1 | CABINET ASSY, TOP              |
| 354      | 3-989-735-81 | SCREW (M1.7), LOCK ACE, P2     |
| 355      | 1-815-124-11 | CONNECTOR, EXTERNAL (HOT SHOE) |
| 356      | A-7078-344-A | FP-497 BOARD, COMPLETE         |
| 357      | 4-974-725-01 | SCREW (M1.7X2.5), P            |
| 358      | X-3952-600-2 | BASE ASSY, EVF                 |
| 359      | 3-713-791-31 | SCREW (M1.7X6), TAPPING, P2    |
| 360      | X-3952-784-1 | VF CABINET (LOWER) ASSY        |
| 361      | A-7078-399-A | LB-089 (UPD) BOARD, COMPLETE   |
| 362      | 3-072-214-01 | GUIDE (20), LAMP               |

| Ref. No. | Part No.     | Description              |
|----------|--------------|--------------------------|
| 363      | 3-072-211-01 | ILLUMINATOR              |
| 364      | 3-072-210-01 | SHEET, PRISM             |
| 365      | 3-059-734-01 | CUSHION (1), LCD         |
| 366      | X-3952-783-1 | VF CABINET (UPPER) ASSY  |
| 367      | X-3952-616-1 | LENS ASSY, VF            |
| 368      | 3-077-288-01 | SHEET(C), COPY           |
| 369      | 3-069-286-01 | SHOE, ACCESSORY          |
| 370      | 3-688-754-11 | SPRING                   |
| 371      | 3-968-729-11 | SCREW (M2), LOCK ACE, P2 |
| BT901    | 1-694-772-11 | TERMINAL BOARD, BATTERY  |
| LCD903   | 8-753-028-56 | LCX033AP-1               |



# 5-1-9. BATTERY PANEL BLOCK

ns : not supplied

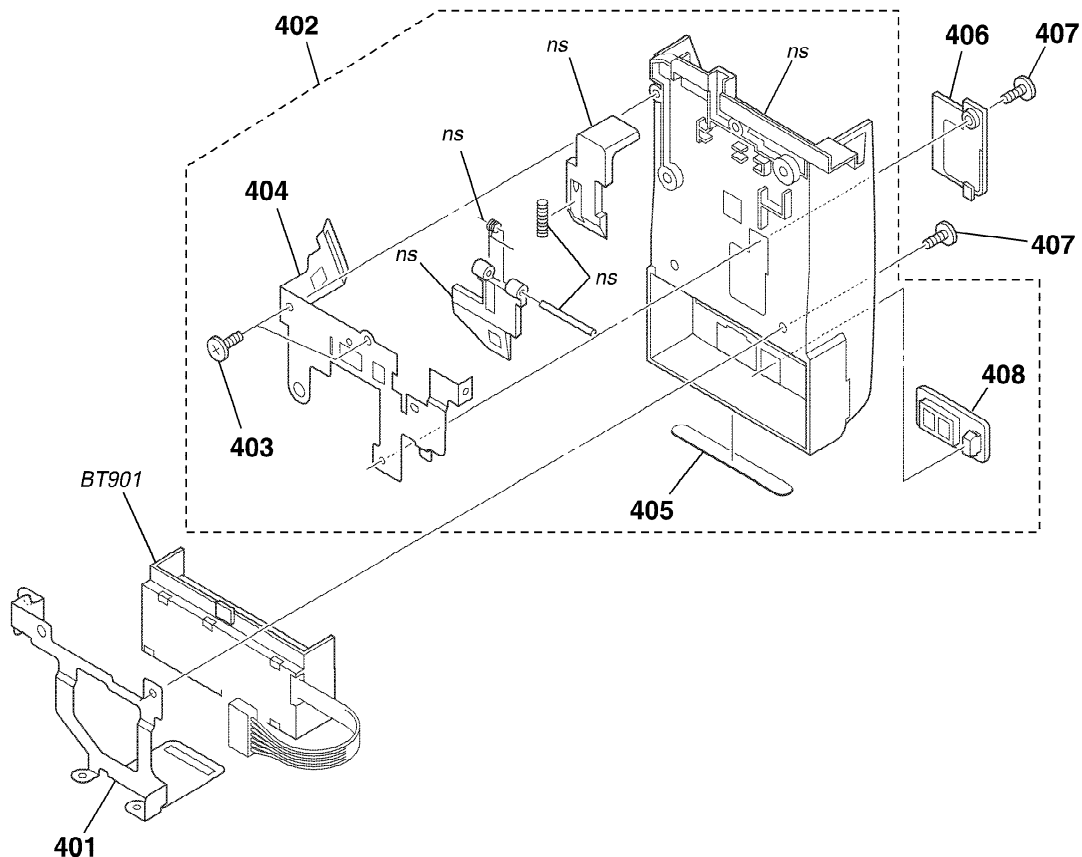


| Ref. No. | Part No.     | Description                   |
|----------|--------------|-------------------------------|
| 401      | 3-076-245-01 | BRACKET (LOWER), STRAP        |
| 402      | X-3952-603-1 | PANEL ASSY, BATTERY           |
| 403      | 3-713-791-51 | SCREW (M1.7X3.5), TAPPING, P2 |
| 404      | 3-076-335-01 | BRACKET (UPPER), STRAP        |
| 405      | 3-076-337-01 | FOOT, RUBBER                  |

| Ref. No. | Part No.     | Description                |
|----------|--------------|----------------------------|
| 406      | 3-076-239-01 | LID, CPC                   |
| 407      | 3-989-735-81 | SCREW (M1.7), LOCK ACE, P2 |
| 408      | 3-065-290-11 | LID, JACK                  |
| BT901    | 1-694-772-11 | TERMINAL BOARD, BATTERY    |

5-1-10. MD BLOCK

ns : not supplied

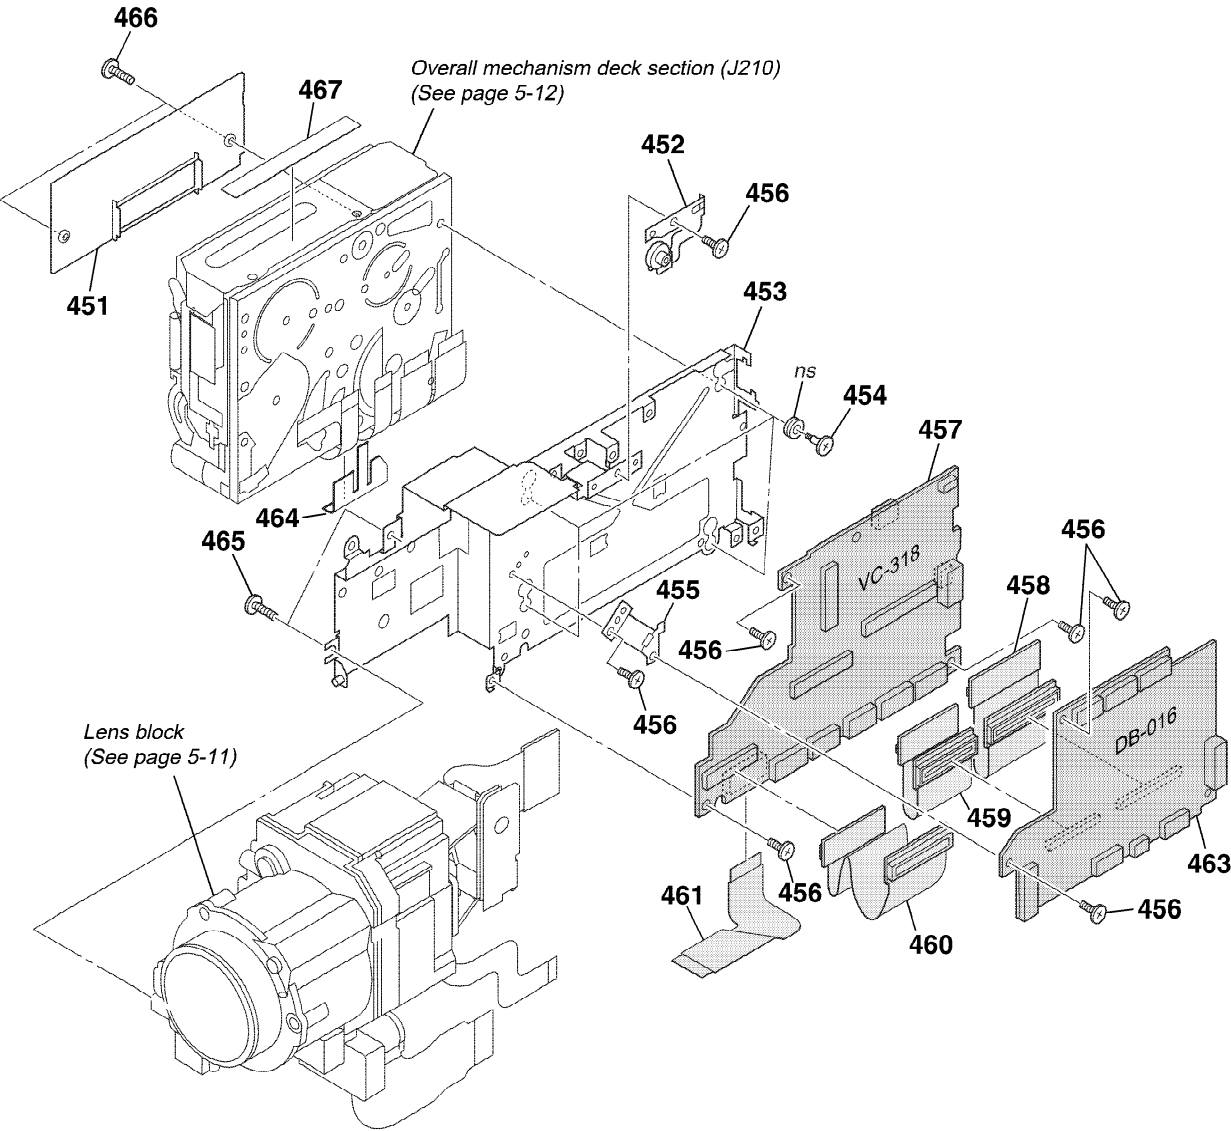


| Ref. No. | Part No.     | Description                                     |
|----------|--------------|-------------------------------------------------|
| 451      | 3-059-722-01 | COVER, CASSETTE COMPARTMENT                     |
| 452      | X-3952-662-1 | BRACKET ASSY, HEAT SINK                         |
| 453      | X-3952-599-1 | FRAME ASSY, MD                                  |
| 454      | 3-059-718-01 | SCREW (M1.4X1.5)                                |
| 455      | 3-076-338-01 | BRACKET, DB                                     |
| 456      | 4-974-725-01 | SCREW (M1.7X2.5), P                             |
| 457      | A-7078-397-A | VC-318 (UDN) BOARD, COMPLETE (SERVICE) (PDX10)  |
| 457      | A-7078-400-A | VC-318 (UDP) BOARD, COMPLETE (SERVICE) (PDX10P) |
| 458      | A-7078-345-A | FP-498 BOARD, COMPLETE                          |

| Ref. No. | Part No.     | Description                                     |
|----------|--------------|-------------------------------------------------|
| 459      | A-7078-346-A | FP-499 BOARD, COMPLETE                          |
| 460      | A-7078-343-A | FP-496 BOARD, COMPLETE                          |
| 461      | 1-685-292-12 | FP-494 FLEXIBLE                                 |
| 463      | A-7078-398-A | DB-016 (UDN) BOARD, COMPLETE (SERVICE) (PDX10)  |
| 463      | A-7078-401-A | DB-016 (UDP) BOARD, COMPLETE (SERVICE) (PDX10P) |
| 464      | 3-070-940-01 | TAPE (3), DF                                    |
| 465      | 3-948-339-01 | SCREW, TAPPING                                  |
| 466      | 3-989-735-01 | SCREW (M1.7), LOCK ACE, P2                      |
| 467      | 3-059-725-01 | LABEL, LS                                       |

**5-1-11. LENS BLOCK**

ns : not supplied

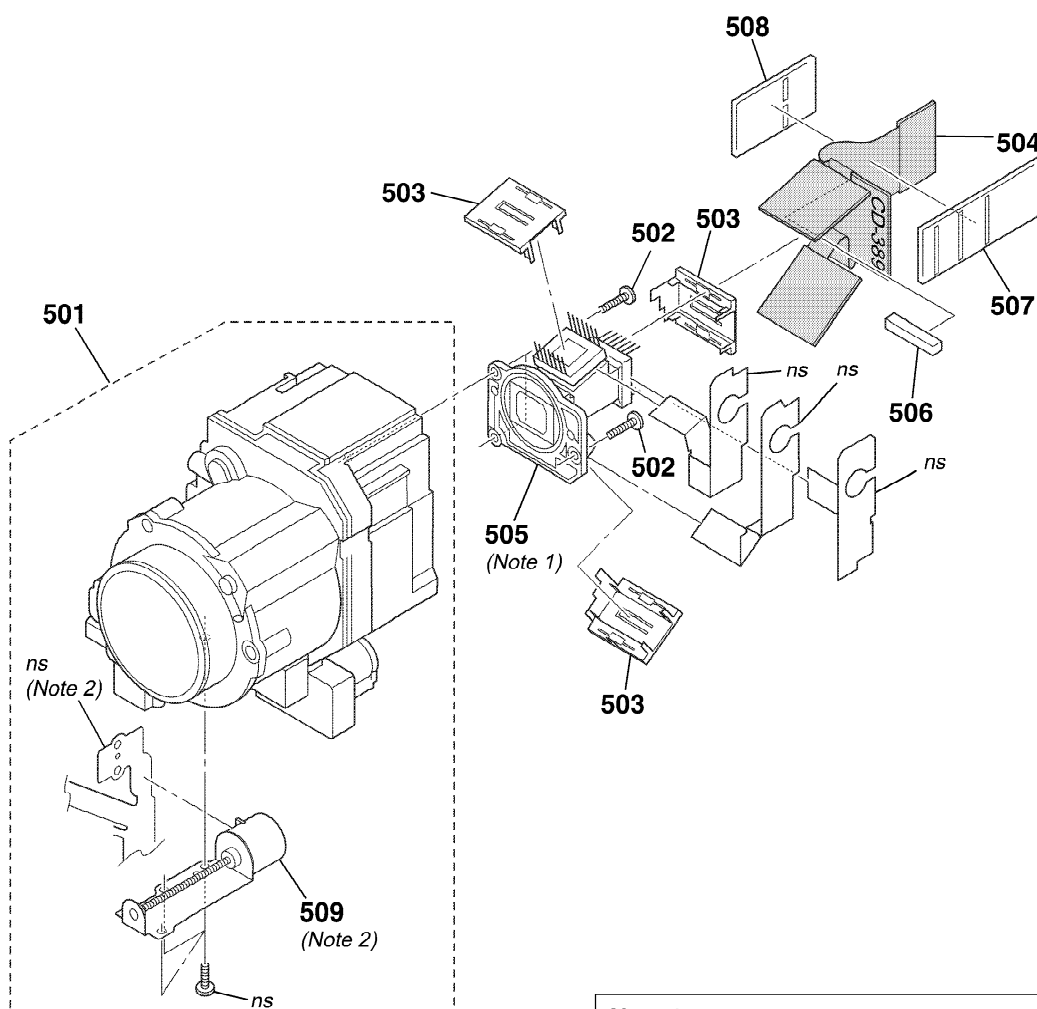**Note 1 :**

Be sure to read "Precautions for Replacement of CCD Imager" on page 4-12 when changing the prism block.


**Note 2 :**

Replace only with the same or equivalent type. Flexible board of video lens is not supplied. Please be careful not to break the flexible board when you change the motor unit.

| Ref. No. | Part No.     | Description                        |
|----------|--------------|------------------------------------|
| 501      | 1-758-757-11 | LENS, VIDEO (B144A)                |
| 502      | 3-713-791-61 | SCREW (M1.7X7), TAPPING, P2        |
| 503      | 3-076-331-01 | COVER (A), CCD                     |
| 504      | A-7078-335-A | CD-389 BOARD, COMPLETE             |
| 505      | A-7012-866-A | PRISM BLOCK (ZGDSY2) (FOR SERVICE) |

| Ref. No. | Part No.     | Description          |
|----------|--------------|----------------------|
| 506      | 3-053-354-01 | CUSHION, CD FLEXIBLE |
| 507      | 3-077-290-01 | SHEET (E), COPY      |
| 508      | 3-077-291-01 | SHEET (F), COPY      |
| 509      | 3-709-679-01 | MOTOR, ZOOM          |
| M801     | 3-709-679-01 | MOTOR, ZOOM          |

5-1-12. OVERALL MECHANISM DECK SECTION (J210)

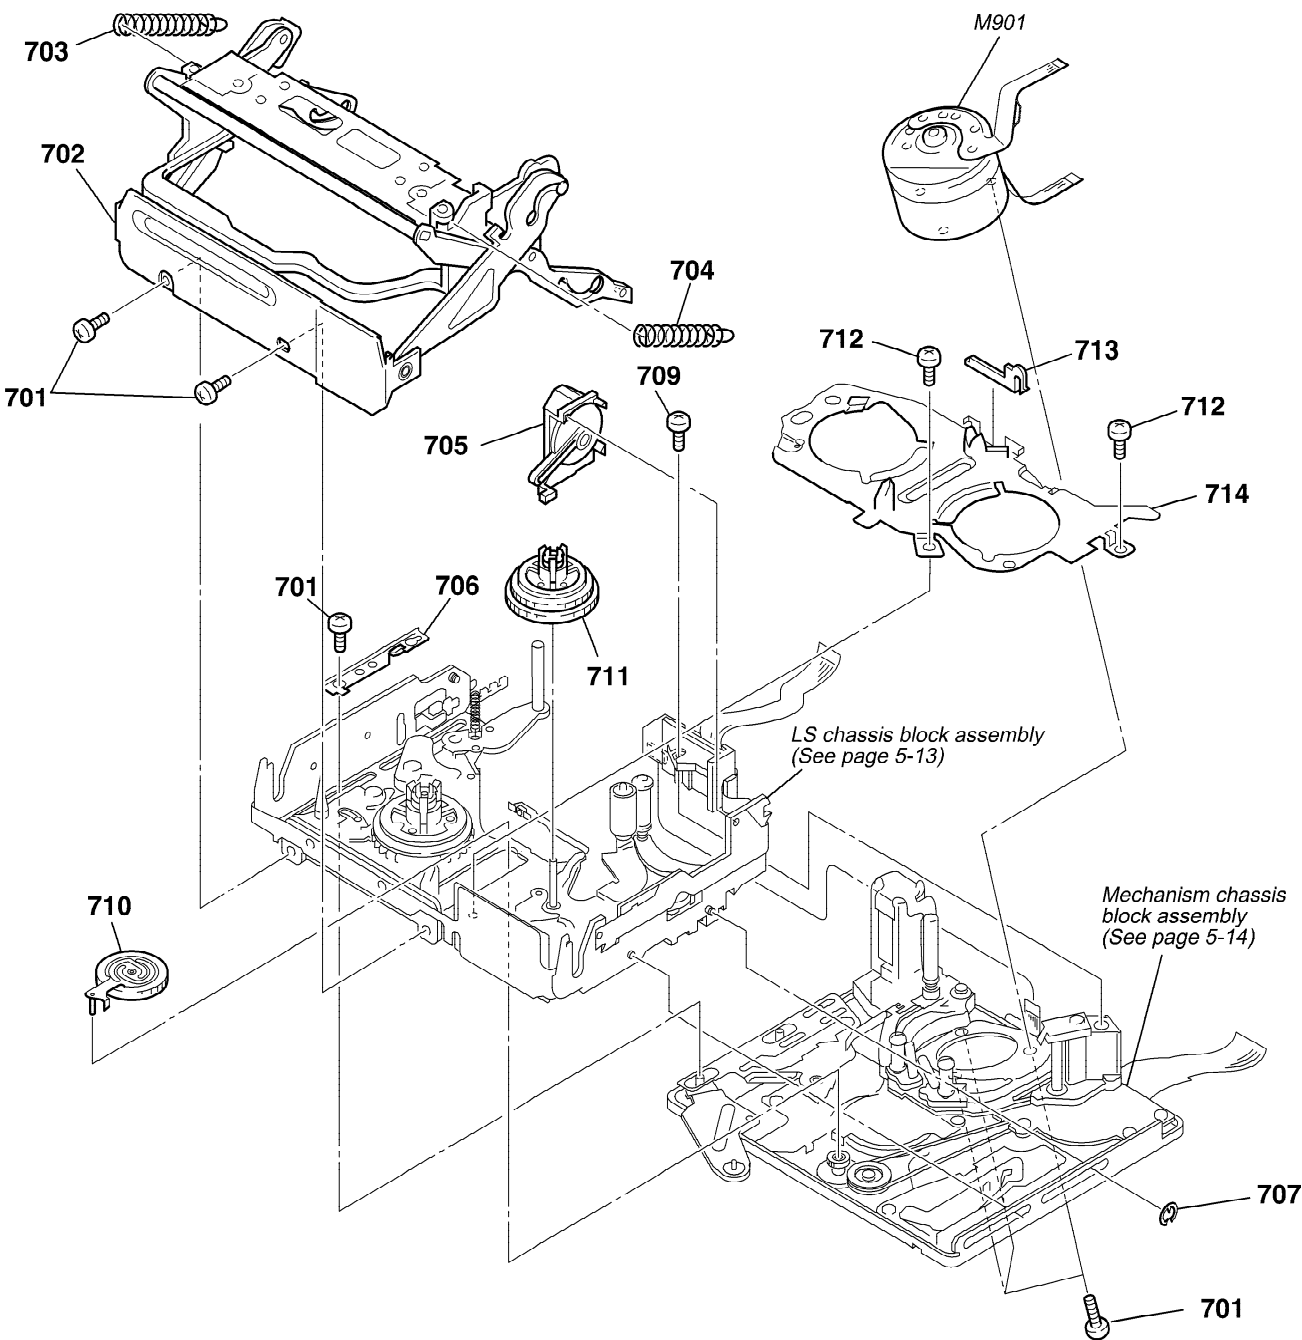


| Ref. No. | Part No.     | Description                    |
|----------|--------------|--------------------------------|
| 701      | 3-703-816-14 | SCREW (M1.4)                   |
| 702      | X-3952-017-3 | CASSETTE COMPARTMENT ASSY      |
| 703      | 3-059-082-01 | SPRING, TENSION                |
| 704      | 3-059-208-01 | SPRING(CASSETTE COMPARTMENT T) |
| 705      | X-3950-370-3 | DAMPER ASSY                    |
| 706      | 3-059-101-03 | RETAINER, LS GUIDE             |
| 707      | 7-624-102-04 | STOP RING 1.5, TYPE -E         |

| Ref. No. | Part No.     | Description                    |
|----------|--------------|--------------------------------|
| 709      | 3-704-197-21 | SCREW (M1.4X2.5), SPECIAL HEAD |
| 710      | X-3950-364-1 | GEAR ASSY, GOOSENECK           |
| 711      | X-3950-366-1 | TABLE ASSY, T REEL             |
| 712      | 3-075-097-01 | SCREW (M1.4X1.4), SPECIAL HEAD |
| 713      | 3-059-093-01 | RETAINER, LED                  |
| 714      | X-3950-361-1 | PLATE ASSY, RETAINER           |
| M901     | A-7048-970-A | DRUM MOTOR (DEH-23A)           |

### 5-1-13. LS CHASSIS BLOCK ASSEMBLY

ns : not supplied

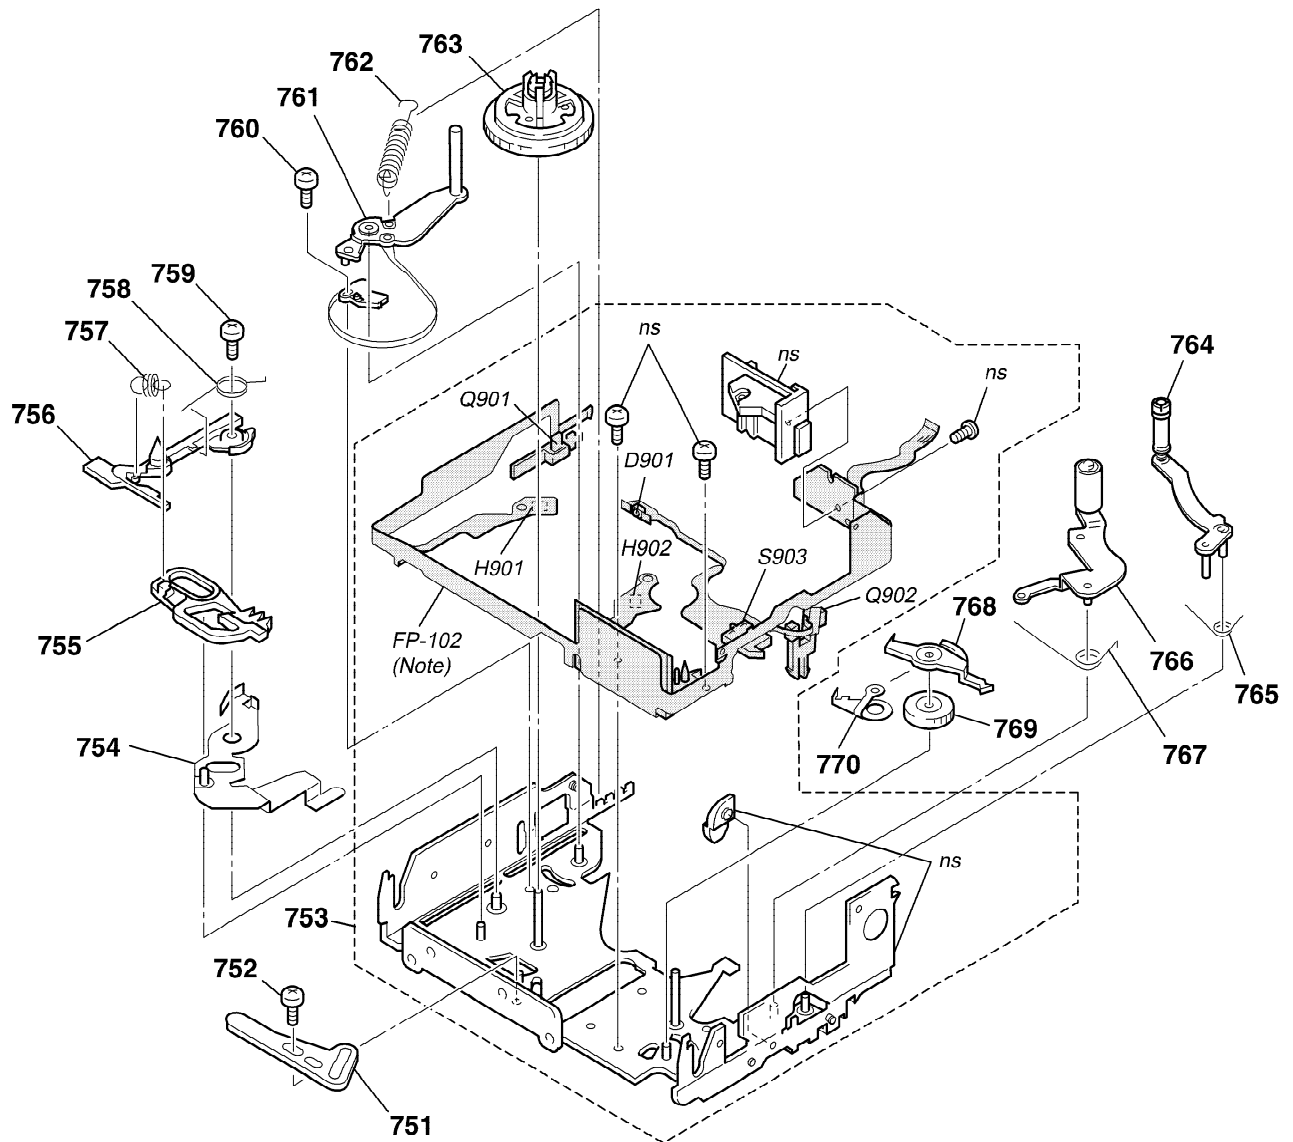


**Note:** FP-102 is included in the LS sub assy and is attached to chassis by hot-press.  
Because installation of FP-102 requires a very high accuracy, FP-102 is not supplied as an independent service parts.

| <u>Ref. No.</u> | <u>Part No.</u> | <u>Description</u>             |
|-----------------|-----------------|--------------------------------|
| 751             | 3-059-173-01    | PLATE, LS CAM                  |
| 752             | 3-075-097-01    | SCREW (M1.4X1.4), SPECIAL HEAD |
| 753             | A-7094-816-B    | LS BLOCK ASSY                  |
| 754             | X-3950-371-1    | ARM ASSY, BRAKE (S) DRIVING    |
| 755             | 3-059-166-02    | BRAKE (S)                      |
| 756             | 3-059-146-01    | POSITIONING (S), CASSETTE      |
| 757             | 3-059-167-01    | SPRING (BRAKE S), TENSION COIL |
| 758             | 3-059-169-01    | SPRING (BRAKE S ARM), TORSION  |
| 759             | 3-703-816-14    | SCREW (M1.4)                   |
| 760             | 3-059-090-01    | SCREW (M1.4X2.5), SPECIAL HEAD |
| * 761           | X-3950-358-4    | TG1 ASSY                       |
| 762             | 3-059-156-01    | SPRING (TENSION REGULATOR)     |
| 763             | X-3950-365-2    | TABLE ASSY, S REEL             |

| <u>Ref. No.</u> | <u>Part No.</u> | <u>Description</u>                   |
|-----------------|-----------------|--------------------------------------|
| 764             | A-7094-819-A    | TG7 BLOCK ASSY                       |
| 765             | 3-059-165-01    | SPRING (TG7 RETURN), TORSION         |
| 766             | X-3950-359-1    | ARM ASSY, PINCH                      |
| 767             | 3-059-161-01    | SPRING (PINCH RETURN), TORSION       |
| 768             | 3-059-170-01    | BRAKE (T)                            |
| 769             | 3-059-171-01    | GEAR (T), BRAKE                      |
| 770             | 3-059-172-01    | SPRING (T), BRAKE                    |
| D901            | 8-719-078-71    | DIODE LN57A.SO (TAPE LED)            |
| H901            | 8-719-067-74    | ELEMENT, HOLE HW-105A-CDE-T (S REEL) |
| H902            | 8-719-067-74    | ELEMENT, HOLE HW-105A-CDE-T (T REEL) |
| Q901            | 8-729-028-71    | TRANSISTOR PN166.SO (TAPE END)       |
| Q902            | 8-729-028-71    | TRANSISTOR PN166.SO (TAPE TOP)       |
| S903            | 1-572-288-11    | SWITCH, PUSH (CC DOWN)               |

## 5-1-14. MECHANISM CHASSIS BLOCK ASSEMBLY

ns : not supplied

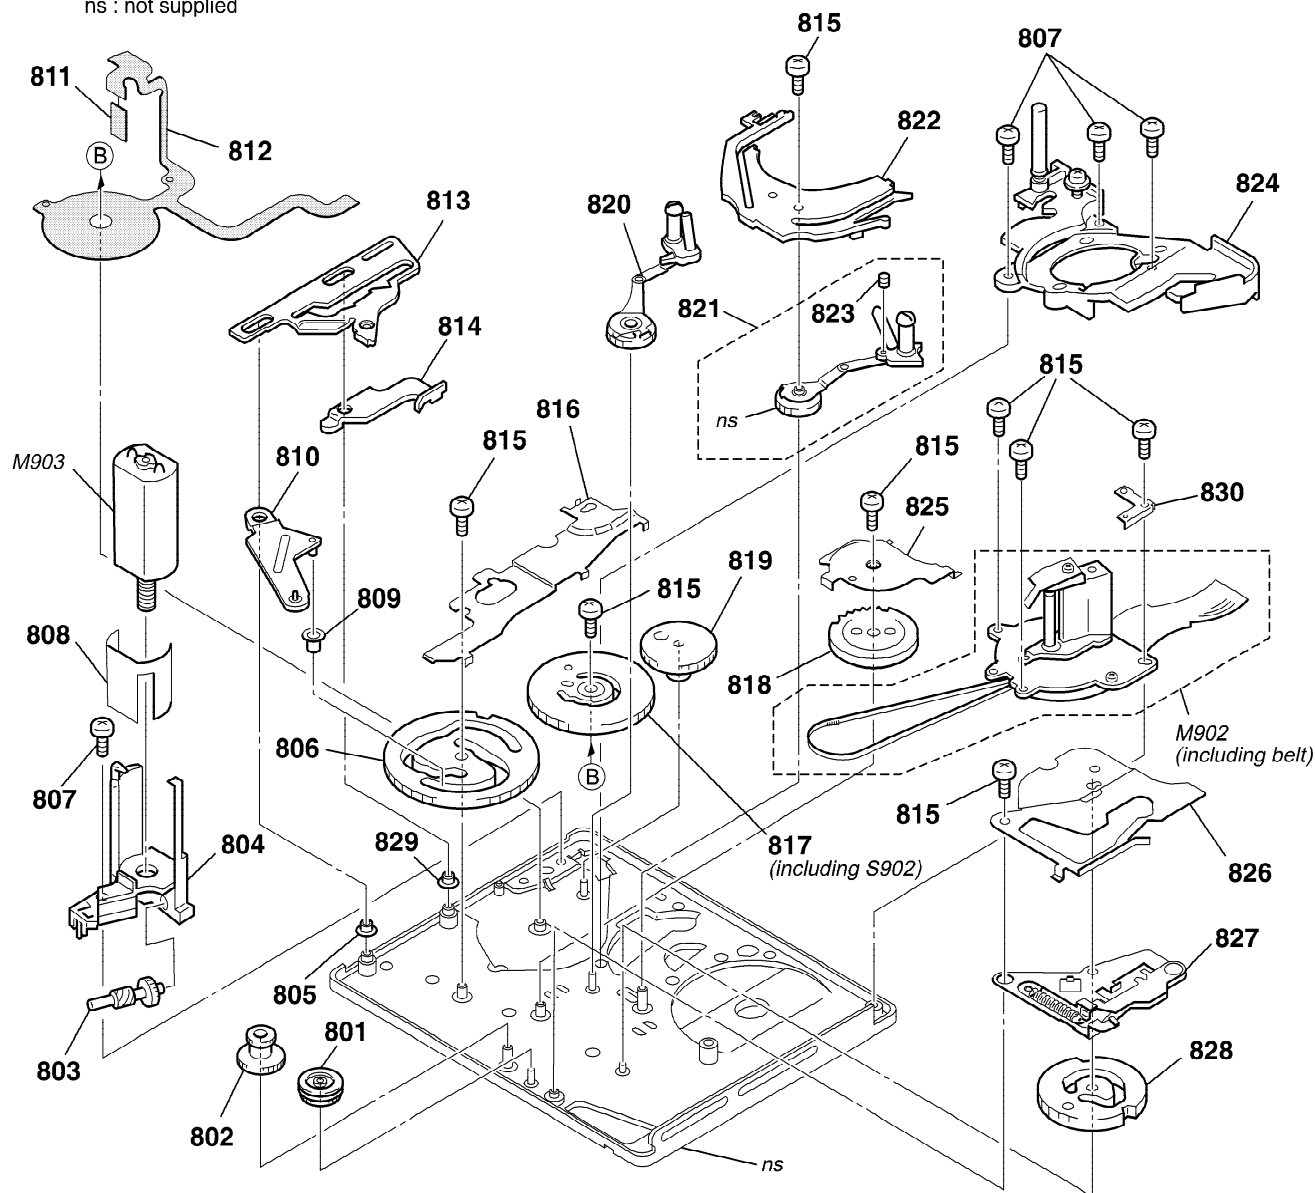

| Ref. No. | Part No.     | Description                    |
|----------|--------------|--------------------------------|
| 801      | 3-059-211-01 | GEAR, CONVERSION               |
| 802      | 3-059-220-01 | GEAR, RELAY                    |
| 803      | 3-059-187-01 | SHAFT, WORM                    |
| 804      | 3-059-186-02 | HOLDER, MOTOR                  |
| 805      | 3-060-002-01 | ROLLER, LS GUIDE               |
| 806      | 3-059-189-01 | GEAR (A), CAM                  |
| 807      | 3-704-197-21 | SCREW (M1.4X2.5), SPECIAL HEAD |
| 808      | 3-059-225-01 | SHIELD, MOTOR                  |
| 809      | 3-059-191-01 | ROLLER, LS                     |
| 810      | 3-059-190-01 | ARM, LS                        |
| 811      | 1-677-049-11 | FP-228 FLEXIBLE                |
| 812      | 1-677-084-11 | FP-100 FLEXIBLE                |
| 813      | 3-059-149-01 | SLIDER, TG1 CAM                |
| 814      | 3-059-148-01 | ARM, TG1 DRIVING               |
| 815      | 3-703-816-14 | SCREW (M1.4)                   |
| 816      | 3-059-117-01 | COVER (A), GEAR                |

| Ref. No. | Part No.     | Description                     |
|----------|--------------|---------------------------------|
| 817      | X-3950-367-1 | GEAR ASSY, MODE                 |
| 818      | 3-059-139-01 | GEAR, GL DRIVING                |
| 819      | 3-059-188-01 | GEAR, DECELERATION              |
| 820      | A-7094-818-A | COASTER (S) BLOCK ASSY          |
| 821      | A-7094-817-A | COASTER (T) BLOCK ASSY          |
| 822      | 3-059-126-01 | RAIL, GUIDE                     |
| 823      | 3-962-914-01 | SCREW (M1.4X2)                  |
| 824      | A-7094-822-A | DRUM BASE BLOCK ASSY            |
| 825      | 3-059-118-01 | COVER (B), GEAR                 |
| 826      | 3-059-083-01 | COVER (C), GEAR                 |
| 827      | X-3950-368-1 | ARM ASSY, PINCH DRIVING         |
| 828      | 3-059-192-01 | GEAR (B), CAM                   |
| 829      | 3-063-355-01 | ROLLER (S1), LS GUIDE           |
| 830      | 3-065-202-01 | SUPPORT, TG7                    |
| M902     | 8-835-685-01 | MOTOR, DC SCD18A/C-NP (CAPSTAN) |
| M903     | A-7094-823-A | MOTOR BLOCK ASSY, L (LOADING)   |

## 5-2. ELECTRICAL PARTS LIST

### NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- CAPACITORS:  
uF:  $\mu$ F

- COILS  
uH:  $\mu$ H
- RESISTORS  
All resistors are in ohms.  
METAL: metal-film resistor  
METAL OXIDE: Metal Oxide-film resistor  
F: nonflammable
- SEMICONDUCTORS  
In each case, u:  $\mu$ , for example:  
uA...:  $\mu$ A..., uPA...,  $\mu$ PA...,  
uPB...,  $\mu$ PB..., uPC...,  $\mu$ PC...,  
uPD...,  $\mu$ PD...

When indicating parts by reference number, please include the board name.

The components identified by mark  $\Delta$  or dotted line with mark  $\Delta$  are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque  $\Delta$  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- Abbreviation  
CND : Canadian model

| Ref. No. | Part No.     | Description                                                                                     |
|----------|--------------|-------------------------------------------------------------------------------------------------|
|          | A-7078-335-A | CD-389 BOARD, COMPLETE<br>*****<br>(IC100,101 and 105 are not included in this complete board.) |
|          |              | < CAPACITOR >                                                                                   |
| C102     | 1-115-339-11 | CERAMIC CHIP 0.1uF 10% 50V                                                                      |
| C103     | 1-115-339-11 | CERAMIC CHIP 0.1uF 10% 50V                                                                      |
| C104     | 1-127-895-91 | TANTAL. CHIP 22uF 20% 4V                                                                        |
| C105     | 1-164-943-11 | CERAMIC CHIP 0.01uF 10% 16V                                                                     |
| C106     | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V                                                                      |
| C107     | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V                                                                      |
| C108     | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V                                                                      |
| C109     | 1-162-970-11 | CERAMIC CHIP 0.01uF 10% 25V                                                                     |
| C110     | 1-162-970-11 | CERAMIC CHIP 0.01uF 10% 25V                                                                     |
| C111     | 1-107-826-11 | CERAMIC CHIP 0.1uF 10% 16V                                                                      |
| C112     | 1-107-826-11 | CERAMIC CHIP 0.1uF 10% 16V                                                                      |
| C113     | 1-104-851-11 | TANTAL. CHIP 10uF 20% 10V                                                                       |
| C114     | 1-104-851-11 | TANTAL. CHIP 10uF 20% 10V                                                                       |
| C115     | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V                                                                      |
| C116     | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V                                                                      |
| C117     | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V                                                                      |
| C118     | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V                                                                      |
| C119     | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V                                                                      |
| C120     | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V                                                                      |
| C121     | 1-107-826-11 | CERAMIC CHIP 0.1uF 10% 16V                                                                      |
| C122     | 1-162-970-11 | CERAMIC CHIP 0.01uF 10% 25V                                                                     |
| C123     | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V                                                                      |
| C124     | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V                                                                      |
| C125     | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V                                                                      |
| C126     | 1-164-943-11 | CERAMIC CHIP 0.01uF 10% 16V                                                                     |
| C127     | 1-164-943-11 | CERAMIC CHIP 0.01uF 10% 16V                                                                     |
| C128     | 1-127-895-91 | TANTAL. CHIP 22uF 20% 4V                                                                        |
| C129     | 1-127-895-91 | TANTAL. CHIP 22uF 20% 4V                                                                        |
| C130     | 1-115-339-11 | CERAMIC CHIP 0.1uF 10% 50V                                                                      |
| C131     | 1-104-851-11 | TANTAL. CHIP 10uF 20% 10V                                                                       |
|          |              | < CONNECTOR >                                                                                   |
| CN100    | 1-784-938-21 | CONNECTOR, BOARD TO BOARD 60P                                                                   |
|          |              | < IC >                                                                                          |
| IC100    | A-7012-866-A | PRISM BLOCK(ZGDSY2)(CCD IMAGER)(SERVICE)                                                        |
| IC101    | A-7012-866-A | PRISM BLOCK(ZGDSY2)(CCD IMAGER)(SERVICE)                                                        |
| IC102    | 6-701-755-01 | IC AD80017AJRURL                                                                                |
| IC103    | 6-701-755-01 | IC AD80017AJRURL                                                                                |
| IC104    | 6-701-755-01 | IC AD80017AJRURL                                                                                |
| IC105    | A-7012-866-A | PRISM BLOCK(ZGDSY2)(CCD IMAGER)(SERVICE)                                                        |

Be sure to read "Precautions upon replacing CCD imager" on page 4-12 when changing the CCD imager.

| Ref. No. | Part No.     | Description                     |
|----------|--------------|---------------------------------|
|          |              | < COIL >                        |
| L100     | 1-469-058-11 | INDUCTOR 22uH                   |
| L101     | 1-469-525-91 | INDUCTOR 10uH                   |
| L102     | 1-469-525-91 | INDUCTOR 10uH                   |
| L103     | 1-469-058-11 | INDUCTOR 22uH                   |
| L104     | 1-469-058-11 | INDUCTOR 22uH                   |
| L105     | 1-469-525-91 | INDUCTOR 10uH                   |
|          |              | < TRANSISTOR >                  |
| Q100     | 8-729-037-74 | TRANSISTOR UN9213J-(TX).SO      |
| Q101     | 8-729-037-74 | TRANSISTOR UN9213J-(TX).SO      |
| Q102     | 8-729-037-74 | TRANSISTOR UN9213J-(TX).SO      |
|          |              | < RESISTOR >                    |
| R100     | 1-218-990-11 | SHORT CHIP 0                    |
| R101     | 1-218-990-11 | SHORT CHIP 0                    |
| R102     | 1-218-990-11 | SHORT CHIP 0                    |
| R103     | 1-218-990-11 | SHORT CHIP 0                    |
| R104     | 1-218-990-11 | SHORT CHIP 0                    |
| R105     | 1-218-990-11 | SHORT CHIP 0                    |
| R106     | 1-218-941-81 | RES-CHIP 100 5% 1/16W           |
| R107     | 1-218-941-81 | RES-CHIP 100 5% 1/16W           |
| R108     | 1-218-941-81 | RES-CHIP 100 5% 1/16W           |
| R109     | 1-218-990-11 | SHORT CHIP 0                    |
| R110     | 1-218-990-11 | SHORT CHIP 0                    |
| R111     | 1-218-990-11 | SHORT CHIP 0                    |
|          |              |                                 |
|          | A-7078-514-A | CK-134 BOARD, COMPLETE<br>***** |
|          |              | < BATTERY >                     |
| BT5201   | 1-756-128-11 | BATTERY, LITHIUM (SECONDARY)    |
|          |              | < CAPACITOR >                   |
| C5201    | 1-135-957-91 | TANTAL. CHIP 10uF 20% 16V       |
| C5202    | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V      |
|          |              | < CONNECTOR >                   |
| CN5201   | 1-794-997-11 | PIN, CONNECTOR 20P              |
| CN5202   | 1-816-463-11 | PIN, CONNECTOR (PC BOARD) 10P   |
| CN5203   | 1-784-938-21 | CONNECTOR, BOARD TO BOARD 60P   |
| CN5204   | 1-794-375-21 | PIN, CONNECTOR 2P               |
| CN5205   | 1-816-684-11 | CONNECTOR, FFC/FPC (ZIF) 8P     |
| CN5206   | 1-766-336-21 | CONNECTOR, FFC/FPC 6P           |

**CAUTION :**  
Danger of explosion if battery is incorrectly replaced.  
Replace only with the same or equivalent type.

DSR-PDX10/PDX10P

CK-134

DB-016

| Ref. No.     | Part No.     | Description                                      |
|--------------|--------------|--------------------------------------------------|
| < DIODE >    |              |                                                  |
| D5201        | 8-719-056-61 | DIODE MAZS082008SO                               |
| D5202        | 8-719-062-16 | DIODE 01ZA8.2(TPL3)                              |
| D5203        | 8-719-062-16 | DIODE 01ZA8.2(TPL3)                              |
| D5204        | 8-719-056-61 | DIODE MAZS082008SO                               |
| D5205        | 8-719-062-16 | DIODE 01ZA8.2(TPL3)                              |
| D5206        | 8-719-062-16 | DIODE 01ZA8.2(TPL3)                              |
| D5207        | 8-719-062-16 | DIODE 01ZA8.2(TPL3)                              |
| D5208        | 8-719-062-16 | DIODE 01ZA8.2(TPL3)                              |
| D5209        | 8-719-062-16 | DIODE 01ZA8.2(TPL3)                              |
| < COIL >     |              |                                                  |
| L5201        | 1-419-387-21 | INDUCTOR 100uH                                   |
| L5202        | 1-419-387-21 | INDUCTOR 100uH                                   |
| L5203        | 1-419-387-21 | INDUCTOR 100uH                                   |
| L5204        | 1-419-387-21 | INDUCTOR 100uH                                   |
| < RESISTOR > |              |                                                  |
| R5208        | 1-218-990-11 | SHORT CHIP 0                                     |
| R5209        | 1-218-990-11 | SHORT CHIP 0                                     |
| R5210        | 1-218-990-11 | SHORT CHIP 0                                     |
| R5211        | 1-218-990-11 | SHORT CHIP 0                                     |
| R5212        | 1-218-990-11 | SHORT CHIP 0                                     |
| R5213        | 1-218-954-11 | RES-CHIP 1.2K 5% 1/16W                           |
| R5214        | 1-218-954-11 | RES-CHIP 1.2K 5% 1/16W                           |
| R5215        | 1-218-954-11 | RES-CHIP 1.2K 5% 1/16W                           |
| R5216        | 1-218-954-11 | RES-CHIP 1.2K 5% 1/16W                           |
| R5217        | 1-218-955-11 | RES-CHIP 1.5K 5% 1/16W                           |
| R5218        | 1-218-955-11 | RES-CHIP 1.5K 5% 1/16W                           |
| R5219        | 1-218-955-11 | RES-CHIP 1.5K 5% 1/16W                           |
| R5220        | 1-218-955-11 | RES-CHIP 1.5K 5% 1/16W                           |
| R5221        | 1-218-957-11 | RES-CHIP 2.2K 5% 1/16W                           |
| R5222        | 1-218-957-11 | RES-CHIP 2.2K 5% 1/16W                           |
| R5223        | 1-218-957-11 | RES-CHIP 2.2K 5% 1/16W                           |
| R5224        | 1-218-957-11 | RES-CHIP 2.2K 5% 1/16W                           |
| R5225        | 1-218-964-11 | RES-CHIP 8.2K 5% 1/16W                           |
| R5226        | 1-218-960-11 | RES-CHIP 3.9K 5% 1/16W                           |
| R5227        | 1-218-960-11 | RES-CHIP 3.9K 5% 1/16W                           |
| R5228        | 1-218-960-11 | RES-CHIP 3.9K 5% 1/16W                           |
| R5229        | 1-218-960-11 | RES-CHIP 3.9K 5% 1/16W                           |
| R5230        | 1-218-970-11 | RES-CHIP 27K 5% 1/16W                            |
| R5231        | 1-218-964-11 | RES-CHIP 8.2K 5% 1/16W                           |
| R5232        | 1-218-964-11 | RES-CHIP 8.2K 5% 1/16W                           |
| R5233        | 1-218-964-11 | RES-CHIP 8.2K 5% 1/16W                           |
| R5234        | 1-218-964-11 | RES-CHIP 8.2K 5% 1/16W                           |
| R5235        | 1-218-970-11 | RES-CHIP 27K 5% 1/16W                            |
| R5236        | 1-218-970-11 | RES-CHIP 27K 5% 1/16W                            |
| R5237        | 1-218-970-11 | RES-CHIP 27K 5% 1/16W                            |
| R5238        | 1-218-970-11 | RES-CHIP 27K 5% 1/16W                            |
| R5239        | 1-218-990-11 | SHORT CHIP 0                                     |
| R5240        | 1-218-990-11 | SHORT CHIP 0                                     |
| R5243        | 1-218-949-11 | RES-CHIP 470 5% 1/16W                            |
| R5244        | 1-218-990-11 | SHORT CHIP 0                                     |
| < SWITCH >   |              |                                                  |
| S5116        | 1-771-138-82 | SWITCH, KEY BOARD (DISPLAY/TOUCH PANEL)          |
| S5201        | 1-572-342-11 | SWITCH, SLIDE (AUTO LOCK/AUTO LOCK RELEASE/HOLD) |
| S5202        | 1-762-648-21 | SWITCH, SLIDE (ZEBRA OFF/70/100)                 |
| S5203        | 1-771-138-82 | SWITCH, KEY BOARD (TC/U-BIT)                     |
| S5204        | 1-571-787-31 | SWITCH, TACTILE (EDITSEARCH+)                    |

| Ref. No.                                                     | Part No.     | Description                       |
|--------------------------------------------------------------|--------------|-----------------------------------|
| S5205                                                        | 1-571-787-31 | SWITCH, TACTILE (EDITSEARCH+)     |
| S5206                                                        | 1-771-138-82 | SWITCH, KEY BOARD (STOP)          |
| S5207                                                        | 1-771-138-82 | SWITCH, KEY BOARD (REW)           |
| S5208                                                        | 1-771-138-82 | SWITCH, KEY BOARD (PLAY)          |
| S5209                                                        | 1-771-138-82 | SWITCH, KEY BOARD (FF)            |
| S5210                                                        | 1-771-138-82 | SWITCH, KEY BOARD (PAUSE)         |
| S5211                                                        | 1-771-138-82 | SWITCH, KEY BOARD (REC)           |
| S5212                                                        | 1-771-138-82 | SWITCH, KEY BOARD (REC)           |
| S5213                                                        | 1-771-138-82 | SWITCH, KEY BOARD (BARS)          |
| S5214                                                        | 1-771-138-82 | SWITCH, KEY BOARD (VOLUME+)       |
| S5215                                                        | 1-771-138-82 | SWITCH, KEY BOARD (VOLUME-)       |
| S5217                                                        | 1-771-138-82 | SWITCH, KEY BOARD (AUDIO DUB)     |
| S5218                                                        | 1-571-787-31 | SWITCH, TACTILE (BACK LIGHT)      |
| S5219                                                        | 1-571-787-31 | SWITCH, TACTILE (SPOT LIGHT)      |
| S5220                                                        | 1-771-138-82 | SWITCH, KEY BOARD (CUSTOM PRESET) |
| S5221                                                        | 1-771-138-82 | SWITCH, KEY BOARD (RESET)         |
| A-7078-398-A DB-016 (UDN) BOARD, COMPLETE (SERVICE) (PDX10)  |              |                                   |
| *****                                                        |              |                                   |
| A-7078-401-A DB-016 (UDP) BOARD, COMPLETE (SERVICE) (PDX10P) |              |                                   |
| *****                                                        |              |                                   |
| < CAPACITOR >                                                |              |                                   |
| C1501                                                        | 1-110-501-11 | CERAMIC CHIP 0.33uF 10% 16V       |
| C1503                                                        | 1-110-501-11 | CERAMIC CHIP 0.33uF 10% 16V       |
| C1504                                                        | 1-107-725-11 | CERAMIC CHIP 0.1uF 10% 16V        |
| C1506                                                        | 1-107-725-11 | CERAMIC CHIP 0.1uF 10% 16V        |
| C1507                                                        | 1-104-851-11 | TANTAL. CHIP 10uF 20% 10V         |
| C1508                                                        | 1-162-963-11 | CERAMIC CHIP 680PF 10% 50V        |
| C1509                                                        | 1-162-963-11 | CERAMIC CHIP 680PF 10% 50V        |
| C1510                                                        | 1-162-968-11 | CERAMIC CHIP 0.0047uF 10% 50V     |
| C1511                                                        | 1-162-968-11 | CERAMIC CHIP 0.0047uF 10% 50V     |
| C1512                                                        | 1-125-926-91 | TANTAL. CHIP 4.7uF 20% 6.3V       |
| C1516                                                        | 1-164-940-11 | CERAMIC CHIP 0.0033uF 10% 16V     |
| C1517                                                        | 1-119-923-81 | CERAMIC CHIP 0.047uF 10% 10V      |
| C1518                                                        | 1-107-819-11 | CERAMIC CHIP 0.022uF 10% 16V      |
| C1519                                                        | 1-119-923-81 | CERAMIC CHIP 0.047uF 10% 10V      |
| C1520                                                        | 1-117-919-11 | TANTAL. CHIP 10uF 20% 6.3V        |
| C1521                                                        | 1-164-940-11 | CERAMIC CHIP 0.0033uF 10% 16V     |
| C1522                                                        | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V        |
| C1523                                                        | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V        |
| C1524                                                        | 1-107-819-11 | CERAMIC CHIP 0.022uF 10% 16V      |
| C3401                                                        | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V        |
| C3402                                                        | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V        |
| C3403                                                        | 1-164-677-11 | CERAMIC CHIP 0.033uF 10% 16V      |
| C3404                                                        | 1-164-940-11 | CERAMIC CHIP 0.0033uF 10% 16V     |
| C3405                                                        | 1-127-895-91 | TANTAL. CHIP 22uF 20% 4V          |
| C3406                                                        | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V        |
| C3407                                                        | 1-107-826-11 | CERAMIC CHIP 0.1uF 10% 16V        |
| C3408                                                        | 1-125-837-91 | CERAMIC CHIP 1uF 10% 6.3V         |
| C3409                                                        | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V        |
| C3410                                                        | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V        |
| C3411                                                        | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V        |
| C3412                                                        | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V        |
| C3413                                                        | 1-164-943-11 | CERAMIC CHIP 0.01uF 10% 16V       |
| C3414                                                        | 1-117-863-11 | CERAMIC CHIP 0.47uF 10% 6.3V      |
| C3415                                                        | 1-162-970-11 | CERAMIC CHIP 0.01uF 10% 25V       |
| C3416                                                        | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V        |



| Ref. No. | Part No.     | Description   |         |     |      | Ref. No.                                                                     | Part No.     | Description   |          |     |                 |
|----------|--------------|---------------|---------|-----|------|------------------------------------------------------------------------------|--------------|---------------|----------|-----|-----------------|
| C3417    | 1-125-777-11 | CERAMIC CHIP  | 0.1uF   | 10% | 10V  | C6015                                                                        | 1-164-943-11 | CERAMIC CHIP  | 0.01uF   | 10% | 16V             |
| C3418    | 1-164-943-11 | CERAMIC CHIP  | 0.01uF  | 10% | 16V  | C6016                                                                        | 1-164-943-11 | CERAMIC CHIP  | 0.01uF   | 10% | 16V             |
| C3419    | 1-113-682-11 | TANTAL. CHIP  | 33uF    | 20% | 10V  | C6017                                                                        | 1-137-710-11 | CERAMIC CHIP  | 10uF     | 20% | 6.3V            |
| C3420    | 1-164-937-11 | CERAMIC CHIP  | 0.001uF | 10% | 50V  | C6018                                                                        | 1-125-777-11 | CERAMIC CHIP  | 0.1uF    | 10% | 10V             |
| C3421    | 1-125-777-11 | CERAMIC CHIP  | 0.1uF   | 10% | 10V  | C6019                                                                        | 1-125-777-11 | CERAMIC CHIP  | 0.1uF    | 10% | 10V             |
| C3422    | 1-125-777-11 | CERAMIC CHIP  | 0.1uF   | 10% | 10V  | C6020                                                                        | 1-125-837-91 | CERAMIC CHIP  | 1uF      | 10% | 6.3V            |
| C3423    | 1-164-943-11 | CERAMIC CHIP  | 0.01uF  | 10% | 16V  | C6021                                                                        | 1-125-837-91 | CERAMIC CHIP  | 1uF      | 10% | 6.3V            |
| C3424    | 1-164-874-11 | CERAMIC CHIP  | 100PF   | 5%  | 50V  | C6022                                                                        | 1-117-863-11 | CERAMIC CHIP  | 0.47uF   | 10% | 6.3V            |
| C3428    | 1-164-936-11 | CERAMIC CHIP  | 680PF   | 10% | 50V  | C6023                                                                        | 1-117-863-11 | CERAMIC CHIP  | 0.47uF   | 10% | 6.3V            |
| C3429    | 1-164-936-11 | CERAMIC CHIP  | 680PF   | 10% | 50V  | C6024                                                                        | 1-164-943-11 | CERAMIC CHIP  | 0.01uF   | 10% | 16V             |
| C3430    | 1-164-936-11 | CERAMIC CHIP  | 680PF   | 10% | 50V  | C6025                                                                        | 1-104-851-11 | TANTAL. CHIP  | 10uF     | 20% | 10V             |
| C3431    | 1-164-936-11 | CERAMIC CHIP  | 680PF   | 10% | 50V  | C6026                                                                        | 1-125-837-91 | CERAMIC CHIP  | 1uF      | 10% | 6.3V            |
| C3434    | 1-164-943-11 | CERAMIC CHIP  | 0.01uF  | 10% | 16V  | C6027                                                                        | 1-125-837-91 | CERAMIC CHIP  | 1uF      | 10% | 6.3V            |
| C3436    | 1-125-777-11 | CERAMIC CHIP  | 0.1uF   | 10% | 10V  | C6028                                                                        | 1-125-837-91 | CERAMIC CHIP  | 1uF      | 10% | 6.3V            |
| C3437    | 1-125-777-11 | CERAMIC CHIP  | 0.1uF   | 10% | 10V  | C6029                                                                        | 1-117-863-11 | CERAMIC CHIP  | 0.47uF   | 10% | 6.3V            |
| C3439    | 1-125-777-11 | CERAMIC CHIP  | 0.1uF   | 10% | 10V  | C6031                                                                        | 1-164-943-11 | CERAMIC CHIP  | 0.01uF   | 10% | 16V             |
| C3441    | 1-127-895-91 | TANTAL. CHIP  | 22uF    | 20% | 4V   | C6032                                                                        | 1-216-864-11 | METAL CHIP    | 0        | 5%  | 1/16W<br>(Note) |
| C3442    | 1-127-895-91 | TANTAL. CHIP  | 22uF    | 20% | 4V   | C6033                                                                        | 1-127-895-11 | TANTAL. CHIP  | 22uF     | 20% | 4V              |
| C3443    | 1-107-826-11 | CERAMIC CHIP  | 0.1uF   | 10% | 16V  | C6034                                                                        | 1-117-919-11 | TANTAL. CHIP  | 10uF     | 20% | 6.3V            |
| C3445    | 1-164-935-11 | CERAMIC CHIP  | 470PF   | 10% | 50V  | C6036                                                                        | 1-125-837-91 | CERAMIC CHIP  | 1uF      | 10% | 6.3V            |
| C3447    | 1-125-777-11 | CERAMIC CHIP  | 0.1uF   | 10% | 10V  | C6037                                                                        | 1-164-942-11 | CERAMIC CHIP  | 0.0068uF | 10% | 16V             |
| C3449    | 1-164-937-11 | CERAMIC CHIP  | 0.001uF | 10% | 50V  | C6038                                                                        | 1-125-837-91 | CERAMIC CHIP  | 1uF      | 10% | 6.3V            |
| C3450    | 1-125-777-11 | CERAMIC CHIP  | 0.1uF   | 10% | 10V  | C6039                                                                        | 1-164-942-11 | CERAMIC CHIP  | 0.0068uF | 10% | 16V             |
| C3451    | 1-117-863-11 | CERAMIC CHIP  | 0.47uF  | 10% | 6.3V | C6040                                                                        | 1-117-863-11 | CERAMIC CHIP  | 0.47uF   | 10% | 6.3V            |
| C3452    | 1-164-943-11 | CERAMIC CHIP  | 0.01uF  | 10% | 16V  | C6041                                                                        | 1-117-863-11 | CERAMIC CHIP  | 0.47uF   | 10% | 6.3V            |
| C3453    | 1-164-937-11 | CERAMIC CHIP  | 0.001uF | 10% | 50V  | C6042                                                                        | 1-125-837-91 | CERAMIC CHIP  | 1uF      | 10% | 6.3V            |
| C3454    | 1-128-964-91 | TANTAL. CHIP  | 100uF   | 20% | 6.3V | C6043                                                                        | 1-216-864-11 | METAL CHIP    | 0        | 5%  | 1/16W<br>(Note) |
| C3455    | 1-125-777-11 | CERAMIC CHIP  | 0.1uF   | 10% | 10V  | C6045                                                                        | 1-117-863-11 | CERAMIC CHIP  | 0.47uF   | 10% | 6.3V            |
| C3456    | 1-125-777-11 | CERAMIC CHIP  | 0.1uF   | 10% | 10V  | C6202                                                                        | 1-107-823-11 | CERAMIC CHIP  | 0.47uF   | 10% | 16V             |
| C3457    | 1-164-874-11 | CERAMIC CHIP  | 100PF   | 5%  | 50V  | C6203                                                                        | 1-137-710-11 | CERAMIC CHIP  | 10uF     | 20% | 6.3V            |
| C4201    | 1-135-157-21 | TANTALUM CHIP | 10uF    | 20% | 6.3V | C6204                                                                        | 1-104-851-11 | TANTAL. CHIP  | 10uF     | 20% | 10V             |
| C4202    | 1-125-777-11 | CERAMIC CHIP  | 0.1uF   | 10% | 10V  | C6205                                                                        | 1-125-926-91 | TANTAL. CHIP  | 4.7uF    | 20% | 6.3V            |
| C4205    | 1-164-943-11 | CERAMIC CHIP  | 0.01uF  | 10% | 16V  | C6206                                                                        | 1-117-919-11 | TANTAL. CHIP  | 10uF     | 20% | 6.3V            |
| C4208    | 1-125-777-11 | CERAMIC CHIP  | 0.1uF   | 10% | 10V  | C6207                                                                        | 1-117-863-11 | CERAMIC CHIP  | 0.47uF   | 10% | 6.3V            |
| C4209    | 1-164-739-11 | CERAMIC CHIP  | 560PF   | 5%  | 50V  | C6208                                                                        | 1-135-158-21 | TANTALUM CHIP | 15uF     | 20% | 4V              |
| C4210    | 1-125-777-11 | CERAMIC CHIP  | 0.1uF   | 10% | 10V  | C6209                                                                        | 1-164-943-11 | CERAMIC CHIP  | 0.01uF   | 10% | 16V             |
| C4211    | 1-100-502-11 | TANTAL. CHIP  | 3.3uF   | 20% | 25V  | C6210                                                                        | 1-137-710-11 | CERAMIC CHIP  | 10uF     | 20% | 6.3V            |
| C4212    | 1-164-357-11 | CERAMIC CHIP  | 0.001uF | 5%  | 50V  | C6211                                                                        | 1-125-837-91 | CERAMIC CHIP  | 1uF      | 10% | 6.3V            |
| C4213    | 1-107-826-11 | CERAMIC CHIP  | 0.1uF   | 10% | 16V  | C6212                                                                        | 1-117-863-11 | CERAMIC CHIP  | 0.47uF   | 10% | 6.3V            |
| C4214    | 1-164-862-11 | CERAMIC CHIP  | 33PF    | 5%  | 50V  | C6213                                                                        | 1-117-919-11 | TANTAL. CHIP  | 10uF     | 20% | 6.3V            |
| C4215    | 1-125-838-11 | CERAMIC CHIP  | 2.2uF   | 10% | 6.3V | C6214                                                                        | 1-117-863-11 | CERAMIC CHIP  | 0.47uF   | 10% | 6.3V            |
| C4216    | 1-125-838-11 | CERAMIC CHIP  | 2.2uF   | 10% | 6.3V | C6216                                                                        | 1-125-837-91 | CERAMIC CHIP  | 1uF      | 10% | 6.3V            |
| C4217    | 1-125-838-11 | CERAMIC CHIP  | 2.2uF   | 10% | 6.3V | C6217                                                                        | 1-117-863-11 | CERAMIC CHIP  | 0.47uF   | 10% | 6.3V            |
| C4218    | 1-115-566-11 | CERAMIC CHIP  | 4.7uF   | 10% | 10V  | C6301                                                                        | 1-125-837-91 | CERAMIC CHIP  | 1uF      | 10% | 6.3V            |
| C4219    | 1-164-505-11 | CERAMIC CHIP  | 2.2uF   |     | 16V  | C6302                                                                        | 1-125-837-91 | CERAMIC CHIP  | 1uF      | 10% | 6.3V            |
| C4220    | 1-164-943-11 | CERAMIC CHIP  | 0.01uF  | 10% | 16V  | C6303                                                                        | 1-125-777-11 | CERAMIC CHIP  | 0.1uF    | 10% | 10V             |
| C4221    | 1-164-943-11 | CERAMIC CHIP  | 0.01uF  | 10% | 16V  | C6304                                                                        | 1-125-777-11 | CERAMIC CHIP  | 0.1uF    | 10% | 10V             |
| C6001    | 1-117-919-11 | TANTAL. CHIP  | 10uF    | 20% | 6.3V | C6305                                                                        | 1-125-837-91 | CERAMIC CHIP  | 1uF      | 10% | 6.3V            |
| C6002    | 1-117-919-11 | TANTAL. CHIP  | 10uF    | 20% | 6.3V | C6306                                                                        | 1-125-777-11 | CERAMIC CHIP  | 0.1uF    | 10% | 10V             |
| C6003    | 1-117-863-11 | CERAMIC CHIP  | 0.47uF  | 10% | 6.3V | C6307                                                                        | 1-125-837-91 | CERAMIC CHIP  | 1uF      | 10% | 6.3V            |
| C6004    | 1-117-863-11 | CERAMIC CHIP  | 0.47uF  | 10% | 6.3V | C6308                                                                        | 1-104-851-11 | TANTAL. CHIP  | 10uF     | 20% | 10V             |
| C6005    | 1-107-823-11 | CERAMIC CHIP  | 0.47uF  | 10% | 16V  | C6313                                                                        | 1-125-837-91 | CERAMIC CHIP  | 1uF      | 10% | 6.3V            |
| C6006    | 1-137-710-11 | CERAMIC CHIP  | 10uF    | 20% | 6.3V | C6314                                                                        | 1-125-837-91 | CERAMIC CHIP  | 1uF      | 10% | 6.3V            |
| C6007    | 1-104-851-11 | TANTAL. CHIP  | 10uF    | 20% | 10V  | C6315                                                                        | 1-125-777-11 | CERAMIC CHIP  | 0.1uF    | 10% | 10V             |
| C6008    | 1-110-569-11 | TANTAL. CHIP  | 47uF    | 20% | 6.3V | C6318                                                                        | 1-117-919-11 | TANTAL. CHIP  | 10uF     | 20% | 6.3V            |
| C6009    | 1-110-569-11 | TANTAL. CHIP  | 47uF    | 20% | 6.3V | Note : Resistors are mounted to the location where C6032, C6043 are printed. |              |               |          |     |                 |
| C6010    | 1-125-926-91 | TANTAL. CHIP  | 4.7uF   | 20% | 6.3V |                                                                              |              |               |          |     |                 |
| C6011    | 1-117-919-11 | TANTAL. CHIP  | 10uF    | 20% | 6.3V |                                                                              |              |               |          |     |                 |
| C6013    | 1-117-863-11 | CERAMIC CHIP  | 0.47uF  | 10% | 6.3V |                                                                              |              |               |          |     |                 |
| C6014    | 1-135-158-21 | TANTALUM CHIP | 15uF    | 20% | 4V   |                                                                              |              |               |          |     |                 |

## DB-016

| Ref. No. | Part No.     | Description  |          |     |      |  |  |  |  |  |  |  |  |
|----------|--------------|--------------|----------|-----|------|--|--|--|--|--|--|--|--|
| C6319    | 1-117-919-11 | TANTAL. CHIP | 10uF     | 20% | 6.3V |  |  |  |  |  |  |  |  |
| C6320    | 1-117-919-11 | TANTAL. CHIP | 10uF     | 20% | 6.3V |  |  |  |  |  |  |  |  |
| C6321    | 1-164-935-11 | CERAMIC CHIP | 470PF    | 10% | 50V  |  |  |  |  |  |  |  |  |
| C6322    | 1-164-935-11 | CERAMIC CHIP | 470PF    | 10% | 50V  |  |  |  |  |  |  |  |  |
| C6323    | 1-119-750-11 | TANTAL. CHIP | 22uF     | 20% | 6.3V |  |  |  |  |  |  |  |  |
| C6324    | 1-104-851-11 | TANTAL. CHIP | 10uF     | 20% | 10V  |  |  |  |  |  |  |  |  |
| C6325    | 1-107-826-11 | CERAMIC CHIP | 0.1uF    | 10% | 16V  |  |  |  |  |  |  |  |  |
| C7001    | 1-164-943-11 | CERAMIC CHIP | 0.01uF   | 10% | 16V  |  |  |  |  |  |  |  |  |
| C7002    | 1-164-943-11 | CERAMIC CHIP | 0.01uF   | 10% | 16V  |  |  |  |  |  |  |  |  |
| C7004    | 1-125-838-11 | CERAMIC CHIP | 2.2uF    | 10% | 6.3V |  |  |  |  |  |  |  |  |
| C7005    | 1-125-838-11 | CERAMIC CHIP | 2.2uF    | 10% | 6.3V |  |  |  |  |  |  |  |  |
| C7006    | 1-125-838-11 | CERAMIC CHIP | 2.2uF    | 10% | 6.3V |  |  |  |  |  |  |  |  |
| C7007    | 1-164-943-11 | CERAMIC CHIP | 0.01uF   | 10% | 16V  |  |  |  |  |  |  |  |  |
| C7008    | 1-115-467-11 | CERAMIC CHIP | 0.22uF   | 10% | 10V  |  |  |  |  |  |  |  |  |
| C7009    | 1-125-837-91 | CERAMIC CHIP | 1uF      | 10% | 6.3V |  |  |  |  |  |  |  |  |
| C7010    | 1-125-837-91 | CERAMIC CHIP | 1uF      | 10% | 6.3V |  |  |  |  |  |  |  |  |
| C7011    | 1-164-677-11 | CERAMIC CHIP | 0.033uF  | 10% | 16V  |  |  |  |  |  |  |  |  |
| C7012    | 1-125-837-91 | CERAMIC CHIP | 1uF      | 10% | 6.3V |  |  |  |  |  |  |  |  |
| C7013    | 1-127-760-11 | CERAMIC CHIP | 4.7uF    | 10% | 6.3V |  |  |  |  |  |  |  |  |
| C7014    | 1-125-837-91 | CERAMIC CHIP | 1uF      | 10% | 6.3V |  |  |  |  |  |  |  |  |
| C7016    | 1-125-837-91 | CERAMIC CHIP | 1uF      | 10% | 6.3V |  |  |  |  |  |  |  |  |
| C7017    | 1-125-837-91 | CERAMIC CHIP | 1uF      | 10% | 6.3V |  |  |  |  |  |  |  |  |
| C7018    | 1-164-943-11 | CERAMIC CHIP | 0.01uF   | 10% | 16V  |  |  |  |  |  |  |  |  |
| C7019    | 1-164-388-91 | CERAMIC CHIP | 270PF    | 5%  | 50V  |  |  |  |  |  |  |  |  |
| C7020    | 1-164-937-11 | CERAMIC CHIP | 0.001uF  | 10% | 50V  |  |  |  |  |  |  |  |  |
| C7021    | 1-125-777-11 | CERAMIC CHIP | 0.1uF    | 10% | 10V  |  |  |  |  |  |  |  |  |
| C7023    | 1-125-838-11 | CERAMIC CHIP | 2.2uF    | 10% | 6.3V |  |  |  |  |  |  |  |  |
| C7024    | 1-125-838-11 | CERAMIC CHIP | 2.2uF    | 10% | 6.3V |  |  |  |  |  |  |  |  |
| C7025    | 1-164-943-11 | CERAMIC CHIP | 0.01uF   | 10% | 16V  |  |  |  |  |  |  |  |  |
| C7026    | 1-100-610-91 | TANTAL. CHIP | 220uF    | 20% | 5V   |  |  |  |  |  |  |  |  |
| C7027    | 1-100-610-91 | TANTAL. CHIP | 220uF    | 20% | 5V   |  |  |  |  |  |  |  |  |
| C7028    | 1-164-943-11 | CERAMIC CHIP | 0.01uF   | 10% | 16V  |  |  |  |  |  |  |  |  |
| C7029    | 1-127-760-11 | CERAMIC CHIP | 4.7uF    | 10% | 6.3V |  |  |  |  |  |  |  |  |
| C7031    | 1-164-858-11 | CERAMIC CHIP | 22PF     | 5%  | 50V  |  |  |  |  |  |  |  |  |
| C7200    | 1-125-777-11 | CERAMIC CHIP | 0.1uF    | 10% | 10V  |  |  |  |  |  |  |  |  |
| C7201    | 1-125-777-11 | CERAMIC CHIP | 0.1uF    | 10% | 10V  |  |  |  |  |  |  |  |  |
| C8000    | 1-107-819-11 | CERAMIC CHIP | 0.022uF  | 10% | 16V  |  |  |  |  |  |  |  |  |
| C8001    | 1-125-777-11 | CERAMIC CHIP | 0.1uF    | 10% | 10V  |  |  |  |  |  |  |  |  |
| C8002    | 1-164-937-11 | CERAMIC CHIP | 0.001uF  | 10% | 50V  |  |  |  |  |  |  |  |  |
| C8003    | 1-164-943-11 | CERAMIC CHIP | 0.01uF   | 10% | 16V  |  |  |  |  |  |  |  |  |
| C8004    | 1-107-819-11 | CERAMIC CHIP | 0.022uF  | 10% | 16V  |  |  |  |  |  |  |  |  |
| C8005    | 1-164-937-11 | CERAMIC CHIP | 0.001uF  | 10% | 50V  |  |  |  |  |  |  |  |  |
| C8006    | 1-164-937-11 | CERAMIC CHIP | 0.001uF  | 10% | 50V  |  |  |  |  |  |  |  |  |
| C8007    | 1-107-819-11 | CERAMIC CHIP | 0.022uF  | 10% | 16V  |  |  |  |  |  |  |  |  |
| C8008    | 1-164-941-11 | CERAMIC CHIP | 0.0047uF | 10% | 16V  |  |  |  |  |  |  |  |  |
| C8009    | 1-107-819-11 | CERAMIC CHIP | 0.022uF  | 10% | 16V  |  |  |  |  |  |  |  |  |
| C8010    | 1-107-819-11 | CERAMIC CHIP | 0.022uF  | 10% | 16V  |  |  |  |  |  |  |  |  |
| C8011    | 1-125-777-11 | CERAMIC CHIP | 0.1uF    | 10% | 10V  |  |  |  |  |  |  |  |  |
| C8012    | 1-164-937-11 | CERAMIC CHIP | 0.001uF  | 10% | 50V  |  |  |  |  |  |  |  |  |
| C8013    | 1-164-937-11 | CERAMIC CHIP | 0.001uF  | 10% | 50V  |  |  |  |  |  |  |  |  |
| C8014    | 1-119-923-81 | CERAMIC CHIP | 0.047uF  | 10% | 10V  |  |  |  |  |  |  |  |  |
| C8016    | 1-164-874-11 | CERAMIC CHIP | 100PF    | 5%  | 50V  |  |  |  |  |  |  |  |  |
| C8017    | 1-119-923-81 | CERAMIC CHIP | 0.047uF  | 10% | 10V  |  |  |  |  |  |  |  |  |
| C8018    | 1-119-923-81 | CERAMIC CHIP | 0.047uF  | 10% | 10V  |  |  |  |  |  |  |  |  |
| C8019    | 1-104-913-11 | TANTAL. CHIP | 10uF     | 20% | 16V  |  |  |  |  |  |  |  |  |
| C8020    | 1-125-777-11 | CERAMIC CHIP | 0.1uF    | 10% | 10V  |  |  |  |  |  |  |  |  |
| C8021    | 1-104-913-11 | TANTAL. CHIP | 10uF     | 20% | 16V  |  |  |  |  |  |  |  |  |
| C8022    | 1-107-826-11 | CERAMIC CHIP | 0.1uF    | 10% | 16V  |  |  |  |  |  |  |  |  |
| C8023    | 1-104-913-11 | TANTAL. CHIP | 10uF     | 20% | 16V  |  |  |  |  |  |  |  |  |
| C8024    | 1-119-751-11 | TANTAL. CHIP | 22uF     | 20% | 16V  |  |  |  |  |  |  |  |  |
| C8025    | 1-119-923-81 | CERAMIC CHIP | 0.047uF  | 10% | 10V  |  |  |  |  |  |  |  |  |
| C8026    | 1-119-751-11 | TANTAL. CHIP | 22uF     | 20% | 16V  |  |  |  |  |  |  |  |  |
| C8027    | 1-119-923-81 | CERAMIC CHIP | 0.047uF  | 10% | 10V  |  |  |  |  |  |  |  |  |
| C8028    | 1-107-682-11 | CERAMIC CHIP | 1uF      | 10% | 16V  |  |  |  |  |  |  |  |  |
| C8029    | 1-115-566-11 | CERAMIC CHIP | 4.7uF    | 10% | 10V  |  |  |  |  |  |  |  |  |
| C8030    | 1-115-566-11 | CERAMIC CHIP | 4.7uF    | 10% | 10V  |  |  |  |  |  |  |  |  |
| C8031    | 1-115-566-11 | CERAMIC CHIP | 4.7uF    | 10% | 10V  |  |  |  |  |  |  |  |  |
| C8032    | 1-115-566-11 | CERAMIC CHIP | 4.7uF    | 10% | 10V  |  |  |  |  |  |  |  |  |
| C8033    | 1-115-566-11 | CERAMIC CHIP | 4.7uF    | 10% | 10V  |  |  |  |  |  |  |  |  |
| C8034    | 1-115-566-11 | CERAMIC CHIP | 4.7uF    | 10% | 10V  |  |  |  |  |  |  |  |  |
| C8035    | 1-115-566-11 | CERAMIC CHIP | 4.7uF    | 10% | 10V  |  |  |  |  |  |  |  |  |
| C8036    | 1-109-982-11 | CERAMIC CHIP | 1uF      | 10% | 10V  |  |  |  |  |  |  |  |  |
| C8037    | 1-109-982-11 | CERAMIC CHIP | 1uF      | 10% | 10V  |  |  |  |  |  |  |  |  |
| C8038    | 1-127-760-11 | CERAMIC CHIP | 4.7uF    | 10% | 6.3V |  |  |  |  |  |  |  |  |
| C8039    | 1-127-760-11 | CERAMIC CHIP | 4.7uF    | 10% | 6.3V |  |  |  |  |  |  |  |  |
| C8040    | 1-127-760-11 | CERAMIC CHIP | 4.7uF    | 10% | 6.3V |  |  |  |  |  |  |  |  |
| C8041    | 1-127-760-11 | CERAMIC CHIP | 4.7uF    | 10% | 6.3V |  |  |  |  |  |  |  |  |
| C8042    | 1-127-760-11 | CERAMIC CHIP | 4.7uF    | 10% | 6.3V |  |  |  |  |  |  |  |  |
| C8043    | 1-127-760-11 | CERAMIC CHIP | 4.7uF    | 10% | 6.3V |  |  |  |  |  |  |  |  |
| C8044    | 1-127-760-11 | CERAMIC CHIP | 4.7uF    | 10% | 6.3V |  |  |  |  |  |  |  |  |
| C8045    | 1-127-760-11 | CERAMIC CHIP | 4.7uF    | 10% | 6.3V |  |  |  |  |  |  |  |  |
| C8046    | 1-127-861-11 | CERAMIC CHIP | 2.2uF    | 10% | 16V  |  |  |  |  |  |  |  |  |
| C8047    | 1-127-861-11 | CERAMIC CHIP | 2.2uF    | 10% | 16V  |  |  |  |  |  |  |  |  |
| C8048    | 1-125-777-11 | CERAMIC CHIP | 0.1uF    | 10% | 10V  |  |  |  |  |  |  |  |  |
| C8049    | 1-125-777-11 | CERAMIC CHIP | 0.1uF    | 10% | 10V  |  |  |  |  |  |  |  |  |
| C8050    | 1-104-851-11 | TANTAL. CHIP | 10uF     | 20% | 10V  |  |  |  |  |  |  |  |  |
| C8052    | 1-117-919-11 | TANTAL. CHIP | 10uF     | 20% | 6.3V |  |  |  |  |  |  |  |  |
| C8053    | 1-117-919-11 | TANTAL. CHIP | 10uF     | 20% | 6.3V |  |  |  |  |  |  |  |  |
| C8054    | 1-127-861-11 | CERAMIC CHIP | 2.2uF    | 10% | 16V  |  |  |  |  |  |  |  |  |
| C8055    | 1-117-919-11 | TANTAL. CHIP | 10uF     | 20% | 6.3V |  |  |  |  |  |  |  |  |
| C8056    | 1-117-919-11 | TANTAL. CHIP | 10uF     | 20% | 6.3V |  |  |  |  |  |  |  |  |
| C8057    | 1-131-860-91 | TANTAL. CHIP | 4.7uF    | 20% | 10V  |  |  |  |  |  |  |  |  |
| C8058    | 1-117-919-11 | TANTAL. CHIP | 10uF     | 20% | 6.3V |  |  |  |  |  |  |  |  |
| C8059    | 1-125-777-11 | CERAMIC CHIP | 0.1uF    | 10% | 10V  |  |  |  |  |  |  |  |  |
| C8060    | 1-131-860-91 | TANTAL. CHIP | 4.7uF    | 20% | 10V  |  |  |  |  |  |  |  |  |
| C8061    | 1-117-919-11 | TANTAL. CHIP | 10uF     | 20% | 6.3V |  |  |  |  |  |  |  |  |
| C8062    | 1-131-860-91 | TANTAL. CHIP | 4.7uF    | 20% | 10V  |  |  |  |  |  |  |  |  |
| C8063    | 1-110-569-11 | TANTAL. CHIP | 47uF     | 20% | 6.3V |  |  |  |  |  |  |  |  |
| C8064    | 1-131-860-91 | TANTAL. CHIP | 4.7uF    | 20% | 10V  |  |  |  |  |  |  |  |  |
| C8065    | 1-117-919-11 | TANTAL. CHIP | 10uF     | 20% | 6.3V |  |  |  |  |  |  |  |  |
| C8066    | 1-117-919-11 | TANTAL. CHIP | 10uF     | 20% | 6.3V |  |  |  |  |  |  |  |  |
| C8067    | 1-119-751-11 | TANTAL. CHIP | 22uF     | 20% | 16V  |  |  |  |  |  |  |  |  |
| C8068    | 1-131-860-91 | TANTAL. CHIP | 4.7uF    | 20% | 10V  |  |  |  |  |  |  |  |  |
| C8070    | 1-119-751-11 | TANTAL. CHIP | 22uF     | 20% | 16V  |  |  |  |  |  |  |  |  |
| C8071    | 1-117-919-11 | TANTAL. CHIP | 10uF     | 20% | 6.3V |  |  |  |  |  |  |  |  |
| C8072    | 1-127-861-11 | CERAMIC CHIP | 2.2uF    | 10% | 16V  |  |  |  |  |  |  |  |  |
| C8073    | 1-117-919-11 | TANTAL. CHIP | 10uF     | 20% | 6.3V |  |  |  |  |  |  |  |  |
| C8074    | 1-127-861-11 | CERAMIC CHIP | 2.2uF    | 10% | 16V  |  |  |  |  |  |  |  |  |
| C8075    | 1-107-690-11 | TANTAL. CHIP | 6.8uF    | 20% | 35V  |  |  |  |  |  |  |  |  |
| C8076    | 1-125-777-11 | CERAMIC CHIP | 0.1uF    | 10% | 10V  |  |  |  |  |  |  |  |  |
| C8077    | 1-127-861-11 | CERAMIC CHIP | 2.2uF    | 10% | 16V  |  |  |  |  |  |  |  |  |
| C8078    | 1-115-566-11 | CERAMIC CHIP | 4.7uF    | 10% | 10V  |  |  |  |  |  |  |  |  |
| C8079    | 1-115-566-11 | CERAMIC CHIP | 4.7uF    | 10% | 10V  |  |  |  |  |  |  |  |  |
| C8080    | 1-107-826-11 | CERAMIC CHIP | 0.1uF    | 10% | 16V  |  |  |  |  |  |  |  |  |
| C8081    | 1-127-895-91 | TANTAL. CHIP | 22uF     | 20% | 4V   |  |  |  |  |  |  |  |  |
| C8082    | 1-131-860-91 | TANTAL. CHIP | 4.7uF    | 20% | 10V  |  |  |  |  |  |  |  |  |

| Ref. No.         | Part No.     | Description                    |
|------------------|--------------|--------------------------------|
| < CONNECTOR >    |              |                                |
| CN1004           | 1-784-423-21 | CONNECTOR, FFC/FPC (ZIF) 39P   |
| CN1010           | 1-785-902-21 | CONNECTOR, FFC/FPC (ZIF) 23P   |
| CN1501           | 1-779-329-11 | CONNECTOR, FFC/FPC 10P         |
| CN7200           | 1-691-372-21 | CONNECTOR, FFC/FPC 8P          |
| CN7201           | 1-794-766-21 | CONNECTOR, FFC/FPC (LIF) 6P    |
| CN7202           | 1-573-806-21 | PIN, CONNECTOR (1.5MM) (SMD)6P |
| CN7204           | 1-794-764-11 | CONNECTOR, FPC (ZIF) 21P       |
| CN7205           | 1-784-421-11 | CONNECTOR, FFC/FPC (ZIF) 27P   |
| CN7206           | 1-785-969-21 | CONNECTOR, BOARD TO BOARD 100P |
| CN7207           | 1-815-854-11 | CONNECTOR, BOARD TO BOARD 80P  |
| CN7211           | 1-784-420-11 | CONNECTOR, FFC/FPC (ZIF) 21P   |
| < DIODE >        |              |                                |
| D2902            | 8-719-056-23 | DIODE MA2S111-(K8).SO          |
| D3401            | 8-719-077-54 | DIODE MA4L11100AS0             |
| D3402            | 8-719-075-62 | DIODE 1SS401(TE85L)            |
| D4201            | 8-719-084-46 | DIODE 1SV288(TPH3)             |
| D6001            | 8-719-056-85 | DIODE UDZSTE-178.2B            |
| D7200            | 8-719-062-16 | DIODE 01ZA8.2(TPL3)            |
| D7201            | 8-719-062-16 | DIODE 01ZA8.2(TPL3)            |
| D7202            | 8-719-056-85 | DIODE UDZSTE-178.2B            |
| D7203            | 8-719-062-16 | DIODE 01ZA8.2(TPL3)            |
| D7204            | 8-719-056-85 | DIODE UDZSTE-178.2B            |
| D7205            | 8-719-062-16 | DIODE 01ZA8.2(TPL3)            |
| D7206            | 8-719-062-16 | DIODE 01ZA8.2(TPL3)            |
| D7207            | 8-719-062-16 | DIODE 01ZA8.2(TPL3)            |
| D7208            | 8-719-062-16 | DIODE 01ZA8.2(TPL3)            |
| D7209            | 8-719-056-85 | DIODE UDZSTE-178.2B            |
| D7210            | 8-719-056-85 | DIODE UDZSTE-178.2B            |
| D8000            | 8-719-077-48 | DIODE MA4L72800AS0             |
| D8001            | 8-719-077-57 | DIODE DF3A8.2C(TPL3)           |
| D8002            | 8-719-077-74 | DIODE MA2S784008S0             |
| D8003            | 8-719-058-24 | DIODE RB501V-40TE-17           |
| D8004            | 8-719-076-80 | DIODE SBS004-TL                |
| < FUSE >         |              |                                |
| △F8000           | 1-576-406-21 | FUSE, MICRO (1.4A/32V) (1608)  |
| △F8001           | 1-576-406-21 | FUSE, MICRO (1.4A/32V) (1608)  |
| △F8002           | 1-576-406-21 | FUSE, MICRO (1.4A/32V) (1608)  |
| △F8003           | 1-576-406-21 | FUSE, MICRO (1.4A/32V) (1608)  |
| △F8004           | 1-576-406-21 | FUSE, MICRO (1.4A/32V) (1608)  |
| △F8005           | 1-576-406-21 | FUSE, MICRO (1.4A/32V) (1608)  |
| △F8006           | 1-576-406-21 | FUSE, MICRO (1.4A/32V) (1608)  |
| < FERRITE BEAD > |              |                                |
| FB4201           | 1-469-676-22 | FERRITE 0uH                    |
| FB6001           | 1-469-676-22 | FERRITE 0uH                    |
| FB6201           | 1-469-676-22 | FERRITE 0uH                    |
| FB7001           | 1-469-676-22 | FERRITE 0uH                    |
| < IC >           |              |                                |
| IC1501           | 8-759-359-49 | IC NJM3414AV(TE2)              |
| IC1502           | 8-759-359-49 | IC NJM3414AV(TE2)              |
| IC1503           | 8-759-058-45 | IC NJM3403AV(TE2)              |
| IC1504           | 8-759-058-45 | IC NJM3403AV(TE2)              |
| IC1505           | 8-759-478-92 | IC TC7SET04FU(TE85R)           |

| Ref. No. | Part No.     | Description           |
|----------|--------------|-----------------------|
| IC1506   | 8-759-478-92 | IC TC7SET04FU(TE85R)  |
| IC3401   | 1-804-268-11 | IC WTGA-NJM12902C     |
| IC3402   | 6-701-957-01 | IC M50230FP-DF0T      |
| IC3403   | 1-804-268-11 | IC WTGA-NJM12902C     |
| IC3404   | 8-759-662-18 | IC CXD9571R-TEB       |
| IC3405   | 1-804-268-11 | IC WTGA-NJM12902C     |
| IC3406   | 6-700-709-01 | IC NJU7241F31(TE2)    |
| IC4201   | 8-752-100-95 | IC CXA3289AR-T4       |
| IC4202   | 8-752-405-57 | IC WTGA-NJM12902C     |
| IC6001   | 8-759-826-24 | IC LA74208GL-TBM      |
| IC6002   | 8-759-833-99 | IC TC74HC4052AFT(EL)  |
| IC6004   | 8-759-826-26 | IC AK4550VL-L         |
| IC6201   | 8-759-826-24 | IC LA74208GL-TBM      |
| IC6301   | 6-701-112-01 | IC DS1801E-02V-T/R    |
| IC6302   | 6-702-589-01 | IC M52065FP-70BD      |
| IC6303   | 8-759-111-56 | IC uPC4572G2-E2       |
| IC6304   | 8-759-710-79 | IC NJM2107F-TE2       |
| IC6305   | 8-759-675-54 | IC TC7W53FK(TE85R)    |
| IC7001   | 6-701-656-01 | IC AN2225NBBTBA       |
| IC8000   | 6-700-019-01 | IC MB4499LGA-G-ER     |
| IC8001   | 8-759-387-30 | IC TA75S01F(T5RSONY1) |
| IC8002   | 6-700-709-01 | IC NJU7241F31(TE2)    |
| IC8004   | 6-700-711-01 | IC BA3986FV-E2        |
| < COIL > |              |                       |
| L1501    | 1-414-754-11 | INDUCTOR 10uH         |
| L3401    | 1-469-525-91 | INDUCTOR 10uH         |
| L3402    | 1-414-771-91 | INDUCTOR 10uH         |
| L3403    | 1-414-771-91 | INDUCTOR 10uH         |
| L4201    | 1-414-771-91 | INDUCTOR 10uH         |
| L4202    | 1-412-947-11 | INDUCTOR 4.7uH        |
| L4203    | 1-414-771-91 | INDUCTOR 10uH         |
| L6001    | 1-400-137-11 | INDUCTOR 10uH         |
| L6002    | 1-400-137-11 | INDUCTOR 10uH         |
| L6201    | 1-414-771-91 | INDUCTOR 10uH         |
| L7001    | 1-469-525-91 | INDUCTOR 10uH         |
| L7002    | 1-414-771-91 | INDUCTOR 10uH         |
| L7003    | 1-412-937-11 | INDUCTOR 0.68uH       |
| L7004    | 1-469-525-91 | INDUCTOR 10uH         |
| L8000    | 1-419-311-21 | INDUCTOR 100uH        |
| L8001    | 1-419-354-21 | INDUCTOR 22uH         |
| L8002    | 1-419-354-21 | INDUCTOR 22uH         |
| L8003    | 1-416-670-11 | INDUCTOR 33uH         |
| L8004    | 1-419-354-21 | INDUCTOR 22uH         |
| L8005    | 1-419-354-21 | INDUCTOR 22uH         |
| L8006    | 1-416-668-41 | INDUCTOR 10uH         |
| L8007    | 1-419-354-21 | INDUCTOR 22uH         |
| L8008    | 1-416-344-11 | INDUCTOR 10uH         |
| L8009    | 1-419-354-21 | INDUCTOR 22uH         |
| L8010    | 1-469-522-91 | INDUCTOR 1uH          |
| L8012    | 1-469-522-91 | INDUCTOR 1uH          |
| L8013    | 1-469-522-91 | INDUCTOR 1uH          |
| L8014    | 1-469-522-91 | INDUCTOR 1uH          |
| L8015    | 1-469-522-91 | INDUCTOR 1uH          |
| L8017    | 1-469-522-91 | INDUCTOR 1uH          |

**Note :**

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

**Note :**

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

DSR-PDX10/PDX10P

DB-016

| Ref. No.        | Part No.     | Description         |                     |
|-----------------|--------------|---------------------|---------------------|
| L8018           | 1-469-522-91 | INDUCTOR            | 1uH                 |
| L8019           | 1-414-770-91 | INDUCTOR            | 4.7uH               |
| L8020           | 1-469-522-91 | INDUCTOR            | 1uH                 |
| L8021           | 1-469-522-91 | INDUCTOR            | 1uH                 |
| L8022           | 1-469-522-91 | INDUCTOR            | 1uH                 |
| L8023           | 1-469-522-91 | INDUCTOR            | 1uH                 |
| L8024           | 1-469-522-91 | INDUCTOR            | 1uH                 |
| L8025           | 1-414-770-91 | INDUCTOR            | 4.7uH               |
| L8026           | 1-414-770-91 | INDUCTOR            | 4.7uH               |
| L8027           | 1-414-770-91 | INDUCTOR            | 4.7uH               |
| L8028           | 1-414-770-91 | INDUCTOR            | 4.7uH               |
| < LINE FILTER > |              |                     |                     |
| LF8000          | 1-411-957-11 | FILTER, COMMON MODE |                     |
| < TRANSISTOR >  |              |                     |                     |
| Q1501           | 8-729-042-26 | TRANSISTOR          | 2SB1462J-QR(K8).SO  |
| Q1502           | 8-729-037-74 | TRANSISTOR          | UN9213J-(K8).SO     |
| Q1503           | 8-729-037-76 | TRANSISTOR          | UN9215J-(K8).SO     |
| Q1504           | 8-729-013-31 | TRANSISTOR          | 2SA1588-OY-TE85L    |
| Q2907           | 8-729-013-31 | TRANSISTOR          | 2SA1588-OY-TE85L    |
| Q2908           | 8-729-050-93 | TRANSISTOR          | UNRL21500AS0        |
| Q3401           | 8-729-050-76 | TRANSISTOR          | EC3201C-PM-TL       |
| Q3402           | 8-729-042-26 | TRANSISTOR          | 2SB1462J-QR(K8).SO  |
| Q3403           | 8-729-037-74 | TRANSISTOR          | UN9213J-(K8).SO     |
| Q3404           | 8-729-050-76 | TRANSISTOR          | EC3201C-PM-TL       |
| Q3405           | 8-729-050-76 | TRANSISTOR          | EC3201C-PM-TL       |
| Q3406           | 8-729-050-76 | TRANSISTOR          | EC3201C-PM-TL       |
| Q6001           | 8-729-054-52 | TRANSISTOR          | RN1910FE(TPLR3)     |
| Q6002           | 8-729-054-52 | TRANSISTOR          | RN1910FE(TPLR3)     |
| Q6003           | 8-729-050-83 | TRANSISTOR          | UNRL11500AS0        |
| Q6004           | 8-729-050-91 | TRANSISTOR          | UNRL21300AS0        |
| Q6005           | 8-729-054-51 | TRANSISTOR          | RN2910FE(TPLR3)     |
| Q6006           | 8-729-054-52 | TRANSISTOR          | RN1910FE(TPLR3)     |
| Q6007           | 8-729-024-39 | TRANSISTOR          | 2SD1511-R/S(TX)     |
| Q6008           | 8-729-037-52 | TRANSISTOR          | 2SC4738F-Y/GR(TPL3) |
| Q6009           | 8-729-037-52 | TRANSISTOR          | 2SC4738F-Y/GR(TPL3) |
| Q6010           | 8-729-037-59 | TRANSISTOR          | UN9111J-(TX).SO     |
| Q6011           | 8-729-037-74 | TRANSISTOR          | UN9213J-(TX).SO     |
| Q7001           | 8-729-050-76 | TRANSISTOR          | EC3201C-PM-TL       |
| Q7002           | 8-729-050-81 | TRANSISTOR          | UNRL11300AS0        |
| Q7004           | 8-729-050-73 | TRANSISTOR          | 2SC5376C-B(TPL3)    |
| Q7005           | 8-729-050-73 | TRANSISTOR          | 2SC5376C-B(TPL3)    |
| Q7200           | 8-729-037-72 | TRANSISTOR          | UN9211J-(K8).SO     |
| Q8000           | 8-729-047-68 | TRANSISTOR          | SSM3K03FE(TPL3)     |
| Q8001           | 8-729-051-49 | TRANSISTOR          | TPC8305(TE12L)      |
| Q8002           | 8-729-804-41 | TRANSISTOR          | 2SB1122-ST-TD       |
| Q8003           | 8-729-050-91 | TRANSISTOR          | UNRL21300AS0        |
| Q8004           | 8-729-050-91 | TRANSISTOR          | UNRL21300AS0        |
| Q8005           | 8-729-050-91 | TRANSISTOR          | UNRL21300AS0        |
| Q8006           | 8-729-050-81 | TRANSISTOR          | UNRL11300AS0        |
| Q8007           | 8-729-050-81 | TRANSISTOR          | UNRL11300AS0        |
| Q8008           | 6-550-171-01 | TRANSISTOR          | MCH3317-TL-E        |
| Q8009           | 6-550-171-01 | TRANSISTOR          | MCH3317-TL-E        |
| Q8010           | 6-550-171-01 | TRANSISTOR          | MCH3317-TL-E        |
| Q8011           | 6-550-171-01 | TRANSISTOR          | MCH3317-TL-E        |

| Ref. No.     | Part No.     | Description |                |      |       |
|--------------|--------------|-------------|----------------|------|-------|
| Q8012        | 6-550-171-01 | TRANSISTOR  | MCH3317-TL-E   |      |       |
| Q8013        | 6-550-171-01 | TRANSISTOR  | MCH3317-TL-E   |      |       |
| Q8014        | 6-550-171-01 | TRANSISTOR  | MCH3317-TL-E   |      |       |
| Q8015        | 8-729-056-72 | TRANSISTOR  | MCH5805-TL-E   |      |       |
| Q8016        | 6-550-171-01 | TRANSISTOR  | MCH3317-TL-E   |      |       |
| Q8017        | 8-729-023-89 | TRANSISTOR  | 2SJ305(TE85L)  |      |       |
| Q8018        | 8-729-023-89 | TRANSISTOR  | 2SJ305(TE85L)  |      |       |
| Q8019        | 8-729-056-01 | TRANSISTOR  | MCH3405-TL-E   |      |       |
| Q8020        | 8-729-056-02 | TRANSISTOR  | MCH5804-TL-E   |      |       |
| Q8021        | 8-729-056-02 | TRANSISTOR  | MCH5804-TL-E   |      |       |
| Q8022        | 8-729-056-02 | TRANSISTOR  | MCH5804-TL-E   |      |       |
| Q8023        | 8-729-056-02 | TRANSISTOR  | MCH5804-TL-E   |      |       |
| Q8024        | 8-729-056-02 | TRANSISTOR  | MCH5804-TL-E   |      |       |
| Q8025        | 8-729-056-02 | TRANSISTOR  | MCH5804-TL-E   |      |       |
| Q8026        | 8-729-056-02 | TRANSISTOR  | MCH5804-TL-E   |      |       |
| Q8027        | 8-729-056-02 | TRANSISTOR  | MCH5804-TL-E   |      |       |
| Q8028        | 8-729-051-49 | TRANSISTOR  | TPC8305(TE12L) |      |       |
| Q8029        | 8-729-050-76 | TRANSISTOR  | EC3201C-PM-TL  |      |       |
| Q8030        | 8-729-050-74 | TRANSISTOR  | EC3101C-PM-TL  |      |       |
| Q8031        | 8-729-050-76 | TRANSISTOR  | EC3201C-PM-TL  |      |       |
| Q8032        | 8-729-050-76 | TRANSISTOR  | EC3201C-PM-TL  |      |       |
| Q8033        | 8-729-050-74 | TRANSISTOR  | EC3101C-PM-TL  |      |       |
| Q8034        | 8-729-050-76 | TRANSISTOR  | EC3201C-PM-TL  |      |       |
| < RESISTOR > |              |             |                |      |       |
| R1501        | 1-208-719-11 | METAL CHIP  | 33K            | 0.5% | 1/16W |
| R1502        | 1-208-715-11 | METAL CHIP  | 22K            | 0.5% | 1/16W |
| R1503        | 1-218-985-11 | METAL CHIP  | 470K           | 0.5% | 1/16W |
| R1504        | 1-208-719-11 | METAL CHIP  | 33K            | 0.5% | 1/16W |
| R1505        | 1-208-719-11 | METAL CHIP  | 33K            | 0.5% | 1/16W |
| R1506        | 1-208-715-11 | METAL CHIP  | 22K            | 0.5% | 1/16W |
| R1507        | 1-218-985-11 | METAL CHIP  | 470K           | 0.5% | 1/16W |
| R1508        | 1-208-719-11 | METAL CHIP  | 33K            | 0.5% | 1/16W |
| R1509        | 1-208-927-11 | METAL CHIP  | 47K            | 0.5% | 1/16W |
| R1510        | 1-208-683-11 | METAL CHIP  | 1K             | 0.5% | 1/16W |
| R1511        | 1-208-927-11 | METAL CHIP  | 47K            | 0.5% | 1/16W |
| R1512        | 1-208-683-11 | METAL CHIP  | 1K             | 0.5% | 1/16W |
| R1513        | 1-218-977-11 | RES-CHIP    | 100K           | 5%   | 1/16W |
| R1514        | 1-218-977-11 | RES-CHIP    | 100K           | 5%   | 1/16W |
| R1515        | 1-218-979-11 | RES-CHIP    | 150K           | 5%   | 1/16W |
| R1516        | 1-218-979-11 | RES-CHIP    | 150K           | 5%   | 1/16W |
| R1517        | 1-218-977-11 | RES-CHIP    | 100K           | 5%   | 1/16W |
| R1518        | 1-218-977-11 | RES-CHIP    | 100K           | 5%   | 1/16W |
| R1519        | 1-208-927-11 | METAL CHIP  | 47K            | 0.5% | 1/16W |
| R1520        | 1-208-927-11 | METAL CHIP  | 47K            | 0.5% | 1/16W |
| R1523        | 1-208-939-11 | METAL CHIP  | 150K           | 0.5% | 1/16W |
| R1524        | 1-208-939-11 | METAL CHIP  | 150K           | 0.5% | 1/16W |
| R1525        | 1-208-715-11 | METAL CHIP  | 22K            | 0.5% | 1/16W |
| R1526        | 1-208-715-11 | METAL CHIP  | 22K            | 0.5% | 1/16W |
| R1527        | 1-208-715-11 | METAL CHIP  | 22K            | 0.5% | 1/16W |
| R1528        | 1-208-715-11 | METAL CHIP  | 22K            | 0.5% | 1/16W |
| R1529        | 1-218-973-11 | RES-CHIP    | 47K            | 5%   | 1/16W |
| R1530        | 1-218-973-11 | RES-CHIP    | 47K            | 5%   | 1/16W |
| R1531        | 1-218-973-11 | RES-CHIP    | 47K            | 5%   | 1/16W |
| R1532        | 1-218-973-11 | RES-CHIP    | 47K            | 5%   | 1/16W |
| R1533        | 1-218-973-11 | RES-CHIP    | 47K            | 5%   | 1/16W |
| R1534        | 1-218-973-11 | RES-CHIP    | 47K            | 5%   | 1/16W |
| R1535        | 1-208-931-11 | METAL CHIP  | 68K            | 0.5% | 1/16W |
| R1536        | 1-208-935-11 | METAL CHIP  | 100K           | 0.5% | 1/16W |
| R1537        | 1-208-931-11 | METAL CHIP  | 68K            | 0.5% | 1/16W |

| Ref. No. | Part No.     | Description |      |      |       | Ref. No. | Part No.     | Description |      |      |       |
|----------|--------------|-------------|------|------|-------|----------|--------------|-------------|------|------|-------|
| R1538    | 1-208-935-11 | METAL CHIP  | 100K | 0.5% | 1/16W | R3456    | 1-208-711-11 | METAL CHIP  | 15K  | 0.5% | 1/16W |
| R1539    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W | R3457    | 1-218-985-11 | RES-CHIP    | 470K | 5%   | 1/16W |
| R1540    | 1-218-973-11 | RES-CHIP    | 47K  | 5%   | 1/16W | R3458    | 1-218-985-11 | METAL CHIP  | 470K | 0.5% | 1/16W |
| R1541    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W | R3459    | 1-208-715-11 | METAL CHIP  | 22K  | 0.5% | 1/16W |
| R1542    | 1-218-965-11 | RES-CHIP    | 10K  | 5%   | 1/16W | R3460    | 1-208-707-11 | METAL CHIP  | 10K  | 0.5% | 1/16W |
| R1543    | 1-216-295-91 | SHORT CHIP  | 0    |      |       | R3461    | 1-218-981-11 | RES-CHIP    | 220K | 5%   | 1/16W |
| R2942    | 1-218-947-11 | RES-CHIP    | 330  | 5%   | 1/16W | R3463    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W |
| R2943    | 1-218-965-11 | RES-CHIP    | 10K  | 5%   | 1/16W | R3464    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W |
| R2944    | 1-218-990-11 | SHORT CHIP  | 0    |      |       | R3465    | 1-218-969-11 | RES-CHIP    | 22K  | 5%   | 1/16W |
| R3401    | 1-218-990-11 | SHORT CHIP  | 0    |      |       | R3466    | 1-218-969-11 | RES-CHIP    | 22K  | 5%   | 1/16W |
| R3402    | 1-218-990-11 | SHORT CHIP  | 0    |      |       | R3467    | 1-208-671-11 | METAL CHIP  | 330  | 0.5% | 1/16W |
| R3403    | 1-218-990-11 | SHORT CHIP  | 0    |      |       | R3468    | 1-218-973-11 | RES-CHIP    | 47K  | 5%   | 1/16W |
| R3404    | 1-218-990-11 | SHORT CHIP  | 0    |      |       | R3469    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W |
| R3405    | 1-218-990-11 | SHORT CHIP  | 0    |      |       | R3470    | 1-218-965-11 | RES-CHIP    | 10K  | 5%   | 1/16W |
| R3406    | 1-218-990-11 | SHORT CHIP  | 0    |      |       | R3471    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R3407    | 1-218-990-11 | SHORT CHIP  | 0    |      |       | R3472    | 1-208-707-11 | METAL CHIP  | 10K  | 0.5% | 1/16W |
| R3408    | 1-218-990-11 | SHORT CHIP  | 0    |      |       | R3473    | 1-208-707-11 | METAL CHIP  | 10K  | 0.5% | 1/16W |
| R3409    | 1-218-990-11 | SHORT CHIP  | 0    |      |       | R3474    | 1-208-719-11 | METAL CHIP  | 33K  | 0.5% | 1/16W |
| R3410    | 1-218-990-11 | SHORT CHIP  | 0    |      |       | R3475    | 1-218-974-11 | METAL CHIP  | 56K  | 0.5% | 1/16W |
| R3411    | 1-218-990-11 | SHORT CHIP  | 0    |      |       | R3476    | 1-208-707-11 | METAL CHIP  | 10K  | 0.5% | 1/16W |
| R3412    | 1-218-990-11 | SHORT CHIP  | 0    |      |       | R3477    | 1-208-707-11 | METAL CHIP  | 10K  | 0.5% | 1/16W |
| R3413    | 1-218-977-11 | RES-CHIP    | 100K | 5%   | 1/16W | R3478    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R3414    | 1-216-001-00 | METAL CHIP  | 10   | 5%   | 1/10W | R3479    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R3415    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W | R3480    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R3416    | 1-218-973-11 | RES-CHIP    | 47K  | 5%   | 1/16W | R4201    | 1-218-985-11 | RES-CHIP    | 470K | 5%   | 1/16W |
| R3417    | 1-218-945-11 | RES-CHIP    | 220  | 5%   | 1/16W | R4202    | 1-208-719-11 | METAL CHIP  | 33K  | 0.5% | 1/16W |
| R3418    | 1-218-977-11 | RES-CHIP    | 100K | 5%   | 1/16W | R4205    | 1-218-958-11 | RES-CHIP    | 2.7K | 5%   | 1/16W |
| R3419    | 1-218-965-11 | RES-CHIP    | 10K  | 5%   | 1/16W | R4206    | 1-218-973-11 | RES-CHIP    | 47K  | 5%   | 1/16W |
| R3420    | 1-218-961-11 | RES-CHIP    | 4.7K | 5%   | 1/16W | R4207    | 1-218-975-11 | RES-CHIP    | 68K  | 5%   | 1/16W |
| R3421    | 1-218-973-11 | RES-CHIP    | 47K  | 5%   | 1/16W | R4208    | 1-218-969-11 | RES-CHIP    | 22K  | 5%   | 1/16W |
| R3422    | 1-218-969-11 | RES-CHIP    | 22K  | 5%   | 1/16W | R4209    | 1-218-975-11 | RES-CHIP    | 68K  | 5%   | 1/16W |
| R3423    | 1-218-968-11 | RES-CHIP    | 18K  | 5%   | 1/16W | R4210    | 1-218-989-11 | RES-CHIP    | 1M   | 5%   | 1/16W |
| R3424    | 1-218-972-11 | RES-CHIP    | 39K  | 5%   | 1/16W | R4211    | 1-218-977-11 | RES-CHIP    | 100K | 5%   | 1/16W |
| R3425    | 1-218-980-11 | RES-CHIP    | 180K | 5%   | 1/16W | R4212    | 1-218-941-81 | RES-CHIP    | 100  | 5%   | 1/16W |
| R3426    | 1-218-980-11 | RES-CHIP    | 180K | 5%   | 1/16W | R4213    | 1-218-941-81 | RES-CHIP    | 100  | 5%   | 1/16W |
| R3427    | 1-208-671-11 | METAL CHIP  | 330  | 0.5% | 1/16W | R4214    | 1-218-941-81 | RES-CHIP    | 100  | 5%   | 1/16W |
| R3428    | 1-218-958-11 | METAL CHIP  | 2.7K | 0.5% | 1/16W | R4216    | 1-208-927-11 | METAL CHIP  | 47K  | 0.5% | 1/16W |
| R3429    | 1-218-969-11 | RES-CHIP    | 22K  | 5%   | 1/16W | R4217    | 1-218-989-11 | METAL CHIP  | 1M   | 0.5% | 1/16W |
| R3430    | 1-218-980-11 | RES-CHIP    | 180K | 5%   | 1/16W | R4218    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R3431    | 1-208-941-11 | METAL CHIP  | 180K | 0.5% | 1/16W | R4221    | 1-216-864-11 | METAL CHIP  | 0    | 5%   | 1/16W |
| R3432    | 1-218-954-11 | RES-CHIP    | 1.2K | 5%   | 1/16W | R4222    | 1-216-864-11 | METAL CHIP  | 0    | 5%   | 1/16W |
| R3433    | 1-218-966-11 | RES-CHIP    | 12K  | 5%   | 1/16W | R4223    | 1-218-941-81 | RES-CHIP    | 100  | 5%   | 1/16W |
| R3434    | 1-218-980-11 | RES-CHIP    | 180K | 5%   | 1/16W | R4224    | 1-218-941-81 | RES-CHIP    | 100  | 5%   | 1/16W |
| R3435    | 1-218-965-11 | RES-CHIP    | 10K  | 5%   | 1/16W | R6001    | 1-218-937-11 | RES-CHIP    | 47   | 5%   | 1/16W |
| R3436    | 1-208-707-11 | METAL CHIP  | 10K  | 0.5% | 1/16W | R6002    | 1-218-937-11 | RES-CHIP    | 47   | 5%   | 1/16W |
| R3437    | 1-218-990-11 | SHORT CHIP  | 0    |      |       | R6003    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W |
| R3438    | 1-208-707-11 | METAL CHIP  | 10K  | 0.5% | 1/16W | R6004    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W |
| R3439    | 1-208-707-11 | METAL CHIP  | 10K  | 0.5% | 1/16W | R6006    | 1-218-973-11 | RES-CHIP    | 47K  | 5%   | 1/16W |
| R3440    | 1-218-974-11 | METAL CHIP  | 56K  | 0.5% | 1/16W | R6007    | 1-218-973-11 | RES-CHIP    | 47K  | 5%   | 1/16W |
| R3441    | 1-208-707-11 | METAL CHIP  | 10K  | 0.5% | 1/16W | R6008    | 1-218-960-11 | RES-CHIP    | 3.9K | 5%   | 1/16W |
| R3442    | 1-218-990-11 | SHORT CHIP  | 0    |      |       | R6009    | 1-218-937-11 | RES-CHIP    | 47   | 5%   | 1/16W |
| R3444    | 1-208-707-11 | METAL CHIP  | 10K  | 0.5% | 1/16W | R6010    | 1-218-937-11 | RES-CHIP    | 47   | 5%   | 1/16W |
| R3445    | 1-208-719-11 | METAL CHIP  | 33K  | 0.5% | 1/16W | R6011    | 1-218-957-11 | RES-CHIP    | 2.2K | 5%   | 1/16W |
| R3446    | 1-218-978-11 | METAL CHIP  | 120K | 0.5% | 1/16W | R6013    | 1-218-957-11 | RES-CHIP    | 2.2K | 5%   | 1/16W |
| R3447    | 1-218-978-11 | METAL CHIP  | 120K | 0.5% | 1/16W | R6014    | 1-218-971-11 | RES-CHIP    | 33K  | 5%   | 1/16W |
| R3450    | 1-218-978-11 | METAL CHIP  | 120K | 0.5% | 1/16W | R6015    | 1-218-965-11 | RES-CHIP    | 10K  | 5%   | 1/16W |
| R3451    | 1-218-978-11 | METAL CHIP  | 120K | 0.5% | 1/16W | R6016    | 1-218-965-11 | RES-CHIP    | 10K  | 5%   | 1/16W |
| R3452    | 1-218-965-11 | RES-CHIP    | 10K  | 5%   | 1/16W | R6017    | 1-218-977-11 | RES-CHIP    | 100K | 5%   | 1/16W |
| R3453    | 1-218-965-11 | RES-CHIP    | 10K  | 5%   | 1/16W | R6018    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W |
| R3454    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W | R6019    | 1-218-949-11 | RES-CHIP    | 470  | 5%   | 1/16W |

DSR-PDX10/PDX10P

DB-016

| Ref. No. | Part No.     | Description |      |      |       |
|----------|--------------|-------------|------|------|-------|
| R6020    | 1-218-969-11 | RES-CHIP    | 22K  | 5%   | 1/16W |
| R6021    | 1-218-949-11 | RES-CHIP    | 470  | 5%   | 1/16W |
| R6022    | 1-218-949-11 | RES-CHIP    | 470  | 5%   | 1/16W |
| R6025    | 1-218-965-11 | RES-CHIP    | 10K  | 5%   | 1/16W |
| R6028    | 1-218-971-11 | RES-CHIP    | 33K  | 5%   | 1/16W |
| R6029    | 1-218-973-11 | RES-CHIP    | 47K  | 5%   | 1/16W |
| R6030    | 1-218-961-11 | RES-CHIP    | 4.7K | 5%   | 1/16W |
| R6031    | 1-218-961-11 | RES-CHIP    | 4.7K | 5%   | 1/16W |
| R6035    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R6036    | 1-216-864-11 | METAL CHIP  | 0    | 5%   | 1/16W |
| R6201    | 1-218-977-11 | RES-CHIP    | 100K | 5%   | 1/16W |
| R6202    | 1-208-930-11 | METAL CHIP  | 62K  | 0.5% | 1/16W |
| R6304    | 1-208-920-81 | METAL CHIP  | 24K  | 0.5% | 1/16W |
| R6309    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R6311    | 1-218-977-11 | RES-CHIP    | 100K | 5%   | 1/16W |
| R6312    | 1-218-977-11 | RES-CHIP    | 100K | 5%   | 1/16W |
| R6315    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W |
| R6316    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W |
| R6317    | 1-218-967-11 | RES-CHIP    | 15K  | 5%   | 1/16W |
| R6318    | 1-218-967-11 | RES-CHIP    | 15K  | 5%   | 1/16W |
| R6322    | 1-218-973-11 | RES-CHIP    | 47K  | 5%   | 1/16W |
| R6323    | 1-218-973-11 | RES-CHIP    | 47K  | 5%   | 1/16W |
| R6327    | 1-218-973-11 | RES-CHIP    | 47K  | 5%   | 1/16W |
| R6328    | 1-218-973-11 | RES-CHIP    | 47K  | 5%   | 1/16W |
| R6331    | 1-208-920-81 | METAL CHIP  | 24K  | 0.5% | 1/16W |
| R6336    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R7001    | 1-218-961-11 | RES-CHIP    | 4.7K | 5%   | 1/16W |
| R7002    | 1-218-961-11 | RES-CHIP    | 4.7K | 5%   | 1/16W |
| R7003    | 1-218-941-81 | RES-CHIP    | 100  | 5%   | 1/16W |
| R7004    | 1-218-981-11 | RES-CHIP    | 220K | 5%   | 1/16W |
| R7006    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W |
| R7007    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W |
| R7008    | 1-218-935-11 | RES-CHIP    | 33   | 5%   | 1/16W |
| R7009    | 1-218-935-11 | RES-CHIP    | 33   | 5%   | 1/16W |
| R7010    | 1-218-935-11 | RES-CHIP    | 33   | 5%   | 1/16W |
| R7011    | 1-218-935-11 | RES-CHIP    | 33   | 5%   | 1/16W |
| R7012    | 1-218-935-11 | RES-CHIP    | 33   | 5%   | 1/16W |
| R7013    | 1-218-935-11 | RES-CHIP    | 33   | 5%   | 1/16W |
| R7016    | 1-218-965-11 | RES-CHIP    | 10K  | 5%   | 1/16W |
| R7017    | 1-218-879-11 | METAL CHIP  | 22K  | 0.5% | 1/10W |
| R7018    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W |
| R7019    | 1-218-971-11 | RES-CHIP    | 33K  | 5%   | 1/16W |
| R7020    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W |
| R7021    | 1-218-972-11 | RES-CHIP    | 39K  | 5%   | 1/16W |
| R7022    | 1-218-945-11 | RES-CHIP    | 220  | 5%   | 1/16W |
| R7023    | 1-218-965-11 | RES-CHIP    | 10K  | 5%   | 1/16W |
| R7024    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W |
| R7025    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W |
| R7026    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W |
| R7027    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W |
| R7028    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W |
| R7200    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R7201    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R7204    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R7205    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R7206    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R7207    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R7208    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R7209    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W |
| R8000    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W |

| Ref. No. | Part No.     | Description |      |      |       |
|----------|--------------|-------------|------|------|-------|
| R8001    | 1-218-985-11 | RES-CHIP    | 470K | 5%   | 1/16W |
| R8002    | 1-208-709-11 | METAL CHIP  | 12K  | 0.5% | 1/16W |
| R8003    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R8004    | 1-218-989-11 | RES-CHIP    | 1M   | 5%   | 1/16W |
| R8005    | 1-208-707-11 | METAL CHIP  | 10K  | 0.5% | 1/16W |
| R8007    | 1-208-715-11 | METAL CHIP  | 22K  | 0.5% | 1/16W |
| R8008    | 1-220-206-11 | METAL CHIP  | 91K  | 0.5% | 1/16W |
| R8009    | 1-208-707-11 | METAL CHIP  | 10K  | 0.5% | 1/16W |
| R8010    | 1-216-150-91 | RES-CHIP    | 10   | 5%   | 1/8W  |
| R8011    | 1-218-959-11 | RES-CHIP    | 3.3K | 5%   | 1/16W |
| R8012    | 1-218-961-11 | RES-CHIP    | 4.7K | 5%   | 1/16W |
| R8013    | 1-218-965-11 | RES-CHIP    | 10K  | 5%   | 1/16W |
| R8014    | 1-218-965-11 | RES-CHIP    | 10K  | 5%   | 1/16W |
| R8015    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W |
| R8016    | 1-218-961-11 | RES-CHIP    | 4.7K | 5%   | 1/16W |
| R8017    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W |
| R8018    | 1-218-973-11 | RES-CHIP    | 47K  | 5%   | 1/16W |
| R8019    | 1-218-989-11 | RES-CHIP    | 1M   | 5%   | 1/16W |
| R8020    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W |
| R8021    | 1-218-961-11 | RES-CHIP    | 4.7K | 5%   | 1/16W |
| R8022    | 1-208-707-11 | METAL CHIP  | 10K  | 0.5% | 1/16W |
| R8023    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R8024    | 1-218-878-11 | METAL CHIP  | 20K  | 0.5% | 1/16W |
| R8025    | 1-218-961-11 | RES-CHIP    | 4.7K | 5%   | 1/16W |
| R8026    | 1-218-981-11 | RES-CHIP    | 220K | 5%   | 1/16W |
| R8027    | 1-218-973-11 | RES-CHIP    | 47K  | 5%   | 1/16W |
| R8028    | 1-208-935-11 | METAL CHIP  | 100K | 0.5% | 1/16W |
| R8029    | 1-208-715-11 | METAL CHIP  | 22K  | 0.5% | 1/16W |
| R8030    | 1-208-707-11 | METAL CHIP  | 10K  | 0.5% | 1/16W |
| R8031    | 1-218-968-11 | RES-CHIP    | 18K  | 5%   | 1/16W |
| R8033    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R8034    | 1-218-969-11 | RES-CHIP    | 22K  | 5%   | 1/16W |
| R8035    | 1-218-979-11 | RES-CHIP    | 150K | 5%   | 1/16W |
| R8036    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R8037    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R8038    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R8039    | 1-216-864-11 | METAL CHIP  | 0    | 5%   | 1/16W |
| R8040    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R8041    | 1-216-864-11 | METAL CHIP  | 0    | 5%   | 1/16W |
| R8042    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R8043    | 1-216-864-11 | METAL CHIP  | 0    | 5%   | 1/16W |
| R8044    | 1-216-864-11 | METAL CHIP  | 0    | 5%   | 1/16W |
| R8045    | 1-216-864-11 | METAL CHIP  | 0    | 5%   | 1/16W |
| R8046    | 1-216-864-11 | METAL CHIP  | 0    | 5%   | 1/16W |
| R8047    | 1-216-864-11 | METAL CHIP  | 0    | 5%   | 1/16W |
| R8048    | 1-216-864-11 | METAL CHIP  | 0    | 5%   | 1/16W |
| R8049    | 1-216-864-11 | METAL CHIP  | 0    | 5%   | 1/16W |
| R8050    | 1-216-864-11 | METAL CHIP  | 0    | 5%   | 1/16W |
| R8051    | 1-216-864-11 | METAL CHIP  | 0    | 5%   | 1/16W |
| R8052    | 1-218-973-11 | RES-CHIP    | 47K  | 5%   | 1/16W |
| R8053    | 1-218-973-11 | RES-CHIP    | 47K  | 5%   | 1/16W |
| R8054    | 1-218-941-81 | RES-CHIP    | 100  | 5%   | 1/16W |
| R8055    | 1-218-941-81 | RES-CHIP    | 100  | 5%   | 1/16W |
| R8056    | 1-218-989-11 | RES-CHIP    | 1M   | 5%   | 1/16W |
| R8057    | 1-218-989-11 | RES-CHIP    | 1M   | 5%   | 1/16W |
| R8059    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W |
| R8060    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W |
| R8061    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R8065    | 1-218-974-11 | METAL CHIP  | 56K  | 0.5% | 1/16W |
| R8066    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |

DB-016

FP-495

FP-496

FP-497

FP-498

FP-499

FP-504

| Ref. No.                            | Part No.     | Description                      |
|-------------------------------------|--------------|----------------------------------|
| R8067                               | 1-218-974-11 | METAL CHIP 56K 0.5% 1/16W        |
| R8068                               | 1-218-977-11 | RES-CHIP 100K 5% 1/16W           |
| R8069                               | 1-218-959-11 | RES-CHIP 3.3K 5% 1/16W           |
| R8070                               | 1-208-699-11 | METAL CHIP 4.7K 0.5% 1/16W       |
| R8071                               | 1-208-713-11 | METAL CHIP 18K 0.5% 1/16W        |
| R8072                               | 1-218-970-11 | METAL CHIP 27K 0.5% 1/16W        |
| R8073                               | 1-218-977-11 | RES-CHIP 100K 5% 1/16W           |
| R8074                               | 1-218-952-11 | RES-CHIP 820 5% 1/16W            |
| R8075                               | 1-208-697-11 | METAL CHIP 3.9K 0.5% 1/16W       |
| R8076                               | 1-218-878-11 | METAL CHIP 20K 0.5% 1/16W        |
| R8077                               | 1-208-711-11 | METAL CHIP 15K 0.5% 1/16W        |
| R8078                               | 1-216-864-11 | METAL CHIP 0 5% 1/16W            |
| R8079                               | 1-216-864-11 | METAL CHIP 0 5% 1/16W            |
| R8080                               | 1-216-864-11 | METAL CHIP 0 5% 1/16W            |
| R8081                               | 1-216-864-11 | METAL CHIP 0 5% 1/16W            |
| R8082                               | 1-216-864-11 | METAL CHIP 0 5% 1/16W            |
| R8083                               | 1-216-864-11 | METAL CHIP 0 5% 1/16W            |
| R8084                               | 1-216-864-11 | METAL CHIP 0 5% 1/16W            |
| R8085                               | 1-216-864-11 | METAL CHIP 0 5% 1/16W            |
| R8086                               | 1-216-864-11 | METAL CHIP 0 5% 1/16W            |
| R8087                               | 1-216-864-11 | METAL CHIP 0 5% 1/16W            |
| R8088                               | 1-216-864-11 | METAL CHIP 0 5% 1/16W            |
| R8089                               | 1-216-864-11 | METAL CHIP 0 5% 1/16W            |
| < VIBRATOR >                        |              |                                  |
| X7001                               | 1-781-641-21 | VIBRATOR, CRYSTAL (13.5MHz)      |
| A-7078-342-A FP-495 BOARD, COMPLETE |              |                                  |
| *****                               |              |                                  |
| < SWITCH >                          |              |                                  |
| S001                                | 1-786-179-31 | SWITCH, PUSH (1KEY) (PANEL OPEN) |
| S002                                | 1-771-039-31 | SWITCH, PUSH (PANEL REVERSE)     |
| A-7078-343-A FP-496 BOARD, COMPLETE |              |                                  |
| *****                               |              |                                  |
| < CONNECTOR >                       |              |                                  |
| CN001                               | 1-784-938-21 | CONNECTOR, BOARD TO BOARD 60P    |
| CN002                               | 1-784-939-11 | CONNECTOR, BOARD TO BOARD 60P    |
| A-7078-344-A FP-497 BOARD, COMPLETE |              |                                  |
| *****                               |              |                                  |
| < DIODE >                           |              |                                  |
| D001                                | 8-719-080-62 | DIODE CL-190HBF-X-T              |
| < SWITCH >                          |              |                                  |
| S001                                | 1-771-138-82 | SWITCH, KEY BOARD                |

| Ref. No.                            | Part No.     | Description                                  |
|-------------------------------------|--------------|----------------------------------------------|
|                                     | A-7078-345-A | FP-498 BOARD, COMPLETE                       |
| *****                               |              |                                              |
| < CONNECTOR >                       |              |                                              |
| CN001                               | 1-785-969-21 | CONNECTOR, BOARD TO BOARD 100P               |
| CN002                               | 1-785-967-21 | CONNECTOR, BOARD TO BOARD 100P               |
| A-7078-346-A FP-499 BOARD, COMPLETE |              |                                              |
| *****                               |              |                                              |
| < CONNECTOR >                       |              |                                              |
| CN001                               | 1-815-854-11 | CONNECTOR, BOARD TO BOARD 80P                |
| CN002                               | 1-815-855-31 | CONNECTOR, BOARD TO BOARD 80P                |
| A-7078-341-A FP-504 BOARD, COMPLETE |              |                                              |
| *****                               |              |                                              |
| < CAPACITOR >                       |              |                                              |
| C601                                | 1-137-710-11 | CERAMIC CHIP 10uF 20% 6.3V                   |
| < DIODE >                           |              |                                              |
| D601                                | 8-719-070-92 | DIODE TLOU1008(T05,SOY) (TALLY)              |
| D602                                | 8-719-052-25 | DIODE CL-200IR-X-TU-BC (IR)                  |
| D603                                | 8-719-061-82 | DIODE TLSU1002(TPX1,SONY) (CAMERA RECORDING) |
| D605                                | 8-719-062-16 | DIODE 01ZA8.2(TPL3)                          |
| D606                                | 8-719-056-23 | DIODE MA2S111-(K8).SO                        |
| D607                                | 8-719-062-16 | DIODE 01ZA8.2(TPL3)                          |
| D608                                | 8-719-062-16 | DIODE 01ZA8.2(TPL3)                          |
| D609                                | 8-719-062-16 | DIODE 01ZA8.2(TPL3)                          |
| D610                                | 8-719-062-16 | DIODE 01ZA8.2(TPL3)                          |
| < FUSE >                            |              |                                              |
| △ F601                              | 1-533-874-11 | FUSE, MICRO (0.2A/24V)                       |
| < IC >                              |              |                                              |
| IC601                               | 8-742-221-00 | HYB IC SBX3055-01                            |
| < PHOTO INTERRUPTER >               |              |                                              |
| PH601                               | 8-759-014-54 | HIC CNA1312K01S0                             |
| PH602                               | 8-759-014-54 | HIC CNA1312K01S0                             |
| < TRANSISTOR >                      |              |                                              |
| Q601                                | 8-729-037-72 | TRANSISTOR UN9211J-(K8).SO                   |
| < RESISTOR >                        |              |                                              |
| R601                                | 1-216-838-11 | METAL CHIP 27K 5% 1/16W                      |
| R602                                | 1-216-832-11 | METAL CHIP 8.2K 5% 1/16W                     |
| R603                                | 1-216-813-11 | METAL CHIP 220 5% 1/16W                      |
| R604                                | 1-216-828-11 | METAL CHIP 3.9K 5% 1/16W                     |
| R605                                | 1-216-805-11 | METAL CHIP 47 5% 1/16W                       |
| R606                                | 1-216-815-11 | METAL CHIP 330 5% 1/16W                      |
| R607                                | 1-216-821-11 | METAL CHIP 1K 5% 1/16W                       |

**Note :**

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

**Note :**

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

DSR-PDX10/PDX10P

FP-504

JK-222

LB-089

MA-425

| Ref. No.                            | Part No.     | Description                             |
|-------------------------------------|--------------|-----------------------------------------|
| < SWITCH >                          |              |                                         |
| S601                                | 1-771-487-21 | SWITCH, SLIDE (FOCUS AUTO/MAN/INFINITY) |
| S602                                | 1-771-138-82 | SWITCH, KEY BOARD (PUSH AUTO)           |
| S603                                | 1-771-138-82 | SWITCH, KEY BOARD (INDEX)               |
| S604                                | 1-771-138-82 | SWITCH, KEY BOARD (FADER)               |
| A-7078-332-A JK-222 BOARD, COMPLETE |              |                                         |
| *****                               |              |                                         |
| < CONNECTOR >                       |              |                                         |
| CN401                               | 1-785-828-11 | CONNECTOR, SQUARE TYPE 4P (DV)          |
| CN402                               | 1-794-962-11 | CONNECTOR, SQUARE TYPE(USB 5P) (USB)    |
| < DIODE >                           |              |                                         |
| D401                                | 8-719-062-16 | DIODE 01ZA8.2(TPL3)                     |
| D402                                | 8-719-062-16 | DIODE 01ZA8.2(TPL3)                     |
| < FERRITE BEAD >                    |              |                                         |
| FB401                               | 1-500-444-11 | FERRITE 0uH                             |
| FB402                               | 1-500-444-11 | FERRITE 0uH                             |
| FB403                               | 1-469-667-21 | FERRITE 0uH                             |
| FB404                               | 1-469-667-21 | FERRITE 0uH                             |
| FB405                               | 1-500-444-11 | FERRITE 0uH                             |
| FB406                               | 1-469-667-21 | FERRITE 0uH                             |
| FB407                               | 1-469-667-21 | FERRITE 0uH                             |
| < JACK >                            |              |                                         |
| J401                                | 1-778-518-11 | CONNECTOR, EXTERNAL (S VIDEO)           |
| J402                                | 1-793-995-11 | JACK, SUPER SMALL TYPE (LANC)           |
| J403                                | 1-569-950-41 | JACK (SMALL TYPE) (HEADPHONES)          |
| J404                                | 1-778-040-11 | JACK, SMALL TYPE (AUDIO/VIDEO)          |
| < LINE FILTER >                     |              |                                         |
| LF401                               | 1-419-100-21 | INDUCTOR 0uH                            |
| LF402                               | 1-419-100-21 | INDUCTOR 0uH                            |
| < RESISTOR >                        |              |                                         |
| R401                                | 1-469-667-21 | FERRITE 0uH (Note)                      |
| R402                                | 1-216-864-11 | METAL CHIP 0 5% 1/16W                   |
| R403                                | 1-469-667-21 | FERRITE 0uH (Note)                      |
| R404                                | 1-218-965-11 | RES-CHIP 10K 5% 1/16W                   |
| R406                                | 1-469-667-21 | FERRITE 0uH (Note)                      |
| R407                                | 1-218-965-11 | RES-CHIP 10K 5% 1/16W                   |
| R408                                | 1-469-667-21 | FERRITE 0uH (Note)                      |
| R410                                | 1-216-864-11 | METAL CHIP 0 5% 1/16W                   |
| R411                                | 1-216-864-11 | METAL CHIP 0 5% 1/16W                   |
| < VARISTOR >                        |              |                                         |
| VDR401                              | 1-801-862-11 | VARISTOR, CHIP                          |
| VDR402                              | 1-803-742-21 | VARISTOR, CHIP                          |
| VDR403                              | 1-803-742-21 | VARISTOR, CHIP                          |
| VDR404                              | 1-801-862-11 | VARISTOR, CHIP                          |
| VDR405                              | 1-803-742-21 | VARISTOR, CHIP                          |
| VDR406                              | 1-801-862-11 | VARISTOR, CHIP                          |
| VDR407                              | 1-801-862-11 | VARISTOR, CHIP                          |
| VDR408                              | 1-801-862-11 | VARISTOR, CHIP                          |
| VDR409                              | 1-803-742-21 | VARISTOR, CHIP                          |

| Ref. No.                            | Part No.     | Description                    |
|-------------------------------------|--------------|--------------------------------|
| A-7078-399-A LB-089 BOARD, COMPLETE |              |                                |
| *****                               |              |                                |
| < CAPACITOR >                       |              |                                |
| C6101                               | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V     |
| C6102                               | 1-164-505-11 | CERAMIC CHIP 2.2uF 16V         |
| < CONNECTOR >                       |              |                                |
| CN6101                              | 1-573-360-21 | CONNECTOR, FFC/FPC 20P         |
| CN6102                              | 1-573-356-21 | CONNECTOR, FFC/FPC 16P         |
| < DIODE >                           |              |                                |
| D6101                               | 8-719-018-51 | DIODE CL-170R-CD-T (TALLY)     |
| D6102                               | 8-719-082-33 | DIODE NSCW100-T38 (BACKLIGHT)  |
| < IC >                              |              |                                |
| IC6101                              | 8-759-581-11 | IC NJM2125F(Te2)               |
| < TRANSISTOR >                      |              |                                |
| Q6101                               | 8-729-054-48 | TRANSISTOR RN4983FE(TPLR3)     |
| Q6102                               | 8-729-054-48 | TRANSISTOR N1B04FE-Y/GR(TPLR3) |
| < RESISTOR >                        |              |                                |
| R6101                               | 1-218-948-11 | RES-CHIP 390 5% 1/16W          |
| R6102                               | 1-208-941-11 | METAL CHIP 180K 0.5% 1/16W     |
| R6103                               | 1-208-719-11 | METAL CHIP 33K 0.5% 1/16W      |
| R6104                               | 1-218-959-11 | RES-CHIP 3.3K 5% 1/16W         |
| R6105                               | 1-216-839-11 | METAL CHIP 33K 5% 1/16W        |
| R6106                               | 1-211-983-11 | METAL CHIP 39 0.5% 1/10W       |
| R6107                               | 1-218-963-11 | RES-CHIP 6.8K 5% 1/16W         |
| A-7078-515-A MA-425 BOARD, COMPLETE |              |                                |
| *****                               |              |                                |
| < CAPACITOR >                       |              |                                |
| C5901                               | 1-164-939-11 | CERAMIC CHIP 0.0022uF 10% 50V  |
| C5905                               | 1-107-819-11 | CERAMIC CHIP 0.022uF 10% 16V   |
| C5906                               | 1-107-819-11 | CERAMIC CHIP 0.022uF 10% 16V   |
| C5907                               | 1-107-819-11 | CERAMIC CHIP 0.022uF 10% 16V   |
| C5908                               | 1-164-943-11 | CERAMIC CHIP 0.01uF 10% 16V    |
| C5909                               | 1-107-819-11 | CERAMIC CHIP 0.022uF 10% 16V   |
| C5910                               | 1-117-919-11 | TANTAL. CHIP 10uF 20% 6.3V     |
| C5912                               | 1-117-919-11 | TANTAL. CHIP 10uF 20% 6.3V     |
| C5913                               | 1-164-874-11 | CERAMIC CHIP 100PF 5% 50V      |
| C5914                               | 1-164-874-11 | CERAMIC CHIP 100PF 5% 50V      |
| C5917                               | 1-164-874-11 | CERAMIC CHIP 100PF 5% 50V      |
| C5918                               | 1-164-874-11 | CERAMIC CHIP 100PF 5% 50V      |
| C5920                               | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V     |
| C5921                               | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V     |
| C5922                               | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V     |
| C5923                               | 1-165-176-11 | CERAMIC CHIP 0.047uF 10% 16V   |
| C5924                               | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V     |
| C5925                               | 1-165-176-11 | CERAMIC CHIP 0.047uF 10% 16V   |
| C5926                               | 1-164-174-11 | CERAMIC CHIP 0.0082uF 10% 25V  |
| C5927                               | 1-164-174-11 | CERAMIC CHIP 0.0082uF 10% 25V  |

Note : Ferrite are mounted to the location where R401, R403, R406 and R408 are printed.



| Ref. No.         | Part No.     | Description                             |
|------------------|--------------|-----------------------------------------|
| C5928            | 1-164-245-11 | CERAMIC CHIP 0.015uF 10% 25V            |
| C5929            | 1-164-942-11 | CERAMIC CHIP 0.0068uF 10% 16V           |
| C5930            | 1-164-943-11 | CERAMIC CHIP 0.01uF 10% 16V             |
| C5931            | 1-164-245-11 | CERAMIC CHIP 0.015uF 10% 25V            |
| C5932            | 1-117-919-11 | TANTAL. CHIP 10uF 20% 6.3V              |
| C5933            | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V              |
| C5934            | 1-164-156-11 | CERAMIC CHIP 0.1uF 25V                  |
| C5935            | 1-117-919-11 | TANTAL. CHIP 10uF 20% 6.3V              |
| C5936            | 1-165-128-11 | CERAMIC CHIP 0.22uF 16V                 |
| C5937            | 1-125-841-91 | TANTAL. CHIP 22uF 20% 4V                |
| C5938            | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V              |
| C5939            | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V              |
| C5940            | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V              |
| C5941            | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V              |
| C5944            | 1-164-937-11 | CERAMIC CHIP 0.001uF 10% 50V            |
| C5945            | 1-164-937-11 | CERAMIC CHIP 0.001uF 10% 50V            |
| < CONNECTOR >    |              |                                         |
| * CN5901         | 1-580-055-21 | PIN, CONNECTOR (SMD) 2P                 |
| * CN5902         | 1-580-055-21 | PIN, CONNECTOR (SMD) 2P                 |
| CN5903           | 1-779-327-11 | CONNECTOR, FFC/FPC 6P                   |
| CN5904           | 1-816-684-11 | CONNECTOR, FFC/FPC (ZIF) 8P             |
| CN5905           | 1-816-177-11 | CONNECTOR, FFC/FPC (ZIF) 16P            |
| CN5906           | 1-784-422-11 | CONNECTOR, FFC/FPC (ZIF) 33P            |
| < FERRITE BEAD > |              |                                         |
| FB5901           | 1-500-444-11 | FERRITE 0uH                             |
| FB5902           | 1-500-444-11 | FERRITE 0uH                             |
| < IC >           |              |                                         |
| IC5901           | 8-759-638-50 | IC AN2901FHQ-EB                         |
| IC5902           | 8-759-581-11 | IC NJM2125F(TE2)                        |
| < JACK >         |              |                                         |
| J5901            | 1-691-737-41 | JACK (SMALL TYPE) (MIC (PLUG IN POWER)) |
| < COIL >         |              |                                         |
| L5901            | 1-469-528-91 | INDUCTOR 100uH                          |
| < TRANSISTOR >   |              |                                         |
| Q5901            | 8-729-042-26 | TRANSISTOR 2SB1462J-QR(K8).SO           |
| Q5902            | 8-729-048-77 | TRANSISTOR XP4313-(TX).SO               |
| Q5903            | 8-729-048-77 | TRANSISTOR XP4313-(TX).SO               |
| Q5904            | 8-729-402-42 | TRANSISTOR UN5213-TX                    |
| Q5905            | 8-729-403-35 | TRANSISTOR UN5113-TX                    |
| Q5906            | 8-729-140-75 | TRANSISTOR 2SD999-T1-CLCK               |
| < RESISTOR >     |              |                                         |
| R5901            | 1-216-864-11 | METAL CHIP 0 5% 1/16W                   |
| R5903            | 1-218-968-11 | RES-CHIP 18K 5% 1/16W                   |
| R5904            | 1-218-971-11 | RES-CHIP 33K 5% 1/16W                   |
| R5905            | 1-218-961-11 | RES-CHIP 4.7K 5% 1/16W                  |
| R5906            | 1-218-965-11 | RES-CHIP 10K 5% 1/16W                   |
| R5907            | 1-218-957-11 | RES-CHIP 2.2K 5% 1/16W                  |
| R5908            | 1-218-957-11 | RES-CHIP 2.2K 5% 1/16W                  |
| R5909            | 1-218-963-11 | RES-CHIP 6.8K 5% 1/16W                  |
| R5910            | 1-218-963-11 | RES-CHIP 6.8K 5% 1/16W                  |
| R5911            | 1-218-953-11 | RES-CHIP 1K 5% 1/16W                    |

| Ref. No.     | Part No.     | Description                |
|--------------|--------------|----------------------------|
| R5912        | 1-218-953-11 | RES-CHIP 1K 5% 1/16W       |
| R5914        | 1-216-803-11 | METAL CHIP 33 5% 1/16W     |
| R5915        | 1-216-803-11 | METAL CHIP 33 5% 1/16W     |
| R5916        | 1-218-957-11 | RES-CHIP 2.2K 5% 1/16W     |
| R5917        | 1-218-957-11 | RES-CHIP 2.2K 5% 1/16W     |
| R5918        | 1-218-967-11 | RES-CHIP 15K 5% 1/16W      |
| R5919        | 1-208-910-11 | RES-CHIP 9.1K 5% 1/16W     |
| R5920        | 1-218-967-11 | RES-CHIP 15K 5% 1/16W      |
| R5921        | 1-208-910-11 | RES-CHIP 9.1K 5% 1/16W     |
| R5922        | 1-218-949-11 | RES-CHIP 470 5% 1/16W      |
| R5923        | 1-218-990-11 | SHORT CHIP 0               |
| R5924        | 1-218-990-11 | SHORT CHIP 0               |
| R5925        | 1-218-949-11 | RES-CHIP 470 5% 1/16W      |
| R5926        | 1-216-829-11 | METAL CHIP 4.7K 5% 1/16W   |
| R5927        | 1-220-191-81 | RES-CHIP 5.1K 5% 1/16W     |
| R5928        | 1-220-191-81 | RES-CHIP 5.1K 5% 1/16W     |
| R5929        | 1-216-817-11 | METAL CHIP 470 5% 1/16W    |
| R5930        | 1-216-823-11 | METAL CHIP 1.5K 5% 1/16W   |
| R5931        | 1-218-971-11 | RES-CHIP 33K 5% 1/16W      |
| R5933        | 1-218-954-11 | RES-CHIP 1.2K 5% 1/16W     |
| R5934        | 1-218-968-11 | RES-CHIP 18K 5% 1/16W      |
| R5935        | 1-218-971-11 | RES-CHIP 33K 5% 1/16W      |
| R5936        | 1-216-825-11 | METAL CHIP 2.2K 5% 1/16W   |
| R5937        | 1-216-837-11 | METAL CHIP 22K 5% 1/16W    |
| R5938        | 1-208-912-11 | METAL CHIP 11K 0.5% 1/16W  |
| R5939        | 1-216-820-11 | METAL CHIP 820 5% 1/16W    |
| R5940        | 1-216-833-11 | METAL CHIP 10K 5% 1/16W    |
| R5941        | 1-208-701-11 | METAL CHIP 5.6K 0.5% 1/16W |
| R5943        | 1-208-912-11 | METAL CHIP 11K 0.5% 1/16W  |
| R5944        | 1-218-943-11 | RES-CHIP 150 5% 1/16W      |
| R5946        | 1-216-864-11 | METAL CHIP 0 5% 1/16W      |
| R5947        | 1-218-952-11 | RES-CHIP 820 5% 1/16W      |
| R5948        | 1-218-941-81 | RES-CHIP 100 5% 1/16W      |
| R5949        | 1-218-973-11 | RES-CHIP 47K 5% 1/16W      |
| R5951        | 1-218-949-11 | RES-CHIP 470 5% 1/16W      |
| R5952        | 1-218-947-11 | RES-CHIP 330 5% 1/16W      |
| R5953        | 1-216-313-00 | METAL CHIP 8.2 5% 1/10W    |
| < VARISTOR > |              |                            |
| VDR591       | 1-801-862-11 | VARISTOR, CHIP             |
| VDR592       | 1-801-862-11 | VARISTOR, CHIP             |

A-7078-516-A PD-191 BOARD, COMPLETE

\*\*\*\*\*

&lt; CAPACITOR &gt;

|       |              |                             |
|-------|--------------|-----------------------------|
| C5701 | 1-113-988-11 | TANTAL. CHIP 68uF 20% 4V    |
| C5702 | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V  |
| C5703 | 1-107-826-11 | CERAMIC CHIP 0.1uF 10% 16V  |
| C5704 | 1-164-943-11 | CERAMIC CHIP 0.01uF 10% 16V |
| C5705 | 1-164-943-11 | CERAMIC CHIP 0.01uF 10% 16V |
| C5706 | 1-164-943-11 | CERAMIC CHIP 0.01uF 10% 16V |
| C5707 | 1-135-259-11 | TANTAL. CHIP 10uF 20% 6.3V  |
| C5708 | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V  |
| C5709 | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V  |
| C5710 | 1-164-943-11 | CERAMIC CHIP 0.01uF 10% 16V |

PD-191

SE-132

| Ref. No.       | Part No.     | Description                   |                    |     |      |
|----------------|--------------|-------------------------------|--------------------|-----|------|
| C5711          | 1-100-502-11 | TANTAL. CHIP                  | 3.3uF              | 20% | 25V  |
| C5712          | 1-107-826-11 | CERAMIC CHIP                  | 0.1uF              | 10% | 16V  |
| C5713          | 1-164-739-11 | CERAMIC CHIP                  | 560PF              | 5%  | 50V  |
| C5714          | 1-125-777-11 | CERAMIC CHIP                  | 0.1uF              | 10% | 10V  |
| C5715          | 1-125-777-11 | CERAMIC CHIP                  | 0.1uF              | 10% | 10V  |
| C5716          | 1-104-851-11 | TANTAL. CHIP                  | 10uF               | 20% | 10V  |
| C5717          | 1-164-357-11 | CERAMIC CHIP                  | 0.001uF            | 5%  | 50V  |
| C5718          | 1-164-866-11 | CERAMIC CHIP                  | 47PF               | 5%  | 50V  |
| C5719          | 1-109-982-11 | CERAMIC CHIP                  | 1uF                | 10% | 10V  |
| C5720          | 1-109-982-11 | CERAMIC CHIP                  | 1uF                | 10% | 10V  |
| C5721          | 1-109-982-11 | CERAMIC CHIP                  | 1uF                | 10% | 10V  |
| C5722          | 1-113-994-11 | TANTAL. CHIP                  | 6.8uF              | 20% | 16V  |
| C5723          | 1-125-777-11 | CERAMIC CHIP                  | 0.1uF              | 10% | 10V  |
| C5724          | 1-125-777-11 | CERAMIC CHIP                  | 0.1uF              | 10% | 10V  |
| C5726          | 1-107-682-11 | CERAMIC CHIP                  | 1uF                | 10% | 16V  |
| C5727          | 1-107-682-11 | CERAMIC CHIP                  | 1uF                | 10% | 16V  |
| C5801          | 1-125-777-11 | CERAMIC CHIP                  | 0.1uF              | 10% | 10V  |
| C5802          | 1-127-985-91 | TANTAL. CHIP                  | 47uF               | 20% | 16V  |
| C5803          | 1-107-826-11 | CERAMIC CHIP                  | 0.1uF              | 10% | 16V  |
| C5805          | 1-137-710-11 | CERAMIC CHIP                  | 10uF               | 20% | 6.3V |
| C5807          | 1-125-837-91 | CERAMIC CHIP                  | 1uF                | 10% | 6.3V |
| C5808          | 1-165-897-11 | TANTAL. CHIP                  | 22uF               | 20% | 10V  |
| < CONNECTOR >  |              |                               |                    |     |      |
| CN5701         | 1-573-364-11 | CONNECTOR, FFC/FPC 24P        |                    |     |      |
| CN5802         | 1-794-997-11 | PIN, CONNECTOR 20P            |                    |     |      |
| * CN5803       | 1-778-155-11 | CONNECTOR, FFC/FPC (ZIF) 7P   |                    |     |      |
| CN5804         | 1-784-420-11 | CONNECTOR, FFC/FPC (ZIF) 21P  |                    |     |      |
| CN5805         | 1-785-554-21 | CONNECTOR (5P), CARD EDGE     |                    |     |      |
| CN5806         | 1-816-463-11 | PIN, CONNECTOR (PC BOARD) 10P |                    |     |      |
| < DIODE >      |              |                               |                    |     |      |
| D5701          | 8-719-404-50 | DIODE MA111-TX                |                    |     |      |
| D5702          | 8-719-084-46 | DIODE 1SV288(TPH3)            |                    |     |      |
| < IC >         |              |                               |                    |     |      |
| IC5701         | 6-702-491-01 | IC AN12580A-BB                |                    |     |      |
| IC5702         | 8-759-833-18 | IC CM7021L3-E2                |                    |     |      |
| IC5801         | 8-759-573-02 | IC BU9735K-E2                 |                    |     |      |
| < COIL >       |              |                               |                    |     |      |
| L5701          | 1-469-525-91 | INDUCTOR                      | 10uH               |     |      |
| L5702          | 1-414-771-91 | INDUCTOR                      | 10uH               |     |      |
| L5703          | 1-414-771-91 | INDUCTOR                      | 10uH               |     |      |
| L5704          | 1-414-771-91 | INDUCTOR                      | 10uH               |     |      |
| L5705          | 1-412-943-11 | INDUCTOR                      | 2.2uH              |     |      |
| L5801          | 1-412-056-11 | INDUCTOR                      | 4.7uH              |     |      |
| L5802          | 1-414-757-11 | INDUCTOR                      | 100uH              |     |      |
| < TRANSISTOR > |              |                               |                    |     |      |
| Q5701          | 8-729-037-52 | TRANSISTOR                    | 2SD2216J-QR(K8).SO |     |      |
| Q5702          | 8-729-037-74 | TRANSISTOR                    | UN9213J-(K8).SO    |     |      |
| Q5801          | 8-729-042-72 | TRANSISTOR                    | UN9214J-(K8).SO    |     |      |
| Q5802          | 8-729-042-26 | TRANSISTOR                    | 2SB1462J-QR(K8).SO |     |      |

| Ref. No.     | Part No.     | Description |      |      |       |
|--------------|--------------|-------------|------|------|-------|
| < RESISTOR > |              |             |      |      |       |
| R5701        | 1-218-985-11 | RES-CHIP    | 470K | 5%   | 1/16W |
| R5702        | 1-208-719-11 | METAL CHIP  | 33K  | 0.5% | 1/16W |
| R5703        | 1-218-970-11 | METAL CHIP  | 27K  | 0.5% | 1/16W |
| R5705        | 1-218-985-11 | RES-CHIP    | 470K | 5%   | 1/16W |
| R5706        | 1-218-977-11 | RES-CHIP    | 100K | 5%   | 1/16W |
| R5707        | 1-216-835-11 | METAL CHIP  | 15K  | 5%   | 1/16W |
| R5708        | 1-218-958-11 | RES-CHIP    | 2.7K | 5%   | 1/16W |
| R5709        | 1-218-973-11 | RES-CHIP    | 47K  | 5%   | 1/16W |
| R5710        | 1-218-975-11 | RES-CHIP    | 68K  | 5%   | 1/16W |
| R5711        | 1-218-969-11 | RES-CHIP    | 22K  | 5%   | 1/16W |
| R5712        | 1-218-975-11 | RES-CHIP    | 68K  | 5%   | 1/16W |
| R5713        | 1-218-989-11 | RES-CHIP    | 1M   | 5%   | 1/16W |
| R5714        | 1-218-977-11 | RES-CHIP    | 100K | 5%   | 1/16W |
| R5717        | 1-216-864-11 | METAL CHIP  | 0    | 5%   | 1/16W |
| R5719        | 1-218-942-11 | RES-CHIP    | 120  | 5%   | 1/16W |
| R5721        | 1-218-965-11 | RES-CHIP    | 10K  | 5%   | 1/16W |
| R5722        | 1-218-965-11 | RES-CHIP    | 10K  | 5%   | 1/16W |
| R5727        | 1-218-974-11 | RES-CHIP    | 56K  | 5%   | 1/16W |
| R5732        | 1-218-941-81 | RES-CHIP    | 100  | 5%   | 1/16W |
| R5736        | 1-218-941-81 | RES-CHIP    | 100  | 5%   | 1/16W |
| R5737        | 1-218-941-81 | RES-CHIP    | 100  | 5%   | 1/16W |
| R5801        | 1-218-941-81 | RES-CHIP    | 100  | 5%   | 1/16W |
| R5802        | 1-216-855-11 | METAL CHIP  | 680K | 5%   | 1/16W |
| R5803        | 1-218-961-11 | RES-CHIP    | 4.7K | 5%   | 1/16W |
| R5804        | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W |
| R5805        | 1-216-864-11 | METAL CHIP  | 0    | 5%   | 1/16W |

A-7078-339-A SE-132 BOARD, COMPLETE  
\*\*\*\*\*

&lt; CAPACITOR &gt;

|       |              |              |         |     |      |
|-------|--------------|--------------|---------|-----|------|
| C4001 | 1-127-895-91 | TANTAL. CHIP | 22uF    | 20% | 4V   |
| C4002 | 1-127-895-91 | TANTAL. CHIP | 22uF    | 20% | 4V   |
| C4003 | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10% | 10V  |
| C4004 | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10% | 10V  |
| C4005 | 1-119-923-81 | CERAMIC CHIP | 0.047uF | 10% | 10V  |
| C4006 | 1-119-923-81 | CERAMIC CHIP | 0.047uF | 10% | 10V  |
| C4007 | 1-119-923-81 | CERAMIC CHIP | 0.047uF | 10% | 10V  |
| C4008 | 1-119-923-81 | CERAMIC CHIP | 0.047uF | 10% | 10V  |
| C4009 | 1-127-692-11 | CERAMIC CHIP | 10uF    | 10% | 6.3V |
| C4010 | 1-127-692-11 | CERAMIC CHIP | 10uF    | 10% | 6.3V |
| C4011 | 1-127-692-11 | CERAMIC CHIP | 10uF    | 10% | 6.3V |
| C4012 | 1-127-692-11 | CERAMIC CHIP | 10uF    | 10% | 6.3V |
| C4014 | 1-127-895-91 | TANTAL. CHIP | 22uF    | 20% | 4V   |
| C4015 | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10% | 10V  |

&lt; CONNECTOR &gt;

CN4005 1-764-680-21 CONNECTOR, FFC/FPC (ZIF) 8P

&lt; IC &gt;

IC4001 8-759-489-19 IC NJM3230V(TE2)

&lt; COIL &gt;

L4001 1-414-771-91 INDUCTOR 10uH

| Ref. No.       | Part No.                                        | Description                      |
|----------------|-------------------------------------------------|----------------------------------|
| < TRANSISTOR > |                                                 |                                  |
| Q4001          | 8-729-042-26                                    | TRANSISTOR 2SB1462J-QR(K8).SO    |
| Q4002          | 8-729-037-74                                    | TRANSISTOR UN9213J-(K8).SO       |
| < RESISTOR >   |                                                 |                                  |
| R4001          | 1-218-969-11                                    | RES-CHIP 22K 5% 1/16W            |
| R4002          | 1-218-969-11                                    | RES-CHIP 22K 5% 1/16W            |
| R4003          | 1-218-969-11                                    | RES-CHIP 22K 5% 1/16W            |
| R4004          | 1-218-969-11                                    | RES-CHIP 22K 5% 1/16W            |
| R4005          | 1-218-965-11                                    | RES-CHIP 10K 5% 1/16W            |
| R4006          | 1-218-965-11                                    | RES-CHIP 10K 5% 1/16W            |
| R4007          | 1-218-989-11                                    | RES-CHIP 1M 5% 1/16W             |
| R4009          | 1-218-989-11                                    | RES-CHIP 1M 5% 1/16W             |
| R4010          | 1-218-953-11                                    | RES-CHIP 1K 5% 1/16W             |
| R4011          | 1-218-973-11                                    | RES-CHIP 47K 5% 1/16W            |
| < SENSOR >     |                                                 |                                  |
| SE4001         | 1-476-807-31                                    | SENSOR, ANGULAR VELOCITY (PITCH) |
| SE4002         | 1-476-807-41                                    | SENSOR, ANGULAR VELOCITY (YAW)   |
| *****          |                                                 |                                  |
| A-7078-397-A   | VC-318 (UDN) BOARD, COMPLETE (SERVICE) (PDX10)  |                                  |
| *****          |                                                 |                                  |
| A-7078-400-A   | VC-318 (UDP) BOARD, COMPLETE (SERVICE) (PDX10P) |                                  |
| *****          |                                                 |                                  |
| < CAPACITOR >  |                                                 |                                  |
| C1201          | 1-107-689-21                                    | TANTAL. CHIP 1uF 20% 35V         |
| C1202          | 1-107-689-21                                    | TANTAL. CHIP 1uF 20% 35V         |
| C1203          | 1-164-943-11                                    | CERAMIC CHIP 0.01uF 10% 16V      |
| C1204          | 1-125-777-11                                    | CERAMIC CHIP 0.1uF 10% 10V       |
| C1205          | 1-164-004-11                                    | CERAMIC CHIP 0.1uF 10% 25V       |
| C1206          | 1-128-964-91                                    | TANTAL. CHIP 100uF 20% 6.3V      |
| C1207          | 1-164-943-11                                    | CERAMIC CHIP 0.01uF 10% 16V      |
| C1208          | 1-164-937-11                                    | CERAMIC CHIP 0.001uF 10% 50V     |
| C1209          | 1-117-748-81                                    | CERAMIC CHIP 10PF 16V            |
| C1210          | 1-164-937-11                                    | CERAMIC CHIP 0.001uF 10% 50V     |
| C1211          | 1-127-573-11                                    | CERAMIC CHIP 1uF 10% 16V         |
| C1212          | 1-164-943-11                                    | CERAMIC CHIP 0.01uF 10% 16V      |
| C1213          | 1-164-943-11                                    | CERAMIC CHIP 0.01uF 10% 16V      |
| C1214          | 1-164-943-11                                    | CERAMIC CHIP 0.01uF 10% 16V      |
| C1215          | 1-128-964-91                                    | TANTAL. CHIP 100uF 20% 6.3V      |
| C1216          | 1-164-943-11                                    | CERAMIC CHIP 0.01uF 10% 16V      |
| C1217          | 1-164-943-11                                    | CERAMIC CHIP 0.01uF 10% 16V      |
| C1218          | 1-125-777-11                                    | CERAMIC CHIP 0.1uF 10% 10V       |
| C1219          | 1-164-004-11                                    | CERAMIC CHIP 0.1uF 10% 25V       |
| C1220          | 1-113-682-11                                    | TANTAL. CHIP 33uF 20% 10V        |
| C1221          | 1-125-777-11                                    | CERAMIC CHIP 0.1uF 10% 10V       |
| C1222          | 1-125-777-11                                    | CERAMIC CHIP 0.1uF 10% 10V       |
| C1223          | 1-125-777-11                                    | CERAMIC CHIP 0.1uF 10% 10V       |
| C1224          | 1-107-689-21                                    | TANTAL. CHIP 1uF 20% 35V         |
| C1225          | 1-113-682-11                                    | TANTAL. CHIP 33uF 20% 10V        |
| C1226          | 1-125-837-91                                    | CERAMIC CHIP 1uF 10% 6.3V        |
| C1227          | 1-125-837-91                                    | CERAMIC CHIP 1uF 10% 6.3V        |
| C1228          | 1-125-837-91                                    | CERAMIC CHIP 1uF 10% 6.3V        |
| C1229          | 1-164-943-11                                    | CERAMIC CHIP 0.01uF 10% 16V      |
| C1230          | 1-164-943-11                                    | CERAMIC CHIP 0.01uF 10% 16V      |

| Ref. No. | Part No.     | Description                  |
|----------|--------------|------------------------------|
| C1231    | 1-164-943-11 | CERAMIC CHIP 0.01uF 10% 16V  |
| C1232    | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V   |
| C1233    | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V   |
| C1234    | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V   |
| C1235    | 1-125-837-91 | CERAMIC CHIP 1uF 10% 6.3V    |
| C1236    | 1-125-837-91 | CERAMIC CHIP 1uF 10% 6.3V    |
| C1237    | 1-125-837-91 | CERAMIC CHIP 1uF 10% 6.3V    |
| C1238    | 1-125-837-91 | CERAMIC CHIP 1uF 10% 6.3V    |
| C1239    | 1-125-837-91 | CERAMIC CHIP 1uF 10% 6.3V    |
| C1240    | 1-125-837-91 | CERAMIC CHIP 1uF 10% 6.3V    |
| C1241    | 1-128-964-91 | TANTAL. CHIP 100uF 20% 6.3V  |
| C1242    | 1-128-964-91 | TANTAL. CHIP 100uF 20% 6.3V  |
| C1243    | 1-128-964-91 | TANTAL. CHIP 100uF 20% 6.3V  |
| C1244    | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V   |
| C1245    | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V   |
| C1246    | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V   |
| C1247    | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V   |
| C1248    | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V   |
| C1249    | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V   |
| C1253    | 1-164-227-11 | CERAMIC CHIP 0.022uF 10% 25V |
| C1254    | 1-113-987-11 | TANTAL. CHIP 4.7uF 20% 25V   |
| C1255    | 1-113-987-11 | TANTAL. CHIP 4.7uF 20% 25V   |
| C1256    | 1-113-987-11 | TANTAL. CHIP 4.7uF 20% 25V   |
| C1257    | 1-104-919-11 | TANTAL. CHIP 10uF 20% 25V    |
| C1258    | 1-113-987-11 | TANTAL. CHIP 4.7uF 20% 25V   |
| C1259    | 1-113-987-11 | TANTAL. CHIP 4.7uF 20% 25V   |
| C1260    | 1-113-987-11 | TANTAL. CHIP 4.7uF 20% 25V   |
| C1261    | 1-162-970-11 | CERAMIC CHIP 0.01uF 10% 25V  |
| C1262    | 1-162-970-11 | CERAMIC CHIP 0.01uF 10% 25V  |
| C1263    | 1-162-970-11 | CERAMIC CHIP 0.01uF 10% 25V  |
| C1265    | 1-127-895-91 | TANTAL. CHIP 22uF 20% 4V     |
| C1266    | 1-127-895-91 | TANTAL. CHIP 22uF 20% 4V     |
| C1267    | 1-127-895-91 | TANTAL. CHIP 22uF 20% 4V     |
| C1301    | 1-127-895-91 | TANTAL. CHIP 22uF 20% 4V     |
| C1302    | 1-127-895-91 | TANTAL. CHIP 22uF 20% 4V     |
| C1303    | 1-127-895-91 | TANTAL. CHIP 22uF 20% 4V     |
| C1304    | 1-127-895-91 | TANTAL. CHIP 22uF 20% 4V     |
| C1305    | 1-127-895-91 | TANTAL. CHIP 22uF 20% 4V     |
| C1306    | 1-128-964-91 | TANTAL. CHIP 100uF 20% 6.3V  |
| C1307    | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V   |
| C1308    | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V   |
| C1309    | 1-164-943-11 | CERAMIC CHIP 0.01uF 10% 16V  |
| C1310    | 1-164-943-11 | CERAMIC CHIP 0.01uF 10% 16V  |
| C1311    | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V   |
| C1312    | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V   |
| C1314    | 1-164-943-11 | CERAMIC CHIP 0.01uF 10% 16V  |
| C1315    | 1-164-943-11 | CERAMIC CHIP 0.01uF 10% 16V  |
| C1316    | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V   |
| C1317    | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V   |
| C1318    | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V   |
| C1319    | 1-125-777-11 | CERAMIC CHIP 0.1uF 10% 10V   |
| C1320    | 1-164-943-11 | CERAMIC CHIP 0.01uF 10% 16V  |
| C1321    | 1-164-943-11 | CERAMIC CHIP 0.01uF 10% 16V  |
| C1322    | 1-164-943-11 | CERAMIC CHIP 0.01uF 10% 16V  |
| C1323    | 1-164-943-11 | CERAMIC CHIP 0.01uF 10% 16V  |
| C1324    | 1-164-943-11 | CERAMIC CHIP 0.01uF 10% 16V  |
| C1326    | 1-125-837-91 | CERAMIC CHIP 1uF 10% 6.3V    |
| C1327    | 1-127-895-91 | TANTAL. CHIP 22uF 20% 4V     |
| C1351    | 1-164-943-11 | CERAMIC CHIP 0.01uF 10% 16V  |
| C1352    | 1-125-837-91 | CERAMIC CHIP 1uF 10% 6.3V    |

VC-318

| Ref. No. | Part No.     | Description  |         |     |      |
|----------|--------------|--------------|---------|-----|------|
| C1353    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10% | 16V  |
| C1354    | 1-127-895-91 | TANTAL. CHIP | 22uF    | 20% | 4V   |
| C1601    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10% | 10V  |
| C1602    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10% | 10V  |
| C1603    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10% | 10V  |
| C1604    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10% | 10V  |
| C1605    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10% | 10V  |
| C1606    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10% | 10V  |
| C1607    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10% | 10V  |
| C1608    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10% | 10V  |
| C1609    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10% | 10V  |
| C1610    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10% | 10V  |
| C1612    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10% | 10V  |
| C1613    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10% | 10V  |
| C1614    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10% | 10V  |
| C1615    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10% | 10V  |
| C1616    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10% | 10V  |
| C1617    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10% | 10V  |
| C1618    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10% | 10V  |
| C1619    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10% | 10V  |
| C1620    | 1-127-895-91 | TANTAL. CHIP | 22uF    | 20% | 4V   |
| C1621    | 1-127-895-91 | TANTAL. CHIP | 22uF    | 20% | 4V   |
| C1622    | 1-127-895-91 | TANTAL. CHIP | 22uF    | 20% | 4V   |
| C1623    | 1-128-964-91 | TANTAL. CHIP | 100uF   | 20% | 6.3V |
| C1624    | 1-164-935-11 | CERAMIC CHIP | 470PF   | 10% | 50V  |
| C1701    | 1-107-826-11 | CERAMIC CHIP | 0.1uF   | 10% | 16V  |
| C1703    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10% | 10V  |
| C1705    | 1-107-826-11 | CERAMIC CHIP | 0.1uF   | 10% | 16V  |
| C1706    | 1-107-826-11 | CERAMIC CHIP | 0.1uF   | 10% | 16V  |
| C1707    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10% | 10V  |
| C1708    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10% | 10V  |
| C1709    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10% | 10V  |
| C1710    | 1-117-919-11 | TANTAL. CHIP | 10uF    | 20% | 6.3V |
| C1711    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10% | 10V  |
| C1712    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10% | 10V  |
| C1713    | 1-117-919-11 | TANTAL. CHIP | 10uF    | 20% | 6.3V |
| C1714    | 1-164-866-11 | CERAMIC CHIP | 47PF    | 5%  | 50V  |
| C1716    | 1-117-919-11 | TANTAL. CHIP | 10uF    | 20% | 6.3V |
| C1717    | 1-164-937-11 | CERAMIC CHIP | 0.001uF | 10% | 50V  |
| C1718    | 1-164-935-11 | CERAMIC CHIP | 470PF   | 10% | 50V  |
| C1801    | 1-127-895-91 | TANTAL. CHIP | 22uF    | 20% | 4V   |
| C1802    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10% | 10V  |
| C1901    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10% | 16V  |
| C1902    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10% | 16V  |
| C1903    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10% | 10V  |
| C1904    | 1-109-982-11 | CERAMIC CHIP | 1uF     | 10% | 10V  |
| C1905    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10% | 16V  |
| C1906    | 1-109-982-11 | CERAMIC CHIP | 1uF     | 10% | 10V  |
| C1907    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10% | 16V  |
| C1908    | 1-104-851-11 | TANTAL. CHIP | 10uF    | 20% | 10V  |
| C1909    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10% | 16V  |
| C1910    | 1-164-935-11 | CERAMIC CHIP | 470PF   | 10% | 50V  |
| C1911    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10% | 16V  |
| C1912    | 1-164-866-11 | CERAMIC CHIP | 47PF    | 5%  | 50V  |
| C1913    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10% | 10V  |
| C1914    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10% | 16V  |
| C1915    | 1-164-677-11 | CERAMIC CHIP | 0.033uF | 10% | 16V  |
| C1916    | 1-164-935-11 | CERAMIC CHIP | 470PF   | 10% | 50V  |
| C1917    | 1-164-866-11 | CERAMIC CHIP | 47PF    | 5%  | 50V  |
| C1918    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10% | 16V  |

| Ref. No. | Part No.     | Description  |         |        |      |
|----------|--------------|--------------|---------|--------|------|
| C1919    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C1920    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10%    | 10V  |
| C1921    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10%    | 10V  |
| C1922    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C1923    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C1924    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C1926    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10%    | 10V  |
| C1927    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10%    | 10V  |
| C2001    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2002    | 1-117-919-11 | TANTAL. CHIP | 10uF    | 20%    | 6.3V |
| C2003    | 1-127-760-11 | CERAMIC CHIP | 4.7uF   | 10%    | 6.3V |
| C2004    | 1-117-919-11 | TANTAL. CHIP | 10uF    | 20%    | 6.3V |
| C2005    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10%    | 10V  |
| C2006    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2007    | 1-125-837-91 | CERAMIC CHIP | 1uF     | 10%    | 6.3V |
| C2008    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2009    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2010    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2011    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2012    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2013    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2014    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2015    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2016    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2017    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2018    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2019    | 1-117-919-11 | TANTAL. CHIP | 10uF    | 20%    | 6.3V |
| C2020    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2022    | 1-164-862-11 | CERAMIC CHIP | 33PF    | 5%     | 50V  |
| C2023    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2024    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2025    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2027    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2102    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10%    | 10V  |
| C2103    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2104    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2106    | 1-164-850-11 | CERAMIC CHIP | 10PF    | 0.50PF | 50V  |
| C2107    | 1-164-850-11 | CERAMIC CHIP | 10PF    | 0.50PF | 50V  |
| C2109    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2110    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2111    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2112    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2113    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2114    | 1-164-937-11 | CERAMIC CHIP | 0.001uF | 10%    | 50V  |
| C2115    | 1-164-937-11 | CERAMIC CHIP | 0.001uF | 10%    | 50V  |
| C2116    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2117    | 1-164-937-11 | CERAMIC CHIP | 0.001uF | 10%    | 50V  |
| C2118    | 1-164-937-11 | CERAMIC CHIP | 0.001uF | 10%    | 50V  |
| C2121    | 1-125-837-91 | CERAMIC CHIP | 1uF     | 10%    | 6.3V |
| C2122    | 1-125-837-91 | CERAMIC CHIP | 1uF     | 10%    | 6.3V |
| C2123    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2124    | 1-164-937-11 | CERAMIC CHIP | 0.001uF | 10%    | 50V  |
| C2125    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2126    | 1-117-919-11 | TANTAL. CHIP | 10uF    | 20%    | 6.3V |
| C2127    | 1-117-863-11 | CERAMIC CHIP | 0.47uF  | 10%    | 6.3V |
| C2128    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2129    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10%    | 10V  |
| C2130    | 1-119-923-81 | CERAMIC CHIP | 0.047uF | 10%    | 10V  |
| C2131    | 1-164-937-11 | CERAMIC CHIP | 0.001uF | 10%    | 50V  |
| C2132    | 1-125-838-11 | CERAMIC CHIP | 2.2uF   | 10%    | 6.3V |

| Ref. No. | Part No.     | Description  |          |     |      | Ref. No. | Part No.     | Description  |         |        |      |
|----------|--------------|--------------|----------|-----|------|----------|--------------|--------------|---------|--------|------|
| C2133    | 1-127-895-91 | TANTAL. CHIP | 22uF     | 20% | 4V   | C2502    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2134    | 1-125-777-11 | CERAMIC CHIP | 0.1uF    | 10% | 10V  | C2503    | 1-164-850-11 | CERAMIC CHIP | 10PF    | 0.50PF | 50V  |
| C2135    | 1-164-943-11 | CERAMIC CHIP | 0.01uF   | 10% | 16V  | C2504    | 1-164-850-11 | CERAMIC CHIP | 10PF    | 0.50PF | 50V  |
| C2136    | 1-117-919-11 | TANTAL. CHIP | 10uF     | 20% | 6.3V | C2505    | 1-125-837-91 | CERAMIC CHIP | 1uF     | 10%    | 6.3V |
| C2137    | 1-164-943-11 | CERAMIC CHIP | 0.01uF   | 10% | 16V  | C2506    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10%    | 10V  |
| C2138    | 1-164-943-11 | CERAMIC CHIP | 0.01uF   | 10% | 16V  | C2507    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10%    | 10V  |
| C2139    | 1-125-777-11 | CERAMIC CHIP | 0.1uF    | 10% | 10V  | C2508    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10%    | 10V  |
| C2140    | 1-125-837-91 | CERAMIC CHIP | 1uF      | 10% | 6.3V | C2509    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10%    | 10V  |
| C2141    | 1-164-882-11 | CERAMIC CHIP | 220PF    | 5%  | 16V  | C2510    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10%    | 10V  |
| C2143    | 1-125-777-11 | CERAMIC CHIP | 0.1uF    | 10% | 10V  | C2511    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10%    | 10V  |
| C2144    | 1-164-943-11 | CERAMIC CHIP | 0.01uF   | 10% | 16V  | C2512    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10%    | 10V  |
| C2145    | 1-125-777-11 | CERAMIC CHIP | 0.1uF    | 10% | 10V  | C2513    | 1-125-837-91 | CERAMIC CHIP | 1uF     | 10%    | 6.3V |
| C2146    | 1-127-895-91 | TANTAL. CHIP | 22uF     | 20% | 4V   | C2514    | 1-125-837-91 | CERAMIC CHIP | 1uF     | 10%    | 6.3V |
| C2302    | 1-125-777-11 | CERAMIC CHIP | 0.1uF    | 10% | 10V  | C2515    | 1-125-837-91 | CERAMIC CHIP | 1uF     | 10%    | 6.3V |
| C2303    | 1-125-777-11 | CERAMIC CHIP | 0.1uF    | 10% | 10V  | C2516    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2304    | 1-125-777-11 | CERAMIC CHIP | 0.1uF    | 10% | 10V  | C2518    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2305    | 1-125-777-11 | CERAMIC CHIP | 0.1uF    | 10% | 10V  | C2519    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2306    | 1-125-777-11 | CERAMIC CHIP | 0.1uF    | 10% | 10V  | C2520    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2307    | 1-135-259-11 | TANTAL. CHIP | 10uF     | 20% | 6.3V | C2521    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2308    | 1-125-837-91 | CERAMIC CHIP | 1uF      | 10% | 6.3V | C2522    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2309    | 1-164-935-11 | CERAMIC CHIP | 470PF    | 10% | 50V  | C2523    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2310    | 1-125-837-91 | CERAMIC CHIP | 1uF      | 10% | 6.3V | C2524    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2311    | 1-164-935-11 | CERAMIC CHIP | 470PF    | 10% | 50V  | C2525    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10%    | 10V  |
| C2312    | 1-117-919-11 | TANTAL. CHIP | 10uF     | 20% | 6.3V | C2526    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10%    | 10V  |
| C2313    | 1-164-943-11 | CERAMIC CHIP | 0.01uF   | 10% | 16V  | C2715    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10%    | 10V  |
| C2317    | 1-125-777-11 | CERAMIC CHIP | 0.1uF    | 10% | 10V  | C2716    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10%    | 10V  |
| C2401    | 1-164-937-11 | CERAMIC CHIP | 0.001uF  | 10% | 50V  | C2717    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10%    | 10V  |
| C2402    | 1-164-937-11 | CERAMIC CHIP | 0.001uF  | 10% | 50V  | C2718    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10%    | 10V  |
| C2403    | 1-125-837-91 | CERAMIC CHIP | 1uF      | 10% | 6.3V | C2719    | 1-109-982-11 | CERAMIC CHIP | 1uF     | 10%    | 10V  |
| C2404    | 1-119-923-81 | CERAMIC CHIP | 0.047uF  | 10% | 10V  | C2720    | 1-119-923-81 | CERAMIC CHIP | 0.047uF | 10%    | 10V  |
| C2405    | 1-119-923-81 | CERAMIC CHIP | 0.047uF  | 10% | 10V  | C2721    | 1-104-851-11 | TANTAL. CHIP | 10uF    | 20%    | 10V  |
| C2406    | 1-107-826-11 | CERAMIC CHIP | 0.1uF    | 10% | 16V  | C2725    | 1-125-837-91 | CERAMIC CHIP | 1uF     | 10%    | 6.3V |
| C2407    | 1-164-942-11 | CERAMIC CHIP | 0.0068uF | 10% | 16V  | C2901    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10%    | 10V  |
| C2408    | 1-164-942-11 | CERAMIC CHIP | 0.0068uF | 10% | 16V  | C2903    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2409    | 1-125-777-11 | CERAMIC CHIP | 0.1uF    | 10% | 10V  | C2907    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2410    | 1-125-777-11 | CERAMIC CHIP | 0.1uF    | 10% | 10V  | C2908    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10%    | 10V  |
| C2411    | 1-125-777-11 | CERAMIC CHIP | 0.1uF    | 10% | 10V  | C2909    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10%    | 10V  |
| C2412    | 1-125-777-11 | CERAMIC CHIP | 0.1uF    | 10% | 10V  | C2910    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10%    | 10V  |
| C2414    | 1-125-777-11 | CERAMIC CHIP | 0.1uF    | 10% | 10V  | C2912    | 1-117-919-11 | TANTAL. CHIP | 10uF    | 20%    | 6.3V |
| C2415    | 1-107-820-11 | CERAMIC CHIP | 0.1uF    | 10% | 16V  | C2913    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10%    | 10V  |
| C2416    | 1-115-156-11 | CERAMIC CHIP | 1uF      | 10% | 10V  | C2914    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10%    | 10V  |
| C2417    | 1-125-777-11 | CERAMIC CHIP | 0.1uF    | 10% | 10V  | C2915    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10%    | 10V  |
| C2418    | 1-164-943-11 | CERAMIC CHIP | 0.01uF   | 10% | 16V  | C2916    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10%    | 10V  |
| C2422    | 1-125-777-11 | CERAMIC CHIP | 0.1uF    | 10% | 10V  | C2918    | 1-164-943-11 | CERAMIC CHIP | 0.01uF  | 10%    | 16V  |
| C2423    | 1-164-935-11 | CERAMIC CHIP | 470PF    | 10% | 50V  | C2919    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10%    | 10V  |
| C2424    | 1-107-819-11 | CERAMIC CHIP | 0.022uF  | 10% | 16V  | C2920    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10%    | 10V  |
| C2425    | 1-125-837-91 | CERAMIC CHIP | 1uF      | 10% | 6.3V | C2921    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10%    | 10V  |
| C2426    | 1-125-837-91 | CERAMIC CHIP | 1uF      | 10% | 6.3V | C2922    | 1-117-919-11 | TANTAL. CHIP | 10uF    | 20%    | 6.3V |
| C2427    | 1-125-777-11 | CERAMIC CHIP | 0.1uF    | 10% | 10V  | C2923    | 1-117-919-11 | TANTAL. CHIP | 10uF    | 20%    | 6.3V |
| C2428    | 1-164-935-11 | CERAMIC CHIP | 470PF    | 10% | 50V  | C2924    | 1-117-919-11 | TANTAL. CHIP | 10uF    | 20%    | 6.3V |
| C2429    | 1-119-923-81 | CERAMIC CHIP | 0.047uF  | 10% | 10V  | C2925    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10%    | 10V  |
| C2430    | 1-164-935-11 | CERAMIC CHIP | 470PF    | 10% | 50V  | C2926    | 1-164-850-11 | CERAMIC CHIP | 10PF    | 0.50PF | 50V  |
| C2431    | 1-125-777-11 | CERAMIC CHIP | 0.1uF    | 10% | 10V  | C2927    | 1-164-935-11 | CERAMIC CHIP | 470PF   | 10%    | 50V  |
| C2432    | 1-125-777-11 | CERAMIC CHIP | 0.1uF    | 10% | 10V  | C2928    | 1-164-858-11 | CERAMIC CHIP | 22PF    | 5%     | 50V  |
| C2433    | 1-164-935-11 | CERAMIC CHIP | 470PF    | 10% | 50V  | C3001    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10%    | 10V  |
| C2434    | 1-107-826-11 | CERAMIC CHIP | 0.1uF    | 10% | 16V  | C3002    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10%    | 10V  |
| C2435    | 1-164-947-11 | CERAMIC CHIP | 0.01uF   | 10% | 50V  | C3003    | 1-117-919-11 | TANTAL. CHIP | 10uF    | 20%    | 6.3V |
| C2436    | 1-164-947-11 | CERAMIC CHIP | 0.01uF   | 10% | 50V  | C3004    | 1-125-777-11 | CERAMIC CHIP | 0.1uF   | 10%    | 10V  |
| C2437    | 1-164-947-11 | CERAMIC CHIP | 0.01uF   | 10% | 50V  | C3101    | 1-164-850-11 | CERAMIC CHIP | 10PF    | 0.50PF | 50V  |
| C2501    | 1-164-943-11 | CERAMIC CHIP | 0.01uF   | 10% | 16V  | C3102    | 1-164-850-11 | CERAMIC CHIP | 10PF    | 0.50PF | 50V  |

## VC-318

| Ref. No. | Part No.     | Description  |          |     |      |
|----------|--------------|--------------|----------|-----|------|
| C3103    | 1-119-749-11 | TANTAL. CHIP | 33uF     | 20% | 4V   |
| C3104    | 1-125-777-11 | CERAMIC CHIP | 0.1uF    | 10% | 10V  |
| C3105    | 1-164-943-11 | CERAMIC CHIP | 0.01uF   | 10% | 16V  |
| C3106    | 1-164-943-11 | CERAMIC CHIP | 0.01uF   | 10% | 16V  |
| C3107    | 1-164-943-11 | CERAMIC CHIP | 0.01uF   | 10% | 16V  |
| C3113    | 1-164-943-11 | CERAMIC CHIP | 0.01uF   | 10% | 16V  |
| C3115    | 1-164-943-11 | CERAMIC CHIP | 0.01uF   | 10% | 16V  |
| C3118    | 1-164-942-11 | CERAMIC CHIP | 0.0068uF | 10% | 16V  |
| C3121    | 1-164-939-11 | CERAMIC CHIP | 0.0022uF | 10% | 50V  |
| C3122    | 1-164-939-11 | CERAMIC CHIP | 0.0022uF | 10% | 50V  |
| C4301    | 1-127-760-11 | CERAMIC CHIP | 4.7uF    | 10% | 6.3V |
| C4302    | 1-107-820-11 | CERAMIC CHIP | 0.1uF    |     | 16V  |
| C4303    | 1-125-837-91 | CERAMIC CHIP | 1uF      | 10% | 6.3V |

## &lt; CONNECTOR &gt;

|        |              |                                |
|--------|--------------|--------------------------------|
| CN1001 | 1-785-967-21 | CONNECTOR, BOARD TO BOARD 100P |
| CN1002 | 1-815-855-31 | CONNECTOR, BOARD TO BOARD 80P  |
| CN1003 | 1-784-939-11 | CONNECTOR, BOARD TO BOARD 60P  |
| CN1005 | 1-784-421-11 | CONNECTOR, FFC/FPC (ZIF) 27P   |
| CN1006 | 1-784-421-11 | CONNECTOR, FFC/FPC (ZIF) 27P   |
| CN1007 | 1-784-421-11 | CONNECTOR, FFC/FPC (ZIF) 27P   |
| CN1008 | 1-750-303-41 | CONNECTOR, BOARD TO BOARD 20P  |
| CN1009 | 1-779-329-11 | CONNECTOR, FFC/FPC 10P         |
| CN1021 | 1-784-422-11 | CONNECTOR, FFC/FPC (ZIF) 33P   |
| CN1022 | 1-691-374-11 | CONNECTOR, FFC/FPC 10P         |
| CN1024 | 1-794-766-21 | CONNECTOR, FFC/FPC (LIF) 6P    |
| CN1201 | 1-784-939-11 | CONNECTOR, BOARD TO BOARD 60P  |
| CN1901 | 1-691-374-11 | CONNECTOR, FFC/FPC 10P         |

## &lt; DIODE &gt;

|       |              |                       |
|-------|--------------|-----------------------|
| D1001 | 8-719-056-61 | DIODE MAZS082008SO    |
| D1201 | 8-719-988-61 | DIODE 1SS355TE-17     |
| D1202 | 8-719-988-61 | DIODE 1SS355TE-17     |
| D1203 | 8-719-082-63 | DIODE 1SV329(TPL3)    |
| D1204 | 8-719-988-61 | DIODE 1SS355TE-17     |
| D2101 | 8-719-992-02 | DIODE RB705D-T146     |
| D2102 | 8-719-081-96 | DIODE KV1870STL       |
| D2103 | 8-719-992-02 | DIODE RB705D-T146     |
| D2104 | 8-719-081-96 | DIODE KV1870STL       |
| D2701 | 8-719-421-67 | DIODE MA132WK-(K8).SO |
| D2702 | 8-719-077-48 | DIODE MA4L72800ASO    |
| D2703 | 8-719-077-54 | DIODE MA4L11100ASO    |
| D2901 | 8-719-077-54 | DIODE MA4L11100ASO    |
| D2903 | 8-719-077-48 | DIODE MA4L72800ASO    |
| D2904 | 8-719-077-48 | DIODE MA4L72800ASO    |
| D2906 | 8-719-077-57 | DIODE DF3A8.2C(TPL3)  |
| D2907 | 8-719-077-57 | DIODE DF3A8.2C(TPL3)  |
| D2909 | 8-719-077-57 | DIODE DF3A8.2C(TPL3)  |
| D3101 | 8-719-056-23 | DIODE MA2S111-(K8).SO |
| D4301 | 8-719-056-23 | DIODE MA2S111-(K8).SO |

## &lt; FERRITE BEAD &gt;

|        |              |         |     |
|--------|--------------|---------|-----|
| FB1201 | 1-414-760-21 | FERRITE | 0uH |
| FB1207 | 1-414-760-21 | FERRITE | 0uH |
| FB1210 | 1-414-760-21 | FERRITE | 0uH |
| FB1211 | 1-414-760-21 | FERRITE | 0uH |
| FB1212 | 1-414-760-21 | FERRITE | 0uH |

|          |              |             |     |
|----------|--------------|-------------|-----|
| Ref. No. | Part No.     | Description |     |
| FB1213   | 1-414-760-21 | FERRITE     | 0uH |
| FB1214   | 1-414-760-21 | FERRITE     | 0uH |
| FB1215   | 1-414-760-21 | FERRITE     | 0uH |
| FB1216   | 1-400-047-21 | FERRITE     | 0uH |
| FB1217   | 1-400-047-21 | FERRITE     | 0uH |
| FB1218   | 1-400-047-21 | FERRITE     | 0uH |
| FB1219   | 1-400-047-21 | FERRITE     | 0uH |
| FB1220   | 1-400-047-21 | FERRITE     | 0uH |
| FB1221   | 1-400-047-21 | FERRITE     | 0uH |
| FB1301   | 1-414-760-21 | FERRITE     | 0uH |
| FB1302   | 1-414-760-21 | FERRITE     | 0uH |
| FB1303   | 1-414-760-21 | FERRITE     | 0uH |
| FB1351   | 1-414-760-21 | FERRITE     | 0uH |
| FB1601   | 1-469-676-22 | FERRITE     | 0uH |
| FB1602   | 1-469-350-21 | FERRITE     | 0uH |

|        |              |         |     |
|--------|--------------|---------|-----|
| FB1701 | 1-469-676-22 | FERRITE | 0uH |
| FB1702 | 1-469-676-22 | FERRITE | 0uH |
| FB1901 | 1-469-676-22 | FERRITE | 0uH |
| FB2001 | 1-414-760-21 | FERRITE | 0uH |
| FB2101 | 1-414-760-21 | FERRITE | 0uH |
| FB2102 | 1-414-760-21 | FERRITE | 0uH |
| FB2103 | 1-414-760-21 | FERRITE | 0uH |
| FB2104 | 1-414-760-21 | FERRITE | 0uH |
| FB2105 | 1-414-760-21 | FERRITE | 0uH |
| FB2301 | 1-469-676-22 | FERRITE | 0uH |
| FB2302 | 1-469-676-22 | FERRITE | 0uH |
| FB2303 | 1-469-676-22 | FERRITE | 0uH |
| FB2501 | 1-469-676-22 | FERRITE | 0uH |
| FB2502 | 1-469-676-22 | FERRITE | 0uH |
| FB2503 | 1-469-676-22 | FERRITE | 0uH |

|          |              |         |     |
|----------|--------------|---------|-----|
| FB2902   | 1-469-676-22 | FERRITE | 0uH |
| FB2903   | 1-469-676-22 | FERRITE | 0uH |
| FB2904   | 1-469-676-22 | FERRITE | 0uH |
| FB2905   | 1-469-676-22 | FERRITE | 0uH |
| * FB2906 | 1-500-282-11 | FERRITE | 0uH |
| FB3001   | 1-469-676-22 | FERRITE | 0uH |
| FB3101   | 1-469-676-22 | FERRITE | 0uH |

## &lt; IC &gt;

|        |              |                         |
|--------|--------------|-------------------------|
| IC1201 | 8-759-075-66 | IC TA75S01F(TE85R)      |
| IC1202 | 8-752-420-63 | IC CXD3613R-T6          |
| IC1203 | 6-701-756-01 | IC AD80054JSTRL         |
| IC1204 | 6-701-756-01 | IC AD80054JSTRL         |
| IC1205 | 6-701-756-01 | IC AD80054JSTRL         |
| IC1301 | 6-702-583-01 | IC T8F85XB-0001(E0)     |
| IC1302 | 8-759-664-14 | IC NJU7241F25(TE2)      |
| IC1351 | 6-702-227-01 | IC K4S283233F-EE1LT     |
| IC1601 | 8-752-417-39 | IC M65515WG-DF0Z        |
| IC1701 | 8-759-829-96 | IC MB81F641642J-15PB-ER |
| IC1704 | 6-701-986-01 | IC HG76C020BPTLV        |
| IC1801 | 8-759-831-77 | IC BH2221FV-E2          |
| IC1901 | 8-752-086-52 | IC CXA2071R-T4          |
| IC1902 | 8-752-086-53 | IC CXA2072R-T4          |
| IC2001 | 6-701-740-01 | IC MB87L4261LGA-G-ER    |
| IC2101 | 8-759-650-63 | IC CAIN-CSP             |
| IC2102 | 6-700-553-01 | IC SN104266BGGM-TEB     |
| IC2301 | 8-752-415-97 | IC CXD3155GA-T6         |
| IC2302 | 6-701-691-01 | IC AK5355VT-E2          |
| IC2401 | 6-701-927-01 | IC TB6550XBG(EB)        |

| Ref. No.       | Part No.     | Description                    | Ref. No.     | Part No.     | Description                |
|----------------|--------------|--------------------------------|--------------|--------------|----------------------------|
| IC2501         | 6-802-335-01 | IC MB91194LGA-G-120-ER         | Q2101        | 8-729-054-49 | TRANSISTOR UP04401008S0    |
| IC2502         | 6-700-770-01 | IC BR9016ARFVM-WTR             | Q2102        | 8-729-050-74 | TRANSISTOR EC3101C-PM-TL   |
| IC2702         | 6-702-096-01 | IC BD4201FV-E2                 | Q2103        | 8-729-050-74 | TRANSISTOR EC3101C-PM-TL   |
| IC2703         | 8-759-642-45 | IC TL1596CPWR                  | Q2104        | 8-729-054-49 | TRANSISTOR UP04401008S0    |
| IC2901         | 6-700-600-01 | IC M95640-WDL6T                | Q2401        | 8-729-049-91 | TRANSISTOR 2SA2018H-T2L    |
| IC2903         | 8-759-082-58 | IC TC7W08FU(TE12R)             | Q2402        | 8-729-050-76 | TRANSISTOR EC3201C-PM-TL   |
| IC2904         | 8-759-271-88 | IC TC7SHU04FU-TE85R            | Q2501        | 8-729-050-89 | TRANSISTOR UNRL21100AS0    |
| IC2905         | 6-702-307-01 | IC HD6417190BPZ110BHV          | Q2701        | 8-729-050-79 | TRANSISTOR UNRL11100AS0    |
| IC3001         | 6-701-838-01 | IC HY5V16CF-SDR-E1             | Q2703        | 8-729-050-91 | TRANSISTOR UNRL21300AS0    |
| IC3002         | 6-802-293-01 | IC MBM29LV160BE-90PBT-58-ER-E1 | Q2704        | 8-729-050-76 | TRANSISTOR EC3201C-PM-TL   |
| IC3101         | 6-802-336-01 | IC MB89097LGA-G-142-ER         | Q2903        | 8-729-050-91 | TRANSISTOR UNRL21300AS0    |
| IC4301         | 8-759-586-19 | IC TC7WH123FU(TE12R)           | Q2904        | 8-729-050-81 | TRANSISTOR UNRL11300AS0    |
| < COIL >       |              |                                | Q2905        | 8-729-050-74 | TRANSISTOR EC3101C-PM-TL   |
| L1006          | 1-414-770-91 | INDUCTOR 4.7uH                 | Q2906        | 8-729-050-89 | TRANSISTOR UNRL21100AS0    |
| L1201          | 1-469-058-11 | INDUCTOR 22uH                  | Q2909        | 8-729-050-91 | TRANSISTOR UNRL21300AS0    |
| L1202          | 1-469-058-11 | INDUCTOR 22uH                  | Q2910        | 8-729-050-81 | TRANSISTOR UNRL11300AS0    |
| L1203          | 1-469-058-11 | INDUCTOR 22uH                  | Q2911        | 8-729-054-49 | TRANSISTOR UP04401008S0    |
| L1204          | 1-469-058-11 | INDUCTOR 22uH                  | Q2912        | 8-729-049-91 | TRANSISTOR 2SA2018H-T2L    |
| L1205          | 1-469-058-11 | INDUCTOR 22uH                  | Q3101        | 8-729-041-43 | TRANSISTOR HN1L02FU(TE85R) |
| L1206          | 1-469-058-11 | INDUCTOR 22uH                  | Q4301        | 8-729-050-91 | TRANSISTOR UNRL21300AS0    |
| L1207          | 1-414-757-11 | INDUCTOR 100uH                 | Q4302        | 8-729-050-74 | TRANSISTOR EC3101C-PM-TL   |
| L1208          | 1-414-757-11 | INDUCTOR 100uH                 | Q4303        | 8-729-050-91 | TRANSISTOR UNRL21300AS0    |
| L1209          | 1-414-757-11 | INDUCTOR 100uH                 | < RESISTOR > |              |                            |
| L1210          | 1-469-058-11 | INDUCTOR 22uH                  | R1002        | 1-218-954-11 | RES-CHIP 1.2K 5% 1/16W     |
| L1211          | 1-469-058-11 | INDUCTOR 22uH                  | R1003        | 1-218-955-11 | RES-CHIP 1.5K 5% 1/16W     |
| L1212          | 1-469-058-11 | INDUCTOR 22uH                  | R1004        | 1-218-957-11 | RES-CHIP 2.2K 5% 1/16W     |
| L1301          | 1-414-771-91 | INDUCTOR 10uH                  | R1021        | 1-218-935-11 | RES-CHIP 33 5% 1/16W       |
| L1302          | 1-414-771-91 | INDUCTOR 10uH                  | R1022        | 1-218-935-11 | RES-CHIP 33 5% 1/16W       |
| L1303          | 1-414-771-91 | INDUCTOR 10uH                  | R1023        | 1-218-953-11 | RES-CHIP 1K 5% 1/16W       |
| L1304          | 1-469-058-11 | INDUCTOR 22uH                  | R1202        | 1-218-977-11 | RES-CHIP 100K 5% 1/16W     |
| L1601          | 1-414-754-11 | INDUCTOR 10uH                  | R1203        | 1-218-977-11 | RES-CHIP 100K 5% 1/16W     |
| L1602          | 1-414-771-91 | INDUCTOR 10uH                  | R1204        | 1-218-962-11 | RES-CHIP 5.6K 5% 1/16W     |
| L1701          | 1-469-525-91 | INDUCTOR 10uH                  | R1205        | 1-218-966-11 | RES-CHIP 12K 5% 1/16W      |
| L1801          | 1-469-525-91 | INDUCTOR 10uH                  | R1206        | 1-218-985-11 | RES-CHIP 470K 5% 1/16W     |
| L1901          | 1-469-525-91 | INDUCTOR 10uH                  | R1207        | 1-218-990-11 | SHORT CHIP 0               |
| L1902          | 1-469-525-91 | INDUCTOR 10uH                  | R1208        | 1-218-990-11 | SHORT CHIP 0               |
| L1903          | 1-469-525-91 | INDUCTOR 10uH                  | R1209        | 1-208-635-11 | RES-CHIP 10 5% 1/16W       |
| L2001          | 1-469-525-91 | INDUCTOR 10uH                  | R1210        | 1-218-932-11 | RES-CHIP 18 5% 1/16W       |
| L2002          | 1-469-525-91 | INDUCTOR 10uH                  | R1211        | 1-218-965-11 | RES-CHIP 10K 5% 1/16W      |
| L2101          | 1-412-936-11 | INDUCTOR 0.56uH                | R1212        | 1-218-932-11 | RES-CHIP 18 5% 1/16W       |
| L2102          | 1-414-246-11 | INDUCTOR 1.8uH                 | R1213        | 1-220-160-11 | RES-CHIP 13 5% 1/16W       |
| L2103          | 1-469-525-91 | INDUCTOR 10uH                  | R1214        | 1-208-455-11 | RES-CHIP 5.6 5% 1/16W      |
| L2104          | 1-469-525-91 | INDUCTOR 10uH                  | R1215        | 1-220-160-11 | RES-CHIP 13 5% 1/16W       |
| L2105          | 1-469-525-91 | INDUCTOR 10uH                  | R1216        | 1-208-455-11 | RES-CHIP 5.6 5% 1/16W      |
| L2401          | 1-414-771-91 | INDUCTOR 10uH                  | R1220        | 1-220-160-11 | RES-CHIP 13 5% 1/16W       |
| L2901          | 1-469-525-91 | INDUCTOR 10uH                  | R1221        | 1-208-455-11 | RES-CHIP 5.6 5% 1/16W      |
| L4301          | 1-414-771-91 | INDUCTOR 10uH                  | R1222        | 1-218-977-11 | RES-CHIP 100K 5% 1/16W     |
| < TRANSISTOR > |              |                                | R1229        | 1-218-981-11 | RES-CHIP 220K 5% 1/16W     |
| Q1001          | 8-729-054-44 | TRANSISTOR RN2902FE(TPLR3)     | R1230        | 1-218-989-11 | RES-CHIP 1M 5% 1/16W       |
| Q1002          | 8-729-053-57 | TRANSISTOR RN1902FE(TPLR3)     | R1301        | 1-218-977-11 | RES-CHIP 100K 5% 1/16W     |
| Q1003          | 8-729-050-79 | TRANSISTOR UNRL11100AS0        | R1302        | 1-216-864-11 | METAL CHIP 0 5% 1/16W      |
| Q1201          | 8-729-041-23 | TRANSISTOR NDS356AP            | R1303        | 1-218-945-11 | RES-CHIP 220 5% 1/16W      |
| Q1202          | 8-729-037-74 | TRANSISTOR UN9213J-(K8).SO     | R1304        | 1-218-945-11 | RES-CHIP 220 5% 1/16W      |
| Q1901          | 8-729-050-74 | TRANSISTOR EC3101C-PM-TL       | R1305        | 1-218-945-11 | RES-CHIP 220 5% 1/16W      |
| Q2001          | 8-759-054-48 | TRANSISTOR UP04601008S0        | R1306        | 1-218-945-11 | RES-CHIP 220 5% 1/16W      |
| Q2002          | 8-729-050-91 | TRANSISTOR UNRL21300AS0        | R1307        | 1-218-945-11 | RES-CHIP 220 5% 1/16W      |
| Q2003          | 8-729-049-91 | TRANSISTOR 2SA2018H-T2L        | R1308        | 1-218-945-11 | RES-CHIP 220 5% 1/16W      |
| Q2004          | 8-729-050-74 | TRANSISTOR EC3101C-PM-TL       | R1309        | 1-218-945-11 | RES-CHIP 220 5% 1/16W      |

DSR-PDX10/PDX10P

VC-318

| Ref. No. | Part No.     | Description |            |      |       |
|----------|--------------|-------------|------------|------|-------|
| R1310    | 1-218-945-11 | RES-CHIP    | 220        | 5%   | 1/16W |
| R1311    | 1-218-945-11 | RES-CHIP    | 220        | 5%   | 1/16W |
| R1312    | 1-218-945-11 | RES-CHIP    | 220        | 5%   | 1/16W |
| R1313    | 1-218-945-11 | RES-CHIP    | 220        | 5%   | 1/16W |
| R1314    | 1-218-945-11 | RES-CHIP    | 220        | 5%   | 1/16W |
| R1315    | 1-218-945-11 | RES-CHIP    | 220        | 5%   | 1/16W |
| R1316    | 1-218-945-11 | RES-CHIP    | 220        | 5%   | 1/16W |
| R1317    | 1-218-945-11 | RES-CHIP    | 220        | 5%   | 1/16W |
| R1318    | 1-218-945-11 | RES-CHIP    | 220        | 5%   | 1/16W |
| R1325    | 1-218-990-11 | SHORT CHIP  | 0          |      |       |
| R1326    | 1-218-990-11 | SHORT CHIP  | 0          |      |       |
| R1327    | 1-218-990-11 | SHORT CHIP  | 0          |      |       |
| R1328    | 1-218-990-11 | SHORT CHIP  | 0          |      |       |
| R1351    | 1-218-990-11 | SHORT CHIP  | 0          |      |       |
| R1601    | 1-216-821-11 | METAL CHIP  | 1K         | 5%   | 1/16W |
| R1602    | 1-216-864-11 | METAL CHIP  | 0          | 5%   | 1/16W |
| R1603    | 1-218-990-11 | SHORT CHIP  | 0 (PDX10)  |      |       |
| R1604    | 1-218-990-11 | SHORT CHIP  | 0 (PDX10P) |      |       |
| R1605    | 1-218-990-11 | SHORT CHIP  | 0 (PDX10P) |      |       |
| R1606    | 1-218-990-11 | SHORT CHIP  | 0 (PDX10)  |      |       |
| R1607    | 1-218-990-11 | SHORT CHIP  | 0          |      |       |
| R1707    | 1-218-990-11 | SHORT CHIP  | 0          |      |       |
| R1709    | 1-216-864-11 | METAL CHIP  | 0          | 5%   | 1/16W |
| R1710    | 1-218-990-11 | SHORT CHIP  | 0          |      |       |
| R1712    | 1-216-864-11 | METAL CHIP  | 0          | 5%   | 1/16W |
| R1713    | 1-218-990-11 | SHORT CHIP  | 0          |      |       |
| R1714    | 1-218-965-11 | RES-CHIP    | 10K        | 5%   | 1/16W |
| R1715    | 1-218-953-11 | RES-CHIP    | 1K         | 5%   | 1/16W |
| R1901    | 1-218-965-11 | RES-CHIP    | 10K        | 5%   | 1/16W |
| R1902    | 1-218-963-11 | RES-CHIP    | 6.8K       | 5%   | 1/16W |
| R1903    | 1-218-989-11 | RES-CHIP    | 1M         | 5%   | 1/16W |
| R1904    | 1-218-979-11 | RES-CHIP    | 150K       | 5%   | 1/16W |
| R1905    | 1-218-939-11 | RES-CHIP    | 68         | 5%   | 1/16W |
| R1906    | 1-208-920-81 | METAL CHIP  | 24K        | 0.5% | 1/16W |
| R1907    | 1-218-965-11 | RES-CHIP    | 10K        | 5%   | 1/16W |
| R1908    | 1-218-949-11 | RES-CHIP    | 470        | 5%   | 1/16W |
| R1910    | 1-218-961-11 | RES-CHIP    | 4.7K       | 5%   | 1/16W |
| R1911    | 1-218-965-11 | RES-CHIP    | 10K        | 5%   | 1/16W |
| R1912    | 1-218-969-11 | RES-CHIP    | 22K        | 5%   | 1/16W |
| R1913    | 1-208-910-11 | METAL CHIP  | 9.1K       | 0.5% | 1/16W |
| R1914    | 1-208-910-11 | METAL CHIP  | 9.1K       | 0.5% | 1/16W |
| R1915    | 1-218-969-11 | RES-CHIP    | 22K        | 5%   | 1/16W |
| R1916    | 1-218-945-11 | METAL CHIP  | 220        | 0.5% | 1/16W |
| R1917    | 1-218-945-11 | METAL CHIP  | 220        | 0.5% | 1/16W |
| R1918    | 1-218-945-11 | METAL CHIP  | 220        | 0.5% | 1/16W |
| R1919    | 1-218-945-11 | METAL CHIP  | 220        | 0.5% | 1/16W |
| R1922    | 1-218-990-11 | SHORT CHIP  | 0          |      |       |
| R2001    | 1-218-965-11 | RES-CHIP    | 10K        | 5%   | 1/16W |
| R2002    | 1-218-951-11 | RES-CHIP    | 680        | 5%   | 1/16W |
| R2003    | 1-218-965-11 | RES-CHIP    | 10K        | 5%   | 1/16W |
| R2004    | 1-218-949-11 | RES-CHIP    | 470        | 5%   | 1/16W |
| R2005    | 1-218-990-11 | SHORT CHIP  | 0          |      |       |
| R2006    | 1-218-973-11 | RES-CHIP    | 47K        | 5%   | 1/16W |
| R2007    | 1-218-965-11 | RES-CHIP    | 10K        | 5%   | 1/16W |
| R2008    | 1-218-960-11 | RES-CHIP    | 3.9K       | 5%   | 1/16W |
| R2009    | 1-218-953-11 | RES-CHIP    | 1K         | 5%   | 1/16W |
| R2010    | 1-218-957-11 | RES-CHIP    | 2.2K       | 5%   | 1/16W |
| R2101    | 1-218-990-11 | SHORT CHIP  | 0          |      |       |
| R2103    | 1-218-990-11 | SHORT CHIP  | 0          |      |       |
| R2104    | 1-218-965-11 | RES-CHIP    | 10K        | 5%   | 1/16W |

| Ref. No. | Part No.     | Description |      |      |       |
|----------|--------------|-------------|------|------|-------|
| R2105    | 1-218-965-11 | RES-CHIP    | 10K  | 5%   | 1/16W |
| R2106    | 1-218-946-11 | RES-CHIP    | 270  | 5%   | 1/16W |
| R2107    | 1-218-959-11 | RES-CHIP    | 3.3K | 5%   | 1/16W |
| R2108    | 1-218-959-11 | RES-CHIP    | 3.3K | 5%   | 1/16W |
| R2109    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R2110    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R2111    | 1-218-965-11 | RES-CHIP    | 10K  | 5%   | 1/16W |
| R2112    | 1-218-965-11 | RES-CHIP    | 10K  | 5%   | 1/16W |
| R2113    | 1-218-959-11 | RES-CHIP    | 3.3K | 5%   | 1/16W |
| R2114    | 1-218-957-11 | RES-CHIP    | 2.2K | 5%   | 1/16W |
| R2115    | 1-218-959-11 | RES-CHIP    | 3.3K | 5%   | 1/16W |
| R2116    | 1-218-941-81 | RES-CHIP    | 100  | 5%   | 1/16W |
| R2117    | 1-218-947-11 | RES-CHIP    | 330  | 5%   | 1/16W |
| R2118    | 1-218-961-11 | RES-CHIP    | 4.7K | 5%   | 1/16W |
| R2119    | 1-218-937-11 | RES-CHIP    | 47   | 5%   | 1/16W |
| R2120    | 1-208-683-11 | METAL CHIP  | 1K   | 0.5% | 1/16W |
| R2121    | 1-208-683-11 | METAL CHIP  | 1K   | 0.5% | 1/16W |
| R2122    | 1-218-849-11 | METAL CHIP  | 1.2K | 0.5% | 1/16W |
| R2123    | 1-208-683-11 | METAL CHIP  | 1K   | 0.5% | 1/16W |
| R2124    | 1-218-849-11 | METAL CHIP  | 1.2K | 0.5% | 1/16W |
| R2125    | 1-218-849-11 | METAL CHIP  | 1.2K | 0.5% | 1/16W |
| R2127    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W |
| R2129    | 1-218-946-11 | RES-CHIP    | 270  | 5%   | 1/16W |
| R2130    | 1-218-957-11 | RES-CHIP    | 2.2K | 5%   | 1/16W |
| R2131    | 1-218-957-11 | RES-CHIP    | 2.2K | 5%   | 1/16W |
| R2132    | 1-218-943-11 | RES-CHIP    | 150  | 5%   | 1/16W |
| R2134    | 1-208-709-11 | METAL CHIP  | 12K  | 0.5% | 1/16W |
| R2135    | 1-208-709-11 | METAL CHIP  | 12K  | 0.5% | 1/16W |
| R2136    | 1-218-938-11 | METAL CHIP  | 56   | 0.5% | 1/16W |
| R2137    | 1-218-938-11 | METAL CHIP  | 56   | 0.5% | 1/16W |
| R2138    | 1-218-864-11 | METAL CHIP  | 5.1K | 0.5% | 1/16W |
| R2139    | 1-218-938-11 | METAL CHIP  | 56   | 0.5% | 1/16W |
| R2141    | 1-218-938-11 | METAL CHIP  | 56   | 0.5% | 1/16W |
| R2142    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R2143    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R2301    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R2302    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R2304    | 1-218-934-11 | RES-CHIP    | 27   | 5%   | 1/16W |
| R2305    | 1-218-934-11 | RES-CHIP    | 27   | 5%   | 1/16W |
| R2306    | 1-218-961-11 | RES-CHIP    | 4.7K | 5%   | 1/16W |
| R2307    | 1-218-961-11 | RES-CHIP    | 4.7K | 5%   | 1/16W |
| R2308    | 1-218-963-11 | RES-CHIP    | 6.8K | 5%   | 1/16W |
| R2309    | 1-218-963-11 | RES-CHIP    | 6.8K | 5%   | 1/16W |
| R2310    | 1-218-977-11 | RES-CHIP    | 100K | 5%   | 1/16W |
| R2311    | 1-216-295-91 | SHORT CHIP  | 0    |      |       |
| R2315    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R2403    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R2404    | 1-218-965-11 | RES-CHIP    | 10K  | 5%   | 1/16W |
| R2405    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R2407    | 1-218-965-11 | RES-CHIP    | 10K  | 5%   | 1/16W |
| R2411    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R2412    | 1-218-965-11 | RES-CHIP    | 10K  | 5%   | 1/16W |
| R2413    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R2415    | 1-218-965-11 | RES-CHIP    | 10K  | 5%   | 1/16W |
| R2416    | 1-218-957-11 | RES-CHIP    | 2.2K | 5%   | 1/16W |
| R2417    | 1-216-789-11 | METAL CHIP  | 2.2  | 5%   | 1/16W |
| R2418    | 1-218-967-11 | RES-CHIP    | 15K  | 5%   | 1/16W |
| R2419    | 1-216-789-11 | METAL CHIP  | 2.2  | 5%   | 1/16W |
| R2420    | 1-216-789-11 | METAL CHIP  | 2.2  | 5%   | 1/16W |
| R2423    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |



| Ref. No. | Part No.     | Description |      |    |                     | Ref. No. | Part No.     | Description |      |      |       |
|----------|--------------|-------------|------|----|---------------------|----------|--------------|-------------|------|------|-------|
| R2424    | 1-218-968-11 | RES-CHIP    | 18K  | 5% | 1/16W               | R2902    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R2429    | 1-218-965-11 | RES-CHIP    | 10K  | 5% | 1/16W               | R2904    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R2431    | 1-218-946-11 | RES-CHIP    | 270  | 5% | 1/16W               | R2905    | 1-218-985-11 | RES-CHIP    | 470K | 5%   | 1/16W |
| R2434    | 1-218-990-11 | SHORT CHIP  | 0    |    |                     | R2906    | 1-218-985-11 | RES-CHIP    | 470K | 5%   | 1/16W |
| R2436    | 1-218-969-11 | RES-CHIP    | 22K  | 5% | 1/16W               | R2907    | 1-218-977-11 | RES-CHIP    | 100K | 5%   | 1/16W |
| R2437    | 1-218-961-11 | RES-CHIP    | 4.7K | 5% | 1/16W               | R2910    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R2438    | 1-218-977-11 | RES-CHIP    | 100K | 5% | 1/16W               | R2911    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R2501    | 1-218-941-81 | RES-CHIP    | 100  | 5% | 1/16W               | R2912    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R2502    | 1-218-965-11 | RES-CHIP    | 10K  | 5% | 1/16W               | R2913    | 1-218-989-11 | RES-CHIP    | 1M   | 5%   | 1/16W |
| R2503    | 1-218-965-11 | RES-CHIP    | 10K  | 5% | 1/16W               | R2914    | 1-208-645-11 | METAL CHIP  | 27   | 0.5% | 1/16W |
| R2504    | 1-218-977-11 | RES-CHIP    | 100K | 5% | 1/16W               | R2915    | 1-208-645-11 | METAL CHIP  | 27   | 0.5% | 1/16W |
| R2505    | 1-218-953-11 | RES-CHIP    | 1K   | 5% | 1/16W               | R2916    | 1-218-985-11 | RES-CHIP    | 470K | 5%   | 1/16W |
| R2506    | 1-218-953-11 | RES-CHIP    | 1K   | 5% | 1/16W               | R2917    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R2507    | 1-218-968-11 | RES-CHIP    | 18K  | 5% | 1/16W               | R2920    | 1-218-977-11 | RES-CHIP    | 100K | 5%   | 1/16W |
| R2508    | 1-218-968-11 | RES-CHIP    | 18K  | 5% | 1/16W               | R2921    | 1-218-989-11 | RES-CHIP    | 1M   | 5%   | 1/16W |
| R2509    | 1-218-977-11 | RES-CHIP    | 100K | 5% | 1/16W               | R2923    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R2510    | 1-218-977-11 | RES-CHIP    | 100K | 5% | 1/16W               | R2924    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R2511    | 1-218-985-11 | RES-CHIP    | 470K | 5% | 1/16W               | R2925    | 1-218-977-11 | RES-CHIP    | 100K | 5%   | 1/16W |
| R2512    | 1-218-977-11 | RES-CHIP    | 100K | 5% | 1/16W               | R2926    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R2513    | 1-218-953-11 | RES-CHIP    | 1K   | 5% | 1/16W               | R2927    | 1-218-989-11 | RES-CHIP    | 1M   | 5%   | 1/16W |
| R2514    | 1-218-953-11 | RES-CHIP    | 1K   | 5% | 1/16W               | R2929    | 1-218-977-11 | RES-CHIP    | 100K | 5%   | 1/16W |
| R2515    | 1-218-985-11 | RES-CHIP    | 470K | 5% | 1/16W               | R2930    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W |
| R2516    | 1-218-989-11 | RES-CHIP    | 1M   | 5% | 1/16W               | R2931    | 1-218-965-11 | RES-CHIP    | 10K  | 5%   | 1/16W |
| R2517    | 1-218-989-11 | RES-CHIP    | 1M   | 5% | 1/16W               | R2932    | 1-218-965-11 | RES-CHIP    | 10K  | 5%   | 1/16W |
| R2518    | 1-218-973-11 | RES-CHIP    | 47K  | 5% | 1/16W               | R2933    | 1-218-977-11 | RES-CHIP    | 100K | 5%   | 1/16W |
| R2519    | 1-218-981-11 | RES-CHIP    | 220K | 5% | 1/16W               | R2935    | 1-218-955-11 | RES-CHIP    | 1.5K | 5%   | 1/16W |
| R2520    | 1-218-965-11 | RES-CHIP    | 10K  | 5% | 1/16W               | R2936    | 1-218-961-11 | RES-CHIP    | 4.7K | 5%   | 1/16W |
| R2521    | 1-218-977-11 | RES-CHIP    | 100K | 5% | 1/16W               | R2937    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W |
| R2522    | 1-218-977-11 | RES-CHIP    | 100K | 5% | 1/16W               | R2938    | 1-218-949-11 | RES-CHIP    | 470  | 5%   | 1/16W |
| R2523    | 1-218-977-11 | RES-CHIP    | 100K | 5% | 1/16W               | R2939    | 1-218-937-11 | RES-CHIP    | 47   | 5%   | 1/16W |
| R2524    | 1-218-975-11 | RES-CHIP    | 68K  | 5% | 1/16W               | R2945    | 1-218-959-11 | RES-CHIP    | 3.3K | 5%   | 1/16W |
| R2525    | 1-218-964-11 | RES-CHIP    | 8.2K | 5% | 1/16W               | R2946    | 1-218-959-11 | RES-CHIP    | 3.3K | 5%   | 1/16W |
| R2525    | 1-218-968-11 | RES-CHIP    | 18K  | 5% | (PDX10)<br>(PDX10P) | R2948    | 1-218-962-11 | RES-CHIP    | 5.6K | 5%   | 1/16W |
| R2526    | 1-218-973-11 | RES-CHIP    | 47K  | 5% | 1/16W               | R2949    | 1-218-955-11 | RES-CHIP    | 1.5K | 5%   | 1/16W |
| R2527    | 1-218-961-11 | RES-CHIP    | 4.7K | 5% | 1/16W               | R2950    | 1-218-957-11 | RES-CHIP    | 2.2K | 5%   | 1/16W |
| R2528    | 1-218-961-11 | RES-CHIP    | 4.7K | 5% | 1/16W               | R2951    | 1-216-791-11 | METAL CHIP  | 3.3  | 5%   | 1/16W |
| R2529    | 1-218-961-11 | RES-CHIP    | 4.7K | 5% | 1/16W               | R2952    | 1-218-961-11 | RES-CHIP    | 4.7K | 5%   | 1/16W |
| R2530    | 1-218-990-11 | SHORT CHIP  | 0    |    |                     | R2953    | 1-218-959-11 | RES-CHIP    | 3.3K | 5%   | 1/16W |
| R2531    | 1-218-953-11 | RES-CHIP    | 1K   | 5% | 1/16W               | R2954    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W |
| R2532    | 1-218-953-11 | RES-CHIP    | 1K   | 5% | 1/16W               | R2955    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W |
| R2533    | 1-218-975-11 | RES-CHIP    | 68K  | 5% | 1/16W               | R2956    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W |
| R2534    | 1-218-953-11 | RES-CHIP    | 1K   | 5% | 1/16W               | R2964    | 1-218-961-11 | RES-CHIP    | 4.7K | 5%   | 1/16W |
| R2535    | 1-218-953-11 | RES-CHIP    | 1K   | 5% | 1/16W               | R2965    | 1-218-961-11 | RES-CHIP    | 4.7K | 5%   | 1/16W |
| R2537    | 1-218-973-11 | RES-CHIP    | 47K  | 5% | 1/16W               | R2966    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R2538    | 1-218-989-11 | RES-CHIP    | 1M   | 5% | 1/16W               | R3001    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R2717    | 1-218-935-11 | RES-CHIP    | 33   | 5% | 1/16W               | R3008    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R2718    | 1-218-961-11 | RES-CHIP    | 4.7K | 5% | 1/16W               | R3101    | 1-218-989-11 | RES-CHIP    | 1M   | 5%   | 1/16W |
| R2719    | 1-218-990-11 | SHORT CHIP  | 0    |    |                     | R3102    | 1-218-977-11 | RES-CHIP    | 100K | 5%   | 1/16W |
| R2720    | 1-218-949-11 | RES-CHIP    | 470  | 5% | 1/16W               | R3103    | 1-218-977-11 | RES-CHIP    | 100K | 5%   | 1/16W |
| R2721    | 1-218-958-11 | RES-CHIP    | 2.7K | 5% | 1/16W               | R3104    | 1-218-973-11 | RES-CHIP    | 47K  | 5%   | 1/16W |
| R2722    | 1-218-977-11 | RES-CHIP    | 100K | 5% | 1/16W               | R3105    | 1-218-990-11 | SHORT CHIP  | 0    |      |       |
| R2723    | 1-218-977-11 | RES-CHIP    | 100K | 5% | 1/16W               | R3106    | 1-219-570-11 | METAL CHIP  | 10M  | 5%   | 1/10W |
| R2724    | 1-218-953-11 | RES-CHIP    | 1K   | 5% | 1/16W               | R3107    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W |
| R2727    | 1-218-953-11 | RES-CHIP    | 1K   | 5% | 1/16W               | R3108    | 1-218-953-11 | RES-CHIP    | 1K   | 5%   | 1/16W |
| R2735    | 1-218-973-11 | RES-CHIP    | 47K  | 5% | 1/16W               | R3109    | 1-218-973-11 | RES-CHIP    | 47K  | 5%   | 1/16W |

DSR-PDX10/PDX10P

VC-318

XD-002

| Ref. No.                      | Part No.     | Description                        |        |      |       |
|-------------------------------|--------------|------------------------------------|--------|------|-------|
| R3110                         | 1-218-977-11 | RES-CHIP                           | 100K   | 5%   | 1/16W |
| R3111                         | 1-218-989-11 | RES-CHIP                           | 1M     | 5%   | 1/16W |
| R3112                         | 1-218-953-11 | RES-CHIP                           | 1K     | 5%   | 1/16W |
| R3113                         | 1-218-989-11 | METAL CHIP                         | 1M     | 0.5% | 1/16W |
| R3114                         | 1-218-977-11 | RES-CHIP                           | 100K   | 5%   | 1/16W |
| R3115                         | 1-218-977-11 | RES-CHIP                           | 100K   | 5%   | 1/16W |
| R3116                         | 1-218-985-11 | METAL CHIP                         | 470K   | 0.5% | 1/16W |
| R3117                         | 1-218-977-11 | RES-CHIP                           | 100K   | 5%   | 1/16W |
| R3120                         | 1-208-935-11 | METAL CHIP                         | 100K   | 0.5% | 1/16W |
| R3121                         | 1-208-927-11 | METAL CHIP                         | 47K    | 0.5% | 1/16W |
| R3123                         | 1-218-989-11 | RES-CHIP                           | 1M     | 5%   | 1/16W |
| R3124                         | 1-218-977-11 | RES-CHIP                           | 100K   | 5%   | 1/16W |
| R3128                         | 1-218-990-11 | SHORT CHIP                         | 0      |      |       |
| R4301                         | 1-218-973-11 | RES-CHIP                           | 47K    | 5%   | 1/16W |
| R4302                         | 1-218-961-11 | RES-CHIP                           | 4.7K   | 5%   | 1/16W |
| R4303                         | 1-218-966-11 | RES-CHIP                           | 12K    | 5%   | 1/16W |
| R4304                         | 1-218-967-11 | RES-CHIP                           | 15K    | 5%   | 1/16W |
| R4305                         | 1-218-981-11 | RES-CHIP                           | 220K   | 5%   | 1/16W |
| R4306                         | 1-218-969-11 | RES-CHIP                           | 22K    | 5%   | 1/16W |
| R5104                         | 1-218-990-11 | SHORT CHIP                         | 0      |      |       |
| R5105                         | 1-218-990-11 | SHORT CHIP                         | 0      |      |       |
| R5106                         | 1-218-990-11 | SHORT CHIP                         | 0      |      |       |
| R5107                         | 1-218-977-11 | RES-CHIP                           | 100K   | 5%   | 1/16W |
| < COMPOSITION CIRCUIT BLOCK > |              |                                    |        |      |       |
| RB2101                        | 1-234-377-21 | RES, NETWORK 4.7KX4                | (1005) |      |       |
| RB2501                        | 1-234-381-21 | RES, NETWORK 100KX4                | (1005) |      |       |
| RB2502                        | 1-234-381-21 | RES, NETWORK 100KX4                | (1005) |      |       |
| RB2503                        | 1-234-381-21 | RES, NETWORK 100KX4                | (1005) |      |       |
| RB2901                        | 1-234-381-21 | RES, NETWORK 100KX4                | (1005) |      |       |
| RB3101                        | 1-234-378-21 | RES, NETWORK 10KX4                 | (1005) |      |       |
| RB3102                        | 1-234-378-21 | RES, NETWORK 10KX4                 | (1005) |      |       |
| RB3103                        | 1-234-375-21 | RES, NETWORK 1KX4                  | (1005) |      |       |
| RB3104                        | 1-234-375-21 | RES, NETWORK 1KX4                  | (1005) |      |       |
| RB3106                        | 1-234-375-21 | RES, NETWORK 1KX4                  | (1005) |      |       |
| RB3107                        | 1-234-375-21 | RES, NETWORK 1KX4                  | (1005) |      |       |
| RB3110                        | 1-234-375-21 | RES, NETWORK 1KX4                  | (1005) |      |       |
| RB3111                        | 1-234-375-21 | RES, NETWORK 1KX4                  | (1005) |      |       |
| < VARISTOR >                  |              |                                    |        |      |       |
| VD2901                        | 1-801-862-11 | VARISTOR, CHIP                     |        |      |       |
| VD2902                        | 1-801-862-11 | VARISTOR, CHIP                     |        |      |       |
| < VIBRATOR >                  |              |                                    |        |      |       |
| X1201                         | 1-781-632-21 | VIBRATOR, CRYSTAL (66MHz) (PDX10)  |        |      |       |
| X1201                         | 1-781-633-21 | VIBRATOR, CRYSTAL (54MHz) (PDX10P) |        |      |       |
| X2101                         | 1-781-045-21 | VIBRATOR, CRYSTAL (24.576MHz)      |        |      |       |
| X2501                         | 1-781-044-21 | VIBRATOR, CRYSTAL (20MHz)          |        |      |       |
| X2901                         | 1-781-620-21 | VIBRATOR, CERAMIC (48MHz)          |        |      |       |
| X3101                         | 1-795-244-11 | VIBRATOR, CERAMIC (10MHz)          |        |      |       |
| X3102                         | 1-767-994-42 | VIBRATOR, CRYSTAL (32.768kHz)      |        |      |       |

| Ref. No.       | Part No.     | Description            |                |     |      |
|----------------|--------------|------------------------|----------------|-----|------|
|                | A-7078-395-A | XD-002 BOARD, COMPLETE |                |     |      |
|                |              | *****                  |                |     |      |
|                |              | < CAPACITOR >          |                |     |      |
| C401           | 1-113-985-11 | TANTAL. CHIP           | 10uF           | 20% | 20V  |
| C402           | 1-115-467-11 | CERAMIC CHIP           | 0.22uF         | 10% | 10V  |
| C403           | 1-109-935-11 | TANTAL. CHIP           | 4.7uF          | 20% | 6.3V |
| C404           | 1-125-777-11 | CERAMIC CHIP           | 0.1uF          | 10% | 10V  |
| C405           | 1-125-777-11 | CERAMIC CHIP           | 0.1uF          | 10% | 10V  |
| C407           | 1-125-777-11 | CERAMIC CHIP           | 0.1uF          | 10% | 10V  |
| C408           | 1-164-874-11 | CERAMIC CHIP           | 100PF          | 5%  | 50V  |
| C410           | 1-104-919-11 | TANTAL. CHIP           | 10uF           | 20% | 25V  |
| C413           | 1-110-618-11 | ELECT                  | 12uF           | 20% | 63V  |
| C414           | 1-165-319-11 | CERAMIC CHIP           | 0.1uF          |     | 50V  |
| C415           | 1-165-319-11 | CERAMIC CHIP           | 0.1uF          |     | 50V  |
| C416           | 1-110-618-11 | ELECT                  | 12uF           | 20% | 63V  |
| C417           | 1-104-920-11 | TANTAL. CHIP           | 4.7uF          | 20% | 35V  |
| C418           | 1-104-920-11 | TANTAL. CHIP           | 4.7uF          | 20% | 35V  |
| C419           | 1-104-920-11 | TANTAL. CHIP           | 4.7uF          | 20% | 35V  |
| C420           | 1-104-920-11 | TANTAL. CHIP           | 4.7uF          | 20% | 35V  |
| C421           | 1-113-981-11 | TANTAL. CHIP           | 22uF           | 20% | 20V  |
| C422           | 1-164-156-11 | CERAMIC CHIP           | 0.1uF          |     | 25V  |
| C423           | 1-104-851-11 | TANTAL. CHIP           | 10uF           | 20% | 10V  |
| < CONNECTOR >  |              |                        |                |     |      |
| CN401          | 1-766-343-21 | CONNECTOR, FFC/FPC 13P |                |     |      |
| < DIODE >      |              |                        |                |     |      |
| D402           | 8-719-987-21 | DIODE SB02-09CP-TB     |                |     |      |
| D403           | 8-719-158-49 | DIODE MA8120-TX        |                |     |      |
| D404           | 8-719-158-49 | DIODE MA8120-TX        |                |     |      |
| < IC >         |              |                        |                |     |      |
| IC401          | 8-759-521-35 | IC TL5001CDR           |                |     |      |
| IC402          | 8-759-478-03 | IC RN5RL50AA-TL        |                |     |      |
| < COIL >       |              |                        |                |     |      |
| L400           | 1-412-058-11 | INDUCTOR CHIP          | 10uH           |     |      |
| L401           | 1-416-906-11 | INDUCTOR               | 33uH           |     |      |
| L402           | 1-414-405-11 | INDUCTOR               | 150uH          |     |      |
| L403           | 1-414-854-11 | INDUCTOR               | 1MH            |     |      |
| < TRANSISTOR > |              |                        |                |     |      |
| Q402           | 8-729-117-32 | TRANSISTOR             | 2SC4177-T1L5L6 |     |      |
| Q403           | 8-729-117-32 | TRANSISTOR             | 2SC4177-T1L5L6 |     |      |
| Q404           | 8-729-033-65 | TRANSISTOR             | 2SJ204-T1B     |     |      |
| Q405           | 8-729-117-32 | TRANSISTOR             | 2SC4177-T1L5L6 |     |      |
| Q406           | 8-729-117-32 | TRANSISTOR             | 2SC4177-T1L5L6 |     |      |
| Q407           | 8-729-117-32 | TRANSISTOR             | 2SC4177-T1L5L6 |     |      |
| Q408           | 8-729-041-23 | TRANSISTOR             | NDS356AP       |     |      |
| Q409           | 8-729-117-32 | TRANSISTOR             | 2SC4177-T1L5L6 |     |      |
| Q410           | 8-729-140-63 | TRANSISTOR             | 2SA1611T1-M5M6 |     |      |
| Q411           | 8-729-042-92 | TRANSISTOR             | 2SK1470-TD     |     |      |

XD-002

XK-001

XM-002

| Ref. No.      | Part No.     | Description                           |         |      |       |  |
|---------------|--------------|---------------------------------------|---------|------|-------|--|
| < RESISTOR >  |              |                                       |         |      |       |  |
| R402          | 1-218-970-11 | RES-CHIP                              | 27K     | 5%   | 1/16W |  |
| R403          | 1-218-970-11 | RES-CHIP                              | 27K     | 5%   | 1/16W |  |
| R404          | 1-218-957-11 | RES-CHIP                              | 2.2K    | 5%   | 1/16W |  |
| R405          | 1-218-978-11 | METAL CHIP                            | 120K    | 0.5% | 1/16W |  |
| R406          | 1-218-978-11 | RES-CHIP                              | 120K    | 5%   | 1/16W |  |
|               |              |                                       |         |      |       |  |
| R407          | 1-218-981-11 | RES-CHIP                              | 220K    | 5%   | 1/16W |  |
| R409          | 1-218-957-11 | RES-CHIP                              | 2.2K    | 5%   | 1/16W |  |
| R410          | 1-218-957-11 | RES-CHIP                              | 2.2K    | 5%   | 1/16W |  |
| R411          | 1-218-985-11 | RES-CHIP                              | 470K    | 5%   | 1/16W |  |
| R412          | 1-218-965-11 | RES-CHIP                              | 10K     | 5%   | 1/16W |  |
|               |              |                                       |         |      |       |  |
| R413          | 1-218-961-11 | RES-CHIP                              | 4.7K    | 5%   | 1/16W |  |
| R414          | 1-218-957-11 | RES-CHIP                              | 2.2K    | 5%   | 1/16W |  |
| R415          | 1-218-977-11 | RES-CHIP                              | 100K    | 5%   | 1/16W |  |
| R416          | 1-218-973-11 | RES-CHIP                              | 47K     | 5%   | 1/16W |  |
| R417          | 1-218-941-81 | RES-CHIP                              | 100     | 5%   | 1/16W |  |
|               |              |                                       |         |      |       |  |
| R418          | 1-218-990-11 | SHORT CHIP                            | 0       |      |       |  |
| R420          | 1-208-715-11 | METAL CHIP                            | 22K     | 0.5% | 1/16W |  |
| R421          | 1-208-713-11 | METAL CHIP                            | 18K     | 0.5% | 1/16W |  |
| R422          | 1-208-701-11 | METAL CHIP                            | 5.6K    | 0.5% | 1/16W |  |
| R423          | 1-208-683-11 | METAL CHIP                            | 1K      | 0.5% | 1/16W |  |
|               |              |                                       |         |      |       |  |
| A-7078-396-A  |              | XK-001 BOARD, COMPLETE                |         |      |       |  |
| *****         |              |                                       |         |      |       |  |
| < CONNECTOR > |              |                                       |         |      |       |  |
| CN001         | 1-785-946-21 | CONNECTOR 3P                          |         |      |       |  |
| < SWITCH >    |              |                                       |         |      |       |  |
| S001          | 1-762-650-21 | SWITCH, SLIDE (LOW CUT INPUT1 ON/OFF) |         |      |       |  |
| S002          | 1-762-650-21 | SWITCH, SLIDE (LOW CUT INPUT2 ON/OFF) |         |      |       |  |
|               |              |                                       |         |      |       |  |
| A-7078-393-A  |              | XM-002 BOARD, COMPLETE                |         |      |       |  |
| *****         |              |                                       |         |      |       |  |
| < CAPACITOR > |              |                                       |         |      |       |  |
| C200          | 1-162-964-11 | CERAMIC CHIP                          | 0.001uF | 10%  | 50V   |  |
| C201          | 1-162-964-11 | CERAMIC CHIP                          | 0.001uF | 10%  | 50V   |  |
| C202          | 1-162-964-11 | CERAMIC CHIP                          | 0.001uF | 10%  | 50V   |  |
| C203          | 1-162-964-11 | CERAMIC CHIP                          | 0.001uF | 10%  | 50V   |  |
| C204          | 1-162-964-11 | CERAMIC CHIP                          | 0.001uF | 10%  | 50V   |  |
|               |              |                                       |         |      |       |  |
| C205          | 1-162-964-11 | CERAMIC CHIP                          | 0.001uF | 10%  | 50V   |  |
| C206          | 1-162-964-11 | CERAMIC CHIP                          | 0.001uF | 10%  | 50V   |  |
| C207          | 1-162-964-11 | CERAMIC CHIP                          | 0.001uF | 10%  | 50V   |  |
| C208          | 1-162-964-11 | CERAMIC CHIP                          | 0.001uF | 10%  | 50V   |  |
| C209          | 1-128-996-11 | ELECT CHIP                            | 4.7uF   | 20%  | 50V   |  |
|               |              |                                       |         |      |       |  |
| C210          | 1-128-996-11 | ELECT CHIP                            | 4.7uF   | 20%  | 50V   |  |
| C211          | 1-128-996-11 | ELECT CHIP                            | 4.7uF   | 20%  | 50V   |  |
| C212          | 1-128-996-11 | ELECT CHIP                            | 4.7uF   | 20%  | 50V   |  |
| C213          | 1-162-964-11 | CERAMIC CHIP                          | 0.001uF | 10%  | 50V   |  |
| C214          | 1-162-964-11 | CERAMIC CHIP                          | 0.001uF | 10%  | 50V   |  |
|               |              |                                       |         |      |       |  |
| C215          | 1-125-777-11 | CERAMIC CHIP                          | 0.1uF   | 10%  | 10V   |  |
| C216          | 1-135-337-11 | TANTAL. CHIP                          | 1uF     | 20%  | 6.3V  |  |
| C217          | 1-135-337-11 | TANTAL. CHIP                          | 1uF     | 20%  | 6.3V  |  |
| C218          | 1-125-926-91 | TANTAL. CHIP                          | 4.7uF   | 20%  | 6.3V  |  |
| C219          | 1-164-937-11 | CERAMIC CHIP                          | 0.001uF | 10%  | 50V   |  |

| Ref. No.      | Part No.     | Description                      |         |     |      |
|---------------|--------------|----------------------------------|---------|-----|------|
| C220          | 1-162-964-11 | CERAMIC CHIP                     | 0.001uF | 10% | 50V  |
| C221          | 1-164-156-11 | CERAMIC CHIP                     | 0.1uF   |     | 25V  |
| C222          | 1-117-919-11 | TANTAL. CHIP                     | 10uF    | 20% | 6.3V |
| C223          | 1-125-777-11 | CERAMIC CHIP                     | 0.1uF   | 10% | 10V  |
| C224          | 1-164-943-11 | CERAMIC CHIP                     | 0.01uF  | 10% | 16V  |
| C226          | 1-117-919-11 | TANTAL. CHIP                     | 10uF    | 20% | 6.3V |
| C228          | 1-164-156-11 | CERAMIC CHIP                     | 0.1uF   |     | 25V  |
| C231          | 1-117-919-11 | TANTAL. CHIP                     | 10uF    | 20% | 6.3V |
| C232          | 1-125-777-11 | CERAMIC CHIP                     | 0.1uF   | 10% | 10V  |
| C233          | 1-125-777-11 | CERAMIC CHIP                     | 0.1uF   | 10% | 10V  |
| C234          | 1-164-943-11 | CERAMIC CHIP                     | 0.01uF  | 10% | 16V  |
| C235          | 1-125-777-11 | CERAMIC CHIP                     | 0.1uF   | 10% | 10V  |
| C236          | 1-125-777-11 | CERAMIC CHIP                     | 0.1uF   | 10% | 10V  |
| C237          | 1-125-777-11 | CERAMIC CHIP                     | 0.1uF   | 10% | 10V  |
| C238          | 1-125-777-11 | CERAMIC CHIP                     | 0.1uF   | 10% | 10V  |
| C241          | 1-164-156-11 | CERAMIC CHIP                     | 0.1uF   |     | 25V  |
| C300          | 1-162-964-11 | CERAMIC CHIP                     | 0.001uF | 10% | 50V  |
| C301          | 1-162-964-11 | CERAMIC CHIP                     | 0.001uF | 10% | 50V  |
| C302          | 1-162-964-11 | CERAMIC CHIP                     | 0.001uF | 10% | 50V  |
| C303          | 1-162-964-11 | CERAMIC CHIP                     | 0.001uF | 10% | 50V  |
| C304          | 1-162-964-11 | CERAMIC CHIP                     | 0.001uF | 10% | 50V  |
| C305          | 1-162-964-11 | CERAMIC CHIP                     | 0.001uF | 10% | 50V  |
| C306          | 1-162-964-11 | CERAMIC CHIP                     | 0.001uF | 10% | 50V  |
| C307          | 1-162-964-11 | CERAMIC CHIP                     | 0.001uF | 10% | 50V  |
| C308          | 1-162-964-11 | CERAMIC CHIP                     | 0.001uF | 10% | 50V  |
| C309          | 1-128-996-11 | ELECT CHIP                       | 4.7uF   | 20% | 50V  |
| C310          | 1-128-996-11 | ELECT CHIP                       | 4.7uF   | 20% | 50V  |
| C311          | 1-128-996-11 | ELECT CHIP                       | 4.7uF   | 20% | 50V  |
| C312          | 1-128-996-11 | ELECT CHIP                       | 4.7uF   | 20% | 50V  |
| C313          | 1-162-964-11 | CERAMIC CHIP                     | 0.001uF | 10% | 50V  |
| C314          | 1-162-964-11 | CERAMIC CHIP                     | 0.001uF | 10% | 50V  |
| C315          | 1-125-777-11 | CERAMIC CHIP                     | 0.1uF   | 10% | 10V  |
| C316          | 1-135-337-11 | TANTAL. CHIP                     | 1uF     | 20% | 6.3V |
| C317          | 1-135-337-11 | TANTAL. CHIP                     | 1uF     | 20% | 6.3V |
| C318          | 1-125-926-91 | TANTAL. CHIP                     | 4.7uF   | 20% | 6.3V |
| C319          | 1-164-937-11 | CERAMIC CHIP                     | 0.001uF | 10% | 50V  |
| C320          | 1-162-964-11 | CERAMIC CHIP                     | 0.001uF | 10% | 50V  |
| C321          | 1-164-156-11 | CERAMIC CHIP                     | 0.1uF   |     | 25V  |
| C322          | 1-117-919-11 | TANTAL. CHIP                     | 10uF    | 20% | 6.3V |
| C323          | 1-125-777-11 | CERAMIC CHIP                     | 0.1uF   | 10% | 10V  |
| C326          | 1-117-919-11 | TANTAL. CHIP                     | 10uF    | 20% | 6.3V |
| C328          | 1-164-156-11 | CERAMIC CHIP                     | 0.1uF   |     | 25V  |
| C331          | 1-117-919-11 | TANTAL. CHIP                     | 10uF    | 20% | 6.3V |
| C334          | 1-164-156-11 | CERAMIC CHIP                     | 0.1uF   |     | 25V  |
| < CONNECTOR > |              |                                  |         |     |      |
| CN200         | 1-568-006-11 | CONNECTOR, XLR TYPE 3P (INPUT 1) |         |     |      |
| CN201         | 1-779-332-11 | CONNECTOR, FFC/FPC 16P           |         |     |      |
| CN202         | 1-785-946-21 | CONNECTOR 3P                     |         |     |      |
| CN300         | 1-568-006-11 | CONNECTOR, XLR TYPE 3P (INPUT 2) |         |     |      |
| CN301         | 1-779-332-11 | CONNECTOR, FFC/FPC 16P           |         |     |      |
| < DIODE >     |              |                                  |         |     |      |
| D001          | 8-719-073-01 | DIODE MA111-(K8).S0              |         |     |      |
| D002          | 8-719-073-01 | DIODE MA111-(K8).S0              |         |     |      |
| D003          | 8-719-073-01 | DIODE MA111-(K8).S0              |         |     |      |
| D004          | 8-719-073-01 | DIODE MA111-(K8).S0              |         |     |      |
| D200          | 8-719-073-01 | DIODE MA111-(K8).S0              |         |     |      |

DSR-PDX10/PDX10P

XM-002

XS-002

| Ref. No.     | Part No.     | Description                |
|--------------|--------------|----------------------------|
| D201         | 8-719-073-01 | DIODE MA111-(K8).S0        |
| D202         | 8-719-073-01 | DIODE MA111-(K8).S0        |
| D203         | 8-719-073-01 | DIODE MA111-(K8).S0        |
| < IC >       |              |                            |
| IC200        | 8-759-111-56 | IC uPC4572G2-E2            |
| IC201        | 8-759-111-56 | IC uPC4572G2-E2            |
| IC203        | 8-759-075-66 | IC TA75S01F(TE85R)         |
| IC204        | 6-702-589-01 | IC M52065FP-70BD           |
| IC205        | 8-759-111-56 | IC uPC4572G2-E2            |
| IC300        | 8-759-111-56 | IC uPC4572G2-E2            |
| IC301        | 8-759-111-56 | IC uPC4572G2-E2            |
| IC303        | 8-759-075-66 | IC TA75S01F(TE85R)         |
| < COIL >     |              |                            |
| L200         | 1-414-398-11 | INDUCTOR 10uH              |
| L201         | 1-414-398-11 | INDUCTOR 10uH              |
| L202         | 1-414-398-11 | INDUCTOR 10uH              |
| L203         | 1-414-854-11 | INDUCTOR 1MH               |
| L300         | 1-414-398-11 | INDUCTOR 10uH              |
| L301         | 1-414-398-11 | INDUCTOR 10uH              |
| L302         | 1-414-398-11 | INDUCTOR 10uH              |
| L303         | 1-414-854-11 | INDUCTOR 1MH               |
| < RESISTOR > |              |                            |
| R200         | 1-216-057-00 | METAL CHIP 2.2K 5% 1/10W   |
| R201         | 1-216-057-00 | METAL CHIP 2.2K 5% 1/10W   |
| R202         | 1-216-057-00 | METAL CHIP 2.2K 5% 1/10W   |
| R203         | 1-216-057-00 | METAL CHIP 2.2K 5% 1/10W   |
| R204         | 1-216-057-00 | METAL CHIP 2.2K 5% 1/10W   |
| R205         | 1-216-057-00 | METAL CHIP 2.2K 5% 1/10W   |
| R206         | 1-216-019-00 | METAL CHIP 56 5% 1/10W     |
| R207         | 1-216-009-91 | RES-CHIP 22 5% 1/10W       |
| R208         | 1-216-295-91 | SHORT CHIP 0               |
| R209         | 1-216-047-91 | RES-CHIP 820 5% 1/10W      |
| R210         | 1-216-047-91 | RES-CHIP 820 5% 1/10W      |
| R211         | 1-220-222-11 | RES-CHIP 4.7K 5% 1/2W      |
| R212         | 1-218-977-11 | RES-CHIP 100K 5% 1/16W     |
| R213         | 1-218-977-11 | RES-CHIP 100K 5% 1/16W     |
| R214         | 1-208-699-11 | METAL CHIP 4.7K 0.5% 1/16W |
| R215         | 1-208-699-11 | METAL CHIP 4.7K 0.5% 1/16W |
| R216         | 1-208-720-11 | METAL CHIP 36K 0.5% 1/16W  |
| R219         | 1-208-884-81 | METAL CHIP 750 0.5% 1/16W  |
| R220         | 1-208-647-11 | METAL CHIP 33 0.5% 1/16W   |
| R221         | 1-218-887-11 | METAL CHIP 47K 0.5% 1/10W  |
| R222         | 1-208-699-11 | METAL CHIP 4.7K 0.5% 1/16W |
| R223         | 1-208-721-11 | METAL CHIP 39K 0.5% 1/16W  |
| R224         | 1-208-699-11 | METAL CHIP 4.7K 0.5% 1/16W |
| R225         | 1-208-699-11 | METAL CHIP 4.7K 0.5% 1/16W |
| R226         | 1-208-699-11 | METAL CHIP 4.7K 0.5% 1/16W |
| R227         | 1-208-699-11 | METAL CHIP 4.7K 0.5% 1/16W |
| R232         | 1-218-965-11 | RES-CHIP 10K 5% 1/16W      |
| R233         | 1-218-971-11 | RES-CHIP 33K 5% 1/16W      |
| R234         | 1-218-965-11 | RES-CHIP 10K 5% 1/16W      |
| R235         | 1-216-295-91 | SHORT CHIP 0               |
| R236         | 1-216-295-91 | SHORT CHIP 0               |
| R237         | 1-218-971-11 | RES-CHIP 33K 5% 1/16W      |
| R239         | 1-218-977-11 | RES-CHIP 100K 5% 1/16W     |
| R240         | 1-218-977-11 | RES-CHIP 100K 5% 1/16W     |
| R241         | 1-218-973-11 | RES-CHIP 47K 5% 1/16W      |

| Ref. No. | Part No.     | Description                |
|----------|--------------|----------------------------|
| R242     | 1-218-975-11 | RES-CHIP 68K 5% 1/16W      |
| R243     | 1-218-965-11 | RES-CHIP 10K 5% 1/16W      |
| R244     | 1-218-973-11 | RES-CHIP 47K 5% 1/16W      |
| R245     | 1-218-973-11 | RES-CHIP 47K 5% 1/16W      |
| R300     | 1-216-057-00 | METAL CHIP 2.2K 5% 1/10W   |
| R301     | 1-216-057-00 | METAL CHIP 2.2K 5% 1/10W   |
| R302     | 1-216-057-00 | METAL CHIP 2.2K 5% 1/10W   |
| R303     | 1-216-057-00 | METAL CHIP 2.2K 5% 1/10W   |
| R304     | 1-216-057-00 | METAL CHIP 2.2K 5% 1/10W   |
| R305     | 1-216-057-00 | METAL CHIP 2.2K 5% 1/10W   |
| R306     | 1-216-019-00 | METAL CHIP 56 5% 1/10W     |
| R307     | 1-216-009-91 | RES-CHIP 22 5% 1/10W       |
| R308     | 1-216-295-91 | SHORT CHIP 0               |
| R309     | 1-216-047-91 | RES-CHIP 820 5% 1/10W      |
| R310     | 1-216-047-91 | RES-CHIP 820 5% 1/10W      |
| R311     | 1-220-222-11 | RES-CHIP 4.7K 5% 1/2W      |
| R312     | 1-218-977-11 | RES-CHIP 100K 5% 1/16W     |
| R313     | 1-218-977-11 | RES-CHIP 100K 5% 1/16W     |
| R314     | 1-208-699-11 | METAL CHIP 4.7K 0.5% 1/16W |
| R315     | 1-208-699-11 | METAL CHIP 4.7K 0.5% 1/16W |
| R316     | 1-208-720-11 | METAL CHIP 36K 0.5% 1/16W  |
| R319     | 1-208-884-81 | METAL CHIP 750 0.5% 1/16W  |
| R320     | 1-208-647-11 | METAL CHIP 33 0.5% 1/16W   |
| R321     | 1-218-887-11 | METAL CHIP 47K 0.5% 1/10W  |
| R322     | 1-208-699-11 | METAL CHIP 4.7K 0.5% 1/16W |
| R323     | 1-208-721-11 | METAL CHIP 39K 0.5% 1/16W  |
| R324     | 1-208-699-11 | METAL CHIP 4.7K 0.5% 1/16W |
| R325     | 1-208-699-11 | METAL CHIP 4.7K 0.5% 1/16W |
| R326     | 1-208-699-11 | METAL CHIP 4.7K 0.5% 1/16W |
| R327     | 1-208-699-11 | METAL CHIP 4.7K 0.5% 1/16W |
| R330     | 1-218-973-11 | RES-CHIP 47K 5% 1/16W      |
| R331     | 1-218-975-11 | RES-CHIP 68K 5% 1/16W      |
| R332     | 1-218-965-11 | RES-CHIP 10K 5% 1/16W      |
| R333     | 1-216-295-91 | SHORT CHIP 0               |
| R338     | 1-216-295-91 | SHORT CHIP 0               |
| R339     | 1-218-977-11 | RES-CHIP 100K 5% 1/16W     |
| R340     | 1-218-977-11 | RES-CHIP 100K 5% 1/16W     |

A-7078-394-A XS-002 BOARD, COMPLETE  
\*\*\*\*\*

< CONNECTOR >

|       |              |                        |
|-------|--------------|------------------------|
| CN100 | 1-766-343-21 | CONNECTOR, FFC/FPC 13P |
| CN101 | 1-779-332-11 | CONNECTOR, FFC/FPC 16P |
| CN102 | 1-779-332-11 | CONNECTOR, FFC/FPC 16P |
| CN103 | 1-779-806-21 | CONNECTOR 8P           |

< RESISTOR >

|      |              |                       |
|------|--------------|-----------------------|
| R101 | 1-218-990-11 | SHORT CHIP 0          |
| R102 | 1-218-969-11 | RES-CHIP 22K 5% 1/16W |

< SWITCH >

|      |              |                                                     |
|------|--------------|-----------------------------------------------------|
| S100 | 1-571-640-11 | SWITCH, SLIDE (INPUT1 +48V ON/OFF)                  |
| S102 | 1-762-824-11 | SWITCH, SLIDE (INPUT1 REC CH SELECT CH1, CH2/CH1)   |
| S103 | 1-762-825-11 | SWITCH, SLIDE (INPUT1 INPUT LEVEL LINE/MIC/MIC ATT) |
| S104 | 1-762-825-11 | SWITCH, SLIDE (INPUT2 INPUT LEVEL LINE/MIC/MIC ATT) |
| S105 | 1-571-640-11 | SWITCH, SLIDE (INPUT2 +48V ON/OFF)                  |

Ver. 1.9 2007. 01

| Ref. No. | Part No.     | Description                              |
|----------|--------------|------------------------------------------|
|          |              | ACCESSORIES                              |
|          |              | *****                                    |
| △        | 1-475-599-14 | ADAPTOR, AC (AC-L10A) (PDX10P)           |
| △        | 1-475-599-45 | ADAPTOR, AC (AC-L10A) (PDX10)            |
|          | 1-475-950-53 | REMOTE COMMANDER (RMT-811)               |
|          | 1-543-798-11 | FILTER, CLAMP (FERRITE CORE)             |
| *△       | 1-575-131-11 | CORD, POWER (PDX10P)                     |
| △        | 1-790-107-22 | CORD, POWER (PDX10)                      |
|          | 1-757-294-11 | CORD, CONNECTION (USB 5P)                |
|          | 1-824-097-11 | CORD, CONNECTION (AV MULCH) (1.5m)       |
|          | 3-048-481-01 | WIND SCREEN                              |
|          | 3-053-056-01 | LID, BATTERY CASE (FOR RMT-811)          |
|          | 3-072-414-01 | SPVD-008 (USB DRIVER CD-ROM) (PDX10P)    |
|          | 3-072-654-01 | SPVD-008 (I) (USB DRIVER CD-ROM) (PDX10) |
|          | 3-073-861-01 | CLOTH (TL), CLEANING                     |
|          | 3-077-115-11 | MANUAL, INSTRUCTION (ENGLISH) (PDX10)    |
|          | 3-077-115-21 | MANUAL, INSTRUCTION (FRENCH)             |
|          |              | (PDX10:Canadian)                         |
|          | 3-077-115-31 | MANUAL, INSTRUCTION (ENGLISH) (PDX10P)   |
|          | 3-077-115-41 | MANUAL, INSTRUCTION (FRENCH) (PDX10P)    |
|          | 3-077-115-51 | MANUAL, INSTRUCTION (GERMAN) (PDX10P)    |
|          | 3-077-115-61 | MANUAL, INSTRUCTION (ITALIAN) (PDX10P)   |
|          | 3-077-115-71 | MANUAL, INSTRUCTION (SPANISH) (PDX10P)   |
| *        | 3-179-882-01 | SPACER, MICROPHONE                       |
|          | 3-987-015-01 | BELT (S), SHOULDER                       |
|          | 8-814-298-90 | MICROPHONE ECM-NV1                       |
|          | A-7013-029-A | XLR BLOCK ASSY                           |
|          | A-7024-735-A | MEMORY STICK (MSA-8A)                    |
|          | X-3952-595-1 | CAP ASSY, LENS                           |
|          | X-3952-789-1 | HOOD (WIDE) ASSY                         |
|          |              | NP-FM50 BATTERY PACK (NOT SUPPLIED)      |

**Note :**

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

**Note :**

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.