

SECTION 8

REPAIR PARTS LIST

8-1. EXPLODED VIEWS

NOTE:

- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Abbreviation

AR : Argentina model	HK : Hong Kong model
AUS : Australian model	KR : Korea model
BR : Brazilian model	ME : Middle East model
CND : Canadian model	RUS : Russian model
E12 : 220-240 V AC Area in E model	SP : Singapore model
E32 : 110-240 V AC Area in E model	TW : Taiwan model
EA : Saudi Arabia model	
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list and accessories and packing materials are given in the last of the electrical parts list.

The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.


- Description about model name

DPX14xxBM

Name of production country
 M : Malaysia
 X : Mexico


Color of set
 B : Black
 H : Titanium gray

8-1-1. CASE ASSEMBLY

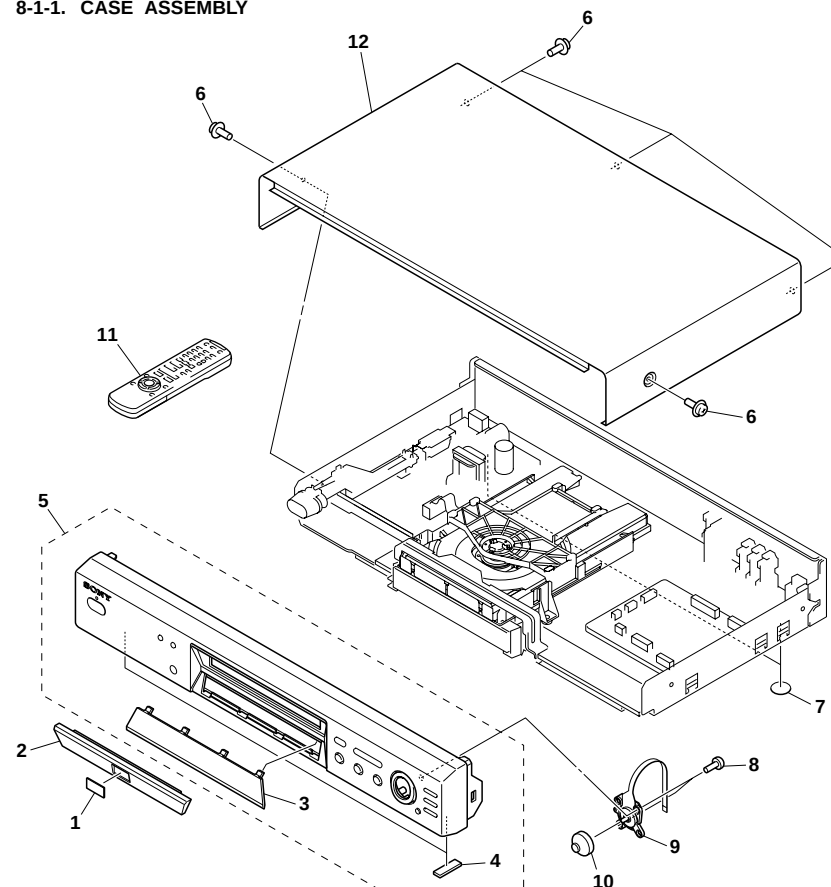

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	3-067-237-01	EMBLEM (V), DVD (US (DPX1400BM), US (DPX1400BX), CND (DPX1400BM), AEP (DPX1401BM), AEP (DPX1402BM), UK (DPX1401BM), PX)		6	3-710-901-61	SCREW, TAPPING (EXCEPT US (DPX1400BM, US (DPX1400BX), CND (DPX1400BM), AEP (DPX1401BM), AEP (DPX1402BM), P UK (DPX1401BM), P	
1	3-067-237-11	EMBLEM (V), DVD (EXCEPT US (DPX1400BM), US (DPX1400BX), CND (DPX1400BM), AEP (DPX1401BM), AEP (DPX1402BM), UK (DPX1401BM), PX)		7	3-068-890-01	CUSHION, REAR LEG SUMMITTE (B3), .8BV	
2	3-067-234-01	COVER (S), TRAY (US (DPX1400BM), US (DPX1400BX), CND (DPX1400BM), AEP (DPX1401BM), AEP (DPX1402BM), UK (DPX1401BM), PX)		8	3-970-608-51	SWITCH, TACTILE	
2	3-067-234-11	COVER (S), TRAY (EXCEPT US (DPX1400BM), US (DPX1400BX), CND (DPX1400BM), AEP (DPX1401BM), AEP (DPX1402BM), UK (DPX1401BM), PX)		9	1-786-131-11	CURSOR STICK	
3	3-067-225-01	WINDOW		10	3-067-238-11	CURSOR STICK (US (DPX1400BM), US (DPX1400BX), CND (DPX1400BM), AEP (DPX1401BM), AEP (DPX1402BM), UK (DPX1401BM), P	
4	3-059-349-11	CUSHION, FOOT		10	3-067-238-21	CURSOR STICK (US (DPX1400HM), CND (DPX1400HM), AEP (DPX1401HM), AEP (DPX1402HM), UK (DPX1401HM), RU E12, E32, EA, ME, AR, MX (DPX1400HM, BR, HK, KR, SP, TW, AU	
5	A-6062-596-A	FRONT PANEL ASSY (BR)		11	1-476-602-11	REMOTE COMMANDER (RMT-D126A) BR, HK, KR, SP, TW, AU	
5	X-3951-477-1	FRONT PANEL ASSY (US (DPX1400BM), US (DPX1400BX), CND (DPX1400BM), PX)		11	1-476-603-11	REMOTE COMMANDER (RMT-D126P) (AEP UK, RU	
5	X-3951-478-1	FRONT PANEL (C) ASSY (US (DPX1400HM), CND (DPX1400HM), AEP (DPX1401HM), AEP (DPX1402HM), UK (DPX1401HM), RU, E12, E32, EA, ME, MX, AR, HK, KR, SP, TW, AU)		11	1-476-603-31	REMOTE COMMANDER (RMT-D128E) (E12, EA, ME, HK, KR, SP, TW, AU	
5	X-3951-512-1	FRONT PANEL ASSY (AEP (DPX1401BM), AEP (DPX1402BM), UK (DPX1401BM))		12	3-068-047-11	CASE (US (DPX1400HM), CND (DPX1400HM), AEP (DPX1401HM), AEP (DPX1402HM), UK (DPX1401HM), RU, E12, E32, A, EA, ME, HK, MX, BR, KR, SP, TW, AU	
6	3-710-901-11	SCREW, TAPPING (US (DPX1400BM), US (DPX1400BX), CND (DPX1400BM), AEP (DPX1401BM), AEP (DPX1402BM), UK (DPX1401BM), PX)		12	3-068-047-01	CASE (US (DPX1400BM), US (DPX1400BX), CND (DPX1400BM), AEP (DPX1401BM), AEP (DPX1402BM), UK (DPX1401BM), P	


8-1.2. CHASSIS ASSEMBLY

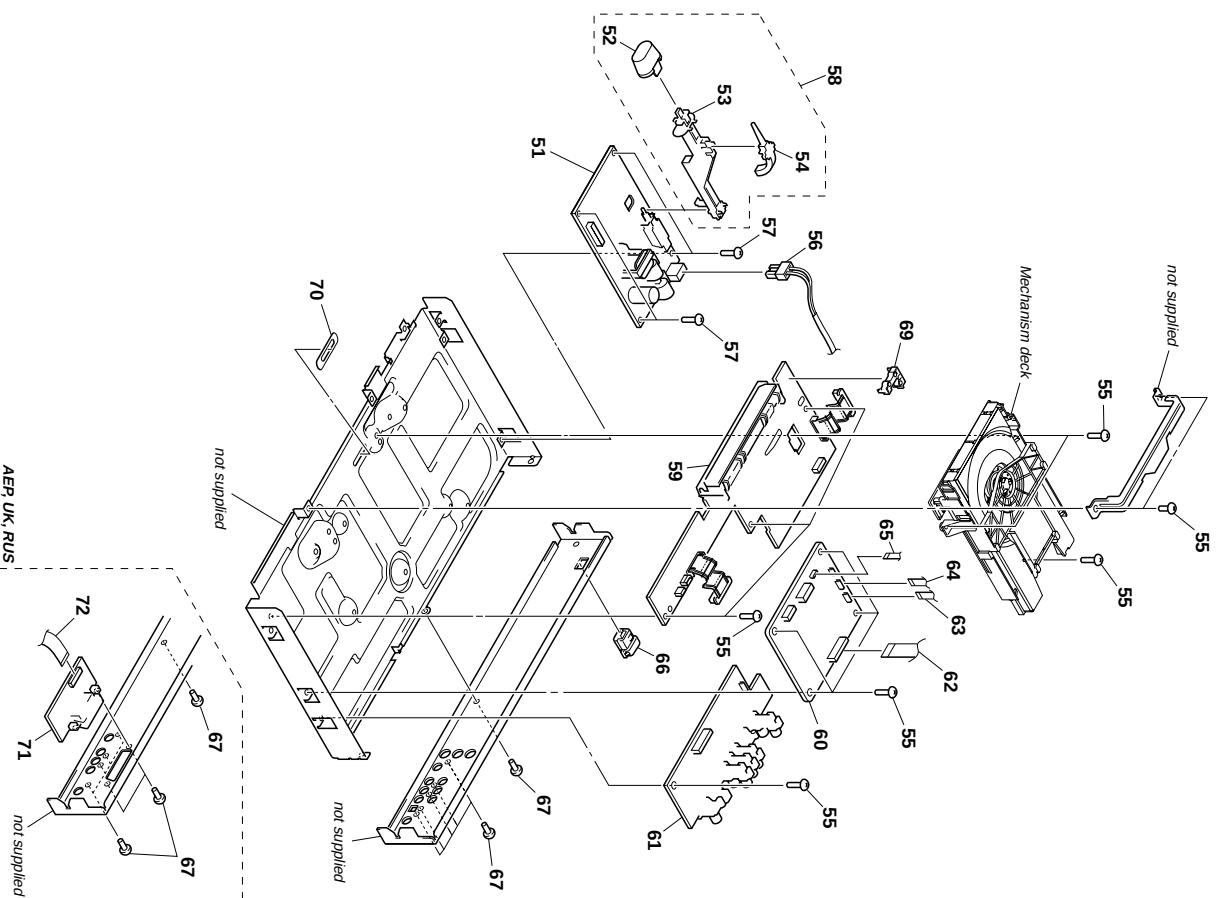

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
* 51	1-468-583-11	POWER BLOCK (HS13S0U)	(US, CND, MX, TW)	* 60	A-6065-646-A	MB-98 BOARD, COMPLETE	
* 51	1-468-584-11	POWER BLOCK (TOP-244U)	(US, CND, MX)	* 60	(AEP (DPX1401BM), AEP (DPX1401HM), UK)		
* 51	1-468-585-11	POWER BLOCK (HS13S0E)	(AEP, UK, RUS, E12, EA, ME, AR, HK, KR, SP, AUS)		A-6065-650-A	MB-98 BOARD, COMPLETE	(US (DPX1400BM), US (DPX1400HM), CND, PX)
* 51	1-468-586-11	POWER BLOCK (HS13S0F)	(E32, BR, PX)	* 60	A-6065-654-A	MB-98 BOARD, COMPLETE	
52	3-067-232-11	BUTTON (POWER)	(US (DPX1400BM), US (DPX1400BX), CND (DPX1400BM), AEP (DPX1401BM), AEP (DPX1402BM), UK (DPX1401BM), PX)	* 60	A-6065-655-A	MB-98 BOARD, COMPLETE	(AEP (DPX1402BM), AEP (DPX1402HM))
52	3-067-232-21	BUTTON (POWER) (US (DPX1400HM), CND (DPX1402HM), UK (DPX1401HM), RUS, E12, E32, EA, ME, MX (1400HM), AR, BR, HK, KR, SP, TW, AUS)		* 60	A-6065-656-A	MB-98 BOARD, COMPLETE (RUS)	
52	3-067-232-21	BUTTON (POWER) (US (DPX1400HM), CND (DPX1402HM), AEP (DPX1401HM), AEP (DPX1402HM), UK (DPX1401HM), RUS, E12, E32, EA, ME, MX (1400HM), AR, BR, HK, KR, SP, TW, AUS)		* 60	A-6065-657-A	MB-98 BOARD, COMPLETE (E12)	
53	3-059-321-11	INDICATOR (P)		* 60	A-6065-658-A	MB-98 BOARD, COMPLETE (EA, ME)	
54	3-970-608-11	SUMMITTE (B3), +BV		* 60	A-6065-659-A	MB-98 BOARD, COMPLETE (AUS)	
55	1-757-901-11	CORR. POWER (AR)		* 60	A-6065-660-A	MB-98 BOARD, COMPLETE (HK, KR, SP, TW)	
56	1-769-744-91	CORR. POWER (AEP UK, RUS, E12, E32, EA, ME, BR, HK, SP, PX)		* 60	A-6065-661-A	MB-98 BOARD, COMPLETE (US (DPX1400BX))	
56	1-782-752-31	CORR. POWER (KR)		* 60	A-6065-672-A	MB-98 BOARD, COMPLETE	
56	1-783-532-31	CORR. POWER (US, CND, MX)		* 61	A-6065-645-A	AV-56 BOARD, COMPLETE (AEP, UK, RUS)	(MX (DPX1400HX))
56	1-790-390-41	CORR. POWER (TW)		* 61	A-6065-649-A	AV-56 BOARD, COMPLETE	
57	3-050-569-01	SUMMITTE (B3), +VWD		* 61	A-6065-662-A	AV-56 BOARD, COMPLETE	(E12, EA, ME, HK, KR, SP, TW, AUS)
58	X-3951-592-1	BUTTON ASSY, POWER (MX (DPX1400HX))		* 61	A-6065-702-A	AV-56 BOARD, COMPLETE	(US (DPX1400BM), MX (DPX1400HX))
* 59	A-6064-706-A	IF-80 BOARD, COMPLETE (BR)		* 61	A-6065-702-A	AV-56 BOARD, COMPLETE	(US (DPX1400BM), US (DPX1400HM), AR, BR, PX)
* 59	A-6065-647-A	IF-80 BOARD, COMPLETE (AEP, UK, RUS)		62	1-757-695-11	CABLE, FLEXIBLE FLAT (FMA-023)	
* 59	A-6065-651-A	IF-80 BOARD, COMPLETE (US (DPX1400BM), US (DPX1400HM), CND, E12, E32, EA, ME, MX (DPX1400HM), AR, HK, KR, SP, TW, AUS, PX)		63	1-757-693-11	CABLE, FLEXIBLE FLAT (FMA-001)	
* 59	A-6065-663-A	IF-80 BOARD, COMPLETE (US (DPX1400BX), MX (DPX1400HX))		64	1-757-694-11	CABLE, FLEXIBLE FLAT (FMA-002)	
				65	1-757-697-11	CABLE, FLEXIBLE FLAT (FMA-035)	
				66	4-966-267-12	BUSHING (FBS001), CORR	
				67	3-970-608-51	SUMMITTE (B3), +BV	
				69	3-067-248-01	LED HOLDER	
				70	3-069-090-01	COVER, EJECT	
				71	A-6065-648-A	ER-14 BOARD, COMPLETE (AEP, UK, RUS)	
				72	1-757-699-11	CABLE, FLEXIBLE FLAT (FAE-005)	(AEP, UK, RUS)

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque Δ ou pointillés pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
--	--

8-1-3. MECHANISM DECK ASSEMBLY

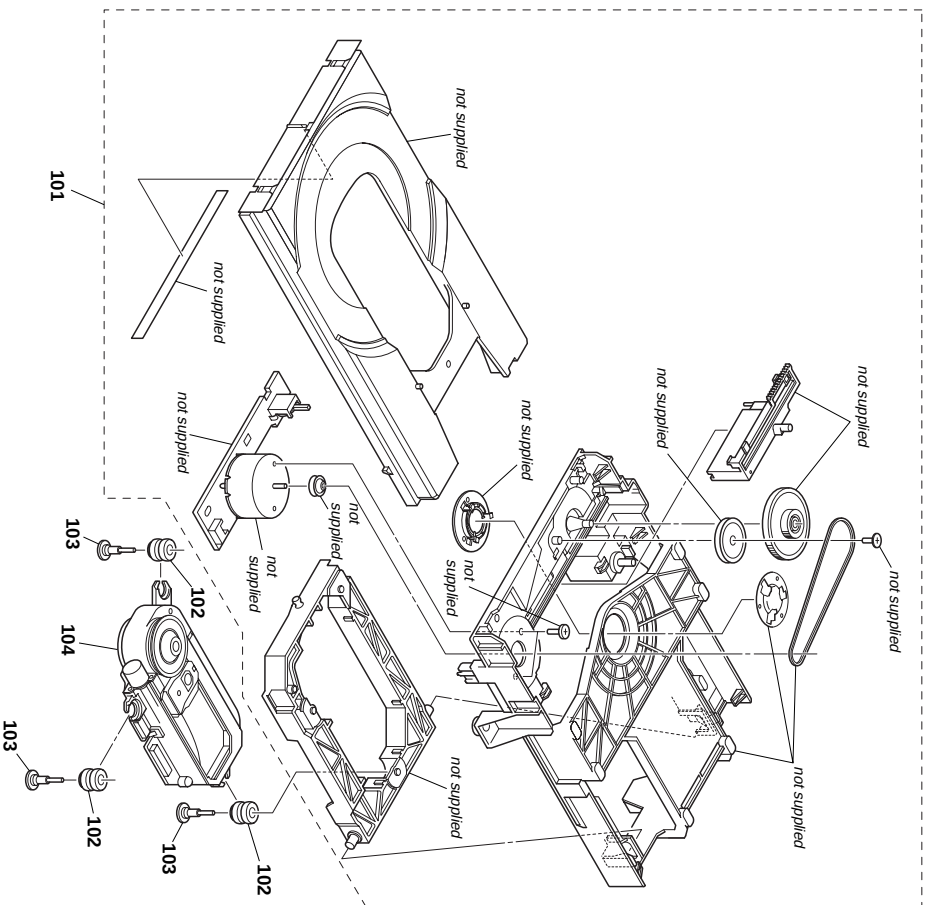

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacez que par une pièce portant le numéro spécifié.
---	---

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101	A-6062-51-4-A	LOADING ASSY (NM)		103	3-067-344-01	INSULATOR SCREW	
102	3-053-847-11	INSULATOR		△ 104	A-4900-650-A	OPTICAL PICK-UP KHM-250 AAA41NP	

AV-56

8-2. ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
 - All resistors are in ohms.
 - METAL: Metal film resistor.
 - METAL OXIDE: Metal oxide film resistor.
 - F: nonflammable
- Not all of the parts for POWER BLOCK (HS1350F, HS1350F, HS1350U and TOP-244U) are listed.

- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
 - In each case, u: μ ; for example:
 - uA.: : μ A.,
 - uPB.: : μ B.,
 - uPP.: : μ P.,
 - uPD.: : μ P.D.
- CAPACITORS
 - uF: μ F
 - uH: μ H

- Abbreviation
 - AR : Argentina
 - AUS : Australian
 - BR : Brazilian
 - CND : Canadian
 - E12 : 220-240 V AC Area in E
 - E12 : 220-240 V AC Area in E
 - ME : Middle East
- Description about model name
 - DPX14xxBM

- Name of production country
 - M : Malaysia
 - X : Mexico

- Color of set
 - B : Black
 - H : Titanium gray

The components identified by mark Δ , or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark
*	A-6065-645-A	AV-56 BOARD, COMPLETE (AEP, UK, RUS)	
*	A-6065-649-A	AV-56 BOARD, COMPLETE (E12, EA, ME, HK, KR, SP, TW, AUS)	
*	A-6065-682-A	AV-56 BOARD, COMPLETE (US, (DPX1400BX), MX (DPX1400HX))	
*	A-6065-702-A	AV-56 BOARD, COMPLETE (US (DPX1400BM), US (DPX1400HM), BR, PX, AR)	
***** (Ref. No. 1,000 Series)			
< CAPACITOR >			
C101	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C102	1-104-664-11	ELECT	47uF 20% 16V
C109	1-165-176-11	CERAMIC CHIP	0.047uF 10% 16V
C110	1-104-664-11	ELECT	47uF 20% 16V
C111	1-104-664-11	ELECT	47uF 20% 16V
C112	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C113	1-104-664-11	ELECT	47uF 20% 16V
C114	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C201	1-164-739-11	CERAMIC CHIP	560PF 5% 50V
C202	1-164-739-11	CERAMIC CHIP	560PF 5% 50V
C203	1-164-218-11	CERAMIC CHIP	180PF 5% 50V
C204	1-164-218-11	CERAMIC CHIP	180PF 5% 50V
C205	1-164-218-11	CERAMIC CHIP	180PF 5% 50V
C206	1-164-218-11	CERAMIC CHIP	180PF 5% 50V
C207	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C208	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C209	1-126-960-11	ELECT	1uF 20% 50V
C210	1-104-664-11	ELECT	47uF 20% 16V
C211	1-104-664-11	ELECT	47uF 20% 16V
C212	1-126-960-11	ELECT	1uF 20% 50V
C215	1-164-230-11	CERAMIC CHIP	220PF 5% 50V (AEP, UK, RUS)

Ref. No.	Part No.	Description	Remark
C216	1-164-230-11	CERAMIC CHIP	220PF 5% 50V (AEP, UK, RUS)
C222	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C223	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C224	1-104-664-11	ELECT	47uF 20% 16V
C226	1-164-230-11	CERAMIC CHIP	220PF 5% 50V
C227	1-104-664-11	ELECT	47uF 20% 16V
C228	1-104-664-11	ELECT	47uF 20% 16V
C229	1-104-664-11	ELECT	47uF 20% 16V
C231	1-126-934-11	ELECT	220uF 20% 16V
C242	1-126-924-11	ELECT	330uF 20% 6.3V
C244	1-104-664-11	ELECT	47uF 20% 16V
< CONNECTOR >			
CN102	1-815-149-11	CONNECTOR, FFC/FFC (1MM PIC) 21P	(AEP, UK, RUS)
* CN202	1-568-934-11	PN, CONNECTOR 7P	
CN203	1-815-390-11	CONNECTOR, FFC/FFC 25P	
< DIODE >			
D004	8-719-071-15	DIODE HZM68ZVAT1L	
D005	8-719-071-15	DIODE HZM68ZVAT1L	
D201	8-719-914-43	DIODE DAN20K-T-146	
D202	8-719-914-44	DIODE DAP20K-T-146	
D203	8-719-914-44	DIODE DAP20K-T-146	(AEP, UK, RUS)
D205	8-719-988-61	DIODE ISS35TE-17	
< EARTH TERMINAL >			
* ET201	1-537-738-21	TERMINAL, EARTH	
< IC >			
IC101	8-759-667-17	IC L79M05TLL-S0W-VTL	
IC102	8-759-826-45	IC LA73050-TLM (EXCEPT AEP, UK, RUS)	
IC102	8-759-826-46	IC LA73051-TLM (AEP, UK, RUS)	

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	
IC201	8-759-909-71	IC BA4568F-E2		R129	1-216-073-00	METAL CHIP	10K
IC203	8-759-711-59	IC NJM78L05UA-TE1		R130	1-216-021-00	METAL CHIP	68
IC204	8-749-017-31	IC 6PFA5507Z (DIGITAL OUT - OPTICAL)	(EXCEPT AEP UK, RUS)	R131	1-216-021-00	METAL CHIP	68
		< JAAK >		R133	1-216-021-00	METAL CHIP	68
				R134	1-216-021-00	METAL CHIP	68
J101	1-815-556-11	JACK, PIN (3P) (LINE OUT) (AEP, UK, RUS)		R201	1-208-788-11	METAL CHIP	4.7K
J101	1-815-562-11	JACK, PIN (6P) (LINE OUT)	(EXCEPT AEP UK, RUS)	R202	1-208-788-11	METAL CHIP	4.7K
J102	1-815-960-11	JACK, PIN (3P) (COMPONENT VIDEO OUT) (EXCEPT AEP UK, RUS)		R203	1-208-788-11	METAL CHIP	4.7K
J103	1-794-198-11	CONNECTOR, S TERMINAL (S VIDEO OUT)		R204	1-208-788-11	METAL CHIP	4.7K
J201	1-793-446-21	JACK, PIN 1P (DIGITAL OUT - COAXIAL)		R205	1-208-800-11	METAL CHIP	5.6K
		< JUMPER RESISTOR >		R206	1-208-800-11	METAL CHIP	5.6K
JR201	1-216-295-11	SHORT		R207	1-216-057-00	METAL CHIP	2.2K
JR202	1-216-295-11	SHORT		R208	1-216-057-00	METAL CHIP	2.2K
JR203	1-216-295-11	SHORT		R209	1-216-057-00	METAL CHIP	2.2K
JR204	1-216-295-11	SHORT		R210	1-216-057-00	METAL CHIP	2.2K
JR205	1-216-295-11	SHORT		R211	1-208-800-11	METAL CHIP	5.6K
JR206	1-216-295-11	SHORT		R212	1-208-800-11	METAL CHIP	5.6K
JR207	1-216-295-11	SHORT		R213	1-216-055-00	RES-CHIP	4.7K
JR208	1-216-295-11	SHORT		R214	1-216-055-00	RES-CHIP	4.7K
JR209	1-216-295-11	SHORT		R216	1-216-067-00	METAL CHIP	5.6K
JR210	1-216-295-11	SHORT		R217	1-216-073-00	METAL CHIP	10K
JR211	1-216-295-11	SHORT		R218	1-216-067-11	RES-CHIP	100K
JR212	1-216-295-11	SHORT		R219	1-216-105-00	RES-CHIP	220K
JR213	1-216-295-11	SHORT		R220	1-216-041-00	METAL CHIP	470
				R221	1-216-073-00	METAL CHIP	10K
		< COIL >		R222	1-216-073-00	METAL CHIP	10K
L101	1-412-064-11	INDUCTOR	100uH	R224	1-216-073-00	METAL CHIP	10K
		< TRANSISTOR >		R225	1-216-089-11	RES-CHIP	47K
				R226	1-216-041-00	METAL CHIP	470
				R227	1-216-041-00	METAL CHIP	470
O104	8-729-421-19	TRANSISTOR	UMN213-TX	R228	1-216-073-00	METAL CHIP	10K
O105	8-729-424-08	TRANSISTOR	UMN211-TX	R229	1-216-089-11	RES-CHIP	47K
O106	8-729-216-22	TRANSISTOR	2S8A162-VG-TE86L	R230	1-216-089-11	RES-CHIP	47K
O201	8-729-049-31	TRANSISTOR	2S8T10-R1TX	R231	1-216-073-00	METAL CHIP	10K
O202	8-729-421-19	TRANSISTOR	UMN213-TX	R232	1-216-073-00	METAL CHIP	10K
O203	8-729-230-49	TRANSISTOR	2S8C212-YG-TE86L	R233	1-216-089-11	RES-CHIP	47K
O204	8-729-027-53	TRANSISTOR	DTIC124TKA-T146	R234	1-216-065-00	RES-CHIP	4.7K
O205	8-729-216-22	TRANSISTOR	2S8T09A-ORS-TX	R235	1-216-065-00	RES-CHIP	4.7K
O206	8-729-421-19	TRANSISTOR	UMN213-TX (AEP, UK, RUS)				
O207	8-729-046-97	TRANSISTOR	2SD1938 (F) -T (TX), SO	R236	1-216-073-00	METAL CHIP	10K
O208	8-729-046-97	TRANSISTOR	2SD1938 (F) -T (TX), SO				
O209	8-729-027-53	TRANSISTOR	DTIC124TKA-T146	R237	1-216-065-00	RES-CHIP	4.7K
O210	8-729-216-22	TRANSISTOR	2S8T09A-ORS-TX				
O211	8-729-230-49	TRANSISTOR	2S8C212-YG-TE86L	R238	1-216-087-11	RES-CHIP	100K
O216	8-729-216-22	TRANSISTOR	2S8T09A-ORS-TX	R239	1-216-087-11	RES-CHIP	100K
		< RESISTOR >		R240	1-216-041-00	METAL CHIP	470
R121	1-216-073-00	METAL CHIP	10K	R241	1-216-041-00	METAL CHIP	470
R122	1-216-049-11	RES-CHIP	1K	R242	1-216-041-00	METAL CHIP	470
R126	1-216-021-00	METAL CHIP	68				
R127	1-216-021-00	METAL CHIP	68	R243	1-216-041-00	METAL CHIP	470
R128	1-216-021-00	METAL CHIP	68	R249	1-216-023-00	METAL CHIP	220
				R251	1-216-021-00	METAL CHIP	5%
				R252	1-216-073-00	METAL CHIP	10K
				R253	1-216-049-11	RES-CHIP	1K

AV-56 ER-14 IF-80

Ref. No.	Part No.	Description	Remark
R254	1-216-049-11	RES-CHIP	1K 5% 1/10W
R256	1-216-049-11	RES-CHIP	1K 5% 1/10W
R279	1-216-295-11	SHORT	0

* A-6065-64B-A ER-14 BOARD COMPLETE (AEP UK, RUS)

(Ref. No. 1,000 Series)

< CAPACITOR >			
C901	1-104-664-11	ELECT	47uF 20% 16V
C902	1-104-664-11	ELECT	47uF 20% 16V
C903	1-104-664-11	ELECT	47uF 20% 16V
C905	1-104-664-11	ELECT	47uF 20% 16V
C907	1-104-664-11	ELECT	47uF 20% 16V
C913	1-127-715-11	CERAMIC CHIP	0.22uF 10% 16V
C914	1-127-715-11	CERAMIC CHIP	0.22uF 10% 16V
C943	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C945	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C962	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C963	1-162-927-11	CERAMIC CHIP	100PF 5% 50V

< CONNECTOR >			
CN901	1-815-387-11	CONNECTOR, PFC/PFC 21P	
< JACK >			
CNJ902	1-251-780-11	SOCKET, PIN (21P) (LINE 1 (RGB) - TV)	
< DIODE >			
D901	8-719-988-61	DIODE 1SS355TE-17	
D907	8-719-914-44	DIODE DAP202K-1-146	
D917	8-719-071-15	DIODE HZM6.82WATTL	
D918	8-719-071-15	DIODE HZM6.82WATTL	
D919	8-719-071-15	DIODE HZM6.82WATTL	
D920	8-719-071-15	DIODE HZM6.82WATTL	
D929	8-719-056-82	DIODE UDZ7TE-17-6-28	
D930	8-719-977-40	DIODE UDZ7TE-17-1-138	

< FERRITE BEAD >			
FB907	1-414-766-22	FERRITE	0uH
FB907	1-469-130-11	FERRITE	0uH
FB907	1-469-796-21	FERRITE	0uH
FB908	1-414-766-22	FERRITE	0uH
FB908	1-469-130-11	FERRITE	0uH
FB908	1-469-796-21	FERRITE	0uH
FB909	1-414-766-22	FERRITE	0uH
FB909	1-469-130-11	FERRITE	0uH
FB909	1-469-796-21	FERRITE	0uH
FB910	1-414-766-22	FERRITE	0uH
FB910	1-469-130-11	FERRITE	0uH
FB910	1-469-796-21	FERRITE	0uH

IC901	8-759-826-47	IC LA73052-TLM	
< IC >			
< JUMPER RESISTOR >			

JR901	1-216-295-11	SHORT	0
JR902	1-216-295-11	SHORT	0
JR905	1-216-295-11	SHORT	0
JR906	1-216-295-11	SHORT	0

Ref. No.	Part No.	Description	Remark
JR907	1-216-295-11	SHORT	0
JR908	1-216-295-11	SHORT	0
JR909	1-216-295-11	SHORT	0
JR910	1-216-295-11	SHORT	0
JR911	1-216-295-11	SHORT	0
JR912	1-216-295-11	SHORT	0
JR913	1-216-295-11	SHORT	0
JR914	1-216-295-11	SHORT	0
JR915	1-216-295-11	SHORT	0
< COIL >			
L905	1-412-064-11	INDUCTOR	100uH
< TRANSISTOR >			
O901	8-729-421-19	TRANSISTOR UM2213-TX	
O902	8-729-422-27	TRANSISTOR 2S0601A-QRS-TX	
O903	8-729-424-08	TRANSISTOR UM2111-TX	
O906	8-729-421-19	TRANSISTOR UM2213-TX	
O907	8-729-424-08	TRANSISTOR UM2111-TX	
O908	8-729-421-22	TRANSISTOR UM2211-TX	

< RESISTOR >			
R902	1-216-295-11	SHORT	0
R905	1-216-089-11	RES-CHIP	47K 5% 1/10W
R906	1-216-089-11	RES-CHIP	47K 5% 1/10W
R907	1-216-089-11	RES-CHIP	47K 5% 1/10W
R908	1-216-105-00	RES-CHIP	220K 5% 1/10W
R909	1-216-037-00	METAL CHIP	330 5% 1/10W
R910	1-216-037-00	METAL CHIP	330 5% 1/10W
R911	1-216-021-00	METAL CHIP	330 5% 1/10W
R912	1-216-037-00	METAL CHIP	330 5% 1/10W
R914	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
R915	1-216-049-11	RES-CHIP	1K 5% 1/10W
R916	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
R917	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
R918	1-216-021-00	METAL CHIP	68 5% 1/10W
R924	1-216-041-00	METAL CHIP	470 5% 1/10W
R926	1-216-041-00	METAL CHIP	470 5% 1/10W
R927	1-216-021-00	METAL CHIP	68 5% 1/10W
R928	1-216-021-00	METAL CHIP	68 5% 1/10W
R929	1-216-021-00	METAL CHIP	68 5% 1/10W
R939	1-216-017-00	RES-CHIP	47 5% 1/10W
R950	1-216-081-00	METAL CHIP	22K 5% 1/10W
R957	1-414-233-22	FERRITE	0uH
R958	1-414-233-22	FERRITE	0uH

* A-6065-647-A IF-80 BOARD COMPLETE (AEP UK, RUS)
* A-6065-651-A IF-80 BOARD COMPLETE (EXCEPT AEP UK, RUS, US, (DPX1400BX), MX (DPX1400HX), BR)
* A-6065-663-A IF-80 BOARD COMPLETE (MX (DPX1400HX), BR)
* A-6065-706-A IF-80 BOARD COMPLETE (US, (DPX1400BX), MX (DPX1400HX), BR)

(Ref. No. 1,000 Series)

3-067-209-01 HOLDER, FL (US, (DPX1400BX), MX (DPX1400HX))
3-067-239-01 HOLDER, FL (EXCEPT US, (DPX1400BX), MX (DPX1400HX), BR)

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	
	3-067-239-11	HOLDER, FL (BR)					
	< BUZZER >						
BZ401	1-529-986-11	BUZZER, VOLTAGE		JR401	1-216-295-11	SHORT	
	< CAPACITOR >			JR402	1-216-295-11	SHORT	0
					< COIL >		
				L401	1-408-978-21	INDUCTOR	47uH
					< FLUORESCENT INDICATOR TUBE >		
				ND401	1-517-971-11	INDICATOR TUBE, FLUORESCENT	
					< IC LINK >		
				Δ PS401	1-576-509-21	LINK, IC (1.0 A)	
				Δ PS402	1-576-509-21	LINK, IC (1.0 A)	
					< TRANSISTOR >		
C401	1-162-970-11	CERAMIC CHIP	0.01uF	0401	8-729-056-46	TRANSISTOR	2SC053T100Q
C402	1-104-664-11	ELECT	47uF	0402	8-729-056-46	TRANSISTOR	2SC053T100Q
C404	1-162-970-11	CERAMIC CHIP	0.01uF	Q404	8-729-048-28	TRANSISTOR	2SD1766-T100-QR
C407	1-162-970-11	CERAMIC CHIP	0.01uF	Q405	8-729-424-08	TRANSISTOR	UM2111-TX
C409	1-162-970-11	CERAMIC CHIP	0.01uF		< RESISTOR >		
				R401	1-216-065-00	RES-CHIP	4.7K
				R402	1-216-097-11	RES-CHIP	100K
				R412	1-216-017-00	RES-CHIP	47
				R413	1-216-067-00	METAL CHIP	5.6K
				R414	1-216-059-00	METAL CHIP	2.7K
				R415	1-216-055-00	METAL CHIP	1.8K
				R416	1-216-065-00	METAL CHIP	1.8K
				R417	1-216-097-11	RES-CHIP	100K
				R418	1-216-073-00	METAL CHIP	10K
				R420	1-216-023-11	RES-CHIP	100
					< DIODE >		
				R421	1-216-059-00	METAL CHIP	2.7K
				R422	1-216-071-00	METAL CHIP	8.2K
				R423	1-216-081-00	METAL CHIP	22K
				R424	1-216-013-00	METAL CHIP	33
				R425	1-216-023-11	RES-CHIP	100
					< DIODE >		
				R427	1-216-063-00	RES-CHIP	3.9K
				R428	1-216-071-00	METAL CHIP	8.2K
				R429	1-216-067-00	METAL CHIP	5.6K
				R430	1-216-059-00	METAL CHIP	2.7K
				R431	1-216-063-00	RES-CHIP	3.9K
				R433	1-216-073-00	METAL CHIP	10K
				R434	1-216-073-00	METAL CHIP	10K
				R435	1-216-073-00	METAL CHIP	10K
				R437	1-216-027-00	METAL CHIP	120
				R440	1-216-073-00	METAL CHIP	10K
					< FERRITE BEAD >		
				R444	1-216-025-11	RES-CHIP	100
				R446	1-216-097-11	RES-CHIP	100K
				R448	1-216-073-00	METAL CHIP	10K
				R449	1-216-073-00	METAL CHIP	10K
				R450	1-216-073-00	METAL CHIP	10K
				R455	1-216-073-00	METAL CHIP	10K
				R460	1-216-295-11	SHORT	0
				R470	1-216-073-00	METAL CHIP	10K
				R473	1-216-073-00	METAL CHIP	10K
				R474	1-216-025-11	RES-CHIP	100

The components identified by mark Δ, or dotted line with mark Δ, are critical for safety. Replace only with part number specified.

Les composants identifiés par marque Δ, ou traitillés par marque Δ, sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

IF-80

MB-98

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R481	1-216-025-11	RES-CHIP	100 5%	1/10W	C109	1-162-970-11 CERAMIC CHIP	0.01uF 10%
R482	1-216-025-11	RES-CHIP	100 5%	1/10W	C110	1-126-209-11 ELECT CHIP	100uF 20%
R483	1-216-025-11	RES-CHIP	100 5%	1/10W			
R484	1-216-025-11	RES-CHIP	100 5%	1/10W	C111	1-162-970-11 CERAMIC CHIP	0.01uF 10%
R485	1-216-025-11	RES-CHIP	100 5%	1/10W	C112	1-107-826-11 CERAMIC CHIP	0.1uF 10%
					C113	1-162-970-11 CERAMIC CHIP	0.01uF 10%
R486	1-216-033-00	METAL CHIP	220 5%	1/10W	C114	1-162-970-11 CERAMIC CHIP	0.01uF 10%
R487	1-216-033-00	METAL CHIP	220 5%	1/10W	C115	1-162-970-11 CERAMIC CHIP	0.01uF 10%
R490	1-216-081-00	METAL CHIP	22K 5%	1/10W			
	< SWITCH >				C116	1-162-970-11 CERAMIC CHIP	0.01uF 10%
S401	1-771-574-21	SWITCH, TACTILE (BMR)			C118	1-126-607-11 ELECT CHIP	47uF 20%
S402	1-771-574-21	SWITCH, TACTILE (TITLE)			C121	1-126-206-11 ELECT CHIP	100uF 20%
S403	1-771-574-21	SWITCH, TACTILE (►►)			C122	1-126-204-11 ELECT CHIP	47uF 20%
S404	1-771-574-21	SWITCH, TACTILE (SURROUND)			C123	1-126-246-11 ELECT CHIP	220uF 20%
S405	1-771-574-21	SWITCH, TACTILE (↻ RETURN)					
S406	1-771-574-21	SWITCH, TACTILE (■)			C124	1-162-970-11 CERAMIC CHIP	0.01uF 10%
S407	1-771-574-21	SWITCH, TACTILE (DVD MENU)			C201	1-162-970-11 CERAMIC CHIP	0.01uF 10%
S408	1-771-574-21	SWITCH, TACTILE (►◄)			C202	1-162-970-11 CERAMIC CHIP	0.01uF 10%
S409	1-771-574-21	SWITCH, TACTILE (DISPLAY)			C205	1-162-966-11 CERAMIC CHIP	0.0022uF 10%
S410	1-771-574-21	SWITCH, TACTILE (■)			C206	1-162-966-11 CERAMIC CHIP	0.0022uF 10%
S411	1-771-574-21	SWITCH, TACTILE (►) (◄)			C207	1-162-966-11 CERAMIC CHIP	0.0022uF 10%
S412	1-771-574-21	SWITCH, TACTILE (⊕)			C208	1-162-966-11 CERAMIC CHIP	0.0022uF 10%
	< TRANSFORMER >				C209	1-124-779-00 ELECT CHIP	10uF 20%
T401	1-485-912-11	TRANSFORMER, CONVERTER			C215	1-162-968-11 CERAMIC CHIP	0.0047uF 10%
	< VIBRATOR >				C216	1-162-968-11 CERAMIC CHIP	0.0047uF 10%
X401	1-781-472-21	VIBRATOR, CERAMIC (8 MHz)			C217	1-126-205-11 ELECT CHIP	47uF 20%
					C218	1-162-970-11 CERAMIC CHIP	0.01uF 10%
					C219	1-164-739-11 CERAMIC CHIP	560PF 5%
					C222	1-107-826-11 CERAMIC CHIP	0.1uF 10%
					C225	1-107-826-11 CERAMIC CHIP	0.1uF 10%
					C226	1-162-970-11 CERAMIC CHIP	0.01uF 10%
					C227	1-162-970-11 CERAMIC CHIP	0.01uF 10%
					C228	1-162-970-11 CERAMIC CHIP	0.01uF 10%
					C231	1-107-826-11 CERAMIC CHIP	0.1uF 10%
					C232	1-107-826-11 CERAMIC CHIP	0.1uF 10%
					C233	1-162-964-11 CERAMIC CHIP	0.001uF 10%
					C234	1-162-970-11 CERAMIC CHIP	0.01uF 10%
					C235	1-107-826-11 CERAMIC CHIP	0.1uF 10%
					C236	1-165-176-11 CERAMIC CHIP	0.047uF 10%
					C238	1-165-176-11 CERAMIC CHIP	0.047uF 10%
					C239	1-162-970-11 CERAMIC CHIP	0.01uF 10%
					C240	1-164-217-11 CERAMIC CHIP	150PF 5%
					C243	1-107-826-11 CERAMIC CHIP	0.1uF 10%
					C244	1-124-779-00 ELECT CHIP	10uF 20%
					C246	1-162-970-11 CERAMIC CHIP	0.01uF 10%
					C247	1-107-826-11 CERAMIC CHIP	0.1uF 10%
					C248	1-162-970-11 CERAMIC CHIP	0.01uF 10%
					C304	1-126-206-11 ELECT CHIP	100uF 20%
					C305	1-162-970-11 CERAMIC CHIP	0.01uF 10%
					C306	1-162-968-11 CERAMIC CHIP	0.0047uF 10%
					C307	1-162-970-11 CERAMIC CHIP	0.01uF 10%
					C309	1-162-968-11 CERAMIC CHIP	0.0047uF 10%
					C310	1-162-968-11 CERAMIC CHIP	0.0047uF 10%
					C311	1-162-968-11 CERAMIC CHIP	0.0047uF 10%
					C312	1-107-826-11 CERAMIC CHIP	0.1uF 10%
					C313	1-164-677-11 CERAMIC CHIP	0.033uF 10%
					C315	1-162-927-11 CERAMIC CHIP	100PF 5%
					C317	1-162-970-11 CERAMIC CHIP	0.01uF 10%
					C318	1-162-970-11 CERAMIC CHIP	0.01uF 10%
					C319	1-110-563-11 CERAMIC CHIP	0.068uF 10%
					C320	1-162-970-11 CERAMIC CHIP	0.01uF 10%
					C321	1-162-970-11 CERAMIC CHIP	0.01uF 10%
					C322	1-162-970-11 CERAMIC CHIP	0.01uF 10%

< CAPACITOR >

(Ref. No. 2,000 Series)

(MX (DPX1400HX))

(EXCEPT AEP, UK, RUS)

(AEP UK, RUS)

(EXCEPT AEP, UK, RUS)

(AEP UK, RUS)

(EXCEPT AEP, UK, RUS)

(AEP UK, RUS)

(EXCEPT AEP, UK, RUS)

(AEP UK, RUS)

(EXCEPT AEP, UK, RUS)

(AEP UK, RUS)

(EXCEPT AEP, UK, RUS)

(AEP UK, RUS)

(EXCEPT AEP, UK, RUS)

(AEP UK, RUS)

(EXCEPT AEP, UK, RUS)

(AEP UK, RUS)

(EXCEPT AEP, UK, RUS)

(AEP UK, RUS)

(EXCEPT AEP, UK, RUS)

(AEP UK, RUS)

(EXCEPT AEP, UK, RUS)

(AEP UK, RUS)

(EXCEPT AEP, UK, RUS)

(AEP UK, RUS)

(EXCEPT AEP, UK, RUS)

(AEP UK, RUS)

(EXCEPT AEP, UK, RUS)

(AEP UK, RUS)

(EXCEPT AEP, UK, RUS)

(AEP UK, RUS)

(EXCEPT AEP, UK, RUS)

(AEP UK, RUS)

(EXCEPT AEP, UK, RUS)

(AEP UK, RUS)

(EXCEPT AEP, UK, RUS)

(AEP UK, RUS)

(EXCEPT AEP, UK, RUS)

(AEP UK, RUS)

(EXCEPT AEP, UK, RUS)

(AEP UK, RUS)

(EXCEPT AEP, UK, RUS)

(AEP UK, RUS)

(EXCEPT AEP, UK, RUS)

(AEP UK, RUS)

(EXCEPT AEP, UK, RUS)

(AEP UK, RUS)

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	
C323	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C514	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C324	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C516	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C325	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C518	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C326	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C519	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C327	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C520	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C328	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C521	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C331	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C522	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C332	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C523	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C333	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C524	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C334	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C525	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C335	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C526	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C336	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C528	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C337	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C529	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C338	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C530	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C339	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C531	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C340	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C532	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C341	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C533	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C342	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V			(EXCEPT US, CND, MX, AR, BR, EC, PE, TH, TW, VN)	
C343	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C534	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C344	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C535	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C346	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V	C536	1-162-970-11	(EXCEPT US, CND, MX, AR, BR, EC, PE, TH, TW, VN)	
C347	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C537	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C348	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C538	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C349	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V			(EXCEPT US, CND, MX, AR, BR, EC, PE, TH, TW, VN)	
C350	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C539	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C351	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C540	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C401	1-164-245-11	CERAMIC CHIP	0.015uF 10% 25V	C541	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C402	1-164-230-11	CERAMIC CHIP	220PF 5% 50V	C542	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C403	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	C544	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C404	1-162-965-11	CERAMIC CHIP	0.0015uF 10% 16V			(EXCEPT US, CND, MX, AR, BR, EC, PE, TH, TW, VN)	
C405	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C545	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C406	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	C546	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C407	1-164-230-11	CERAMIC CHIP	220PF 5% 50V	C547	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C408	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	C601	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C409	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	C602	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C410	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V			(EXCEPT US, CND, MX, AR, BR, EC, PE, TH, TW, VN)	
C411	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V	C603	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C412	1-164-677-11	CERAMIC CHIP	0.033uF 10% 16V	C604	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C413	1-164-677-11	CERAMIC CHIP	0.033uF 10% 16V	C802	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C414	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C807	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C415	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C810	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C416	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C811	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C417	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	C812	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C418	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C813	1-127-715-11	CERAMIC CHIP	0.22uF 10% 16V
C419	1-126-204-11	ELECT CHIP	47uF 20% 16V	C816	1-124-779-00	ELECT CHIP	10uF 20% 16V
C420	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	< CONNECTOR >			
C421	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	CN101	1-815-459-21	CONNECTOR, BOARD TO BOARD 15P	
C427	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	CN103	1-1770-470-21	PIN, CONNECTOR (PC BOARD) 6P	
C428	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	CN201	1-815-507-11	CONNECTOR, FCC/FPC 28P	
C501	1-126-193-11	ELECT	1uF 20% 50V	CN202	1-779-885-11	CONNECTOR, FCC/FPC 9P	
C502	1-124-779-00	ELECT CHIP	10uF 20% 16V	CN402	1-779-383-21	CONNECTOR, FCC/FPC 5P	
C503	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	CN801	1-815-396-21	CONNECTOR, FCC/FPC 25P	
C504	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	< FERRITE BEAD >			
C505	1-124-779-00	ELECT CHIP	10uF 20% 16V	FB102	1-469-324-21	FERRITE	0uH
C506	1-124-779-00	ELECT CHIP	10uF 20% 16V	FB103	1-469-324-21	FERRITE	0uH
C508	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	FB104	1-469-324-21	FERRITE	0uH
C509	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	FB105	1-469-324-21	FERRITE	0uH
C510	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	FB106	1-469-324-21	FERRITE	0uH
C512	1-126-246-11	ELECT CHIP	220uF 20% 4V				
C513	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V				

MB-98

Ref. No.	Part No.	Description	Remark
FB107	1-469-324-21	FERRITE	0uH
FB108	1-469-324-21	FERRITE	0uH
FB109	1-469-784-11	FERRITE	0uH
FB110	1-469-324-21	FERRITE	0uH
FB112	1-469-784-11	FERRITE	0uH
< FILTER >			
FL101	1-234-177-21	FILTER, CHIP EMI	
FL102	1-234-177-21	FILTER, CHIP EMI	
FL103	1-234-177-21	FILTER, CHIP EMI	
FL104	1-233-893-21	FILTER, CHIP EMI	
FL105	1-234-177-21	FILTER, CHIP EMI	
FL106	1-234-177-21	FILTER, CHIP EMI	
FL108	1-234-177-21	FILTER, CHIP EMI	
FL201	1-234-177-21	FILTER, CHIP EMI	
FL501	1-234-177-21	FILTER, CHIP EMI	
FL502	1-234-177-21	FILTER, CHIP EMI	
FL505	1-234-177-21	FILTER, CHIP EMI	
< IC >			
IC101	8-759-640-41	IC BR24C08E-E2	
IC102	8-759-831-81	IC IMC6001BTD(AEP, UK, RUS)	
IC102	8-759-831-82	IC SW8707AV-E2 (EXCEPT AEP, UK, RUS)	
IC103	8-759-829-75	IC MB91307APV-G-BMD-E1	
IC107	Note		
IC108	Note		
IC202	8-759-828-02	IC SP3728AC	
IC301	8-759-832-31	IC TK7153ASCL	
IC302	8-759-828-01	IC CXD9635R	
IC303	8-759-643-10	IC GM71V18160CT-6TR	
IC401	8-759-826-42	IC FAN6034	
IC501	8-759-832-30	IC TK71518ASCL	
IC502	8-759-599-45	IC MMT1385ENLE	
IC503	8-752-409-87	IC CXD1933Q	
IC504	8-759-683-76	IC K4S161622D-1C80T	
IC505	8-759-683-76	IC K4S161622D-1C80T (EXCEPT US, CND, MX, AR, BR, E32, PX)	
IC601	8-759-826-43	IC CXD9631Q	
IC801	8-759-825-34	IC CXD9626Q	
IC802	8-759-825-32	IC CXD9627N-E2	
< COLL >			
L201	1-412-031-11	INDUCTOR CHIP 47uH	
< TRANSISTOR >			
Q201	8-729-903-46	TRANSISTOR 2SB1132-1100-QR	
< RESISTOR >			
R101	1-216-789-11	METAL CHIP 2.2	5% 1/16W
R106	1-216-833-11	METAL CHIP 10K	5% 1/16W
R107	1-216-821-11	METAL CHIP 1K	5% 1/16W
R107	1-216-864-91	SHORT	0 (EXCEPT AEP, UK, RUS)
R109	1-216-797-11	METAL CHIP 10	5% 1/16W
R111	1-216-817-11	METAL CHIP 470	5% 1/16W
R112	1-216-821-11	METAL CHIP 1K	5% 1/16W
R113	1-216-833-11	METAL CHIP 10K	5% 1/16W
R114	1-216-845-11	METAL CHIP 100K	5% 1/16W

Ref. No.	Part No.	Description	Remark
R116	1-216-833-11	METAL CHIP 10K	5% 1/16W
R117	1-216-821-11	METAL CHIP 1K	5% 1/16W
R118	1-216-821-11	METAL CHIP 1K	5% 1/16W
R119	1-216-833-11	METAL CHIP 10K	5% 1/16W
R121	1-216-833-11	METAL CHIP 10K	5% 1/16W
R123	1-216-833-11	METAL CHIP 10K	5% 1/16W
R124	1-216-797-11	METAL CHIP 10	5% 1/16W
R125	1-216-797-11	METAL CHIP 10	5% 1/16W
R126	1-216-797-11	METAL CHIP 10	5% 1/16W
R127	1-216-797-11	METAL CHIP 10	5% 1/16W
R128	1-216-827-11	METAL CHIP 3.3K	5% 1/16W
R129	1-216-833-11	METAL CHIP 10K	5% 1/16W
R130	1-216-833-11	METAL CHIP 10K	5% 1/16W
R133	1-216-833-11	METAL CHIP 10K	5% 1/16W
R134	1-216-833-11	METAL CHIP 10K	5% 1/16W
R136	1-216-797-11	METAL CHIP 10	5% 1/16W
R137	1-216-797-11	METAL CHIP 10	5% 1/16W
R138	1-216-797-11	METAL CHIP 10	5% 1/16W
R141	1-216-797-11	METAL CHIP 10	5% 1/16W
R142	1-216-797-11	METAL CHIP 10	5% 1/16W
R143	1-216-833-11	METAL CHIP 10K	5% 1/16W
R145	1-216-833-11	METAL CHIP 10K	5% 1/16W
R146	1-216-833-11	METAL CHIP 10K	5% 1/16W
R149	1-216-827-11	METAL CHIP 3.3K	5% 1/16W
R150	1-216-041-00	METAL CHIP 470	5% 1/10W (AUS)
R150	1-216-047-00	RES-CHIP 820	5% 1/10W (EA, ME)
R150	1-216-052-00	METAL CHIP 1.3K	5% 1/10W (E12)
R150	1-216-057-00	METAL CHIP 2.2K	5% 1/10W (HK, KR, SP, TW)
R150	1-216-065-00	RES-CHIP 4.7K	5% 1/10W (RUS)
R150	1-216-069-00	METAL CHIP 6.8K	5% 1/10W (AEP (DPX1402BM), AEP (DPX1402HM))
R150	1-216-075-00	METAL CHIP 12K	5% 1/10W (AEP (DPX1401BM), AEP (DPX1401HM), UK)
R150	1-216-081-00	METAL CHIP 22K	5% 1/10W (MX, AR, BR, E32)
R151	1-216-827-11	METAL CHIP 3.3K	5% 1/16W
R153	1-216-827-11	METAL CHIP 3.3K	5% 1/16W
R154	1-216-069-00	METAL CHIP 6.8K	5% 1/10W (E12, RUS)
R154	1-216-075-00	METAL CHIP 12K	5% 1/10W (MX, AR, AUS, BR, E32)
R154	1-216-081-00	METAL CHIP 22K	5% 1/10W (HK, KR, SP, TW)
R154	1-216-089-11	RES-CHIP 47K	5% 1/10W (AEP, UK, EA, ME)
R155	1-216-827-11	METAL CHIP 3.3K	5% 1/16W
R156	1-216-833-11	METAL CHIP 10K	5% 1/16W
R160	1-216-833-11	METAL CHIP 10K	5% 1/16W
R163	1-216-833-11	METAL CHIP 10K	5% 1/16W
R164	1-216-809-11	METAL CHIP 100	5% 1/16W
R165	1-216-809-11	METAL CHIP 100	5% 1/16W
R166	1-216-817-11	METAL CHIP 470	5% 1/16W
R167	1-216-864-91	SHORT	0
R168	1-216-864-91	SHORT	0

Note: Part number has not been determined yet.
It will be noticed later.

Ref. No.	Part No.	Description		Remark	Ref. No.	Part No.	Description		
R170	1-216-921-11	METAL CHIP	1K	5%	1/16W	R351	1-216-825-11	METAL CHIP	2.2K
R177	1-216-797-11	METAL CHIP	10	5%	1/16W	R352	1-216-825-11	METAL CHIP	2.2K
R178	1-216-797-11	METAL CHIP	10	5%	1/16W	R356	1-218-853-11	METAL CHIP	1.8K
R182	1-216-945-11	METAL CHIP	100K	5%	1/16W	R368	1-216-829-11	METAL CHIP	4.7K
R199	1-216-829-11	METAL CHIP	2.7K	5%	1/16W	R384	1-216-797-11	METAL CHIP	10
R201	1-216-815-11	METAL CHIP	330	5%	1/16W	R385	1-216-829-11	METAL CHIP	4.7K
R202	1-216-809-11	METAL CHIP	100	5%	1/16W	R402	1-216-831-11	METAL CHIP	10K
R203	1-216-809-11	METAL CHIP	100	5%	1/16W	R403	1-216-833-11	METAL CHIP	10K
R204	1-216-837-11	METAL CHIP	22K	5%	1/16W	R404	1-216-821-11	METAL CHIP	1K
R205	1-216-945-11	METAL CHIP	100K	5%	1/16W	R405	1-216-821-11	METAL CHIP	1K
R206	1-216-833-11	METAL CHIP	27K	5%	1/16W	R406	1-216-846-11	METAL CHIP	120K
R207	1-216-833-11	METAL CHIP	33	5%	1/16W	R407	1-216-846-11	METAL CHIP	120K
R208	1-216-803-11	METAL CHIP	33	5%	1/16W	R408	1-216-847-11	METAL CHIP	150K
R209	1-216-820-11	METAL CHIP	820	5%	1/16W	R409	1-216-847-11	METAL CHIP	150K
R210	1-216-941-11	METAL CHIP	47K	5%	1/16W	R410	1-216-842-11	METAL CHIP	56K
R211	1-216-809-11	METAL CHIP	100	5%	1/16W	R411	1-216-842-11	METAL CHIP	56K
R213	1-216-864-91	SHORT	0			R412	1-216-880-11	METAL CHIP	270K
R214	1-216-864-91	SHORT	0			R413	1-216-833-11	METAL CHIP	10K
R217	1-216-864-91	SHORT	0			R414	1-216-883-11	METAL CHIP	470K
R218	1-216-864-91	SHORT	0			R415	1-216-846-11	METAL CHIP	120K
R224	1-216-801-11	METAL CHIP	22	5%	1/16W	R416	1-216-885-11	METAL CHIP	680K
R237	1-216-834-11	METAL CHIP	12K	5%	1/16W	R417	1-216-833-11	METAL CHIP	10K
R238	1-216-861-11	METAL CHIP	2.2M	5%	1/16W	R418	1-216-839-11	METAL CHIP	33K
R245	1-216-811-11	METAL CHIP	150	5%	1/16W	R419	1-216-839-11	METAL CHIP	33K
R246	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	R420	1-216-883-11	METAL CHIP	470K
R249	1-216-847-11	METAL CHIP	150K	5%	1/16W	R421	1-216-839-11	METAL CHIP	33K
R301	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	R422	1-216-839-11	METAL CHIP	33K
R302	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	R423	1-216-839-11	METAL CHIP	33K
R305	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R424	1-216-839-11	METAL CHIP	33K
R306	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R425	1-216-849-11	METAL CHIP	220K
R307	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R426	1-216-883-11	METAL CHIP	470K
R308	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R427	1-218-885-11	METAL CHIP	100K
R309	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R428	1-216-839-11	METAL CHIP	33K
R310	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R429	1-218-889-11	METAL CHIP	56K
R311	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R430	1-218-889-11	METAL CHIP	100K
R312	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R431	1-218-885-11	METAL CHIP	56K
R313	1-216-817-11	METAL CHIP	470	5%	1/16W	R432	1-216-833-11	METAL CHIP	10K
R314	1-216-817-11	METAL CHIP	470	5%	1/16W	R433	1-216-833-11	METAL CHIP	10K
R315	1-216-817-11	METAL CHIP	470	5%	1/16W	R434	1-216-815-11	METAL CHIP	330
R316	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R435	1-216-833-11	METAL CHIP	10K
R317	1-216-833-11	METAL CHIP	10K	5%	1/16W	R436	1-216-809-11	METAL CHIP	100
R318	1-216-833-11	SHORT	0			R439	1-216-864-91	SHORT	0
R319	1-216-831-11	METAL CHIP	6.8K	5%	1/16W	R507	1-216-809-11	METAL CHIP	100
R320	1-216-295-11	SHORT	0			R510	1-216-833-11	METAL CHIP	10K
R321	1-216-917-11	METAL CHIP	470	5%	1/16W	R511	1-218-831-11	METAL CHIP	220
R328	1-216-817-11	METAL CHIP	10K	5%	1/16W	R512	1-218-831-11	METAL CHIP	220
R329	1-216-295-11	SHORT	0			R513	1-218-831-11	METAL CHIP	220
R330	1-216-295-11	SHORT	0			R514	1-218-831-11	METAL CHIP	220
R334	1-218-871-11	METAL CHIP	10K	0.5%	1/16W	R515	1-218-831-11	METAL CHIP	220
R335	1-218-855-11	METAL CHIP	2.2K	0.5%	1/16W	R516	1-218-831-11	METAL CHIP	220
R336	1-216-833-11	METAL CHIP	10K	5%	1/16W	R517	1-216-833-11	METAL CHIP	10K
R337	1-216-809-11	METAL CHIP	10K	5%	1/16W	R518	1-216-822-11	METAL CHIP	1.2K
R338	1-218-873-11	METAL CHIP	22K	0.5%	1/16W	R519	1-216-295-11	SHORT	0
R341	1-218-871-11	METAL CHIP	10K	0.5%	1/16W	R521	1-216-295-11	SHORT	0
R342	1-218-883-11	METAL CHIP	33K	0.5%	1/16W	R522	1-216-827-11	METAL CHIP	3.3K
R343	1-218-831-11	METAL CHIP	220	0.5%	1/16W	R524	1-216-833-11	METAL CHIP	10K
R344	1-216-833-11	METAL CHIP	1K	0.5%	1/16W	R525	1-216-833-11	METAL CHIP	10K
R345	1-216-833-11	METAL CHIP	10K	5%	1/16W	R526	1-216-797-11	METAL CHIP	10
R349	1-216-833-11	METAL CHIP	27K	5%	1/16W	R544	1-216-797-11	METAL CHIP	10
R350	1-216-822-11	METAL CHIP	1.2K	5%	1/16W	R604	1-216-809-11	METAL CHIP	100

MB-98 MS-81 POWER BLOCK (HS13S0E)

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R701	1-216-864-91	SHORT	0	C711	1-126-947-11	ELECT	47uF 35V
R801	1-216-864-91	SHORT	0	< CONNECTOR >			
R803	1-216-864-91	SHORT	0	< CONNECTOR >			
R804	1-216-864-91	SHORT	0	< CONNECTOR >			
R805	1-216-809-11	METAL CHIP	100 5%	Δ CN101	1-580-230-11	CONNECTOR 2P	
R807	1-216-864-91	SHORT	0	* CN201	1-778-318-21	CONNECTOR 13P	
R808	1-216-864-91	SHORT	0	< DIODE >			
< VARIABLE RESISTOR >							
RV501	1-223-583-11	RES. ADJ. CARBON 1K (VIDEO LEVEL ADJ.)		Δ D101	9-885-000-79	DIODE SWBA60	
< VIBRATOR >							
X101	1-795-174-11	VIBRATOR, CERAMIC (16.5 MHz)		D102	8-719-160-78	DIODE RD24FB2	
X102	1-781-867-21	VIBRATOR, CRYSTAL (27 MHz)		D104	8-719-109-66	DIODE RD3JES-82	
MS-81 BOARD							

(Ref. No. 1,000 Series)							
< CONNECTOR >							
CN001	1-815-412-11	CONNECTOR, FCC/FPC 5P		D211	8-719-018-84	DIODE D2S6M	
< SWITCH >							
S001	1-786-133-11	SWITCH, ROTARY (CHUCK/TRAY DETECT)		D212	8-719-160-87	DIODE RD33FB2	
* POWER BLOCK (HS13S0E)							
(AEP UK, AR, AUS, E12, EA, HK, KR, ME, RUS, SP)							

(Ref. No. 3,000 Series)							
< CAPACITOR >							
Δ C101	1-115-165-11	FILM	0.1uF 250V	Δ L101	9-885-012-78	LINE FILTER	18mH
Δ C102	1-115-165-11	FILM	0.1uF 250V	Δ L102	9-885-012-78	LINE FILTER	18mH
Δ C103	1-127-942-11	CERAMIC	330PF 250V	L150	9-885-012-79	BEAD CORE	120
Δ C104	1-127-942-11	CERAMIC	330PF 250V	L211	9-885-012-80	COIL, CHOKE	39uH
Δ C107	1-127-942-11	CERAMIC	330PF 250V	L221	9-885-012-81	COIL, CHOKE	100uH
C110	9-885-012-88	ELECT	47uF 400V	L311	9-885-012-80	COIL, CHOKE	39uH
C115	1-130-483-11	FILM	0.01uF 50V	L511	9-885-012-81	COIL, CHOKE	100uH
C116	1-130-483-11	FILM	0.01uF 50V	L611	9-885-012-80	COIL, CHOKE	39uH
C117	1-130-477-11	FILM	0.0033uF 50V	< IC LINK >			
C150	9-885-012-89	CERAMIC	47PF 2KV	Δ P311	9-885-012-82	LINK, IC (1A/60V)	
C211	1-111-083-11	ELECT	150uF 35V	Δ P611	9-885-012-82	LINK, IC (1A/60V)	
C213	1-126-947-11	ELECT	47uF 35V	< PHOTO COUPLER >			
C221	1-111-082-11	ELECT	100uF 35V	< TRANSISTOR >			
C223	1-126-947-11	ELECT	47uF 35V	O101	9-885-006-12	TRANSISTOR	2SK2700
C301	1-126-960-11	ELECT	1uF 50V	O102	8-729-023-98	TRANSISTOR	2SC3377
C311	1-111-087-11	ELECT	330uF 35V	D211	9-885-005-96	TRANSISTOR	2SA1525
C313	1-126-947-11	ELECT	47uF 35V				
C314	1-126-965-11	ELECT	22uF 50V				
C413	1-126-947-11	ELECT	47uF 35V				
C414	1-130-483-11	FILM	0.01uF 50V				
C511	1-111-082-11	ELECT	100uF 35V				
C513	1-126-947-11	ELECT	47uF 35V				
C611	1-111-087-11	ELECT	330uF 35V				
C613	1-126-947-11	ELECT	47uF 35V				

POWER BLOCK (HS13S0F)

POWER BLOCK (HS13S0F)

Ref. No.	Part No.	Description	Remark
0311	9-885-006-08	TRANSISTOR	2SD1768S
0411	9-885-006-08	TRANSISTOR	2SD1768S
0611	9-885-006-08	TRANSISTOR	2SD1768S
0621	8-729-901-41	TRANSISTOR	2SC1740S
0622	8-729-029-92	TRANSISTOR	DTIC143ES
0712	8-729-029-92	TRANSISTOR	DTIC143ES
< RESISTOR >			
R101	1-219-776-11	CARBON	22M
R105	1-219-774-11	CARBON	1M
< SWITCH >			
< SW101 9-885-012-83 SWITCH (POWER)			
< TRANSFORMER >			
< T101 9-885-012-90 TRANSFORMER			

* 1-468-586-11 POWER BLOCK (HS13S0F) (BR, E32, PX)			

(Ref. No. 4,000 Series)			
< CAPACITOR >			
Δ C101	1-115-165-11	FILM	0.1uF
Δ C103	1-127-942-11	CERAMIC	330PF
Δ C104	1-127-942-11	CERAMIC	330PF
Δ C107	1-127-942-11	CERAMIC	330PF
C110	9-885-012-91	ELECT	150uF
C112	9-885-012-92	FILM	0.047uF
C113	9-885-012-89	CERAMIC	630V
C115	1-130-489-11	FILM	47PF
C116	1-130-483-11	FILM	0.01uF
C117	1-130-477-11	FILM	0.0033uF
C131	1-126-966-11	ELECT	33uF
C132	1-126-960-11	ELECT	1uF
C135	9-885-012-93	CERAMIC	3300PF
C137	9-885-012-94	FILM	0.1uF
C211	1-111-083-11	ELECT	150uF
C213	1-126-947-11	ELECT	47uF
C221	1-111-082-11	ELECT	100uF
C223	1-126-947-11	ELECT	47uF
C311	9-885-012-95	ELECT	150uF
C313	1-126-947-11	ELECT	47uF
C314	1-126-965-11	ELECT	22uF
C401	9-885-012-95	ELECT	150uF
C402	1-126-959-11	ELECT	0.47uF
C413	1-126-947-11	ELECT	47uF
C511	1-111-082-11	ELECT	100uF
C512	1-111-082-11	ELECT	100uF
C611	9-885-012-95	ELECT	150uF
C613	1-126-947-11	ELECT	47uF
C701	1-126-963-11	ELECT	4.7uF
C703	1-126-960-11	ELECT	1uF
C711	1-126-947-11	ELECT	47uF
< CONNECTOR >			
Δ CN101	1-580-230-11	CONNECTOR 2P	

Ref. No.	Part No.	Description	Remark
* CN201	1-778-318-21	CONNECTOR 13P	
< DIODE >			
Δ D101	9-885-000-79	DIODE 51WB60	
D102	8-719-160-78	DIODE RD24FB2	
D104	8-719-981-98	DIODE MT2L-3.0B	
D105	9-903-904-01	DIODE 1SS270A	
D131	9-903-904-01	DIODE 1SS270A	
D132	8-719-922-11	DIODE MT2L-22B	
D135	8-719-030-24	DIODE EG01C	
D211	8-719-018-34	DIODE D2S6M	
D212	8-719-160-87	DIODE RD33FB2	
D221	8-719-032-12	DIODE D1NS6	
D311	8-719-510-02	DIODE D1NS4	
D411	8-719-510-02	DIODE D1NS4	
D511	8-719-063-69	DIODE D2L20U	
D611	8-719-510-02	DIODE D1NS4	
D615	8-719-064-11	DIODE SPR-325MWV (ON/STANDBY)	
< FUSE >			
Δ F101	1-532-503-31	FUSE (1.6A/250V)	
< FUSE CLIP >			
FC1	9-885-012-77	FUSE CLIP	
FC2	9-885-012-77	FUSE CLIP	
< EARTH TERMINAL >			
FG101	1-537-738-21	TERMINAL, EARTH	
FG201	1-537-738-21	TERMINAL, EARTH	
< IC >			
IC131	9-885-005-97	IC MIPQ254SPSCF	
IC401	8-759-667-11	IC HA17L431P	
IC701	8-759-420-19	IC AN1431T	
< COIL >			
Δ L101	9-885-012-78	LINE FILTER	18mH
Δ L102	9-885-012-78	LINE FILTER	18mH
L150	9-885-012-96	BEAD CORE	45
L211	9-885-012-80	COIL, CHOKE	39uH
L221	9-885-012-81	COIL, CHOKE	100uH
L311	9-885-012-81	COIL, CHOKE	100uH
L411	9-885-012-80	COIL, CHOKE	39uH
L511	9-885-012-81	COIL, CHOKE	100uH
L611	9-885-012-81	COIL, CHOKE	100uH
< IC LINK >			
Δ P311	9-885-012-82	LINK, IC (1A/60V)	
Δ P611	9-885-012-82	LINK, IC (1A/60V)	
< PHOTO COUPLER >			
Δ PC101	8-749-011-50	PHOTO COUPLER PS2561	
Δ PC108	8-749-011-50	PHOTO COUPLER PS2561	
Δ PC131	8-749-011-50	PHOTO COUPLER PS2561	
< TRANSISTOR >			
D101	9-885-006-10	TRANSISTOR	2SK2750

The components identified by mark Δ, or dotted line with mark Δ, are critical for safety. Replace only with part number specified.

Les composants identifiés par marque Δ, ou traitillés par marque Δ, sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

POWER BLOCK (HS13S0F)

POWER BLOCK (HS13S0U)

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
0102	8-729-023-98	TRANSISTOR	2SC3377	D211	8-719-018-83	DIODE D2S4M	
0103	9-885-006-10	TRANSISTOR	2SK2750	D212	8-719-180-87	DIODE RD33FB2	
0131	9-885-006-08	TRANSISTOR	2SD1768S	D221	8-719-510-02	DIODE D1NS4	
0311	9-885-006-08	TRANSISTOR	2SD1768S	D311	8-719-510-02	DIODE D1NS4	
0621	8-729-901-41	TRANSISTOR	2SC1740S	D413	9-998-285-01	DIODE D1N60	
0622	8-729-029-92	TRANSISTOR	DTIC143ES	D511	8-719-510-02	DIODE D1NS4	
0712	8-729-029-92	TRANSISTOR	DTIC143ES	D611	8-719-510-02	DIODE D1NS4	
< RESISTOR >				D621	8-719-004-11	DIODE SFR-325MMW (ON/STANDBY)	
R101	1-219-776-11	CARBON	2.2M	< FUSE >			
R104	9-885-012-97	CARBON	680K	Δ F101	1-533-296-11	FUSE (24/125V)	
< SWITCH >				< FUSE CLIP >			
Δ SW101	9-885-012-83	SWITCH (POWER)		FO1	9-885-012-77	FUSE CLIP	
< TRANSFORMER >				FO2	9-885-012-77	FUSE CLIP	
Δ T101	9-885-012-98	TRANSFORMER		< EARTH TERMINAL >			
Δ T131	9-885-012-99	TRANSFORMER		FO101	1-537-738-21	TERMINAL, EARTH	
				FO201	1-537-738-21	TERMINAL, EARTH	
				< IC >			
				IC301	8-759-420-19	IC AN1431T	
				IC411	8-759-420-19	IC AN1431T	
				< COIL >			
				Δ L101	9-885-012-78	LINE FILTER	18mH
Δ C101	1-115-165-11	FILM	0.1uF	L150	9-885-012-79	BEAD CORE	120
Δ C107	1-113-937-11	CERAMIC	2200PF	L211	9-885-012-80	COIL, CHOKE	39uH
C110	9-885-012-85	ELECT	120uF	L221	9-885-012-81	COIL, CHOKE	100uH
C115	1-130-489-11	FILM	0.033uF	L311	9-885-012-80	COIL, CHOKE	39uH
C116	1-130-483-11	FILM	0.07uF	< IC >			
				LS11	9-885-012-81	COIL, CHOKE	100uH
C117	1-130-477-11	FILM	0.0033uF	L611	9-885-012-80	COIL, CHOKE	39uH
C150	9-885-012-86	CERAMIC	470PF	< IC LINK >			
C211	1-111-083-11	ELECT	150uF	Δ P311	9-885-012-82	LINK, IC (1A60V)	
C213	1-126-947-11	ELECT	47uF	Δ P611	9-885-012-82	LINK, IC (1A60V)	
C221	1-111-082-11	ELECT	100uF	< PHOTO COUPLER >			
C223	1-126-947-11	ELECT	47uF	Δ PC101	9-995-566-01	PHOTO COUPLER PS2501	
C301	1-126-961-11	ELECT	2.2uF	< TRANSISTOR >			
C311	1-111-087-11	ELECT	330uF	0101	9-885-006-10	TRANSISTOR	2SK2750
C313	1-126-947-11	ELECT	47uF	0102	8-729-023-98	TRANSISTOR	2SC3377
C314	1-126-965-11	ELECT	22uF	0211	9-885-005-96	TRANSISTOR	2S3J25
C413	1-126-947-11	ELECT	47uF	0311	9-885-006-08	TRANSISTOR	2SD1768S
C414	1-130-483-11	FILM	0.07uF	0411	9-885-006-08	TRANSISTOR	2SD1768S
C511	1-111-082-11	ELECT	100uF	0621	8-729-901-41	TRANSISTOR	2SC1740S
C513	1-126-947-11	ELECT	47uF	0622	8-729-029-92	TRANSISTOR	DTIC143ES
C611	1-111-087-11	ELECT	330uF	0712	8-729-029-92	TRANSISTOR	DTIC143ES
C613	1-126-947-11	ELECT	47uF	< SWITCH >			
C711	1-126-947-11	ELECT	47uF	Δ SW101	9-885-012-83	SWITCH (POWER)	
< DIODE >				D104	8-719-062-66	DIODE HZS2C3-1E	
Δ D101	9-885-000-79	DIODE SIWB60		D105	9-903-904-01	DIODE TSS270A	

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

POWER BLOCK (HS13S0U)

POWER BLOCK (TOP-244)

Ref. No.	Part No.	Description	Remark
< TRANSFORMER >			
Δ T101	9-885-012-87	TRANSFORMER	
* 1-468-584-11 POWER BLOCK (TOP-244U) (US, CND, MX)			

(Ref.No. 6,000 Series)			

< CAPACITOR >			
Δ C900	1-115-165-11	FILM	0.1uF
Δ C901	1-113-920-51	CERAMIC	2200PF
Δ C902	1-113-906-51	CERAMIC	330PF
Δ C903	1-113-906-51	CERAMIC	330PF
C910	1-107-401-11	ELECT	150uF
Δ C911	9-885-013-00	FILM	0.01uF
C912	9-885-013-01	FILM	0.1uF
C913	9-885-013-02	ELECT	47uF
C914	9-885-013-03	ELECT	10uF
Δ C916	9-885-013-00	FILM	0.01uF
C917	9-885-013-04	CERAMIC	4700PF
C920	9-885-013-01	FILM	0.1uF
C921	9-885-013-05	ELECT	470uF
C922	9-885-013-04	CERAMIC	4700PF
C924	9-885-013-05	ELECT	470uF
C925	9-885-013-06	ELECT	100uF
C926	9-885-013-01	FILM	0.1uF
C927	9-885-013-07	ELECT	1000uF
C929	9-885-013-06	ELECT	100uF
C930	9-885-013-03	ELECT	10uF
C931	9-885-013-06	ELECT	100uF
C934	9-885-013-03	ELECT	10uF
C936	9-885-013-02	ELECT	47uF
C940	9-885-013-05	ELECT	470uF
C941	9-885-013-05	ELECT	470uF
C943	9-885-013-01	FILM	0.1uF
C944	9-885-013-01	FILM	0.1uF
C945	9-885-013-01	FILM	0.1uF
C947	9-885-013-01	FILM	0.1uF

< CONNECTOR >			
Δ CN900	1-580-230-11	CONNECTOR 2P	
* CN920	1-778-318-21	CONNECTOR 13P	
< DIODE >			
Δ D901	9-885-013-08	DIODE 1M4007	
Δ D902	9-885-013-08	DIODE 1M4007	
Δ D903	9-885-013-08	DIODE 1M4007	
Δ D904	9-885-013-08	DIODE 1M4007	
D910	9-885-013-09	DIODE UF4007	
D911	9-885-013-10	DIODE 1M4001	
D913	9-885-013-11	DIODE P6KE200A	
D920	9-885-013-12	DIODE UF202G	
D921	9-885-013-13	DIODE UF4003	
D922	9-885-013-14	DIODE UFS4026	
D923	9-885-013-13	DIODE UF4003	
D925	8-719-883-18	DIODE MTJL-4-3A	
D926	9-885-013-10	DIODE 1M4001	

Ref. No.	Part No.	Description	Remark
D927	9-885-013-10	DIODE 1M4001	
D928	9-885-013-10	DIODE 1M4001	
D929	8-719-064-11	DIODE SPR-325MWV (ON/STANDBY)	
D930	9-885-013-10	DIODE 1M4001	
D931	9-885-013-10	DIODE 1M4001	
D932	9-885-013-10	DIODE 1M4001	
D933	9-885-013-10	DIODE 1M4001	

< EARTH TERMINAL >			
ET901	1-537-738-21	TERMINAL, EARTH	
ET902	1-537-738-21	TERMINAL, EARTH	
< FUSE >			
Δ F900	1-533-296-11	FUSE (2A/125V)	
< FUSE HOLDER >			
FH900	1-533-389-31	HOLDER, FUSE	
FH901	1-533-389-31	HOLDER, FUSE	
< IC >			
Δ IC910	9-885-013-15	IC TOP-244Y	
IC920	9-885-013-16	IC TL431A	
< COIL >			
L921	9-885-013-17	COIL, CHOKE	11.3uH
L922	9-885-013-17	COIL, CHOKE	11.3uH
L923	9-885-013-17	COIL, CHOKE	11.3uH
L924	9-885-013-17	COIL, CHOKE	11.3uH
< LINE FILTER >			
Δ LF900	1-416-929-11	COIL, CHOKE	2.3mH
< PHOTO COUPLER >			
Δ PC910	8-749-010-65	PHOTO COUPLER PC123FY2	
Δ PC911	8-749-010-65	PHOTO COUPLER PC123FY2	
<IC LINK >			
Δ PS922	1-533-590-31	LINK, IC (1A)	
Δ PS923	1-533-591-31	LINK, IC (1.25A)	

< TRANSISTOR >			
Q922	8-929-029-67	TRANSISTOR	DT1C114ESA-TP
Q923	8-729-113-33	TRANSISTOR	2SB733-4
Q924	8-729-012-32	TRANSISTOR	2SC4040-TL2-R
Q925	8-729-012-32	TRANSISTOR	2SC4040-TL2-R
Q927	8-729-012-32	TRANSISTOR	2SC4040-TL2-R
Q928	8-729-018-57	TRANSISTOR	DTA114GSTP
Q929	8-729-925-12	TRANSISTOR	2SC1740SLN-TP-RS
Q930	8-929-029-67	TRANSISTOR	DT1C114ESA-TP
< RESISTOR >			
R900	1-260-364-91	CARBON	1M
R911	1-247-779-91	CARBON	6.8
R917	1-247-863-91	CARBON	22K
R921	1-247-831-91	CARBON	1K
R922	1-247-807-91	CARBON	100

The components identified by mark Δ, or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par marque Δ, ou trait pointillé avec marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

POWER BLOCK (TOP-244U)

Ref. No.	Part No.	Description	Remark
R925	1-247-799-91	CARBON	47
R926	1-247-831-91	CARBON	1K
R927	1-247-859-91	CARBON	15K
R928	1-247-851-91	CARBON	6.8K
R930	1-247-865-91	CARBON	10K
R931	1-216-430-51	CARBON	390
R932	1-247-879-91	CARBON	100K
R933	1-247-851-91	CARBON	6.8K
R934	1-247-871-91	CARBON	150
R935	1-247-795-91	CARBON	33
R936	1-247-851-91	CARBON	6.8K
R938	1-247-871-91	CARBON	150
R940	1-247-815-91	CARBON	220
R947	1-247-815-91	CARBON	220
R948	1-247-831-91	CARBON	1K
R949	1-247-863-91	CARBON	22K
< SWITCH >			
< TRANSFORMER >			
Δ SW911	9-885-012-83	SWITCH (POWER)	
< TRANSFORMER >			
Δ T910	9-885-013-18	TRANSFORMER	
MISCELLANEOUS			

9	1-786-131-11	SWITCH, TACTILE	
11	1-476-602-11	REMOTE COMMANDER (RMF-D126A) (US, CND, E32, MX, AR, BR, PX)	
11	1-476-603-11	REMOTE COMMANDER (RMF-D126P) (AEP, UK, RUS)	
11	1-476-603-31	REMOTE COMMANDER (RMF-D126E) (E12, EA, ME, HK, KR, SP, TW, AUS)	
Δ 56	1-757-140-11	CORD, POWER (AEP, UK, RUS, E12, E32, EA, ME, BR, HK, SP, PX)	
Δ 56	1-757-571-11	CORD, POWER (US, CND, MX)	
Δ 56	1-757-901-11	CORD, POWER (AR)	
Δ 56	1-769-744-91	CORD, POWER (AEP, UK, RUS, E12, E32, EA, ME, BR, HK, SP, PX)	
Δ 56	1-782-752-31	CORD, POWER (KR)	
Δ 56	1-783-531-31	CORD, POWER (US, CND, MX)	
Δ 56	1-790-390-41	CORD, POWER (TW)	
Δ 56	1-790-588-11	CORD, POWER (AUS)	
62	1-757-695-11	CABLE, FLEXIBLE FLAT (FMA-023)	
63	1-757-693-11	CABLE, FLEXIBLE FLAT (FMD-001)	
64	1-757-694-11	CABLE, FLEXIBLE FLAT (FMD-002)	
65	1-757-697-11	CABLE, FLEXIBLE FLAT (FMM-035)	
72	1-757-699-11	CABLE, FLEXIBLE FLAT (FME-005) (AEP, UK, RUS)	
Δ 104	A-4900-650-A	OPTICAL PICK-UP KHM-250 AAAJ11NP	
M001	1-541-632-11	MOTOR, DC (LOADING)	

Ref. No.	Part No.	Description	Remark
ACCESSORIES & PACKING MATERIALS			

Δ	1-569-008-21	ADAPTOR, CONVERSION 2P (E32, EA, AR, BR, PX)	
Δ	1-751-271-12	CORD, CONNECTION (STEREO AV CABLE 15m) (US, CND, AEP, UK, RUS, E12, E32, EA, MX, ME, AR, BR, HK, KR, SP, TW, AUS, PX)	
Δ	1-770-019-11	ADAPTOR, CONVERSION PLUG 3P (UK, HK)	
Δ	3-067-116-11	MANUAL, INSTRUCTION (ENGLISH) (US (DPX1400BM), US (DPX1400HM), CND, PX)	
Δ	3-067-116-21	MANUAL, INSTRUCTION (FRENCH) (CND)	
Δ	3-067-116-31	MANUAL, INSTRUCTION (SPANISH) (E32, MX (DPX1400HM), AR, BR)	
Δ	3-067-116-41	MANUAL, INSTRUCTION (ENGLISH) (E12, EA, ME, HK, KR, SP, TW, AUS)	
Δ	3-067-116-51	MANUAL, INSTRUCTION (SIMPLIFIED CHINESE) (SP)	
Δ	3-067-116-61	MANUAL, INSTRUCTION (TRADITIONAL CHINESE (HK, TW)	
Δ	3-067-116-71	MANUAL, INSTRUCTION (KOREAN) (KR)	
Δ	3-067-116-81	MANUAL, INSTRUCTION (FRENCH) (E12)	
Δ	3-067-116-91	MANUAL, INSTRUCTION (ARABIC) (EA, ME)	
Δ	3-067-117-11	MANUAL, INSTRUCTION (ENGLISH) (UK, RUS)	
Δ	3-067-117-21	MANUAL, INSTRUCTION (FRENCH) (AEP (DPX1401BM), AEP (DPX1401HM))	
Δ	3-067-117-31	MANUAL, INSTRUCTION (GERMAN) (AEP (DPX1401BM), AEP (DPX1401HM))	
Δ	3-067-117-41	MANUAL, INSTRUCTION (ITALIAN) (AEP)	
Δ	3-067-117-51	MANUAL, INSTRUCTION (DUTCH) (AEP (DPX1401BM), AEP (DPX1401HM))	
Δ	3-067-117-61	MANUAL, INSTRUCTION (RUSSIAN) (RUS)	
Δ	3-067-118-11	MANUAL, INSTRUCTION (SPANISH) (AEP (DPX1402BM), AEP (DPX1402HM))	
Δ	3-067-118-21	MANUAL, INSTRUCTION (PORTUGUESE) (AEP (DPX1402BM), AEP (DPX1402HM))	
Δ	3-067-118-31	MANUAL, INSTRUCTION (DANISH) (AEP (DPX1402BM), AEP (DPX1402HM))	
Δ	3-067-118-41	MANUAL, INSTRUCTION (FINNISH) (AEP (DPX1402BM), AEP (DPX1402HM))	
Δ	3-067-118-51	MANUAL, INSTRUCTION (SWEDISH) (AEP (DPX1402BM), AEP (DPX1402HM))	
Δ	3-067-119-11	MANUAL, INSTRUCTION (ENGLISH) (US (DPX1400BX))	
Δ	3-067-119-21	MANUAL, INSTRUCTION (SPANISH) (MX (DPX1400HX))	

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par marque Δ ou traitillés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.