


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1. EXPLODED VIEWS

5-1-1. OVERALL SECTION-1

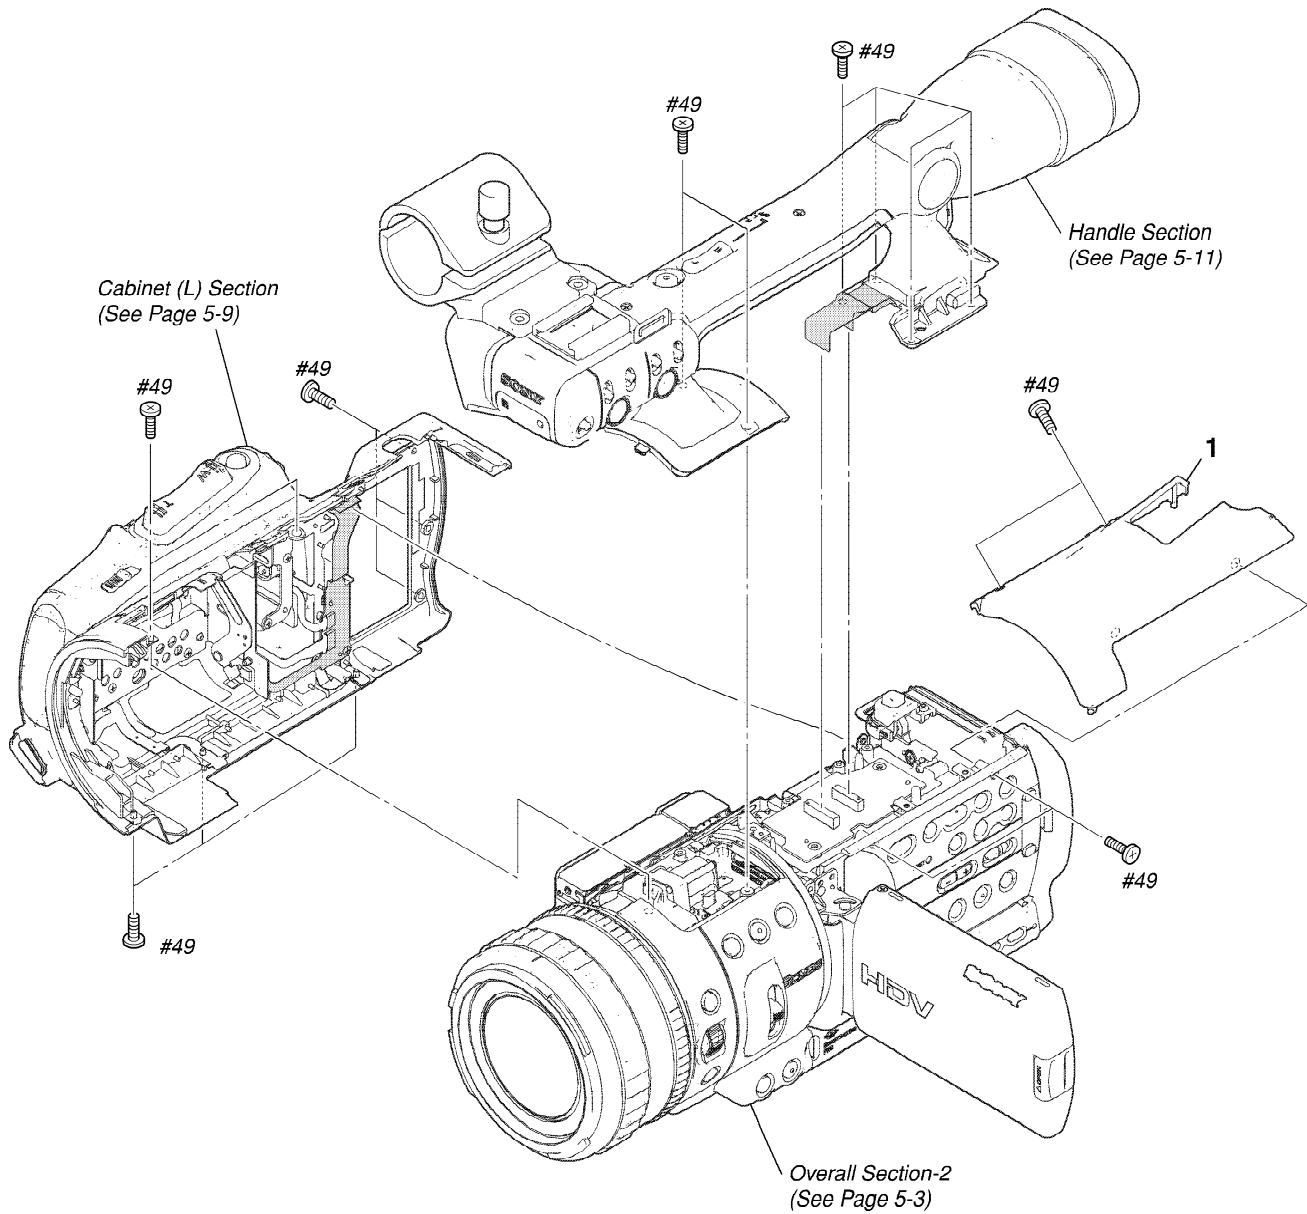

Ref. No.	Part No.	Description
1	2-891-978-11	CABINET, TOP


Ref. No.	Part No.	Description
#49	2-630-005-31	SCREW (M2), NEW TRUSTER, P2 (Black)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-2. OVERALL SECTION-2

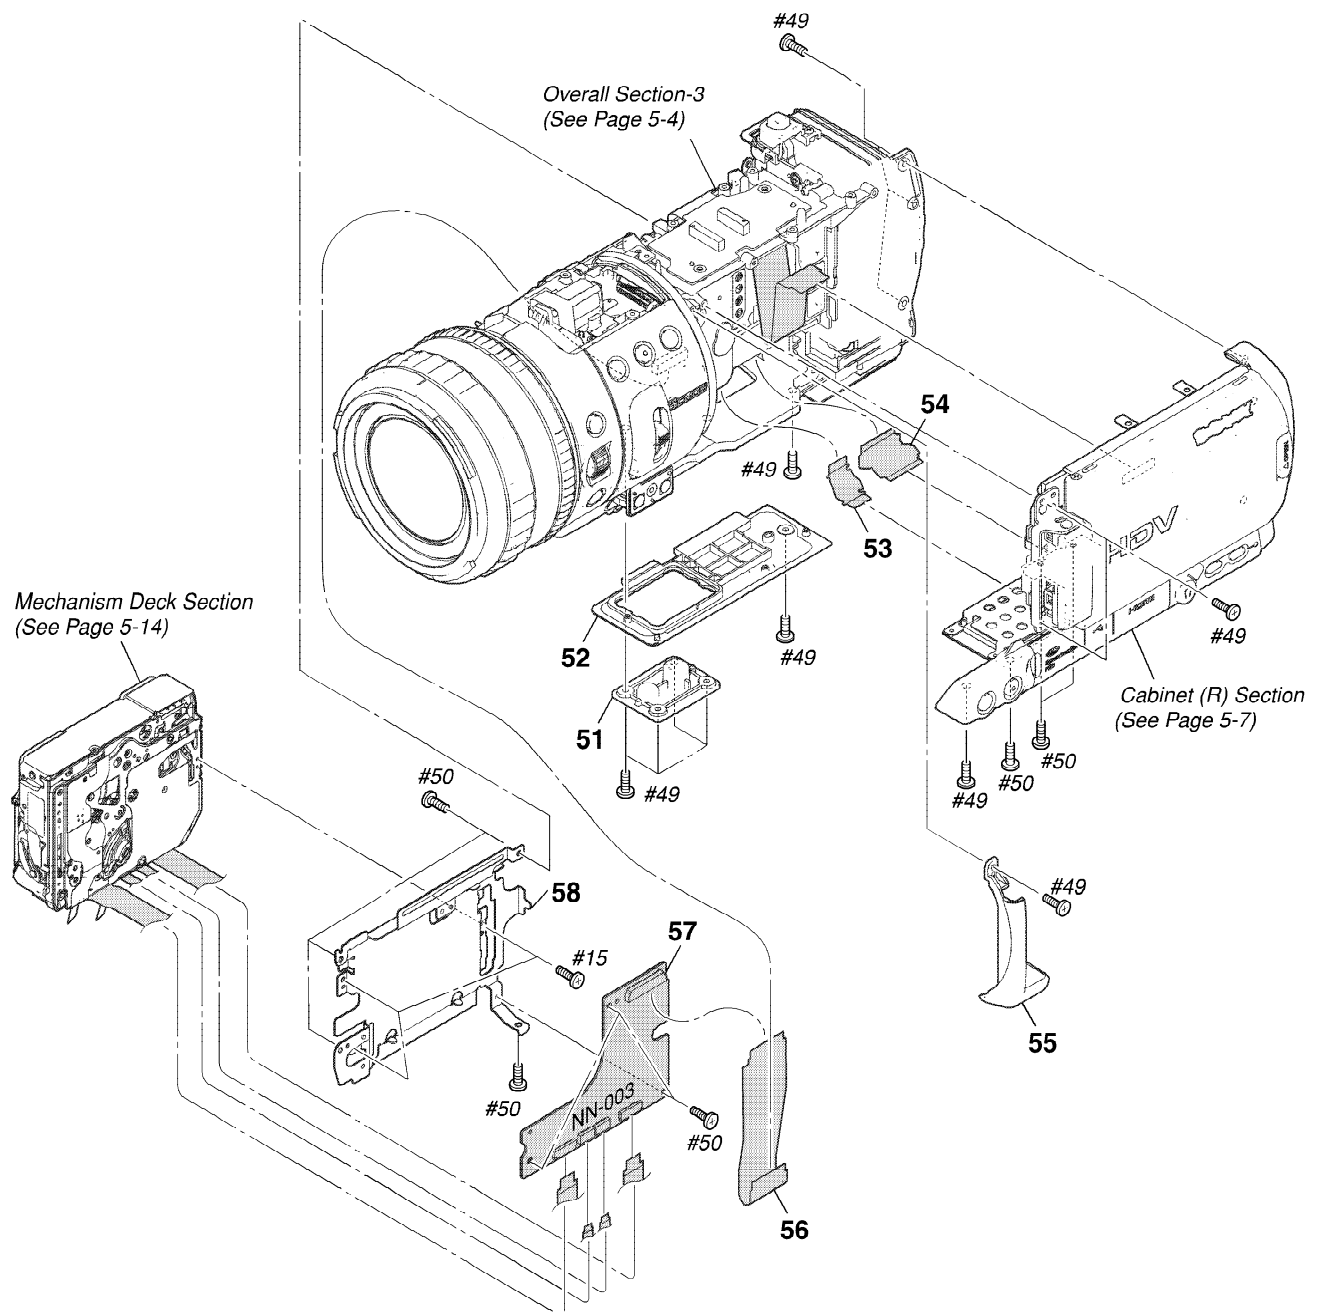

Ref. No.	Part No.	Description
51	2-178-793-01	BRACKET (TRIPOD)
52	2-891-980-01	PLATE, BOTTOM
53	1-870-118-11	FP-496 FLEXIBLE BOARD
54	1-870-115-11	FP-493 FLEXIBLE BOARD
55	2-892-031-11	COVER (F), HINGE
56	1-870-113-11	FP-491 FLEXIBLE BOARD

Ref. No.	Part No.	Description
57	A-1217-221-A	NN-003 BOARD, COMPLETE
* 58	X-2149-998-1	FRAME ASSY, MD
#15	3-062-214-01	SCREW (M1.4X1.5) (Silver)
#49	2-630-005-31	SCREW (M2), NEW TRUSTER, P2 (Black)
#50	2-891-494-11	SCREW (M2), NEW TRUSTER, P2 (Red)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-3. OVERALL SECTION-3

ns: not supplied

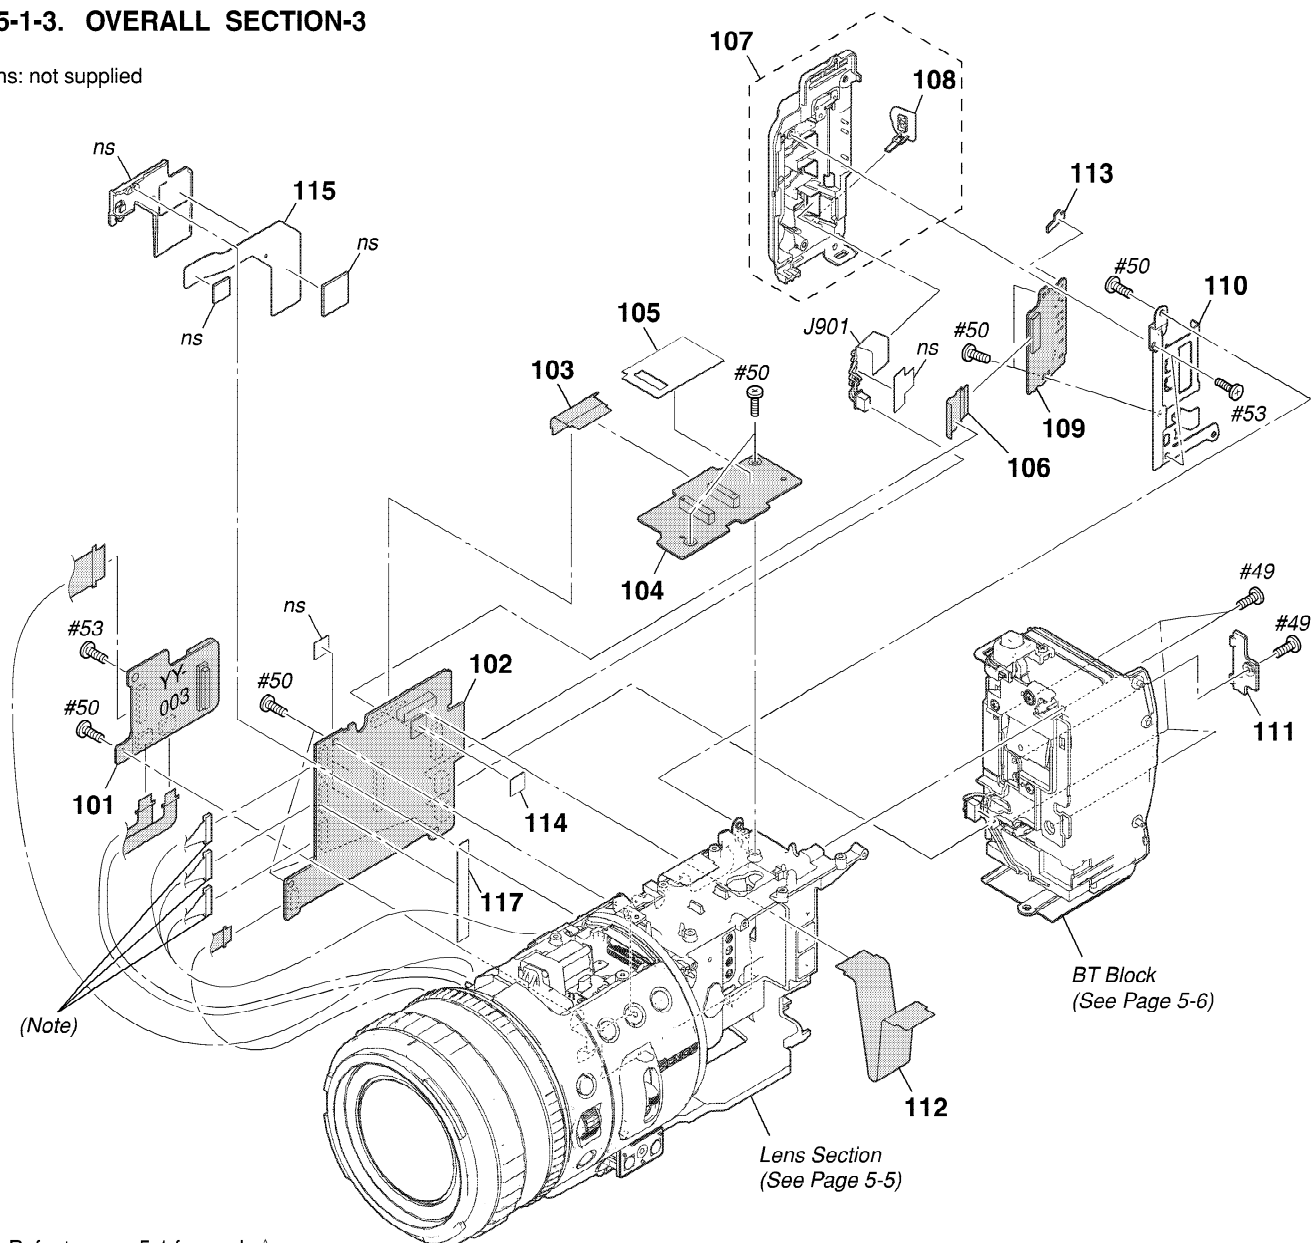

• Refer to page 5-1 for mark △.

Note: ハーネス (coaxial cable) を抜く時は2-1ページの "Note for disconnecting the harness (coaxial cable)" を参照してください。

Note: Refer to page 2-1 "Note for disconnecting the harness (coaxial cable)" when changing the harness (coaxial cable).


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
101	A-1217-225-A	YY-003 BOARD, COMPLETE	* 110	2-891-977-01	HOLDER, JACK PC BOARD (L)
102	A-1217-722-A	TT-003 BOARD, COMPLETE (SERVICE) (NTSC: V1J/V1U/V1N)	111	2-891-982-01	LID, CPC
102	A-1217-723-A	TT-003 BOARD, COMPLETE (SERVICE) (PAL: V1E/V1P/V1C)	112	1-870-116-11	FP-494 FLEXIBLE BOARD
103	1-870-114-11	FP-492 FLEXIBLE BOARD	* 113	2-891-983-01	CUSHION, LIGHT INTERCEPTION
104	A-1217-223-A	OO-003 BOARD, COMPLETE	* 114	2-891-990-01	SPACER (DZ)
* 105	2-896-054-01	SHEET (TP)	* 115	2-891-985-01	SHEET (GF)
106	1-870-117-11	FP-495 FLEXIBLE BOARD	* 117	2-899-567-01	SHEET (TT)
107	X-2149-995-1	CABINET (L) ASSY (D), JACK	△ J901	1-815-005-11	CONNECTOR, DC-IN
108	2-891-959-01	DC, JACK LID	#49	2-630-005-31	SCREW (M2), NEW TRUSTER, P2 (Black)
109	A-1217-208-A	II-003 BOARD, COMPLETE	#50	2-891-494-11	SCREW (M2), NEW TRUSTER, P2 (Red)
			#53	3-080-206-21	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-4. LENS SECTION

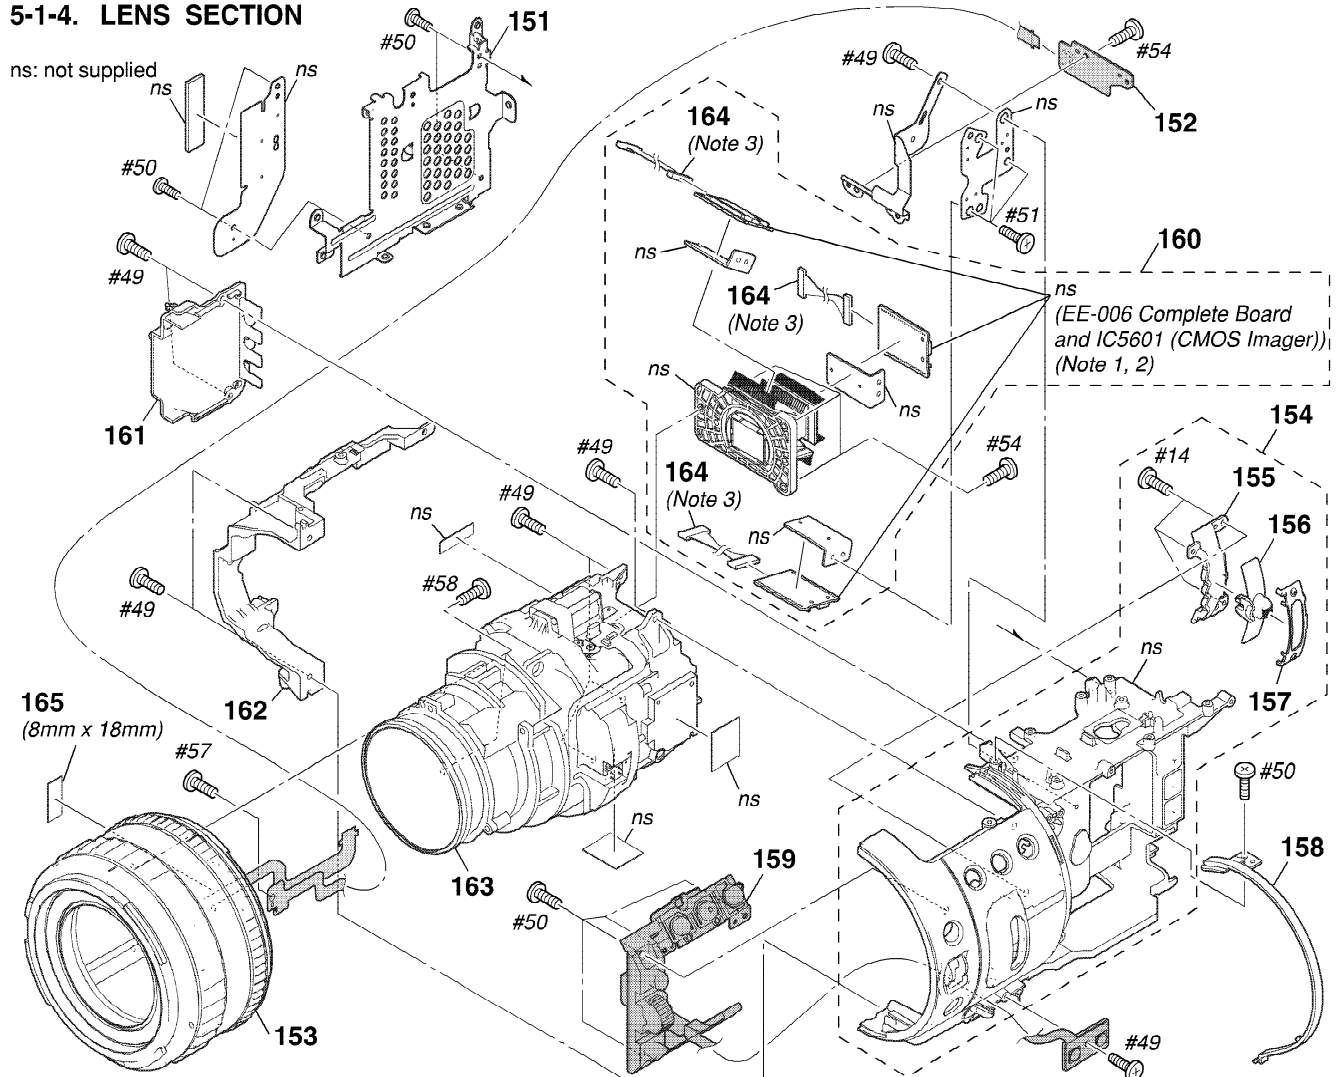

CAUTION:
165番は、T0.25ヒメロン(3-076-631-01)を切って使用。

CAUTION:
For the part of 165, cut WOVEN (T0.25), FABRIC NON (3-076-631-01) into the desired length and use it.

Note 1: マウント済EE-006基板とIC5601は交換対象ではありませんが、プリズム組立に含まれます。

Note 1: EE-006 complete board and IC5601 are not supplied, but they are included in prism assy.

Note 2: イメージャの交換時は4 - 4 ページの“イメージャ交換時の注意”を必ずお読みください。

Note 2: Be sure to read “Precautions for Replacement of Imager” on page 4-3 when changing the imager.

Note 3: ハーネス (coaxial cable) を抜く時は2-1ページの“Note for disconnecting the harness (coaxial cable)”を参照してください。

Note 3: Refer to page 2-1 “Note for disconnecting the harness (coaxial cable)” when changing the harness (coaxial cable).

Ref. No.	Part No.	Description
* 151	X-2159-300-1	BRACKET (VC) ASSY
152	A-1227-577-A	JJ-004 BOARD, COMPLETE (SERVICE)
153	2-898-191-01	RING UNIT (B187B (SERVICE))
154	X-2149-993-1	CHASSIS ASSY (D), CENTER
* 155	2-891-955-01	RETAINER, ND KNOB
* 156	2-891-954-01	KNOB, ND
* 157	2-891-956-01	PLATE, ND CLICK
158	2-891-975-01	RING, ORNAMENTAL
159	1-479-812-11	SWITCH BLOCK, CONTROL (CK18500)
160	A-1223-596-A	PRISM ASSY (SERVICE) (Note 1, 2)
* 161	2-891-979-01	PLATE (CMOS), INTERCEPTION


Ref. No.	Part No.	Description
* 162	X-2149-999-1	BRACKET (CL) ASSY
163	A-1227-243-A	UNIT ASSY (B187B (SERVICE))
164	1-963-577-41	HARNESS (COAXIAL CABLE) (Note 3)
165	CAUTION	WOVEN (T0.25), FABRIC NON
#14	2-599-475-11	SCREW (M1.7) (Silver)
#49	2-630-005-31	SCREW (M2), NEW TRUSTER, P2 (Black)
#50	2-891-494-11	SCREW (M2), NEW TRUSTER, P2 (Red)
#51	3-073-686-01	SCREW (M2X2.5) (Silver)
#54	3-318-203-11	SCREW, TAPPING, P2 (Black)
#57	7-627-852-18	SCREW, PRECISION +P 1.7X4 TYPE3 (Black)
#58	3-719-408-11	SCREW (B2), TAPPING, P3 (Silver)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-5. BT BLOCK

ns: not supplied

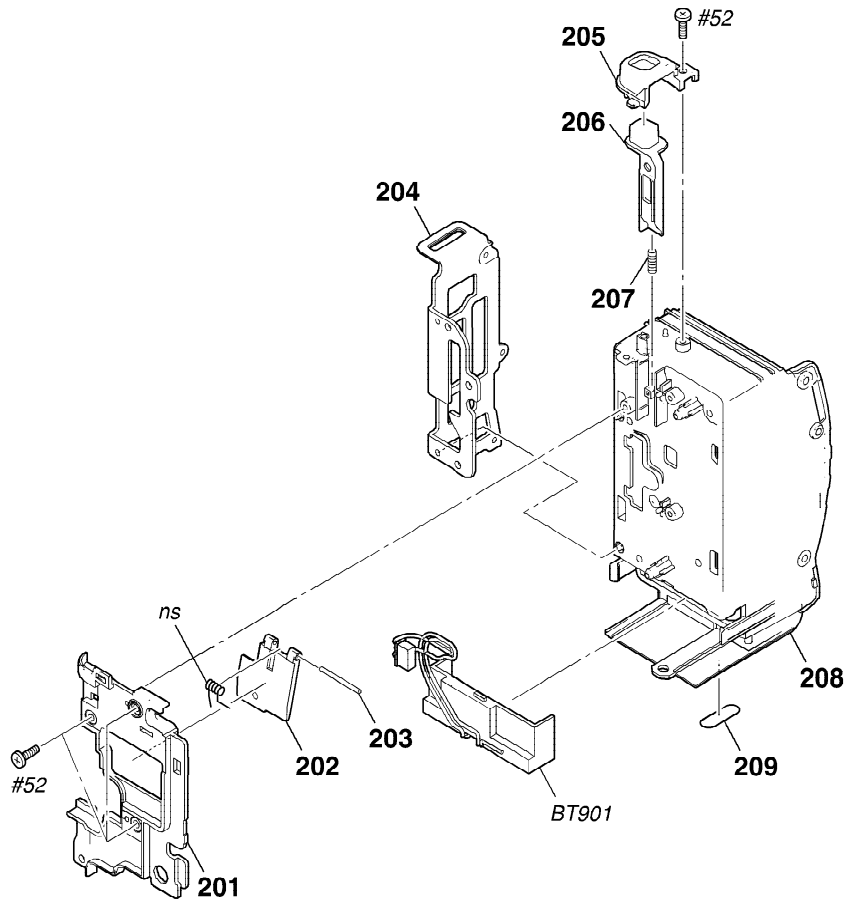

• Refer to page 5-1 for mark Δ .

Ref. No.	Part No.	Description
201	2-891-969-01	COVER, BT LOCK
202	3-060-595-01	CLAW, BT LOCK
203	3-968-770-01	SHAFT, BT
204	2-891-968-01	SHEET METAL (L), STRAP
205	2-891-970-11	COVER, BT RELEASE
206	2-891-967-01	RELEASE (SW)

Ref. No.	Part No.	Description
207	3-968-771-01	SPRING, COMPRESSION
208	2-891-966-01	PANEL, BATTERY
209	2-178-805-01	FOOT, RUBBER
Δ BT901	1-694-411-31	TERMINAL BOARD, BATTERY
#52	3-080-206-11	SCREW, TAPPING, P2 (Black)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-6. CABINET (R) SECTION

ns: not supplied

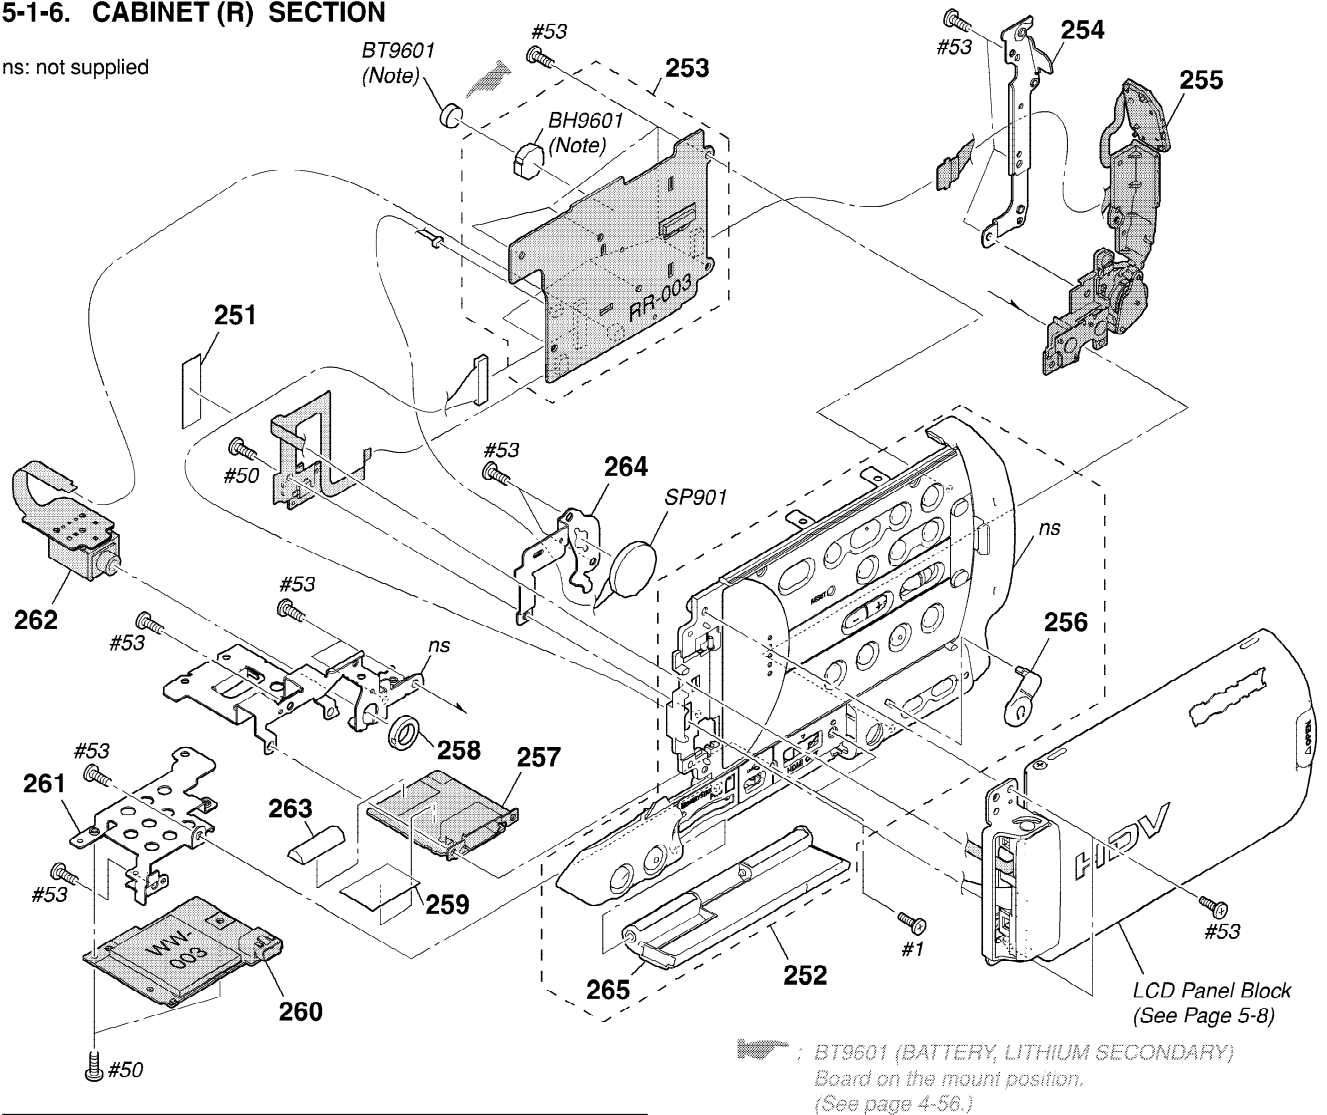

Note: Replace the battery holder (BH9601) together when replacing the lithium battery (BT9601) on the RR-003 board. (The battery holder removed once cannot be used again.)
When mounting these parts, mount new battery holder first and attach new lithium battery next.

Note: RR-003基板のリチウム電池(BT9601)を交換する場合はバッテリーホルダ(BH9601)も同時に新品に交換して下さい。(一度使用したバッテリーホルダは再使用できません。)
部品取り付けの際は、先にバッテリーホルダを取り付けてからリチウム電池を装着して下さい。

BT9601 (BATTERY, LITHIUM SECONDARY)
Board on the mount position.
(See page 4-56.)

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

注意

電池の交換は、正しく行わないと破裂する恐れがあります。電池を交換する場合には必ず同じ型名の電池又は同等品と交換してください。

• Refer to page 5-1 for mark △.


Ref. No.	Part No.	Description
251	3-941-343-01	TAPE (A)
252	X-2159-308-1	CABINET (R) ASSY (D)
253	A-1217-212-A	RR-003 BOARD, COMPLETE
* 254	2-892-033-01	PLATE, CF RETAINER
255	1-479-813-11	SWITCH BLOCK, CONTROL (CF18500)
256	2-892-026-01	LID, HEADPHONE
257	A-1217-219-A	HH-003 BOARD, COMPLETE
258	3-061-234-01	NUT (M6X0.5)
* 259	2-899-674-01	SHEET (HH), INSULATING
260	A-1217-214-A	WW-003 BOARD, COMPLETE
* 261	2-892-030-01	FRAME, JACK FIXED

Ref. No.	Part No.	Description
262	A-1217-231-A	FP-486 FLEXIBLE BOARD, COMPLETE
* 263	2-892-034-01	SHEET (HH)
* 264	X-2159-309-1	RETAINER ASSY, SP
265	X-2176-355-1	LID (R) ASSY, JACK
△ BH9601	1-756-615-41	HOLDER, BATTERY (Note)
△ BT9601	1-756-134-12	BATTERY, STORAGE, LITHIUM (Note)
SP901	1-825-260-23	LOUD SPEAKER (1.6CM)
#1	2-635-562-11	SCREW (M1.7) (Black)
#50	2-891-494-11	SCREW (M2), NEW TRUSTER, P2 (Red)
#53	3-080-206-21	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-7. LCD PANEL BLOCK

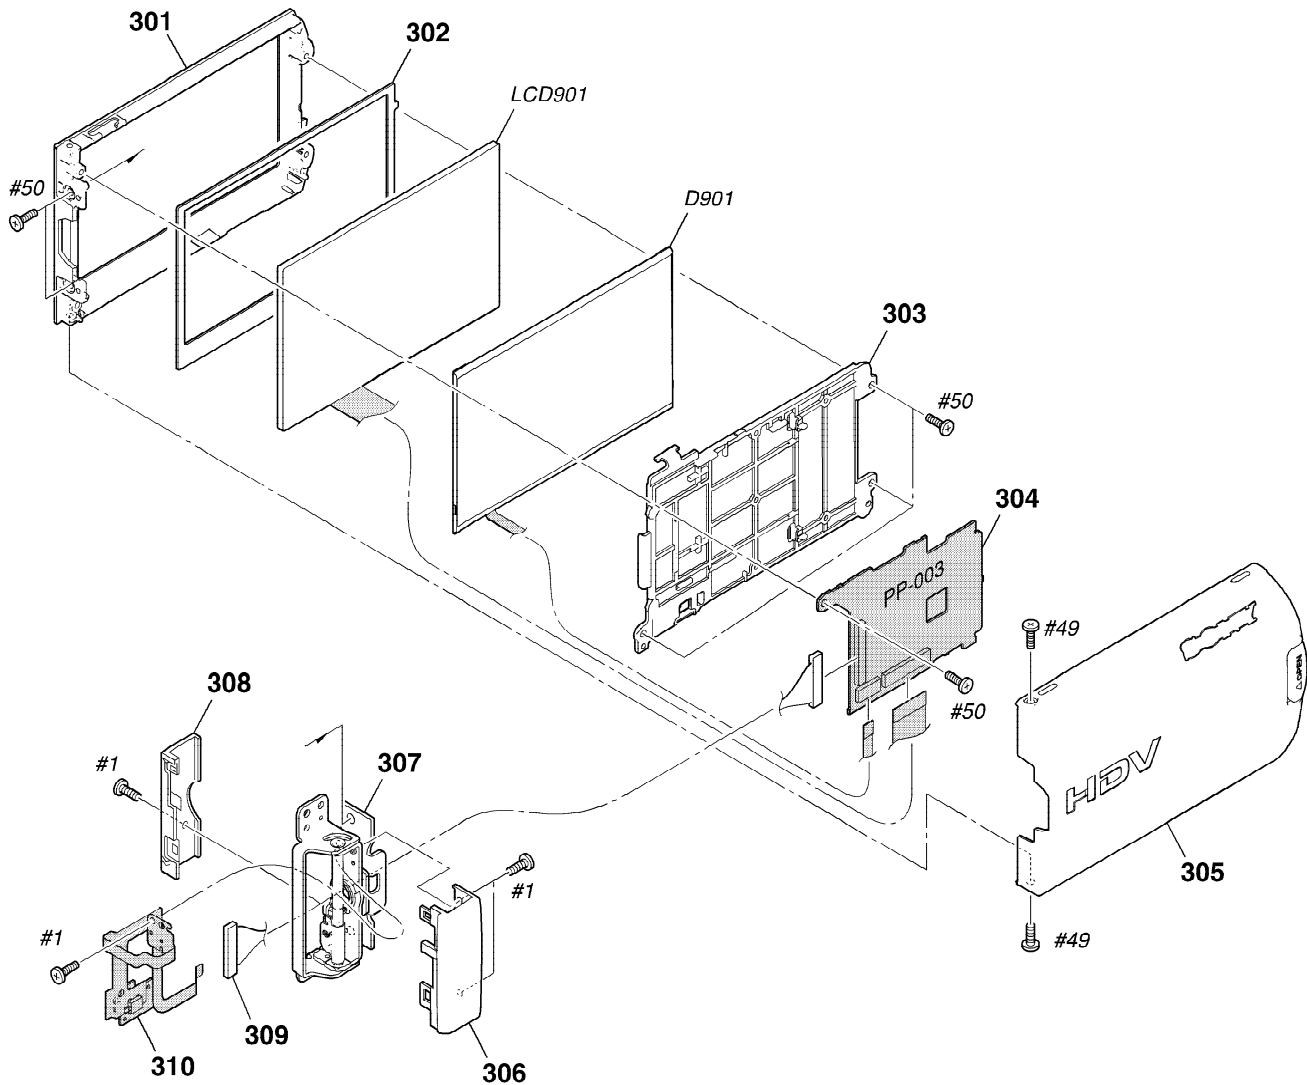

Ref. No.	Part No.	Description
301	2-892-044-11	CABINET (L), PANEL
* 302	2-892-045-01	CUSHION, LCD
303	X-2159-313-1	FRAME ASSY, PANEL
304	A-1217-211-A	PP-003 BOARD, COMPLETE
305	X-2159-312-1	CABINET (R) ASSY (D), PANEL
306	2-892-046-11	COVER (R), HINGE
307	X-2159-310-1	HINGE ASSY
308	3-090-382-21	COVER (REAR), HINGE


Ref. No.	Part No.	Description
309	1-964-790-11	HARNESS (PR-074)
310	A-1217-232-A	FP-487 FLEXIBLE BOARD, COMPLETE
D901	1-479-622-11	BLOCK, LIGHT GUIDE PLATE (3.5)
LCD901	8-753-270-54	ACX545AKA-1
#1	2-635-562-11	SCREW (M1.7) (Black)
#49	2-630-005-31	SCREW (M2), NEW TRUSTER, P2 (Black)
#50	2-891-494-11	SCREW (M2), NEW TRUSTER, P2 (Red)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-8. CABINET (L) SECTION

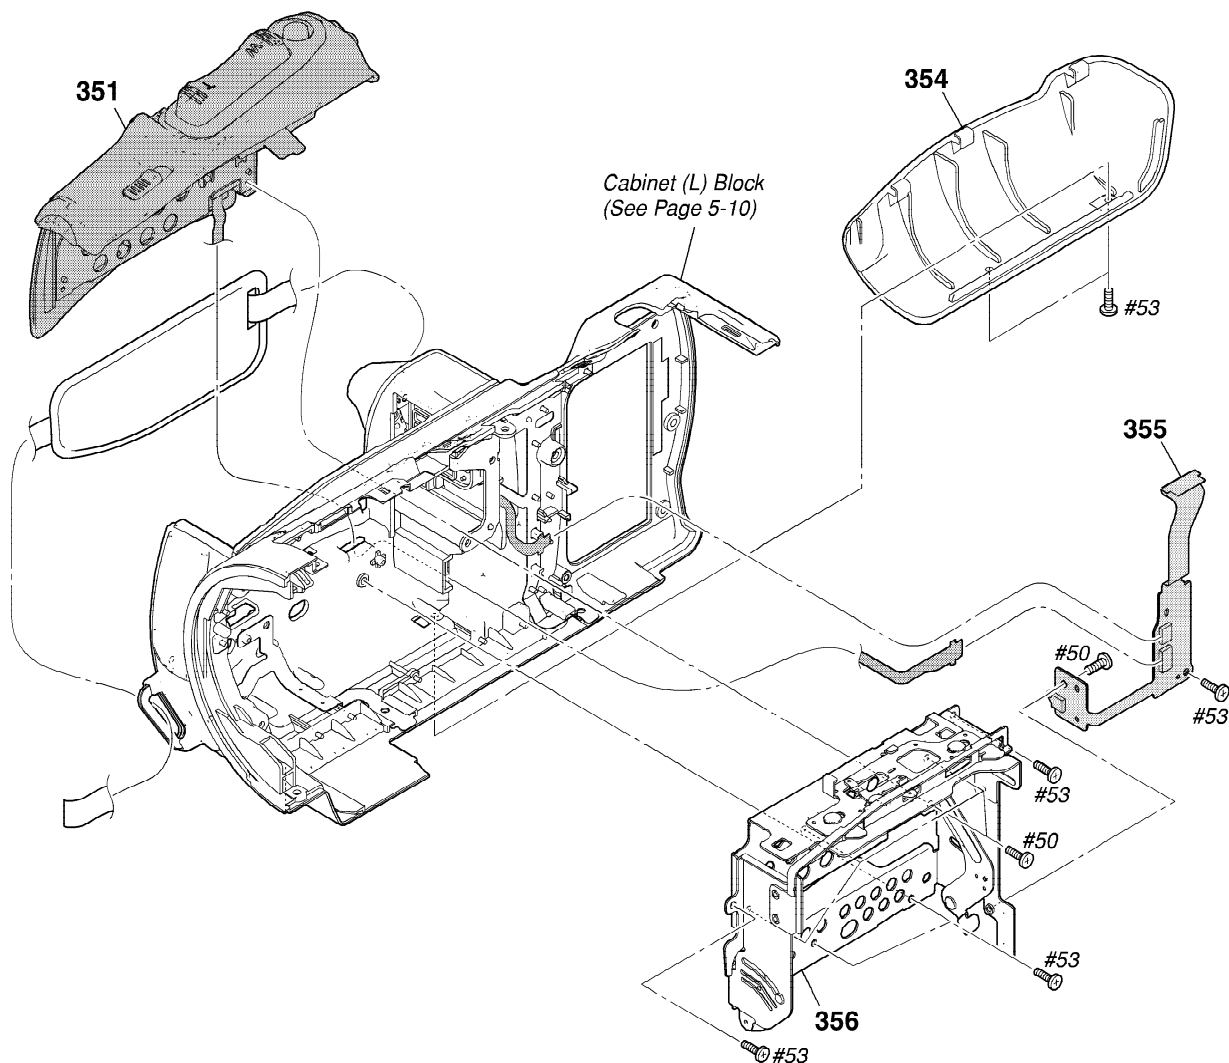

Ref. No.	Part No.	Description
351	1-479-814-21	SWITCH BLOCK, CONTROL (PL18500)
354	2-891-976-01	COVER, GRIP
355	A-1217-230-A	FP-485 FLEXIBLE BOARD, COMPLETE
* 356	X-2159-301-1	FRAME ASSY, CS


Ref. No.	Part No.	Description
#50	2-891-494-11	SCREW (M2), NEW TRUSTER, P2 (Red)
#53	3-080-206-21	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-9. CABINET (L) BLOCK

ns: not supplied

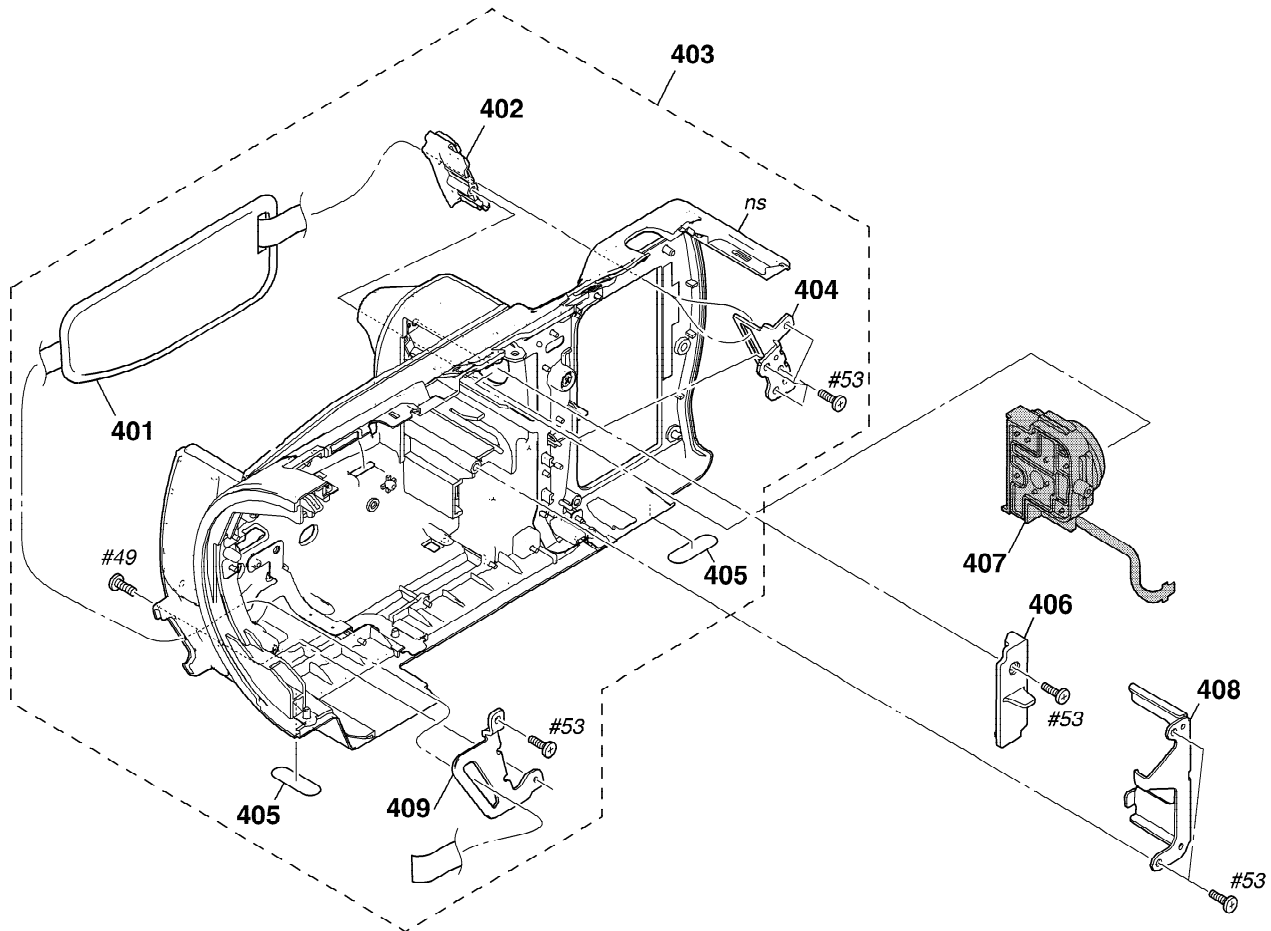

Ref. No.	Part No.	Description
401	2-892-004-01	BELT, GRIP
* 402	2-892-001-01	HOLDER, GRIP BELT
403	X-2159-304-1	CABINET (L) ASSY (D)
* 404	2-892-003-01	BRACKET (R), GRIP BELT
405	2-178-805-01	FOOT, RUBBER
* 406	2-892-005-01	RETAINER, PS

Ref. No.	Part No.	Description
407	1-479-811-11	SWITCH BLOCK, CONTROL (PS18500)
* 408	2-891-981-01	PLATE, PS FIXED
* 409	2-892-002-01	BRACKET (F), GRIP BELT
#49	2-630-005-31	SCREW (M2), NEW TRUSTER, P2 (Black)
#53	3-080-206-21	SCREW, TAPPING, P2 (Black)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-10. HANDLE SECTION

ns: not supplied

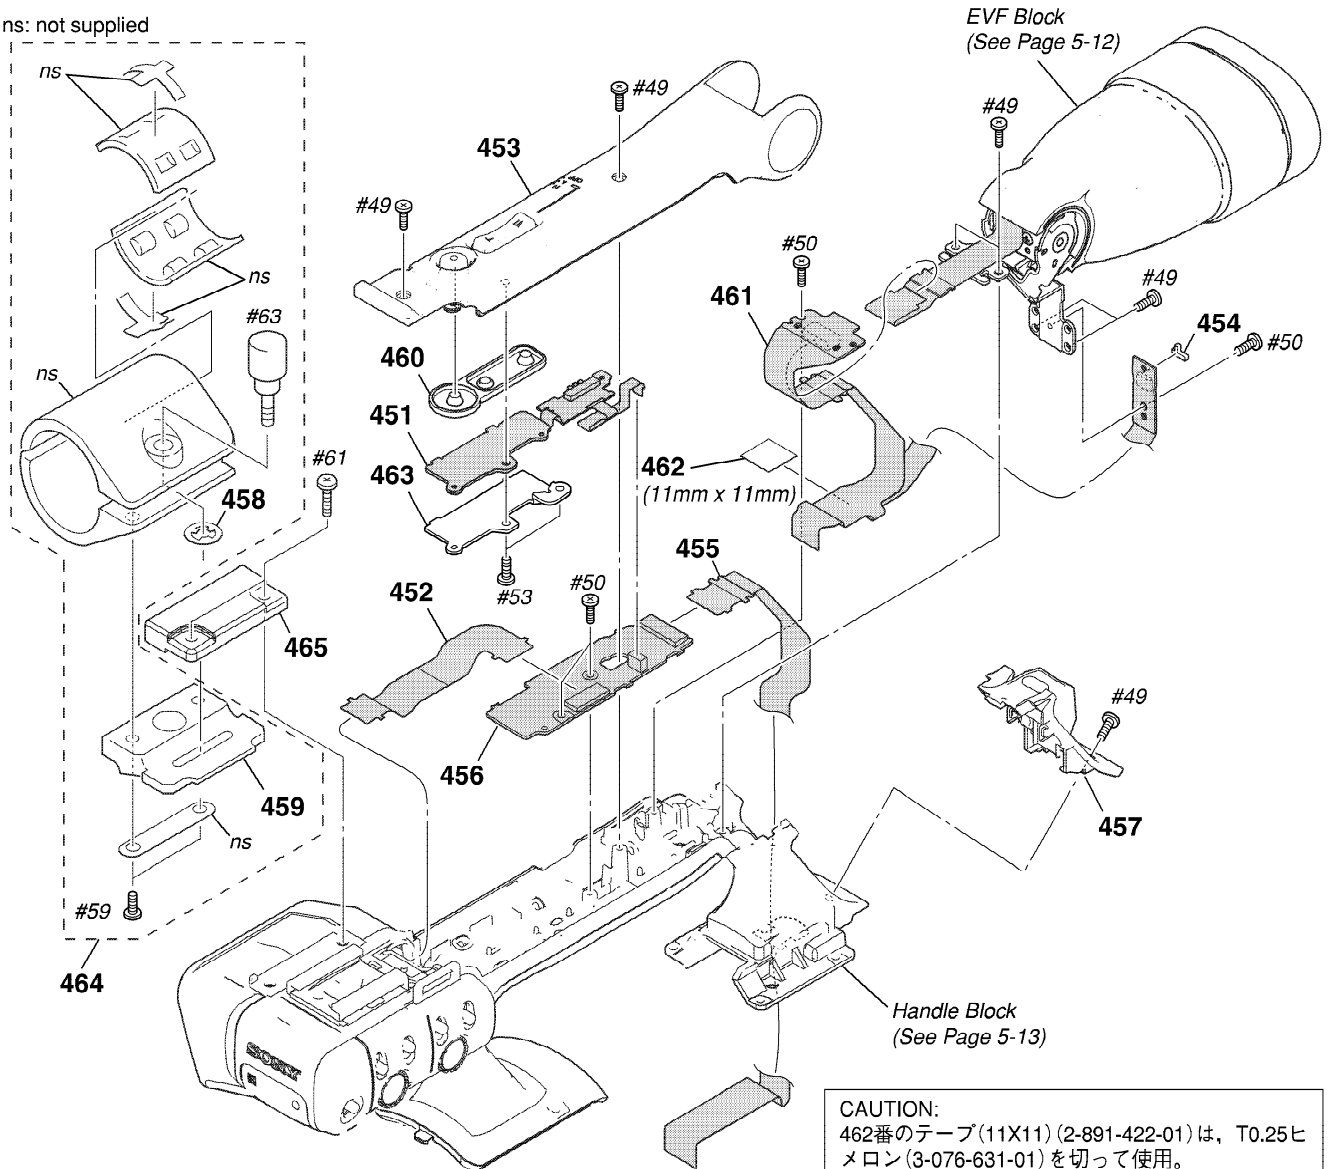

CAUTION:
462番のテープ(11X11) (2-891-422-01)は、T0.25ヒメロン(3-076-631-01)を切って使用。

CAUTION:
For the part of 462: TAPE (11X11) (2-891-422-01), cut WOVEN (T0.25), FABRIC NON (3-076-631-01) into the desired length and use it.


Ref. No.	Part No.	Description
451	A-1217-228-A	FP-483 FLEXIBLE BOARD, COMPLETE
452	1-870-121-11	FP-499 FLEXIBLE BOARD
453	X-2159-321-1	CABINET (UPPER) ASSY (D), HAN
* 454	2-891-983-01	CUSHION, LIGHT INTERCEPTION
455	1-870-122-11	FP-500 FLEXIBLE BOARD
456	A-1217-218-A	GG-003 BOARD, COMPLETE
457	X-2159-323-1	BASE ASSY (D), REMOTE CONTROL
458	3-165-904-01	WASHER, SCREW STOPPER
459	3-060-810-01	BASE, MICROPHONE HOLDER
* 460	2-892-090-01	KEY, RUBBER TACT
461	A-1217-229-A	FP-484 FLEXIBLE BOARD, COMPLETE

Ref. No.	Part No.	Description
462	CAUTION	TAPE (11X11)
463	2-898-108-01	BASE, 2ND KEY
464	X-3950-604-5	HOLDER ASSY, MICROPHONE
465	3-064-629-01	RETAINER (UPPER) D, HOLDER
#49	2-630-005-31	SCREW (M2), NEW TRUSTER, P2 (Black)
#50	2-891-494-11	SCREW (M2), NEW TRUSTER, P2 (Red)
#53	3-080-206-21	SCREW, TAPPING, P2 (Black)
#59	3-080-205-21	SCREW, TAPPING, P2 (Silver)
#61	7-682-549-09	SCREW +B 3X10 (Black)
#63	3-060-811-21	SCREW (M5) (Black)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-11. EVF BLOCK

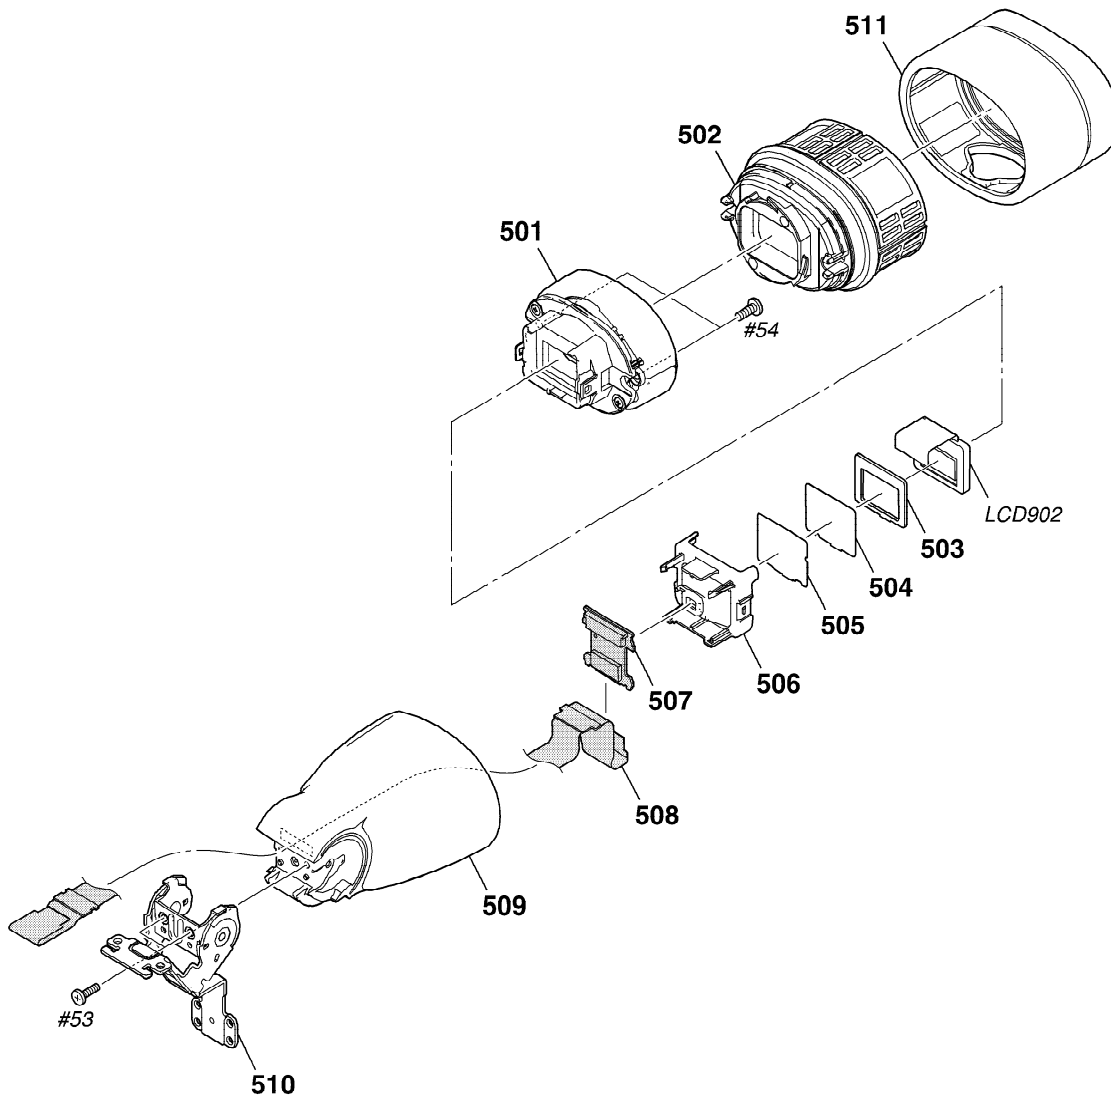

Ref. No.	Part No.	Description
501	X-2159-325-1	HOLDER ASSY, VF PANEL
502	X-2159-324-1	FINDER ASSY
503	2-892-122-01	CUSHION, VF PANEL
504	2-633-596-01	SHEET (1), VF PRISM
505	2-633-595-01	SHEET (2), VF DIFFUSION
506	2-892-120-01	LAMP, VF HOLDER,
507	A-1217-213-A	UU-003 BOARD, COMPLETE


Ref. No.	Part No.	Description
508	1-870-123-11	FP-501 FLEXIBLE BOARD
509	X-2159-328-1	CABINET ASSY (D), VF
510	X-2159-326-1	TILT ASSY, VF
511	2-892-123-01	EYE CUP
LCD902	8-753-210-99	LCX068AK-1
#53	3-080-206-21	SCREW, TAPPING, P2 (Black)
#54	3-318-203-11	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-12. HANDLE BLOCK

ns: not supplied

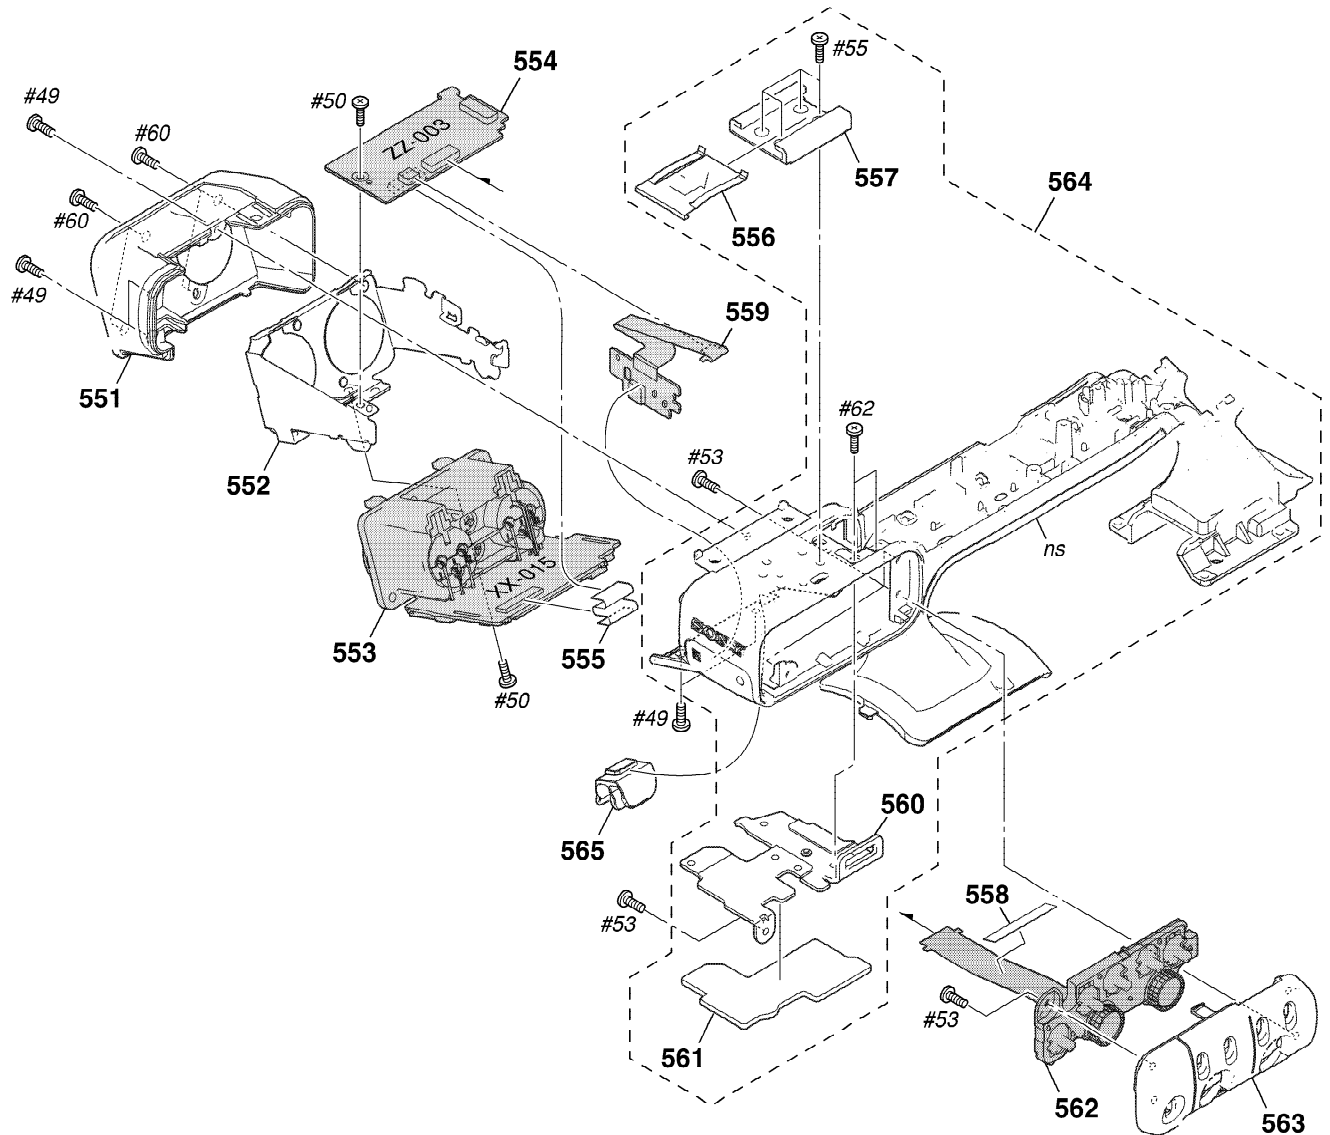


Ref. No.	Part No.	Description
551	2-892-093-01	CABINET (L), XL
* 552	2-892-094-01	SHEET METAL, XL
553	A-1217-224-A	XX-015 BOARD, COMPLETE
554	A-1217-215-A	ZZ-003 BOARD, COMPLETE
555	1-833-615-11	CABLE, FLEXIBLE FLAT (FFC-088)
556	3-688-754-11	SPRING
557	3-069-286-21	SHOE, ACCESSORY
* 558	2-894-845-01	TAPE (XR)
559	A-1217-233-A	FP-488 FLEXIBLE BOARD, COMPLETE
560	2-892-068-01	SHEET METAL, XL BELT
561	2-892-069-01	SHEET (D), POWDER PREVENTION

Ref. No.	Part No.	Description
562	1-479-815-11	SWITCH BLOCK, CONTROL (XR91030)
563	2-892-092-01	CABINET (R), XL
564	X-2159-318-1	CABINET ASSY (D), HANDLE
565	2-892-095-01	CLAMP, CABLE
#49	2-630-005-31	SCREW (M2), NEW TRUSTER, P2 (Black)
#50	2-891-494-11	SCREW (M2), NEW TRUSTER, P2 (Red)
#53	3-080-206-21	SCREW, TAPPING, P2 (Black)
#55	2-655-582-11	SCREW 0+P2 M2 NEWTRU-STAR (Silver)
#60	3-061-062-11	BOLT (M2.6) (Black)
#62	3-080-202-21	SCREW (M2), LOCK ACE, P2 (Silver)

5. REPAIR PARTS LIST

5-1-13. MECHANISM DECK SECTION

ns: not supplied

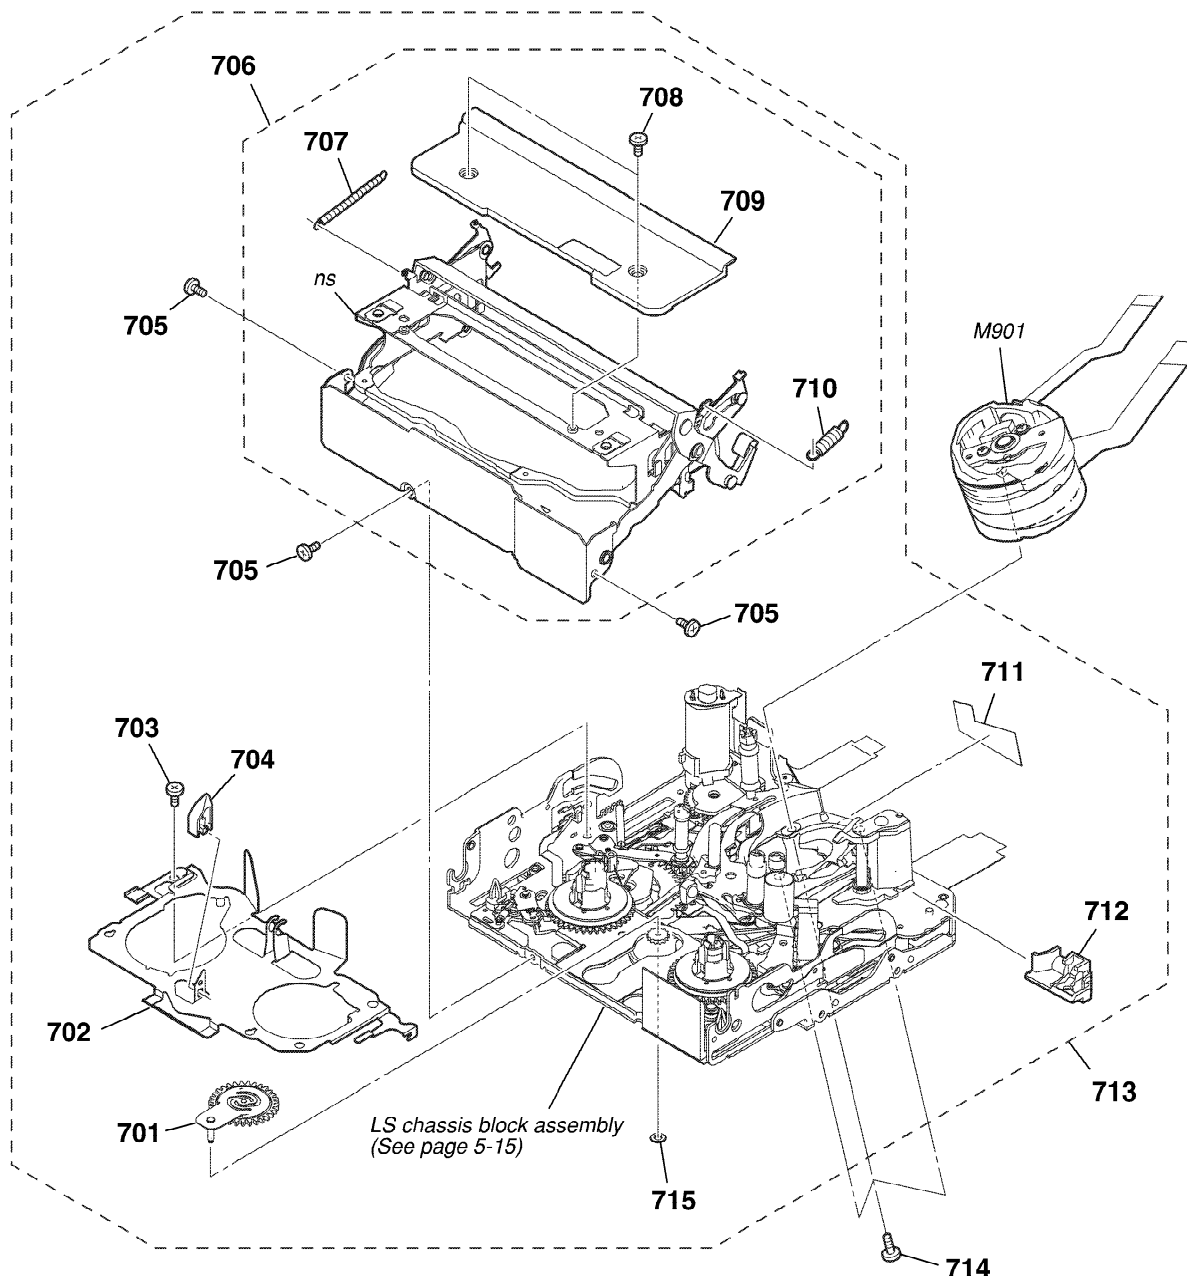


Ref. No.	Part No.	Description
701	X-2024-478-1	PENDULUM ASSY
702	2-342-917-02	LED BASE
703	7-627-850-77	SCREW, PRECISION +P 1.4X1.8
704	3-079-366-11	RELEASE, REEL LOCK
705	3-703-816-08	SCREW (M1.4X1.4), SPECIAL HEAD
706	X-2149-724-1	COMPARTMENT ASSY, CASSETTE
707	2-342-926-01	SPRING (ARM S), TENSION COIL
708	2-546-417-01	SCREW (M1.4)
709	2-342-933-02	PLATE, TOP

Ref. No.	Part No.	Description
710	2-342-927-01	SPRING (ARM T), TENSION COIL
711	2-541-585-01	SHEET, FLEXIBLE ADHESIVE
712	2-342-918-01	TG6 CATCHER
713	A-1080-997-A	MD (N100) SUB ASSY A
714	3-703-816-13	SCREW (M1.4X2.0), SPECIAL HEAD
715	3-315-414-31	WASHER
M901	A-1128-533-A	DRUM (DEH-33B-R)

5. REPAIR PARTS LIST

5-1-14. LS/MECHANICAL CHASSIS BLOCK ASSEMBLY-1

ns: not supplied

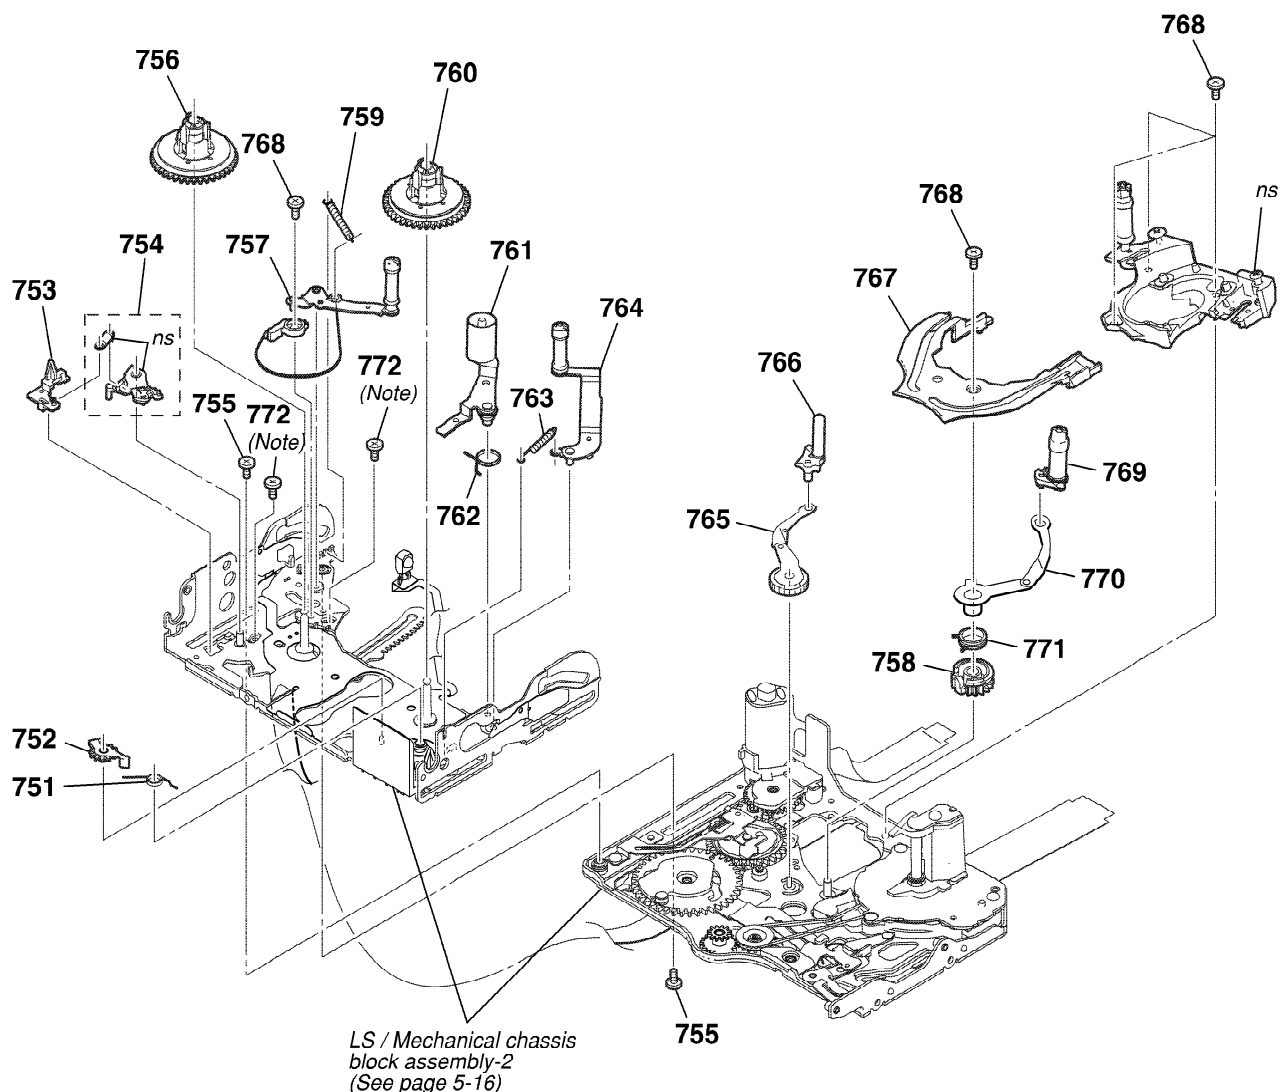

Note: These two screws are the fixing screws of the LS cam plate.
These two fixing screws are used for adjusting the LS cam plate position.
(refer to 4-2. LS cam adjustment of DV mechanical adjustment manual IX)


Ref. No.	Part No.	Description
751	2-342-759-01	SPRING, RVS BRAKE
752	A-1083-005-A	BLOCK ASSY, RVS BRAKE
753	2-342-731-01	POSITIONING, S
754	A-1083-006-A	BLOCK ASSY, S BRAKE
755	3-075-097-11	SCREW (M1.4X1.4), SPECIAL HEAD
756	X-2024-473-1	TABLE ASSY, S REEL
757	A-1083-007-B	BLOCK ASSY, TENSION REGULATOR
758	2-342-705-01	GEAR (T), GL
759	2-342-902-01	SPRING, TENSION REGULATOR
760	X-2024-474-1	TABLE ASSY, T REEL
761	X-2024-476-1	ARM ASSY, PINCH
762	2-342-906-01	SPRING (PINCH RETURN), TORSION

Ref. No.	Part No.	Description
763	2-342-626-01	SPRING (RETURN TG6), EXTENSION
764	A-1083-002-A	BLOCK ASSY, TG6
765	X-2024-468-3	ARM ASSY (S), GL
766	X-2024-465-1	COASTER (S) ASSY
767	2-342-612-01	RAIL
768	3-703-816-13	SCREW (M1.4X2.0), SPECIAL HEAD
769	X-2024-466-1	COASTER (T) ASSY
770	X-2024-469-1	ARM (T) ASSY, GL
771	2-342-716-01	SPRING (T), TORSION COIL
772	3-703-816-08	SCREW (M1.4X1.4), SPECIAL HEAD (for adjustment)

5. REPAIR PARTS LIST

5-1-15. LS/MECHANICAL CHASSIS BLOCK ASSEMBLY-2

ns: not supplied

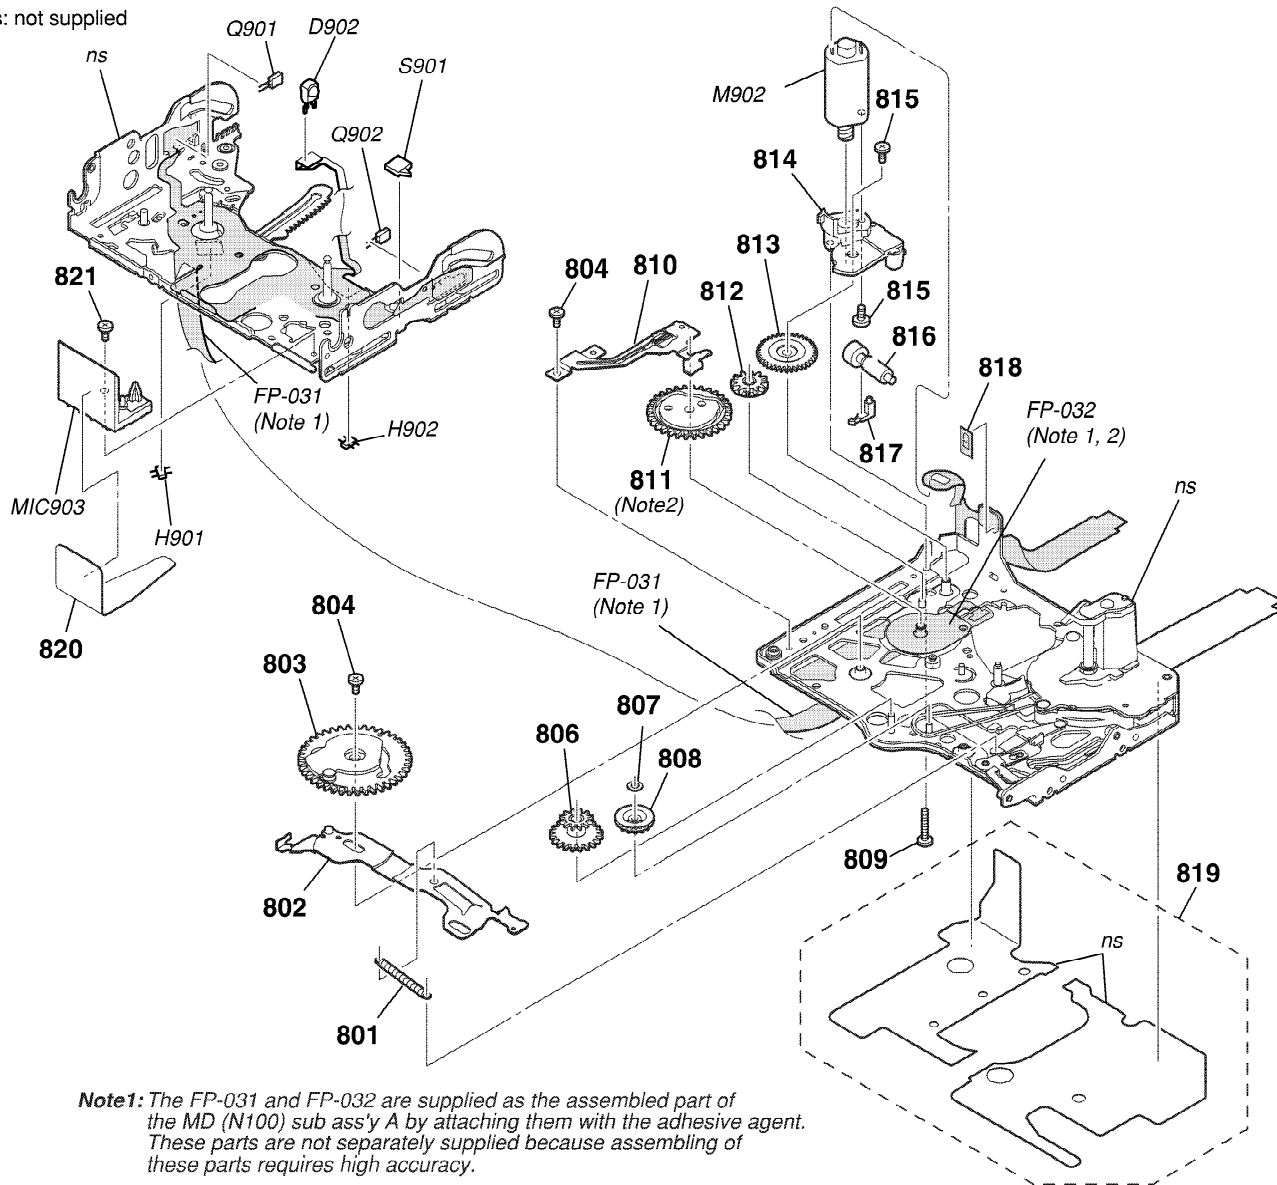

Note1: The FP-031 and FP-032 are supplied as the assembled part of the MD (N100) sub ass'y A by attaching them with the adhesive agent. These parts are not separately supplied because assembling of these parts requires high accuracy.

Note2: The mode switch (S903) function works when the contactor of the FP-032 contacts with the bottom surface of wiper of the mode gear ass'y.

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
801	2-342-624-01	SPRING (PINCH LIMITTER), EXTENSION	817	2-342-690-02	BASE, MOTOR HOLDER
802	X-2024-463-2	SLIDER ASSY, MODE	818	1-677-049-11	FP-228 FLEXIBLE BOARD (DEW SENSOR)
803	X-2024-462-1	GEAR ASSY, CAM	819	2-342-686-01	COVER, CAPSTAN
804	3-075-097-11	SCREW (M1.4X1.4), SPECIAL HEAD	820	2-541-984-01	MIC COVER
806	2-342-621-01	GEAR, RELAY	821	3-703-816-13	SCREW (M1.4X2.0), SPECIAL HEAD
807	3-315-414-31	WASHER	D902	6-500-652-01	DIODE GL453SE0000F (TAPE LED)
808	2-342-620-01	GEAR, CONVERSION	H901	8-719-067-74	ELEMENT, HOLE HW-105A-CDE-T (S REEL)
809	3-084-377-01	HEAD (SCREW M1.2)	H902	8-719-067-74	ELEMENT, HOLE HW-105A-CDE-T (T REEL)
810	X-2024-460-1	BASE ASSY, CAM	M902	X-2024-464-1	MOTOR ASSY (LOADING)
811	X-2024-461-1	GEAR ASSY, MODE	MIC903	1-818-576-11	PIN, CONNECTOR (WITH DETECTION)
812	2-342-615-01	GEAR, NO.2	Q901	6-550-672-01	TRANSISTOR PT4850FJE00F (TAPE END)
813	2-342-691-01	GEAR, NO.1	Q902	6-550-672-01	TRANSISTOR PT4850FJE00F (TAPE TOP)
814	2-637-945-01	MOTOR HOLDER	S901	1-786-448-22	SWITCH, PUSH (1 KEY) (CC DOWN)
815	3-895-822-71	SCREW (M1.2X2), SPECIAL, 0			
816	2-342-689-01	WORM SHAFT (2J)			

5-2. ELECTRICAL PARTS LIST

Ref. No.	Part No.	Description
	A-1223-596-A	PRISM ASSY (SERVICE)
	(Not supplied)	EE-006 BOARD, COMPLETE

	(EE-006 complete board and IC5601 are not supplied, but they are included in prism assy.)	
	< CAPACITOR >	
C5601	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5602	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5603	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C5604	1-125-926-91	TANTAL. CHIP 4.7uF 20% 6.3V
C5605	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5606	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5607	1-125-926-91	TANTAL. CHIP 4.7uF 20% 6.3V
C5608	1-125-926-91	TANTAL. CHIP 4.7uF 20% 6.3V
C5609	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5610	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5611	1-125-926-91	TANTAL. CHIP 4.7uF 20% 6.3V
C5612	1-127-895-91	TANTAL. CHIP 22uF 20% 4V
C5613	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5614	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5615	1-125-926-91	TANTAL. CHIP 4.7uF 20% 6.3V
C5616	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5617	1-125-926-91	TANTAL. CHIP 4.7uF 20% 6.3V
C5618	1-125-926-91	TANTAL. CHIP 4.7uF 20% 6.3V
C5619	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5620	1-125-926-91	TANTAL. CHIP 4.7uF 20% 6.3V
C5621	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5622	1-117-919-11	TANTAL. CHIP 10uF 20% 6.3V
C5623	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5624	1-125-926-91	TANTAL. CHIP 4.7uF 20% 6.3V
C5625	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5626	1-117-919-11	TANTAL. CHIP 10uF 20% 6.3V
C5627	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5628	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5629	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5630	1-117-919-11	TANTAL. CHIP 10uF 20% 6.3V
C5631	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5632	1-117-919-11	TANTAL. CHIP 10uF 20% 6.3V
C5633	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5634	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5635	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5636	1-117-919-11	TANTAL. CHIP 10uF 20% 6.3V
C5637	1-117-919-11	TANTAL. CHIP 10uF 20% 6.3V
C5638	1-117-919-11	TANTAL. CHIP 10uF 20% 6.3V
	< CONNECTOR >	
* CN5601	1-820-806-21	CONNECTOR, COAXIAL (RECEPTACLE)
	< FERRITE BEAD >	
FB5601	1-400-331-11	FERRITE, EMI (SMD) (1005)
FB5602	1-400-331-11	FERRITE, EMI (SMD) (1005)
FB5603	1-400-331-11	FERRITE, EMI (SMD) (1005)
	< IC >	
IC5601	(Not supplied)	IMX013BLA-13 (CMOS IMAGER) (Note)

Ref. No.	Part No.	Description
		< COIL >
L5601	1-400-588-11	INDUCTOR 10uH
L5602	1-400-588-11	INDUCTOR 10uH
L5603	1-400-588-11	INDUCTOR 10uH
L5604	1-400-588-11	INDUCTOR 10uH
	< RESISTOR >	
R5601	1-218-953-11	RES-CHIP 1K 5% 1/16W
R5609	1-218-941-81	RES-CHIP 100 5% 1/16W
	(Not supplied) FP-031 FLEXIBLE BOARD	

	(This flexible board is included in MD (N100) sub assy A (A-1080-997-A).)	
	< DIODE >	
D902	6-500-652-01	DIODE GL453SE0000F (TAPE LED)
	< HOLE ELEMENT >	
H901	8-719-067-74	ELEMENT, HOLE HW-105A-CDE-T (S REEL)
H902	8-719-067-74	ELEMENT, HOLE HW-105A-CDE-T (T REEL)
	< CONNECTOR >	
MIC903	1-818-576-11	PIN, CONNECTOR (WITH DETECTION)
	< TRANSISTOR >	
Q901	6-550-672-01	TRANSISTOR PT4850FJE00F (TAPE END)
Q902	6-550-672-01	TRANSISTOR PT4850FJE00F (TAPE TOP)
	< SWITCH >	
S901	1-786-448-22	SWITCH, PUSH (1 KEY) (CC DOWN)
	(Not supplied) FP-032 FLEXIBLE BOARD	

	(This flexible board with S903 is included in MD (N100) sub assy A (A-1080-997-A).)	
	1-677-049-11 FP-228 FLEXIBLE BOARD (DEW SENSOR)	

	A-1217-228-A FP-483 FLEXIBLE BOARD, COMPLETE	

	< RESISTOR >	
R301	1-216-822-11	METAL CHIP 1.2K 5% 1/10W
R302	1-216-823-11	METAL CHIP 1.5K 5% 1/10W
	< SWITCH >	
S303	1-771-487-21	SWITCH, SLIDE (HANDLE ZOOM (H/L/OFF))

Note: イメージャの交換時は4-4ページの“イメージャ交換時の注意”を必ずお読みください。

Note: Be sure to read "Precautions for Replacement of Imager" on page 4-3 when changing the imager.

Ref. No.	Part No.	Description
	A-1217-229-A	FP-484 FLEXIBLE BOARD, COMPLETE *****
		< CAPACITOR >
C4001	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
		< CONNECTOR >
CN4001	1-817-543-51	CONNECTOR, FPC (ZIF) 27P
		< DIODE >
D4001	8-719-073-01	DIODE MA111-(K8).S0
D4002	8-719-064-07	DIODE SML-310LTT86 (REC LAMP (BACK))
		< IC >
IC4001	6-600-163-01	IC RS-770
		< RESISTOR >
R001	1-216-805-11	METAL CHIP 47 5% 1/10W
R002	1-216-821-11	METAL CHIP 1K 5% 1/10W
	A-1217-230-A	FP-485 FLEXIBLE BOARD, COMPLETE *****
		< CONNECTOR >
* CN501	1-816-643-51	FFC/FPC CONNECTOR (LIF) 10P
* CN502	1-816-654-51	FFC/FPC CONNECTOR (LIF) 6P
		< RESISTOR >
R501	1-216-295-91	SHORT CHIP 0
		< SWITCH >
S001	1-786-180-31	SWITCH, PUSH (1KEY) (EJECT)
	A-1217-231-A	FP-486 FLEXIBLE BOARD, COMPLETE *****
		< FERRITE BEAD >
FB601	1-414-760-21	FERRITE, EMI (SMD) (1608)
FB602	1-414-760-21	FERRITE, EMI (SMD) (1608)
FB603	1-414-760-21	FERRITE, EMI (SMD) (1608)
		< JACK >
J601	1-794-525-12	JACK, MIC (㊤) (HEADPHONES))
		< RESISTOR >
R602	1-216-295-91	SHORT CHIP 0
R603	1-216-864-11	SHORT CHIP 0

	A-1217-232-A	FP-487 FLEXIBLE BOARD, COMPLETE *****
		< SWITCH >
S701	1-771-039-31	SWITCH, PUSH (PANEL REVERSE)

Ref. No.	Part No.	Description
S702	1-786-148-11	SWITCH, PUSH (1 KEY) (PANEL OPEN/CLOSE)
	A-1217-233-A	FP-488 FLEXIBLE BOARD, COMPLETE *****
		< CAPACITOR >
C101	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
		< DIODE >
D101	8-719-064-07	DIODE SML-310LTT86 (REC LAMP (FRONT))
D102	8-719-073-01	DIODE MA111-(K8).S0
		< IC >
IC101	6-600-163-01	IC RS-770
		< RESISTOR >
R101	1-216-821-11	METAL CHIP 1K 5% 1/10W
R102	1-216-805-11	METAL CHIP 47 5% 1/10W
	A-1217-218-A	GG-003 BOARD, COMPLETE *****
		< CONNECTOR >
* CN8202	1-817-564-71	CONNECTOR, FPC (ZIF) 33P
CN8203	1-779-327-51	CONNECTOR, FFC/FPC 6P
* CN8205	1-816-057-51	CONNECTOR, FPC (ZIF) 39P
		< RESISTOR >
R8208	1-218-970-11	RES-CHIP 27K 5% 1/16W
R8211	1-218-964-11	RES-CHIP 8.2K 5% 1/16W
R8212	1-218-960-11	RES-CHIP 3.9K 5% 1/16W
R8213	1-218-957-11	RES-CHIP 2.2K 5% 1/16W
R8256	1-218-955-11	RES-CHIP 1.5K 5% 1/16W
R8257	1-218-954-11	RES-CHIP 1.2K 5% 1/16W
R8261	1-218-990-81	SHORT CHIP 0
R8262	1-218-990-81	SHORT CHIP 0
R8263	1-218-990-81	SHORT CHIP 0
R8264	1-218-990-81	SHORT CHIP 0

	A-1217-219-A	HH-003 BOARD, COMPLETE *****
		< CAPACITOR >
C7402	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C7403	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C7404	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C7405	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C7406	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V
C7407	1-127-715-91	CERAMIC CHIP 0.22uF 10% 16V
C7409	1-127-715-91	CERAMIC CHIP 0.22uF 10% 16V
C7410	1-117-919-11	TANTAL. CHIP 10uF 20% 6.3V
C7411	1-117-919-11	TANTAL. CHIP 10uF 20% 6.3V
C7412	1-117-919-11	TANTAL. CHIP 10uF 20% 6.3V
		< CONNECTOR >
CN7201	1-817-920-11	CONNECTOR, FPC (ZIF) 80P

Ref. No.	Part No.	Description
* CN7401	1-819-696-21	CONNECTOR, HDMI (HDMI OUT)
		< DIODE >
D7402	8-719-056-85	DIODE UDZ-TE-17-8.2B
		< FILTER >
FL7401	1-234-939-21	FILTER, EMI REMOVAL (SMD)
		< IC >
IC7401	6-705-338-01	IC TK11250CMCL-G
* IC7402	6-710-428-01	IC AD9889ABBCZRL-80
		< COIL >
L7401	1-400-588-11	INDUCTOR 10uH
L7402	1-400-588-11	INDUCTOR 10uH
L7403	1-400-588-11	INDUCTOR 10uH
		< LINE FILTER >
* LF7401	1-813-308-11	COMMON MODE CHOKE
* LF7402	1-813-308-11	COMMON MODE CHOKE
* LF7403	1-813-308-11	COMMON MODE CHOKE
* LF7404	1-813-308-11	COMMON MODE CHOKE
		< RESISTOR >
R7201	1-218-941-81	RES-CHIP 100 5% 1/16W
R7202	1-218-941-81	RES-CHIP 100 5% 1/16W
R7203	1-218-941-81	RES-CHIP 100 5% 1/16W
R7204	1-218-941-81	RES-CHIP 100 5% 1/16W
R7205	1-218-941-81	RES-CHIP 100 5% 1/16W
R7206	1-218-941-81	RES-CHIP 100 5% 1/16W
R7207	1-218-941-81	RES-CHIP 100 5% 1/16W
R7208	1-218-941-81	RES-CHIP 100 5% 1/16W
R7209	1-218-941-81	RES-CHIP 100 5% 1/16W
R7210	1-218-941-81	RES-CHIP 100 5% 1/16W
R7211	1-218-941-81	RES-CHIP 100 5% 1/16W
R7212	1-218-941-81	RES-CHIP 100 5% 1/16W
R7213	1-218-941-81	RES-CHIP 100 5% 1/16W
R7214	1-218-941-81	RES-CHIP 100 5% 1/16W
R7215	1-218-941-81	RES-CHIP 100 5% 1/16W
R7216	1-218-941-81	RES-CHIP 100 5% 1/16W
R7217	1-218-941-81	RES-CHIP 100 5% 1/16W
R7218	1-218-941-81	RES-CHIP 100 5% 1/16W
R7219	1-218-941-81	RES-CHIP 100 5% 1/16W
R7220	1-218-941-81	RES-CHIP 100 5% 1/16W
R7221	1-218-941-81	RES-CHIP 100 5% 1/16W
R7222	1-218-941-81	RES-CHIP 100 5% 1/16W
R7223	1-218-941-81	RES-CHIP 100 5% 1/16W
R7224	1-218-941-81	RES-CHIP 100 5% 1/16W
R7225	1-218-941-81	RES-CHIP 100 5% 1/16W
R7226	1-218-941-81	RES-CHIP 100 5% 1/16W
R7228	1-218-941-81	RES-CHIP 100 5% 1/16W
R7229	1-218-941-81	RES-CHIP 100 5% 1/16W
R7230	1-218-941-81	RES-CHIP 100 5% 1/16W
R7231	1-218-941-81	RES-CHIP 100 5% 1/16W
R7232	1-218-941-81	RES-CHIP 100 5% 1/16W
R7401	1-218-961-11	RES-CHIP 4.7K 5% 1/16W
R7402	1-218-961-11	RES-CHIP 4.7K 5% 1/16W

Ref. No.	Part No.	Description			
R7416	1-218-941-81	RES-CHIP	100	5%	1/16W
R7417	1-218-941-81	RES-CHIP	100	5%	1/16W
R7418	1-218-941-81	RES-CHIP	100	5%	1/16W
R7419	1-218-973-11	RES-CHIP	47K	5%	1/16W
R7420	1-218-956-11	RES-CHIP	1.8K	5%	1/16W
R7421	1-218-956-11	RES-CHIP	1.8K	5%	1/16W
R7424	1-218-990-81	SHORT CHIP	0		
R7428	1-218-990-81	SHORT CHIP	0		
R7429	1-208-886-81	METAL CHIP	910	0.5%	1/16W
R7433	1-218-941-81	RES-CHIP	100	5%	1/16W
* R7434	1-208-720-11	METAL CHIP	36K	0.5%	1/16W

A-1217-208-A II-003 BOARD, COMPLETE

< CONNECTOR >

* CN9201	1-817-544-71	CONNECTOR, FPC (ZIF) 39P
* CN9202	1-794-276-21	CONNECTOR, SQUARE TYPE 4P (HDV/DV)
CN9203	1-815-794-13	CONNECTOR (MULTIPLE) (A/V OUT)
CN9204	1-818-607-12	CONNECTOR, SQUARE TYPE 10P (COMPONENT OUT)

< DIODE >

D9201	6-500-252-01	DIODE SML-512WWT86 (CHARGE)
D9203	8-719-056-85	DIODE UDZ-TE-17-8.2B
D9204	8-719-056-85	DIODE UDZ-TE-17-8.2B
D9205	8-719-056-85	DIODE UDZ-TE-17-8.2B
D9206	6-500-750-01	DIODE NSAD500H-T1-A

< FERRITE BEAD >

FB9201	1-414-760-21	FERRITE, EMI (SMD) (1608)
FB9202	1-414-760-21	FERRITE, EMI (SMD) (1608)

< THERMISTOR >

TH9201	1-805-726-11	THERMISTOR, POSITIVE
TH9202	1-805-726-11	THERMISTOR, POSITIVE
TH9203	1-805-726-11	THERMISTOR, POSITIVE
TH9204	1-805-726-11	THERMISTOR, POSITIVE

< VARISTOR >

VDR921	1-803-974-21	VARISTOR, CHIP (1608)
VDR922	1-803-974-21	VARISTOR, CHIP (1608)
VDR924	1-803-974-21	VARISTOR, CHIP (1608)

A-1227-577-A JJ-004 BOARD, COMPLETE (SERVICE)

< CAPACITOR >

C8001	1-100-507-91	CERAMIC CHIP	4.7uF	20%	6.3V
C8002	1-100-507-91	CERAMIC CHIP	4.7uF	20%	6.3V
C8005	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C8006	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C8007	1-119-923-11	CERAMIC CHIP	0.047uF	10%	10V
C8008	1-119-923-11	CERAMIC CHIP	0.047uF	10%	10V
C8009	1-119-923-11	CERAMIC CHIP	0.047uF	10%	10V
C8010	1-137-710-91	CERAMIC CHIP	10uF	20%	6.3V
C8011	1-119-923-11	CERAMIC CHIP	0.047uF	10%	10V
C8012	1-137-710-91	CERAMIC CHIP	10uF	20%	6.3V

Ref. No.	Part No.	Description			
C8013	1-137-710-91	CERAMIC CHIP	10uF	20%	6.3V
C8014	1-137-710-91	CERAMIC CHIP	10uF	20%	6.3V
C8017	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C8018	1-127-895-91	TANTAL. CHIP	22uF	20%	4V
< CONNECTOR >					
* CN8001	1-816-654-51	FFC/FPC CONNECTOR (LIF) 6P			
< IC >					
IC8001	8-759-489-19	IC uPC6756GR-8JG-E2			
< RESISTOR >					
R8001	1-218-969-11	RES-CHIP	22K	5%	1/16W
R8002	1-218-969-11	RES-CHIP	22K	5%	1/16W
R8003	1-218-969-11	RES-CHIP	22K	5%	1/16W
R8004	1-218-969-11	RES-CHIP	22K	5%	1/16W
R8005	1-218-989-11	RES-CHIP	1M	5%	1/16W
R8007	1-218-965-11	RES-CHIP	10K	5%	1/16W
R8008	1-218-965-11	RES-CHIP	10K	5%	1/16W
R8009	1-218-989-11	RES-CHIP	1M	5%	1/16W
< SENSOR >					
* SE8001	1-479-022-51	SENSOR, ANGULAR VELOCITY (PITCH)			
* SE8002	1-479-022-61	SENSOR, ANGULAR VELOCITY (YAW)			
A-1217-221-A NN-003 BOARD, COMPLETE					

< CAPACITOR >					
C5001	1-100-352-91	CERAMIC CHIP	1uF	20%	16V
C5002	1-100-352-91	CERAMIC CHIP	1uF	20%	16V
C5003	1-125-889-91	CERAMIC CHIP	2.2uF	10%	10V
C5004	1-125-889-91	CERAMIC CHIP	2.2uF	10%	10V
C5005	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V
C5006	1-107-819-11	CERAMIC CHIP	0.022uF	10%	16V
C5007	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C5008	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C5201	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5202	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V
C5203	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C5204	1-104-913-11	TANTAL. CHIP	10uF	20%	16V
C5205	1-117-919-11	TANTAL. CHIP	10uF	20%	6.3V
C5206	1-117-919-11	TANTAL. CHIP	10uF	20%	6.3V
C5207	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C5208	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C5209	1-125-891-11	CERAMIC CHIP	0.47uF	10%	10V
C5210	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C5211	1-125-891-11	CERAMIC CHIP	0.47uF	10%	10V
C5212	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C5213	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C5214	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C5215	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C5216	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C5217	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C5218	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C5401	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V

Ref. No.	Part No.	Description			
C5402	1-164-858-11	CERAMIC CHIP	22PF	5%	50V
C5406	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C5407	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C5408	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V
C5409	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V
C5410	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C5411	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C5412	1-100-505-91	CERAMIC CHIP	0.1uF	20%	16V
C5413	1-119-923-11	CERAMIC CHIP	0.047uF	10%	10V
C5414	1-119-923-11	CERAMIC CHIP	0.047uF	10%	10V
C5415	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C5416	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C5417	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C5418	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C5419	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C5421	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C5422	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C5423	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C5424	1-107-819-11	CERAMIC CHIP	0.022uF	10%	16V
C5425	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C5426	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C5427	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C5428	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C5429	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C5430	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C5431	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C5432	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C5433	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C5434	1-164-935-11	CERAMIC CHIP	470PF	10%	50V
C5435	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C5436	1-164-935-11	CERAMIC CHIP	470PF	10%	50V
C5437	1-164-935-11	CERAMIC CHIP	470PF	10%	50V
C5438	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C5439	1-164-935-11	CERAMIC CHIP	470PF	10%	50V
C5440	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C5441	1-164-942-11	CERAMIC CHIP	0.0068uF	10%	16V
C5442	1-164-942-11	CERAMIC CHIP	0.0068uF	10%	16V
< CONNECTOR >					
CN5001	1-817-920-11	CONNECTOR, FPC (ZIF) 80P			
* CN5201	1-816-643-51	FFC/FPC CONNECTOR (LIF) 10P			
* CN5401	1-818-818-51	CONNECTOR, FPC (ZIF) 29P			
* CN5402	1-816-643-51	FFC/FPC CONNECTOR (LIF) 10P			
* CN5403	1-817-829-51	CONNECTOR, FPC (ZIF) 27P			
< DIODE >					
D5002	6-501-125-01	DIODE MA21D3400LS0			
< IC >					
IC5001	6-707-401-01	IC FB6805Q-TE2			
IC5002	6-707-633-01	IC FB6825Q-TE2			
IC5201	6-703-228-01	IC TK11160CSCL-G			
IC5202	6-707-432-01	IC TLS26A102PFBR			
IC5402	6-707-428-01	IC BD6639AGLV-E2			
< COIL >					
L5201	1-400-588-11	INDUCTOR	10uH		
L5202	1-400-588-11	INDUCTOR	10uH		

Ref. No.	Part No.	Description			
L5401	1-400-202-21	INDUCTOR	4.7uH		
L5402	1-414-771-91	INDUCTOR	10uH		
< TRANSISTOR >					
Q5401	6-550-242-01	TRANSISTOR	DTC114EMT2L		
Q5402	6-550-174-01	TRANSISTOR	2SA2030T2L		
Q5403	6-550-237-01	TRANSISTOR	2SC5658T2LQ/R		
< RESISTOR >					
R5001	1-218-953-11	RES-CHIP	1K	5%	1/16W
R5002	1-218-953-11	RES-CHIP	1K	5%	1/16W
R5203	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5204	1-218-969-11	RES-CHIP	22K	5%	1/16W
R5205	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5206	1-218-963-11	RES-CHIP	6.8K	5%	1/16W
R5207	1-208-715-11	METAL CHIP	22K	0.5%	1/16W
R5208	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W
R5209	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W
R5210	1-218-990-81	SHORT CHIP	0		
R5212	1-208-715-11	METAL CHIP	22K	0.5%	1/16W
R5213	1-208-869-11	METAL CHIP	180	0.5%	1/16W
R5214	1-208-869-11	METAL CHIP	180	0.5%	1/16W
R5215	1-208-869-11	METAL CHIP	180	0.5%	1/16W
R5216	1-208-869-11	METAL CHIP	180	0.5%	1/16W
R5401	1-218-935-11	RES-CHIP	33	5%	1/16W
R5402	1-218-935-11	RES-CHIP	33	5%	1/16W
R5403	1-218-953-11	RES-CHIP	1K	5%	1/16W
R5421	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5422	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5423	1-218-953-11	RES-CHIP	1K	5%	1/16W
R5424	1-218-941-81	RES-CHIP	100	5%	1/16W
R5425	1-218-973-11	RES-CHIP	47K	5%	1/16W
R5426	1-216-789-11	METAL CHIP	2.2	5%	1/10W
R5427	1-216-789-11	METAL CHIP	2.2	5%	1/10W
R5428	1-216-789-11	METAL CHIP	2.2	5%	1/10W
R5429	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5430	1-218-946-11	RES-CHIP	270	5%	1/16W
R5431	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5434	1-218-967-11	RES-CHIP	15K	5%	1/16W
R5435	1-218-935-11	RES-CHIP	33	5%	1/16W
R5436	1-218-977-11	RES-CHIP	100K	5%	1/16W
R5437	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5438	1-218-969-11	RES-CHIP	22K	5%	1/16W
R5439	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R5441	1-218-957-11	RES-CHIP	2.2K	5%	1/16W

A-1217-223-A OO-003 BOARD, COMPLETE

< CAPACITOR >

C6601	1-100-661-11	TANTAL. CHIP	100uF	20%	4V
C6602	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C6605	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C6606	1-117-919-11	TANTAL. CHIP	10uF	20%	6.3V
C6607	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C6608	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C6609	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V

Ref. No.	Part No.	Description			
C6610	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C6611	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C6612	1-164-739-11	CERAMIC CHIP	560PF	5%	50V
C6613	1-125-838-11	CERAMIC CHIP	2.2uF	10%	6.3V
C6614	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C6615	1-113-987-11	TANTAL. CHIP	4.7uF	20%	25V
C6616	1-164-357-11	CERAMIC CHIP	0.001uF	5%	50V
C6617	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C6618	1-164-866-11	CERAMIC CHIP	47PF	5%	50V
C6619	1-125-838-11	CERAMIC CHIP	2.2uF	10%	6.3V
C6620	1-125-838-11	CERAMIC CHIP	2.2uF	10%	6.3V
C6621	1-125-838-11	CERAMIC CHIP	2.2uF	10%	6.3V
C6622	1-115-566-11	CERAMIC CHIP	4.7uF	10%	10V
C6625	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C6626	1-137-710-91	CERAMIC CHIP	10uF	20%	6.3V
C6627	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C6630	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C6631	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C6632	1-100-611-91	CERAMIC CHIP	22uF	20%	6.3V
C6633	1-100-611-91	CERAMIC CHIP	22uF	20%	6.3V
C6634	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C6635	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C6636	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C6637	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C6638	1-104-700-11	CERAMIC CHIP	0.027uF	10%	16V
C6639	1-104-700-11	CERAMIC CHIP	0.027uF	10%	16V
C6640	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C6641	1-119-750-11	TANTAL. CHIP	22uF	20%	6.3V
C6642	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C6645	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C6646	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C6647	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C6648	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
< CONNECTOR >					
* CN6601	1-819-934-51	CONNECTOR, FPC (ZIF) 39P			
* CN6602	1-817-920-11	CONNECTOR, FPC (ZIF) 80P			
* CN6603	1-819-778-51	CONNECTOR, FPC (ZIF) 33P			
< DIODE >					
D6601	8-719-084-47	DIODE 1SV290 (TPL3)			
< IC >					
IC6601	8-759-660-93	IC RB5P004AM2			
IC6602	8-753-229-41	IC CXD3537R-T4			
IC6603	6-701-112-01	IC DS1801E-02V+T/R			
IC6604	6-706-906-01	IC NJM2732RB1 (TE2)			
IC6605	6-707-702-01	IC NJM2746RB1 (TE2)			
IC6606	6-701-979-01	IC TC7WB66FK (TE85R)			
IC6607	6-701-979-01	IC TC7WB66FK (TE85R)			
IC6608	6-701-979-01	IC TC7WB66FK (TE85R)			
IC6609	6-701-979-01	IC TC7WB66FK (TE85R)			
< COIL >					
L6602	1-414-771-91	INDUCTOR	10uH		
L6603	1-414-771-91	INDUCTOR	10uH		
L6604	1-414-248-11	INDUCTOR	2.2uH		
L6605	1-414-771-91	INDUCTOR	10uH		

OO-003

PP-003

Ref. No.	Part No.	Description				
< TRANSISTOR >						
Q6601	6-550-119-01	TRANSISTOR	DTC144EMT2L			
Q6602	6-550-232-01	TRANSISTOR	2SA2029T2LQ/R			
Q6603	8-729-037-74	TRANSISTOR	UN9213J-(TX).SO			
Q6604	8-729-037-74	TRANSISTOR	UN9213J-(TX).SO			
Q6605	8-729-427-74	TRANSISTOR	XP4601			
Q6606	8-729-427-74	TRANSISTOR	XP4601			
Q6607	8-729-427-72	TRANSISTOR	XP4501			
< RESISTOR >						
R6603	1-218-973-11	RES-CHIP	47K	5%	1/16W	
R6604	1-218-953-11	RES-CHIP	1K	5%	1/16W	
R6607	1-218-967-11	RES-CHIP	15K	5%	1/16W	
R6608	1-218-958-11	RES-CHIP	2.7K	5%	1/16W	
R6609	1-218-973-11	RES-CHIP	47K	5%	1/16W	
R6610	1-218-975-11	RES-CHIP	68K	5%	1/16W	
R6611	1-218-969-11	RES-CHIP	22K	5%	1/16W	
R6612	1-218-975-11	RES-CHIP	68K	5%	1/16W	
R6613	1-218-989-11	RES-CHIP	1M	5%	1/16W	
R6614	1-218-977-11	RES-CHIP	100K	5%	1/16W	
R6615	1-218-973-11	RES-CHIP	47K	5%	1/16W	
R6616	1-218-963-11	RES-CHIP	6.8K	5%	1/16W	
R6617	1-218-941-81	RES-CHIP	100	5%	1/16W	
R6618	1-218-967-11	RES-CHIP	15K	5%	1/16W	
R6619	1-218-941-81	RES-CHIP	100	5%	1/16W	
R6620	1-218-941-81	RES-CHIP	100	5%	1/16W	
R6621	1-218-941-81	RES-CHIP	100	5%	1/16W	
R6622	1-218-967-11	RES-CHIP	15K	5%	1/16W	
R6624	1-218-977-11	RES-CHIP	100K	5%	1/16W	
R6625	1-218-977-11	RES-CHIP	100K	5%	1/16W	
R6628	1-208-707-11	METAL CHIP	10K	0.5%	1/16W	
R6629	1-208-707-11	METAL CHIP	10K	0.5%	1/16W	
R6630	1-208-711-11	METAL CHIP	15K	0.5%	1/16W	
R6631	1-208-711-11	METAL CHIP	15K	0.5%	1/16W	
R6632	1-219-606-11	METAL CHIP	100K	0.5%	1/16W	
R6633	1-219-601-81	METAL CHIP	62K	0.5%	1/16W	
R6634	1-219-601-81	METAL CHIP	62K	0.5%	1/16W	
R6635	1-219-602-11	METAL CHIP	68K	0.5%	1/16W	
R6636	1-218-965-11	RES-CHIP	10K	5%	1/16W	
R6637	1-208-711-11	METAL CHIP	15K	0.5%	1/16W	
R6638	1-208-717-11	METAL CHIP	27K	0.5%	1/16W	
R6639	1-208-717-11	METAL CHIP	27K	0.5%	1/16W	
R6640	1-208-711-11	METAL CHIP	15K	0.5%	1/16W	
R6642	1-218-990-81	SHORT CHIP	0			
R6645	1-244-161-81	RES-CHIP	2.2	5%	1/16W	
R6646	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	
R6648	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	
A-1217-211-A PP-003 BOARD, COMPLETE						

< CAPACITOR >						
C9002	1-127-895-91	TANTAL. CHIP	22uF	20%	4V	
C9004	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	
C9006	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C9008	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	

Ref. No.	Part No.	Description				
C9009	1-164-739-11	CERAMIC CHIP	560PF	5%	50V	
C9010	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V	
C9011	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V	
C9012	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V	
C9013	1-137-700-11	TANTAL. CHIP	10uF	20%	6.3V	
C9015	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	
C9016	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	
C9017	1-112-300-91	CERAMIC CHIP	4.7uF	10%	10V	
C9018	1-112-300-91	CERAMIC CHIP	4.7uF	10%	10V	
C9020	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C9021	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	
C9023	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V	
C9024	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	
C9025	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
C9026	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	
< CONNECTOR >						
* CN9003	1-785-905-51	CONNECTOR, FFC/FPC (ZIF) 24P				
* CN9004	1-794-322-51	CONNECTOR, FFC/FPC (ZIF) 6P				
CN9005	1-816-928-11	PIN, CONNECTOR 22P				
< DIODE >						
D9001	8-719-074-67	DIODE EDZ-TE61-5.6B				
< FERRITE BEAD >						
FB9001	1-469-082-21	INDUCTOR, FERRITE BEAD (1005)				
< IC >						
IC9002	8-753-229-98	IC CXM3006CR-T4				
< COIL >						
* L9001	1-400-411-21	INDUCTOR	4.7uH			
* L9002	1-400-411-21	INDUCTOR	4.7uH			
* L9003	1-400-411-21	INDUCTOR	4.7uH			
< TRANSISTOR >						
Q9003	6-550-239-01	TRANSISTOR	DTA144EMT2L			
Q9004	8-729-054-48	TRANSISTOR	UP04601008S0			
Q9005	8-729-054-48	TRANSISTOR	UP04601008S0			
Q9006	6-550-232-01	TRANSISTOR	2SA2029T2LQ/R			
Q9007	6-550-234-01	TRANSISTOR	UNR32A300LS0			
Q9008	6-550-232-01	TRANSISTOR	2SA2029T2LQ/R			
Q9009	6-551-184-01	TRANSISTOR	MCH6305-TL-E-S			
< RESISTOR >						
R9010	1-218-975-11	RES-CHIP	68K	5%	1/16W	
R9012	1-218-949-11	RES-CHIP	470	5%	1/16W	
R9014	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W	
R9015	1-208-695-11	METAL CHIP	3.3K	0.5%	1/16W	
R9017	1-218-975-11	RES-CHIP	68K	5%	1/16W	
R9018	1-208-934-11	METAL CHIP	91K	0.5%	1/16W	
R9019	1-208-643-11	METAL CHIP	22	0.5%	1/16W	
R9020	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W	
R9021	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	
R9022	1-218-969-11	RES-CHIP	22K	5%	1/16W	
R9023	1-218-950-11	RES-CHIP	560	5%	1/16W	

Ref. No.	Part No.	Description			
R9025	1-218-969-11	RES-CHIP	22K	5%	1/16W
R9028	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R9029	1-208-695-11	METAL CHIP	3.3K	0.5%	1/16W
R9031	1-218-953-11	RES-CHIP	1K	5%	1/16W
R9032	1-218-977-11	RES-CHIP	100K	5%	1/16W
R9033	1-218-978-11	RES-CHIP	120K	5%	1/16W
R9034	1-218-989-11	RES-CHIP	1M	5%	1/16W

A-1217-212-A RR-003 BOARD, COMPLETE

(BT9601 (lithium battery) is not included in RR-003 complete board.)

< BATTERY HOLDER >

△ BH9601 1-756-615-41 HOLDER, BATTERY (Note)

< BATTERY >

△ BT9601 1-756-134-12 BATTERY, STORAGE, LITHIUM (Note)

< CONNECTOR >

* CN9601 1-819-781-51 CONNECTOR, FPC (ZIF) 45P
 * CN9602 1-816-654-51 FFC/FPC CONNECTOR (LIF) 6P
 * CN9603 1-816-645-51 FFC/FPC CONNECTOR (LIF) 14P
 CN9604 1-794-057-21 PIN, CONNECTOR (PC BOARD) 2P
 CN9606 1-816-928-11 PIN, CONNECTOR 22P

CN9607 1-779-327-51 CONNECTOR, FFC/FPC 6P

< DIODE >

D9601 8-719-422-64 DIODE MA8062-M
 D9602 8-719-422-64 DIODE MA8062-M
 D9603 8-719-422-64 DIODE MA8062-M
 D9604 8-719-422-64 DIODE MA8062-M
 D9605 8-719-422-64 DIODE MA8062-M

D9606 8-719-422-64 DIODE MA8062-M
 D9607 8-719-422-64 DIODE MA8062-M
 D9608 6-500-289-01 DIODE MAZW082H0LS0

< COIL >

L9601 1-414-406-11 INDUCTOR 220uH
 L9602 1-414-406-11 INDUCTOR 220uH

< RESISTOR >

R9608 1-218-954-11 RES-CHIP 1.2K 5% 1/16W
 R9609 1-218-954-11 RES-CHIP 1.2K 5% 1/16W
 R9610 1-218-954-11 RES-CHIP 1.2K 5% 1/16W
 R9611 1-218-955-11 RES-CHIP 1.5K 5% 1/16W
 R9612 1-218-957-11 RES-CHIP 2.2K 5% 1/16W

R9613 1-218-955-11 RES-CHIP 1.5K 5% 1/16W
 R9614 1-218-957-11 RES-CHIP 2.2K 5% 1/16W
 R9615 1-218-955-11 RES-CHIP 1.5K 5% 1/16W
 R9616 1-218-960-11 RES-CHIP 3.9K 5% 1/16W
 R9617 1-218-960-11 RES-CHIP 3.9K 5% 1/16W

R9618 1-218-964-11 RES-CHIP 8.2K 5% 1/16W
 R9619 1-218-957-11 RES-CHIP 2.2K 5% 1/16W
 R9620 1-218-970-11 RES-CHIP 27K 5% 1/16W
 R9621 1-218-957-11 RES-CHIP 2.2K 5% 1/16W
 R9622 1-218-964-11 RES-CHIP 8.2K 5% 1/16W

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description			
R9623	1-218-960-11	RES-CHIP	3.9K	5%	1/16W
R9624	1-218-964-11	RES-CHIP	8.2K	5%	1/16W
R9625	1-218-960-11	RES-CHIP	3.9K	5%	1/16W
R9626	1-218-970-11	RES-CHIP	27K	5%	1/16W
R9627	1-218-970-11	RES-CHIP	27K	5%	1/16W
R9628	1-218-964-11	RES-CHIP	8.2K	5%	1/16W
R9629	1-218-954-11	RES-CHIP	1.2K	5%	1/16W
R9630	1-218-955-11	RES-CHIP	1.5K	5%	1/16W
R9631	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R9632	1-218-960-11	RES-CHIP	3.9K	5%	1/16W
R9633	1-218-964-11	RES-CHIP	8.2K	5%	1/16W
R9634	1-218-970-11	RES-CHIP	27K	5%	1/16W

< SWITCH >

S9601 1-786-157-31 TACTILE SWITCH (RESET)
 S9602 1-786-157-31 TACTILE SWITCH (DISPLAY/BATT INFO)
 S9603 1-786-157-31 TACTILE SWITCH (STOP ■)
 S9604 1-786-157-31 TACTILE SWITCH (PAUSE ■■)
 S9605 1-786-157-31 TACTILE SWITCH (VOLUME/MEMORY +)

S9606 1-786-157-31 TACTILE SWITCH (REW ◀◀)
 S9607 1-786-157-31 TACTILE SWITCH (VOLUME/MEMORY -)
 S9608 1-786-157-31 TACTILE SWITCH
 (ASSIGN (CAMERA)_4/MEMORY (VCR)_PLAY)
 S9609 1-786-157-31 TACTILE SWITCH (REC ●)
 S9610 1-786-157-31 TACTILE SWITCH
 (ASSIGN (CAMERA)_5/MEMORY (VCR)_INDEX)

S9611 1-786-157-31 TACTILE SWITCH (REC)
 S9612 1-786-157-31 TACTILE SWITCH
 (ASSIGN (CAMERA)_6/MEMORY (VCR)_DELETE)
 S9613 1-786-157-31 TACTILE SWITCH (PLAY ▶▶)
 S9614 1-771-487-21 SWITCH, SLIDE (ZEBRA (OFF/70/100))
 S9615 1-786-157-31 TACTILE SWITCH (FF ▶▶)

S9616 1-786-157-31 TACTILE SWITCH (SLOW ▶▶)

< VARISTOR >

VDR961 1-801-862-11 VARISTOR, CHIP (1608)
 VDR962 1-801-862-11 VARISTOR, CHIP (1608)
 VDR963 1-801-862-11 VARISTOR, CHIP (1608)
 VDR964 1-801-862-11 VARISTOR, CHIP (1608)

CAUTION

Danger of explosion if battery is incorrectly replaced.
 Replace only with the same or equivalent type.

注意

電池の交換は、正しく行わないと破裂する恐れがあります。電池を交換する場合には必ず同じ型名の電池又は同等品と交換してください。

Note: Replace the battery holder (BH9601) together when replacing the lithium battery (BT9601) on the RR-003 board. (The battery holder removed once cannot be used again.)
 When mounting these parts, mount new battery holder first and attach new lithium battery next.

Note: RR-003基板のリチウム電池 (BT9601) を交換する場合はバッテリーホルダ (BH9601) も同時に新品に交換して下さい。(一度使用したバッテリーホルダは再使用できません。)
 部品取り付けの際は、先にバッテリーホルダを取り付けてからリチウム電池を装着して下さい。

TT-003

Ref. No.	Part No.	Description
A-1217-722-A	TT-003 BOARD, COMPLETE (SERVICE)	(NTSC: V1J/V1U/V1N)
A-1217-723-A	TT-003 BOARD, COMPLETE (SERVICE)	(PAL: V1E/V1P/V1C)

(IC2402 and IC3804 are not supplied, but they are included in TT-003 complete board.)		

< CAPACITOR >

C1112	1-100-506-91	CERAMIC CHIP	1uF	20%	6.3V
C1113	1-100-506-91	CERAMIC CHIP	1uF	20%	6.3V
C1114	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1115	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1116	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1117	1-127-895-11	TANTAL. CHIP	22uF	10%	4V
C1120	1-100-506-91	CERAMIC CHIP	1uF	20%	6.3V
C1121	1-100-506-91	CERAMIC CHIP	1uF	20%	6.3V
C1122	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1123	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1124	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1203	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1204	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1209	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1210	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1211	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1212	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1214	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1217	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1218	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1221	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1222	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1225	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1226	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1229	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1230	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1232	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1234	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1236	1-127-895-11	TANTAL. CHIP	22uF	10%	4V
C1239	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1240	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1241	1-127-895-11	TANTAL. CHIP	22uF	10%	4V
C1243	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1244	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1245	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1246	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1247	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1248	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1249	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1250	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1251	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1252	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1253	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1254	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1255	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1256	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1257	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1258	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1259	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1260	1-127-895-11	TANTAL. CHIP	22uF	10%	4V

Ref. No.	Part No.	Description			
C1261	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1262	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1263	1-127-895-11	TANTAL. CHIP	22uF	10%	4V
C1401	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1402	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1403	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1404	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1405	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1406	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1407	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1408	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1409	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1410	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1411	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1412	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1413	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1414	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1415	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1416	1-119-750-11	TANTAL. CHIP	22uF	20%	6.3V
C1417	1-119-750-11	TANTAL. CHIP	22uF	20%	6.3V
C1418	1-119-750-11	TANTAL. CHIP	22uF	20%	6.3V
C1419	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1420	1-127-895-91	TANTAL. CHIP	22uF	20%	4V
C1421	1-127-895-91	TANTAL. CHIP	22uF	20%	4V
C1422	1-127-895-91	TANTAL. CHIP	22uF	20%	4V
C1426	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1427	1-117-919-11	TANTAL. CHIP	10uF	20%	6.3V
C1601	1-100-786-91	TANTAL. CHIP	22uF	20%	6.3V
C1602	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1603	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1604	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1605	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1606	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1801	1-100-611-91	CERAMIC CHIP	22uF	20%	6.3V
C1802	1-117-919-11	TANTAL. CHIP	10uF	20%	6.3V
C1803	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1804	1-137-859-11	TANTAL. CHIP	220uF	20%	4V
C1805	1-117-919-11	TANTAL. CHIP	10uF	20%	6.3V
C1806	1-117-919-11	TANTAL. CHIP	10uF	20%	6.3V
C1807	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1808	1-117-919-11	TANTAL. CHIP	10uF	20%	6.3V
C1810	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1811	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1812	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1813	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1814	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1815	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1816	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1817	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1818	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1819	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1820	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1821	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1822	1-100-611-91	CERAMIC CHIP	22uF	20%	6.3V
C1823	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1824	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1825	1-100-611-91	CERAMIC CHIP	22uF	20%	6.3V

Ref. No.	Part No.	Description				Ref. No.	Part No.	Description			
C1826	1-100-611-91	CERAMIC CHIP	22uF	20%	6.3V	C2233	1-112-716-11	CERAMIC CHIP	0.1uF	10%	6.3V
C1827	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C2234	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1828	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C2235	1-100-842-91	TANTAL. CHIP	47uF	20%	6.3V
C1829	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C2401	1-127-895-91	TANTAL. CHIP	22uF	20%	4V
C1830	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C2402	1-100-505-91	CERAMIC CHIP	0.1uF	20%	16V
C1831	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C2403	1-100-505-91	CERAMIC CHIP	0.1uF	20%	16V
C1833	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C2405	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C1834	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C2406	1-137-710-91	CERAMIC CHIP	10uF	20%	6.3V
C1835	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C2601	1-100-507-91	CERAMIC CHIP	4.7uF	20%	6.3V
C1836	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C2602	1-100-507-91	CERAMIC CHIP	4.7uF	20%	6.3V
C1837	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C2603	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1838	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C2605	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C1839	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C2606	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C1840	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C2607	1-100-507-91	CERAMIC CHIP	4.7uF	20%	6.3V
C1841	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C2608	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2001	1-127-895-91	TANTAL. CHIP	22uF	20%	4V	C2609	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2003	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C2610	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C2004	1-165-884-91	CERAMIC CHIP	2.2uF	10%	6.3V	C2611	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2005	1-165-884-91	CERAMIC CHIP	2.2uF	10%	6.3V	C2612	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C2006	1-165-884-91	CERAMIC CHIP	2.2uF	10%	6.3V	C2613	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2007	1-127-574-91	TANTAL. CHIP	22uF	20%	6.3V	C2615	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C2008	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	C2616	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2009	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	C2618	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C2010	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	C2619	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2011	1-127-895-91	TANTAL. CHIP	22uF	20%	4V	C2621	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C2012	1-127-895-91	TANTAL. CHIP	22uF	20%	4V	C2622	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2013	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	C2802	1-100-507-91	CERAMIC CHIP	4.7uF	20%	6.3V
C2201	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V	C2803	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2202	1-117-919-11	TANTAL. CHIP	10uF	20%	6.3V	C2804	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2203	1-100-842-91	TANTAL. CHIP	47uF	20%	6.3V	C2805	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2204	1-100-842-91	TANTAL. CHIP	47uF	20%	6.3V	C2806	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2205	1-117-919-11	TANTAL. CHIP	10uF	20%	6.3V	C2808	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2206	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C2809	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2207	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C2810	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2208	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C2813	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2209	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C2814	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2210	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C2815	1-100-507-91	CERAMIC CHIP	4.7uF	20%	6.3V
C2211	1-127-895-91	TANTAL. CHIP	22uF	20%	4V	C2816	1-100-507-91	CERAMIC CHIP	4.7uF	20%	6.3V
C2212	1-127-895-91	TANTAL. CHIP	22uF	20%	4V	C2817	1-100-507-91	CERAMIC CHIP	4.7uF	20%	6.3V
C2213	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C2818	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2214	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C2820	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2215	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C2821	1-100-507-91	CERAMIC CHIP	4.7uF	20%	6.3V
C2217	1-100-505-91	CERAMIC CHIP	0.1uF	20%	16V	C3001	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2218	1-100-505-91	CERAMIC CHIP	0.1uF	20%	16V	C3003	1-137-710-91	CERAMIC CHIP	10uF	20%	6.3V
C2219	1-127-895-91	TANTAL. CHIP	22uF	20%	4V	C3004	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C2220	1-127-895-91	TANTAL. CHIP	22uF	20%	4V	C3006	1-100-539-91	TANTAL. CHIP	47uF	20%	6.3V
C2221	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C3007	1-100-539-91	TANTAL. CHIP	47uF	20%	6.3V
C2222	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C3008	1-137-710-91	CERAMIC CHIP	10uF	20%	6.3V
C2223	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C3010	1-137-710-91	CERAMIC CHIP	10uF	20%	6.3V
C2224	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C3011	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C2225	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C3012	1-137-710-91	CERAMIC CHIP	10uF	20%	6.3V
C2226	1-112-716-11	CERAMIC CHIP	0.1uF	10%	6.3V	C3013	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C2227	1-100-842-91	TANTAL. CHIP	47uF	20%	6.3V	(NTSC: V1J/V1U/V1N)					
C2228	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C3014	1-165-884-91	CERAMIC CHIP	2.2uF	10%	6.3V
C2229	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C3015	1-165-884-91	CERAMIC CHIP	2.2uF	10%	6.3V
C2230	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C3016	1-137-710-91	CERAMIC CHIP	10uF	20%	6.3V
C2231	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C3018	1-117-919-11	TANTAL. CHIP	10uF	20%	6.3V
C2232	1-112-716-11	CERAMIC CHIP	0.1uF	10%	6.3V						

Ref. No.	Part No.	Description			
C3019	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C3022	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C3023	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3024	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3025	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C3026	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C3028	1-137-710-91	CERAMIC CHIP	10uF	20%	6.3V
C3029	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3031	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C3033	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3035	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C3036	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C3037	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C3038	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3039	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C3040	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C3042	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C3047	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C3049	1-117-919-11	TANTAL. CHIP	10uF	20%	6.3V
C3051	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C3052	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C3053	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C3054	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C3061	1-137-710-91	CERAMIC CHIP	10uF	20%	6.3V
C3062	1-137-710-91	CERAMIC CHIP	10uF	20%	6.3V
C3064	1-137-710-91	CERAMIC CHIP	10uF	20%	6.3V
C3065	1-137-710-91	CERAMIC CHIP	10uF	20%	6.3V
C3078	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C3079	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C3090	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C3091	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3092	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3093	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C3094	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3096	1-112-300-91	CERAMIC CHIP	4.7uF	10%	10V
C3097	1-112-300-91	CERAMIC CHIP	4.7uF	10%	10V
C3098	1-112-300-91	CERAMIC CHIP	4.7uF	10%	10V
C3099	1-112-300-91	CERAMIC CHIP	4.7uF	10%	10V
C3100	1-100-660-91	CERAMIC CHIP	1uF	10%	10V
C3115	1-100-352-91	CERAMIC CHIP	1uF	20%	16V
C3116	1-100-352-91	CERAMIC CHIP	1uF	20%	16V
C3121	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C3122	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3123	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3124	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3128	1-117-919-11	TANTAL. CHIP	10uF	20%	6.3V
C3201	1-112-716-11	CERAMIC CHIP	0.1uF	10%	6.3V
C3203	1-112-716-11	CERAMIC CHIP	0.1uF	10%	6.3V
C3206	1-112-716-11	CERAMIC CHIP	0.1uF	10%	6.3V
C3208	1-112-716-11	CERAMIC CHIP	0.1uF	10%	6.3V
C3209	1-112-716-11	CERAMIC CHIP	0.1uF	10%	6.3V
C3210	1-112-716-11	CERAMIC CHIP	0.1uF	10%	6.3V
C3211	1-112-716-11	CERAMIC CHIP	0.1uF	10%	6.3V
C3212	1-112-716-11	CERAMIC CHIP	0.1uF	10%	6.3V
C3214	1-117-919-11	TANTAL. CHIP	10uF	20%	6.3V
C3215	1-117-919-11	TANTAL. CHIP	10uF	20%	6.3V
C3216	1-117-919-11	TANTAL. CHIP	10uF	20%	6.3V
C3401	1-137-710-91	CERAMIC CHIP	10uF	20%	6.3V

Ref. No.	Part No.	Description			
C3402	1-164-928-11	CERAMIC CHIP	270PF	5%	16V
C3403	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C3404	1-100-507-91	CERAMIC CHIP	4.7uF	20%	6.3V
C3405	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3407	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C3409	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3410	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3411	1-164-852-11	CERAMIC CHIP	12PF	5%	50V
C3412	1-164-852-11	CERAMIC CHIP	12PF	5%	50V
C3414	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C3415	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3416	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3418	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3420	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C3601	1-100-506-91	CERAMIC CHIP	1uF	20%	6.3V
C3602	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C3603	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C3604	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C3609	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C3611	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C3612	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C3615	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C3617	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C3619	1-164-852-11	CERAMIC CHIP	12PF	5%	50V
C3620	1-164-852-11	CERAMIC CHIP	12PF	5%	50V
C3622	1-100-505-91	CERAMIC CHIP	0.1uF	20%	16V
C3624	1-100-415-11	CERAMIC CHIP	0.47uF	10%	6.3V
C3625	1-164-931-11	CERAMIC CHIP	100PF	10%	50V
C3627	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C3629	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C3630	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C3632	1-137-710-91	CERAMIC CHIP	10uF	20%	6.3V
C3633	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C3634	1-137-710-91	CERAMIC CHIP	10uF	20%	6.3V
C3635	1-127-895-91	TANTAL. CHIP	22uF	20%	4V
C3801	1-100-505-91	CERAMIC CHIP	0.1uF	20%	16V
C3802	1-100-505-91	CERAMIC CHIP	0.1uF	20%	16V
C3803	1-127-895-91	TANTAL. CHIP	22uF	20%	4V
C3804	1-100-505-91	CERAMIC CHIP	0.1uF	20%	16V
C3805	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C3808	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C3810	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C3811	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C4001	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C4002	1-127-895-91	TANTAL. CHIP	22uF	20%	4V
C4003	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C4004	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C4005	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C4007	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C4008	1-164-850-11	CERAMIC CHIP	10PF	0.5PF	50V
C4009	1-128-702-81	CERAMIC CHIP	11PF	5%	50V
C4010	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C4011	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C4012	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C4201	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C4202	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C4204	1-164-850-11	CERAMIC CHIP	10PF	0.5PF	50V

Ref. No.	Part No.	Description				Ref. No.	Part No.	Description			
C4205	1-164-850-11	CERAMIC CHIP	10PF	0.5PF	50V	C4631	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C4206	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C4632	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C4207	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C4633	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C4208	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C4634	1-137-710-91	CERAMIC CHIP	10uF	20%	6.3V
C4209	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C4635	1-137-710-91	CERAMIC CHIP	10uF	20%	6.3V
C4210	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C4636	1-137-710-91	CERAMIC CHIP	10uF	20%	6.3V
C4211	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C4637	1-137-710-91	CERAMIC CHIP	10uF	20%	6.3V
C4212	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V	C4638	1-137-710-91	CERAMIC CHIP	10uF	20%	6.3V
C4213	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V	C4639	1-137-710-91	CERAMIC CHIP	10uF	20%	6.3V
C4215	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C4640	1-137-710-91	CERAMIC CHIP	10uF	20%	6.3V
C4216	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V	C4641	1-137-710-91	CERAMIC CHIP	10uF	20%	6.3V
C4217	1-128-632-91	CERAMIC CHIP	0.01uF	10%	6.3V	C4642	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C4218	1-128-632-91	CERAMIC CHIP	0.01uF	10%	6.3V	C4643	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V
C4219	1-128-632-91	CERAMIC CHIP	0.01uF	10%	6.3V	C4644	1-127-573-11	CERAMIC CHIP	1uF	10%	16V
C4220	1-128-632-91	CERAMIC CHIP	0.01uF	10%	6.3V	C4645	1-125-889-91	CERAMIC CHIP	2.2uF	10%	10V
C4401	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V	C4646	1-125-889-91	CERAMIC CHIP	2.2uF	10%	10V
C4402	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V	C4647	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C4403	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C4648	1-137-710-91	CERAMIC CHIP	10uF	20%	6.3V
C4405	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C4650	1-137-710-91	CERAMIC CHIP	10uF	20%	6.3V
C4406	1-164-850-11	CERAMIC CHIP	10PF	0.5PF	50V	C4651	1-165-884-91	CERAMIC CHIP	2.2uF	10%	6.3V
C4407	1-164-850-11	CERAMIC CHIP	10PF	0.5PF	50V	C4653	1-165-884-91	CERAMIC CHIP	2.2uF	10%	6.3V
C4408	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C4654	1-137-710-91	CERAMIC CHIP	10uF	20%	6.3V
C4409	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C4655	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C4410	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C4656	1-100-503-11	CERAMIC CHIP	4.7uF	20%	10V
C4411	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C4657	1-125-827-91	CERAMIC CHIP	1uF	10%	25V
C4412	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V	C4658	1-125-827-91	CERAMIC CHIP	1uF	10%	25V
C4413	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V	C4659	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C4415	1-100-505-91	CERAMIC CHIP	0.1uF	20%	16V	C4661	1-137-710-91	CERAMIC CHIP	10uF	20%	6.3V
C4416	1-100-505-91	CERAMIC CHIP	0.1uF	20%	16V	C4662	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C4417	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C4665	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C4418	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C4666	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C4601	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C4667	1-125-827-91	CERAMIC CHIP	1uF	10%	25V
C4602	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C4668	1-125-827-91	CERAMIC CHIP	1uF	10%	25V
C4603	1-107-819-11	CERAMIC CHIP	0.022uF	10%	16V	C4670	1-165-884-91	CERAMIC CHIP	2.2uF	10%	6.3V
C4604	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C4671	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C4605	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	C4672	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C4606	1-119-923-11	CERAMIC CHIP	0.047uF	10%	10V	C4674	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C4607	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C4676	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C4608	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C4677	1-125-889-91	CERAMIC CHIP	2.2uF	10%	10V
C4609	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	C4678	1-112-717-91	CERAMIC CHIP	1uF	10%	6.3V
C4610	1-137-710-91	CERAMIC CHIP	10uF	20%	6.3V	C4679	1-127-861-11	CERAMIC CHIP	2.2uF	10%	16V
C4611	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C4680	1-127-861-11	CERAMIC CHIP	2.2uF	10%	16V
C4612	1-165-884-91	CERAMIC CHIP	2.2uF	10%	6.3V	C4681	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C4615	1-165-875-11	CERAMIC CHIP	10uF	10%	10V	C4682	1-165-875-11	CERAMIC CHIP	10uF	10%	10V
C4616	1-165-875-11	CERAMIC CHIP	10uF	10%	10V	C4683	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C4617	1-165-875-11	CERAMIC CHIP	10uF	10%	10V	C4684	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C4618	1-165-875-11	CERAMIC CHIP	10uF	10%	10V	C4685	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C4619	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V	C4686	1-100-672-11	CERAMIC CHIP	10uF	20%	16V
C4621	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	< CONNECTOR >					
C4622	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	* CN1001	1-819-934-51	CONNECTOR, FPC (ZIF) 39P			
C4623	1-127-715-91	CERAMIC CHIP	0.22uF	10%	16V	* CN1002	1-820-806-21	CONNECTOR, COAXIAL (RECEPTACLE)			
C4624	1-127-772-81	CERAMIC CHIP	0.033uF	10%	10V	* CN1003	1-820-806-21	CONNECTOR, COAXIAL (RECEPTACLE)			
C4625	1-164-677-11	CERAMIC CHIP	0.033uF	10%	16V	* CN1004	1-820-806-21	CONNECTOR, COAXIAL (RECEPTACLE)			
C4626	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	CN1005	1-817-543-51	CONNECTOR, FPC (ZIF) 27P			
C4627	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	CN1006	1-779-520-12	CONNECTOR, BOARD TO BOARD 80P			
C4628	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	* CN1007	1-819-781-51	CONNECTOR, FPC (ZIF) 45P			
C4629	1-165-908-11	CERAMIC CHIP	1uF	10%	10V						
C4630	1-165-908-11	CERAMIC CHIP	1uF	10%	10V						

TT-003

Ref. No.	Part No.	Description
* CN1008	1-779-334-51	CONNECTOR, FFC/FPC 20P
CN1009	1-817-920-11	CONNECTOR, FPC (ZIF) 80P
CN1010	1-817-920-11	CONNECTOR, FPC (ZIF) 80P
* CN1011	1-816-644-51	FFC/FPC CONNECTOR (LIF) 12P
CN1012	1-817-920-11	CONNECTOR, FPC (ZIF) 80P
* CN1014	1-816-646-51	FFC/FPC CONNECTOR (LIF) 16P
CN4601	1-691-550-11	PIN, CONNECTOR (1.5MM) (SMD) 3P
CN4602	1-573-290-21	PIN, CONNECTOR (1.5MM) (SMD) 4P
< DIODE >		
D3601	6-500-776-01	DIODE MAZW068H0LS0
D4001	8-719-988-61	DIODE 1SS355TE-17
D4201	8-719-056-23	DIODE MA2S111-(K8).SO
D4202	8-719-056-23	DIODE MA2S111-(K8).SO
D4203	8-719-056-23	DIODE MA2S111-(K8).SO
D4204	8-719-056-23	DIODE MA2S111-(K8).SO
D4601	8-719-027-76	DIODE 1SS357-TPH3
D4602	8-719-081-19	DIODE 1SS383 (T5RSONY1)
D4603	8-719-027-76	DIODE 1SS357-TPH3
D4604	8-719-046-85	DIODE MA2S728
D4606	6-500-813-01	DIODE MA2SD32008S0
D4607	8-719-074-08	DIODE MA4ZD03001S0
D4608	8-719-085-52	DIODE SBS806M-TL-E
D4610	8-719-085-53	DIODE MA2SD10008S0
D4612	6-500-813-01	DIODE MA2SD32008S0
* D4613	6-501-692-01	DIODE MAZT068H08S0
< FUSE >		
△ F4601	1-576-406-21	FUSE (1.4A/32V)
△ F4603	1-576-406-21	FUSE (1.4A/32V)
△ F4604	1-576-406-21	FUSE (1.4A/32V)
△ F4605	1-576-406-21	FUSE (1.4A/32V)
△ F4606	1-576-406-21	FUSE (1.4A/32V)
△ F4607	1-576-406-21	FUSE (1.4A/32V)
< FERRITE BEAD >		
FB1401	1-414-760-21	FERRITE, EMI (SMD) (1608)
FB1402	1-414-760-21	FERRITE, EMI (SMD) (1608)
FB1601	1-414-445-11	BEAD, FERRITE (CHIP) (1608)
FB1801	1-469-082-21	INDUCTOR, FERRITE BEAD (1005)
FB1802	1-469-082-21	INDUCTOR, FERRITE BEAD (1005)
FB1803	1-469-082-21	INDUCTOR, FERRITE BEAD (1005)
FB2001	1-469-082-21	INDUCTOR, FERRITE BEAD (1005)
FB2201	1-469-082-21	INDUCTOR, FERRITE BEAD (1005)
FB2401	1-469-082-21	INDUCTOR, FERRITE BEAD (1005)
FB2601	1-469-082-21	INDUCTOR, FERRITE BEAD (1005)
FB2602	1-469-082-21	INDUCTOR, FERRITE BEAD (1005)
FB2801	1-469-082-21	INDUCTOR, FERRITE BEAD (1005)
FB3001	1-469-082-21	INDUCTOR, FERRITE BEAD (1005)
FB3002	1-469-082-21	INDUCTOR, FERRITE BEAD (1005)
FB3401	1-414-760-21	FERRITE, EMI (SMD) (1608)
FB3601	1-469-581-21	INDUCTOR, FERRITE BEAD (1005)
FB3602	1-469-581-21	INDUCTOR, FERRITE BEAD (1005)
FB3606	1-400-723-11	INDUCTOR, FERRITE BEAD (1005)
FB3607	1-414-760-21	FERRITE, EMI (SMD) (1608)
FB3608	1-414-760-21	FERRITE, EMI (SMD) (1608)
FB3610	1-414-760-21	FERRITE, EMI (SMD) (1608)

Ref. No.	Part No.	Description
FB3801	1-469-082-21	INDUCTOR, FERRITE BEAD (1005)
FB3802	1-469-082-21	INDUCTOR, FERRITE BEAD (1005)
FB3803	1-469-082-21	INDUCTOR, FERRITE BEAD (1005)
FB4202	1-414-760-21	FERRITE, EMI (SMD) (1608)
FB4401	1-414-760-21	FERRITE, EMI (SMD) (1608)
< FILTER >		
FL1801	1-234-939-21	FILTER, EMI REMOVAL (SMD)
FL3201	1-234-939-21	FILTER, EMI REMOVAL (SMD)
FL3202	1-234-939-21	FILTER, EMI REMOVAL (SMD)
FL3203	1-234-939-21	FILTER, EMI REMOVAL (SMD)
< IC >		
IC1101	6-706-689-01	IC HD74ALVC2G34USE-E
IC1102	6-706-689-01	IC HD74ALVC2G34USE-E
IC1103	6-706-689-01	IC HD74ALVC2G34USE-E
IC1104	6-703-977-01	IC R1114Q331D-TR-FA
IC1105	6-703-977-01	IC R1114Q331D-TR-FA
* IC1106	6-708-444-01	IC R1114Q281D-TR-FA
IC1107	6-703-976-01	IC R1114Q181D-TR-FA
* IC1201	6-709-440-01	IC VSP2435ZWDR
* IC1203	6-709-440-01	IC VSP2435ZWDR
* IC1401	6-710-308-01	IC CXD9891GG
* IC1601	6-710-302-01	IC K4M56323LG-HN75T
* IC1801	6-709-775-01	IC S4DF006X02-Y070-K02K4C
IC2001	6-708-108-01	IC TLS26A100PFBR
* IC2201	8-753-276-37	IC CXD3195AGG-T6
* IC2401	6-710-306-01	IC HYE18M256320CFX-7.5
IC2402	(Not supplied)	IC S29AL016D70BF1013
IC2601	8-753-231-06	IC CXD3185GG-T6
IC2802	8-752-421-65	IC CXD3167GA-T6
IC3001	6-707-435-01	IC AN12921A-VB
IC3002	6-707-435-01	IC AN12921A-VB
* IC3005	6-709-328-01	IC AK4554VL-8-L
IC3012	8-759-572-38	IC NJM2140R
* IC3201	6-709-444-01	IC T6UL2XBG-0001 (EO2)
* IC3401	6-710-516-01	IC SN200507002ZZCR
* IC3601	6-709-454-01	IC S4LF033X0A-Y070
IC3602	6-702-708-01	IC TC7SZU04AFE (TE85R)
IC3804	(Not supplied)	IC S99-50031-33-ER
IC3805	6-704-974-01	IC AK6512CAS-E2
IC3806	6-702-029-01	IC MD56V16160F-10LAZ03B
* IC4001	6-807-122-01	IC MB89083LGA-G-129-ERE1
* IC4201	6-807-213-01	IC MB91195ABGL-G-228-ERE1
* IC4202	6-706-013-01	IC AK6514CF-E2
* IC4401	6-807-176-01	IC MB91195ABGL-G-224-ERE1
* IC4601	6-710-636-01	IC MB44C005BBGL-G-ERE1
* IC4602	6-708-464-01	IC R1114Q251D-TR-FA
* IC4603	6-708-707-01	IC AN31925A-NL
IC4604	6-708-133-01	IC TK72130CSCL-G
< COIL >		
L1202	1-469-967-21	INDUCTOR 10uH
L1203	1-400-588-11	INDUCTOR 10uH
L1205	1-469-967-21	INDUCTOR 10uH
L1206	1-400-588-11	INDUCTOR 10uH
L1401	1-469-555-21	INDUCTOR 10uH

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description
L1402	1-469-555-21	INDUCTOR 10uH
L1403	1-469-555-21	INDUCTOR 10uH
L1404	1-414-755-11	INDUCTOR 22uH
L1801	1-400-676-11	INDUCTOR 22uH
L1802	1-400-675-11	INDUCTOR 10uH
L1803	1-400-588-11	INDUCTOR 10uH
L1804	1-400-588-11	INDUCTOR 10uH
L1805	1-400-676-11	INDUCTOR 22uH
L2001	1-400-588-11	INDUCTOR 10uH
L2002	1-400-588-11	INDUCTOR 10uH
L2003	1-400-588-11	INDUCTOR 10uH
L2201	1-400-675-11	INDUCTOR 10uH
L2202	1-400-676-11	INDUCTOR 22uH
L2203	1-400-676-11	INDUCTOR 22uH
L2204	1-400-676-11	INDUCTOR 22uH
L2205	1-400-676-11	INDUCTOR 22uH
L2802	1-400-588-11	INDUCTOR 10uH
L2803	1-400-588-11	INDUCTOR 10uH
L2804	1-400-588-11	INDUCTOR 10uH
L2805	1-400-588-11	INDUCTOR 10uH
L2806	1-400-588-11	INDUCTOR 10uH
L3001	1-414-771-91	INDUCTOR 10uH
L3003	1-414-771-91	INDUCTOR 10uH
L3004	1-400-588-11	INDUCTOR 10uH
L3006	1-414-771-91	INDUCTOR 10uH
L3008	1-414-771-91	INDUCTOR 10uH
L3010	1-400-588-11	INDUCTOR 10uH
L3014	1-400-588-11	INDUCTOR 10uH
L3016	1-414-771-91	INDUCTOR 10uH
L3401	1-400-588-11	INDUCTOR 10uH
L4601	1-456-136-21	INDUCTOR 10uH
L4602	1-456-136-21	INDUCTOR 10uH
L4603	1-456-497-11	INDUCTOR 15uH
L4604	1-456-136-21	INDUCTOR 10uH
L4605	1-456-497-11	INDUCTOR 15uH
L4606	1-456-136-21	INDUCTOR 10uH
L4607	1-456-497-11	INDUCTOR 15uH
L4608	1-456-497-11	INDUCTOR 15uH
L4609	1-456-497-11	INDUCTOR 15uH
L4610	1-469-549-21	INDUCTOR 1uH
L4611	1-456-498-11	INDUCTOR 47uH
L4614	1-469-549-21	INDUCTOR 1uH
L4615	1-469-551-21	INDUCTOR 2.2uH
L4616	1-469-549-21	INDUCTOR 1uH
L4618	1-469-549-21	INDUCTOR 1uH
L4621	1-469-561-21	INDUCTOR 100uH
L4623	1-469-551-21	INDUCTOR 2.2uH
L4624	1-469-555-21	INDUCTOR 10uH
L4627	1-469-549-21	INDUCTOR 1uH
L4628	1-469-549-21	INDUCTOR 1uH
L4629	1-469-553-21	INDUCTOR 4.7uH
L4630	1-469-555-21	INDUCTOR 10uH
< LINE FILTER >		
LF3401	1-400-633-21	COMMON MODE CHOKE COIL
LF3402	1-400-633-21	COMMON MODE CHOKE COIL
LF3601	1-456-583-11	COMMON MODE CHOKE COIL
LF4601	1-411-957-11	FILTER, COMMON MODE

Ref. No.	Part No.	Description
< TRANSISTOR >		
Q2001	6-550-232-01	TRANSISTOR 2SA2029T2LQ/R
Q2002	6-550-232-01	TRANSISTOR 2SA2029T2LQ/R
Q2003	6-550-232-01	TRANSISTOR 2SA2029T2LQ/R
Q2004	6-550-232-01	TRANSISTOR 2SA2029T2LQ/R
Q2005	6-550-232-01	TRANSISTOR 2SA2029T2LQ/R
Q2006	6-550-232-01	TRANSISTOR 2SA2029T2LQ/R
Q3001	8-729-054-52	TRANSISTOR UP04216008S0
Q3002	8-729-054-52	TRANSISTOR UP04216008S0
Q3003	8-729-056-73	TRANSISTOR CPH6501-TL-E
Q3601	6-550-119-01	TRANSISTOR DTC144EMT2L
Q3602	6-550-237-01	TRANSISTOR 2SC5658T2LQ/R
Q3603	6-550-234-01	TRANSISTOR UNR32A300LS0
Q3604	6-550-239-01	TRANSISTOR DTA144EMT2L
Q3605	8-729-053-54	TRANSISTOR HN1A01FE-Y/GR (TPLR3)
Q3606	6-550-174-01	TRANSISTOR 2SA2030T2L
Q4001	6-551-345-01	TRANSISTOR SSM6L16FE (TPLR3)
Q4002	6-550-119-01	TRANSISTOR DTC144EMT2L
Q4601	6-551-115-01	TRANSISTOR ECH8631-S-TL-E
Q4602	8-729-047-68	TRANSISTOR SSM3K03FE (TPL3)
Q4603	8-729-047-68	TRANSISTOR SSM3K03FE (TPL3)
Q4604	6-550-119-01	TRANSISTOR DTC144EMT2L
Q4605	8-729-043-60	TRANSISTOR CPH6102-TL-E
Q4606	8-729-037-74	TRANSISTOR UN9213J-(TX).S0
Q4607	6-550-006-01	TRANSISTOR UN911BJ-(K8).S0
Q4608	8-729-056-72	TRANSISTOR MCH5805-TL-E
Q4609	8-729-056-02	TRANSISTOR MCH5804-TL-E
< RESISTOR >		
R1001	1-218-947-11	RES-CHIP 330 5% 1/16W
R1002	1-218-935-11	RES-CHIP 33 5% 1/16W
R1003	1-218-935-11	RES-CHIP 33 5% 1/16W
R1004	1-218-935-11	RES-CHIP 33 5% 1/16W
R1005	1-218-990-81	SHORT CHIP 0
R1006	1-218-990-81	SHORT CHIP 0
R1007	1-218-990-81	SHORT CHIP 0
R1009	1-218-960-11	RES-CHIP 3.9K 5% 1/16W
R1010	1-218-957-11	RES-CHIP 2.2K 5% 1/16W
R1012	1-218-955-11	RES-CHIP 1.5K 5% 1/16W
R1015	1-218-954-11	RES-CHIP 1.2K 5% 1/16W
R1021	1-218-990-81	SHORT CHIP 0
R1026	1-218-990-81	SHORT CHIP 0
R1029	1-240-678-91	METAL CHIP 33 5% 1/20W
R1030	1-240-678-91	METAL CHIP 33 5% 1/20W
R1031	1-240-678-91	METAL CHIP 33 5% 1/20W
R1032	1-240-678-91	METAL CHIP 33 5% 1/20W
R1033	1-240-678-91	METAL CHIP 33 5% 1/20W
R1034	1-240-678-91	METAL CHIP 33 5% 1/20W
R1035	1-240-678-91	METAL CHIP 33 5% 1/20W
R1036	1-240-678-91	METAL CHIP 33 5% 1/20W
R1037	1-240-678-91	METAL CHIP 33 5% 1/20W
R1038	1-240-678-91	METAL CHIP 33 5% 1/20W
R1039	1-240-678-91	METAL CHIP 33 5% 1/20W
R1040	1-240-678-91	METAL CHIP 33 5% 1/20W
R1041	1-240-678-91	METAL CHIP 33 5% 1/20W
R1042	1-240-678-91	METAL CHIP 33 5% 1/20W

Ref. No.	Part No.	Description			
R1043	1-240-678-91	METAL CHIP	33	5%	1/20W
R1044	1-240-678-91	METAL CHIP	33	5%	1/20W
R1045	1-240-678-91	METAL CHIP	33	5%	1/20W
R1046	1-240-678-91	METAL CHIP	33	5%	1/20W
R1047	1-240-678-91	METAL CHIP	33	5%	1/20W
R1048	1-240-678-91	METAL CHIP	33	5%	1/20W
R1049	1-240-678-91	METAL CHIP	33	5%	1/20W
R1050	1-240-678-91	METAL CHIP	33	5%	1/20W
R1051	1-240-678-91	METAL CHIP	33	5%	1/20W
R1052	1-240-678-91	METAL CHIP	33	5%	1/20W
R1053	1-240-678-91	METAL CHIP	33	5%	1/20W
R1054	1-240-678-91	METAL CHIP	33	5%	1/20W
R1055	1-240-678-91	METAL CHIP	33	5%	1/20W
R1056	1-240-678-91	METAL CHIP	33	5%	1/20W
R1057	1-240-678-91	METAL CHIP	33	5%	1/20W
R1058	1-240-678-91	METAL CHIP	33	5%	1/20W
R1059	1-240-678-91	METAL CHIP	33	5%	1/20W
R1060	1-240-678-91	METAL CHIP	33	5%	1/20W
R1061	1-240-678-91	METAL CHIP	33	5%	1/20W
R1062	1-240-678-91	METAL CHIP	33	5%	1/20W
R1063	1-240-678-91	METAL CHIP	33	5%	1/20W
R1222	1-218-953-11	RES-CHIP	1K	5%	1/16W
R1224	1-218-990-81	SHORT CHIP	0		
R1237	1-218-953-11	RES-CHIP	1K	5%	1/16W
R1238	1-218-990-81	SHORT CHIP	0		
R1401	1-218-953-11	RES-CHIP	1K	5%	1/16W
R1402	1-218-990-81	SHORT CHIP	0		
R1403	1-218-977-11	RES-CHIP	100K	5%	1/16W
R1404	1-218-977-11	RES-CHIP	100K	5%	1/16W
R1405	1-218-990-81	SHORT CHIP	0		
R1407	1-218-940-11	RES-CHIP	82	5%	1/16W
R1408	1-218-953-11	RES-CHIP	1K	5%	1/16W
R1412	1-218-990-81	SHORT CHIP	0		
R1413	1-218-947-11	RES-CHIP	330	5%	1/16W
R1414	1-218-990-81	SHORT CHIP	0		
R1416	1-218-990-81	SHORT CHIP	0		
R1421	1-218-990-81	SHORT CHIP	0		
R1422	1-218-977-11	RES-CHIP	100K	5%	1/16W
R1805	1-218-977-11	RES-CHIP	100K	5%	1/16W
R1807	1-218-990-81	SHORT CHIP	0		
R1808	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R1809	1-218-990-81	SHORT CHIP	0		
R1810	1-218-935-11	RES-CHIP	33	5%	1/16W
R1811	1-218-937-11	RES-CHIP	47	5%	1/16W
R1812	1-218-990-81	SHORT CHIP	0		
R1813	1-218-990-81	SHORT CHIP	0		
R1814	1-218-953-11	RES-CHIP	1K	5%	1/16W
R1815	1-218-990-81	SHORT CHIP	0		
R1816	1-218-990-81	SHORT CHIP	0		
R1817	1-218-929-11	RES-CHIP	10	5%	1/16W
R1818	1-218-935-11	RES-CHIP	33	5%	1/16W
R1819	1-218-965-11	RES-CHIP	10K	5%	1/16W
R1821	1-218-990-81	SHORT CHIP	0		
R1822	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R1823	1-218-990-81	SHORT CHIP	0		
R1825	1-218-990-81	SHORT CHIP	0		
R1827	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R1829	1-218-973-11	RES-CHIP	47K	5%	1/16W

Ref. No.	Part No.	Description			
R1831	1-218-990-81	SHORT CHIP	0		
R1832	1-218-935-11	RES-CHIP	33	5%	1/16W
R1833	1-218-965-11	RES-CHIP	10K	5%	1/16W
R2001	1-208-671-11	METAL CHIP	330	0.5%	1/16W
R2002	1-208-671-11	METAL CHIP	330	0.5%	1/16W
R2003	1-208-671-11	METAL CHIP	330	0.5%	1/16W
R2004	1-208-671-11	METAL CHIP	330	0.5%	1/16W
R2005	1-208-671-11	METAL CHIP	330	0.5%	1/16W
R2006	1-208-671-11	METAL CHIP	330	0.5%	1/16W
R2007	1-208-869-11	METAL CHIP	180	0.5%	1/16W
R2008	1-208-869-11	METAL CHIP	180	0.5%	1/16W
R2009	1-208-869-11	METAL CHIP	180	0.5%	1/16W
R2010	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2011	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2012	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2013	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2014	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2015	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2029	1-208-860-81	METAL CHIP	75	0.5%	1/16W
R2030	1-208-860-81	METAL CHIP	75	0.5%	1/16W
R2031	1-208-860-81	METAL CHIP	75	0.5%	1/16W
R2205	1-218-990-81	SHORT CHIP	0		
R2206	1-218-990-81	SHORT CHIP	0		
R2207	1-218-990-81	SHORT CHIP	0		
R2208	1-218-990-81	SHORT CHIP	0		
R2209	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2210	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2211	1-218-990-81	SHORT CHIP	0		
R2212	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2213	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2214	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2215	1-218-990-81	SHORT CHIP	0		
R2216	1-218-977-11	RES-CHIP	100K	5%	1/16W
R2217	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2218	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2219	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2220	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2221	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2222	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2223	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2224	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2225	1-216-864-11	SHORT CHIP	0		
R2226	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2228	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2230	1-218-990-81	SHORT CHIP	0		
R2231	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2232	1-218-990-81	SHORT CHIP	0		
R2233	1-694-535-91	SHORT CHIP	0		
R2234	1-218-990-81	SHORT CHIP	0		
R2235	1-694-535-91	SHORT CHIP	0		
R2236	1-218-990-81	SHORT CHIP	0		
R2237	1-218-990-81	SHORT CHIP	0		
R2238	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R2239	1-218-990-81	SHORT CHIP	0		
R2602	1-218-990-81	SHORT CHIP	0		
R2603	1-218-990-81	SHORT CHIP	0		
R2604	1-218-990-81	SHORT CHIP	0		

Ref. No.	Part No.	Description				Ref. No.	Part No.	Description			
R2605	1-218-990-81	SHORT CHIP	0			R3412	1-218-953-11	RES-CHIP	1K	5%	1/16W
R2606	1-218-973-11	RES-CHIP	47K	5%	1/16W	R3601	1-218-953-11	RES-CHIP	1K	5%	1/16W
R2607	1-218-953-11	RES-CHIP	1K	5%	1/16W	R3602	1-218-953-11	RES-CHIP	1K	5%	1/16W
R2608	1-218-953-11	RES-CHIP	1K	5%	1/16W	R3603	1-218-953-11	RES-CHIP	1K	5%	1/16W
R2609	1-218-990-81	SHORT CHIP	0			R3604	1-218-953-11	RES-CHIP	1K	5%	1/16W
R2610	1-218-990-81	SHORT CHIP	0			R3605	1-218-973-11	RES-CHIP	47K	5%	1/16W
R2611	1-218-990-81	SHORT CHIP	0			R3606	1-218-953-11	RES-CHIP	1K	5%	1/16W
R2612	1-218-990-81	SHORT CHIP	0			R3607	1-218-953-11	RES-CHIP	1K	5%	1/16W
R2802	1-218-990-81	SHORT CHIP	0			R3608	1-218-985-11	RES-CHIP	470K	5%	1/16W
R2804	1-218-990-81	SHORT CHIP	0			R3609	1-218-985-11	RES-CHIP	470K	5%	1/16W
R2808	1-218-990-81	SHORT CHIP	0			R3610	1-218-985-11	RES-CHIP	470K	5%	1/16W
R2809	1-218-990-81	SHORT CHIP	0			R3611	1-218-985-11	RES-CHIP	470K	5%	1/16W
R3001	1-216-805-11	METAL CHIP	47	5%	1/10W	R3613	1-218-977-11	RES-CHIP	100K	5%	1/16W
R3002	1-216-805-11	METAL CHIP	47	5%	1/10W	R3614	1-218-977-11	RES-CHIP	100K	5%	1/16W
R3005	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3616	1-218-977-11	RES-CHIP	100K	5%	1/16W
R3006	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3617	1-218-977-11	RES-CHIP	100K	5%	1/16W
R3007	1-220-169-11	RES-CHIP	75	5%	1/16W	R3618	1-218-977-11	RES-CHIP	100K	5%	1/16W
R3008	1-220-169-11	RES-CHIP	75	5%	1/16W	R3619	1-208-645-11	METAL CHIP	27	0.5%	1/16W
R3009	1-220-169-11	RES-CHIP	75	5%	1/16W	R3620	1-208-645-11	METAL CHIP	27	0.5%	1/16W
R3011	1-218-971-11	RES-CHIP	33K	5%	1/16W	R3622	1-218-989-11	RES-CHIP	1M	5%	1/16W
R3012	1-208-692-11	METAL CHIP	2.4K	0.5%	1/16W	R3623	1-218-985-11	RES-CHIP	470K	5%	1/16W
R3013	1-218-989-11	RES-CHIP	1M	5%	1/16W	R3624	1-218-990-81	SHORT CHIP	0		
R3015	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3625	1-218-990-81	SHORT CHIP	0		
(NTSC: V1J/V1U/V1N)						R3627	1-218-990-81	SHORT CHIP	0		
R3016	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R3628	1-218-933-11	RES-CHIP	22	5%	1/16W
R3021	1-218-977-11	RES-CHIP	100K	5%	1/16W	R3630	1-218-977-11	RES-CHIP	100K	5%	1/16W
R3022	1-218-977-11	RES-CHIP	100K	5%	1/16W	R3631	1-218-985-11	RES-CHIP	470K	5%	1/16W
R3026	1-218-990-81	SHORT CHIP	0			R3632	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3034	1-218-990-81	SHORT CHIP	0			R3633	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3054	1-218-990-81	SHORT CHIP	0			R3634	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3061	1-219-598-11	METAL CHIP	47K	0.5%	1/16W	R3635	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3062	1-219-598-11	METAL CHIP	47K	0.5%	1/16W	R3636	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3063	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3637	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3064	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3638	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3065	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3639	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3066	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3640	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3067	1-219-598-11	METAL CHIP	47K	0.5%	1/16W	R3641	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3068	1-219-598-11	METAL CHIP	47K	0.5%	1/16W	R3642	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3111	1-218-989-11	RES-CHIP	1M	5%	1/16W	R3643	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3112	1-218-947-11	RES-CHIP	330	5%	1/16W	R3644	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3113	1-218-947-11	RES-CHIP	330	5%	1/16W	R3645	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3118	1-218-977-11	RES-CHIP	100K	5%	1/16W	R3646	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3119	1-218-990-81	SHORT CHIP	0			R3647	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3120	1-218-990-81	SHORT CHIP	0			R3648	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3201	1-240-672-11	METAL CHIP	10	5%	1/20W	R3649	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3202	1-240-672-11	METAL CHIP	10	5%	1/20W	R3650	1-218-959-11	RES-CHIP	3.3K	5%	1/16W
R3204	1-694-535-91	SHORT CHIP	0			R3651	1-218-959-11	RES-CHIP	3.3K	5%	1/16W
R3205	1-240-678-91	METAL CHIP	33	5%	1/20W	R3652	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3401	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3653	1-218-940-11	RES-CHIP	82	5%	1/16W
R3402	1-218-965-11	RES-CHIP	10K	5%	1/16W	R3655	1-218-977-11	RES-CHIP	100K	5%	1/16W
R3403	1-208-652-11	METAL CHIP	51	0.5%	1/16W	R3661	1-218-953-11	RES-CHIP	1K	5%	1/16W
R3404	1-208-652-11	METAL CHIP	51	0.5%	1/16W	R3662	1-218-954-11	RES-CHIP	1.2K	5%	1/16W
R3405	1-208-652-11	METAL CHIP	51	0.5%	1/16W	R3663	1-218-955-11	RES-CHIP	1.5K	5%	1/16W
R3406	1-208-652-11	METAL CHIP	51	0.5%	1/16W	R3664	1-218-962-11	RES-CHIP	5.6K	5%	1/16W
R3408	1-218-953-11	RES-CHIP	1K	5%	1/16W	R3665	1-218-959-11	RES-CHIP	3.3K	5%	1/16W
R3409	1-208-702-11	METAL CHIP	6.2K	0.5%	1/16W	R3666	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R3410	1-218-990-81	SHORT CHIP	0			R3668	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R3411	1-218-990-81	SHORT CHIP	0								

Ref. No.	Part No.	Description			
R3669	1-218-955-11	RES-CHIP	1.5K	5%	1/16W
R3801	1-218-977-11	RES-CHIP	100K	5%	1/16W
R3802	1-218-977-11	RES-CHIP	100K	5%	1/16W
R3803	1-218-990-81	SHORT CHIP	0		
R3806	1-218-977-11	RES-CHIP	100K	5%	1/16W
R3807	1-218-990-81	SHORT CHIP	0		
R3808	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4002	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R4003	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R4005	1-218-989-11	RES-CHIP	1M	5%	1/16W
R4006	1-218-985-11	RES-CHIP	470K	5%	1/16W
R4007	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4008	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4009	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4010	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4011	1-218-973-11	RES-CHIP	47K	5%	1/16W
R4012	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4013	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4014	1-218-979-11	RES-CHIP	150K	5%	1/16W
R4015	1-218-975-11	RES-CHIP	68K	5%	1/16W
R4016	1-218-975-11	RES-CHIP	68K	5%	1/16W
		(NTSC: V1J/V1U/V1N)			
R4016	1-218-979-11	RES-CHIP	150K	5%	1/16W
		(PAL: V1E/V1P/V1C)			
R4017	1-218-975-11	RES-CHIP	68K	5%	1/16W
		(PAL: V1E/V1P/V1C)			
R4017	1-218-979-11	RES-CHIP	150K	5%	1/16W
		(NTSC: V1J/V1U/V1N)			
R4018	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4020	1-219-570-11	METAL CHIP	10M	5%	1/10W
R4021	1-218-990-81	SHORT CHIP	0		
R4022	1-218-989-11	RES-CHIP	1M	5%	1/16W
R4023	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4024	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W
R4026	1-208-893-11	METAL CHIP	1.8K	0.5%	1/16W
R4027	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4028	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4029	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4030	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4031	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4032	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4033	1-218-989-11	RES-CHIP	1M	5%	1/16W
R4034	1-218-949-11	RES-CHIP	470	5%	1/16W
R4035	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4036	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4202	1-218-990-81	SHORT CHIP	0		
R4203	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4204	1-218-977-11	RES-CHIP	100K	5%	1/16W
		(NTSC: V1J/V1U/V1N)			
R4205	1-218-990-81	SHORT CHIP	0 (PAL: V1E/V1P/V1C)		
R4206	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4207	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4208	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4209	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4210	1-218-941-81	RES-CHIP	100	5%	1/16W
R4211	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4212	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4213	1-218-990-81	SHORT CHIP	0		
R4215	1-218-977-11	RES-CHIP	100K	5%	1/16W

Ref. No.	Part No.	Description			
R4216	1-218-985-11	RES-CHIP	470K	5%	1/16W
R4217	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4218	1-218-989-11	RES-CHIP	1M	5%	1/16W
R4219	1-218-989-11	RES-CHIP	1M	5%	1/16W
R4220	1-218-973-11	RES-CHIP	47K	5%	1/16W
R4221	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4222	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4223	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4225	1-240-695-91	METAL CHIP	1K	5%	1/20W
R4226	1-240-695-91	METAL CHIP	1K	5%	1/20W
R4227	1-240-695-91	METAL CHIP	1K	5%	1/20W
R4228	1-240-695-91	METAL CHIP	1K	5%	1/20W
R4229	1-240-710-91	METAL CHIP	18K	5%	1/20W
R4230	1-240-710-91	METAL CHIP	18K	5%	1/20W
R4231	1-240-710-91	METAL CHIP	18K	5%	1/20W
R4232	1-240-710-91	METAL CHIP	18K	5%	1/20W
R4401	1-218-941-81	RES-CHIP	100	5%	1/16W
R4402	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4403	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4405	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4406	1-218-990-81	SHORT CHIP	0		
R4408	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4409	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4411	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4413	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4414	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4415	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4417	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4418	1-218-985-11	RES-CHIP	470K	5%	1/16W
R4419	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4420	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4421	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4423	1-218-985-11	RES-CHIP	470K	5%	1/16W
R4424	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4425	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4426	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4427	1-218-981-11	RES-CHIP	220K	5%	1/16W
R4428	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4429	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4430	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4431	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4432	1-218-975-11	RES-CHIP	68K	5%	1/16W
R4434	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4437	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4438	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4601	1-218-989-11	RES-CHIP	1M	5%	1/16W
R4602	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R4604	1-216-821-11	METAL CHIP	1K	5%	1/10W
R4605	1-218-977-11	RES-CHIP	100K	5%	1/16W
R4606	1-218-990-81	SHORT CHIP	0		
R4607	1-216-150-91	RES-CHIP	10	5%	1/8W
R4608	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4609	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R4610	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R4611	1-218-990-81	SHORT CHIP	0		
R4612	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R4613	1-216-789-11	METAL CHIP	2.2	5%	1/10W

TT-003

UU-003

WW-003

XX-015

Ref. No.	Part No.	Description			
R4614	1-218-941-81	RES-CHIP	100	5%	1/16W
R4615	1-218-990-81	SHORT CHIP	0		
R4616	1-218-944-11	RES-CHIP	180	5%	1/16W
R4617	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R4618	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R4619	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R4620	1-218-969-11	RES-CHIP	22K	5%	1/16W
R4621	1-218-987-11	RES-CHIP	680K	5%	1/16W
R4622	1-218-979-11	RES-CHIP	150K	5%	1/16W
R4623	1-218-951-11	RES-CHIP	680	5%	1/16W
R4624	1-218-969-11	RES-CHIP	22K	5%	1/16W
R4625	1-218-969-11	RES-CHIP	22K	5%	1/16W
R4626	1-218-989-11	RES-CHIP	1M	5%	1/16W
R4635	1-218-990-81	SHORT CHIP	0		
R4637	1-218-990-81	SHORT CHIP	0		
R4638	1-218-990-81	SHORT CHIP	0		
R4642	1-218-990-81	SHORT CHIP	0		
R4646	1-219-606-11	METAL CHIP	100K	0.5%	1/16W
R4648	1-219-606-11	METAL CHIP	100K	0.5%	1/16W
R4657	1-216-295-91	SHORT CHIP	0		
R4660	1-218-990-81	SHORT CHIP	0		
< COMPOSITION CIRCUIT BLOCK >					
RB3601	1-234-375-21	RES, NETWORK	1K (1005X4)		
RB4001	1-234-375-21	RES, NETWORK	1K (1005X4)		
< VIBRATOR >					
* X1401	1-813-906-21	QUARTZ CRYSTAL OSCILLATOR (83.160 MHz)			
		(PAL: V1E/V1P/V1C)			
* X1401	1-813-907-21	QUARTZ CRYSTAL OSCILLATOR			
		(83.076923MHz) (NTSC: V1J/V1U/V1N)			
X3401	1-781-045-21	VIBRATOR, CRYSTAL (24.576 MHz)			
X3601	1-781-620-21	VIBRATOR, CERAMIC (48 MHz)			
X4001	1-767-994-23	VIBRATOR, CRYSTAL (32.768 kHz)			
X4201	1-795-920-11	VIBRATOR, CRYSTAL (20 MHz)			
X4401	1-767-205-21	VIBRATOR, CRYSTAL (20 MHz)			

A-1217-213-A UU-003 BOARD, COMPLETE

< CAPACITOR >

C8601	1-104-851-11	TANTAL. CHIP	10uF	20%	10V
C8602	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C8603	1-164-505-11	CERAMIC CHIP	2.2uF		16V

< CONNECTOR >

CN8601	1-817-543-51	CONNECTOR, FPC (ZIF) 27P			
CN8602	1-691-356-51	CONNECTOR, FFC/FPC (ZIF) 18P			

< DIODE >

* D8601	6-501-690-01	DIODE NESW007AT-T141 (EVF BACKLIGHT)			
---------	--------------	--------------------------------------	--	--	--

< COIL >

L8601	1-414-771-91	INDUCTOR	10uH		
-------	--------------	----------	------	--	--

Ref. No. Part No. Description
< TRANSISTOR >

Q8601	8-729-054-48	TRANSISTOR	UP04601008S0		
Q8602	8-729-054-48	TRANSISTOR	UP04601008S0		

< RESISTOR >

R8602	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R8603	1-208-687-11	METAL CHIP	1.5K	0.5%	1/16W
R8604	1-218-956-11	RES-CHIP	1.8K	5%	1/16W
R8606	1-211-991-11	METAL CHIP	82	0.5%	1/10W

A-1217-214-A WW-003 BOARD, COMPLETE

< CAPACITOR >

C9401	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C9403	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V

< CONNECTOR >

CN9401	1-817-543-51	CONNECTOR, FPC (ZIF) 27P			
CN9402	1-817-913-41	MEMORY STICK DUO CONNECTOR			
CN9403	1-819-436-11	CONNECTOR (SQUARE TYPE) (USB) 5P			

< DIODE >

D9401	6-500-604-01	DIODE CL-270HR-C-TSL (MS ACCESS)			
D9402	8-719-078-02	DIODE 1SS357 (T3SONY1)			
D9403	8-719-056-61	DIODE MAZS082008SO			
D9404	8-719-056-61	DIODE MAZS082008SO			

< FERRITE BEAD >

FB9401	1-469-581-21	INDUCTOR, FERRITE BEAD (1005)			
--------	--------------	-------------------------------	--	--	--

< IC >

* IC9401	6-708-445-01	IC R1114Q291D-TR-FA			
----------	--------------	---------------------	--	--	--

< RESISTOR >

R9401	1-218-941-81	RES-CHIP	100	5%	1/16W
R9402	1-218-953-11	RES-CHIP	1K	5%	1/16W
R9404	1-218-965-11	RES-CHIP	10K	5%	1/16W
R9405	1-218-965-11	RES-CHIP	10K	5%	1/16W

A-1217-224-A XX-015 BOARD, COMPLETE

(IC8402 is not supplied, but this is included in XX-015 complete board.)

< CAPACITOR >

C8401	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C8402	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C8403	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C8404	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C8405	1-137-910-11	TANTAL. CHIP	10uF	20%	16V

C8406	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C8407	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C8408	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C8409	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C8410	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V

C8411	1-137-710-91	CERAMIC CHIP	10uF	20%	6.3V
-------	--------------	--------------	------	-----	------

Ref. No.	Part No.	Description			
C8412	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C8413	1-107-820-11	CERAMIC CHIP	0.1uF		16V
C8414	1-163-127-00	CERAMIC CHIP	270PF	5%	50V
C8415	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C8416	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C8417	1-113-984-11	TANTAL. CHIP	1.5uF	20%	35V
C8418	1-113-984-11	TANTAL. CHIP	1.5uF	20%	35V
C8419	1-113-984-11	TANTAL. CHIP	1.5uF	20%	35V
C8420	1-128-996-11	ELECT CHIP	4.7uF	20%	50V
C8421	1-128-996-11	ELECT CHIP	4.7uF	20%	50V
C8422	1-128-996-11	ELECT CHIP	4.7uF	20%	50V
C8423	1-128-996-11	ELECT CHIP	4.7uF	20%	50V
C8424	1-128-996-11	ELECT CHIP	4.7uF	20%	50V
C8425	1-128-996-11	ELECT CHIP	4.7uF	20%	50V
C8426	1-128-996-11	ELECT CHIP	4.7uF	20%	50V
C8427	1-128-996-11	ELECT CHIP	4.7uF	20%	50V
C8428	1-128-643-11	CERAMIC CHIP	4.7uF		35V
C8429	1-128-643-11	CERAMIC CHIP	4.7uF		35V
C8430	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C8431	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C8432	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C8433	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C8434	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C8435	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C8436	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C8437	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C8438	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C8439	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C8440	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C8441	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C8442	1-128-996-11	ELECT CHIP	4.7uF	20%	50V
C8443	1-128-996-11	ELECT CHIP	4.7uF	20%	50V
C8444	1-128-996-11	ELECT CHIP	4.7uF	20%	50V
C8445	1-128-996-11	ELECT CHIP	4.7uF	20%	50V
C8446	1-128-996-11	ELECT CHIP	4.7uF	20%	50V
C8447	1-128-996-11	ELECT CHIP	4.7uF	20%	50V
C8448	1-128-996-11	ELECT CHIP	4.7uF	20%	50V
C8449	1-128-996-11	ELECT CHIP	4.7uF	20%	50V
C8450	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C8451	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C8452	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C8453	1-119-750-11	TANTAL. CHIP	22uF	20%	6.3V
C8454	1-119-750-11	TANTAL. CHIP	22uF	20%	6.3V
C8455	1-137-710-91	CERAMIC CHIP	10uF	20%	6.3V
C8456	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C8457	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C8458	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C8459	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C8460	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
< CONNECTOR >					
CN8401	1-820-791-11	XLR CONNECTOR (RECEPTACLE) 3P (INPUT1/INPUT2)			
* CN8403	1-816-648-51	FFC/FPC CONNECTOR (LIF) 20P			
< DIODE >					
D8401	6-501-123-01	DIODE RB160M-60TR			
D8402	8-719-073-01	DIODE MA111-(K8).S0			

Ref. No.	Part No.	Description	
D8403	8-719-073-01	DIODE MA111-(K8).S0	
D8404	8-719-073-01	DIODE MA111-(K8).S0	
D8405	8-719-073-01	DIODE MA111-(K8).S0	
D8406	8-719-073-01	DIODE MA111-(K8).S0	
D8407	8-719-073-01	DIODE MA111-(K8).S0	
D8408	8-719-073-01	DIODE MA111-(K8).S0	
D8409	8-719-073-01	DIODE MA111-(K8).S0	
D8410	8-719-073-01	DIODE MA111-(K8).S0	
D8411	8-719-073-01	DIODE MA111-(K8).S0	
D8412	8-719-073-01	DIODE MA111-(K8).S0	
D8413	8-719-073-01	DIODE MA111-(K8).S0	
D8414	8-719-073-01	DIODE MA111-(K8).S0	
D8415	8-719-073-01	DIODE MA111-(K8).S0	
D8416	8-719-073-01	DIODE MA111-(K8).S0	
D8417	8-719-073-01	DIODE MA111-(K8).S0	
< IC >			
IC8401	6-707-702-01	IC NJM2746RB1 (TE2)	
IC8402	(Not supplied)	IC TK11840LTL-G	
* IC8403	6-710-823-01	IC NJM2737RB1 (TE2)	
IC8404	6-707-702-01	IC NJM2746RB1 (TE2)	
IC8405	8-759-675-54	IC TC7W53FK (TE85R)	
IC8406	8-759-675-54	IC TC7W53FK (TE85R)	
* IC8407	6-710-823-01	IC NJM2737RB1 (TE2)	
IC8408	6-707-702-01	IC NJM2746RB1 (TE2)	
IC8409	8-759-675-54	IC TC7W53FK (TE85R)	
IC8410	8-759-675-54	IC TC7W53FK (TE85R)	
< COIL >			
L8401	1-414-398-11	INDUCTOR	10uH
L8402	1-414-398-11	INDUCTOR	10uH
L8403	1-456-499-11	INDUCTOR	4.7uH
L8405	1-414-398-11	INDUCTOR	10uH
L8406	1-414-398-11	INDUCTOR	10uH
L8407	1-414-771-91	INDUCTOR	10uH
< PHOTO INTERRUPTER >			
* PH8401	6-710-481-01	IC TLP3212 (SOY-TP15, F	
* PH8402	6-710-481-01	IC TLP3212 (SOY-TP15, F	
* PH8403	6-710-481-01	IC TLP3212 (SOY-TP15, F	
* PH8404	6-710-481-01	IC TLP3212 (SOY-TP15, F	
< TRANSISTOR >			
Q8401	8-729-048-72	TRANSISTOR	2SK2615
Q8402	6-550-119-01	TRANSISTOR	DTC144EMT2L
Q8403	6-550-119-01	TRANSISTOR	DTC144EMT2L
Q8404	8-729-119-64	TRANSISTOR	2SA811A-C17
Q8406	8-729-119-64	TRANSISTOR	2SA811A-C17
Q8410	6-550-119-01	TRANSISTOR	DTC144EMT2L
Q8411	8-729-037-52	TRANSISTOR	2SD2216J-QR (TX).S0
Q8412	8-729-037-52	TRANSISTOR	2SD2216J-QR (TX).S0
Q8414	8-729-202-38	TRANSISTOR	2SC3326N-A
Q8415	6-550-119-01	TRANSISTOR	DTC144EMT2L
Q8416	6-550-119-01	TRANSISTOR	DTC144EMT2L
Q8418	8-729-202-38	TRANSISTOR	2SC3326N-A
Q8419	8-729-117-32	TRANSISTOR	2SC4177-L6
Q8422	8-729-427-72	TRANSISTOR	XP4501
Q8423	8-729-427-72	TRANSISTOR	XP4501

Ref. No. Part No. Description

< RESISTOR >

R8405	1-208-894-81	METAL CHIP	2K	0.5%	1/16W
R8408	1-218-855-11	METAL CHIP	2.2K	0.5%	1/10W
R8409	1-218-855-11	METAL CHIP	2.2K	0.5%	1/10W
R8411	1-219-601-81	METAL CHIP	62K	0.5%	1/16W
R8412	1-219-602-11	METAL CHIP	68K	0.5%	1/16W
R8413	1-218-855-11	METAL CHIP	2.2K	0.5%	1/10W
R8414	1-218-855-11	METAL CHIP	2.2K	0.5%	1/10W
R8415	1-218-855-11	METAL CHIP	2.2K	0.5%	1/10W
R8416	1-218-855-11	METAL CHIP	2.2K	0.5%	1/10W
R8417	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R8418	1-211-985-11	METAL CHIP	47	0.5%	1/10W
R8421	1-208-893-11	METAL CHIP	1.8K	0.5%	1/16W
R8422	1-218-845-11	METAL CHIP	820	0.5%	1/10W
R8423	1-218-845-11	METAL CHIP	820	0.5%	1/10W
R8424	1-208-955-11	METAL CHIP	680K	0.5%	1/16W
R8425	1-208-944-81	METAL CHIP	240K	0.5%	1/16W
R8426	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R8427	1-220-222-11	METAL CHIP	4.7K	5%	1/2W
R8428	1-220-222-11	METAL CHIP	4.7K	5%	1/2W
R8429	1-218-977-11	RES-CHIP	100K	5%	1/16W
R8430	1-218-977-11	RES-CHIP	100K	5%	1/16W
R8431	1-219-606-11	METAL CHIP	100K	0.5%	1/16W
R8432	1-219-606-11	METAL CHIP	100K	0.5%	1/16W
R8433	1-219-606-11	METAL CHIP	100K	0.5%	1/16W
R8434	1-219-606-11	METAL CHIP	100K	0.5%	1/16W
R8435	1-219-606-11	METAL CHIP	100K	0.5%	1/16W
R8436	1-219-606-11	METAL CHIP	100K	0.5%	1/16W
R8437	1-218-965-11	RES-CHIP	10K	5%	1/16W
R8438	1-218-965-11	RES-CHIP	10K	5%	1/16W
R8442	1-218-855-11	METAL CHIP	2.2K	0.5%	1/10W
R8443	1-218-855-11	METAL CHIP	2.2K	0.5%	1/10W
R8444	1-218-855-11	METAL CHIP	2.2K	0.5%	1/10W
R8445	1-218-855-11	METAL CHIP	2.2K	0.5%	1/10W
R8446	1-218-855-11	METAL CHIP	2.2K	0.5%	1/10W
R8447	1-218-855-11	METAL CHIP	2.2K	0.5%	1/10W
R8448	1-211-985-11	METAL CHIP	47	0.5%	1/10W
R8451	1-218-845-11	METAL CHIP	820	0.5%	1/10W
R8452	1-218-845-11	METAL CHIP	820	0.5%	1/10W
R8453	1-220-222-11	METAL CHIP	4.7K	5%	1/2W
R8454	1-220-222-11	METAL CHIP	4.7K	5%	1/2W
R8455	1-219-606-11	METAL CHIP	100K	0.5%	1/16W
R8456	1-219-606-11	METAL CHIP	100K	0.5%	1/16W
R8457	1-219-606-11	METAL CHIP	100K	0.5%	1/16W
R8458	1-219-606-11	METAL CHIP	100K	0.5%	1/16W
R8459	1-219-606-11	METAL CHIP	100K	0.5%	1/16W
R8460	1-219-606-11	METAL CHIP	100K	0.5%	1/16W
R8461	1-219-606-11	METAL CHIP	100K	0.5%	1/16W
R8462	1-219-606-11	METAL CHIP	100K	0.5%	1/16W
R8463	1-218-953-11	RES-CHIP	1K	5%	1/16W
R8464	1-218-953-11	RES-CHIP	1K	5%	1/16W
R8465	1-218-953-11	RES-CHIP	1K	5%	1/16W
R8466	1-218-953-11	RES-CHIP	1K	5%	1/16W
R8467	1-218-959-11	RES-CHIP	3.3K	5%	1/16W
R8468	1-218-977-11	RES-CHIP	100K	5%	1/16W
R8471	1-218-959-11	RES-CHIP	3.3K	5%	1/16W

Ref. No. Part No. Description

R8479	1-218-965-11	RES-CHIP	10K	5%	1/16W
R8480	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R8481	1-218-977-11	RES-CHIP	100K	5%	1/16W
R8482	1-218-965-11	RES-CHIP	10K	5%	1/16W
R8483	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R8486	1-208-679-11	METAL CHIP	680	0.5%	1/16W
R8487	1-218-965-11	RES-CHIP	10K	5%	1/16W
R8488	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R8491	1-218-965-11	RES-CHIP	10K	5%	1/16W
R8492	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R8494	1-218-970-11	RES-CHIP	27K	5%	1/16W
R8496	1-218-985-11	RES-CHIP	470K	5%	1/16W
R8497	1-218-985-11	RES-CHIP	470K	5%	1/16W
R8498	1-218-985-11	RES-CHIP	470K	5%	1/16W
R8499	1-218-985-11	RES-CHIP	470K	5%	1/16W

A-1217-225-A YY-003 BOARD, COMPLETE

< CAPACITOR >

C5807	1-100-442-91	TANTAL. CHIP	10uF	20%	6.3V
C5808	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C6009	1-164-939-11	CERAMIC CHIP	0.0022uF	10%	50V
C6010	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C6011	1-164-939-11	CERAMIC CHIP	0.0022uF	10%	50V
C6012	1-164-866-11	CERAMIC CHIP	47PF	5%	50V
C6013	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C6014	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C6015	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C6016	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C6017	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C6020	1-165-897-11	TANTAL. CHIP	22uF	20%	10V
C6021	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C6022	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C6023	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C6024	1-127-895-11	TANTAL. CHIP	22uF	10%	4V
C6025	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C6026	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C6028	1-164-939-11	CERAMIC CHIP	0.0022uF	10%	50V
C6029	1-164-939-11	CERAMIC CHIP	0.0022uF	10%	50V
C6030	1-100-415-11	CERAMIC CHIP	0.47uF	10%	6.3V
C6031	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V
C6032	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C6033	1-127-895-11	TANTAL. CHIP	22uF	10%	4V
C6034	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C6035	1-164-941-11	CERAMIC CHIP	0.0047uF	10%	16V
C6037	1-100-415-11	CERAMIC CHIP	0.47uF	10%	6.3V
C6038	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
C6206	1-100-506-91	CERAMIC CHIP	1uF	20%	6.3V
C6207	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C6208	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V
C6209	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C6210	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C6212	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V
C6213	1-164-943-81	CERAMIC CHIP	0.01uF	10%	16V
C6219	1-100-442-91	TANTAL. CHIP	10uF	20%	6.3V
C6220	1-127-895-91	TANTAL. CHIP	22uF	20%	4V
C6221	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V

Ref. No.	Part No.	Description			
C6222	1-100-442-91	TANTAL. CHIP	10uF	20%	6.3V
C6223	1-127-895-11	TANTAL. CHIP	22uF	10%	4V
C6224	1-127-895-11	TANTAL. CHIP	22uF	10%	4V
C6225	1-100-611-91	CERAMIC CHIP	22uF	20%	6.3V
< CONNECTOR >					
* CN5801	1-817-560-51	CONNECTOR, FPC (ZIP) 21P			
* CN5802	1-817-544-71	CONNECTOR, FPC (ZIF) 39P			
CN5803	1-779-521-12	CONNECTOR, BOARD TO BOARD 80P			
* CN6201	1-816-643-51	FFC/FPC CONNECTOR (LIF) 10P			
< DIODE >					
D6005	8-719-077-54	DIODE MA4L11100AS0			
< FERRITE BEAD >					
FB6001	1-414-760-21	FERRITE, EMI (SMD) (1608)			
FB6201	1-414-760-21	FERRITE, EMI (SMD) (1608)			
FB6202	1-414-760-21	FERRITE, EMI (SMD) (1608)			
< IC >					
IC6004	6-708-814-01	IC BU2343GLU-E2			
* IC6005	6-708-444-01	IC R1114Q281D-TR-FA			
* IC6203	6-709-026-01	IC R2J30500LG			
< COIL >					
L5801	1-414-771-91	INDUCTOR	10uH		
L6001	1-414-771-91	INDUCTOR	10uH		
L6002	1-469-757-21	INDUCTOR	10uH		
L6202	1-414-754-11	INDUCTOR	10uH		
L6203	1-469-757-21	INDUCTOR	10uH		
< TRANSISTOR >					
Q5801	8-729-042-26	TRANSISTOR	2SB1462J-QR (K8).SO		
Q5802	8-729-042-26	TRANSISTOR	2SB1462J-QR (K8).SO		
Q5803	8-729-042-26	TRANSISTOR	2SB1462J-QR (K8).SO		
Q5804	8-729-037-74	TRANSISTOR	UN9213J-(TX).SO		
Q5805	8-729-037-74	TRANSISTOR	UN9213J-(TX).SO		
Q5806	8-729-037-74	TRANSISTOR	UN9213J-(TX).SO		
Q6001	8-729-050-76	TRANSISTOR	EC3201C-PM-TL		
Q6201	8-729-042-26	TRANSISTOR	2SB1462J-QR (K8).SO		
Q6202	8-729-037-74	TRANSISTOR	UN9213J-(TX).SO		
Q6203	8-729-042-26	TRANSISTOR	2SB1462J-QR (K8).SO		
Q6204	8-729-037-74	TRANSISTOR	UN9213J-(TX).SO		
< RESISTOR >					
R5811	1-218-953-11	RES-CHIP	1K	5%	1/16W
R5812	1-218-953-11	RES-CHIP	1K	5%	1/16W
R5813	1-218-953-11	RES-CHIP	1K	5%	1/16W
R5814	1-218-973-11	RES-CHIP	47K	5%	1/16W
R5815	1-218-973-11	RES-CHIP	47K	5%	1/16W
R5816	1-218-973-11	RES-CHIP	47K	5%	1/16W
R5823	1-218-990-81	SHORT CHIP	0		
R5824	1-218-990-81	SHORT CHIP	0		
R5825	1-218-990-81	SHORT CHIP	0		
R6017	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W
R6018	1-208-721-11	METAL CHIP	39K	0.5%	1/16W
R6019	1-218-958-11	RES-CHIP	2.7K	5%	1/16W

Ref. No.	Part No.	Description			
R6020	1-218-958-11	RES-CHIP	2.7K	5%	1/16W
R6021	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W
R6022	1-208-721-11	METAL CHIP	39K	0.5%	1/16W
R6023	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W
R6024	1-208-941-11	METAL CHIP	180K	0.5%	1/16W
R6025	1-208-671-11	METAL CHIP	330	0.5%	1/16W
R6026	1-208-943-11	METAL CHIP	220K	0.5%	1/16W
R6027	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R6028	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W
R6029	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W
R6030	1-218-953-11	RES-CHIP	1K	5%	1/16W
R6032	1-218-990-81	SHORT CHIP	0		
R6033	1-218-965-11	RES-CHIP	10K	5%	1/16W
R6034	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W
R6035	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W
R6037	1-208-943-11	METAL CHIP	220K	0.5%	1/16W
R6038	1-208-715-11	METAL CHIP	22K	0.5%	1/16W
R6039	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R6040	1-208-721-11	METAL CHIP	39K	0.5%	1/16W
R6041	1-208-721-11	METAL CHIP	39K	0.5%	1/16W
R6042	1-208-931-11	METAL CHIP	68K	0.5%	1/16W
R6043	1-208-715-11	METAL CHIP	22K	0.5%	1/16W
R6044	1-208-715-11	METAL CHIP	22K	0.5%	1/16W
R6045	1-218-958-11	RES-CHIP	2.7K	5%	1/16W
R6046	1-218-958-11	RES-CHIP	2.7K	5%	1/16W
R6047	1-218-965-11	RES-CHIP	10K	5%	1/16W
R6084	1-218-990-81	SHORT CHIP	0		
R6212	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R6213	1-218-990-81	SHORT CHIP	0		
R6214	1-218-970-11	RES-CHIP	27K	5%	1/16W
R6215	1-218-970-11	RES-CHIP	27K	5%	1/16W
R6216	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W
R6219	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R6220	1-218-990-81	SHORT CHIP	0		
R6221	1-218-970-11	RES-CHIP	27K	5%	1/16W
R6222	1-218-970-11	RES-CHIP	27K	5%	1/16W
R6223	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W
R6225	1-218-977-11	RES-CHIP	100K	5%	1/16W
R6226	1-218-977-11	RES-CHIP	100K	5%	1/16W
R6227	1-218-977-11	RES-CHIP	100K	5%	1/16W
R6228	1-218-977-11	RES-CHIP	100K	5%	1/16W
R6229	1-218-977-11	RES-CHIP	100K	5%	1/16W
R6230	1-218-977-11	RES-CHIP	100K	5%	1/16W
R6231	1-218-977-11	RES-CHIP	100K	5%	1/16W
R6233	1-218-990-81	SHORT CHIP	0		
R6235	1-218-973-11	RES-CHIP	47K	5%	1/16W
R6236	1-218-953-11	RES-CHIP	1K	5%	1/16W
R6237	1-218-953-11	RES-CHIP	1K	5%	1/16W
R6238	1-218-973-11	RES-CHIP	47K	5%	1/16W
R6241	1-218-990-81	SHORT CHIP	0		
R6250	1-208-923-11	METAL CHIP	33K	0.5%	1/16W
R6251	1-208-923-11	METAL CHIP	33K	0.5%	1/16W
R6260	1-208-715-11	METAL CHIP	22K	0.5%	1/16W
R6261	1-208-715-11	METAL CHIP	22K	0.5%	1/16W

Ref. No.	Part No.	Description
	A-1217-215-A	ZZ-003 BOARD, COMPLETE *****
< CAPACITOR >		
C9801	1-125-889-91	CERAMIC CHIP 2.2uF 10% 10V
C9802	1-125-889-91	CERAMIC CHIP 2.2uF 10% 10V
C9803	1-125-889-91	CERAMIC CHIP 2.2uF 10% 10V
C9804	1-125-889-91	CERAMIC CHIP 2.2uF 10% 10V
C9805	1-164-936-11	CERAMIC CHIP 680PF 10% 50V
C9806	1-164-936-11	CERAMIC CHIP 680PF 10% 50V
C9807	1-164-936-11	CERAMIC CHIP 680PF 10% 50V
C9808	1-164-936-11	CERAMIC CHIP 680PF 10% 50V
C9809	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C9810	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C9811	1-165-884-91	CERAMIC CHIP 2.2uF 10% 6.3V
C9812	1-165-884-91	CERAMIC CHIP 2.2uF 10% 6.3V
C9813	1-165-884-91	CERAMIC CHIP 2.2uF 10% 6.3V
C9814	1-165-884-91	CERAMIC CHIP 2.2uF 10% 6.3V
C9815	1-164-939-11	CERAMIC CHIP 0.0022uF 10% 50V
C9816	1-125-926-91	TANTAL. CHIP 4.7uF 20% 6.3V
C9817	1-164-939-11	CERAMIC CHIP 0.0022uF 10% 50V
C9818	1-125-926-91	TANTAL. CHIP 4.7uF 20% 6.3V
C9819	1-162-966-11	CERAMIC CHIP 0.0022uF 10% 50V
C9820	1-162-966-11	CERAMIC CHIP 0.0022uF 10% 50V
C9821	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C9822	1-117-919-11	TANTAL. CHIP 10uF 20% 6.3V
C9823	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C9824	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C9825	1-117-919-11	TANTAL. CHIP 10uF 20% 6.3V
C9826	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C9827	1-117-919-11	TANTAL. CHIP 10uF 20% 6.3V
C9829	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C9831	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C9832	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C9833	1-119-750-11	TANTAL. CHIP 22uF 20% 6.3V
C9835	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C9836	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
< CONNECTOR >		
* CN9801	1-816-648-51	FFC/FPC CONNECTOR (LIF) 20P
* CN9802	1-816-654-51	FFC/FPC CONNECTOR (LIF) 6P
* CN9803	1-816-648-51	FFC/FPC CONNECTOR (LIF) 20P
* CN9804	1-817-564-71	CONNECTOR, FPC (ZIF) 33P
< IC >		
* IC9801	6-710-823-01	IC NJM2737RB1 (TE2)
* IC9802	6-710-823-01	IC NJM2737RB1 (TE2)
IC9803	6-707-702-01	IC NJM2746RB1 (TE2)
IC9804	6-707-702-01	IC NJM2746RB1 (TE2)
IC9805	6-706-906-01	IC NJM2732RB1 (TE2)
IC9806	6-701-979-01	IC TC7WB66FK (TE85R)
< COIL >		
L9801	1-414-771-91	INDUCTOR 10uH
< TRANSISTOR >		
Q001	8-729-117-32	TRANSISTOR 2SC4177-L6


Ref. No.	Part No.	Description
< RESISTOR >		
R9801	1-219-606-11	METAL CHIP 100K 0.5% 1/16W
R9802	1-219-606-11	METAL CHIP 100K 0.5% 1/16W
R9803	1-219-606-11	METAL CHIP 100K 0.5% 1/16W
R9804	1-219-606-11	METAL CHIP 100K 0.5% 1/16W
R9805	1-208-703-11	METAL CHIP 6.8K 0.5% 1/16W
R9806	1-208-703-11	METAL CHIP 6.8K 0.5% 1/16W
R9807	1-208-703-11	METAL CHIP 6.8K 0.5% 1/16W
R9808	1-208-703-11	METAL CHIP 6.8K 0.5% 1/16W
* R9809	1-208-708-11	METAL CHIP 11K 0.5% 1/16W
* R9810	1-208-708-11	METAL CHIP 11K 0.5% 1/16W
R9811	1-219-602-11	METAL CHIP 68K 0.5% 1/16W
R9812	1-219-601-81	METAL CHIP 62K 0.5% 1/16W
R9814	1-218-848-11	METAL CHIP 1.1K 0.5% 1/10W
R9815	1-218-848-11	METAL CHIP 1.1K 0.5% 1/10W
R9816	1-219-602-11	METAL CHIP 68K 0.5% 1/16W
R9817	1-219-601-81	METAL CHIP 62K 0.5% 1/16W
R9819	1-208-687-11	METAL CHIP 1.5K 0.5% 1/16W
R9820	1-218-848-11	METAL CHIP 1.1K 0.5% 1/10W
R9821	1-218-848-11	METAL CHIP 1.1K 0.5% 1/10W
R9822	1-208-687-11	METAL CHIP 1.5K 0.5% 1/16W
R9823	1-208-687-11	METAL CHIP 1.5K 0.5% 1/16W
R9824	1-208-687-11	METAL CHIP 1.5K 0.5% 1/16W
R9827	1-218-965-11	RES-CHIP 10K 5% 1/16W
R9828	1-218-848-11	METAL CHIP 1.1K 0.5% 1/10W
R9829	1-218-848-11	METAL CHIP 1.1K 0.5% 1/10W
R9830	1-208-949-11	METAL CHIP 390K 0.5% 1/16W
R9831	1-208-954-81	METAL CHIP 620K 0.5% 1/16W
R9832	1-208-949-11	METAL CHIP 390K 0.5% 1/16W
R9833	1-208-954-81	METAL CHIP 620K 0.5% 1/16W
R9836	1-208-703-11	METAL CHIP 6.8K 0.5% 1/16W
R9837	1-208-703-11	METAL CHIP 6.8K 0.5% 1/16W

• EXCEPT J MODEL

Checking supplied accessories.

to J MODEL

Note: This item is supplied with the unit as an accessory, but is not prepared as a service part.

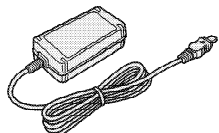


AC Adaptor
(AC-L15A)
△ 1-479-283-13




Power Cord
△ 1-782-476-51 (CH)
△ 1-790-107-42 (US, CND)
△ 1-823-946-12 (AEP, E)



Conversion (2P) Adaptor
△ 1-569-008-12 (E: NTSC)




CD-ROM
"Manuals for Digital HD
Video Camera Recorder"
2-887-516-01




USB Cable
1-829-579-41




A/V Connection Cable
1-823-156-51




Rechargeable Battery Pack
NP-F570
(Note)




Component Video Cable
1-829-414-61




Wireless Remote Commander
RMT-831
1-478-495-41



Wind Screen, Microphone
8-814-298-90

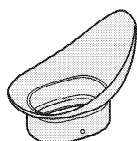

Large Eyecup
2-892-124-01

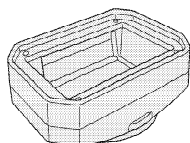

Lens Hood with Lens Cover
2-892-688-01

Other accessories


- 2-887-519-01 MANUAL, INSTRUCTION (PDF) (JAPANESE) (Note)
- 2-887-519-11 MANUAL, INSTRUCTION (PRINTED MATERIAL/PDF)
(ENGLISH) (US, CND, E) (Note)
- 2-887-519-21 MANUAL, INSTRUCTION (PDF) (FRENCH) (Note)
- 2-887-521-11 MANUAL, INSTRUCTION (PRINTED MATERIAL/PDF)
(ENGLISH) (AEP, E) (Note)
- 2-887-521-21 MANUAL, INSTRUCTION (PRINTED MATERIAL/PDF)
(SIMPLIFIED CHINESE) (CH) (Note)
- 2-887-521-31 MANUAL, INSTRUCTION (PDF) (FRENCH) (Note)
- 2-887-521-41 MANUAL, INSTRUCTION (PDF) (SPANISH) (Note)
- 2-887-521-51 MANUAL, INSTRUCTION (PDF) (ITALIAN) (Note)
- 2-887-521-61 MANUAL, INSTRUCTION (PDF) (GERMAN) (Note)

Note: INSTRUCTION MANUAL (PDF) of each language are included in CD-ROM "Manuals for Digital HD Video Camera Recorder".


• Refer to page 5-1 for mark △.

● J MODEL


付属品




USB ケーブル
1-829-579-41



A/V 接続ケーブル
1-823-156-51




ワイヤレスリモコン
RMT-831
1-478-495-41




コンポーネントビデオケーブル
1-829-414-61




大型アイカップ
2-892-124-01

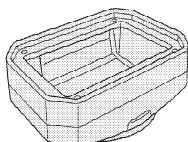

レンズカバー付フード
2-892-688-01



ウインドスクリーン、
マイク
8-814-298-90



CD-ROM
「Manuals for Digital HD
Video Camera Recorder」
2-887-516-01

その他の付属品

2-887-519-01 取扱説明書 (印刷物/PDF) (日本語) (注)
2-887-519-11 取扱説明書 (PDF) (英語) (注)
2-887-519-21 取扱説明書 (PDF) (フランス語) (注)
2-887-521-11 取扱説明書 (PDF) (英語) (注)

2-887-521-21 取扱説明書 (PDF) (中国語 (簡体字)) (注)
2-887-521-31 取扱説明書 (PDF) (フランス語) (注)
2-887-521-41 取扱説明書 (PDF) (スペイン語) (注)
2-887-521-51 取扱説明書 (PDF) (イタリア語) (注)
2-887-521-61 取扱説明書 (PDF) (ドイツ語) (注)

注：各言語の取扱説明書 (PDF) は、CD-ROM 「Manuals for Digital HD Video Camera Recorder」 に含まれています。

● △マークについては、5-1ページを参照して下さい。