

SECTION 5 EXPLODED VIEWS


NOTE :

- Non-serviceable items with no part number and no description are not stocked because they are not required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remarks column.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

Note : Les composants identifiés par une trame et par une marque Δ sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces du numéro spécifique.

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

5-1. CHASSIS

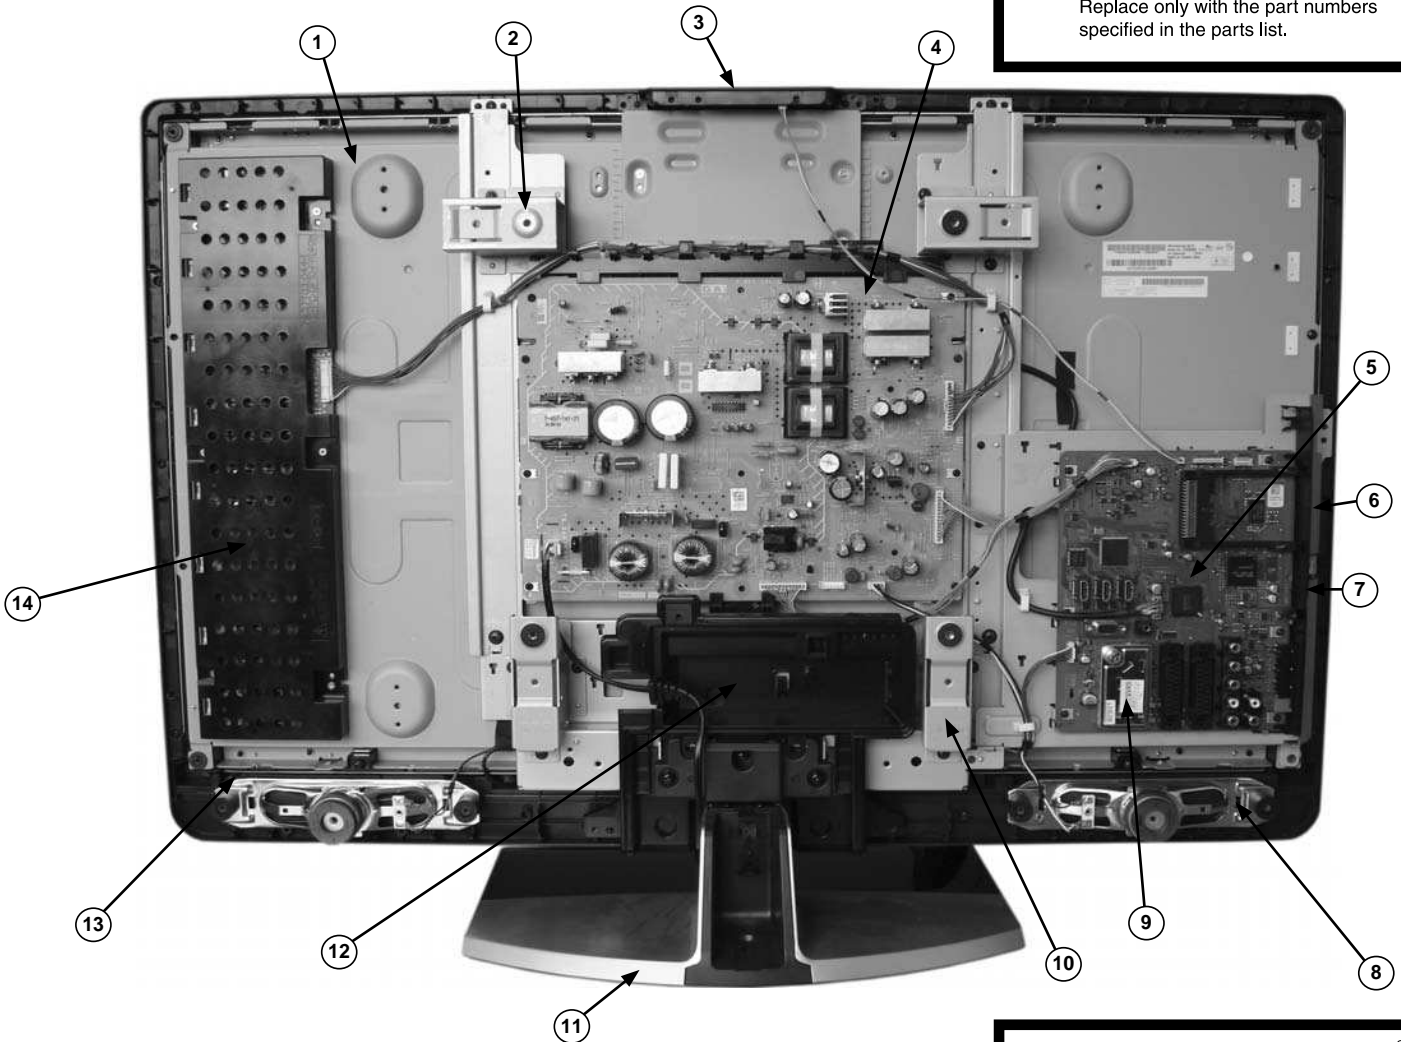

Note : The components identified by mark contain confidential information. Strictly follow the instructions when ever the components are repaired and/or replaced.

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
1	Δ 1-802-706-11	LCD PANEL (26 WXGA TFT) (26 inches)		9	8-597-662-00	TUNER, FSS BTF-HF412T	
	Δ 1-802-649-12	LCD PANEL (32 WXGA TFT) (32 inches)		10	3-298-273-01	FRAME, VESA BOTTOM (26 inches)	
	Δ 1-802-622-11	LCD PANEL (37 WXGA TFT) (37 inches)			3-298-054-01	FRAME, VESA BOTTOM (32 inches)	
2	3-298-272-01	FRAME, VESA TOP (26) (26 inches)			3-298-055-01	FRAME, VESA BOTTOM (37 inches)	
	3-298-050-01	FRAME, VESA TOP (32) (32 inches)		11	X-2318-094-1	STAND, ASSY (M2) WITH SWIVEL (26 inches)	
	3-298-051-01	FRAME, VESA TOP (37) (37 inches)			X-2318-095-1	STAND, ASSY (M2) WITH SWIVEL (32 inches)	
3	Δ 1-480-876-21	SWITCH UNIT			X-2318-089-1	STAND, ASSY (ML2) WITH SWIVEL (37 inches)	
4	*A-1526-430-A	GA2 BOARD, COMPLETE (26/32 inches)		12	3-298-021-01	UNDER COVER, (26) (26 inches)	
	*A-1526-431-A	GA3 BOARD, COMPLETE (37 inches)			3-298-020-01	UNDER COVER, (32) (32 inches)	
5	*A-1599-690-A	BC1 BOARD, COMPLETE			3-298-019-01	UNDER COVER, (37) (37 inches)	
6	*4-101-356-02	CARD, DUMMY		13	*A-1545-603-A	HM4 BOARD, COMPLETE (26/32 inches)	
7	X-2319-380-1	SIDE JACK BRACKET ASSY			*A-1556-707-A	HM5 BOARD, COMPLETE (37 inches)	
8	1-826-958-11	LOUDSPEAKER (4.2X15CM) (26 inches)		14	1-857-183-11	ETC-INVERTER MT BOARD (26 inches)	
	1-826-791-11	LOUDSPEAKER (4.2X15CM) (32 inches)			1-857-109-11	ETC-INVERTER MT BOARD (32 inches)	
	1-826-791-21	LOUDSPEAKER (4.2X15CM) (37 inches)			1-857-097-11	ETC-INVERTER MT BOARD (37 inches)	

5-2. BEZNET ASSY

Note : Les composants indentifiés par une trame et par une marque Δ sont d'une importance critique pour la securite. Ne les remplacer que par des pieces du numero specifie.

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.





REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
51	X-2319-419-1	BEZNET (26) ASSY (26 inches)					
	X-2319-375-1	BEZNET (32) ASSY (32 inches)					
	X-2319-416-1	BEZNET (37) ASSY (37 inches)					

5-3. REAR COVER & POWER SUPPLY CORDS

Note : Les composants identifiés par une trame et par une marque Δ sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces du numéro spécifié.

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

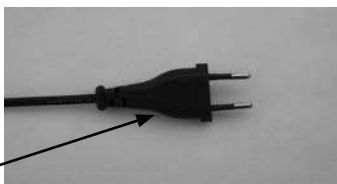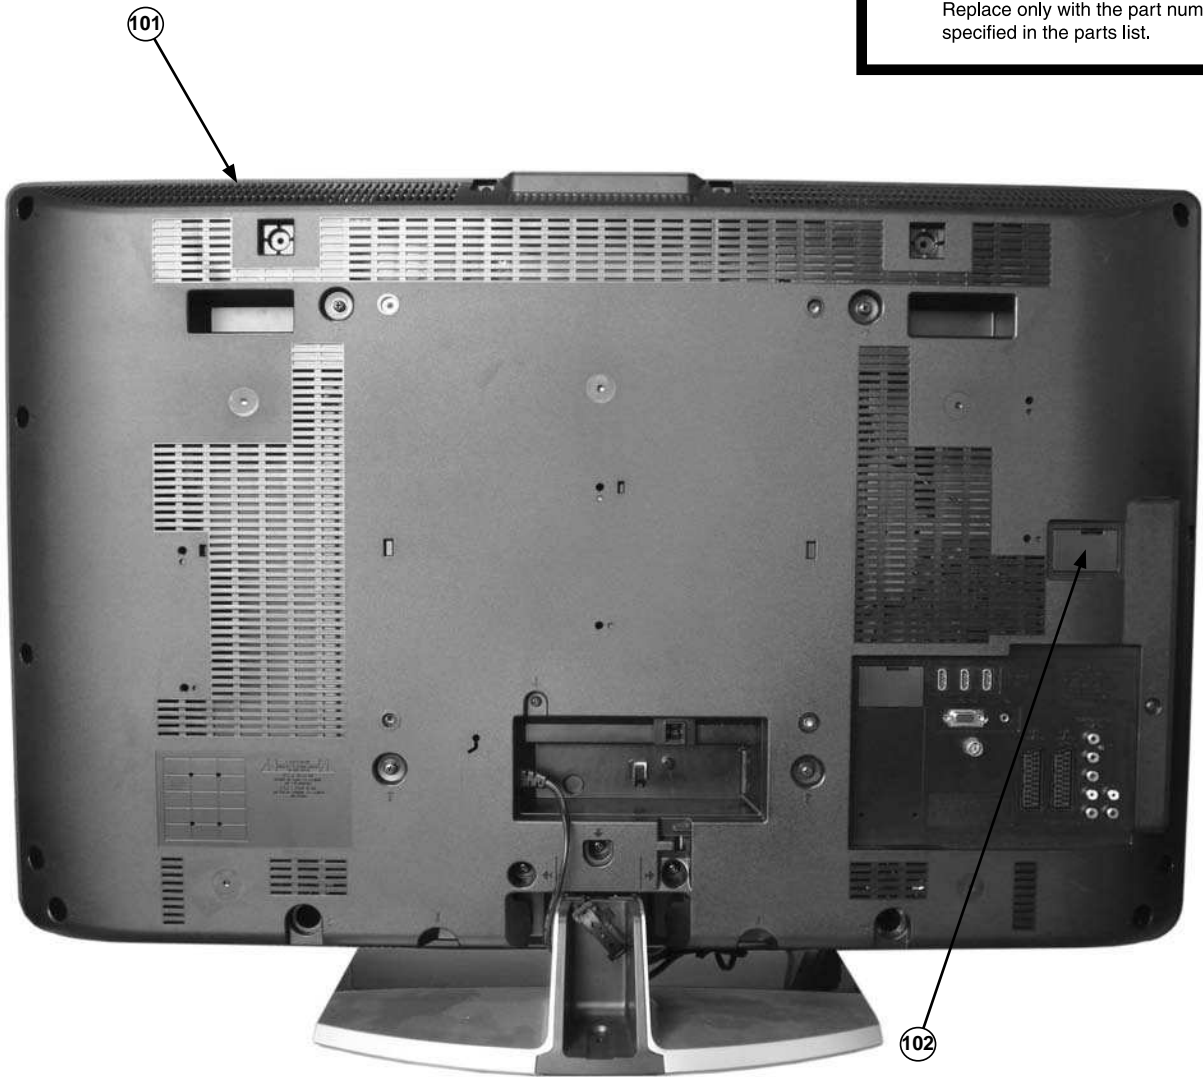

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
101	X-2319-420-1	COVER, REAR (26) (26 inches)					
	X-2319-377-1	COVER, REAR ASSY(32) (32 inches)					
	X-2319-417-1	COVER, REAR ASSY (37) (37 inches)					
102	3-299-466-01	COVER, ECS					
103	Δ 1-833-265-11	POWER-SUPPLY CORD (26 inches) (AEP)					
	Δ 1-832-132-31	POWER-SUPPLY CORD (32/37 inches) (AEP)					
104	Δ 1-832-170-31	POWER-SUPPLY CORD (26 inches) (UK)					
	Δ 1-832-170-41	POWER-SUPPLY CORD (32/37 inches) (UK)					


SECTION 6 ELECTRICAL PARTS LIST

PARTS LISTING TABLE OF CONTENTS


	<u>Page</u>
BC1 BOARD COMPLETE Parts List :	42
HM4 BOARD COMPLETE Parts List : (26 & 32 inches).....	57
HM5 BOARD COMPLETE Parts List : (37 inches).....	57
ACCESSORIES AND CONNECTORS :	58
REMOTE COMMANDER :	58

Note: To ensure safety and reliability it is Sony policy that power supply boards should not be repaired at component level in the field as a result... The GA2 and GA3 boards are regarded as non service items for exchange only and are not indicated in the parts list of this service manual

Note : Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

Note : The components identified by mark  contain confidential information. Strictly follow the instructions when ever the components are repaired and/or replaced.

BC1

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
 * A-1599-690-A BC1 Board, Complete							
< CAPACITOR >							
C2002	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	C2072	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2003	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C2073	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2009	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C2074	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V
C2010	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2075	1-164-858-11	CERAMIC CHIP 22PF	5.00% 50V
C2013	1-135-366-11	ELECT CHIP 100UF	20% 16V	C2078	1-112-161-21	ELECT CHIP 1000UF	20% 6.3V
C2015	1-165-882-91	CERAMIC CHIP 2.2UF	50V	C2079	1-112-780-11	CERAMIC CHIP 0.47UF	10% 16V
C2017	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C2080	1-112-781-11	CERAMIC CHIP 1UF	10% 10V
C2023	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C2081	1-112-781-11	CERAMIC CHIP 1UF	10% 10V
C2024	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V	C2082	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2025	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2083	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2026	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2084	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2027	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2085	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2028	1-126-404-11	ELECT CHIP 4.7UF	20.00% 50V	C2086	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2030	1-164-870-11	CERAMIC CHIP 68PF	5.00% 50V	C2087	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2032	1-164-860-11	CERAMIC CHIP 27PF	5.00% 50V	C2088	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2033	1-164-860-11	CERAMIC CHIP 27PF	5.00% 50V	C2089	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2034	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2090	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2036	1-164-868-11	CERAMIC CHIP 56PF	5.00% 50V	C2091	1-100-765-21	ELECT CHIP 10UF	20% 16V
C2037	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2092	1-100-765-21	ELECT CHIP 10UF	20% 16V
C2038	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2093	1-100-766-21	ELECT CHIP 47UF	20% 16V
C2040	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C2094	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2041	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2095	1-112-791-11	ELECT CHIP 100UF	20% 16V
C2042	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C3004	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
C2043	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3005	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
C2044	1-164-870-11	CERAMIC CHIP 68PF	5.00% 50V	C3008	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2046	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3010	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2047	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3012	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V
C2048	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C3013	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2049	1-164-870-11	CERAMIC CHIP 68PF	5.00% 50V	C3014	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2050	1-135-366-11	ELECT CHIP 100UF	20% 16V	C3019	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2051	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3020	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2052	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3021	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2053	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3022	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2054	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3023	1-137-893-11	ELECT CHIP 22UF	20% 16V
C2055	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3024	1-137-893-11	ELECT CHIP 22UF	20% 16V
C2056	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3027	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C2057	1-100-904-11	CERAMIC CHIP 330PF	10% 50V	C3028	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
C2058	1-135-366-11	ELECT CHIP 100UF	20% 16V	C3029	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2059	1-112-781-11	CERAMIC CHIP 1UF	10% 10V	C3030	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2060	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3033	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2061	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C3034	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2062	1-164-856-81	CERAMIC CHIP 18PF	5.00% 50V	C3046	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2063	1-164-852-11	CERAMIC CHIP 12PF	5.00% 50V	C3047	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2068	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C3049	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2070	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3051	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
				C3052	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
				C3053	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
				C3054	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
				C3055	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
				C3056	1-137-893-11	ELECT CHIP 22UF	20% 16V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C3057	1-137-893-11	ELECT CHIP 22UF	20% 16V	C4047	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3062	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V	C4049	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3063	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C4050	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3064	1-112-778-11	CERAMIC CHIP 0.022UF	10% 25V	C4051	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3065	1-112-778-11	CERAMIC CHIP 0.022UF	10% 25V	C4052	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3066	1-112-778-11	CERAMIC CHIP 0.022UF	10% 25V	C4053	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3067	1-112-778-11	CERAMIC CHIP 0.022UF	10% 25V	C4054	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3068	1-100-904-11	CERAMIC CHIP 330PF	10% 50V	C4056	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3069	1-100-904-11	CERAMIC CHIP 330PF	10% 50V	C4057	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3400	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4059	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3401	1-100-765-21	ELECT CHIP 10UF	20% 16V	C4060	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3402	1-100-765-21	ELECT CHIP 10UF	20% 16V	C4062	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3407	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	C4063	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3408	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	C4100	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C3411	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C4101	1-100-765-21	ELECT CHIP 10UF	20% 16V
C3414	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C4102	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C3415	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C4103	1-112-781-11	CERAMIC CHIP 1UF	10% 10V
C3417	1-100-765-21	ELECT CHIP 10UF	20% 16V	C4104	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C3419	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4105	1-112-778-11	CERAMIC CHIP 0.022UF	10% 25V
C3420	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4109	1-100-766-21	ELECT CHIP 47UF	20% 16V
C3421	1-100-765-21	ELECT CHIP 10UF	20% 16V	C4111	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3422	1-112-781-11	CERAMIC CHIP 1UF	10% 10V	C4112	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3423	1-112-781-11	CERAMIC CHIP 1UF	10% 10V	C4113	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3424	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4114	1-112-001-81	CERAMIC CHIP 270PF	5% 50V
C4000	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4115	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4002	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4117	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C4003	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4119	1-115-340-11	CERAMIC CHIP 0.22UF	10.00% 25V
C4005	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4120	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4006	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4121	1-112-034-91	CERAMIC CHIP 0.01UF	5% 50V
C4007	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4122	1-164-230-11	CERAMIC CHIP 220PF	5.00% 50V
C4010	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4123	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4014	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4124	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4016	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4125	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4017	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4126	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4019	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4127	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4021	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4128	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4022	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4129	1-114-399-21	ELECT CHIP 47UF	20% 6.3V
C4023	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4130	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4026	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4131	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C4027	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4134	1-112-068-11	CERAMIC CHIP 220PF	10% 50V
C4028	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4135	1-114-398-21	ELECT CHIP 22UF	20% 6.3V
C4031	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4138	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4032	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4139	1-112-774-11	CERAMIC CHIP 470PF	10% 50V
C4034	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4140	1-100-633-21	ELECT CHIP 47UF	20% 35V
C4041	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4142	1-164-854-11	CERAMIC CHIP 15PF	5.00% 50V
C4042	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4143	1-164-854-11	CERAMIC CHIP 15PF	5.00% 50V
C4043	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4144	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4044	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4145	1-112-034-91	CERAMIC CHIP 0.01UF	5% 50V
C4045	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4147	1-115-416-11	CERAMIC CHIP 0.001UF	5.00% 25V
C4046	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4300	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C4302	1-114-399-21	ELECT CHIP 47UF	20% 6.3V	C4501	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4303	1-164-876-11	CERAMIC CHIP 120PF	5.00% 50V	C4511	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4305	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4516	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4307	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4561	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4308	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4562	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4309	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4563	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4310	1-100-765-21	ELECT CHIP 10UF	20% 16V	C4564	1-115-416-11	CERAMIC CHIP 0.001UF	5.00% 25V
C4311	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C5500	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4312	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C5501	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4313	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C5502	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4314	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C5503	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4315	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C5504	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4316	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C5505	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4317	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C5506	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4318	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C5507	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4319	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C5508	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4320	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C5509	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4321	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C5510	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4322	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C5513	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4323	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C5514	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4324	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C5515	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4325	1-112-775-11	CERAMIC CHIP 0.0022UF	10% 50V	C5517	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4326	1-112-775-11	CERAMIC CHIP 0.0022UF	10% 50V	C5521	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4327	1-112-775-11	CERAMIC CHIP 0.0022UF	10% 50V	C5530	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4328	1-112-775-11	CERAMIC CHIP 0.0022UF	10% 50V	C5533	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4329	1-100-765-21	ELECT CHIP 10UF	20% 16V	C5538	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4330	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C5540	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4331	1-112-775-11	CERAMIC CHIP 0.0022UF	10% 50V	C5541	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4332	1-112-775-11	CERAMIC CHIP 0.0022UF	10% 50V	C5542	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4333	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C5543	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4334	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C5544	1-100-551-21	ELECT CHIP 22UF	20% 20V
C4335	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C5545	1-100-551-21	ELECT CHIP 22UF	20% 20V
C4336	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C5546	1-100-765-21	ELECT CHIP 10UF	20% 16V
C4337	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C5575	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4338	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C5588	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4339	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C5589	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4340	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C5590	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4341	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C5591	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4342	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C5592	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4344	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C5593	1-100-765-21	ELECT CHIP 10UF	20% 16V
C4346	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6400	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4399	1-112-780-11	CERAMIC CHIP 0.47UF	10% 16V	C6401	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4400	1-112-780-11	CERAMIC CHIP 0.47UF	10% 16V	C6402	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4401	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6403	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4402	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6404	1-112-791-11	ELECT CHIP 100UF	20% 16V
C4403	1-114-399-21	ELECT CHIP 47UF	20% 6.3V	C6405	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4404	1-114-320-11	CERAMIC CHIP 0.22UF	10% 6.3V	C6406	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4405	1-114-320-11	CERAMIC CHIP 0.22UF	10% 6.3V	C6407	1-100-904-11	CERAMIC CHIP 330PF	10% 50V
C4406	1-112-776-11	CERAMIC CHIP 0.0047UF	10% 50V	C6408	1-112-791-11	ELECT CHIP 100UF	20% 16V
C4500	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6409	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C6410	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	C6494	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C6411	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6502	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
C6412	1-112-068-11	CERAMIC CHIP 220PF	10% 50V	C6505	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6413	1-100-766-21	ELECT CHIP 47UF	20% 16V	C6507	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C6414	1-114-808-11	CERAMIC CHIP 0.033UF	10% 16V	C6512	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
C6415	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	C6516	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
C6416	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C6520	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
C6417	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C6521	1-114-797-11	CERAMIC CHIP 390PF	10% 50V
C6418	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6522	1-114-797-11	CERAMIC CHIP 390PF	10% 50V
C6419	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6523	1-114-797-11	CERAMIC CHIP 390PF	10% 50V
C6420	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V	C6524	1-114-797-11	CERAMIC CHIP 390PF	10% 50V
C6422	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C6525	1-114-797-11	CERAMIC CHIP 390PF	10% 50V
C6423	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V	C6526	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
C6424	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6527	1-112-780-11	CERAMIC CHIP 0.47UF	10% 16V
C6425	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V	C6529	1-112-780-11	CERAMIC CHIP 0.47UF	10% 16V
C6426	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C6530	1-100-766-21	ELECT CHIP 47UF	20% 16V
C6427	1-135-366-11	ELECT CHIP 100UF	20% 16V	C6531	1-100-766-21	ELECT CHIP 47UF	20% 16V
C6428	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C6532	1-114-808-11	CERAMIC CHIP 0.033UF	10% 16V
C6429	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6533	1-114-807-11	CERAMIC CHIP 0.015UF	10% 25V
C6431	1-114-415-21	ELECT CHIP 100UF	20% 6.3V	C6535	1-135-366-11	ELECT CHIP 100UF	20% 16V
C6432	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6536	1-135-366-11	ELECT CHIP 100UF	20% 16V
C6433	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C6537	1-114-399-21	ELECT CHIP 47UF	20% 6.3V
C6435	1-114-415-21	ELECT CHIP 100UF	20% 6.3V	C6538	1-114-399-21	ELECT CHIP 47UF	20% 6.3V
C6437	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6539	1-114-399-21	ELECT CHIP 47UF	20% 6.3V
C6438	1-112-066-11	CERAMIC CHIP 10UF	10% 10V	C6540	1-114-399-21	ELECT CHIP 47UF	20% 6.3V
C6439	1-112-774-11	CERAMIC CHIP 470PF	10% 50V	C7101	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C6440	1-112-068-11	CERAMIC CHIP 220PF	10% 50V	C7102	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
C6442	1-114-415-21	ELECT CHIP 100UF	20% 6.3V	C7104	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6443	1-112-774-11	CERAMIC CHIP 470PF	10% 50V	C7105	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6444	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7106	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6446	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7107	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6447	1-114-813-11	CERAMIC CHIP 1UF	10% 16V	C7108	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6450	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7109	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6456	1-114-130-11	CERAMIC CHIP 1UF	10% 6.3V	C7110	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6457	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7118	1-100-765-21	ELECT CHIP 10UF	20% 16V
C6458	1-114-130-11	CERAMIC CHIP 1UF	10% 6.3V	C7123	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6459	1-112-774-11	CERAMIC CHIP 470PF	10% 50V	C7124	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6460	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7125	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6463	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7126	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6465	1-114-130-11	CERAMIC CHIP 1UF	10% 6.3V	C7128	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6466	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7132	1-164-850-11	CERAMIC CHIP 10PF	0.50PF 50V
C6469	1-114-130-11	CERAMIC CHIP 1UF	10% 6.3V	C7135	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C6471	1-114-813-11	CERAMIC CHIP 1UF	10% 16V	C7136	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6472	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C7137	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6481	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7138	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C6484	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	C7142	1-100-765-21	ELECT CHIP 10UF	20% 16V
C6487	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C7145	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6488	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C7200	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6490	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C7201	1-112-781-11	CERAMIC CHIP 1UF	10% 10V
C6491	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C7202	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C7203	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7826	1-125-891-11	CERAMIC CHIP 0.47UF	10.00% 10V
C7204	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7830	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C7205	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7831	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V
C7208	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7832	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V
C7209	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	C7835	1-100-765-21	ELECT CHIP 10UF	20% 16V
C7210	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7836	1-100-766-21	ELECT CHIP 47UF	20% 16V
C7211	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	C7837	1-100-766-21	ELECT CHIP 47UF	20% 16V
C7212	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7838	1-100-766-21	ELECT CHIP 47UF	20% 16V
C7218	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7839	1-100-766-21	ELECT CHIP 47UF	20% 16V
C7220	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7840	1-135-366-11	ELECT CHIP 100UF	20% 16V
C7222	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7841	1-135-366-11	ELECT CHIP 100UF	20% 16V
C7223	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7842	1-112-774-11	CERAMIC CHIP 470PF	10% 50V
C7224	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	C7843	1-112-774-11	CERAMIC CHIP 470PF	10% 50V
C7225	1-135-366-11	ELECT CHIP 100UF	20% 16V	C7844	1-112-774-11	CERAMIC CHIP 470PF	10% 50V
C7226	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7845	1-112-774-11	CERAMIC CHIP 470PF	10% 50V
C7227	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7846	1-100-766-21	ELECT CHIP 47UF	20% 16V
C7228	1-164-860-11	CERAMIC CHIP 27PF	5.00% 50V	< CONNECTOR >			
C7229	1-164-870-11	CERAMIC CHIP 68PF	5.00% 50V	CN3000	*1-417-602-11	SOCKET 21PIN	
C7231	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	CN3002	*1-417-602-11	SOCKET 21PIN	
C7232	1-164-840-11	CERAMIC CHIP 1PF	0.25PF 50V	CN4101	1-779-936-51	CONNECTOR, FFC/FPC 18P	
C7233	1-164-840-11	CERAMIC CHIP 1PF	0.25PF 50V	CN4102	1-820-180-11	HEADER ASSEMBLY (PRINT PWB) 3P	
C7234	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	CN4103	1-819-337-11	HEADER ASSEMBLY FOR PWB 10P	
C7235	1-114-399-21	ELECT CHIP 47UF	20% 6.3V	CN4104	*1-820-235-21	HEADER ASSEMBLY 30P	
C7300	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	CN4500	1-822-087-11	D SUB CONNECTOR (15 PIN)	
C7301	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	CN5500	1-821-819-12	HDMI CONNECTOR	
C7302	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	CN5501	1-821-819-12	HDMI CONNECTOR	
C7303	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V	CN5575	1-821-819-12	HDMI CONNECTOR	
C7304	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	CN6404	*1-818-656-21	HEADER ASSEMBLY 30P	
C7305	1-164-937-11	CERAMIC CHIP 0.001UF	10.00% 50V	CN7300	*1-822-234-11	CONNECTOR, CARD (PCMCIA CARD)	
C7306	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	CN7501	1-822-033-11	MEMORY STICK CONNECTOR	
C7307	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	< DIODE >			
C7308	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D2000	6-501-633-01	DIODE PZU33B	
C7309	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D3000	6-502-180-01	DI UMZ12KTL	
C7310	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D3001	6-502-180-01	DI UMZ12KTL	
C7311	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D3004	6-501-619-01	DIODE PZU9.1B2	
C7313	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D3005	6-501-623-01	DIODE PZU13B2	
C7314	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	D3006	6-501-619-01	DIODE PZU9.1B2	
C7315	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D3007	6-501-619-01	DIODE PZU9.1B2	
C7316	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	D3008	6-501-619-01	DIODE PZU9.1B2	
C7802	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V	D3009	6-501-614-01	DIODE PZU5.6B2	
C7803	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V	D3010	6-501-619-01	DIODE PZU9.1B2	
C7804	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V	D3012	6-501-620-01	DIODE PZU10B2	
C7805	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V	D3013	6-501-619-01	DIODE PZU9.1B2	
C7807	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	D3014	6-501-619-01	DIODE PZU9.1B2	
C7808	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	D3015	6-501-619-01	DIODE PZU9.1B2	
C7809	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	D3016	6-501-619-01	DIODE PZU9.1B2	
C7810	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V				
C7811	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V				
C7812	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V				
C7815	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V				

Note : The components identified by shading
and marked Δ are critical for safety.
Replace only with the part numbers
specified in the parts list.

BC1

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
D3017	6-501-619-01	DIODE PZU9.1B2		D6417	6-501-817-01	DIODE MA2J1110GLS0	
D3018	6-501-619-01	DIODE PZU9.1B2		D6418	6-502-318-01	DI MA4J1130GLS0	
D3019	6-501-619-01	DIODE PZU9.1B2		D6419	6-501-336-01	DIODE RSX201L-30TE25	
D3020	6-501-619-01	DIODE PZU9.1B2		D6420	6-501-817-01	DIODE MA2J1110GLS0	
D3023	6-501-619-01	DIODE PZU9.1B2		D6422	6-502-172-01	DI UMZ5.6KTL	
D3024	6-501-619-01	DIODE PZU9.1B2		D6423	6-501-614-01	DIODE PZU5.6B2	
D3025	6-501-619-01	DIODE PZU9.1B2		D6424	6-502-172-01	DI UMZ5.6KTL	
D3026	6-501-619-01	DIODE PZU9.1B2		D6426	6-502-172-01	DI UMZ5.6KTL	
D3027	6-501-619-01	DIODE PZU9.1B2		D7800	6-501-619-01	DIODE PZU9.1B2	
D3028	6-501-619-01	DIODE PZU9.1B2		D7801	6-501-619-01	DIODE PZU9.1B2	
D3029	6-501-614-01	DIODE PZU5.6B2		D7805	6-502-318-01	DI MA4J1130GLS0	
D3030	6-501-623-01	DIODE PZU13B2		D7808	6-501-619-01	DIODE PZU9.1B2	
D3031	6-501-619-01	DIODE PZU9.1B2		D7809	6-501-817-01	DIODE MA2J1110GLS0	
D3032	6-501-623-01	DIODE PZU13B2		D7810	6-501-817-01	DIODE MA2J1110GLS0	
D3033	6-502-172-01	DI UMZ5.6KTL		D7811	6-501-817-01	DIODE MA2J1110GLS0	
D3035	6-502-172-01	DI UMZ5.6KTL		D7812	6-501-817-01	DIODE MA2J1110GLS0	
D3036	6-502-172-01	DI UMZ5.6KTL		D7813	6-501-817-01	DIODE MA2J1110GLS0	
D3039	6-501-619-01	DIODE PZU9.1B2		ET2000	1-780-434-11	TERMINAL, GROUND (ON BOARD CON	
D3040	6-501-619-01	DIODE PZU9.1B2		ET2001	1-780-434-11	TERMINAL, GROUND (ON BOARD CON	
D3041	6-501-619-01	DIODE PZU9.1B2		ET6400	1-780-336-11	EARTH TERMINAL	
D3042	6-501-619-01	DIODE PZU9.1B2		ET6401	1-780-336-11	EARTH TERMINAL	
D3043	6-502-172-01	DI UMZ5.6KTL		ET6402	1-780-336-11	EARTH TERMINAL	
D4102	6-501-817-01	DIODE MA2J1110GLS0		ET6403	1-780-336-11	EARTH TERMINAL	
D4104	6-501-614-01	DIODE PZU5.6B2		ET6404	1-780-336-11	EARTH TERMINAL	
D4105	6-501-614-01	DIODE PZU5.6B2		ET6405	1-780-336-11	EARTH TERMINAL	
D4107	6-501-817-01	DIODE MA2J1110GLS0		< FUSE >			
D4108	6-501-817-01	DIODE MA2J1110GLS0		FA500	1-576-646-11	FUSE	0.5A 50V
D4109	6-501-817-01	DIODE MA2J1110GLS0		< FERRITE BEAD >			
D4110	6-500-335-01	DIODE MC2838-T112-1		FB2002	1-469-869-21	FERRITE	OUI
D4111	6-500-335-01	DIODE MC2838-T112-1		FB2003	1-400-807-21	FERRITE	OUI
D4112	6-501-614-01	DIODE PZU5.6B2		FB2004	1-400-807-21	FERRITE	OUI
D4501	6-502-172-01	DI UMZ5.6KTL		FB2005	1-400-834-11	FERRITE	OUI
D4502	6-501-614-01	DIODE PZU5.6B2		FB2006	1-400-834-11	FERRITE	OUI
D4503	6-500-335-01	DIODE MC2838-T112-1		FB2007	1-481-417-21	FERRITE	OUI
D4504	6-502-172-01	DI UMZ5.6KTL		FB2008	1-481-417-21	FERRITE	OUI
D4507	6-502-172-01	DI UMZ5.6KTL		FB3401	1-400-834-11	FERRITE	OUI
D4509	6-502-172-01	DI UMZ5.6KTL		FB3402	1-400-244-11	FERRITE	OUI
D4510	6-502-172-01	DI UMZ5.6KTL		FB4111	1-469-084-21	FERRITE	OMH
D4512	6-502-172-01	DI UMZ5.6KTL		FB4112	1-469-084-21	FERRITE	OMH
D5500	8-719-060-48	DIODE RB751V-40TE-17		FB4113	1-469-084-21	FERRITE	OMH
D5577	6-502-318-01	DI MA4J1130GLS0		FB4114	1-469-084-21	FERRITE	OMH
D5578	6-502-318-01	DI MA4J1130GLS0		FB4115	1-469-084-21	FERRITE	OMH
D5579	6-502-318-01	DI MA4J1130GLS0		FB4116	1-469-084-21	FERRITE	OMH
D6404	6-502-318-01	DI MA4J1130GLS0		FB4117	1-469-084-21	FERRITE	OMH
D6406	6-501-528-01	DIODE 1SMA5915BT3G		FB4118	1-400-591-22	FERRITE	OUI
D6407	6-501-528-01	DIODE 1SMA5915BT3G		FB4119	1-400-591-22	FERRITE	OUI
D6410	6-501-336-01	DIODE RSX201L-30TE25		FB4300	1-400-382-11	FERRITE	OUI
D6411	6-501-336-01	DIODE RSX201L-30TE25					
D6415	6-501-623-01	DIODE PZU13B2					
D6416	6-501-336-01	DIODE RSX201L-30TE25					

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
FB4301	1-400-382-11	FERRITE	Ouh	FL7101	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FB4302	1-400-382-11	FERRITE	Ouh	FL7102	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FB4503	1-400-141-22	FERRITE	Ouh	FL7103	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FB5500	1-400-693-21	FERRITE	Ouh	FL7104	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FB5501	1-400-693-21	FERRITE	Ouh	FL7105	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FB5575	1-400-693-21	FERRITE	Ouh			< IC >	
FB6400	1-400-915-21	FERRITE	Ouh	IC2000	6-709-607-01	IC LA5795T-TLM-E	
FB6401	1-469-869-21	FERRITE	Ouh	IC2001	8-753-296-86	IC CXD1978R-T6	
FB6402	1-400-915-21	FERRITE	Ouh	IC2005	6-709-257-01	IC 74LVC4066PW	
FB6403	1-469-869-21	FERRITE	Ouh	IC2006	6-709-932-01	IC MM3141CNRE	
FB6411	1-400-110-21	FERRITE	Ouh	IC3400	6-710-905-01	IC AK4388ET-E2	
FB6412	1-400-110-21	FERRITE	Ouh				
FB6413	1-400-915-21	FERRITE	Ouh	IC3402	8-759-278-58	IC NJM4558V-TE2	
FB6414	1-400-915-21	FERRITE	Ouh	IC3600	8-759-385-76	IC MC14052 BDR2	
FB6415	1-400-915-21	FERRITE	Ouh	IC4000	6-808-202-01	IC VCT7593P-A1-H-802	
FB6416	1-400-834-11	FERRITE	Ouh	IC4100	8-759-701-01	IC NJM2904M	
FB6417	1-400-834-11	FERRITE	Ouh	IC4101	8-759-701-01	IC NJM2904M	
FB6418	1-400-834-11	FERRITE	Ouh				
FB6419	1-400-834-11	FERRITE	Ouh	IC4102	6-705-580-01	IC PST3616UL	
FB6420	1-400-834-11	FERRITE	Ouh	IC4103	6-703-175-01	IC PST3629UL	
FB6421	1-400-834-11	FERRITE	Ouh	IC4104	6-712-526-01	IC CAT24C32WI-GT3 (E)	
FB7104	1-400-244-11	FERRITE	Ouh	IC4300	8-759-082-60	IC TC7S66FU	
FB7105	1-400-244-11	FERRITE	Ouh	IC4301	8-759-082-60	IC TC7S66FU	
FB7106	1-400-244-11	FERRITE	Ouh				
FB7107	1-400-244-11	FERRITE	Ouh	IC4303	6-712-190-01	IC W9864G2GH-6-ER10(T&R)	
FB7117	1-400-834-11	FERRITE	Ouh	IC4399	8-759-082-60	IC TC7S66FU	
FB7200	1-400-244-11	FERRITE	Ouh	IC4400	8-759-082-60	IC TC7S66FU	
FB7201	1-400-244-11	FERRITE	Ouh	IC4500	6-701-162-01	IC MC74LVX259DTR2	
FB7202	1-400-244-11	FERRITE	Ouh	IC4501	6-704-600-01	IC M24C02-WMN6T (B)	
FB7300	1-400-834-11	FERRITE	Ouh				
FB7301	1-400-834-11	FERRITE	Ouh	IC4502	6-701-166-01	IC MC74LVX4051DTR2	
FB7302	1-400-834-11	FERRITE	Ouh	IC4503	6-701-162-01	IC MC74LVX259DTR2	
FB7303	1-400-834-11	FERRITE	Ouh	IC4561	6-712-527-01	IC MM3154XURE	
FB7304	1-400-834-11	FERRITE	Ouh	IC4562	6-701-162-01	IC MC74LVX259DTR2	
FB7305	1-400-834-11	FERRITE	Ouh	IC5500	6-704-600-01	IC M24C02-WMN6T (B)	
FB7306	1-400-834-11	FERRITE	Ouh				
FB7307	1-400-834-11	FERRITE	Ouh	IC5501	6-704-600-01	IC M24C02-WMN6T (B)	
FB7308	1-400-834-11	FERRITE	Ouh	IC5575	6-704-600-01	IC M24C02-WMN6T (B)	
FB7309	1-469-869-21	FERRITE	Ouh	IC5588	8-753-282-08	IC CXB1444R-T6	
				IC5589	6-711-332-01	IC TC7SG17FU (TE85R,F)	
				IC6400	6-706-046-01	IC TK11185CSCL-G	
				IC6401	6-710-922-01	IC BD9853AFV-E2	
				IC6402	6-710-922-01	IC BD9853AFV-E2	
				IC6403	6-705-403-01	IC PQ070XZ01ZPH	
				IC6404	6-711-746-01	IC LD1117ASTR	
				IC6405	6-705-403-01	IC PQ070XZ01ZPH	
				IC7100	6-709-214-01	IC UPD61123F1-100-KA3-A	
FL5500	1-234-939-21	FILTER, EMI REMOVAL (SMD)		IC7200	6-705-336-01	IC K9F2808U0C-PCB0T	
FL5501	1-234-939-21	FILTER, EMI REMOVAL (SMD)		IC7201	6-705-306-01	IC HYB25DC256160CE-6	
FL5503	1-234-939-21	FILTER, EMI REMOVAL (SMD)		IC7202	6-711-876-01	IC PI6CX100-27WEX	
FL5504	1-234-939-21	FILTER, EMI REMOVAL (SMD)		IC7203	6-712-337-01	IC PCA8563T/4	
FL5505	1-234-939-21	FILTER, EMI REMOVAL (SMD)					
FL6400	1-234-939-21	FILTER, EMI REMOVAL (SMD)		IC7300	6-706-482-01	IC TC7SH00FU (T5RSOYJF)	
FL6401	1-234-939-21	FILTER, EMI REMOVAL (SMD)		IC7301	6-707-850-01	IC TC74LCX245FT (EKJ)	
FL6402	1-234-939-21	FILTER, EMI REMOVAL (SMD)		IC7302	6-706-482-01	IC TC7SH00FU (T5RSOYJF)	
FL7100	1-234-939-21	FILTER, EMI REMOVAL (SMD)					

< FILTER >

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

BC1

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
IC7303	6-707-846-01	IC TC74LCX14FT(EKJ)		L6413	1-414-394-11	INDUCTOR	2.2UH
IC7304	6-707-853-01	IC TC74LCX541FT(EKJ)		L6417	1-412-052-21	INDUCTOR	1UH
IC7305	6-707-853-01	IC TC74LCX541FT(EKJ)		L6418	1-412-052-21	INDUCTOR	1UH
IC7306	6-707-853-01	IC TC74LCX541FT(EKJ)		L6421	1-412-052-21	INDUCTOR	1UH
IC7307	6-707-853-01	IC TC74LCX541FT(EKJ)		L6422	1-412-052-21	INDUCTOR	1UH
IC7308	6-707-853-01	IC TC74LCX541FT(EKJ)		L6423	1-414-394-11	INDUCTOR	2.2UH
IC7309	6-707-853-01	IC TC74LCX541FT(EKJ)		L6424	1-414-394-11	INDUCTOR	2.2UH
IC7310	6-711-288-01	IC MIC2005-0.5YM6TR		L7200	1-412-008-31	INDUCTOR	15UH
IC7800	8-759-359-49	IC NJM3414AV(TE2)		L7800	1-412-058-11	INDUCTOR	10UH
< SOCKET >				< PROTECTOR MODULE >			
J3000	1-821-115-11	PHONO JACK (RIGHT ANGLE) 3P		PS6400	1-576-736-41	IC LINK	3.15A 24V
J3001	1-819-327-21	PHONO JACK 2P		PS6401	1-576-736-41	IC LINK	3.15A 24V
J3003	1-820-021-11	JACK		PS6402	1-576-736-41	IC LINK	3.15A 24V
J3004	1-819-354-31	PHONO JACK 5P		< TRANSISTOR >			
J7800	1-815-325-11	JACK		Q2000	8-729-027-44	TRANSISTOR DTC114TKA-T146	
< COIL >				Q2001	6-550-871-01	TRANSISTOR 2SA2048TL QR	
L2000	1-469-555-21	INDUCTOR	10UH	Q2002	6-551-904-01	TR RT3S03M-T111-1	
L2002	1-412-058-11	INDUCTOR	10UH	Q2003	6-551-904-01	TR RT3S03M-T111-1	
L2003	1-412-052-21	INDUCTOR	1UH	Q2004	6-551-904-01	TR RT3S03M-T111-1	
L2004	1-469-926-21	INDUCTOR	270NH	Q2005	8-729-620-13	TRANSISTOR 2SC4154TP-1EF	
L2005	1-414-580-21	INDUCTOR	100NH	Q2006	6-550-871-01	TRANSISTOR 2SA2048TL QR	
L2006	1-469-926-21	INDUCTOR	270NH	Q3000	8-729-010-05	TRANSISTOR MSB709-RT1	
L2007	1-412-052-21	INDUCTOR	1UH	Q3001	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
L2008	1-412-058-11	INDUCTOR	10UH	Q3002	8-729-010-05	TRANSISTOR MSB709-RT1	
L2009	1-414-580-21	INDUCTOR	100NH	Q3003	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
L2010	1-414-580-21	INDUCTOR	100NH	Q3600	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
L2011	1-412-058-11	INDUCTOR	10UH	Q3601	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
L2012	1-469-549-21	INDUCTOR	1UH	Q4100	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
L2013	1-412-058-11	INDUCTOR	10UH	Q4101	8-729-028-73	TRANSISTOR DTA114EUA-T106	
L2014	1-410-993-42	INDUCTOR	1UH	Q4102	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)	
L3600	1-412-058-11	INDUCTOR	10UH	Q4103	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)	
L4100	1-412-052-21	INDUCTOR	1UH	Q4104	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)	
L4101	1-456-583-11	INDUCTOR	0UH	Q4105	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)	
L4102	1-456-583-11	INDUCTOR	0UH	Q4106	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
L4103	1-456-583-11	INDUCTOR	0UH	Q4107	8-729-038-28	TRANSISTOR RT1N441C-TP-1	
L4104	1-456-583-11	INDUCTOR	0UH	Q4108	8-729-038-28	TRANSISTOR RT1N441C-TP-1	
L4105	1-456-583-11	INDUCTOR	0UH	Q4109	8-729-027-43	TRANSISTOR DTC114EKA-T146	
L4106	1-400-180-21	FERRITE	0UH	Q4110	8-729-038-28	TRANSISTOR RT1N441C-TP-1	
L4300	1-412-990-41	INDUCTOR	8.2UH	Q4111	8-729-050-10	TRANSISTOR PMBF170-215	
L4560	1-414-754-11	INDUCTOR	10UH	Q4112	8-729-038-28	TRANSISTOR RT1N441C-TP-1	
L5505	1-414-394-11	INDUCTOR	2.2UH	Q4113	6-551-982-01	TR RT3K33M-T111A-1	
L6402	1-414-398-11	INDUCTOR	10UH	Q4300	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
L6403	1-457-439-11	INDUCTOR	4.7UH	Q4301	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
L6404	1-457-439-11	INDUCTOR	4.7UH	Q4399	8-729-027-43	TRANSISTOR DTC114EKA-T146	
L6405	1-457-439-11	INDUCTOR	4.7UH	Q5504	6-551-982-01	TR RT3K33M-T111A-1	
L6407	1-457-455-11	INDUCTOR	10UH	Q5506	8-729-028-96	TRANSISTOR DTC114EUA-T106	
L6410	1-412-052-21	INDUCTOR	1UH	Q5507	8-729-028-96	TRANSISTOR DTC114EUA-T106	
L6411	1-412-052-21	INDUCTOR	1UH	Q5508	6-551-815-01	TR UNR52A1G0LS0	

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
Q5509	6-551-701-01	TRANSISTOR INK0003AC1-T112A-1		R2011	1-218-953-11	RES-CHIP 1K	5% 1/16W
Q6400	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		R2012	1-218-941-81	RES-CHIP 100	5% 1/16W
Q6401	8-729-027-43	TRANSISTOR DTC114EKA-T146		R2013	1-218-941-81	RES-CHIP 100	5% 1/16W
Q6402	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		R2014	1-218-990-81	SHORT CHIP	0
Q6403	8-729-027-43	TRANSISTOR DTC114EKA-T146		R2016	1-218-941-81	RES-CHIP 100	5% 1/16W
Q6404	8-729-027-43	TRANSISTOR DTC114EKA-T146		R2017	1-218-990-81	SHORT CHIP	0
Q6405	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		R2018	1-218-941-81	RES-CHIP 100	5% 1/16W
Q6406	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		R2019	1-218-941-81	RES-CHIP 100	5% 1/16W
Q6407	6-550-828-01	TRANSISTOR RSQ035P03TR		R2020	1-218-990-81	SHORT CHIP	0
Q6408	6-550-828-01	TRANSISTOR RSQ035P03TR		R2021	1-218-990-81	SHORT CHIP	0
Q6409	6-550-355-01	TRANSISTOR RTQ045N03TR		R2022	1-218-941-81	RES-CHIP 100	5% 1/16W
Q6410	6-550-355-01	TRANSISTOR RTQ045N03TR		R2025	1-218-941-81	RES-CHIP 100	5% 1/16W
Q6411	6-550-828-01	TRANSISTOR RSQ035P03TR		R2026	1-218-941-81	RES-CHIP 100	5% 1/16W
Q6412	6-551-334-01	TRANSISTOR RTL035N03TR		R2027	1-218-941-81	RES-CHIP 100	5% 1/16W
Q6413	8-729-010-05	TRANSISTOR MSB709-RT1		R2029	1-218-941-81	RES-CHIP 100	5% 1/16W
Q6414	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		R2031	1-218-967-11	RES-CHIP 15K	5% 1/16W
Q6415	8-729-027-43	TRANSISTOR DTC114EKA-T146		R2032	1-216-864-11	SHORT CHIP	0
Q6416	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		R2039	1-218-990-81	SHORT CHIP	0
Q6417	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		R2040	1-218-990-81	SHORT CHIP	0
Q6418	6-550-369-01	TRANSISTOR TPC8109 (TE12L)		R2041	1-218-990-81	SHORT CHIP	0
Q6419	6-550-585-01	TRANSISTOR 2PC4081R-115		R2043	1-218-989-11	RES-CHIP 1M	5% 1/16W
Q6420	8-729-027-43	TRANSISTOR DTC114EKA-T146		R2044	1-218-941-81	RES-CHIP 100	5% 1/16W
Q6422	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)		R2046	1-218-941-81	RES-CHIP 100	5% 1/16W
Q6424	6-550-585-01	TRANSISTOR 2PC4081R-115		R2047	1-218-990-81	SHORT CHIP	0
Q6425	6-550-585-01	TRANSISTOR 2PC4081R-115		R2049	1-218-949-11	RES-CHIP 470	5% 1/16W
Q7200	8-729-010-05	TRANSISTOR MSB709-RT1		R2055	1-218-990-81	SHORT CHIP	0
Q7201	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)		R2060	1-218-990-81	SHORT CHIP	0
Q7202	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)		R2061	1-218-990-81	SHORT CHIP	0
Q7203	8-729-028-96	TRANSISTOR DTC114EUA-T106		R2063	1-218-990-81	SHORT CHIP	0
Q7204	8-729-028-86	TRANSISTOR DTA143EUA-T106		R2064	1-218-990-81	SHORT CHIP	0
Q7800	6-551-817-01	TR UNR52A3G0LS0		R2070	1-218-990-81	SHORT CHIP	0
Q7801	6-551-775-01	TR 2SA2122G0LS0		R2075	1-218-965-11	RES-CHIP 10K	5% 1/16W
Q7802	6-551-776-01	TR 2SC5950G0LS0		R2079	1-218-949-11	RES-CHIP 470	5% 1/16W
Q7803	6-551-776-01	TR 2SC5950G0LS0		R2080	1-218-990-81	SHORT CHIP	0
Q7804	8-729-038-28	TRANSISTOR RT1N441C-TP-1		R2086	1-218-990-81	SHORT CHIP	0
Q7805	6-551-677-01	TRANSISTOR RTAN140M-T111-1		R2087	1-218-990-81	SHORT CHIP	0
Q7806	6-551-677-01	TRANSISTOR RTAN140M-T111-1		R2091	1-218-965-11	RES-CHIP 10K	5% 1/16W
		< RESISTOR >		R2092	1-218-965-11	RES-CHIP 10K	5% 1/16W
R2001	1-208-713-11	METAL CHIP 18K	0.5% 1/16W	R2093	1-218-965-11	RES-CHIP 10K	5% 1/16W
R2002	1-208-695-11	METAL CHIP 3.3K	0.5% 1/16W	R2099	1-218-990-81	SHORT CHIP	0
R2003	1-218-941-81	RES-CHIP 100	5% 1/16W	R2101	1-218-990-81	SHORT CHIP	0
R2004	1-218-941-81	RES-CHIP 100	5% 1/16W	R3006	1-220-169-11	RES-CHIP 75	5% 1/16W
R2005	1-218-941-81	RES-CHIP 100	5% 1/16W	R3008	1-220-169-11	RES-CHIP 75	5% 1/16W
R2006	1-218-961-11	RES-CHIP 4.7K	5% 1/16W	R3009	1-220-169-11	RES-CHIP 75	5% 1/16W
R2007	1-218-990-81	SHORT CHIP	0	R3010	1-220-169-11	RES-CHIP 75	5% 1/16W
R2008	1-218-941-81	RES-CHIP 100	5% 1/16W	R3011	1-220-169-11	RES-CHIP 75	5% 1/16W
R2009	1-218-941-81	RES-CHIP 100	5% 1/16W	R3013	1-216-811-11	METAL CHIP 150	5% 1/10W
R2010	1-218-941-81	RES-CHIP 100	5% 1/16W	R3016	1-216-811-11	METAL CHIP 150	5% 1/10W
				R3017	1-216-821-11	METAL CHIP 1K	5% 1/10W
				R3018	1-216-821-11	METAL CHIP 1K	5% 1/10W

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
R3019	1-216-813-11	METAL CHIP	220 5% 1/10W	R3123	1-218-943-11	RES-CHIP	150 5% 1/16W
R3021	1-216-813-11	METAL CHIP	220 5% 1/10W	R3124	1-218-943-11	RES-CHIP	150 5% 1/16W
R3028	1-220-169-11	RES-CHIP	75 5% 1/16W	R3125	1-218-943-11	RES-CHIP	150 5% 1/16W
R3032	1-216-853-11	METAL CHIP	470K 5% 1/10W	R3126	1-218-945-11	RES-CHIP	220 5% 1/16W
R3033	1-216-853-11	METAL CHIP	470K 5% 1/10W	R3127	1-218-945-11	RES-CHIP	220 5% 1/16W
R3034	1-216-853-11	METAL CHIP	470K 5% 1/10W	R3128	1-218-953-11	RES-CHIP	1K 5% 1/16W
R3035	1-216-853-11	METAL CHIP	470K 5% 1/10W	R3129	1-218-953-11	RES-CHIP	1K 5% 1/16W
R3036	1-216-853-11	METAL CHIP	470K 5% 1/10W	R3130	1-218-953-11	RES-CHIP	1K 5% 1/16W
R3037	1-216-853-11	METAL CHIP	470K 5% 1/10W	R3131	1-218-953-11	RES-CHIP	1K 5% 1/16W
R3040	1-216-811-11	METAL CHIP	150 5% 1/10W	R3132	1-218-953-11	RES-CHIP	1K 5% 1/16W
R3041	1-216-817-11	METAL CHIP	470 5% 1/10W	R3133	1-218-953-11	RES-CHIP	1K 5% 1/16W
R3042	1-216-811-11	METAL CHIP	150 5% 1/10W	R3134	1-218-953-11	RES-CHIP	1K 5% 1/16W
R3043	1-216-840-11	METAL CHIP	39K 5% 1/10W	R3135	1-218-953-11	RES-CHIP	1K 5% 1/16W
R3044	1-216-833-11	METAL CHIP	10K 5% 1/10W	R3136	1-218-947-11	RES-CHIP	330 5% 1/16W
R3047	1-216-853-11	METAL CHIP	470K 5% 1/10W	R3137	1-218-947-11	RES-CHIP	330 5% 1/16W
R3048	1-216-853-11	METAL CHIP	470K 5% 1/10W	R3138	1-218-947-11	RES-CHIP	330 5% 1/16W
R3063	1-220-169-11	RES-CHIP	75 5% 1/16W	R3139	1-218-947-11	RES-CHIP	330 5% 1/16W
R3065	1-220-169-11	RES-CHIP	75 5% 1/16W	R3140	1-218-947-11	RES-CHIP	330 5% 1/16W
R3066	1-220-169-11	RES-CHIP	75 5% 1/16W	R3141	1-218-947-11	RES-CHIP	330 5% 1/16W
R3067	1-220-169-11	RES-CHIP	75 5% 1/16W	R3401	1-218-965-11	RES-CHIP	10K 5% 1/16W
R3068	1-220-169-11	RES-CHIP	75 5% 1/16W	R3404	1-218-965-11	RES-CHIP	10K 5% 1/16W
R3073	1-216-809-11	METAL CHIP	100 5% 1/10W	R3405	1-218-941-81	RES-CHIP	100 5% 1/16W
R3074	1-216-809-11	METAL CHIP	100 5% 1/10W	R3408	1-218-977-11	RES-CHIP	100K 5% 1/16W
R3075	1-216-809-11	METAL CHIP	100 5% 1/10W	R3409	1-218-977-11	RES-CHIP	100K 5% 1/16W
R3076	1-216-853-11	METAL CHIP	470K 5% 1/10W	R3410	1-218-945-11	RES-CHIP	220 5% 1/16W
R3077	1-216-853-11	METAL CHIP	470K 5% 1/10W	R3411	1-218-945-11	RES-CHIP	220 5% 1/16W
R3090	1-220-169-11	RES-CHIP	75 5% 1/16W	R3412	1-208-683-11	METAL CHIP	1K 0.5% 1/16W
R3095	1-216-853-11	METAL CHIP	470K 5% 1/10W	R3413	1-208-683-11	METAL CHIP	1K 0.5% 1/16W
R3096	1-216-853-11	METAL CHIP	470K 5% 1/10W	R3414	1-218-972-11	RES-CHIP	39K 5% 1/16W
R3097	1-216-853-11	METAL CHIP	470K 5% 1/10W	R3415	1-218-972-11	RES-CHIP	39K 5% 1/16W
R3098	1-216-853-11	METAL CHIP	470K 5% 1/10W	R3416	1-218-968-11	RES-CHIP	18K 5% 1/16W
R3104	1-216-811-11	METAL CHIP	150 5% 1/10W	R3417	1-218-965-11	RES-CHIP	10K 5% 1/16W
R3105	1-216-817-11	METAL CHIP	470 5% 1/10W	R3418	1-218-965-11	RES-CHIP	10K 5% 1/16W
R3106	1-216-811-11	METAL CHIP	150 5% 1/10W	R3419	1-218-968-11	RES-CHIP	18K 5% 1/16W
R3107	1-216-840-11	METAL CHIP	39K 5% 1/10W	R3420	1-218-967-11	RES-CHIP	15K 5% 1/16W
R3108	1-216-833-11	METAL CHIP	10K 5% 1/10W	R3421	1-218-967-11	RES-CHIP	15K 5% 1/16W
R3109	1-218-941-81	RES-CHIP	100 5% 1/16W	R3422	1-218-968-11	RES-CHIP	18K 5% 1/16W
R3110	1-218-941-81	RES-CHIP	100 5% 1/16W	R3423	1-218-968-11	RES-CHIP	18K 5% 1/16W
R3111	1-218-941-81	RES-CHIP	100 5% 1/16W	R3426	1-218-941-81	RES-CHIP	100 5% 1/16W
R3112	1-218-941-81	RES-CHIP	100 5% 1/16W	R3427	1-218-941-81	RES-CHIP	100 5% 1/16W
R3113	1-218-941-81	RES-CHIP	100 5% 1/16W	R3600	1-218-941-81	RES-CHIP	100 5% 1/16W
R3114	1-218-941-81	RES-CHIP	100 5% 1/16W	R3601	1-218-941-81	RES-CHIP	100 5% 1/16W
R3115	1-218-941-81	RES-CHIP	100 5% 1/16W	R3602	1-218-941-81	RES-CHIP	100 5% 1/16W
R3116	1-218-941-81	RES-CHIP	100 5% 1/16W	R3603	1-218-941-81	RES-CHIP	100 5% 1/16W
R3117	1-218-941-81	RES-CHIP	100 5% 1/16W	R3607	1-218-961-11	RES-CHIP	4.7K 5% 1/16W
R3118	1-218-941-81	RES-CHIP	100 5% 1/16W	R3608	1-218-961-11	RES-CHIP	4.7K 5% 1/16W
R3119	1-218-941-81	RES-CHIP	100 5% 1/16W	R3612	1-218-941-81	RES-CHIP	100 5% 1/16W
R3120	1-218-943-11	RES-CHIP	150 5% 1/16W	R3613	1-218-941-81	RES-CHIP	100 5% 1/16W
R3121	1-218-943-11	RES-CHIP	150 5% 1/16W	R3614	1-218-941-81	RES-CHIP	100 5% 1/16W
R3122	1-218-943-11	RES-CHIP	150 5% 1/16W	R3615	1-218-941-81	RES-CHIP	100 5% 1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R3616	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4147	1-208-939-11	METAL CHIP	150K	0.5%	1/16W
R3617	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4149	1-218-990-81	SHORT CHIP	0		
R3618	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4150	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3619	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4151	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R3620	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4152	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R3621	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4153	1-218-982-11	RES-CHIP	270K	5%	1/16W
R3622	1-218-941-81	RES-CHIP	100	5%	1/16W	R4154	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R3623	1-218-941-81	RES-CHIP	100	5%	1/16W	R4156	1-218-965-11	RES-CHIP	10K	5%	1/16W
R3624	1-218-977-11	RES-CHIP	100K	5%	1/16W	R4157	1-218-973-11	RES-CHIP	47K	5%	1/16W
R3625	1-218-977-11	RES-CHIP	100K	5%	1/16W	R4158	1-218-941-81	RES-CHIP	100	5%	1/16W
R4000	1-218-990-81	SHORT CHIP	0			R4159	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4100	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4161	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4102	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4162	1-218-965-11	RES-CHIP	10K	5%	1/16W
R4103	1-218-941-81	RES-CHIP	100	5%	1/16W	R4163	1-218-941-81	RES-CHIP	100	5%	1/16W
R4104	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4164	1-218-941-81	RES-CHIP	100	5%	1/16W
R4105	1-218-941-81	RES-CHIP	100	5%	1/16W	R4165	1-218-941-81	RES-CHIP	100	5%	1/16W
R4106	1-218-941-81	RES-CHIP	100	5%	1/16W	R4166	1-218-941-81	RES-CHIP	100	5%	1/16W
R4107	1-218-941-81	RES-CHIP	100	5%	1/16W	R4167	1-218-969-11	RES-CHIP	22K	5%	1/16W
R4108	1-208-927-11	METAL CHIP	47K	0.5%	1/16W	R4168	1-218-941-81	RES-CHIP	100	5%	1/16W
R4109	1-218-990-81	SHORT CHIP	0			R4169	1-218-941-81	RES-CHIP	100	5%	1/16W
R4110	1-218-973-11	RES-CHIP	47K	5%	1/16W	R4170	1-218-941-81	RES-CHIP	100	5%	1/16W
R4111	1-218-973-11	RES-CHIP	47K	5%	1/16W	R4173	1-218-949-11	RES-CHIP	470	5%	1/16W
R4112	1-208-911-11	METAL CHIP	10K	0.5%	1/16W	R4174	1-218-949-11	RES-CHIP	470	5%	1/16W
R4113	1-218-941-81	RES-CHIP	100	5%	1/16W	R4175	1-218-941-81	RES-CHIP	100	5%	1/16W
R4114	1-243-975-11	METAL CHIP	4.7M	5%	1/16W	R4178	1-218-941-81	RES-CHIP	100	5%	1/16W
R4115	1-208-931-11	METAL CHIP	68K	0.5%	1/16W	R4179	1-218-941-81	RES-CHIP	100	5%	1/16W
R4116	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4180	1-218-941-81	RES-CHIP	100	5%	1/16W
R4119	1-208-675-11	METAL CHIP	470	0.5%	1/16W	R4181	1-218-941-81	RES-CHIP	100	5%	1/16W
R4120	1-218-990-81	SHORT CHIP	0			R4182	1-218-935-11	RES-CHIP	33	5%	1/16W
R4121	1-218-990-81	SHORT CHIP	0			R4183	1-218-941-81	RES-CHIP	100	5%	1/16W
R4124	1-208-943-11	METAL CHIP	220K	0.5%	1/16W	R4184	1-218-941-81	RES-CHIP	100	5%	1/16W
R4126	1-208-933-11	METAL CHIP	82K	0.5%	1/16W	R4185	1-218-941-81	RES-CHIP	100	5%	1/16W
R4127	1-218-949-11	RES-CHIP	470	5%	1/16W	R4186	1-218-941-81	RES-CHIP	100	5%	1/16W
R4128	1-218-847-11	METAL CHIP	1K	0.5%	1/10W	R4187	1-218-941-81	RES-CHIP	100	5%	1/16W
R4129	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R4188	1-218-941-81	RES-CHIP	100	5%	1/16W
R4130	1-218-949-11	RES-CHIP	470	5%	1/16W	R4189	1-218-941-81	RES-CHIP	100	5%	1/16W
R4131	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W	R4190	1-218-935-11	RES-CHIP	33	5%	1/16W
R4132	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R4191	1-218-935-11	RES-CHIP	33	5%	1/16W
R4133	1-218-957-11	RES-CHIP	2.2K	5%	1/16W	R4192	1-218-941-81	RES-CHIP	100	5%	1/16W
R4134	1-218-969-11	RES-CHIP	22K	5%	1/16W	R4193	1-218-941-81	RES-CHIP	100	5%	1/16W
R4135	1-218-981-91	RES-CHIP	220K	5%	1/16W	R4194	1-218-941-81	RES-CHIP	100	5%	1/16W
R4136	1-218-990-81	SHORT CHIP	0			R4195	1-218-941-81	RES-CHIP	100	5%	1/16W
R4138	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4200	1-218-953-11	RES-CHIP	1K	5%	1/16W
R4139	1-218-965-11	RES-CHIP	10K	5%	1/16W	R4201	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R4140	1-208-695-11	METAL CHIP	3.3K	0.5%	1/16W	R4202	1-218-990-81	SHORT CHIP	0		
R4141	1-208-927-11	METAL CHIP	47K	0.5%	1/16W	R4204	1-218-990-81	SHORT CHIP	0		
R4142	1-218-971-11	RES-CHIP	33K	5%	1/16W	R4208	1-218-990-81	SHORT CHIP	0		
R4143	1-218-978-11	RES-CHIP	120K	5%	1/16W	R4209	1-218-990-81	SHORT CHIP	0		
R4144	1-218-971-11	RES-CHIP	33K	5%	1/16W	R4210	1-218-941-81	RES-CHIP	100	5%	1/16W
R4145	1-208-943-11	METAL CHIP	220K	0.5%	1/16W	R4211	1-218-941-81	RES-CHIP	100	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
R4216	1-208-931-11	METAL CHIP	68K 0.5% 1/16W	R4518	1-218-963-11	RES-CHIP	6.8K 5% 1/16W
R4217	1-208-703-11	METAL CHIP	6.8K 0.5% 1/16W	R4519	1-218-827-11	METAL CHIP	150 0.5% 1/10W
R4219	1-218-941-81	RES-CHIP	100 5% 1/16W	R4522	1-218-827-11	METAL CHIP	150 0.5% 1/10W
R4220	1-208-683-11	METAL CHIP	1K 0.5% 1/16W	R4523	1-218-957-11	RES-CHIP	2.2K 5% 1/16W
R4300	1-218-990-81	SHORT CHIP	0	R4524	1-218-827-11	METAL CHIP	150 0.5% 1/10W
R4301	1-218-990-81	SHORT CHIP	0	R4526	1-218-827-11	METAL CHIP	150 0.5% 1/10W
R4302	1-218-953-11	RES-CHIP	1K 5% 1/16W	R4527	1-208-691-11	METAL CHIP	2.2K 0.5% 1/16W
R4303	1-218-937-11	RES-CHIP	47 5% 1/16W	R4535	1-218-977-11	RES-CHIP	100K 5% 1/16W
R4304	1-218-990-81	SHORT CHIP	0	R4537	1-218-963-11	RES-CHIP	6.8K 5% 1/16W
R4305	1-218-953-11	RES-CHIP	1K 5% 1/16W	R4540	1-218-957-11	RES-CHIP	2.2K 5% 1/16W
R4308	1-218-990-81	SHORT CHIP	0	R4542	1-218-941-81	RES-CHIP	100 5% 1/16W
R4309	1-218-941-81	RES-CHIP	100 5% 1/16W	R4544	1-218-849-11	METAL CHIP	1.2K 0.5% 1/10W
R4310	1-218-941-81	RES-CHIP	100 5% 1/16W	R4546	1-218-941-81	RES-CHIP	100 5% 1/16W
R4311	1-218-941-81	RES-CHIP	100 5% 1/16W	R4548	1-218-941-81	RES-CHIP	100 5% 1/16W
R4312	1-218-941-81	RES-CHIP	100 5% 1/16W	R4549	1-218-941-81	RES-CHIP	100 5% 1/16W
R4313	1-218-941-81	RES-CHIP	100 5% 1/16W	R4551	1-218-941-81	RES-CHIP	100 5% 1/16W
R4314	1-218-941-81	RES-CHIP	100 5% 1/16W	R4552	1-218-941-81	RES-CHIP	100 5% 1/16W
R4315	1-218-941-81	RES-CHIP	100 5% 1/16W	R4555	1-218-965-11	RES-CHIP	10K 5% 1/16W
R4316	1-218-941-81	RES-CHIP	100 5% 1/16W	R4557	1-218-941-81	RES-CHIP	100 5% 1/16W
R4317	1-218-941-81	RES-CHIP	100 5% 1/16W	R4569	1-216-864-11	SHORT CHIP	0
R4319	1-218-941-81	RES-CHIP	100 5% 1/16W	R4570	1-218-941-81	RES-CHIP	100 5% 1/16W
R4320	1-218-941-81	RES-CHIP	100 5% 1/16W	R4571	1-218-953-11	RES-CHIP	1K 5% 1/16W
R4321	1-218-941-81	RES-CHIP	100 5% 1/16W	R4574	1-218-969-11	RES-CHIP	22K 5% 1/16W
R4322	1-218-941-81	RES-CHIP	100 5% 1/16W	R5500	1-216-864-11	SHORT CHIP	0
R4323	1-218-941-81	RES-CHIP	100 5% 1/16W	R5503	1-218-970-11	RES-CHIP	27K 5% 1/16W
R4324	1-218-941-81	RES-CHIP	100 5% 1/16W	R5504	1-218-953-11	RES-CHIP	1K 5% 1/16W
R4325	1-218-941-81	RES-CHIP	100 5% 1/16W	R5505	1-218-953-11	RES-CHIP	1K 5% 1/16W
R4326	1-218-935-11	RES-CHIP	33 5% 1/16W	R5506	1-218-967-11	RES-CHIP	15K 5% 1/16W
R4327	1-218-941-81	RES-CHIP	100 5% 1/16W	R5507	1-218-967-11	RES-CHIP	15K 5% 1/16W
R4328	1-218-941-81	RES-CHIP	100 5% 1/16W	R5508	1-218-941-81	RES-CHIP	100 5% 1/16W
R4329	1-218-941-81	RES-CHIP	100 5% 1/16W	R5509	1-218-981-91	RES-CHIP	220K 5% 1/16W
R4330	1-218-935-11	RES-CHIP	33 5% 1/16W	R5510	1-218-941-81	RES-CHIP	100 5% 1/16W
R4332	1-218-935-11	RES-CHIP	33 5% 1/16W	R5511	1-218-981-91	RES-CHIP	220K 5% 1/16W
R4399	1-218-981-91	RES-CHIP	220K 5% 1/16W	R5512	1-218-941-81	RES-CHIP	100 5% 1/16W
R4400	1-218-981-91	RES-CHIP	220K 5% 1/16W	R5513	1-218-937-11	RES-CHIP	47 5% 1/16W
R4401	1-218-981-91	RES-CHIP	220K 5% 1/16W	R5514	1-218-965-11	RES-CHIP	10K 5% 1/16W
R4402	1-218-981-91	RES-CHIP	220K 5% 1/16W	R5515	1-218-937-11	RES-CHIP	47 5% 1/16W
R4403	1-218-965-11	RES-CHIP	10K 5% 1/16W	R5516	1-218-937-11	RES-CHIP	47 5% 1/16W
R4500	1-216-805-11	METAL CHIP	47 5% 1/10W	R5517	1-218-953-11	RES-CHIP	1K 5% 1/16W
R4501	1-216-864-11	SHORT CHIP	0	R5518	1-218-953-11	RES-CHIP	1K 5% 1/16W
R4502	1-216-864-11	SHORT CHIP	0	R5519	1-218-965-11	RES-CHIP	10K 5% 1/16W
R4503	1-216-864-11	SHORT CHIP	0	R5520	1-218-965-11	RES-CHIP	10K 5% 1/16W
R4504	1-216-805-11	METAL CHIP	47 5% 1/10W	R5521	1-208-683-11	METAL CHIP	1K 0.5% 1/16W
R4508	1-216-821-11	METAL CHIP	1K 5% 1/10W	R5522	1-208-683-11	METAL CHIP	1K 0.5% 1/16W
R4511	1-218-965-11	RES-CHIP	10K 5% 1/16W	R5523	1-218-941-81	RES-CHIP	100 5% 1/16W
R4512	1-218-965-11	RES-CHIP	10K 5% 1/16W	R5524	1-218-981-91	RES-CHIP	220K 5% 1/16W
R4513	1-216-805-11	METAL CHIP	47 5% 1/10W	R5525	1-218-965-11	RES-CHIP	10K 5% 1/16W
R4514	1-216-805-11	METAL CHIP	47 5% 1/10W	R5526	1-218-965-11	RES-CHIP	10K 5% 1/16W
R4515	1-218-827-11	METAL CHIP	150 0.5% 1/10W	R5529	1-218-971-11	RES-CHIP	33K 5% 1/16W
R4516	1-218-827-11	METAL CHIP	150 0.5% 1/10W	R5531	1-218-941-81	RES-CHIP	100 5% 1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK			REF.NO.	PART.NO	DESCRIPTION	REMARK		
R5534	1-218-941-81	RES-CHIP	100	5%	1/16W	R6427	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5536	1-218-941-81	RES-CHIP	100	5%	1/16W	R6428	1-216-864-11	SHORT CHIP	0		
R5537	1-218-941-81	RES-CHIP	100	5%	1/16W	R6429	1-218-969-11	RES-CHIP	22K	5%	1/16W
R5538	1-218-941-81	RES-CHIP	100	5%	1/16W	R6437	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R5546	1-218-941-81	RES-CHIP	100	5%	1/16W	R6442	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W
R5547	1-218-961-11	RES-CHIP	4.7K	5%	1/16W	R6446	1-208-923-11	METAL CHIP	33K	0.5%	1/16W
R5553	1-218-967-11	RES-CHIP	15K	5%	1/16W	R6448	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R5554	1-218-967-11	RES-CHIP	15K	5%	1/16W	R6449	1-208-931-11	METAL CHIP	68K	0.5%	1/16W
R5555	1-218-941-81	RES-CHIP	100	5%	1/16W	R6450	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R5556	1-218-941-81	RES-CHIP	100	5%	1/16W	R6453	1-218-860-11	METAL CHIP	3.6K	0.5%	1/10W
R5557	1-218-941-81	RES-CHIP	100	5%	1/16W	R6457	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R5558	1-218-941-81	RES-CHIP	100	5%	1/16W	R6458	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5559	1-218-967-11	RES-CHIP	15K	5%	1/16W	R6461	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5560	1-218-967-11	RES-CHIP	15K	5%	1/16W	R6462	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5561	1-218-965-11	RES-CHIP	10K	5%	1/16W	R6466	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R5575	1-218-953-11	RES-CHIP	1K	5%	1/16W	R6468	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5576	1-218-967-11	RES-CHIP	15K	5%	1/16W	R6470	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5577	1-218-941-81	RES-CHIP	100	5%	1/16W	R6472	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5578	1-218-941-81	RES-CHIP	100	5%	1/16W	R6474	1-218-969-11	RES-CHIP	22K	5%	1/16W
R5579	1-218-967-11	RES-CHIP	15K	5%	1/16W	R6475	1-218-969-11	RES-CHIP	22K	5%	1/16W
R5580	1-218-967-11	RES-CHIP	15K	5%	1/16W	R6476	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R5593	1-218-941-81	RES-CHIP	100	5%	1/16W	R6478	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R5594	1-218-965-11	RES-CHIP	10K	5%	1/16W	R6480	1-218-965-11	RES-CHIP	10K	5%	1/16W
R5596	1-218-977-11	RES-CHIP	100K	5%	1/16W	R6481	1-218-941-81	RES-CHIP	100	5%	1/16W
R5597	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W	R6482	1-218-979-11	RES-CHIP	150K	5%	1/16W
R6400	1-218-973-11	RES-CHIP	47K	5%	1/16W	R6483	1-218-971-11	RES-CHIP	33K	5%	1/16W
R6401	1-218-965-11	RES-CHIP	10K	5%	1/16W	R6484	1-218-965-11	RES-CHIP	10K	5%	1/16W
R6402	1-218-990-81	SHORT CHIP	0			R6486	1-218-965-11	RES-CHIP	10K	5%	1/16W
R6403	1-218-969-11	RES-CHIP	22K	5%	1/16W	R6488	1-216-809-11	METAL CHIP	100	5%	1/10W
R6404	1-218-965-11	RES-CHIP	10K	5%	1/16W	R6489	1-218-965-11	RES-CHIP	10K	5%	1/16W
R6405	1-218-965-11	RES-CHIP	10K	5%	1/16W	R6493	1-218-965-11	RES-CHIP	10K	5%	1/16W
R6406	1-218-990-81	SHORT CHIP	0			R6494	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R6407	1-218-990-81	SHORT CHIP	0			R6498	1-216-809-11	METAL CHIP	100	5%	1/10W
R6408	1-218-990-81	SHORT CHIP	0			R6499	1-216-864-11	SHORT CHIP	0		
R6409	1-218-990-81	SHORT CHIP	0			R6500	1-218-965-11	RES-CHIP	10K	5%	1/16W
R6410	1-218-990-81	SHORT CHIP	0			R6501	1-208-931-11	METAL CHIP	68K	0.5%	1/16W
R6411	1-218-990-81	SHORT CHIP	0			R6502	1-218-983-11	RES-CHIP	330K	5%	1/16W
R6412	1-218-990-81	SHORT CHIP	0			R6503	1-218-965-11	RES-CHIP	10K	5%	1/16W
R6413	1-208-711-11	METAL CHIP	15K	0.5%	1/16W	R6504	1-218-965-11	RES-CHIP	10K	5%	1/16W
R6414	1-218-965-11	RES-CHIP	10K	5%	1/16W	R6505	1-218-941-81	RES-CHIP	100	5%	1/16W
R6415	1-208-711-11	METAL CHIP	15K	0.5%	1/16W	R6506	1-218-983-11	RES-CHIP	330K	5%	1/16W
R6416	1-208-935-11	METAL CHIP	100K	0.5%	1/16W	R6507	1-218-983-11	RES-CHIP	330K	5%	1/16W
R6417	1-208-943-11	METAL CHIP	220K	0.5%	1/16W	R6508	1-218-959-11	RES-CHIP	3.3K	5%	1/16W
R6418	1-208-923-11	METAL CHIP	33K	0.5%	1/16W	R6511	1-218-953-11	RES-CHIP	1K	5%	1/16W
R6419	1-218-990-81	SHORT CHIP	0			R6512	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R6420	1-218-965-11	RES-CHIP	10K	5%	1/16W	R6513	1-220-174-11	RES-CHIP	200	5%	1/16W
R6421	1-208-711-11	METAL CHIP	15K	0.5%	1/16W	R6514	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R6423	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W	R6515	1-208-866-11	METAL CHIP	130	0.5%	1/16W
R6424	1-208-933-11	METAL CHIP	82K	0.5%	1/16W	R6516	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R6425	1-208-918-11	METAL CHIP	20K	0.5%	1/16W	R6520	1-216-864-11	SHORT CHIP	0		

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
R6523	1-216-864-11	SHORT CHIP	0	R7208	1-218-961-11	RES-CHIP	4.7K 5% 1/16W
R6524	1-216-864-11	SHORT CHIP	0	R7217	1-218-939-11	RES-CHIP	68 5% 1/16W
R6538	1-216-864-11	SHORT CHIP	0	R7218	1-218-941-11	RES-CHIP	100 5% 1/16W
R6539	1-216-864-11	SHORT CHIP	0	R7219	1-218-941-11	RES-CHIP	100 5% 1/16W
R6541	1-208-893-11	METAL CHIP	1.8K 0.5% 1/16W	R7221	1-218-965-11	RES-CHIP	10K 5% 1/16W
R6542	1-216-864-11	SHORT CHIP	0	R7223	1-218-965-11	RES-CHIP	10K 5% 1/16W
R6543	1-216-864-11	SHORT CHIP	0	R7224	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7104	1-218-941-81	RES-CHIP	100 5% 1/16W	R7226	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7106	1-218-941-81	RES-CHIP	100 5% 1/16W	R7227	1-218-953-11	RES-CHIP	1K 5% 1/16W
R7111	1-218-961-11	RES-CHIP	4.7K 5% 1/16W	R7228	1-218-939-11	RES-CHIP	68 5% 1/16W
R7112	1-218-961-11	RES-CHIP	4.7K 5% 1/16W	R7229	1-218-941-81	RES-CHIP	100 5% 1/16W
R7115	1-218-937-11	RES-CHIP	47 5% 1/16W	R7230	1-218-941-81	RES-CHIP	100 5% 1/16W
R7116	1-218-937-11	RES-CHIP	47 5% 1/16W	R7231	1-218-941-81	RES-CHIP	100 5% 1/16W
R7126	1-218-937-11	RES-CHIP	47 5% 1/16W	R7232	1-218-941-81	RES-CHIP	100 5% 1/16W
R7127	1-218-937-11	RES-CHIP	47 5% 1/16W	R7233	1-218-937-11	RES-CHIP	47 5% 1/16W
R7128	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7234	1-218-945-11	RES-CHIP	220 5% 1/16W
R7129	1-218-937-11	RES-CHIP	47 5% 1/16W	R7235	1-218-953-11	RES-CHIP	1K 5% 1/16W
R7140	1-218-937-11	RES-CHIP	47 5% 1/16W	R7237	1-218-941-81	RES-CHIP	100 5% 1/16W
R7141	1-220-174-11	RES-CHIP	200 5% 1/16W	R7238	1-218-941-81	RES-CHIP	100 5% 1/16W
R7144	1-208-671-11	METAL CHIP	330 0.5% 1/16W	R7241	1-218-941-81	RES-CHIP	100 5% 1/16W
R7145	1-208-883-81	METAL CHIP	680 0.5% 1/16W	R7242	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7147	1-218-990-81	SHORT CHIP	0	R7243	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7148	1-208-675-11	METAL CHIP	470 0.5% 1/16W	R7244	1-208-695-11	METAL CHIP	3.3K 0.5% 1/16W
R7149	1-218-941-81	RES-CHIP	100 5% 1/16W	R7300	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7150	1-218-941-81	RES-CHIP	100 5% 1/16W	R7302	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7151	1-218-941-81	RES-CHIP	100 5% 1/16W	R7303	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7152	1-218-941-81	RES-CHIP	100 5% 1/16W	R7304	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7153	1-218-941-81	RES-CHIP	100 5% 1/16W	R7305	1-218-941-81	RES-CHIP	100 5% 1/16W
R7154	1-218-941-81	RES-CHIP	100 5% 1/16W	R7306	1-218-945-11	RES-CHIP	220 5% 1/16W
R7155	1-218-941-81	RES-CHIP	100 5% 1/16W	R7308	1-218-941-81	RES-CHIP	100 5% 1/16W
R7156	1-218-941-81	RES-CHIP	100 5% 1/16W	R7309	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7157	1-218-941-81	RES-CHIP	100 5% 1/16W	R7310	1-218-937-11	RES-CHIP	47 5% 1/16W
R7158	1-218-937-11	RES-CHIP	47 5% 1/16W	R7311	1-218-937-11	RES-CHIP	47 5% 1/16W
R7159	1-218-937-11	RES-CHIP	47 5% 1/16W	R7312	1-218-937-11	RES-CHIP	47 5% 1/16W
R7160	1-218-937-11	RES-CHIP	47 5% 1/16W	R7313	1-218-937-11	RES-CHIP	47 5% 1/16W
R7161	1-218-937-11	RES-CHIP	47 5% 1/16W	R7314	1-218-937-11	RES-CHIP	47 5% 1/16W
R7162	1-218-937-11	RES-CHIP	47 5% 1/16W	R7315	1-218-937-11	RES-CHIP	47 5% 1/16W
R7163	1-218-937-11	RES-CHIP	47 5% 1/16W	R7316	1-218-937-11	RES-CHIP	47 5% 1/16W
R7164	1-218-937-11	RES-CHIP	47 5% 1/16W	R7317	1-218-937-11	RES-CHIP	47 5% 1/16W
R7165	1-218-937-11	RES-CHIP	47 5% 1/16W	R7318	1-218-937-11	RES-CHIP	47 5% 1/16W
R7166	1-218-937-11	RES-CHIP	47 5% 1/16W	R7319	1-218-937-11	RES-CHIP	47 5% 1/16W
R7167	1-218-937-11	RES-CHIP	47 5% 1/16W	R7320	1-218-941-81	RES-CHIP	100 5% 1/16W
R7168	1-218-937-11	RES-CHIP	47 5% 1/16W	R7321	1-218-941-81	RES-CHIP	100 5% 1/16W
R7169	1-218-937-11	RES-CHIP	47 5% 1/16W	R7322	1-218-941-81	RES-CHIP	100 5% 1/16W
R7200	1-218-949-11	RES-CHIP	470 5% 1/16W	R7323	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7202	1-218-953-11	RES-CHIP	1K 5% 1/16W	R7324	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7203	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7325	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7204	1-218-953-11	RES-CHIP	1K 5% 1/16W	R7326	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7206	1-218-949-11	RES-CHIP	470 5% 1/16W	R7327	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7207	1-218-949-11	RES-CHIP	470 5% 1/16W	R7328	1-218-965-11	RES-CHIP	10K 5% 1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
R7329	1-218-965-11	RES-CHIP	10K 5% 1/16W			< RESISTOR CHIP >	
R7330	1-218-965-11	RES-CHIP	10K 5% 1/16W				
R7331	1-218-953-11	RES-CHIP	1K 5% 1/16W	RB2000	1-239-694-81	RESISTOR, NETWORK 4.7K	
R7332	1-218-953-11	RES-CHIP	1K 5% 1/16W	RB4300	1-234-372-11	RES, NETWORK 100	(1005X4)
R7333	1-218-937-11	RES-CHIP	47 5% 1/16W	RB4311	1-234-372-11	RES, NETWORK 100	(1005X4)
				RB4312	1-234-372-11	RES, NETWORK 100	(1005X4)
R7334	1-218-937-11	RES-CHIP	47 5% 1/16W	RB4313	1-234-372-11	RES, NETWORK 100	(1005X4)
R7335	1-218-937-11	RES-CHIP	47 5% 1/16W				
R7336	1-218-937-11	RES-CHIP	47 5% 1/16W	RB4314	1-234-372-11	RES, NETWORK 100	(1005X4)
R7337	1-218-937-11	RES-CHIP	47 5% 1/16W	RB4315	1-234-372-11	RES, NETWORK 100	(1005X4)
R7338	1-218-937-11	RES-CHIP	47 5% 1/16W	RB4316	1-234-372-11	RES, NETWORK 100	(1005X4)
				RB4317	1-234-372-11	RES, NETWORK 100	(1005X4)
R7339	1-218-937-11	RES-CHIP	47 5% 1/16W	RB4318	1-234-372-11	RES, NETWORK 100	(1005X4)
R7512	1-218-961-11	RES-CHIP	4.7K 5% 1/16W				
R7513	1-218-965-11	RES-CHIP	10K 5% 1/16W	RB4319	1-234-372-11	RES, NETWORK 100	(1005X4)
R7515	1-218-965-11	RES-CHIP	10K 5% 1/16W	RB4320	1-234-372-11	RES, NETWORK 100	(1005X4)
R7800	1-218-965-11	RES-CHIP	10K 5% 1/16W	RB4321	1-234-372-11	RES, NETWORK 100	(1005X4)
				RB4322	1-234-372-11	RES, NETWORK 100	(1005X4)
R7801	1-218-965-11	RES-CHIP	10K 5% 1/16W	RB4501	1-234-377-21	RES, NETWORK 4.7K	(1005X4)
R7802	1-218-961-11	RES-CHIP	4.7K 5% 1/16W				
R7803	1-218-973-11	RES-CHIP	47K 5% 1/16W	RB5504	1-234-371-21	RES, NETWORK 47	(1005X4)
R7804	1-218-965-11	RES-CHIP	10K 5% 1/16W	RB5505	1-234-371-21	RES, NETWORK 47	(1005X4)
R7805	1-218-961-11	RES-CHIP	4.7K 5% 1/16W	RB5506	1-234-371-21	RES, NETWORK 47	(1005X4)
				RB5507	1-234-371-21	RES, NETWORK 47	(1005X4)
R7806	1-218-973-11	RES-CHIP	47K 5% 1/16W	RB5508	1-234-371-21	RES, NETWORK 47	(1005X4)
R7807	1-218-973-11	RES-CHIP	47K 5% 1/16W				
R7808	1-218-965-11	RES-CHIP	10K 5% 1/16W	RB5509	1-234-371-21	RES, NETWORK 47	(1005X4)
R7809	1-218-973-11	RES-CHIP	47K 5% 1/16W	RB5510	1-234-371-21	RES, NETWORK 47	(1005X4)
R7810	1-218-965-11	RES-CHIP	10K 5% 1/16W	RB7100	1-234-372-11	RES, NETWORK 100	(1005X4)
				RB7101	1-234-378-21	RES, NETWORK 10K	(1005X4)
R7811	1-218-965-11	RES-CHIP	10K 5% 1/16W	RB7103	1-234-371-21	RES, NETWORK 47	(1005X4)
R7812	1-216-809-11	METAL CHIP	100 5% 1/10W				
R7813	1-216-809-11	METAL CHIP	100 5% 1/10W	RB7106	1-234-378-21	RES, NETWORK 10K	(1005X4)
R7814	1-216-813-11	METAL CHIP	220 5% 1/10W	RB7200	1-234-375-21	RES, NETWORK 1K	(1005X4)
R7815	1-216-813-11	METAL CHIP	220 5% 1/10W	RB7202	1-234-375-21	RES, NETWORK 1K	(1005X4)
				RB7204	1-234-375-21	RES, NETWORK 1K	(1005X4)
R7816	1-216-864-11	SHORT CHIP	0	RB7205	1-234-702-11	RES, NETWORK 68	(1005X4)
R7817	1-216-864-11	SHORT CHIP	0				
R7825	1-216-864-11	SHORT CHIP	0	RB7206	1-234-702-11	RES, NETWORK 68	(1005X4)
R7826	1-216-864-11	SHORT CHIP	0	RB7207	1-234-372-11	RES, NETWORK 100	(1005X4)
R7827	1-216-864-11	SHORT CHIP	0	RB7208	1-234-372-11	RES, NETWORK 100	(1005X4)
				RB7209	1-234-372-11	RES, NETWORK 100	(1005X4)
R7828	1-216-864-11	SHORT CHIP	0	RB7210	1-234-372-11	RES, NETWORK 100	(1005X4)
R7830	1-216-817-11	METAL CHIP	470 5% 1/10W				
R7831	1-216-817-11	METAL CHIP	470 5% 1/10W	RB7211	1-234-372-11	RES, NETWORK 100	(1005X4)
R7832	1-216-821-11	METAL CHIP	1K 5% 1/10W	RB7212	1-234-702-11	RES, NETWORK 68	(1005X4)
R7834	1-216-817-11	METAL CHIP	470 5% 1/10W	RB7213	1-234-702-11	RES, NETWORK 68	(1005X4)
				RB7214	1-234-375-21	RES, NETWORK 1K	(1005X4)
R7835	1-218-969-11	RES-CHIP	22K 5% 1/16W	RB7215	1-234-375-21	RES, NETWORK 1K	(1005X4)
R7836	1-218-969-11	RES-CHIP	22K 5% 1/16W				
R7838	1-216-809-11	METAL CHIP	100 5% 1/10W	RB7500	1-234-378-21	RES, NETWORK 10K	(1005X4)
R7839	1-216-833-11	METAL CHIP	10K 5% 1/10W	RB7501	1-234-372-11	RES, NETWORK 100	(1005X4)
R7840	1-218-969-11	RES-CHIP	22K 5% 1/16W	RB7502	1-234-378-21	RES, NETWORK 10K	(1005X4)
R7841	1-218-969-11	RES-CHIP	22K 5% 1/16W			< VARISTOR >	
R7842	1-218-973-11	RES-CHIP	47K 5% 1/16W	VD5500	1-802-078-11	VARISTOR (SMD)	
				VD5501	1-802-481-11	ESD SUPPRESSOR (4 ARRAY)	
				VD5502	1-802-481-11	ESD SUPPRESSOR (4 ARRAY)	

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
VD5503	1-802-078-11	VARISTOR (SMD)				< RESISTOR >	
VD5504	1-802-481-11	ESD SUPPRESSOR (4 ARRAY)		R301	1-216-821-11	METAL CHIP 1K 5%	1/10W
VD5506	1-802-481-11	ESD SUPPRESSOR (4 ARRAY)		R302	1-216-821-11	METAL CHIP 1K 5%	1/10W
VD5508	1-802-078-11	VARISTOR (SMD)		R303	1-216-821-11	METAL CHIP 1K 5%	1/10W
VD5509	1-802-078-11	VARISTOR (SMD)		R304	1-216-821-11	METAL CHIP 1K 5%	1/10W
				R305	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
VD5510	1-802-078-11	VARISTOR (SMD)					
VD5511	1-802-078-11	VARISTOR (SMD)		R311	1-216-817-11	METAL CHIP 470 5%	1/10W
VD5512	1-802-078-11	VARISTOR (SMD)		R312	1-216-805-11	METAL CHIP 47 5%	1/10W
VD5513	1-802-078-11	VARISTOR (SMD)					
VD5575	1-802-078-11	VARISTOR (SMD)					
VD5576	1-802-078-11	VARISTOR (SMD)		* A-1556-707-A HM5 Board, Complete (37 inches)			
VD5577	1-802-481-11	ESD SUPPRESSOR (4 ARRAY)				< CAPACITOR >	
VD5578	1-802-481-11	ESD SUPPRESSOR (4 ARRAY)		C311	1-162-960-11	CERAMIC CHIP 220PF	10.00% 50V
VD7800	1-802-078-11	VARISTOR (SMD)		C312	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
VD7801	1-802-078-11	VARISTOR (SMD)				< CONNECTOR >	
VD7802	1-802-078-11	VARISTOR (SMD)		CN301	1-820-288-11	HEADER ASSEMBLY (PRINT PWB) 9P	
		< CRYSTAL >				< DIODE >	
X2000	1-813-990-11	QUARTS CRYSTAL 30MHZ		D302	8-719-085-26	DIODE CL-165HR/SYG-D-T	
X4100	1-813-531-11	OSCILLATOR, CRYSTAL UNIT		D305	8-719-085-26	DIODE CL-165HR/SYG-D-T	
X5500	1-813-806-21	OSCILLATOR, CRYSTAL		D308	6-500-817-01	DIODE (LED) SML-512UWT86	
X7200	1-814-173-11	VIBRATOR, CRYSTAL				< IC >	
X7201	1-813-784-21	VIBRATOR, CRYSTAL		IC311	6-600-688-01	IC KSM-511M2Q	
						< TRANSISTOR >	
* A-1545-603-A HM4 Board, Complete (26 & 32 inches)				Q301	8-729-028-96	TRANSISTOR DTC114EUA-T106	
		< CAPACITOR >		Q302	8-729-028-96	TRANSISTOR DTC114EUA-T106	
C311	1-162-960-11	CERAMIC CHIP 220PF	10.00% 50V	Q303	8-729-028-96	TRANSISTOR DTC114EUA-T106	
C312	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	Q304	8-729-028-96	TRANSISTOR DTC114EUA-T106	
		< CONNECTOR >		Q305	8-729-028-96	TRANSISTOR DTC114EUA-T106	
CN301	1-820-288-11	HEADER ASSEMBLY (PRINT PWB) 9P				< RESISTOR >	
		< DIODE >		R301	1-216-821-11	METAL CHIP 1K 5%	1/10W
D302	8-719-085-26	DIODE CL-165HR/SYG-D-T		R302	1-216-821-11	METAL CHIP 1K 5%	1/10W
D305	8-719-085-26	DIODE CL-165HR/SYG-D-T		R303	1-216-821-11	METAL CHIP 1K 5%	1/10W
D308	6-500-817-01	DIODE (LED) SML-512UWT86		R304	1-216-821-11	METAL CHIP 1K 5%	1/10W
		< IC >		R305	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
IC311	6-600-681-01	IC RS-770N		R311	1-216-817-11	METAL CHIP 470 5%	1/10W
		< TRANSISTOR >		R312	1-216-805-11	METAL CHIP 47 5%	1/10W
Q301	8-729-028-96	TRANSISTOR DTC114EUA-T106					
Q302	8-729-028-96	TRANSISTOR DTC114EUA-T106					
Q303	8-729-028-96	TRANSISTOR DTC114EUA-T106					
Q304	8-729-028-96	TRANSISTOR DTC114EUA-T106					
Q305	8-729-028-96	TRANSISTOR DTC114EUA-T106					

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
---------	---------	-------------	--------	---------	---------	-------------	--------

ACCESSORIES AND CONNECTORS

- 1-835-716-11 LEAD WIRE WITH CONNECTOR (LVDS) (PANEL-CN4104 (BC1)) (26 inches)
- 1-835-717-11 LEAD WIRE WITH CONNECTOR (LVDS) (PANEL-CN4104 (BC1)) (37 inches)
- 1-835-720-11 LEAD WIRE WITH CONNECTOR (LVDS) (PANEL-CN4104 (BC1)) (32 inches)
- *1-910-047-84 CONNECTOR ASSY 30P (CN6401 (BC1)-CN6200 (GA2), CN6203 (GA2)) (26 inches)
- *1-910-047-85 CONNECTOR ASSY 30P (CN6404 (BC1)-CN6200 (GA2), CN6203 (GA2)) (32 inches)
- *1-910-047-86 CONNECTOR ASSY 30P (CN6404 (BC1)-CN6100 (GA3), CN6603 (GA3)) (37 inches)
- *1-910-047-87 CONNECTOR ASSY 3P (CN4102 (BC1)-SWITCH UNIT) (26 inches)
- *1-910-047-88 CONNECTOR ASSY 3P (CN4102 (BC1)-SWITCH UNIT) (32 inches)
- *1-910-047-89 CONNECTOR ASSY 3P (CN4102 (BC1)-SWITCH UNIT) (37 inches)
- *1-910-047-90 CONNECTOR ASSY 9P (CN4103 (BC1)-CN301 (HM4)) (26 inches)
- *1-910-047-91 CONNECTOR ASSY 9P (CN4103 (BC1)-CN301 (HM4)) (32 inches)
- *1-910-047-92 CONNECTOR ASSY 9P (CN4103 (BC1)-CN301 (HM5)) (37 inches)
- *1-910-047-93 CONNECTOR ASSY SP 26 (CN6400 (GA2)-SPEAKERS) (26 inches)
- *1-910-047-94 CONNECTOR ASSY SP 32 (CN6400 (GA2)-SPEAKERS) (32 inches)
- *1-910-047-95 CONNECTOR ASSY SP 37 (CN6400 (GA3)-SPEAKERS) (37 inches)
- *1-910-047-99 CONNECTOR ASSY 14P (CN6002 (GA2)-INVERTER) (26 inches)
- *1-910-048-00 CONNECTOR ASSY 14P (CN6002 (GA2)-INVERTER) (32 inches)
- *4-109-755-11 INSTRUCTION MANUAL (UK) ENGLISH
- *4-109-755-21 INSTRUCTION MANUAL (WE) GERMAN/FRENCH/ITALIAN/DUTCH
- *4-109-755-31 INSTRUCTION MANUAL (WE) SPANISH/GREEK/PORTUGUESE
- *4-109-755-41 INSTRUCTION MANUAL (OIRT) ENGLISH/RUSSIAN/POLISH/CZECH/SLOVAK/HUNGARIAN
- *4-109-755-51 INSTRUCTION MANUAL (OIRT) SWEDISH/DANISH/FINNISH/NORWEGIAN/TURKISH

REMOTE COMMANDER

- 1-480-158-11 REMOTE COMMANDER (RM-ED009)

