



SEC 5. EXPLODED VIEWS


- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark column.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

The components identified by shading and mark  are critical for safety. Replace only with part number specified.

The components identified by mark  contain confidential information. Strictly follow the instructions whenever the components are repaired and/or replaced.

5-1. KDL-55NX810/813/815


5-1-1. CHASSIS-1

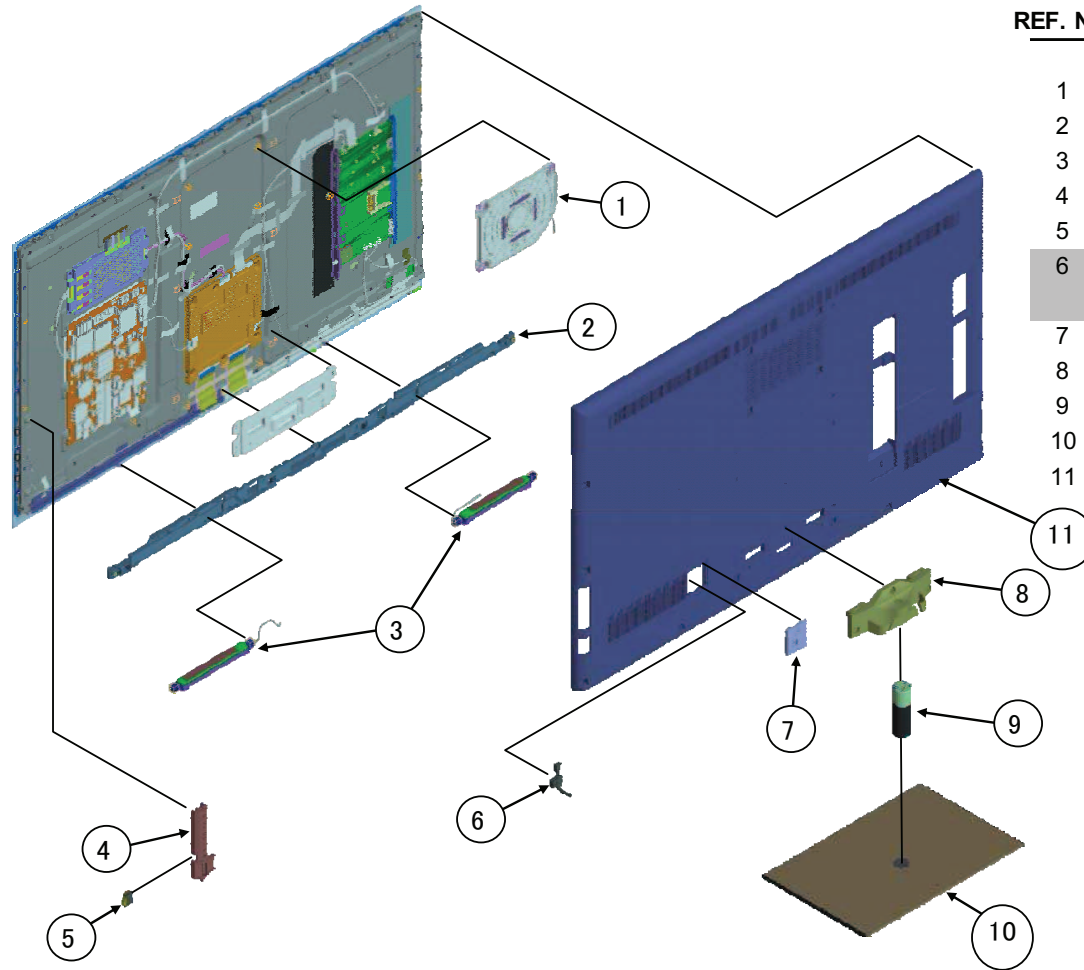




REF. No.	PART No.	DESCRIPTION	REMARK
1	1-858-471-11	SPEAKER BOX ASSY (24.0X18.5CM)	
2	X-2548-181-1	BEZEL BOTTOM (55) ASSY	
3	1-858-469-11	SPEAKER BOX ASSY (8X2CM)	
4	1-489-239-11	SWITCH UNIT	
5	1-798-348-11	POWER SWITCH	
6	▲ 1-838-271-11	POWER SUPPLY CORD (WITH CONN)	
	▲ 1-838-334-11	POWER SUPPLY CORD (WITH CONN)	NX813 ONLY
7	4-188-688-01	COVER, AC	
8	4-256-168-11	HEAD, STAND (ML)	
9	X-2549-351-1	NECK (2L) ASSY	
10	X-2548-373-1	BASE, STAND ASSY S (2L)	
11	4-188-116-12	REAR COVER (55)	

5-1. KDL-55NX810/813/815

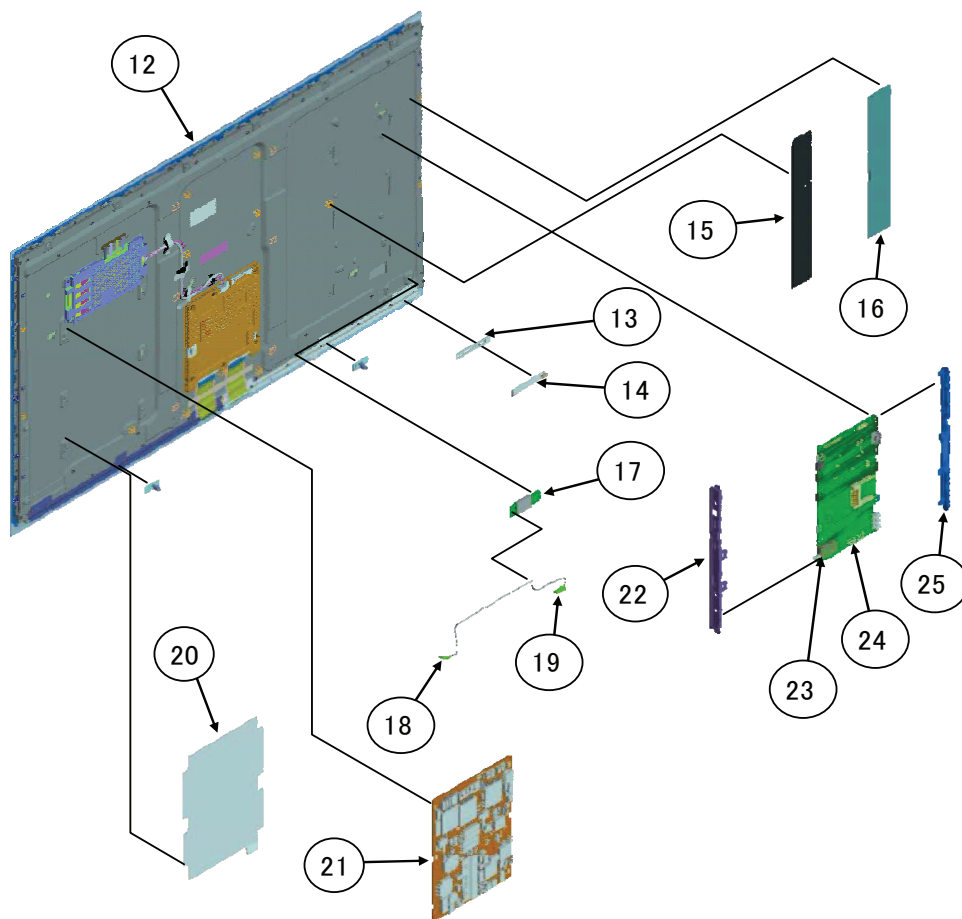5-1-2. CHASSIS-2



REF. No.	PART No.	DESCRIPTION	REMARK
12	A-1795-011-A	T-MOD (S55TQL-S)	
13	4-195-059-01	TAPE, PWB (H)	
14	A-1782-537-A	HLT MOUNT	
15	4-199-296-01	LABEL, TERMINAL	NX810, NX813
	4-199-297-01	LABEL, TERMINAL	NX815
16	4-199-291-01	LABEL, SIDE JACK (L)	
17	1-487-818-11	CARD, WIRELESS LAN	NX810(RU)
	1-487-819-11	CARD, WIRELESS LAN	NX810(AEP), NX813
18	1-754-692-11	ANTENNA	
19	1-754-692-21	ANTENNA	
20	4-188-690-01	SHEET, INSULATION (G)	
21	 1-474-257-11	STATIC CONVERTER(TV)-G9B	
22	4-188-666-21	BRACKET, TERMINAL	NX810, NX813
	4-188-666-31	BRACKET, TERMINAL	NX815
23	8-597-720-00	UNIVERSAL SIL-TU SUT-AE101Z	
24	 A-1788-128-A	BEHT BOARD COMPLETE	NX810
	A-1788-129-A	BEHT BOARD COMPLETE	NX813
	A-1788-130-A	BEHT BOARD COMPLETE	NX815
25	4-188-665-21	BRACKET, SIDE JACK	

5-2. OTHER PARTS

5-2-1. ACCESSORIES and CONNECTORS

- *1-838-372-11 POWER SW HARNESS (CN6002, CN6003-ACSW)
- 1-838-263-11 FLEXIBLE FLAT CABLE (CN2600-TCON)
- *1-910-060-21 CONNECTOR ASSY 6P (CN6151-TCON)
- *1-910-101-79 HARNESS ASSY (CN2602, CN4300-CN002, SW, SP)
- *1-910-101-80 CONNECTOR ASSY 12P (CN3800-CN6150)
- *1-910-101-81 CONNECTOR ASSY 8P (CN5500-TCON)
- *1-910-101-78 CONNECTOR ASSY 14P (CN8500-LD)

5-2-2. INSTRUCTION MANUALS

- *4-180-178-26 MANUAL, INSTRUCTION NX810(AEP), NX813
- *4-180-178-35 MANUAL, INSTRUCTION NX810(AEP), NX813
- *4-180-178-45 MANUAL, INSTRUCTION NX810(RU)
- *4-180-179-16 MANUAL, INSTRUCTION NX813
- *4-180-180-77 MANUAL, INSTRUCTION NX815

5-2-3. REMOTE COMMANDER

1-487-714-13 REMOTE COMMANDER (RM-ED030)

5-2-4. MISCELLANEOUS

1-822-484-11 HDMI CONNECTOR

1-842-372-11 D SUB CONNECTOR

1-842-393-11 OPTICAL OUT CONNECTOR

1-842-386-11 ETHERNET CONNECTOR

1-822-423-11 CONNECTOR, USB(A)

1-822-579-31 CARD CONNECTOR (PCMCIA CARD)

1-838-434-11 CABLE CONVERSION (RGB21P)

1-842-370-11 PHONO JACK 5P

1-842-392-11 JACK, MINIATURE (DIA 3.5)

1-842-379-11 JACK

END

9-888-361-02

KDL-55NX810/813/815(AEP/UK/RUSS)

**Sony Corporation
Sony UK
Service Promotions Dept.**

English
11EP7100-1
Made in U.K.
© 2011. 5

60