

## SECTION 6 EXPLODED VIEWS


### NOTE :

- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remarks column.
- Items marked "\*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

**Note :** Les composants indentifiés par une trame et par une marque Δ sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces du numéro spécifié.

**Note :** The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

### 6-1. CHASSIS

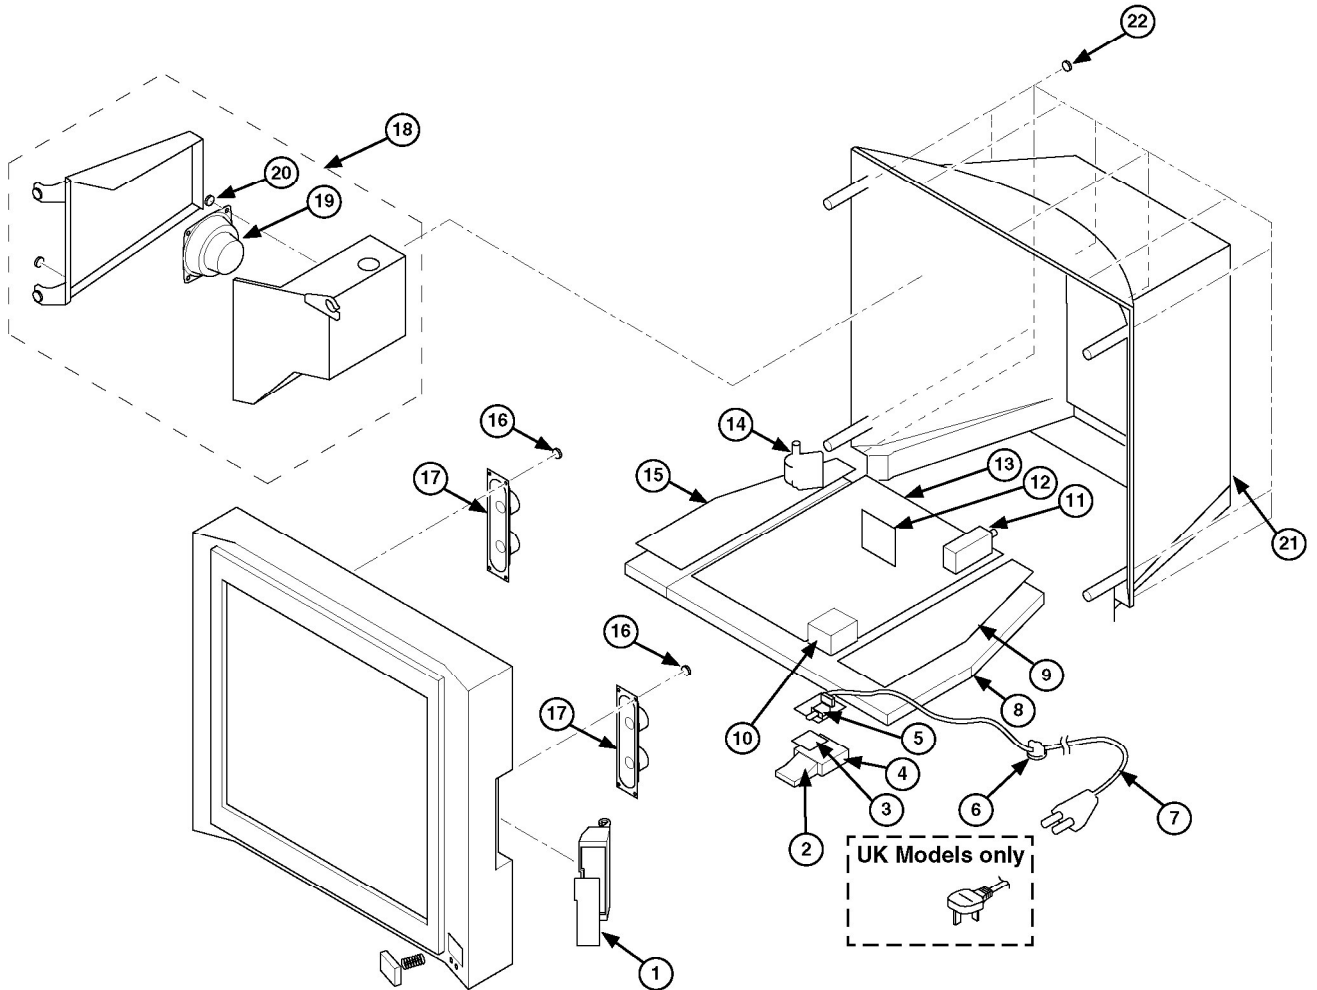

| REF.NO. | PART.NO        | DESCRIPTION                                               | REMARK | REF.NO. | PART.NO        | DESCRIPTION                              | REMARK |
|---------|----------------|-----------------------------------------------------------|--------|---------|----------------|------------------------------------------|--------|
| 1       | *A-1647-043-A  | H2 BOARD, COMPLETE                                        |        | 12      | *A-1300-287-A  | M BOARD, COMPLETE                        |        |
| 2       | *A-1646-243-A  | H1 BOARD, COMPLETE                                        |        | 13      | *A-1300-288-A  | A BOARD, COMPLETE (KV-32FX68B)           |        |
| 3       | *A-1625-000-A  | F4 BOARD, COMPLETE                                        |        |         | *A-1300-177-A  | A BOARD, COMPLETE (KV-32FX68E/32FX68K)   |        |
| 4       | *4-206-097-01  | F4, H1 BRACKET                                            |        |         | *A-1300-289-A  | A BOARD, COMPLETE (KV-32FX68U)           |        |
| 5       | £ 1-571-433-21 | SWITCH, PUSH (AC POWER)                                   |        | 14      | £ 1-453-340-41 | TRANSFORMER ASSY FLYBACK (NX-4522//Z2B4) |        |
| 6       | *4-202-531-01  | AC CORD LOCK (SC)                                         |        | 15      | *A-1300-178-A  | D BOARD, COMPLETE                        |        |
| 7       | £ 1-783-083-11 | CORD, POWER (WITH FILTER)<br>(KV-32FX68B/32FX68E/32FX68K) |        | 16      | 4-039-358-01   | SCREW (4 X 16), (+) BV TAPPING           |        |
|         | £ 1-776-860-11 | POWER CORD, FILTER (UK) (KV-32FX68U)                      |        | 17      | 1-529-408-11   | SPEAKER (4.2 X 24CM)                     |        |
| 8       | *4-206-106-05  | BRACKET, MAIN                                             |        | 18      | A-1678-221-B   | WOOFER COMPLETE ASSY                     | 19, 20 |
| 9       | *A-1300-179-A  | G BOARD, COMPLETE                                         |        | 19      | 1-529-417-11   | SPEAKER (8CM)                            |        |
| 10      | 1-424-855-11   | COIL, CHOKE 29MMH                                         |        | 20      | 7-685-663-71   | SCREW +BVTP 4 X 16 TYPE 2 IT-3           |        |
| 11      | 8-598-535-20   | FRONTEND BTF-EF411 (KV-32FX68B)                           |        | 21      | *4-205-540-21  | REAR COVER                               |        |
|         | 8-598-533-10   | FRONTEND BTF-EC411 (KV-32FX68E/32FX68K)                   |        | 22      | 7-685-663-79   | SCREW (4 X 16), (+) BV TAPPING           |        |
|         | 8-598-529-10   | FRONTEND BTF-EU611 (KV-32FX68U)                           |        |         |                |                                          |        |