


### 5-14. LE46B62\* Exploded View

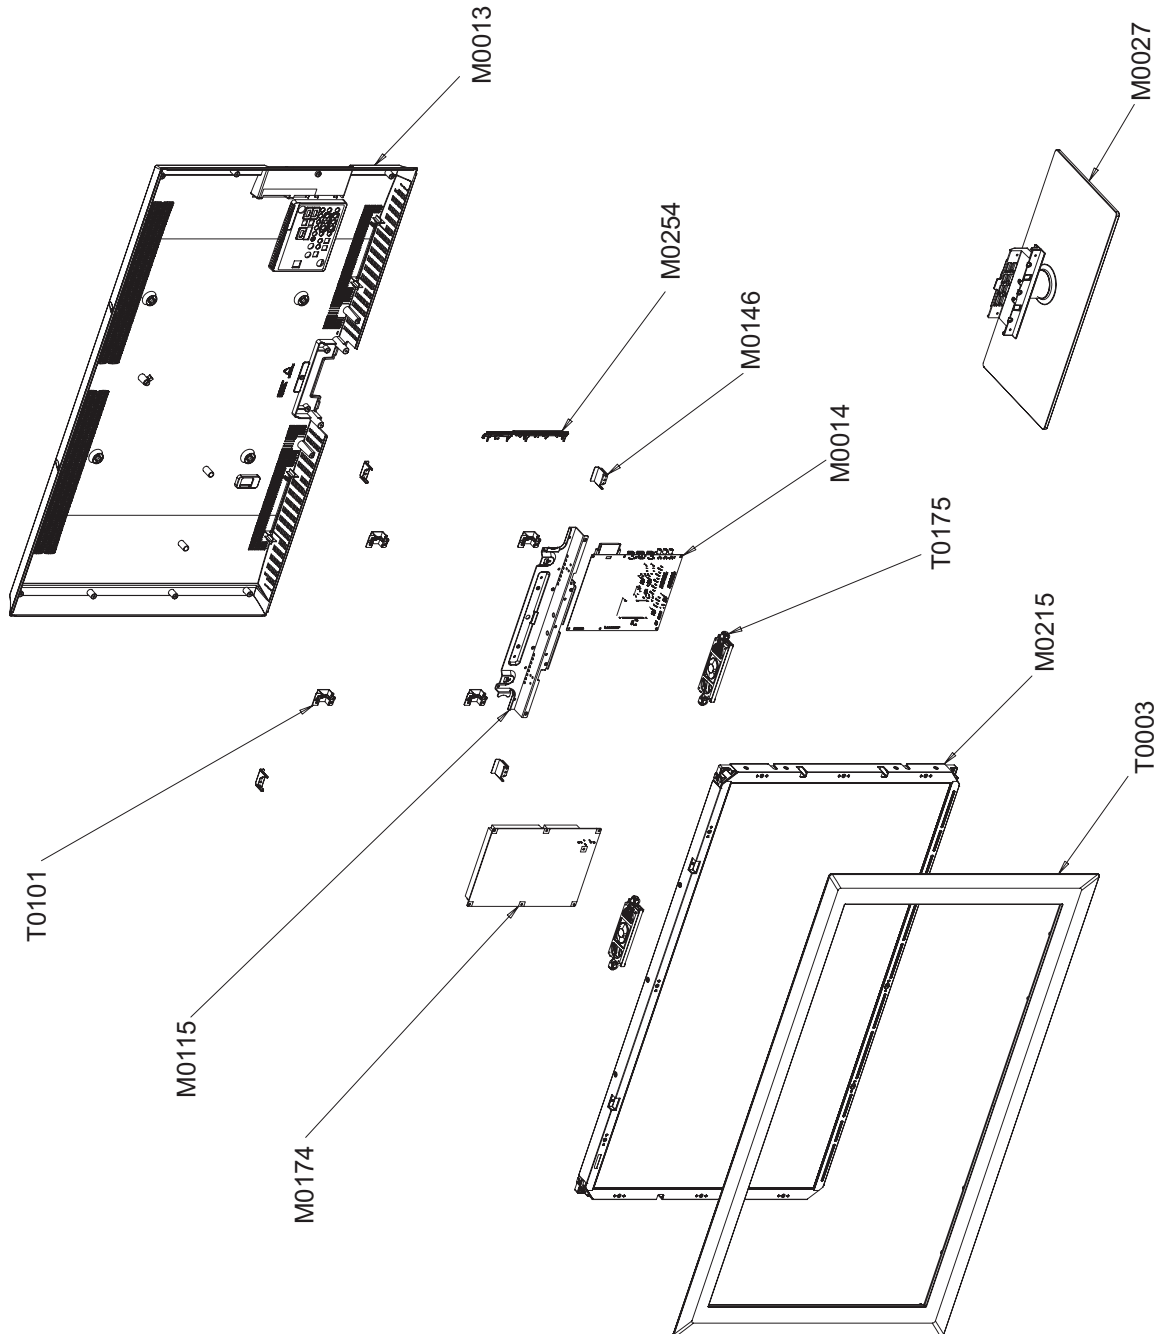

**5-14-1. LE46B62\* Parts List**

Location No.	Code No.	Description & Specification	Q'ty	S.A/S.N.A	Remark
T0003	BN96-09559B	ASSY COVER P-FRONT;46,LB620,EO,PC(CLR)+P	1	S.A	
M0215	BN07-00648A BN07-00705B	LCD-PANEL;T460HW03 V5 LTF460HF06,12V,SPVA 72%	1	S.A	
M0215	BN81-02378A	A/S-T CON T460HW03_V5;T460HW03_V5	1	S.A	
T0175	BN96-09463C	ASSY SPEAKER P;8ohm,4pin,10W,R:250/ L:60	1	S.A	
M0115	BN61-04788A	BRACKET-STAND LINK;46, B610,SECC,T2.0	1	S.N.A	
M0174	BN44-00265A	IP BOARD;PSIV281609A,I46F1_9SS,0.1mA,10.	1	S.A	
T0101	BN61-04817A	BRACKET-WALL;46, B610,SECC,T1.6	4	S.N.A	
M0146	BN61-04978A	BRACKET-PANEL TOP;LB640 46,SECC,T1.2	2	S.N.A	
M0014	BN94-02653E	ASSY PCB MAIN;LE46B625R3WXXE	1	S.A	
M0254	BN61-04801C	HOLDER-SIDE AV;EO,HIPS,HB,BK500,1USB,1HD	1	S.N.A	
M0013	BN96-09603A	ASSY COVER P-REAR;46,LB620,EO,HIPS,HB,BK	1	S.A	
M0027	BN96-09600A	ASSY STAND P-BASE;46,LB640,TEMPERED GLAS	1	S.A	