


III . EXPLODED VIEW AND PART LIST

1. MAIN ASSEMBLY

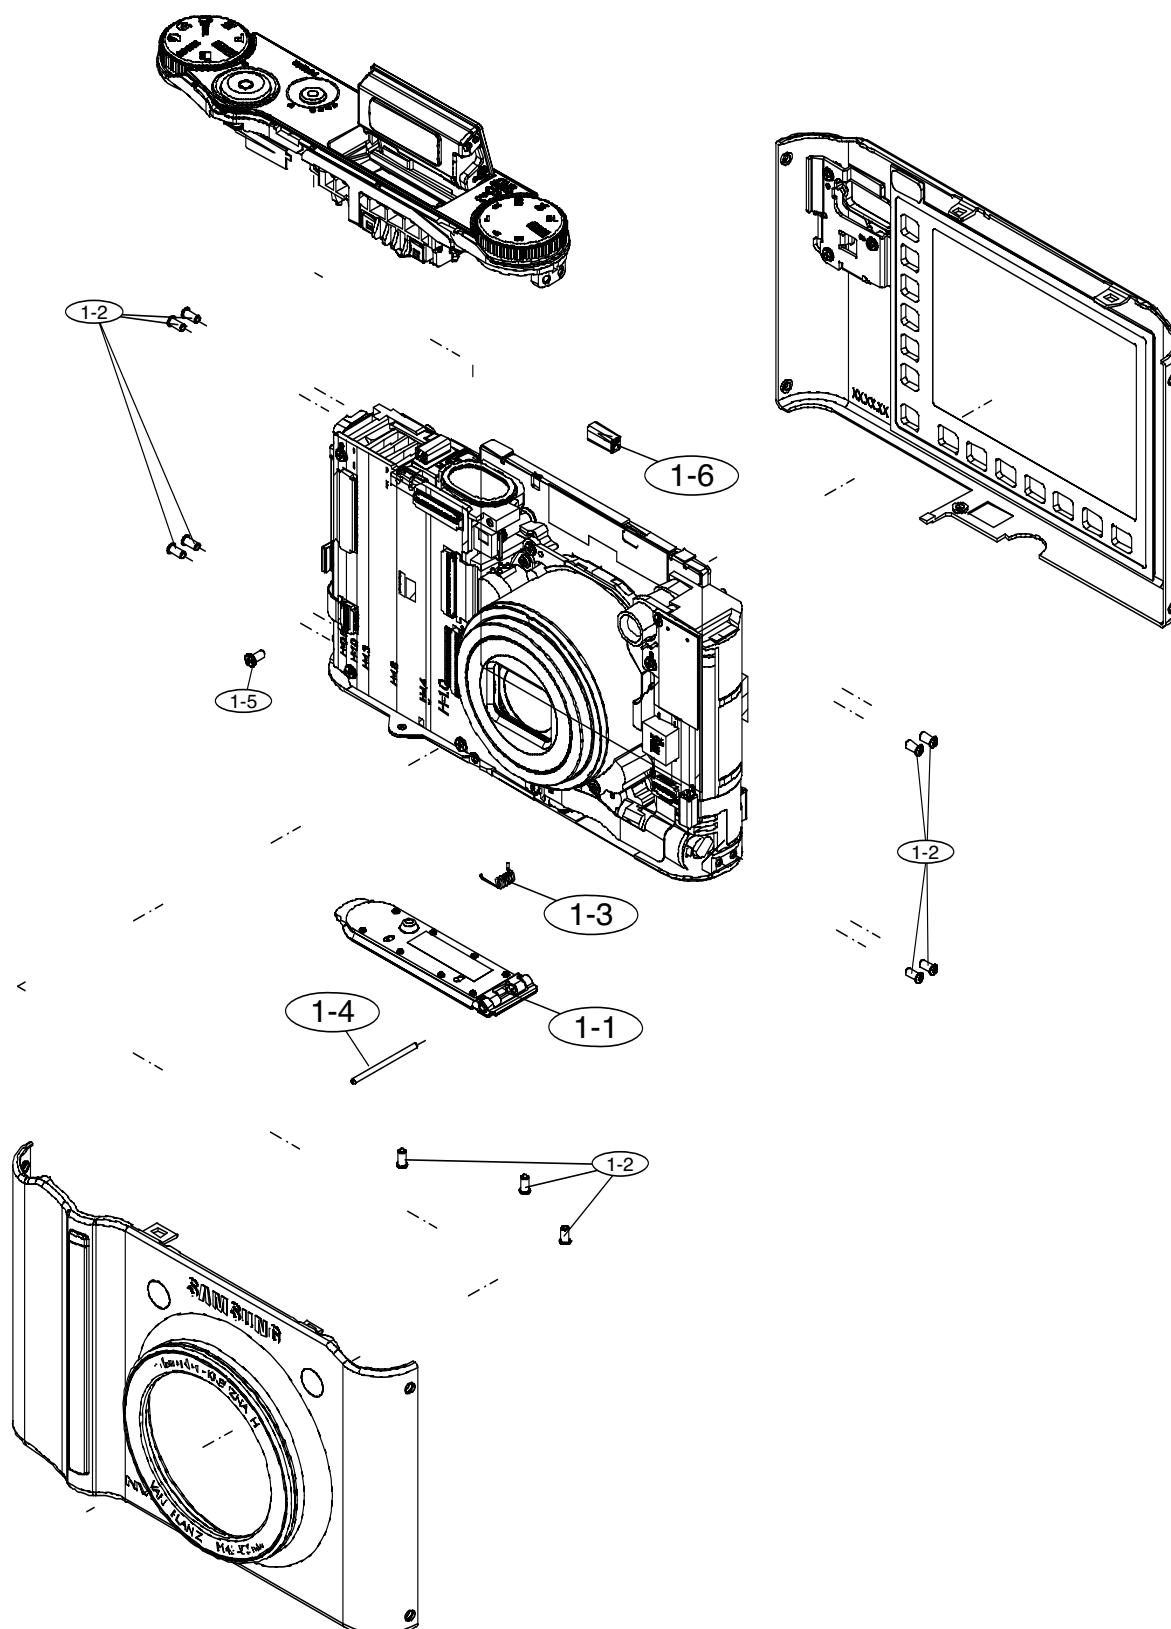


► PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
1-1	AD97-15268A	BATTERY_COVER_ASSY	1	O	BLACK
	AD97-15782A	BATTERY_COVER_ASSY	1	O	SILVER
1-2	6003-001643	SCREW_1430_TAPTITE	11	X	
1-3	6107-001485	BATTERY_COVER_SPRING	1	O	
1-4	AD61-03530A	BATTERY_HINGE	1	O	
1-5	6003-001633	SCREW B	1	X	
1-6	AD63-02507A	CARD_SHIELD_FOAM	1	O	

III . EXPLODED VIEW AND PART LIST

2. BODY ASSEMBLY-1

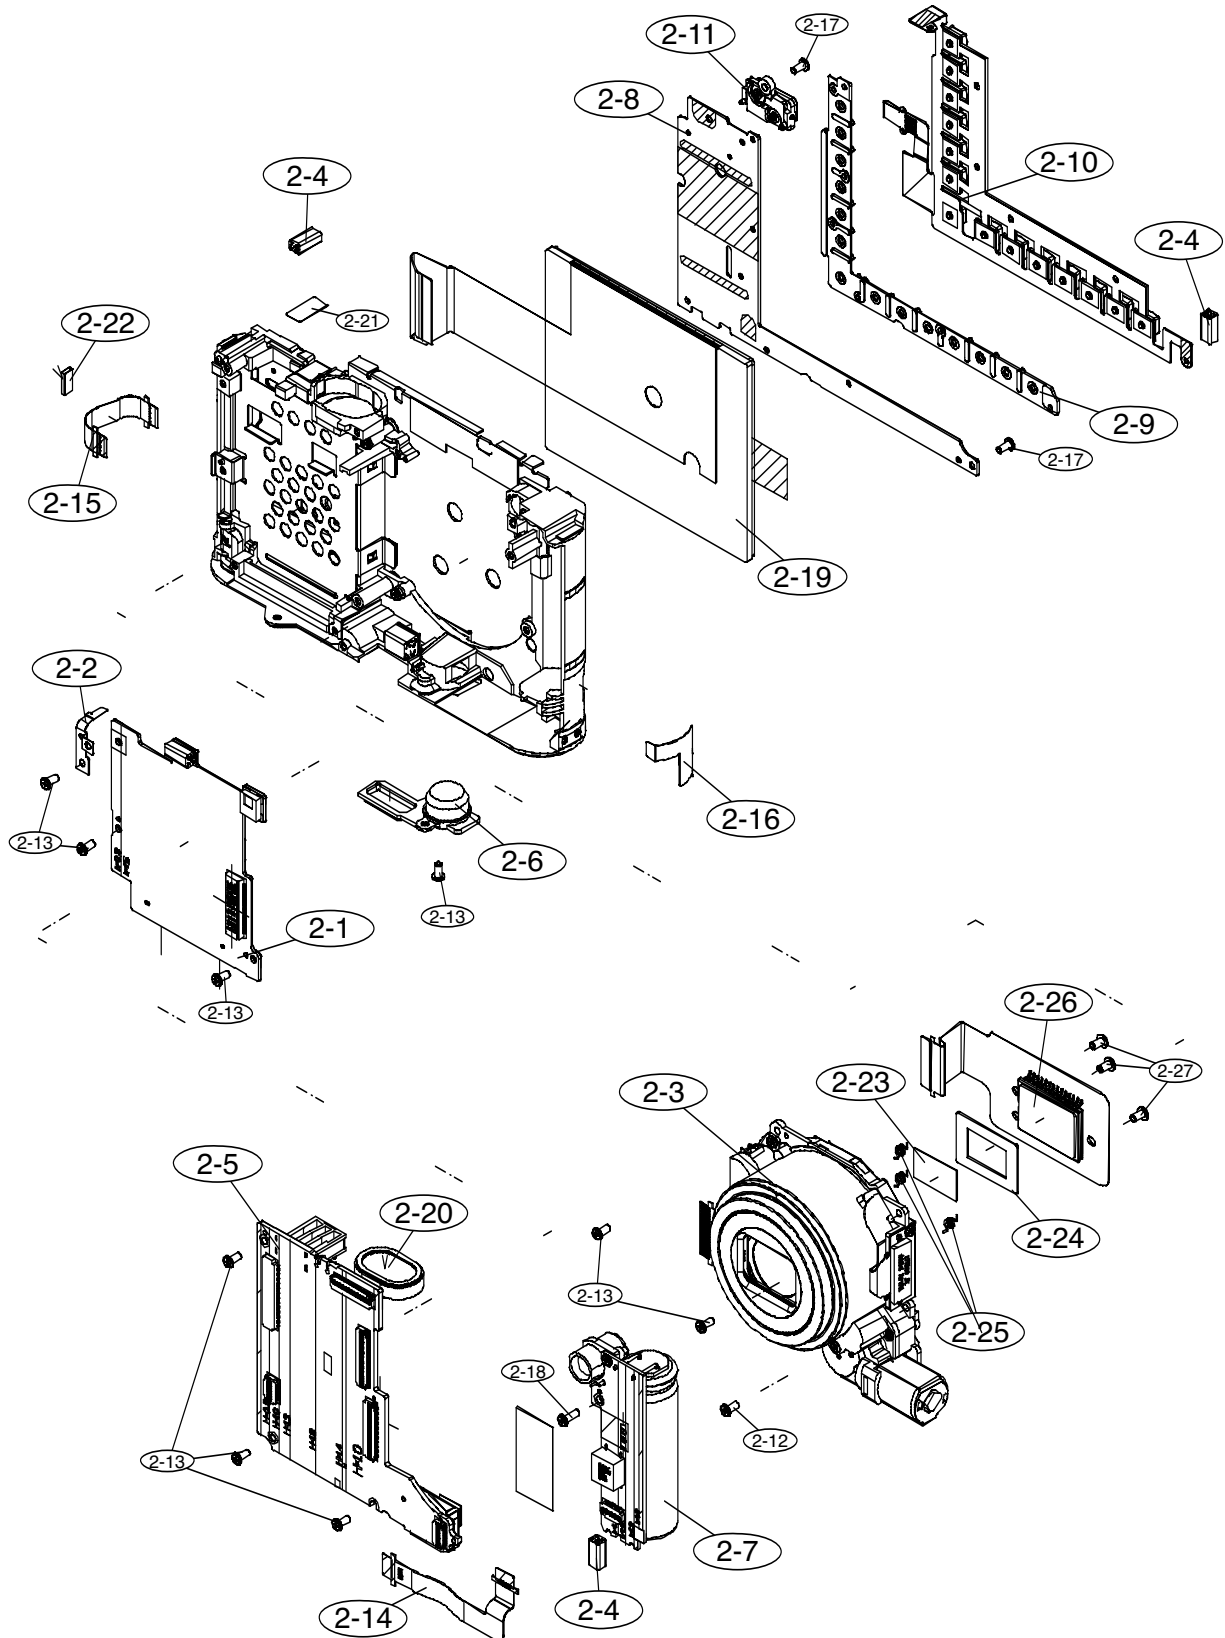


▶ PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
2-1	AD92-00501A	CARD_PCB_ASSY	1	O	
2-2	AD61-03228A	CARD_MAIN_PRESS	1	O	
2-3	AD97-13717A	BARREL ASSY	1	O	BLACK
	AD97-15138A	BARREL ASSY	1	O	SILVER
2-4	AD63-02507A	CARD_SHIELD_FOAM	3	O	
2-5	AD92-00499A	MAIN_PCB_ASSY	1	O	
2-6	AD61-03408A	TRIPOD_CONNECTOR	1	O	
2-7	AD92-00187A	STROBO_PCB_ASSY	1	O	
2-8	AD92-00503A	SUB_PCB_ASSY	1	O	
2-9	AD73-00275A	TOUCH_RUBBER	1	O	
2-10	AD97-15195A	TOUCH_BUTTON_ASSY	1	O	
2-11	AD97-15194A	ZOOM_LEVER_ASSY	1	O	BLACK
	AD97-15787A	ZOOM_LEVER_ASSY	1	O	SILVER
2-12	6003-001674	SCREW	1	X	
2-13	6003-001633	SCREW B	9	X	
2-14	AD41-01017A	STROBO_CONNECTION_FPC	1	O	
2-15	AD41-01015A	SUB_CONNECTION_FPCB	1	O	
2-16	AD63-02627A	STROBO_SHIELD	1	O	
2-17	6003-001630	SCREW-TAPTITE	2	X	
2-18	6003-001657	SCREW-TAPTITE	1	X	
2-19	AD97-15790A	ASSY-AMOLED	1	O	
2-20	3001-002319	SPEAKER	1	O	
2-21	AD63-03115A	SHEET-MAIN SHIELD	1	X	
2-22	AD63-01994A	SHIELD FOAM A	1	O	
2-23	AD63-01246A	IR CUT FILTER	1	O	
2-24	AD73-00271A	CCD_SEALING_RUBBER	1	O	
2-25	6107-001483	CCD_ADJUST_SPRING	3	O	
2-26	AD97-15201A	CCD_PLATE_ASSY	1	O	
2-27	6003-001643	SCREW	3	X	

III . EXPLODED VIEW AND PART LIST

3. BODY ASSEMBLY-2

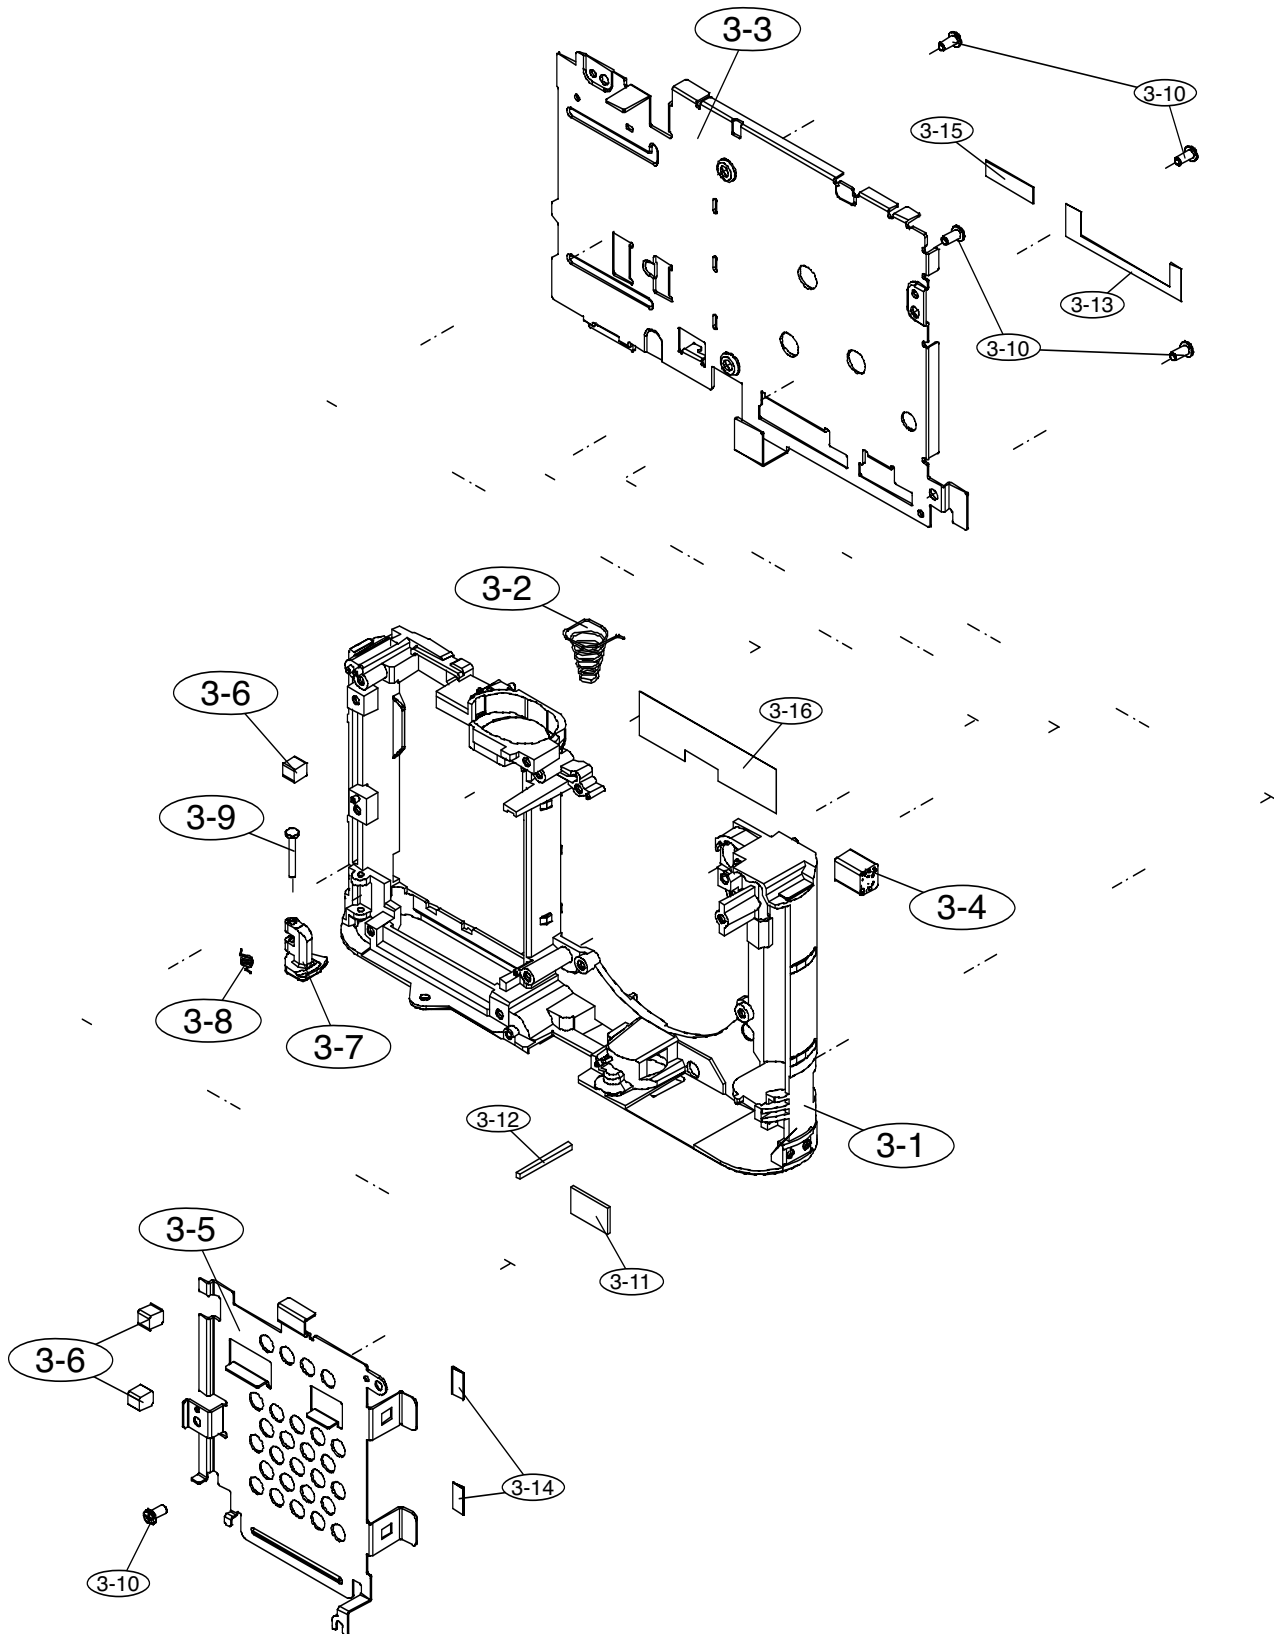


► PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
3-1	AD62-00084A	CHAMBER BODY	1	O	BLACK
	AD62-00078A	CHAMBER BODY	1	O	SILVER
3-2	6107-001454	BATTERY_PUSH_SPRING	1	O	
3-3	AD61-03222A	MAIN_FRAME	1	O	
3-4	AD63-02626A	HDMI_SHIELD_FOAM	1	O	
3-5	AD61-03223A	BATTERY HOLDER_PLATE	1	O	
3-6	AD63-02629A	BATT_SHIELD_FOAM	3	O	
3-7	AD66-00497A	BATTERY_LOCK_LEVER	1	O	
3-8	6107-001429	BATTERY LOCK LEVER SPRING	1	O	
3-9	AD61-03575A	BATTEY_LOCK_LEVER_HINGE	1	O	
3-10	6003-001633	SCREW B	5	X	
3-11	AD63-03076A	CUSHION-MOTOR	1	X	
3-12	AD63-03003A	CUSHION-BATTERY COVER	1	X	
3-13	AD63-02839A	TOUCH_BUTTON_TAPE	1	X	
3-14	AD63-02351A	TOP_SHIELD_FOAM	2	X	
3-15	AD63-03028A	SHEET-TOUCH BUTTON	1	X	
3-16	AD63-02813A	MAIN_FRAME_SHEET	1	X	

III . EXPLODED VIEW AND PART LIST

4. FRONT COVER ASSEMBLY

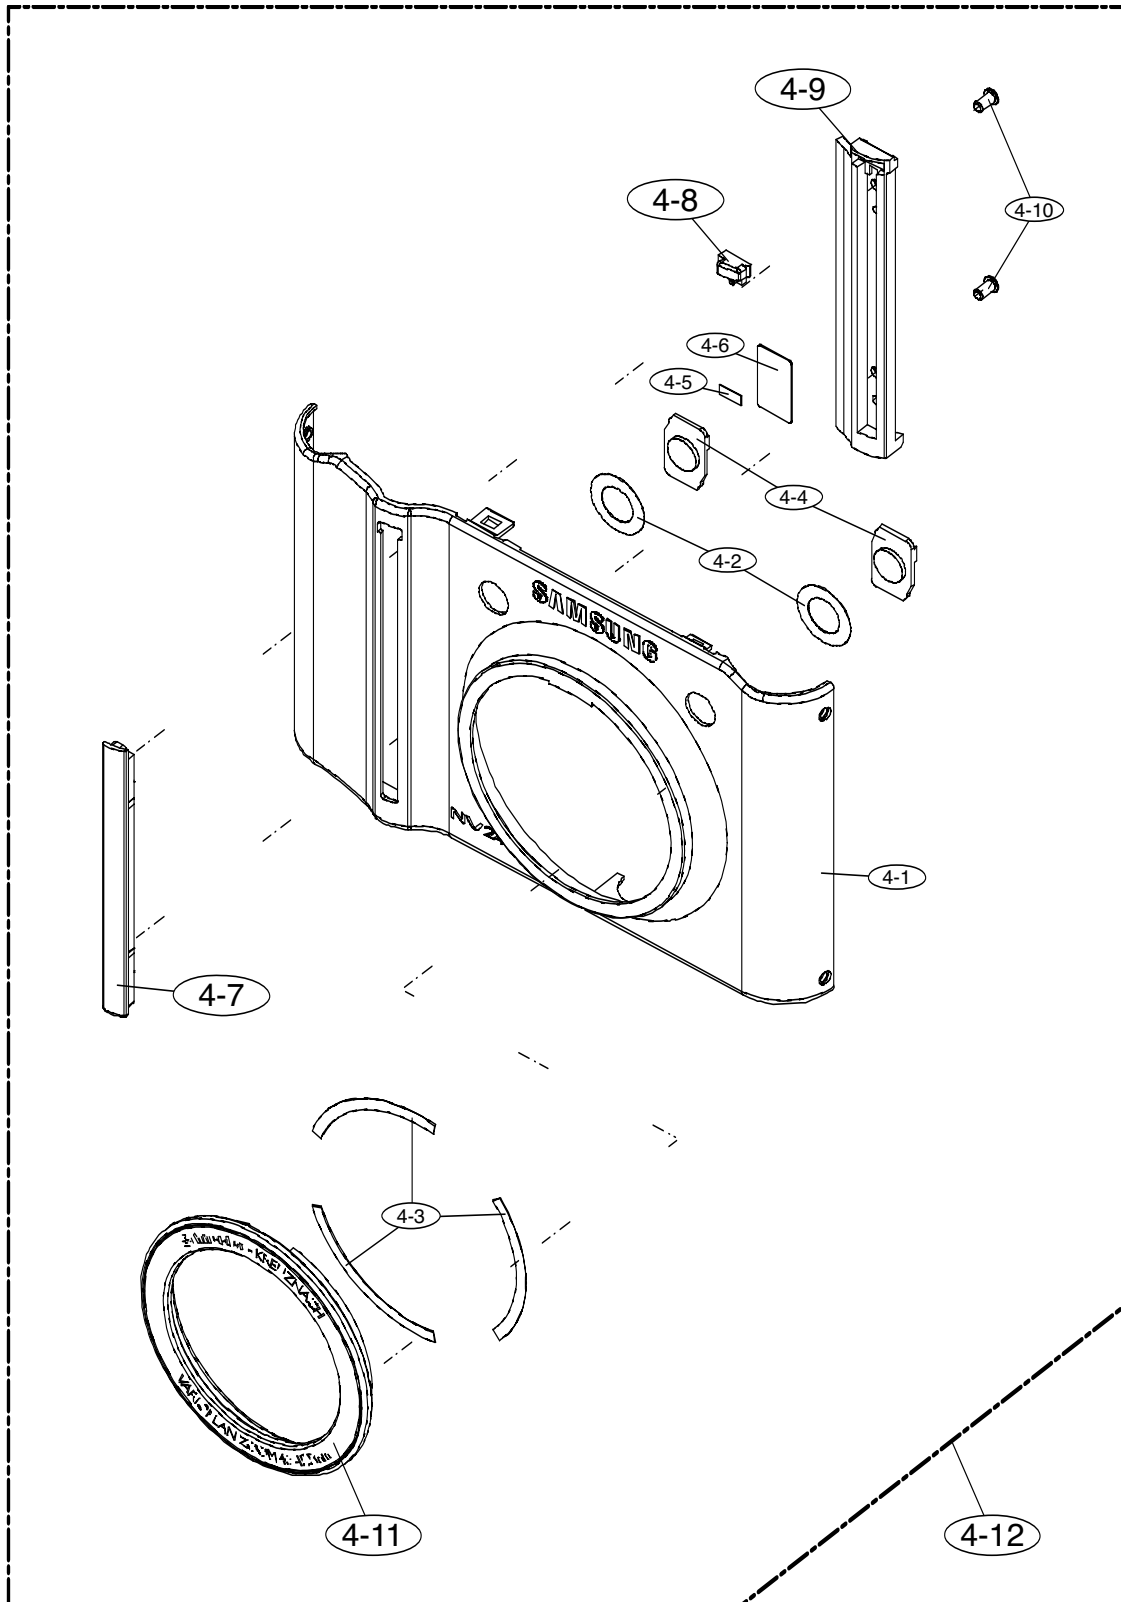


► PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
4-1	AD63-01499A	FRONT_COVER	1	X	
4-2	AD63-02500A	AF_LED_WINDOW_TAPE	2	X	
4-3	AD63-02508A	DECORATION_TAPE	3	X	
4-4	AD64-02133A	REMOCON_WINDOW	2	X	
4-5	AD63-02038A	REMOCON_TAPE	2	X	
4-6	AD63-02509A	REMOCON_FILTER	1	X	
4-7	AD63-01870A	FRONT_GRIP	1	O	BLACK
	AD63-02888A	FRONT_GRIP	1	O	SILVER
4-8	AD64-02136A	SELF_LED_WINDOW	1	O	
4-9	AD61-03524A	GRIP HOLDER	1	O	
4-10	6003-001687	SCREW	2	X	
4-11	AD64-01747A	FRONT_DECO_RING	1	O	BLACK
	AD64-02261A	FRONT_DECO_RING	1	O	SILVER
4-12	AD97-15658A	FRONT COVER ASSY_VLUU	1	O	BLACK
	AD97-15266A	FRONT COVER ASSY_SAMSUNG	1	O	BLACK
	AD97-15661A	FRONT COVER ASSY_藍調_NV106HD	1	O	BLACK
	AD97-15659A	FRONT COVER ASSY_VLUU	1	O	SILVER
	AD97-15660A	FRONT COVER ASSY_SAMSUNG	1	O	SILVER
	AD97-15662A	FRONT COVER ASSY_藍調_NV106HD	1	O	SILVER

III . EXPLODED VIEW AND PART LIST

5. BACK COVER ASSEMBLY

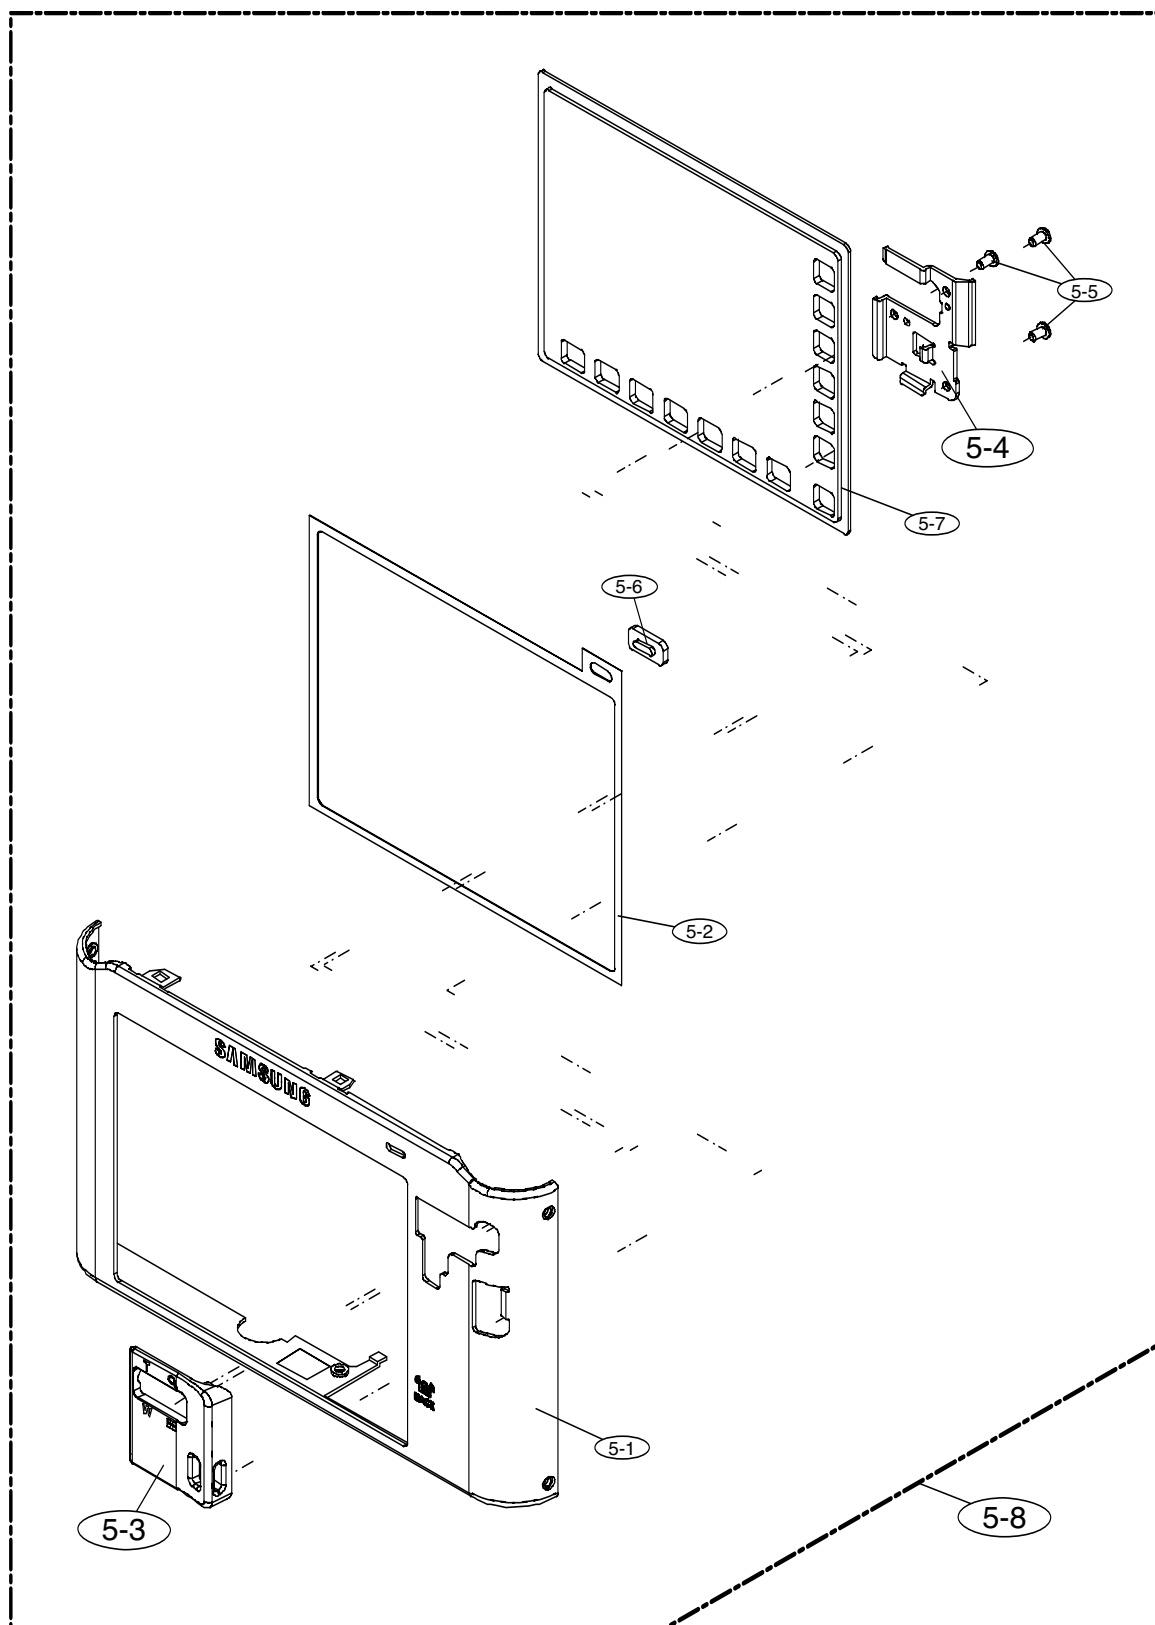


► PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
5-1	AD63-01500A	BACK_COVER	1	X	
5-2	AD63-02503A	LCD_WINDOW_TAPE	1	X	
5-3	AD61-03526A	STRAP HOLDER	1	O	BLACK
	AD61-03660A	STRAP HOLDER	1	O	SILVER
5-4	AD61-03226A	STRAP HOLDER_PLATE	1	O	
5-5	6003-001674	SCREW-H1	3	X	
5-6	AD64-02087A	REAR_ACCESS_WINDOW	1	X	
5-7	AD64-02139A	LCD_WINDOW	1	X	
5-8	AD97-15267A	BACK COVER ASSY	1	O	BLACK
	AD97-15784A	BACK COVER ASSY	1	O	SILVER

III . EXPLODED VIEW AND PART LIST

6. TOP COVER ASSEMBLY

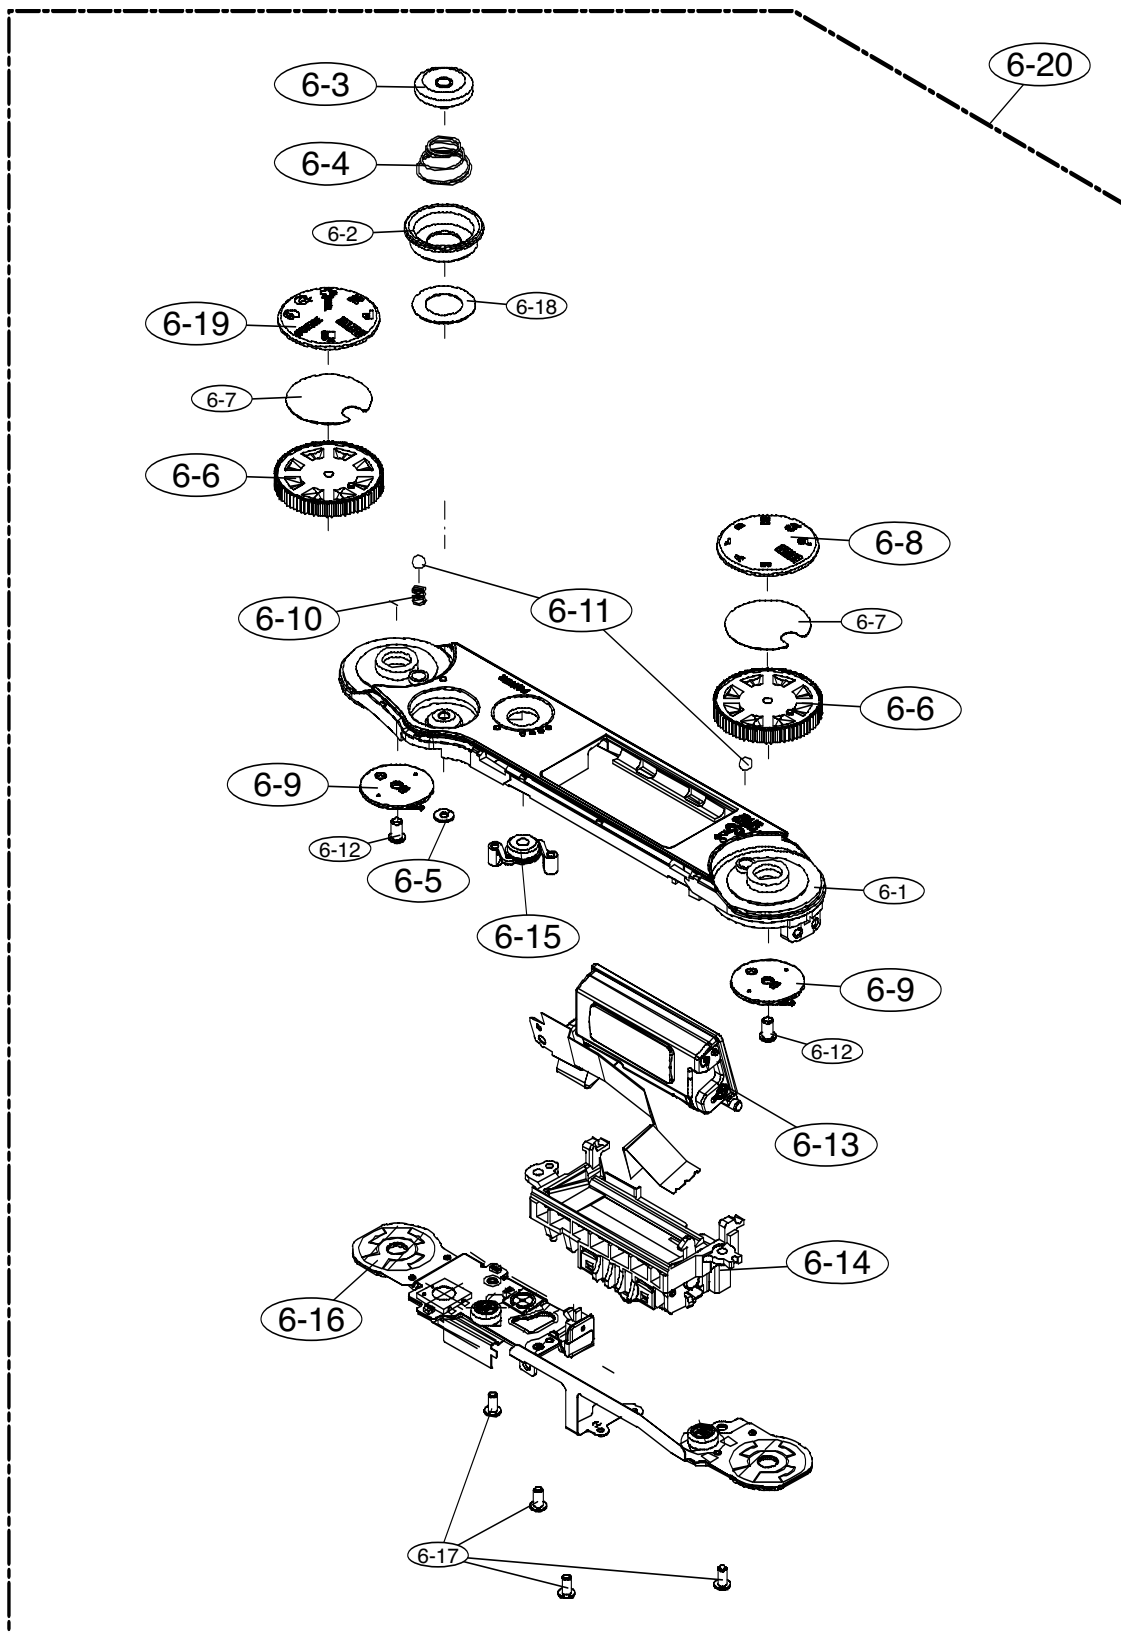


▶ PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
6-1	AD63-01869A	TOP_COVER	1	X	
6-2	AD64-02169A	RELEASE_DECO	1	X	
6-3	AD64-02134A	RELEASE_BUTTON	1	O	BLACK
	AD64-02266A	RELEASE_BUTTON	1	O	SILVER
6-4	6107-001447	RELEASE BUTTON SPRING	1	O	
6-5	6031-001628	WASHER-PLAIN	1	O	
6-6	AD63-02761A	MODE_DIAL	2	O	BLACK
	AD64-02276A	MODE_DIAL	2	O	SILVER
6-7	AD63-01993A	T/SHEET-MODE DIAL	2	X	
6-8	AD63-02915A	COVER-STYLE PICKER	1	O	BLACK
	AD63-02916A	COVER-STYLE PICKER	1	O	SILVER
6-9	AD97-14371A	MODE_CONTACT_ASSY	2	O	
6-10	6107-001515	SPRING-CS	2	O	
6-11	6031-001628	MODE DIAL CLICK BALL-H1	2	O	
6-12	6003-001687	SCREW	2	X	
6-13	AD97-15190A	POP_UP_ASSY	1	O	BLACK
	AD97-15786A	POP_UP_ASSY	1	O	SILVER
6-14	AD97-15189A	SOLENOIDE_ASSY	1	O	
6-15	AD64-02135A	POWER_BUTTON	1	O	BLACK
	AD64-02267A	POWER_BUTTON	1	O	SILVER
6-16	AD97-15185A	TOP_KEY_PLATE_ASSY	1	O	
6-17	6003-001630	SCREW-TAPTITE	4	X	
6-18	AD63-02500A	AF_LED_WINDOW_TAPE	1	X	
6-19	AD63-02528A	MODE_DIAL_CAP	1	O	BLACK
	AD63-02778A	MODE_DIAL_CAP	1	O	SILVER
6-20	AD97-15270A	TOP COVER ASSY	1	O	BLACK
	AD97-15785A	TOP COVER ASSY	1	O	SILVER

III . EXPLODED VIEW AND PART LIST

7. BARREL ASSEMBLY

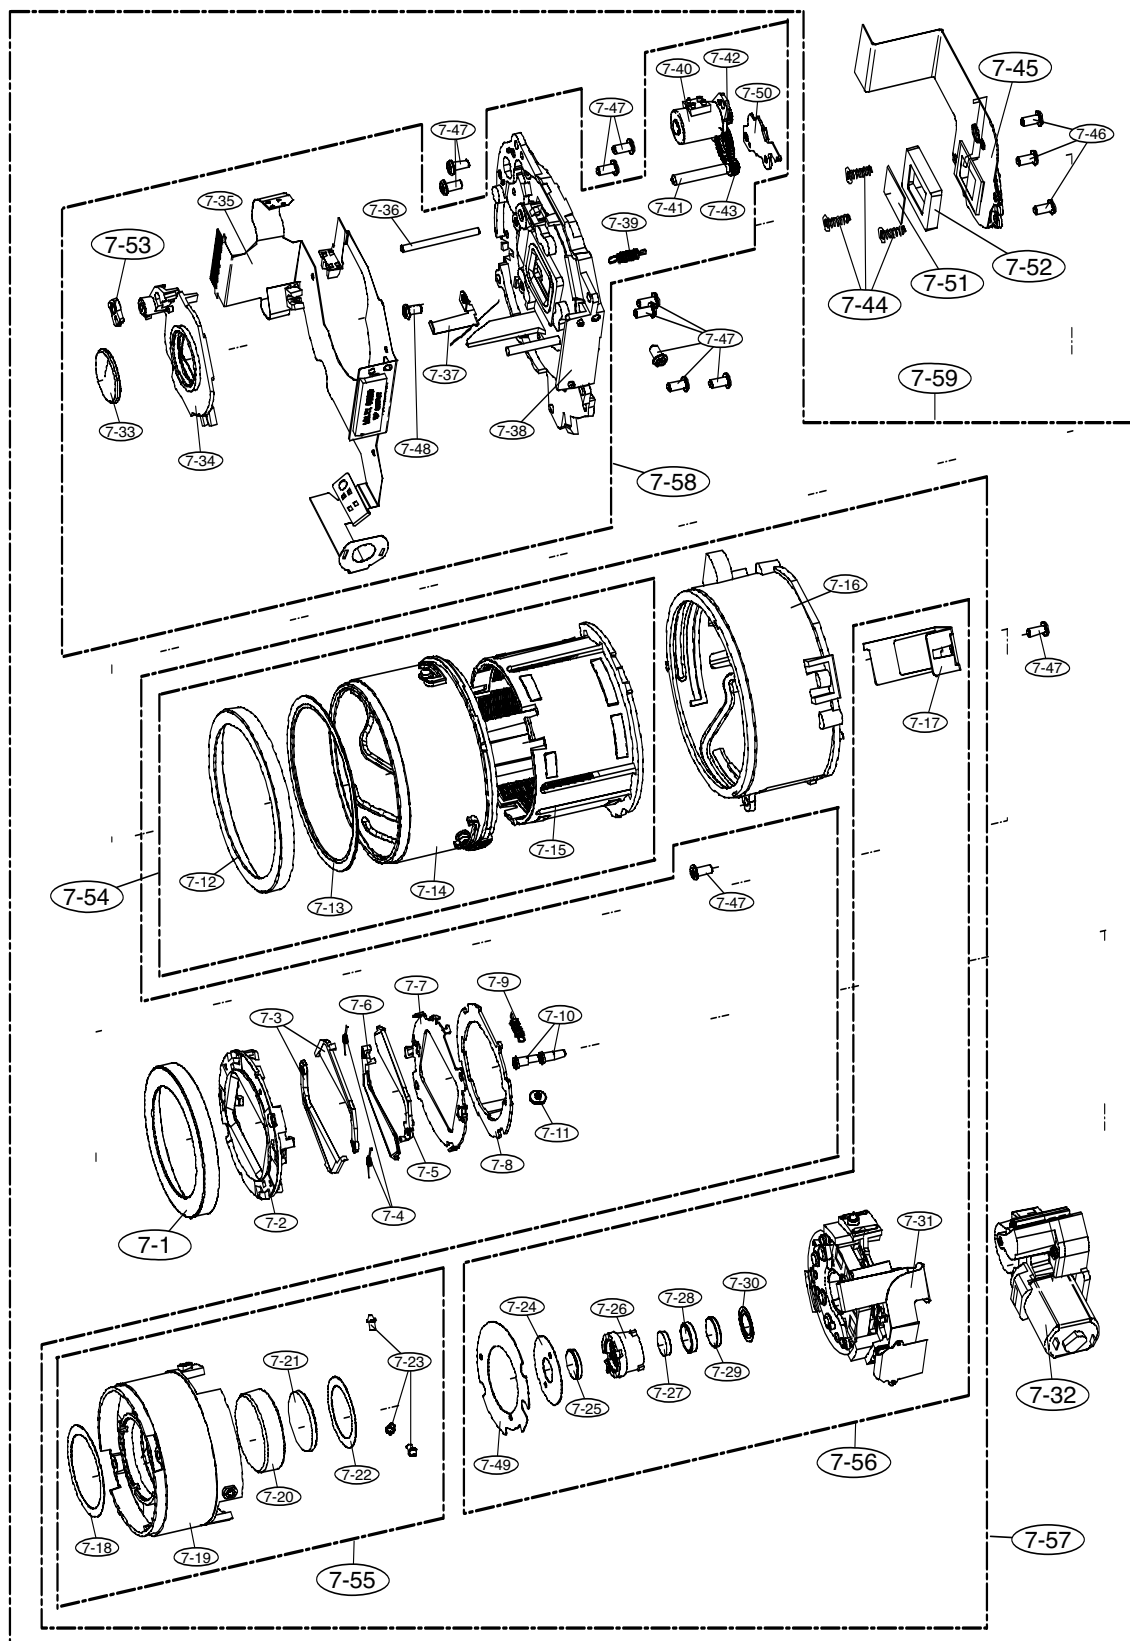

▶ PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
7-1	AD64-01782A	FRONT_DECO_RING	1	O	BLACK
	AD64-01793A	FRONT_DECO_RING	1	O	SILVER
7-2	AD64-01842A	FRONT_PANEL-UW4	1	X	
7-3	AD63-01528A	BARRIER_C-UW4	2	X	
7-4	6107-001473	BARRIER_CLOSE_SPRING-UW4	2	X	
7-5	AD63-01527A	BARRIER_B-UW4	1	X	
7-6	AD63-01526A	BARRIER_A-UW4	1	X	
7-7	AD61-03263A	BARRIER_BASE-UW4	1	X	
7-8	AD66-00483A	BARRIER_LEVER-UW4	1	X	
7-9	6107-001472	BARRIER_OPEN_SPRING-UW4	1	X	
7-10	6002-001418	BARRIER SCREW_A-SZA8518	2	X	
7-11	AD66-00537A	BARRIER LEVER PIN-SZA8518	1	X	
7-12	AD64-01781A	CAM_DECO_RING	1	x	BLACK
	AD64-01784A	CAM_DECO_RING	1	X	SILVER
7-13	AD63-01928A	CAM_SHIELD-UW4	1	X	
7-14	AD67-00733A	CAM_BARREL	1	X	BLACK
	AD67-00746A	CAM_BARREL	1	X	SILVER
7-15	AD67-00732A	GUIDE_BARREL-UW4	1	X	
7-16	AD67-00734A	OUTER_BARREL-UW4	1	X	
7-17	AD61-03264A	SHUTTER_FPCB_GUIDE-UW4	1	X	
7-18	AD63-01924A	1ST_BARREL_SHIELD_A-UW4	1	X	
7-19	AD67-00735A	ZOOM_RING	1	X	BLACK
	AD67-00747A	ZOOM_RING	1	X	SILVER
7-20	AD67-00604A	G1_LENS-NV2_104W	1	X	
7-21	AD67-00610A	G2_LENS-NV2_104W	1	X	
7-22	AD63-01929A	1ST_BARREL_SHIELD_B-UW4	1	X	

III . EXPLODED VIEW AND PART LIST

► PARTS LIST


Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
7-23	AD66-00568A	1ST_MOVE_PIN-UW4	3	X	
7-24	AD63-01925A	2ND_BARREL_SHIELD_A-UW4	1	X	
7-25	AD67-00608A	G3_LENS-NV2_104W	1	X	
7-26	AD67-00731A	2ND_LENS_BARREL-UW4	1	X	
7-27	AD67-00528A	G4_LENS-NV2_104W	1	X	
7-28	AD67-00529A	G5_LENS-NV2_104W	1	X	
7-29	AD67-00530A	G6_LENS-NV2_104W	1	X	
7-30	AD63-01926A	2ND_BARREL_SHIELD_B-UW4	1	X	
7-31	AD97-14949A	SHUTTER_OIS_NV2_104W	1	X	
7-32	AD31-00070A	ZOOM-GEAR-MOTOR_NV2-104W	1	O	
7-33	AD67-00612A	G7_LENS-NV2_104W	1	X	
7-34	AD63-01525A	BARREL-3RD-UW4	1	X	
7-35	AD97-15167A	MAINPCB_SMD_ASSY-UW4	1	X	
7-36	AD66-00567A	AF_GUIDE_SHAFT	1	X	
7-37	AD61-03265A	AF HOLDER-UW4	1	X	
7-38	AD61-03446A	LENS_BASE-UW4	1	X	
7-39	6107-001471	AF_SPRING-UW4	1	X	
7-40	3101-001450	AF_MOTOR_NV2_104W	1	X	
7-41	6003-001681	AF_LEAD_SCREW-UW4	1	X	
7-42	AD66-00514A	AF_GEAR_B-UW4	1	X	
7-43	AD66-00519A	AF_GEAR_C-UW4	1	X	

► PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
7-44	6107-001483	CCD_ADJUST_SPRING-NV2_104W	3	O	
7-45	AD97-15201A	CCD_PLATE_ASSY-NV2_104W	1	O	
7-46	6003-001643	SCREW_1430_TAPTITE	3	X	
7-47	6003-001633	SCREW B	11	X	
7-48	6003-001629	SCREW-TAPTITE	1	X	
7-49	AD61-03658A	SHUTTER_COVER_PLATE-UW4	1	X	
7-50	AD61-03266A	AF_GEAR_PLATE-UW4	1	X	
7-51	AD63-01246A	IR CUT FILTER	1	O	
7-52	AD73-00271A	CCD_SEALING_RUBBER-NV2_104W	1	O	
7-53	AD61-03445A	AF_CLIP-N2S	1	O	
7-54	AD97-13713A	CAM_BARREL_ASSY-UW4	1	O	BLACK
	AD97-15135A	CAM_BARREL_ASSY	1	O	SILVER
7-55	AD97-13712A	ZOOM_RING_ASSY	1	O	BLACK
	AD97-15136A	ZOOM_RING_ASSY	1	O	
7-56	AD97-13711A	2ND_BARREL_ASSY-UW4	1	O	
7-57	AD97-15134A	SUB_BARREL_ASSY-UW4	1	O	BLACK
	AD97-15137A	SUB_BARREL_ASSY	1	O	SILVER
7-58	AD97-13716A	LENS_BASE_ASSY-UW4	1	O	
7-59	AD97-13717A	BARREL_ASSY	1	O	BLACK
	AD97-15138A	BARREL_ASSY	1	O	SILVER

III . EXPLODED VIEW AND PART LIST

8. PACKING ITEM

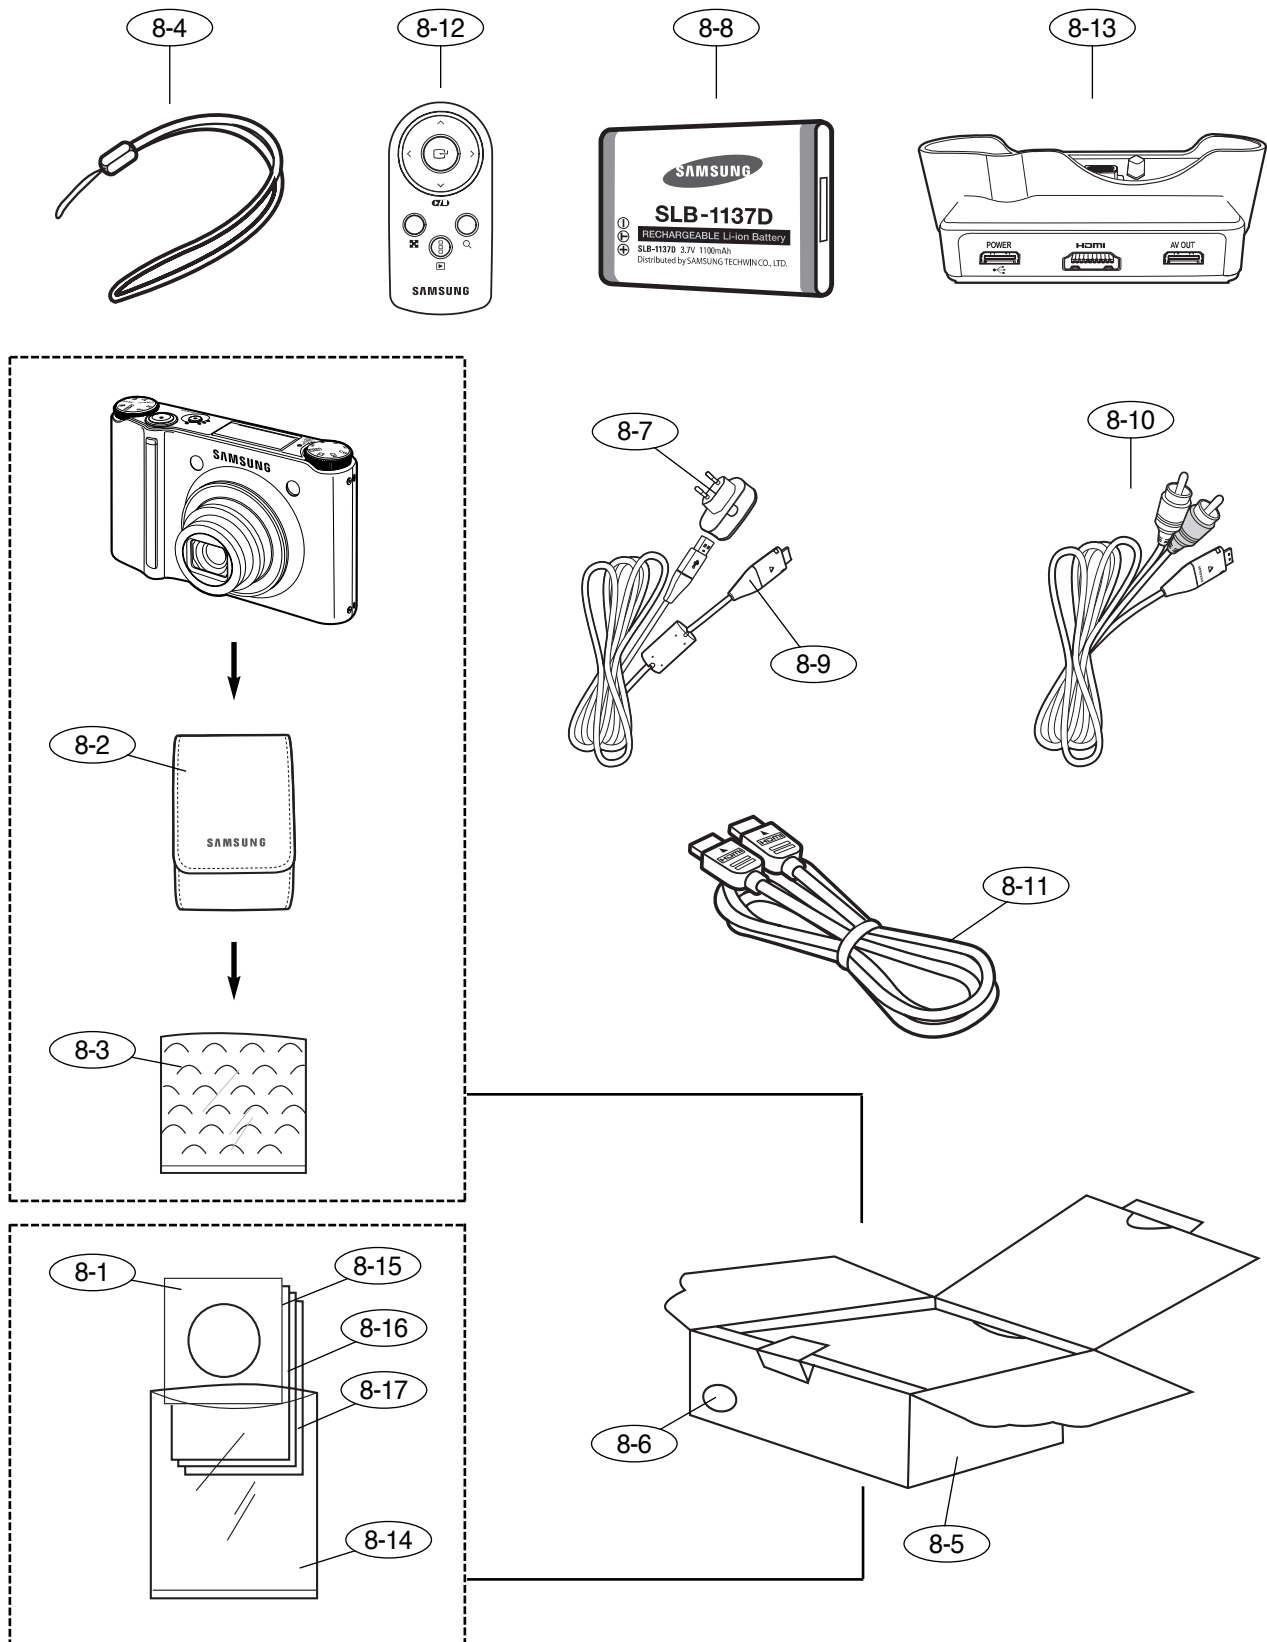

► PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
8-1	AD46-00169A	Driver_Samsung_Master_NV24 HD	1	O	
8-2	AD69-01578A	POUCH_NV24 HD	1	O	
8-3	6902-000949	AIR_BAG_TH-73F	1	O	
8-4	AD63-02602A	STRAP_VLUU_L730_Silver	1	O	
	AD63-02603A	STRAP_VLUU_L730_Black	1	O	
8-5	AD69-01591A	GT_BOX_NV24 HD_EX_AU_BL_NORMAL	1	O	
	AD69-01592A	GT_BOX_NV24 HD_USA_BL_NORMAL	1	O	
	AD69-01593A	GT_BOX_NV24 HD_CAN_BL_FULL	1	O	
	AD69-01707A	GT_BOX_NV24 HD_EX_AU_FULL	1	O	
8-6	AD81-01565A	GT_COLOR_STICKER_Silver	1	O	
	AD81-01535A	COLOR STICKER_BLACK	1	O	
	AD81-01572A	COLOR STICKER_PINK	1	O	
8-7	AD44-00129A	AC_ADAPTOR_4.2V (SAC-47)_KOR	1	O	
	AD44-00133A	AC_ADAPTOR_4.2V (SAC-47)_EXP	1	O	
	AD44-00131A	AC_ADAPTOR_4.2V (SAC-47)_USA	1	O	
	AD44-00130A	AC_ADAPTOR_4.2V (SAC-47)_UK	1	O	
	AD44-00135A	AC_ADAPTOR_4.2V (SAC-47)_AUS	1	O	
	AD44-00134A	AC_ADAPTOR_4.2V (SAC-47)_CHI_TSOE	1	O	
	AD44-00132A	AC_ADAPTOR_4.2V (SAC-47)_ARG	1	O	

III . EXPLODED VIEW AND PART LIST

► PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
8-8	AD81-00884A	LITHIUM-ION_SLB-1137D	1	O	
8-9	AD39-00151A	USB_Cable	1	O	
8-10	AD39-00150A	AV_CABLE	1	O	
8-11	AD39-00152A	HDMI CABLE_NV24HD	1	O	
8-12	AD59-00164A	SRC-A4_SILK_Remote controller	1	O	
8-13	AD61-03719A	CRADLE_SCC-NV4HD	1	O	
8-14	6902-000921	PE BAG (FOR ACCESSORY)	1	O	
8-15	AD68-02716A	U_M_VLUU_NV24 HD	1	O	
	AD68-02717A	U_M_NV24 HD_CHI_S	1	O	
	AD68-02718A	U_M_NV24 HD_E_G_F_SP_I_DU_P	1	O	
	AD68-02719A	U_M_NV24 HD_E_G_FI_SW_DA_RU	1	O	
	AD68-02720A	U_M_NV24 HD_EN_TU_CH_IN_AR_TH	1	O	
	AD68-02721A	U_M_NV24 HD_ENG_SPA_FRA_3	1	O	
	AD68-02722A	U_M_NV24 HD_E_F_I_G_P_CZ_S_H_R_B	1	O	

► PARTS LIST

Fig.No	Parts No.	Parts Name	Q'ty	Available Parts	Remarks
8-16	AD68-02875A	C_M_VLUU_NV24 HD	1	O	
	AD68-02876A	C_M_NV24 HD_CHI_S	1	O	
	AD68-02877A	C_M_NV24 HD_E_G_F_SP_I_DU_P	1	O	
	AD68-02878A	C_M_NV24 HD_E_G_FI_SW_DA_RU	1	O	
	AD68-02879A	C_M_NV24 HD_EN_TU_CH_IN_AR_TH	1	O	
	AD68-02880A	C_M_NV24 HD_ENG_SPA_FRA_3	1	O	
	AD68-02881A	C_M_NV24 HD_E_F_I_G_P_CZ_S_H_R_B	1	O	
8-17	6801-001642	WARRANTY CARD_KOREA	1	O	
	6801-001646	WARRANTY CARD_EXP	1	O	
	6801-001658	WARRANTY CARD_2 YEARS	1	O	
	6801-001650	WARRANTY CARD_RUS(3 YEARS)	1	O	
	6801-001647	CARD_PRODUCT(Mexico)	1	O	
	6801-001656	WARRANTY CARD_IRAN	1	O	
	6801-001659	WARRANTY CARD_TURKEY	1	O	
	6801-001660	SERVICE_CENTER_TURKEY	1	O	
	6801-001662	WARRANTY_CARD_Argentina	1	O	
	6801-001664	LOCAL_WARRANTY_CARD_INDIA	1	O	
	6801-001665	LOCAL_WARRANTY_CARD_ITALIA	1	O	
	AD68-02558A	PRC_CARD_RUSSIA	1	O	
	6801-001663	AS_CENTER_MANUAL_TSEO_S	1	O	