

NOTE:

- XX and -X mean standardized parts, so they may have some difference from the original one.
- Color Indication of Appearance Parts
Example:
KNOB, BALANCE (WHITE) . . . (RED)


- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Abbreviation
KR : Korean model

The components identified by mark  or dotted line with mark  are critical for safety.
Replace only with part number specified.

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
1	2-584-652-21	CASE
2	3-363-099-11	SCREW (CASE 3 TP2)
3	3-252-829-01	SCREW (B3), (+) BV TAPPING


<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
4	4-233-372-02	FOOT (FELT)
#1	7-685-645-79	SCREW +BVTP 3X6 TYPE2 N-S

8-3. FRONT PANEL SECTION

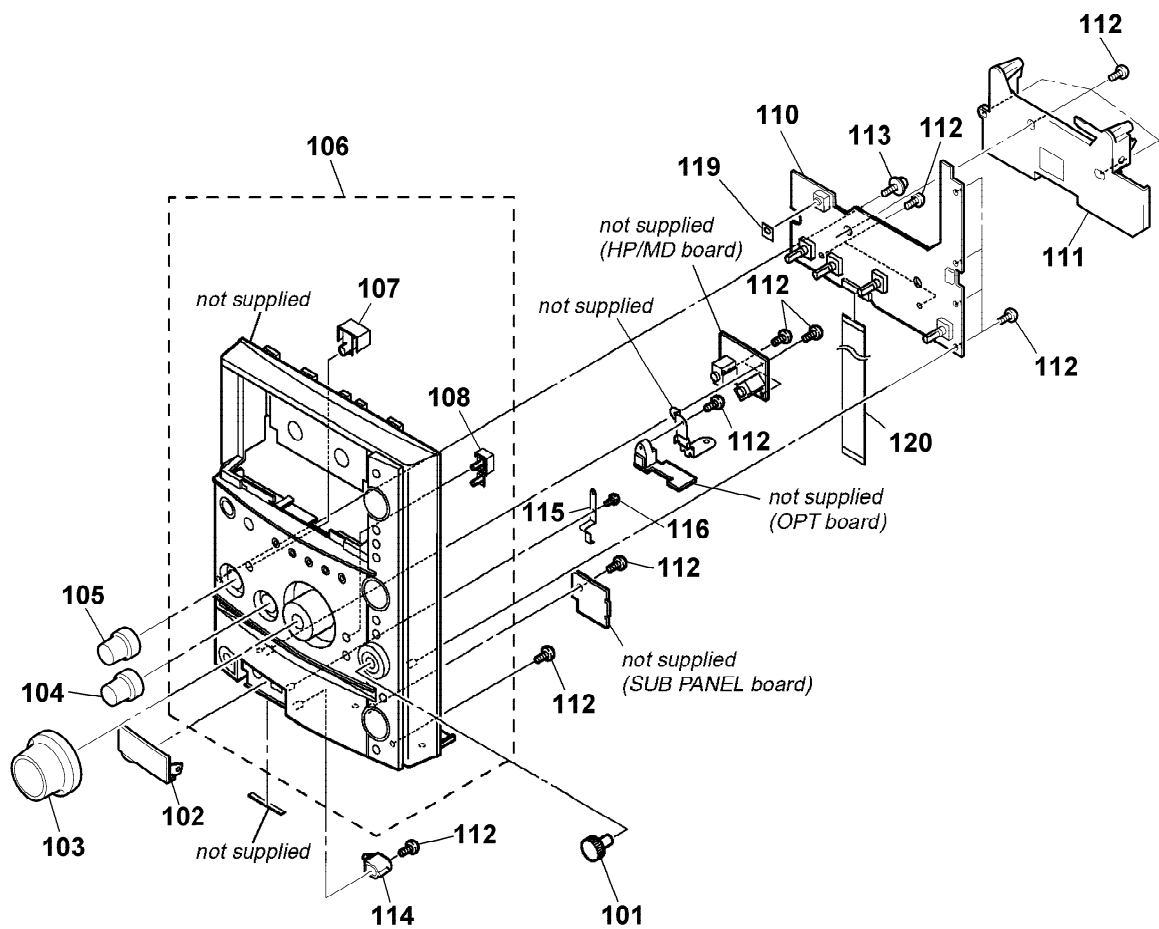


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101	2-514-665-11	KNOB (UD)		111	2-514-666-02	BRACKET (TC)	
102	2-514-654-11	LID (MD LINK)		112	3-254-151-01	SCREW (B2.6), (+) P TAPPING	
103	2-514-664-01	KNOB (VOL)		113	3-252-828-01	SCREW (B2.6), (+) PWH TAPPING	
104	2-514-663-01	KNOB (TRE)		114	2-514-656-01	SHAFT (LID MD)	
105	2-514-662-01	KNOB (BASS)		115	2-514-688-01	SPRING (LID MD)	
106	X-2149-545-1	PANEL (SERVICE) ASSY, FRONT		116	3-254-058-01	SCREW	
107	2-514-671-01	BUTTON (DSGX)		119	2-632-228-01	SHEET (RIMOKON)	
108	2-514-672-11	BUTTON (FOLDER)		120	1-831-952-21	CABLE, FLEXIBLE FLAT (19 CORE)	
110	A-1211-665-A	PANEL BOARD, COMPLETE					

8-4. LID (TC) SECTION

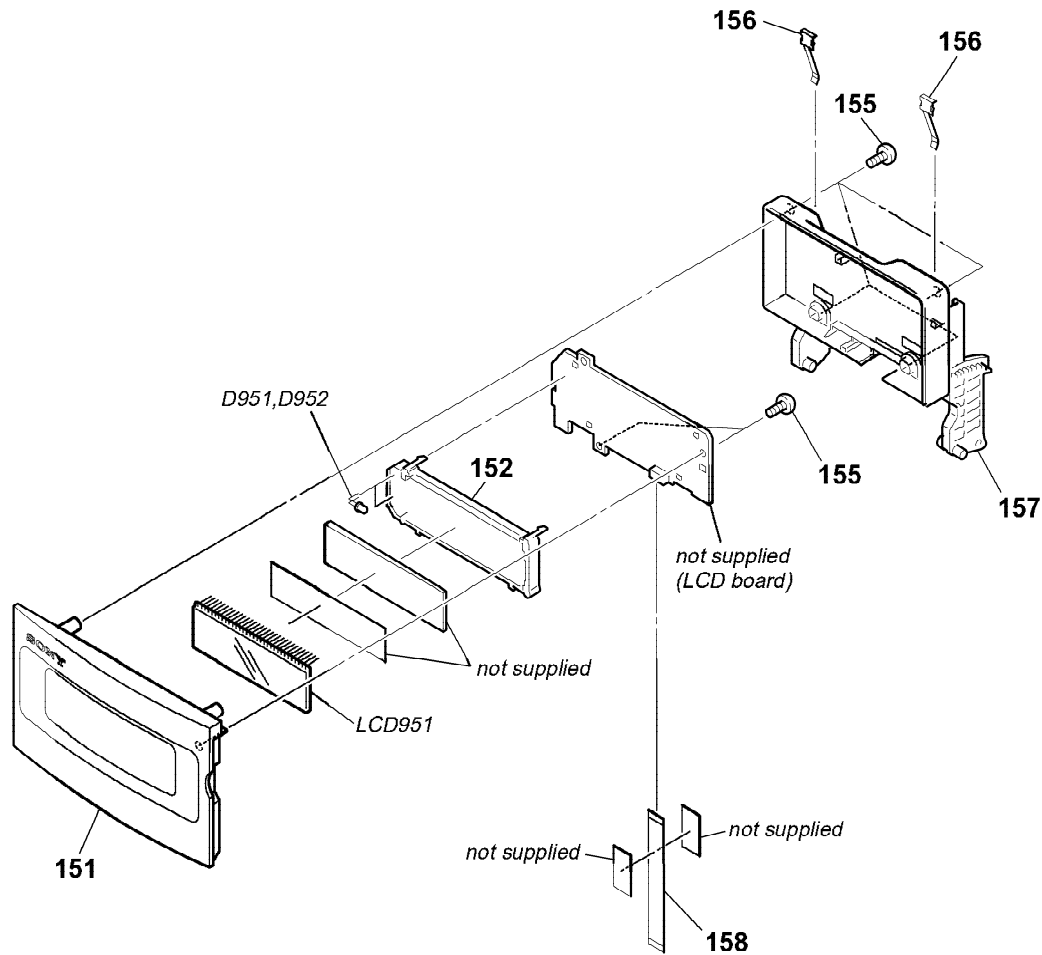


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
151	X-2149-546-1	LID (SERVICE) ASSY		158	1-832-816-21	CABLE, FLEXIBLE FLAT (9 CORE)	
152	2-514-678-01	HOLDER (LCD)		D951	6-501-138-01	LED SELU2WA10C-LF62 (LCD BACK LIGHT)	
155	3-254-151-01	SCREW (B2.6), (+) P TAPPING		D952	6-501-138-01	LED SELU2WA10C-LF62 (LCD BACK LIGHT)	
156	2-584-676-01	SPRING (TC), PLATE		LCD951	1-963-403-11	DISPLAY PANEL, LIQUID CRYSTAL	
157	4-252-353-04	HOLDER (TC)					

8-5. CHASSIS SECTION

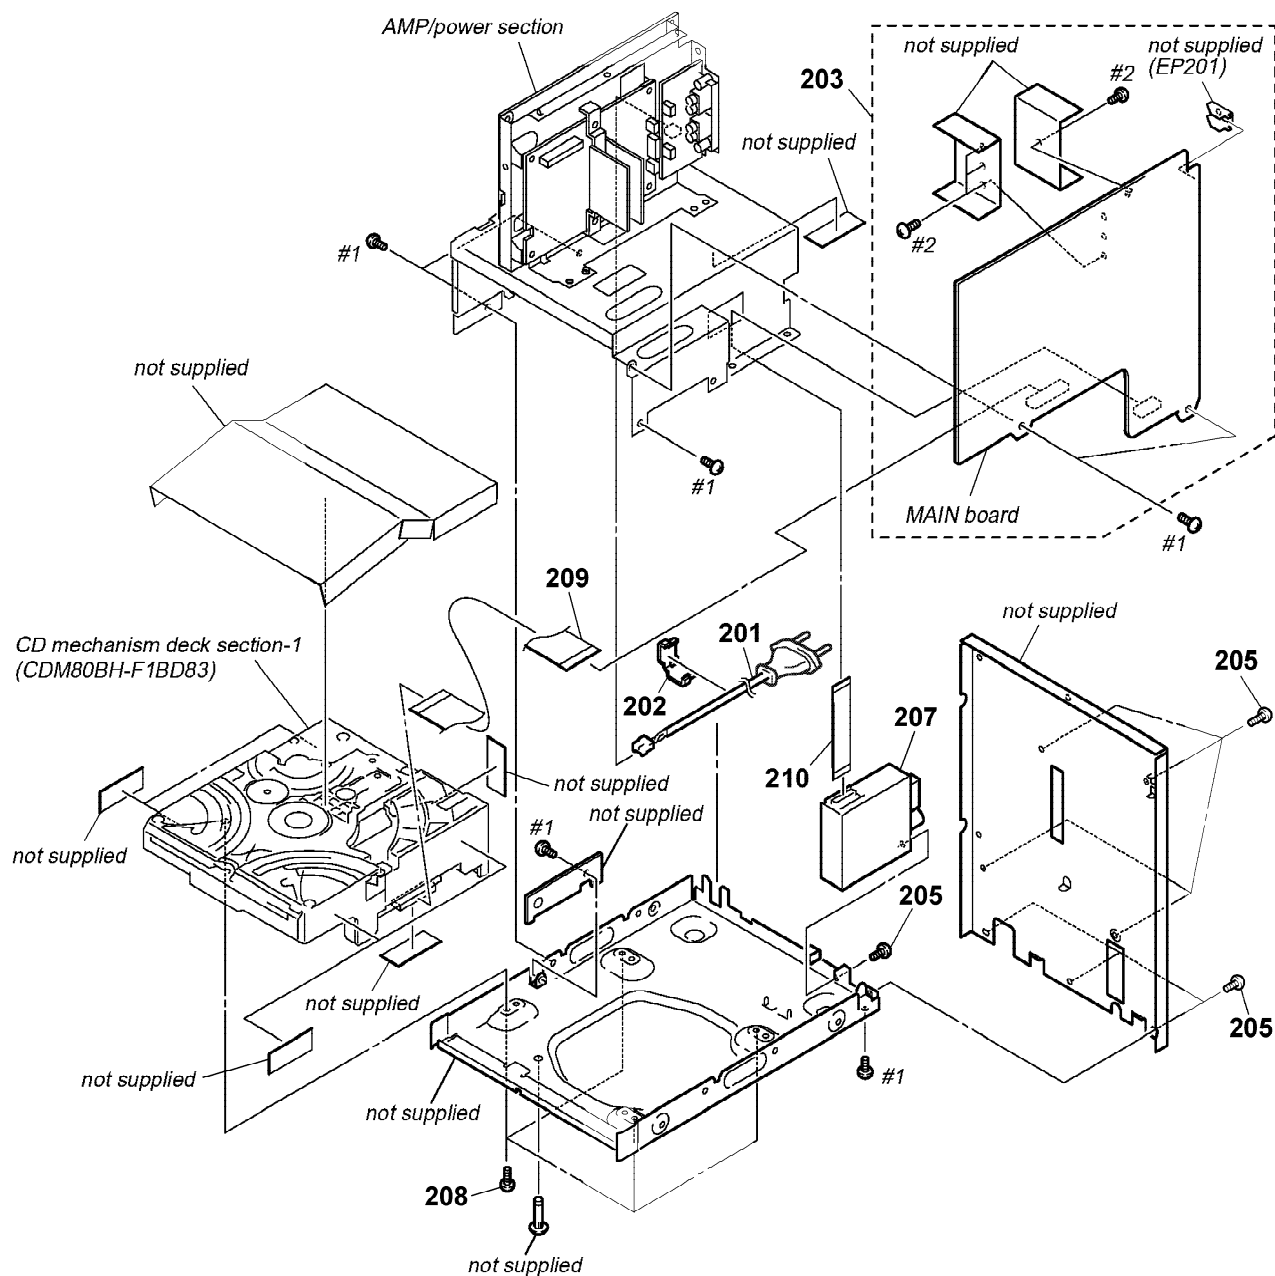


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
△ 201	1-769-079-41	CORD, POWER (KR)		207	1-693-629-11	TUNER (FM/AM) (KR)	
△ 201	1-830-188-11	CORD, POWER (AEP)		208	3-254-143-01	SCREW (B3), (+) BV TAPPING	
202	3-703-244-00	BUSHING (2104), CORD		209	1-828-640-51	WIRE (FLAT TYPE) (23 CORE)	
203	A-1211-661-A	MAIN BOARD, COMPLETE (AEP)		210	1-831-926-11	CABLE, FLEXIBLE FLAT (11 CORE) (KR)	
203	A-1251-303-A	MAIN BOARD, COMPLETE (KR)		210	1-831-943-21	CABLE, FLEXIBLE FLAT (15 CORE) (AEP)	
205	3-252-829-01	SCREW (B3), (+) BV TAPPING		#1	7-685-645-79	SCREW +BVTP 3X6 TYPE2 N-S	
207	1-693-626-11	TUNER (FM/AM) (AEP)		#2	7-685-646-79	SCREW +BVTP 3X8 TYPE2 N-S	

8-6. AMP/POWER SECTION

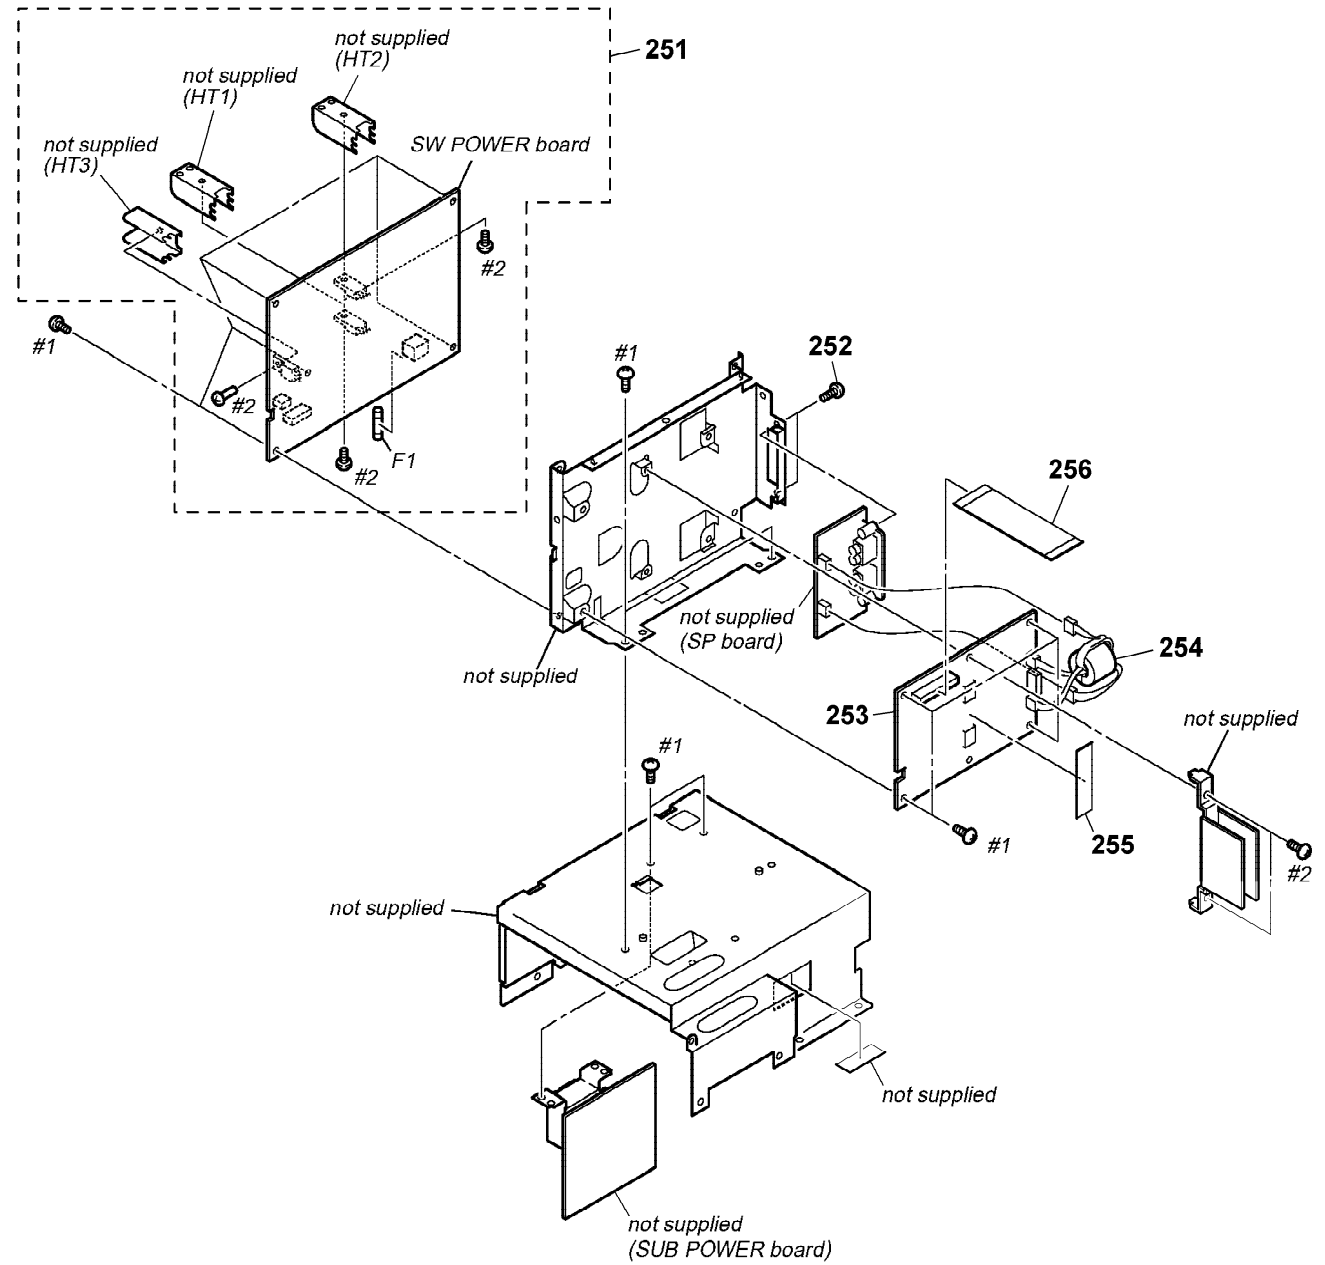


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
251	A-1211-675-A	SW POWER BOARD, COMPLETE (AEP)		255	2-514-691-01	SHEET, RADIATION	
251	A-1251-306-A	SW POWER BOARD, COMPLETE (KR)		256	1-832-874-21	CABLE, FLEXIBLE FLAT (21 CORE)	
252	3-254-142-01	SCREW (B3), (+) BV TAPPING		△ F1	1-576-230-51	FUSE (H.B.C) (T3.15AL/H250V)	
253	A-1211-672-A	AMP BOARD, COMPLETE		#1	7-685-645-79	SCREW +BVTP 3X6 TYPE2 N-S	
254	1-400-932-11	FILTER, CLAMP		#2	7-685-646-79	SCREW +BVTP 3X8 TYPE2 N-S	

8-7. CD MECHANISM DECK SECTION-1 (CDM80BH-F1BD83)

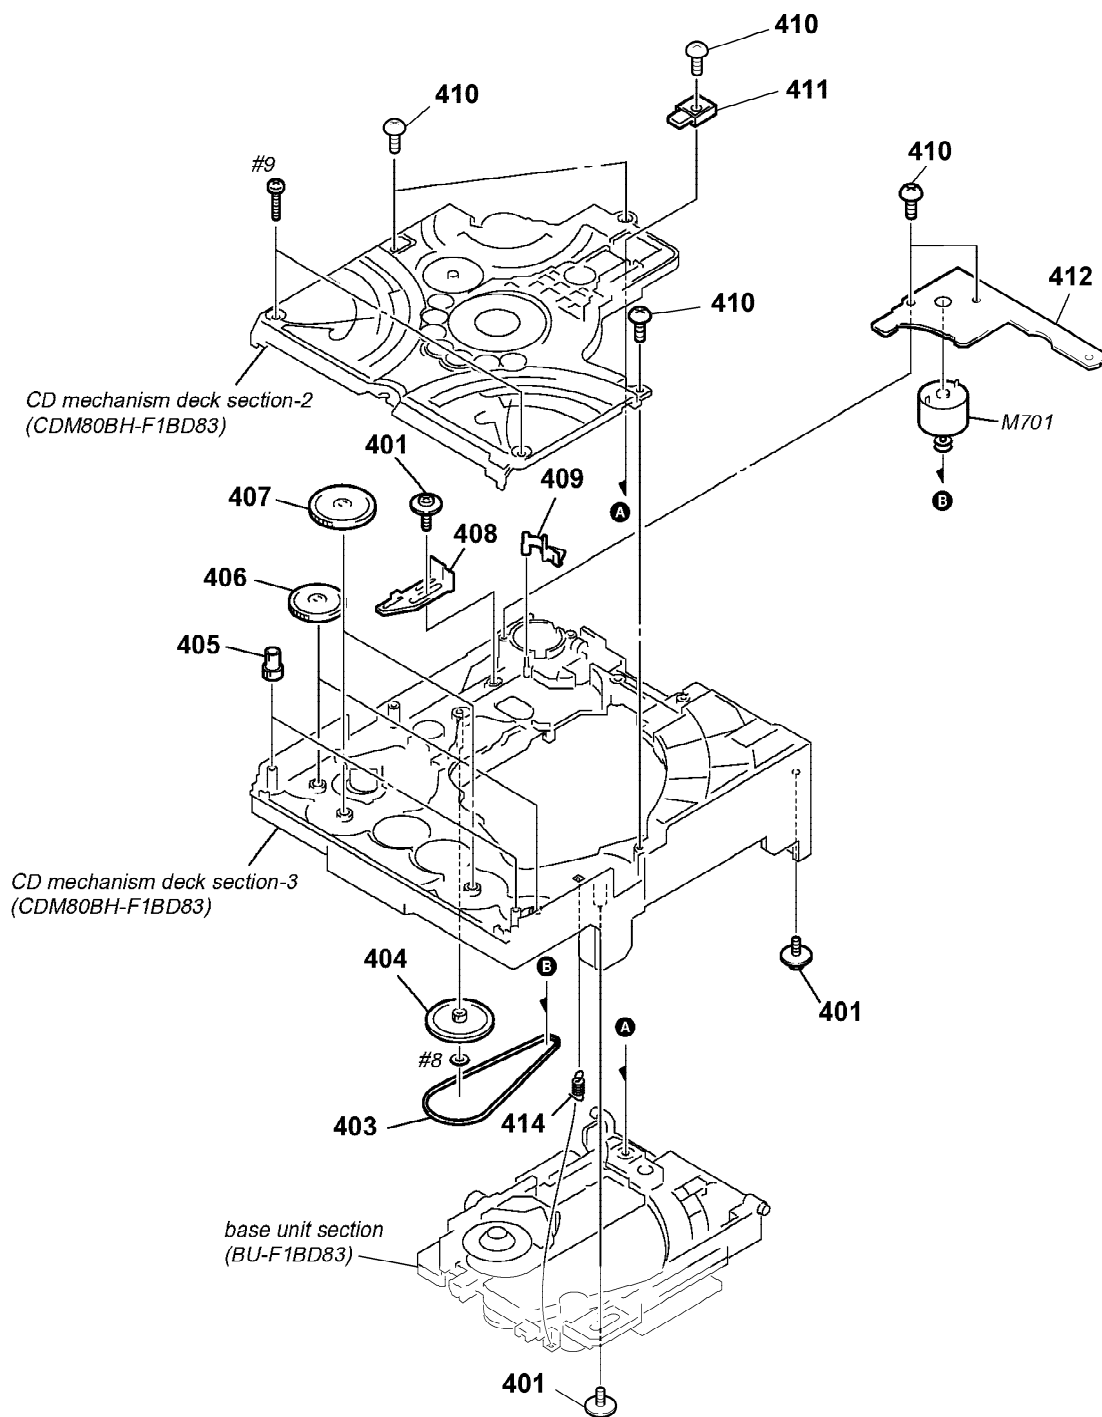


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
401	4-985-672-01	SCREW (+PTPWHM 2.6), FLOATING		410	3-087-053-01	+BVTP 2.6 (3CR)	
403	4-245-653-11	BELT (MOT)		411	4-245-639-01	LEVER (CL UP2)	
404	4-245-662-02	PULLEY (GEAR)		412	1-688-337-11	DRIVER BOARD	
405	4-245-646-01	GEAR (IDL-F)		414	2-515-538-01	SPRING (HOLDER DOWN B), COIL	
406	4-245-644-01	GEAR (IDL-D)		M701	A-1148-845-A	MOTOR ASSY (LOADING)	
407	4-245-645-01	GEAR (IDL-E)		#8	7-623-921-01	WASHER 1.7, NYLON	
408	4-246-203-01	LEVER (RELEASE)		#9	7-685-106-19	SCREW +P 2X10 TYPE2 NON-SLIT	
409	4-245-630-01	LEVER (SW)					

8-8. CD MECHANISM DECK SECTION-2 (CDM80BH-F1BD83)

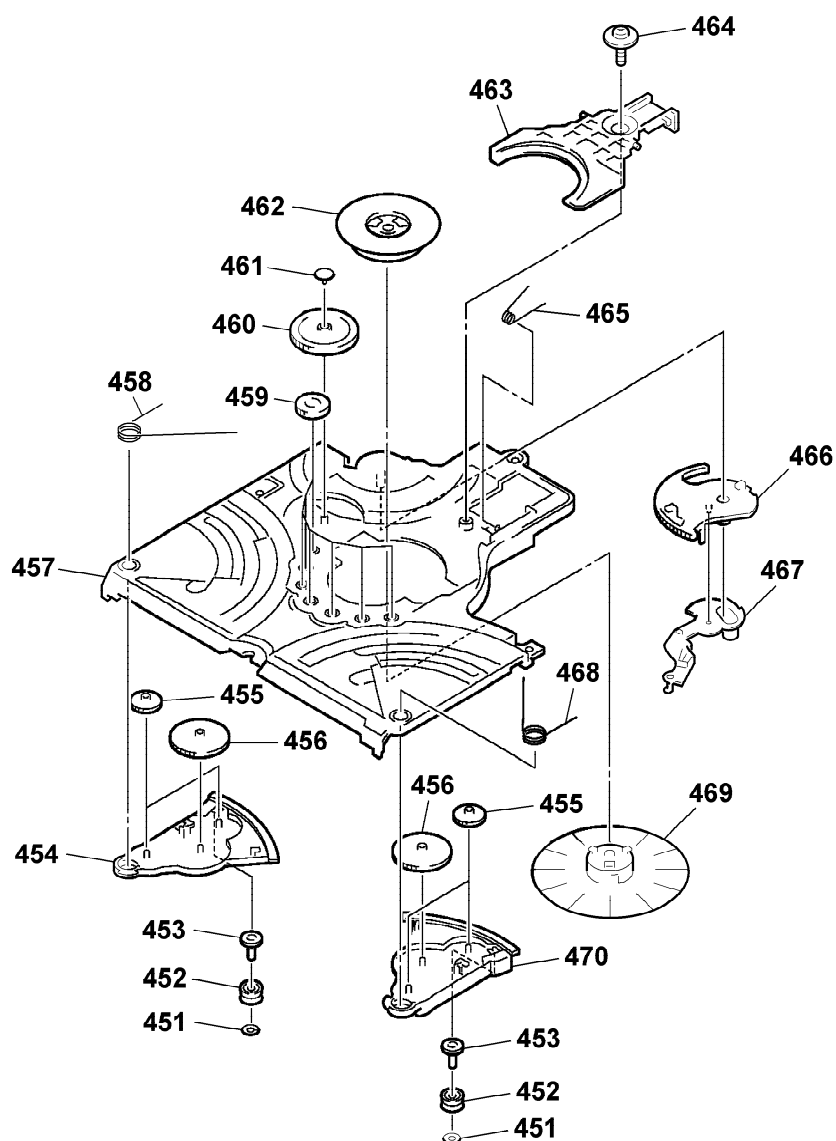


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
451	4-245-627-01	WASHER (6-2.7-0.4)		461	4-245-640-01	GEAR (CAP)	
452	4-245-637-11	ROLLER, RUBBER		462	1-452-925-41	MAGNET ASSY	
453	4-245-649-01	GEAR (IDL-I)		463	4-245-638-01	LEVER (CL UP1)	
454	4-245-657-11	LEVER (LOADING-R)		464	4-985-672-01	SCREW (+PTPWHM 2.6), FLOATING	
455	4-245-647-01	GEAR (IDL-G)		465	4-245-636-01	SPR-T CL DOWN	
456	4-245-648-01	GEAR (IDL-H)		466	4-245-658-11	LEVER (DISC STOP)	
457	4-245-655-11	CHASSIS (TOP)		467	4-245-659-11	LEVER (DISC SENSOR)	
458	4-245-631-11	SPT-T (LOADING-R)		468	4-245-632-11	SPR-T (LOADING-L)	
459	4-245-650-01	GEAR (IDL-J)		469	X-2021-532-1	CLAMPER 213 ASSY	
460	4-245-651-11	GEAR (IDL-L)		470	4-245-656-11	LEVER (LOADING-L)	

8-9. CD MECHANISM DECK SECTION-3
(CDM80BH-F1BD83)

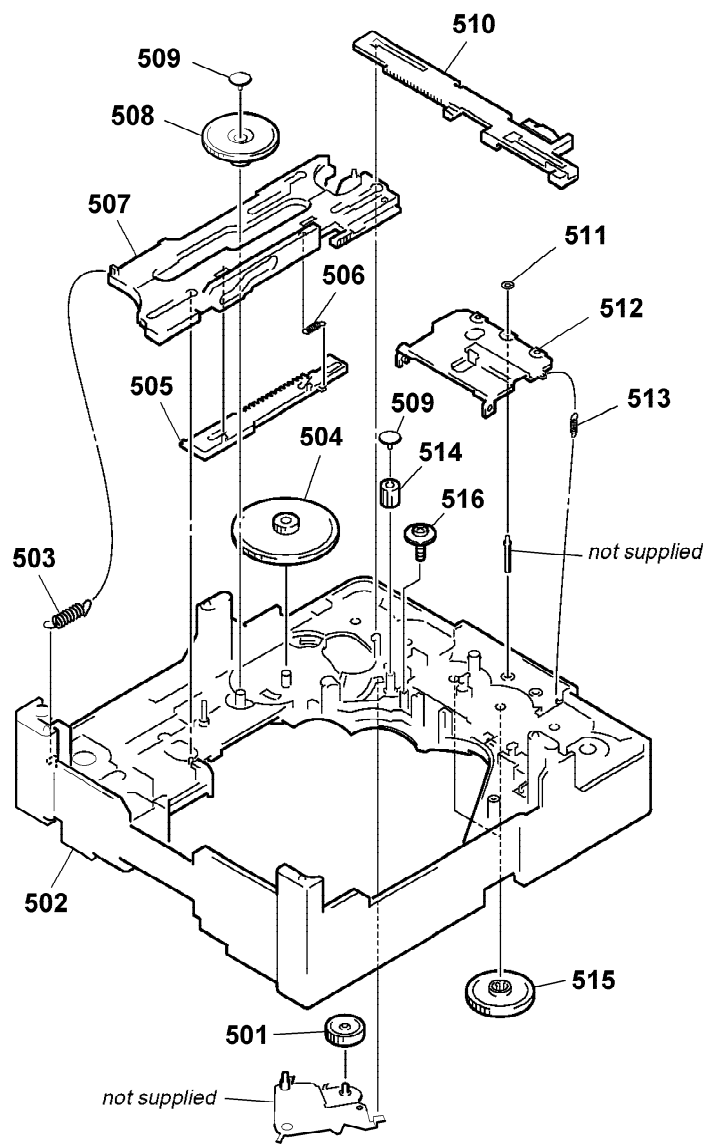

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
501	4-245-643-01	GEAR (IDL-C)		509	4-245-640-01	GEAR (CAP)	
502	X-4956-147-1	CHASSIS (BOTTOM) ASSY		510	4-245-628-01	LEVER (BU LOCK)	
503	2-515-536-01	SPRING (DIR), TENSION COIL		511	4-248-206-01	WASHER (3-1-0.4)	
504	4-245-642-01	GEAR (IDL-B)		512	4-245-624-01	LEVER, CLOSE	
505	4-245-814-01	LEVER (DIR FIRST)		513	4-245-635-01	SPR-E LEVER CLOSE	
506	2-515-534-01	SPRING (DIR BACK), TENSION COIL		514	4-245-629-01	GEAR (BU LOCK)	
507	4-245-660-11	LEVER (DIR)		515	4-245-644-01	GEAR (IDL-D)	
508	4-245-641-01	GEAR (IDL-A)		516	4-985-672-01	SCREW (+PTPWHIM 2.6), FLOATING	

8-10. BASE UNIT SECTION
(BU-F1BD83)

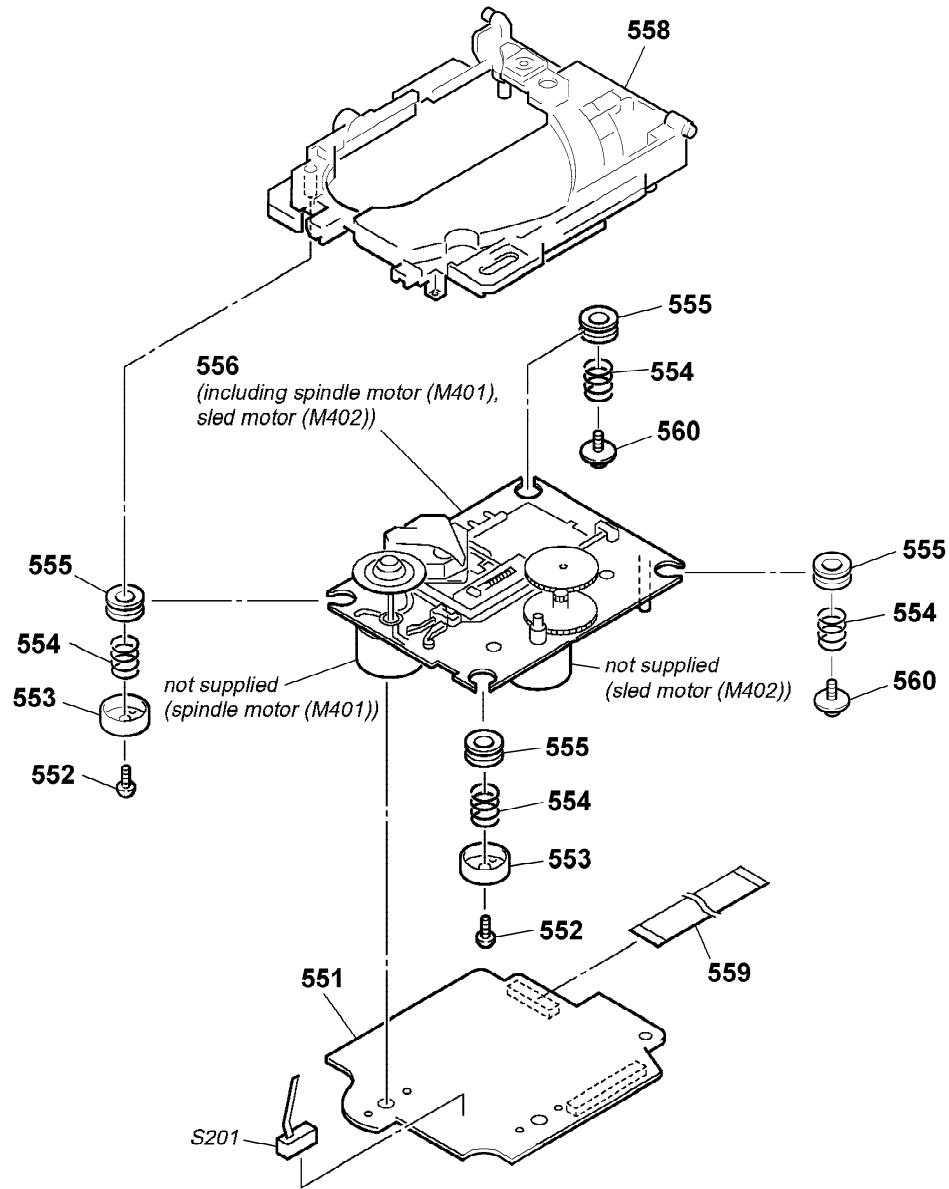

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
551	A-1096-375-A	BD BOARD, COMPLETE		△ 556	8-820-244-01	OPTICAL PICK-UP BLOCK (KSM-215DCP/C2NP)	
552	4-218-253-31	+BTTP M2.6		558	X-4956-146-1	HOLDER (BU215) ASSY	
553	4-231-151-01	STOPPER (BU)		559	1-832-404-21	CABLE, FLEXIBLE FLAT (16 CORE)	
554	4-227-045-31	SPRING (INSULATOR), COIL		560	4-985-672-01	SCREW (+PTPWH M2.6), FLOATING	
555	4-227-549-11	INSULATOR		S201	1-771-853-11	SWITCH, DETECTION (LIMIT)	

SECTION 9 ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable
- Abbreviation
KR : Korean model

- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
In each case, u: μ , for example:
uA... : μ A... uPA... : μ PA...
uPB... : μ PB... uPC... : μ PC...
uPD... : μ PD...
- CAPACITORS
uF: μ F
- COILS
uH: μ H

The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark				Ref. No.	Part No.	Description	Remark			
	A-1211-672-A	AMP BOARD, COMPLETE *****											
		< CAPACITOR/JUMPER RESISTOR >											
C701	1-126-961-11	ELECT	2.2uF	20%	50V		C748	1-126-964-11	ELECT	10uF	20%	50V	
C702	1-136-497-81	FILM	0.1uF	5%	50V		C749	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
C703	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C750	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
C704	1-115-416-11	CERAMIC CHIP	0.001uF	5%	25V		C751	1-126-961-11	ELECT	2.2uF	20%	50V	
C706	1-100-717-91	CERAMIC CHIP	1uF		16V		C752	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
C708	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C753	1-126-933-11	ELECT	100uF	20%	16V	
C709	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C754	1-115-416-11	CERAMIC CHIP	0.001uF	5%	25V	
C710	1-162-923-11	CERAMIC CHIP	47PF	5%	50V		C756	1-100-717-91	CERAMIC CHIP	1uF		16V	
C711	1-126-934-11	ELECT	220uF	20%	16V		C757	1-162-923-11	CERAMIC CHIP	47PF	5%	50V	
C712	1-100-717-91	CERAMIC CHIP	1uF		16V		C758	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
C713	1-100-756-91	CERAMIC CHIP	0.047uF		50V		C759	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
C714	1-125-898-11	CERAMIC CHIP	0.22uF	10%	50V		C761	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
C715	1-125-898-11	CERAMIC CHIP	0.22uF	10%	50V		C762	1-100-717-91	CERAMIC CHIP	1uF		16V	
C716	1-125-898-11	CERAMIC CHIP	0.22uF	10%	50V		C763	1-100-756-91	CERAMIC CHIP	0.047uF		50V	
C717	1-125-898-11	CERAMIC CHIP	0.22uF	10%	50V		C764	1-125-898-11	CERAMIC CHIP	0.22uF	10%	50V	
C718	1-100-756-91	CERAMIC CHIP	0.047uF		50V		C765	1-125-898-11	CERAMIC CHIP	0.22uF	10%	50V	
C719	1-100-924-21	ELECT	2200uF	20%	35V		C766	1-125-898-11	CERAMIC CHIP	0.22uF	10%	50V	
C720	1-137-198-81	FILM	1uF	5%	50V		C767	1-125-898-11	CERAMIC CHIP	0.22uF	10%	50V	
C722	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		C768	1-100-756-91	CERAMIC CHIP	0.047uF		50V	
C723	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		C769	1-100-924-21	ELECT	2200uF	20%	35V	
C724	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		C770	1-137-198-81	FILM	1uF	5%	50V	
C725	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V		C772	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	
C726	1-125-838-11	CERAMIC CHIP	2.2uF	10%	6.3V		C773	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	
C728	1-137-198-81	FILM	1uF	5%	50V		C774	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	
C729	1-115-416-11	CERAMIC CHIP	0.001uF	5%	25V		C775	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	
C730	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C777	1-137-198-81	FILM	1uF	5%	50V	
C731	1-104-664-11	ELECT	47uF	20%	25V		C778	1-125-838-11	CERAMIC CHIP	2.2uF	10%	6.3V	
C732	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C779	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
C733	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C780	1-115-416-11	CERAMIC CHIP	0.001uF	5%	25V	
C734	1-115-416-11	CERAMIC CHIP	0.001uF	5%	25V		C781	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
C735	1-126-964-11	ELECT	10uF	20%	50V		C782	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
C737	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V		C783	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V	
C738	1-162-917-11	CERAMIC CHIP	15PF	5%	50V		C784	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	
C739	1-162-916-11	CERAMIC CHIP	12PF	5%	50V		C785	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V	
C740	1-126-923-91	ELECT	220uF	20%	10V		C786	1-115-416-11	CERAMIC CHIP	0.001uF	5%	25V	
C741	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C787	1-115-416-11	CERAMIC CHIP	0.001uF	5%	25V	
C744	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C788	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
C745	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V		C791	1-136-497-81	FILM	0.1uF	5%	50V	
C746	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V		C792	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
C747	1-126-933-11	ELECT	100uF	20%	16V		C794	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	
							C796	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
							C797	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
							C798	1-126-933-11	ELECT	100uF	20%	16V	

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C799	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	L708	1-456-813-11	COIL, AIR-CORE	
C806	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	L709	1-456-813-11	COIL, AIR-CORE	
C813	1-165-908-11	CERAMIC CHIP 1uF 10%	10V	L710	1-457-235-11	CHOKER, COIL 10uH	
C827	1-165-908-11	CERAMIC CHIP 1uF 10%	10V	L711	1-457-235-11	CHOKER, COIL 10uH	
C828	1-165-908-11	CERAMIC CHIP 1uF 10%	10V	L758	1-456-813-11	COIL, AIR-CORE	
C829	1-165-908-11	CERAMIC CHIP 1uF 10%	10V	L759	1-456-813-11	COIL, AIR-CORE	
C830	1-165-908-11	CERAMIC CHIP 1uF 10%	10V	L760	1-457-235-11	CHOKER, COIL 10uH	
C831	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	L761	1-457-235-11	CHOKER, COIL 10uH	
C832	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V	< TRANSISTOR >			
C839	1-165-908-11	CERAMIC CHIP 1uF 10%	10V	Q701	8-729-600-91	TRANSISTOR 2SC3052F-T1-LF	
C840	1-115-416-11	CERAMIC CHIP 0.001uF 5%	25V	Q702	8-729-620-33	TRANSISTOR 2SA1235TP-1EF	
C841	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	Q703	8-729-620-33	TRANSISTOR 2SA1235TP-1EF	
C842	1-115-416-11	CERAMIC CHIP 0.001uF 5%	25V	Q752	8-729-620-33	TRANSISTOR 2SA1235TP-1EF	
C843	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	Q753	8-729-620-33	TRANSISTOR 2SA1235TP-1EF	
C844	1-115-339-11	CERAMIC CHIP 0.1uF 10%	50V	< RESISTOR >			
C845	1-115-339-11	CERAMIC CHIP 0.1uF 10%	50V	R701	1-216-864-11	SHORT CHIP 0	
C846	1-115-339-11	CERAMIC CHIP 0.1uF 10%	50V	R704	1-216-864-11	SHORT CHIP 0	
C847	1-115-339-11	CERAMIC CHIP 0.1uF 10%	50V	R706	1-216-809-11	METAL CHIP 100 5%	1/10W
C848	1-216-864-11	SHORT CHIP 0		R707	1-216-864-11	SHORT CHIP 0	
C849	1-216-864-11	SHORT CHIP 0		R708	1-216-864-11	SHORT CHIP 0	
< CONNECTOR >				R709	1-216-864-11	SHORT CHIP 0	
CN700	1-784-782-11	CONNECTOR, FFC 21P		R711	1-216-809-11	METAL CHIP 100 5%	1/10W
* CN704	1-564-508-11	PLUG, CONNECTOR 5P		R712	1-216-809-11	METAL CHIP 100 5%	1/10W
< DIODE >				R713	1-216-837-11	METAL CHIP 22K 5%	1/10W
D701	6-501-193-01	DIODE 1SS355WTE-17		R714	1-216-817-11	METAL CHIP 470 5%	1/10W
D702	6-501-193-01	DIODE 1SS355WTE-17		R716	1-216-821-11	METAL CHIP 1K 5%	1/10W
D703	6-501-193-01	DIODE 1SS355WTE-17		R717	1-216-821-11	METAL CHIP 1K 5%	1/10W
D704	6-501-193-01	DIODE 1SS355WTE-17		R718	1-216-833-11	METAL CHIP 10K 5%	1/10W
D705	6-500-260-01	DIODE P6SMB39AT3		R719	1-220-942-11	METAL CHIP 3.3 1%	1/4W
D706	6-500-260-01	DIODE P6SMB39AT3		R720	1-220-942-11	METAL CHIP 3.3 1%	1/4W
D713	6-501-159-01	DIODE UDZW-TE17-2.4B		R721	1-216-833-11	METAL CHIP 10K 5%	1/10W
D755	6-500-260-01	DIODE P6SMB39AT3		R723	1-216-821-11	METAL CHIP 1K 5%	1/10W
D756	6-500-260-01	DIODE P6SMB39AT3		R724	1-216-793-11	METAL CHIP 4.7 5%	1/10W
< EARTH TERMINAL >				R725	1-216-793-11	METAL CHIP 4.7 5%	1/10W
EP701	1-537-771-21	TERMINAL BOARD, GROUND		R726	1-216-849-11	METAL CHIP 220K 5%	1/10W
EP702	1-537-771-21	TERMINAL BOARD, GROUND		R727	1-216-845-11	METAL CHIP 100K 5%	1/10W
EP703	1-537-771-21	TERMINAL BOARD, GROUND		R728	1-216-849-11	METAL CHIP 220K 5%	1/10W
EP705	1-537-771-21	TERMINAL BOARD, GROUND		R729	1-216-821-11	METAL CHIP 1K 5%	1/10W
EP706	1-537-771-21	TERMINAL BOARD, GROUND		R730	1-216-809-11	METAL CHIP 100 5%	1/10W
< IC >				R731	1-216-813-11	METAL CHIP 220 5%	1/10W
IC701	6-701-834-01	IC PCM1802DBR		R733	1-216-813-11	METAL CHIP 220 5%	1/10W
IC703	8-759-096-87	IC TC7WU04FU (TE12R)		R734	1-216-864-11	SHORT CHIP 0	
IC704	6-707-956-01	IC NJM2871BF18-TE2		R736	1-216-857-11	METAL CHIP 1M 5%	1/10W
IC705	6-705-979-01	IC CXD9788AR		R737	1-216-821-11	METAL CHIP 1K 5%	1/10W
IC707	6-704-802-01	IC CXD9774M		R738	1-216-821-11	METAL CHIP 1K 5%	1/10W
IC708	6-704-802-01	IC CXD9774M		R739	1-216-833-11	METAL CHIP 10K 5%	1/10W
IC709	6-706-492-01	IC TC7SHU04FU (T5RS0JF)		R740	1-216-833-11	METAL CHIP 10K 5%	1/10W
< JUMPER RESISTOR/COIL >				R741	1-216-809-11	METAL CHIP 100 5%	1/10W
L701	1-216-295-00	SHORT CHIP 0		R742	1-216-833-11	METAL CHIP 10K 5%	1/10W
L702	1-469-967-21	INDUCTOR 10uH		R743	1-216-809-11	METAL CHIP 100 5%	1/10W
L703	1-469-967-21	INDUCTOR 10uH		R744	1-216-864-11	SHORT CHIP 0	
L704	1-469-967-21	INDUCTOR 10uH		R745	1-216-809-11	METAL CHIP 100 5%	1/10W
L705	1-412-939-11	INDUCTOR 1uH		R746	1-216-809-11	METAL CHIP 100 5%	1/10W
				R747	1-216-809-11	METAL CHIP 100 5%	1/10W
				R748	1-216-841-11	METAL CHIP 47K 5%	1/10W

HCD-CPZ2

AMP BD

Ref. No.	Part No.	Description	Remark
R749	1-216-864-11	SHORT CHIP	0
R750	1-216-841-11	METAL CHIP	47K 5% 1/10W
R751	1-216-864-11	SHORT CHIP	0
R752	1-216-837-11	METAL CHIP	22K 5% 1/10W
R754	1-216-817-11	METAL CHIP	470 5% 1/10W
R756	1-216-809-11	METAL CHIP	100 5% 1/10W
R757	1-216-864-11	SHORT CHIP	0
R758	1-216-864-11	SHORT CHIP	0
R759	1-216-864-11	SHORT CHIP	0
R761	1-216-809-11	METAL CHIP	100 5% 1/10W
R762	1-216-809-11	METAL CHIP	100 5% 1/10W
R764	1-216-864-11	SHORT CHIP	0
R765	1-216-864-11	SHORT CHIP	0
R768	1-216-833-11	METAL CHIP	10K 5% 1/10W
R769	1-220-942-11	METAL CHIP	3.3 1% 1/4W
R770	1-220-942-11	METAL CHIP	3.3 1% 1/4W
R771	1-216-833-11	METAL CHIP	10K 5% 1/10W
R772	1-216-833-11	METAL CHIP	10K 5% 1/10W
R773	1-216-833-11	METAL CHIP	10K 5% 1/10W
R774	1-216-793-11	METAL CHIP	4.7 5% 1/10W
R775	1-216-793-11	METAL CHIP	4.7 5% 1/10W
R776	1-216-849-11	METAL CHIP	220K 5% 1/10W
R777	1-216-845-11	METAL CHIP	100K 5% 1/10W
R778	1-216-849-11	METAL CHIP	220K 5% 1/10W
R779	1-216-864-11	SHORT CHIP	0
R781	1-216-809-11	METAL CHIP	100 5% 1/10W
R782	1-216-857-11	METAL CHIP	1M 5% 1/10W
R783	1-216-809-11	METAL CHIP	100 5% 1/10W
R784	1-216-809-11	METAL CHIP	100 5% 1/10W
R785	1-216-809-11	METAL CHIP	100 5% 1/10W
R786	1-216-809-11	METAL CHIP	100 5% 1/10W
R787	1-216-809-11	METAL CHIP	100 5% 1/10W
R788	1-216-809-11	METAL CHIP	100 5% 1/10W
R789	1-216-809-11	METAL CHIP	100 5% 1/10W
R790	1-216-809-11	METAL CHIP	100 5% 1/10W
R792	1-216-864-11	SHORT CHIP	0
R793	1-216-841-11	METAL CHIP	47K 5% 1/10W
R800	1-216-821-11	METAL CHIP	1K 5% 1/10W
R801	1-216-821-11	METAL CHIP	1K 5% 1/10W

< VIBRATOR >

X701	1-795-843-11	VIBRATOR, CRYSTAL (12.288MHz)
X702	1-795-660-21	QUARTZ CRYSTAL UNIT (49.152MHz)

A-1096-375-A BD BOARD, COMPLETE

< CAPACITOR >

C101	1-162-919-11	CERAMIC CHIP	22PF 5% 50V
C102	1-162-919-11	CERAMIC CHIP	22PF 5% 50V
C103	1-162-919-11	CERAMIC CHIP	22PF 5% 50V
C104	1-164-230-11	CERAMIC CHIP	220PF 5% 50V
C105	1-162-919-11	CERAMIC CHIP	22PF 5% 50V
C107	1-164-230-11	CERAMIC CHIP	220PF 5% 50V
C108	1-164-230-11	CERAMIC CHIP	220PF 5% 50V
C109	1-164-230-11	CERAMIC CHIP	220PF 5% 50V
C110	1-164-230-11	CERAMIC CHIP	220PF 5% 50V
C111	1-164-230-11	CERAMIC CHIP	220PF 5% 50V

Ref. No.	Part No.	Description	Remark
C112	1-162-919-11	CERAMIC CHIP	22PF 5% 50V
C113	1-162-919-11	CERAMIC CHIP	22PF 5% 50V
C131	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C132	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C133	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C201	1-128-995-21	ELECT CHIP	100uF 20% 10V
C202	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C203	1-128-995-21	ELECT CHIP	100uF 20% 10V
C204	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C205	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C206	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C207	1-128-995-21	ELECT CHIP	100uF 20% 10V
C208	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C210	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C213	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C214	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C215	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C217	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C218	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C219	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C220	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C221	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C222	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C223	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C224	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C226	1-165-908-11	CERAMIC CHIP	1uF 10% 10V
C227	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C228	1-128-590-11	ELECT CHIP	100uF 20% 6.3V
C230	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C232	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C251	1-164-315-11	CERAMIC CHIP	470PF 5% 50V
C252	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V
C253	1-164-315-11	CERAMIC CHIP	470PF 5% 50V
C254	1-162-968-11	CERAMIC CHIP	0.0047uF 10% 50V
C256	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C257	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C258	1-164-230-11	CERAMIC CHIP	220PF 5% 50V
C259	1-162-927-11	CERAMIC CHIP	100PF 5% 50V
C260	1-117-863-11	CERAMIC CHIP	0.47uF 10% 6.3V
C261	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C264	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C265	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C267	1-162-919-11	CERAMIC CHIP	22PF 5% 50V
C268	1-162-919-11	CERAMIC CHIP	22PF 5% 50V
C269	1-126-208-21	ELECT CHIP	47uF 20% 4V
C270	1-126-208-21	ELECT CHIP	47uF 20% 4V
C271	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V
C272	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C273	1-164-315-11	CERAMIC CHIP	470PF 5% 50V
C275	1-162-910-11	CERAMIC CHIP	5PF 0.25PF 50V
C291	1-164-315-11	CERAMIC CHIP	470PF 5% 50V
C292	1-164-315-11	CERAMIC CHIP	470PF 5% 50V
C301	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C302	1-137-710-11	CERAMIC CHIP	10uF 20% 6.3V
C303	1-137-710-11	CERAMIC CHIP	10uF 20% 6.3V
C321	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V
C322	1-115-156-11	CERAMIC CHIP	1uF 10V

71

HCD-CPZZ2

Ver. 1.1

HP/MD LCD MAIN

Ref. No.	Part No.	Description	Remark		
C991	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C992	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
< EARTH TERMINAL >					
EP981	1-537-771-21	TERMINAL BOARD, GROUND			
< JUMPER RESISTOR >					
FB981	1-216-864-11	SHORT CHIP	0		
FB982	1-216-864-11	SHORT CHIP	0		
FB983	1-216-864-11	SHORT CHIP	0		
< JACK >					
J981	1-815-603-11	JACK (ANALOG IN)			
J982	1-815-603-11	JACK (PHONES)			
< RESISTOR >					
R982	1-216-821-11	METAL CHIP	1K	5%	1/10W
R983	1-216-845-11	METAL CHIP	100K	5%	1/10W
R984	1-216-821-11	METAL CHIP	1K	5%	1/10W
R985	1-216-845-11	METAL CHIP	100K	5%	1/10W

LCD BOARD					

	2-514-678-01	HOLDER (LCD)			
< CAPACITOR >					
C951	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C952	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C953	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C954	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C955	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C956	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C965	1-164-156-11	CERAMIC CHIP	0.1uF		25V
< CONNECTOR >					
CN951	1-784-731-11	CONNECTOR, FFC 9P			
< LED >					
D951	6-501-138-01	LED SELU2WA10C-LF62 (LCD BACK LIGHT)			
D952	6-501-138-01	LED SELU2WA10C-LF62 (LCD BACK LIGHT)			
< IC >					
IC951	(Not supplied)	IC NJU6433AF			
< JUMPER RESISTOR >					
JR952	1-216-864-11	SHORT CHIP	0		
JR953	1-216-864-11	SHORT CHIP	0		
JR954	1-216-864-11	SHORT CHIP	0		
JR955	1-216-864-11	SHORT CHIP	0		
JR956	1-216-864-11	SHORT CHIP	0		
JR958	1-216-864-11	SHORT CHIP	0		
JR959	1-216-864-11	SHORT CHIP	0		
JR960	1-216-864-11	SHORT CHIP	0		
JR961	1-216-864-11	SHORT CHIP	0		

Ref. No.	Part No.	Description	Remark		
< LIQUID CRYSTAL DISPLAY >					
LCD951	1-963-403-11	DISPLAY PANEL, LIQUID CRYSTAL			
< RESISTOR >					
R951	1-216-845-11	METAL CHIP	100K	5%	1/10W
R952	1-216-821-11	METAL CHIP	1K	5%	1/10W
R953	1-216-833-11	METAL CHIP	10K	5%	1/10W
R954	1-216-809-11	METAL CHIP	100	5%	1/10W
R955	1-216-809-11	METAL CHIP	100	5%	1/10W
R956	1-216-809-11	METAL CHIP	100	5%	1/10W
R957	1-216-809-11	METAL CHIP	100	5%	1/10W
R958	1-216-809-11	METAL CHIP	100	5%	1/10W
R959	1-216-813-11	METAL CHIP	220	5%	1/10W
R960	1-216-817-11	METAL CHIP	470	5%	1/10W
R961	1-216-813-11	METAL CHIP	220	5%	1/10W
R962	1-216-817-11	METAL CHIP	470	5%	1/10W
R963	1-216-841-11	METAL CHIP	47K	5%	1/10W

A-1211-661-A		MAIN BOARD, COMPLETE (AEP)			
A-1251-303-A		MAIN BOARD, COMPLETE (KR)			

7-685-646-79		SCREW +BVTP 3X8 TYPE2 N-S			
< CAPACITOR >					
C200	1-126-964-11	ELECT	10uF	20%	50V
C201	1-126-937-11	ELECT	4700uF	20%	16V
C202	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C203	1-126-925-91	ELECT	470uF	20%	10V
C204	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C205	1-126-925-91	ELECT	470uF	20%	10V
C206	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C207	1-126-925-91	ELECT	470uF	20%	10V
C208	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C209	1-126-923-91	ELECT	220uF	20%	10V
C210	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C211	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C212	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C214	1-126-933-11	ELECT	100uF	20%	16V
C215	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C301	1-126-916-11	ELECT	1000uF	20%	6.3V
C309	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V
C310	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C311	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C312	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C316	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C359	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V
C362	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C401	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C402	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C403	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C404	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C440	1-126-964-11	ELECT	10uF	20%	50V
C490	1-126-964-11	ELECT	10uF	20%	50V
C501	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C502	1-126-923-91	ELECT	220uF	20%	10V
C503	1-126-923-91	ELECT	220uF	20%	10V

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C504	1-126-964-11	ELECT	10uF 20% 50V	CN202	1-815-443-11	PIN, CONNECTOR (PWB) 2P	
C505	1-126-964-11	ELECT	10uF 20% 50V	CN300	1-815-444-11	PIN, CONNECTOR (PWB) 3P	
C506	1-136-498-11	FILM	0.12uF 5% 50V	CN301	1-784-780-11	CONNECTOR, FFC 19P	
				CN302	1-784-782-11	CONNECTOR, FFC 21P	
C507	1-136-167-00	FILM	0.15uF 5% 50V	* CN303	1-815-448-11	PIN, CONNECTOR (PWB) 7P	
C508	1-130-475-00	MYLAR	0.0022uF 5% 50V	CN304	1-784-770-11	CONNECTOR, FFC 9P	
C509	1-126-960-11	ELECT	1uF 20% 50V	CN305	1-784-780-11	CONNECTOR, FFC 19P	
C510	1-126-960-11	ELECT	1uF 20% 50V	* CN306	1-815-448-11	PIN, CONNECTOR (PWB) 7P	
C511	1-126-964-11	ELECT	10uF 20% 50V	CN307	1-815-444-11	PIN, CONNECTOR (PWB) 3P	
				CN308	1-779-291-11	CONNECTOR, FFC (LIF (NON-ZIF)) 23P	
C512	1-126-960-11	ELECT	1uF 20% 50V	CN309	1-784-772-11	CONNECTOR, FFC 11P (KR)	
C513	1-126-960-11	ELECT	1uF 20% 50V	CN309	1-784-776-11	CONNECTOR, FFC 15P (AEP)	
C514	1-126-960-11	ELECT	1uF 20% 50V			< DIODE >	
C515	1-126-964-11	ELECT	10uF 20% 50V	D202	8-719-000-07	DIODE MC2836	
C517	1-126-923-91	ELECT	220uF 20% 10V	D203	6-500-522-21	DIODE 10EDB40-TB3	
				D204	6-500-522-21	DIODE 10EDB40-TB3	
C518	1-104-665-11	ELECT	100uF 20% 25V	D205	6-500-522-21	DIODE 10EDB40-TB3	
C519	1-164-360-11	CERAMIC CHIP	0.1uF 16V	D301	8-719-000-07	DIODE MC2836	
C524	1-126-925-91	ELECT	470uF 20% 10V	D302	8-719-000-07	DIODE MC2836	
C527	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	D303	8-719-000-07	DIODE MC2836	
C530	1-126-964-11	ELECT	10uF 20% 50V	D305	8-719-988-61	DIODE 1SS355TE-17	
				D306	8-719-988-61	DIODE 1SS355TE-17	
C531	1-126-964-11	ELECT	10uF 20% 50V	D307	8-719-988-61	DIODE 1SS355TE-17	
C536	1-126-923-91	ELECT	220uF 20% 10V	D308	8-719-988-61	DIODE 1SS355TE-17 (AEP)	
C537	1-126-925-91	ELECT	470uF 20% 10V	D501	6-500-522-31	DIODE 10EDB40-TB5	
C538	1-164-360-11	CERAMIC CHIP	0.1uF 16V	D502	6-500-522-31	DIODE 10EDB40-TB5	
C539	1-164-360-11	CERAMIC CHIP	0.1uF 16V			< EARTH TERMINAL >	
				* EP301	1-537-738-21	TERMINAL, EARTH	
C540	1-126-925-91	ELECT	470uF 20% 10V	* EP302	1-537-738-21	TERMINAL, EARTH	
C541	1-162-927-11	CERAMIC CHIP	100PF 5% 50V			< FERRITE BEAD >	
C542	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	FB540	1-412-473-51	INDUCTOR (SMALL TYPE)	
C543	1-162-927-11	CERAMIC CHIP	100PF 5% 50V			< IC >	
C544	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	IC200	8-759-518-68	IC PQ12RF21J00H	
				IC201	8-759-071-48	IC TA7807S	
C545	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	IC202	6-701-760-01	IC uPC3504AHF	
C546	1-164-360-11	CERAMIC CHIP	0.1uF 16V	IC203	8-759-231-56	IC TA7809S	
C550	1-126-923-91	ELECT	220uF 20% 10V	IC204	8-759-231-53	IC TA7805S	
C552	1-104-665-11	ELECT	100uF 20% 25V	IC301	6-805-558-01	IC M30624MGP-A41FPU0	
C554	1-126-964-11	ELECT	10uF 20% 50V	IC302	6-701-680-01	IC PST3629NR	
				IC501	6-707-974-01	IC BD3872FS	
C555	1-126-964-11	ELECT	10uF 20% 50V	IC502	8-759-656-83	IC NJM4580MD- (TE2)	
C556	1-136-498-11	FILM	0.12uF 5% 50V			< TRANSISTOR >	
C557	1-136-167-00	FILM	0.15uF 5% 50V	Q301	8-729-600-91	TRANSISTOR 2SC3052F-T1-LF	
C558	1-130-475-00	MYLAR	0.0022uF 5% 50V	Q401	8-729-038-23	TRANSISTOR RT1N141C-TP-1	
C559	1-126-960-11	ELECT	1uF 20% 50V	Q402	8-729-038-12	TRANSISTOR RT1P141C-TP-1	
				Q403	8-729-038-23	TRANSISTOR RT1N141C-TP-1	
C560	1-126-960-11	ELECT	1uF 20% 50V	Q404	8-729-038-12	TRANSISTOR RT1P141C-TP-1	
C561	1-126-964-11	ELECT	10uF 20% 50V				
C562	1-126-960-11	ELECT	1uF 20% 50V	Q407	8-729-038-23	TRANSISTOR RT1N141C-TP-1	
C563	1-126-960-11	ELECT	1uF 20% 50V	Q408	8-729-034-00	TRANSISTOR 2SA1282ATP-EF	
C564	1-126-960-11	ELECT	1uF 20% 50V	Q409	8-729-038-23	TRANSISTOR RT1N141C-TP-1	
				Q410	8-729-038-12	TRANSISTOR RT1P141C-TP-1	
C565	1-126-964-11	ELECT	10uF 20% 50V	Q411	8-729-038-23	TRANSISTOR RT1N141C-TP-1	
C567	1-126-923-91	ELECT	220uF 20% 10V				
C581	1-162-927-11	CERAMIC CHIP	100PF 5% 50V				
C582	1-162-927-11	CERAMIC CHIP	100PF 5% 50V				
C583	1-162-927-11	CERAMIC CHIP	100PF 5% 50V				
C584	1-162-927-11	CERAMIC CHIP	100PF 5% 50V				
C585	1-162-927-11	CERAMIC CHIP	100PF 5% 50V				
C586	1-162-927-11	CERAMIC CHIP	100PF 5% 50V				
C587	1-162-927-11	CERAMIC CHIP	100PF 5% 50V				
C588	1-162-927-11	CERAMIC CHIP	100PF 5% 50V				
C590	1-162-927-11	CERAMIC CHIP	100PF 5% 50V				
		< CONNECTOR >					
CN201	1-564-505-11	PLUG, CONNECTOR 2P					

HCD-CPZ2

Ver. 1.1

MAIN

Ref. No.	Part No.	Description				Remark	Ref. No.	Part No.	Description				Remark
Q412	8-729-620-33	TRANSISTOR	2SA1235TP-1EF				R361	1-216-809-11	METAL CHIP	100	5%	1/10W	
Q413	6-550-889-01	TRANSISTOR	2SC5938-T112-1B				R365	1-216-809-11	METAL CHIP	100	5%	1/10W	
Q414	6-550-889-01	TRANSISTOR	2SC5938-T112-1B										
Q450	8-729-600-91	TRANSISTOR	2SC3052F-T1-LF				R366	1-216-809-11	METAL CHIP	100	5%	1/10W	
Q463	6-550-889-01	TRANSISTOR	2SC5938-T112-1B				R367	1-216-809-11	METAL CHIP	100	5%	1/10W	
							R368	1-216-809-11	METAL CHIP	100	5%	1/10W	
Q464	6-550-889-01	TRANSISTOR	2SC5938-T112-1B				R369	1-216-809-11	METAL CHIP	100	5%	1/10W	
							R370	1-216-809-11	METAL CHIP	100	5%	1/10W	
		< RESISTOR >											
							R371	1-216-809-11	METAL CHIP	100	5%	1/10W	
R301	1-216-833-11	METAL CHIP	10K	5%	1/10W		R372	1-216-809-11	METAL CHIP	100	5%	1/10W	
R302	1-216-809-11	METAL CHIP	100	5%	1/10W		R376	1-216-809-11	METAL CHIP	100	5%	1/10W	
R303	1-216-809-11	METAL CHIP	100	5%	1/10W		R377	1-216-809-11	METAL CHIP	100	5%	1/10W	
R304	1-216-809-11	METAL CHIP	100	5%	1/10W		R378	1-216-809-11	METAL CHIP	100	5%	1/10W	
R305	1-216-809-11	METAL CHIP	100	5%	1/10W								
							R379	1-216-809-11	METAL CHIP	100	5%	1/10W	
R306	1-216-809-11	METAL CHIP	100	5%	1/10W		R380	1-216-809-11	METAL CHIP	100	5%	1/10W	
R307	1-216-809-11	METAL CHIP	100	5%	1/10W		R382	1-216-809-11	METAL CHIP	100	5%	1/10W	
R309	1-216-833-11	METAL CHIP	10K	5%	1/10W		R383	1-216-809-11	METAL CHIP	100	5%	1/10W	
R311	1-216-849-11	METAL CHIP	220K	5%	1/10W		R384	1-216-809-11	METAL CHIP	100	5%	1/10W	
R313	1-216-864-11	SHORT CHIP	0										
							R385	1-216-809-11	METAL CHIP	100	5%	1/10W	
R318	1-216-809-11	METAL CHIP	100	5%	1/10W		R386	1-216-809-11	METAL CHIP	100	5%	1/10W	
				(AEP)			R387	1-216-809-11	METAL CHIP	100	5%	1/10W	
R319	1-216-809-11	METAL CHIP	100	5%	1/10W		R388	1-216-809-11	METAL CHIP	100	5%	1/10W	
R320	1-216-841-11	METAL CHIP	47K	5%	1/10W		R389	1-216-809-11	METAL CHIP	100	5%	1/10W	
R321	1-216-809-11	METAL CHIP	100	5%	1/10W								
R322	1-216-809-11	METAL CHIP	100	5%	1/10W		R390	1-216-809-11	METAL CHIP	100	5%	1/10W	
							R391	1-216-809-11	METAL CHIP	100	5%	1/10W	
R323	1-216-809-11	METAL CHIP	100	5%	1/10W		R392	1-216-809-11	METAL CHIP	100	5%	1/10W	
R324	1-216-809-11	METAL CHIP	100	5%	1/10W		R393	1-216-864-11	SHORT CHIP	0 (KR)			
R325	1-216-809-11	METAL CHIP	100	5%	1/10W		R394	1-216-809-11	METAL CHIP	100	5%	1/10W	
R326	1-216-809-11	METAL CHIP	100	5%	1/10W								
				(AEP)			R395	1-216-809-11	METAL CHIP	100	5%	1/10W	
R327	1-216-809-11	METAL CHIP	100	5%	1/10W		R397	1-216-809-11	METAL CHIP	100	5%	1/10W	
							R400	1-216-809-11	METAL CHIP	100	5%	1/10W	
R328	1-216-809-11	METAL CHIP	100	5%	1/10W		R401	1-216-841-11	METAL CHIP	47K	5%	1/10W	
R329	1-216-809-11	METAL CHIP	100	5%	1/10W		R402	1-216-841-11	METAL CHIP	47K	5%	1/10W	
R330	1-216-809-11	METAL CHIP	100	5%	1/10W								
R331	1-216-809-11	METAL CHIP	100	5%	1/10W		R403	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R332	1-216-809-11	METAL CHIP	100	5%	1/10W		R404	1-216-845-11	METAL CHIP	100K	5%	1/10W	
							R405	1-216-837-11	METAL CHIP	22K	5%	1/10W	
R333	1-216-809-11	METAL CHIP	100	5%	1/10W		R406	1-216-821-11	METAL CHIP	1K	5%	1/10W	
R334	1-216-809-11	METAL CHIP	100	5%	1/10W		R408	1-216-837-11	METAL CHIP	22K	5%	1/10W	
R335	1-216-809-11	METAL CHIP	100	5%	1/10W								
R336	1-216-809-11	METAL CHIP	100	5%	1/10W		R409	1-216-813-11	METAL CHIP	220	5%	1/10W	
R337	1-216-809-11	METAL CHIP	100	5%	1/10W		R410	1-216-833-11	METAL CHIP	10K	5%	1/10W	
							R411	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	
R338	1-216-809-11	METAL CHIP	100	5%	1/10W		R412	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R339	1-216-809-11	METAL CHIP	100	5%	1/10W		R417	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R340	1-216-809-11	METAL CHIP	100	5%	1/10W								
R341	1-216-809-11	METAL CHIP	100	5%	1/10W		R418	1-216-864-11	SHORT CHIP	0 (KR)			
R342	1-216-809-11	METAL CHIP	100	5%	1/10W		R420	1-216-833-11	METAL CHIP	10K	5%	1/10W	
							R425	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R343	1-216-809-11	METAL CHIP	100	5%	1/10W		R426	1-216-864-11	SHORT CHIP	0 (KR)			
R344	1-216-809-11	METAL CHIP	100	5%	1/10W		R429	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R345	1-216-809-11	METAL CHIP	100	5%	1/10W								
R346	1-216-809-11	METAL CHIP	100	5%	1/10W		R430	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R347	1-216-809-11	METAL CHIP	100	5%	1/10W		R440	1-216-821-11	METAL CHIP	1K	5%	1/10W	
							R441	1-216-845-11	METAL CHIP	100K	5%	1/10W	
R348	1-216-809-11	METAL CHIP	100	5%	1/10W		R453	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R349	1-216-809-11	METAL CHIP	100	5%	1/10W		R454	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R354	1-216-809-11	METAL CHIP	100	5%	1/10W								
R355	1-216-809-11	METAL CHIP	100	5%	1/10W		R455	1-216-845-11	METAL CHIP	100K	5%	1/10W	
R357	1-216-809-11	METAL CHIP	100	5%	1/10W		R456	1-216-821-11	METAL CHIP	1K	5%	1/10W	
							R457	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R358	1-216-809-11	METAL CHIP	100	5%	1/10W		R468	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R359	1-216-809-11	METAL CHIP	100	5%	1/10W		R469	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R360	1-216-809-11	METAL CHIP	100	5%	1/10W								

MAIN

OPT

PANEL

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R470	1-216-833-11	METAL CHIP	10K	5%	1/10W			< IC >			
R471	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R473	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R474	1-216-857-11	METAL CHIP	1M	5%	1/10W						
R475	1-216-833-11	METAL CHIP	10K	5%	1/10W			< RESISTOR >			
R476	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R477	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R478	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R490	1-216-821-11	METAL CHIP	1K	5%	1/10W						
R491	1-216-845-11	METAL CHIP	100K	5%	1/10W						
R493	1-216-829-11	METAL CHIP	4.7K	5%	1/10W			< CAPACITOR >			
					(AEP)						
R494	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R495	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R497	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R501	1-216-821-11	METAL CHIP	1K	5%	1/10W						
R502	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R503	1-216-821-11	METAL CHIP	1K	5%	1/10W						
R504	1-216-829-11	METAL CHIP	4.7K	5%	1/10W						
R505	1-216-837-11	METAL CHIP	22K	5%	1/10W						
R506	1-216-849-11	METAL CHIP	220K	5%	1/10W						
R507	1-216-805-11	METAL CHIP	47	5%	1/10W			< CONNECTOR >			
R509	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R510	1-216-845-11	METAL CHIP	100K	5%	1/10W						
R511	1-216-821-11	METAL CHIP	1K	5%	1/10W						
R512	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R516	1-216-829-11	METAL CHIP	4.7K	5%	1/10W						
R522	1-216-864-11	SHORT CHIP	0								
R523	1-216-864-11	SHORT CHIP	0								
R547	1-216-813-11	METAL CHIP	220	5%	1/10W						
R550	1-216-829-11	METAL CHIP	4.7K	5%	1/10W						
R551	1-216-821-11	METAL CHIP	1K	5%	1/10W						
R552	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R553	1-216-821-11	METAL CHIP	1K	5%	1/10W						
R554	1-216-829-11	METAL CHIP	4.7K	5%	1/10W						
R555	1-216-837-11	METAL CHIP	22K	5%	1/10W						
R556	1-216-849-11	METAL CHIP	220K	5%	1/10W						
R557	1-216-805-11	METAL CHIP	47	5%	1/10W						
R558	1-216-825-11	METAL CHIP	2.2K	5%	1/10W						
R559	1-216-825-11	METAL CHIP	2.2K	5%	1/10W						
R560	1-216-845-11	METAL CHIP	100K	5%	1/10W						
R561	1-216-821-11	METAL CHIP	1K	5%	1/10W						
R562	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R566	1-216-829-11	METAL CHIP	4.7K	5%	1/10W						
		< VIBRATOR >									
X301	1-760-252-12	VIBRATOR, CRYSTAL (32.768kHz)									
X302	1-795-482-11	VIBRATOR, CERAMIC (16MHz)									

		OPT BOARD									

		< CAPACITOR >									
C981	1-104-665-11	ELECT	100uF	20%	25V						
C982	1-164-360-11	CERAMIC CHIP	0.1uF		16V						
IC981	6-600-012-01	IC TOTX141L (CD DIGITAL OUT)									
		< RESISTOR >									
R981	1-216-864-11	SHORT CHIP	0								

	A-1211-665-A	PANEL BOARD, COMPLETE									

		< CAPACITOR >									
C904	1-104-664-11	ELECT	47uF	20%	25V						
C906	1-164-360-11	CERAMIC CHIP	0.1uF		16V						
C907	1-164-360-11	CERAMIC CHIP	0.1uF		16V						
C908	1-164-360-11	CERAMIC CHIP	0.1uF		16V						
C909	1-164-360-11	CERAMIC CHIP	0.1uF		16V						
C910	1-164-360-11	CERAMIC CHIP	0.1uF		16V						
C911	1-164-360-11	CERAMIC CHIP	0.1uF		16V						
C912	1-164-156-11	CERAMIC CHIP	0.1uF		25V						
C913	1-164-156-11	CERAMIC CHIP	0.1uF		25V						
		< CONNECTOR >									
CN901	1-784-741-11	CONNECTOR, FFC 19P									
* CN902	1-564-720-11	PIN, CONNECTOR (SMALL TYPE) 4P									
		< LED >									
D901	8-719-032-83	LED SEL5220S-TP15 (STANDBY)									
D902	6-501-539-01	LED SELK5E20C-DTP15 (TUNER, BAND)									
D903	6-501-539-01	LED SELK5E20C-DTP15 (TAPE ◀ ▶)									
		< IC >									
IC901	6-600-349-31	IC NJL24H400A									
		< TRANSISTOR >									
Q901	8-729-600-91	TRANSISTOR	2SC3052F-T1-LF								
Q902	8-729-600-91	TRANSISTOR	2SC3052F-T1-LF								
Q903	8-729-600-91	TRANSISTOR	2SC3052F-T1-LF								
Q905	8-729-038-23	TRANSISTOR	RT1N141C-TP-1								
Q906	8-729-620-33	TRANSISTOR	2SA1235TP-1EF								
		< RESISTOR >									
R901	1-216-821-11	METAL CHIP	1K	5%	1/10W						
R902	1-216-825-11	METAL CHIP	2.2K	5%	1/10W						
R903	1-216-825-11	METAL CHIP	2.2K	5%	1/10W						
R904	1-216-829-11	METAL CHIP	4.7K	5%	1/10W						
R905	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R906	1-216-821-11	METAL CHIP	1K	5%	1/10W						
R907	1-216-825-11	METAL CHIP	2.2K	5%	1/10W						
R908	1-216-825-11	METAL CHIP	2.2K	5%	1/10W						
R911	1-216-825-11	METAL CHIP	2.2K	5%	1/10W						
R912	1-216-821-11	METAL CHIP	1K	5%	1/10W						
R913	1-216-825-11	METAL CHIP	2.2K	5%	1/10W						
R914	1-216-829-11	METAL CHIP	4.7K	5%	1/10W						
R915	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R916	1-216-837-11	METAL CHIP	22K	5%	1/10W						
R917	1-216-841-11	METAL CHIP	47K	5%	1/10W						
R921	1-216-817-11	METAL CHIP	470	5%	1/10W						

HCD-CPZ2

PANEL	SP	SUB PANEL	SUB POWER	SW POWER
-------	----	-----------	-----------	----------

Ref. No.	Part No.	Description	Remark
R922	1-216-813-11	METAL CHIP 220 5%	1/10W
R923	1-216-817-11	METAL CHIP 470 5%	1/10W
R924	1-216-833-11	METAL CHIP 10K 5%	1/10W
R925	1-216-833-11	METAL CHIP 10K 5%	1/10W
R926	1-216-833-11	METAL CHIP 10K 5%	1/10W
R927	1-216-833-11	METAL CHIP 10K 5%	1/10W
R928	1-216-833-11	METAL CHIP 10K 5%	1/10W
R929	1-216-833-11	METAL CHIP 10K 5%	1/10W
R932	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
R933	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
R934	1-216-821-11	METAL CHIP 1K 5%	1/10W
R935	1-216-833-11	METAL CHIP 10K 5%	1/10W
R936	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
R937	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
R938	1-216-821-11	METAL CHIP 1K 5%	1/10W
R939	1-216-833-11	METAL CHIP 10K 5%	1/10W
R940	1-216-833-11	METAL CHIP 10K 5%	1/10W
< ROTARY ENCODER >			
RV901	1-418-859-31	ENCODER, ROTARY (BASS)	
RV902	1-418-859-31	ENCODER, ROTARY (TREBLE)	
RV903	1-479-195-11	ENCODER (VOLUME)	
RV904	1-478-061-11	ENCODER, ROTARY (PUSH ENTER (JOG))	
< SWITCH >			
S901	1-762-875-21	SWITCH, KEYBOARD (I/⏏)	
S902	1-762-875-21	SWITCH, KEYBOARD (DSGX)	
S903	1-762-875-21	SWITCH, KEYBOARD (PLAY MODE/DIRECTION, TUNING MODE)	
S904	1-762-875-21	SWITCH, KEYBOARD (REPEAT, FM MODE)	
S905	1-762-875-21	SWITCH, KEYBOARD (CD SYNCHRO)	
S906	1-762-875-21	SWITCH, KEYBOARD (FUNCTION)	
S907	1-762-875-21	SWITCH, KEYBOARD (● REC)	
S908	1-762-875-21	SWITCH, KEYBOARD (⏮ (TAPE))	
S909	1-762-875-21	SWITCH, KEYBOARD (■ (TAPE))	
S910	1-762-875-21	SWITCH, KEYBOARD (TAPE ◀▶)	
S914	1-762-875-21	SWITCH, KEYBOARD (DISPLAY)	
S915	1-762-875-21	SWITCH, KEYBOARD (TUNER, BAND)	
S916	1-762-875-21	SWITCH, KEYBOARD (TUNING +, ▷▷▶▶)	
S917	1-762-875-21	SWITCH, KEYBOARD (TUNING -, ◀◀◀◀)	
S918	1-762-875-21	SWITCH, KEYBOARD (GROUP +)	
S919	1-762-875-21	SWITCH, KEYBOARD (GROUP -)	

SP BOARD

< CAPACITOR >

C851	1-164-315-11	CERAMIC CHIP 470PF 5%	50V
C852	1-164-315-11	CERAMIC CHIP 470PF 5%	50V
C853	1-164-315-11	CERAMIC CHIP 470PF 5%	50V
C854	1-164-315-11	CERAMIC CHIP 470PF 5%	50V

< CONNECTOR >

CN850	1-564-505-11	PLUG, CONNECTOR 2P
CN870	1-564-505-11	PLUG, CONNECTOR 2P

Ref. No.	Part No.	Description	Remark
< TERMINAL >			
J860	1-537-114-21	TERMINAL BOARD (SPEAKER)	

SUB PANEL BOARD			

< CAPACITOR >			
C914	1-164-156-11	CERAMIC CHIP 0.1uF	25V
< LED >			
D904	6-501-539-01	LED SELK5E20C-DTP15 (CD ▶▶)	
< RESISTOR >			
R909	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
R910	1-216-833-11	METAL CHIP 10K 5%	1/10W
< SWITCH >			
S911	1-762-875-21	SWITCH, KEYBOARD (■/CANCEL (CD))	
S912	1-762-875-21	SWITCH, KEYBOARD (CD ▶▶)	
S913	1-762-875-21	SWITCH, KEYBOARD (▲ (CD))	

SUB POWER BOARD			

< CAPACITOR >			
△ C991	1-113-925-11	CERAMIC 0.01uF 20%	250V
△ C992	1-113-925-11	CERAMIC 0.01uF 20%	250V
C993	1-126-768-11	ELECT 2200uF 20%	16V
C994	1-104-665-11	ELECT 100uF 20%	25V
C995	1-107-726-91	CERAMIC CHIP 0.01uF 10%	16V
< CONNECTOR >			
CN990	1-564-321-00	PIN, CONNECTOR (3.96mm PITCH) 2P	
< DIODE >			
D991	8-719-988-61	DIODE 1SS355TE-17	
D992	6-500-522-31	DIODE 10EDB40-TB5	
D993	6-500-522-31	DIODE 10EDB40-TB5	
D994	6-500-522-31	DIODE 10EDB40-TB5	
D995	6-500-522-31	DIODE 10EDB40-TB5	
< IC >			
IC991	6-704-135-01	IC MM1614A	
< TRANSISTOR >			
Q991	8-729-600-91	TRANSISTOR 2SC3052F-T1-LF	
< RESISTOR >			
R991	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
R992	1-216-845-11	METAL CHIP 100K 5%	1/10W
< RELAY >			
△ RY990	1-755-467-31	RELAY (POWER)	
△ RY991	1-755-467-31	RELAY (POWER)	

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
< TRANSFORMER >				D32	8-719-074-58	DIODE FCH10A10	
△ T991	1-437-676-11	TRANSFORMER, POWER (AEP)		D33	8-719-983-23	DIODE MTZJ-T-77-27B	
△ T991	1-437-676-11	TRANSFORMER, POWER (KR)		D34	8-719-923-91	DIODE MTZJ-T-77-16A	
*****				< FUSE >			
A-1211-675-A	SW POWER BOARD, COMPLETE (AEP)			△ F1	1-576-230-51	FUSE (T3.15AL/H250V)	
A-1251-306-A	SW POWER BOARD, COMPLETE (KR)			< FERRITE BEAD >			
*****				△ FB11	1-410-397-21	FERRITE 1.1uH	
7-685-646-79	SCREW +BVTP 3X8 TYPE2 N-S			< FUSE HOLDER >			
< CAPACITOR >				FH1	1-533-399-21	FUSE HOLDER	
△ C1	1-165-529-11	MYLAR 0.22uF 10 275V		FH2	1-533-399-21	FUSE HOLDER	
△ C3	1-165-528-11	MYLAR 0.1uF 10 275V		< IC >			
△ C4	1-119-886-51	CERAMIC 470PF 10% 250V		△ IC11	6-707-749-01	IC CXD9841P	
△ C5	1-119-886-51	CERAMIC 470PF 10% 250V		< PHOTO COUPLER >			
△ C6	1-115-350-51	CERAMIC 0.0047uF 2KV (KR)		△ PH11	6-600-187-01	PHOTO COUPLER PC123Y22J00F	
△ C7	1-115-350-51	CERAMIC 0.0047uF 2KV (KR)		< FET >			
△ C11	1-100-923-21	ELECT 100uF 20% 450V		△ Q11	6-551-319-01	FET 2SK3563 (LB2SONY)	
△ C13	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V		△ Q12	6-551-319-01	FET 2SK3563 (LB2SONY)	
△ C14	1-163-275-11	CERAMIC CHIP 0.001uF 5% 50V		< RESISTOR >			
△ C15	1-126-965-11	ELECT 22uF 20% 50V		△ R2	1-219-759-11	METAL 1M 5% 1/2W	
△ C16	1-126-963-11	ELECT 4.7uF 20% 50V		△ R10	1-218-895-11	METAL CHIP 100K 0.5% 1/10W	
△ C17	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V		△ R12	1-245-478-21	METAL 470K 1% 1/4W	
△ C18	1-115-339-11	CERAMIC CHIP 0.1uF 10% 50V		△ R13	1-245-478-21	METAL 470K 1% 1/4W	
△ C19	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V		△ R14	1-218-869-11	METAL CHIP 8.2K 0.5% 1/10W	
△ C20	1-104-664-11	ELECT 47uF 20% 25V		△ R15	1-218-875-11	METAL CHIP 15K 0.5% 1/10W	
△ C21	1-115-340-11	CERAMIC CHIP 0.22uF 10% 25V		△ R16	1-218-823-11	METAL CHIP 100 0.5% 1/10W	
△ C22	1-107-824-11	CERAMIC 220PF 5% 1KV		△ R17	1-211-989-11	METAL CHIP 68 0.5% 1/10W	
△ C23	1-107-824-11	CERAMIC 220PF 5% 1KV		△ R18	1-216-833-11	METAL CHIP 10K 5% 1/10W	
△ C24	1-128-990-22	FILM 27000PF 3% 800V		△ R19	1-249-393-11	CARBON 10 5% 1/4W F	
△ C25	1-126-948-11	ELECT 100uF 20% 35V		△ R20	1-216-833-11	METAL CHIP 10K 5% 1/10W	
△ C26	1-112-877-51	CERAMIC 0.001uF 20% 125V (AEP)		△ R21	1-249-393-11	CARBON 10 5% 1/4W F	
△ C26	1-119-888-51	CERAMIC 2200PF 20% 250V (KR)		△ R22	1-249-417-11	CARBON 1K 5% 1/4W F	
C31	1-128-953-31	ELECT 470uF 20% 25V		△ R23	1-243-979-71	METAL OXIDE 0.1 5% 2W F	
C32	1-100-924-21	ELECT 2200uF 20% 35V		△ R24	1-216-821-11	METAL CHIP 1K 5% 1/10W	
C51	1-165-908-11	CERAMIC CHIP 1uF 10% 10V		△ R25	1-247-694-11	CARBON 33 5% 1/4W F	
C52	1-165-908-11	CERAMIC CHIP 1uF 10% 10V		R32	1-216-821-11	METAL CHIP 1K 5% 1/10W	
C53	1-165-908-11	CERAMIC CHIP 1uF 10% 10V		R33	1-216-817-11	METAL CHIP 470 5% 1/10W	
< CONNECTOR >				< TRANSFORMER >			
CN1	1-564-321-00	PIN, CONNECTOR (3.96mm PITCH) 2P		△ T1	1-443-673-11	TRANSFORMER, LINE FILTER	
* CN31	1-564-508-11	PLUG, CONNECTOR 5P		△ T2	1-443-673-11	TRANSFORMER, LINE FILTER	
CN32	1-564-505-11	PLUG, CONNECTOR 2P		△ T31	1-443-620-11	TRANSFORMER, CONVERTER	
< DIODE >				< TAB >			
△ D1	8-719-077-77	DIODE D3SB60F3		TB1	1-695-915-11	TAB (CONTACT)	
△ D11	8-719-979-64	DIODE UF4005/23		< THERMISTOR >			
△ D12	6-501-178-01	DIODE UDZW-TE17-15B		TH1	1-803-806-31	THERMISTOR, NTC	
△ D13	6-501-178-01	DIODE UDZW-TE17-15B					
△ D14	8-719-063-74	DIODE D1NL20U-TR2					
△ D15	6-501-178-01	DIODE UDZW-TE17-15B					
△ D16	6-501-178-01	DIODE UDZW-TE17-15B					
△ D17	8-719-060-48	DIODE RB751V-40TE-17					
D31	6-501-320-01	DIODE FCQ10A04					

HCD-CPZ2

TC

Ref. No.	Part No.	Description	Remark		
< TERMINAL >					
TK1	1-537-771-21	TERMINAL BOARD, GROUND			
TK2	1-537-771-21	TERMINAL BOARD, GROUND			

TC BOARD					

1-831-992-11	CABLE, FLEXIBLE FLAT (8 CORE)				
< CAPACITOR >					
C601	1-104-664-11	ELECT	47uF	20%	25V
C603	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C605	1-126-964-11	ELECT	10uF	20%	50V
C606	1-126-960-11	ELECT	1uF	20%	50V
C607	1-164-315-11	CERAMIC CHIP	470PF	5%	50V
C608	1-126-961-11	ELECT	2.2uF	20%	50V
C610	1-164-315-11	CERAMIC CHIP	470PF	5%	50V
C611	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C612	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C613	1-164-315-11	CERAMIC CHIP	470PF	5%	50V
C614	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C615	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C617	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C630	1-104-665-11	ELECT	100uF	20%	25V
C632	1-126-964-11	ELECT	10uF	20%	50V
C633	1-126-964-11	ELECT	10uF	20%	50V
C634	1-126-964-11	ELECT	10uF	20%	50V
C635	1-126-960-11	ELECT	1uF	20%	50V
C641	1-104-664-11	ELECT	47uF	20%	25V
C642	1-137-393-11	FILM	0.01uF	5%	100V
C643	1-130-483-00	MYLAR	0.01uF	5%	50V
C644	1-130-479-00	MYLAR	0.0047uF	5%	50V
C645	1-130-479-00	MYLAR	0.0047uF	5%	50V
C646	1-130-483-00	MYLAR	0.01uF	5%	50V
C647	1-126-964-11	ELECT	10uF	20%	50V
C651	1-104-664-11	ELECT	47uF	20%	25V
C653	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C655	1-126-964-11	ELECT	10uF	20%	50V
C656	1-126-960-11	ELECT	1uF	20%	50V
C657	1-164-315-11	CERAMIC CHIP	470PF	5%	50V
C658	1-126-961-11	ELECT	2.2uF	20%	50V
C660	1-164-315-11	CERAMIC CHIP	470PF	5%	50V
C661	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C662	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C663	1-164-315-11	CERAMIC CHIP	470PF	5%	50V
C664	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C665	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C667	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C681	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
< CONNECTOR >					
CN603	1-784-780-11	CONNECTOR, FFC 19P			
< DIODE >					
D681	6-501-193-01	DIODE 1SS355WTE-17			

Ref. No.	Part No.	Description	Remark		
< IC >					
IC601	6-702-130-01	IC HA12237F			
< COIL >					
L601	1-410-780-11	INDUCTOR	27mH		
L651	1-410-780-11	INDUCTOR	27mH		
< TRANSISTOR >					
Q601	8-729-600-91	TRANSISTOR	2SC3052F-T1-LF		
Q602	8-729-600-91	TRANSISTOR	2SC3052F-T1-LF		
Q639	8-729-661-93	TRANSISTOR	2SA1115TP-EF		
Q640	8-729-038-23	TRANSISTOR	RT1N141C-TP-1		
Q642	8-729-036-89	TRANSISTOR	KTC3198GR-AT		
Q643	8-729-036-89	TRANSISTOR	KTC3198GR-AT		
Q651	8-729-600-91	TRANSISTOR	2SC3052F-T1-LF		
Q652	8-729-600-91	TRANSISTOR	2SC3052F-T1-LF		
Q680	8-729-038-23	TRANSISTOR	RT1N141C-TP-1		
Q681	8-729-038-12	TRANSISTOR	RT1P141C-TP-1		
Q688	8-729-038-23	TRANSISTOR	RT1N141C-TP-1		
Q691	8-729-038-23	TRANSISTOR	RT1N141C-TP-1		
Q692	8-729-038-23	TRANSISTOR	RT1N141C-TP-1		
Q693	8-729-040-76	TRANSISTOR	KTA1273-Y-AT		
Q694	8-729-040-76	TRANSISTOR	KTA1273-Y-AT		
< RESISTOR >					
R601	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R602	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R603	1-216-821-11	METAL CHIP	1K	5%	1/10W
R604	1-216-833-11	METAL CHIP	10K	5%	1/10W
R605	1-216-841-11	METAL CHIP	47K	5%	1/10W
R606	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R607	1-216-833-11	METAL CHIP	10K	5%	1/10W
R608	1-216-833-11	METAL CHIP	10K	5%	1/10W
R609	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R610	1-216-833-11	METAL CHIP	10K	5%	1/10W
R611	1-216-837-11	METAL CHIP	22K	5%	1/10W
R612	1-216-833-11	METAL CHIP	10K	5%	1/10W
R613	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R614	1-216-845-11	METAL CHIP	100K	5%	1/10W
R616	1-216-809-11	METAL CHIP	100	5%	1/10W
R617	1-216-833-11	METAL CHIP	10K	5%	1/10W
R630	1-216-857-11	METAL CHIP	1M	5%	1/10W
R631	1-216-837-11	METAL CHIP	22K	5%	1/10W
R632	1-216-821-11	METAL CHIP	1K	5%	1/10W
R633	1-216-833-11	METAL CHIP	10K	5%	1/10W
R635	1-216-809-11	METAL CHIP	100	5%	1/10W
R640	1-216-833-11	METAL CHIP	10K	5%	1/10W
△ R643	1-217-641-00	FUSIBLE	4.7	5%	1/4W F
△ R644	1-217-641-00	FUSIBLE	4.7	5%	1/4W F
R645	1-216-837-11	METAL CHIP	22K	5%	1/10W
R646	1-216-837-11	METAL CHIP	22K	5%	1/10W
R647	1-216-837-11	METAL CHIP	22K	5%	1/10W
R648	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R651	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R652	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R653	1-216-821-11	METAL CHIP	1K	5%	1/10W
R654	1-216-833-11	METAL CHIP	10K	5%	1/10W

Ref. No.	Part No.	Description	Remark		
R655	1-216-841-11	METAL CHIP	47K	5%	1/10W
R656	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R657	1-216-833-11	METAL CHIP	10K	5%	1/10W
R658	1-216-833-11	METAL CHIP	10K	5%	1/10W
R659	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R660	1-216-833-11	METAL CHIP	10K	5%	1/10W
R661	1-216-837-11	METAL CHIP	22K	5%	1/10W
R662	1-216-833-11	METAL CHIP	10K	5%	1/10W
R663	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R664	1-216-845-11	METAL CHIP	100K	5%	1/10W
R681	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R682	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R683	1-216-821-11	METAL CHIP	1K	5%	1/10W
R684	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R685	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R687	1-216-841-11	METAL CHIP	47K	5%	1/10W
R688	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R689	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R690	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R691	1-216-833-11	METAL CHIP	10K	5%	1/10W
R692	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R693	1-216-841-11	METAL CHIP	47K	5%	1/10W
R694	1-216-837-11	METAL CHIP	22K	5%	1/10W
R695	1-216-833-11	METAL CHIP	10K	5%	1/10W

< TRANSFORMER >

T601 1-423-980-11 TRANSFORMER, BIAS OSCILLATION

MISCELLANEOUS

62	1-796-456-41	DECK, MECHANICAL (CMAL1Z255A)
63	1-831-950-21	CABLE, FLEXIBLE FLAT (19 CORE)
120	1-831-952-21	CABLE, FLEXIBLE FLAT (19 CORE)
158	1-832-816-21	CABLE, FLEXIBLE FLAT (9 CORE)
△ 201	1-769-079-41	CORD, POWER (KR)
△ 201	1-830-188-11	CORD, POWER (AEP)
207	1-693-626-11	TUNER (FM/AM) (AEP)
207	1-693-629-11	TUNER (FM/AM) (KR)
209	1-828-640-51	WIRE (FLAT TYPE) (23 CORE)
210	1-831-926-11	CABLE, FLEXIBLE FLAT (11 CORE) (KR)
210	1-831-943-21	CABLE, FLEXIBLE FLAT (15 CORE) (AEP)
254	1-400-932-11	FILTER, CLAMP
256	1-832-874-21	CABLE, FLEXIBLE FLAT (21 CORE)
462	1-452-925-41	MAGNET ASSY
△ 556	8-820-244-01	OPTICAL PICK-UP BLOCK (KSM-215DCP/C2NP)
559	1-832-404-21	CABLE, FLEXIBLE FLAT (16 CORE)
M701	A-1148-845-A	MOTOR ASSY (LOADING)
S201	1-771-853-11	SWITCH, DETECTION (LIMIT)

REVISION HISTORY

Clicking the version allows you to jump to the revised page.

Also, clicking the version at the upper right on the revised page allows you to jump to the next revised page.

[illegible]