

SECTION 7
EXPLODED VIEWS


- NOTE:**
- XX and -X mean standardized parts, so they may have some difference from the original one.
 - Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- The mechanical parts with no reference number in the exploded views are not supplied.
- Abbreviation
AUS : Australian model
CET : East European and Russian models
CND : Canadian model
E3 : 240V AC area in E model
KR : Korean model
SP : Singapore model

The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety. Replace only with part number specified.


Les composants identifiés par une marque $\triangle$ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

7-1. OVERALL SECTION

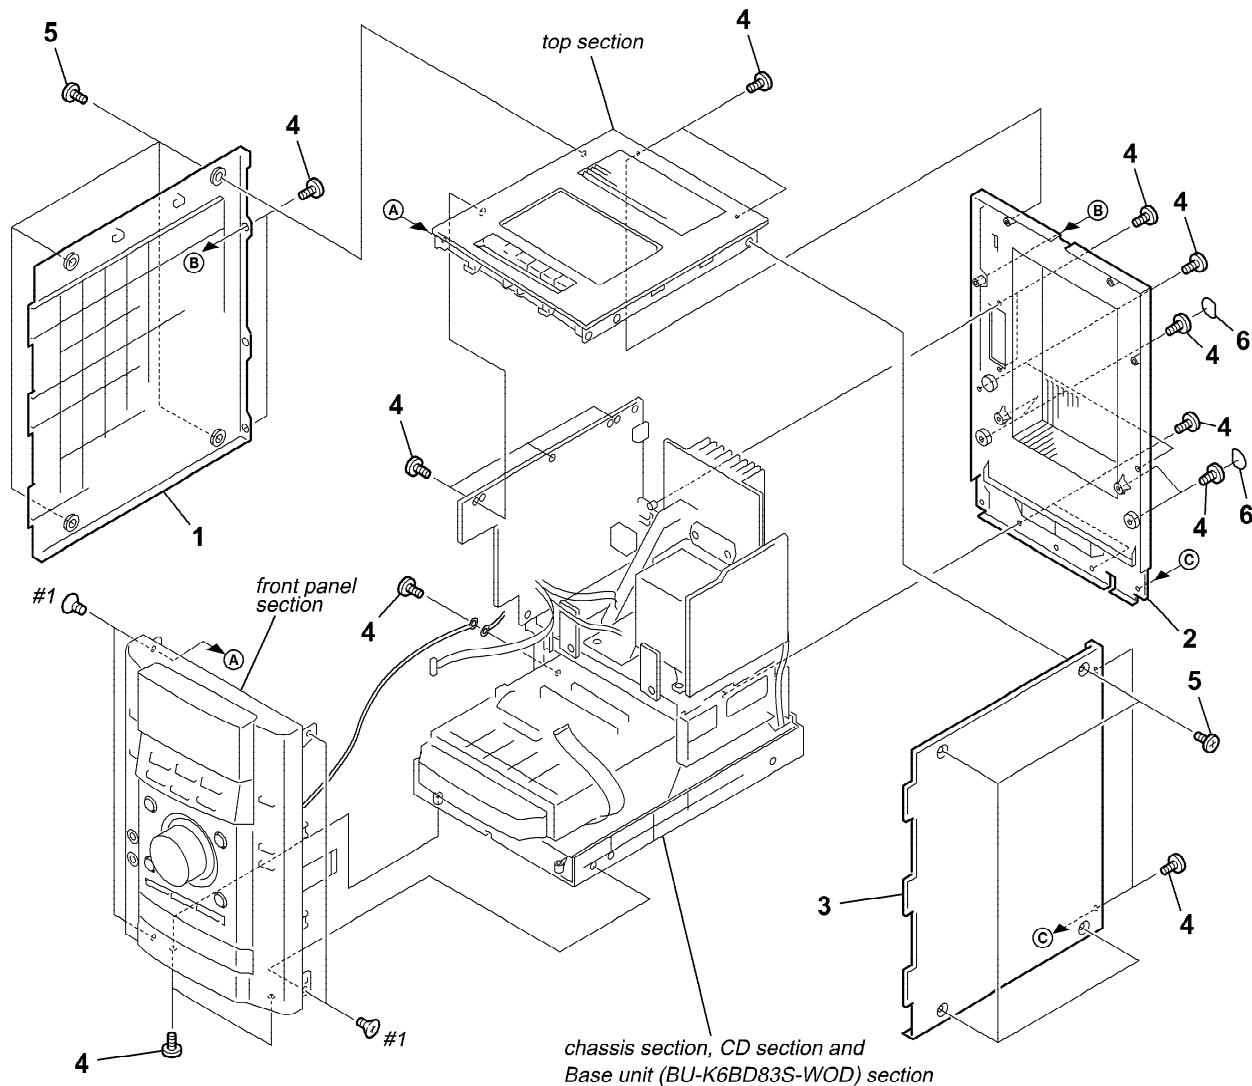


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	2-649-129-11	PANEL (L), SIDE (EXCEPT US)		2	2-649-133-41	CABINET, REAR (KR, AUS)	
1	2-649-129-21	PANEL (L), SIDE (US)		3	2-649-130-11	PANEL (R), SIDE (EXCEPT US)	
2	2-649-133-01	CABINET, REAR (US)		3	2-649-130-21	PANEL (R), SIDE (US)	
2	2-649-133-52	CABINET, REAR (CND)		4	3-254-143-11	SCREW (B3), (+) BV TAPPING	
2	2-649-133-21	CABINET, REAR (E3, SP)		5	3-363-099-32	SCREW (CASE 3 TP2)	
2	2-649-133-31	CABINET, REAR (AEP, UK, CET)		6	2-667-661-01	SHEET (REAR COVER) (AEP, UK, CET, KR)	
				#1	7-685-247-14	SCREW +KTP 3X10 TYPE2 NON-SLIT	

7-2. FRONT PANEL SECTION

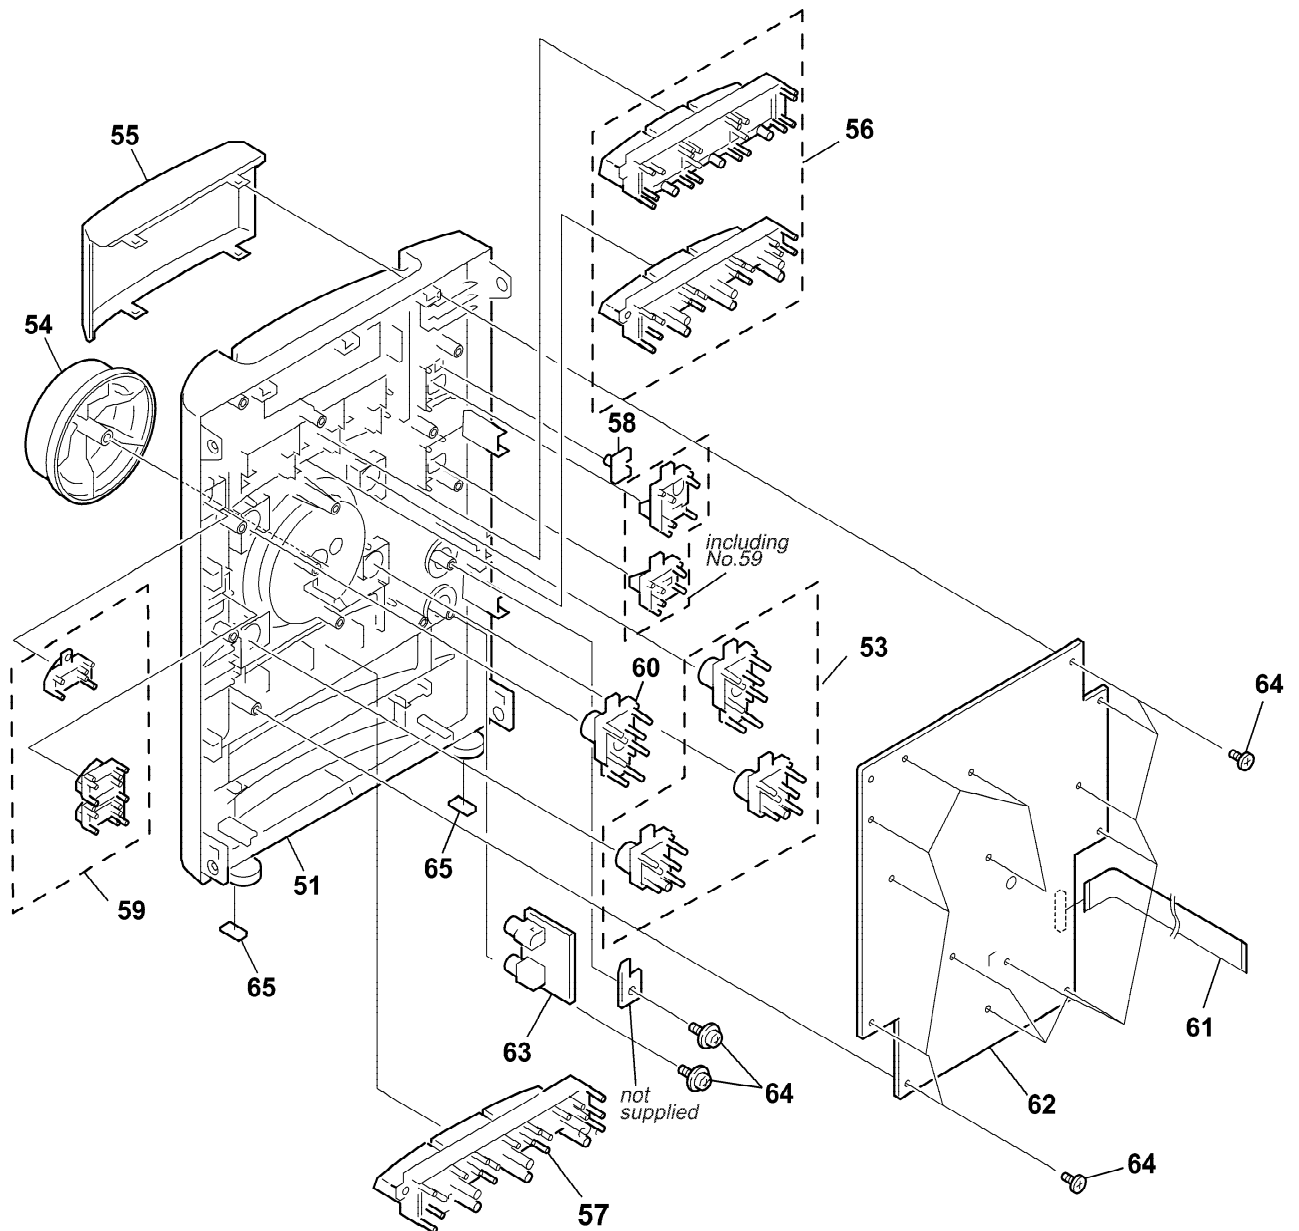


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	2-649-118-11	CABINET, FRONT (EXCEPT US)		61	1-824-048-21	WIRE (FLAT TYPE) (27 CORE)	
51	2-649-118-21	CABINET, FRONT (US)		62	A-1144-849-A	PANEL BOARD, COMPLETE (US, CND)	
53	2-649-123-01	BUTTON (EQ)		62	A-1169-449-A	PANEL BOARD, COMPLETE (E3, SP, AUS)	
54	2-649-126-01	KNOB (VOL)		62	A-1169-450-A	PANEL BOARD, COMPLETE (AEP, UK, CET)	
55	2-649-119-01	WINDOW (DISPLAY)		62	A-1183-181-A	PANEL BOARD, COMPLETE (KR)	
56	2-649-122-01	BUTTON (OPE)		63	A-1144-828-A	JACK BOARD, COMPLETE	
57	2-649-124-01	BUTTON (DISC)		64	4-951-620-01	SCREW (2.6X8), +BVTP	
58	2-649-120-01	REFLECTOR (POWER)		65	4-225-252-01	CUSHION (FOOT)	
59	2-649-121-01	BUTTON (POWER)					
60	2-649-648-01	BUTTON (DSGX)					

7-3. CHASSIS SECTION

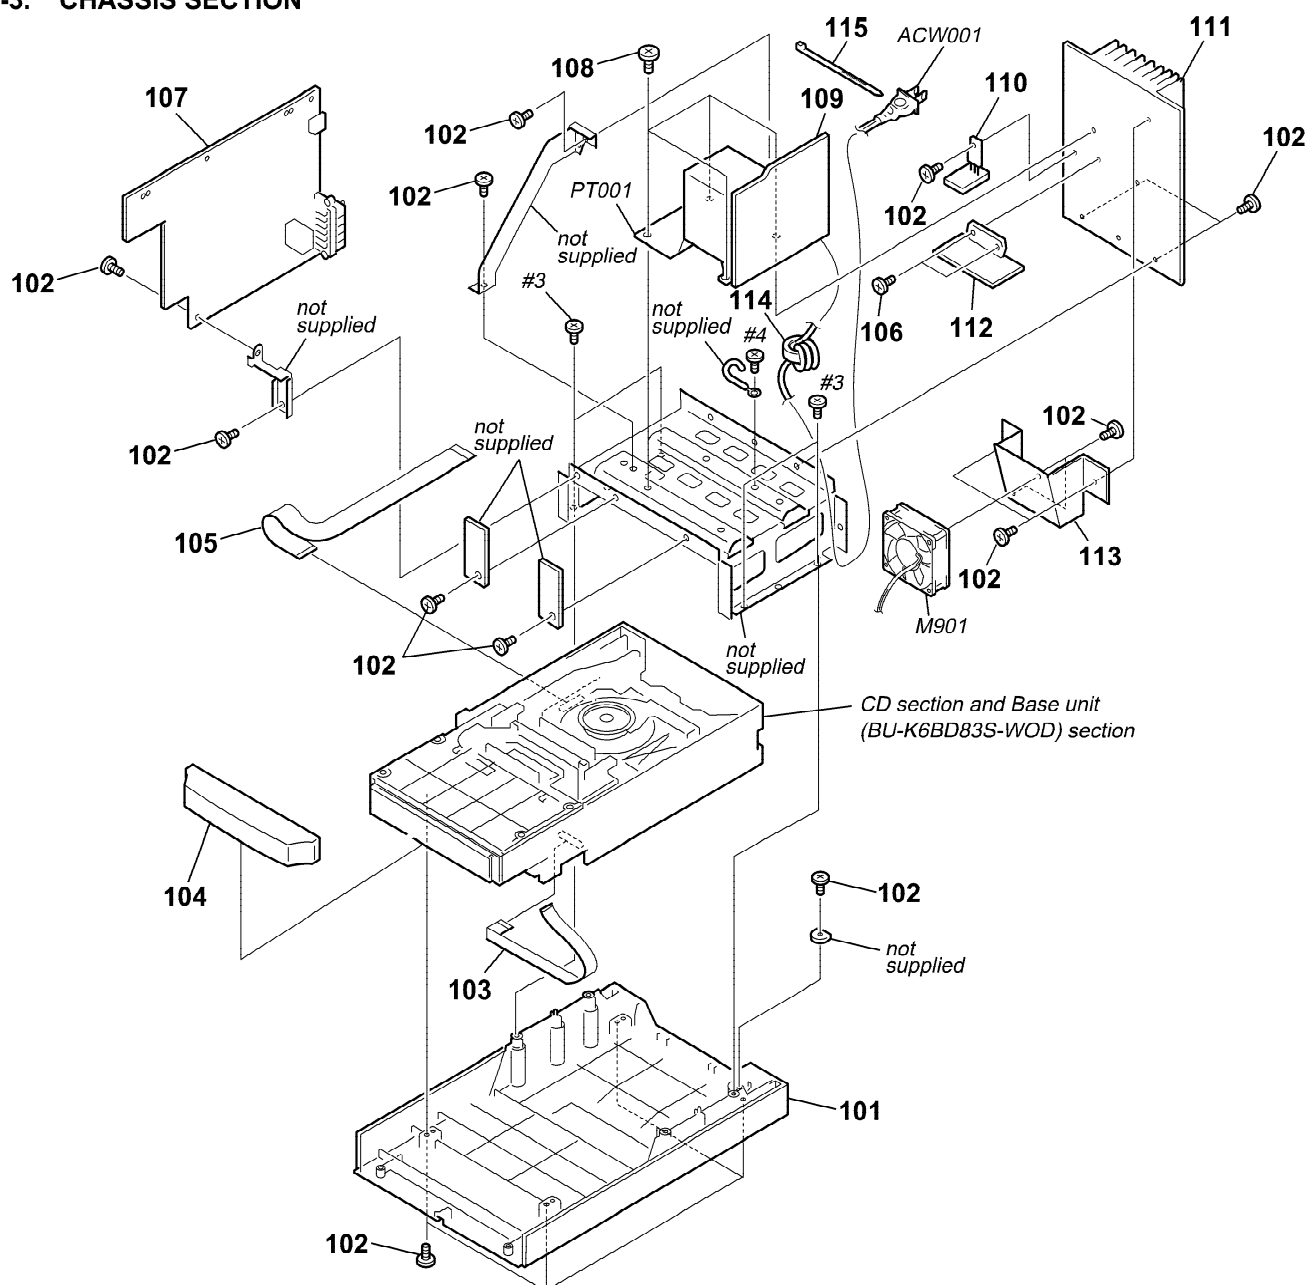


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101	2-649-153-31	CHASSIS (MAIN MOLD) (US)		111	X-2102-477-1	HEAT SINK ASSY (US, CND, AEP, UK, CET)	
101	2-649-153-11	CHASSIS (MAIN MOLD) (CND)		111	X-2108-555-1	HEAT SINK ASSY (50W SP2) (E3, SP, KR, AUS)	
101	2-649-153-21	CHASSIS (MAIN MOLD)		112	A-1144-850-A	AMP BOARD, COMPLETE (US, CND)	
		(AEP, UK, CET, SP, KR, AUS)		112	A-1171-961-A	AMP BOARD, COMPLETE (AEP, UK, CET)	
101	2-649-153-41	CHASSIS (MAIN MOLD) (E3)		112	A-1175-788-A	AMP BOARD, COMPLETE (E3, SP, KR, AUS)	
102	3-254-143-11	SCREW (B3), (+) BV TAPPING		113	2-671-683-01	HOLDER (FAN50) (E3, SP, KR, AUS)	
103	1-828-974-21	WIRE (FLAT TYPE) (13 CORE)		114	1-500-868-11	CORE, FERRITE (AEP, UK, CET, KR)	
104	2-649-127-01	PANEL, TRAY		115	3-701-748-00	CLAMP	
105	1-828-643-21	WIRE (FLAT TYPE) (23 CORE)		△ACW001	1-769-079-51	CORD, POWER (KR)	
106	3-905-609-31	SCREW (TRANSISTOR)		△ACW001	1-775-790-81	CORD, POWER (AUS)	
107	A-1144-848-A	MAIN BOARD, COMPLETE (US, CND)		△ACW001	1-790-757-51	CORD, POWER (US, CND)	
107	A-1169-435-A	MAIN BOARD, COMPLETE (E3, SP, AUS)		△ACW001	1-830-891-11	CORD, POWER (UK)	
107	A-1169-436-A	MAIN BOARD, COMPLETE (AEP, UK, CET)		△ACW001	1-831-370-11	CORD, POWER (AEP, CET, SP)	
107	A-1181-748-A	MAIN BOARD, COMPLETE (KR)		△ACW001	1-832-377-11	CORD, POWER (E3)	
108	4-900-386-01	SCREW		M901	1-787-396-11	D.C. FAN (50 SQUARE) (E3, SP, KR, AUS)	
109	A-1144-825-A	PT BOARD, COMPLETE (US, CND)		△PT001	1-443-845-11	TRANSFORMER, POWER (US, CND)	
109	A-1169-506-A	PT BOARD, COMPLETE (E3, SP)		△PT001	1-443-910-11	TRANSFORMER, POWER (AEP, UK, CET)	
109	A-1169-507-A	PT BOARD, COMPLETE (AUS)		△PT001	1-443-911-11	TRANSFORMER, POWER (E3, SP, KR, AUS)	
109	A-1169-540-A	PT BOARD, COMPLETE (AEP, UK, CET)		#3	7-685-661-14	SCREW +BVTP 4X12 TYPE2 IT-3	
109	A-1181-750-A	PT BOARD, COMPLETE (KR)		#4	7-685-647-79	SCREW +BVTP 3X10 TYPE2 N-S	
110	A-1146-444-A	TRANSISTOR BOARD, COMPLETE					

7-4. TOP SECTION

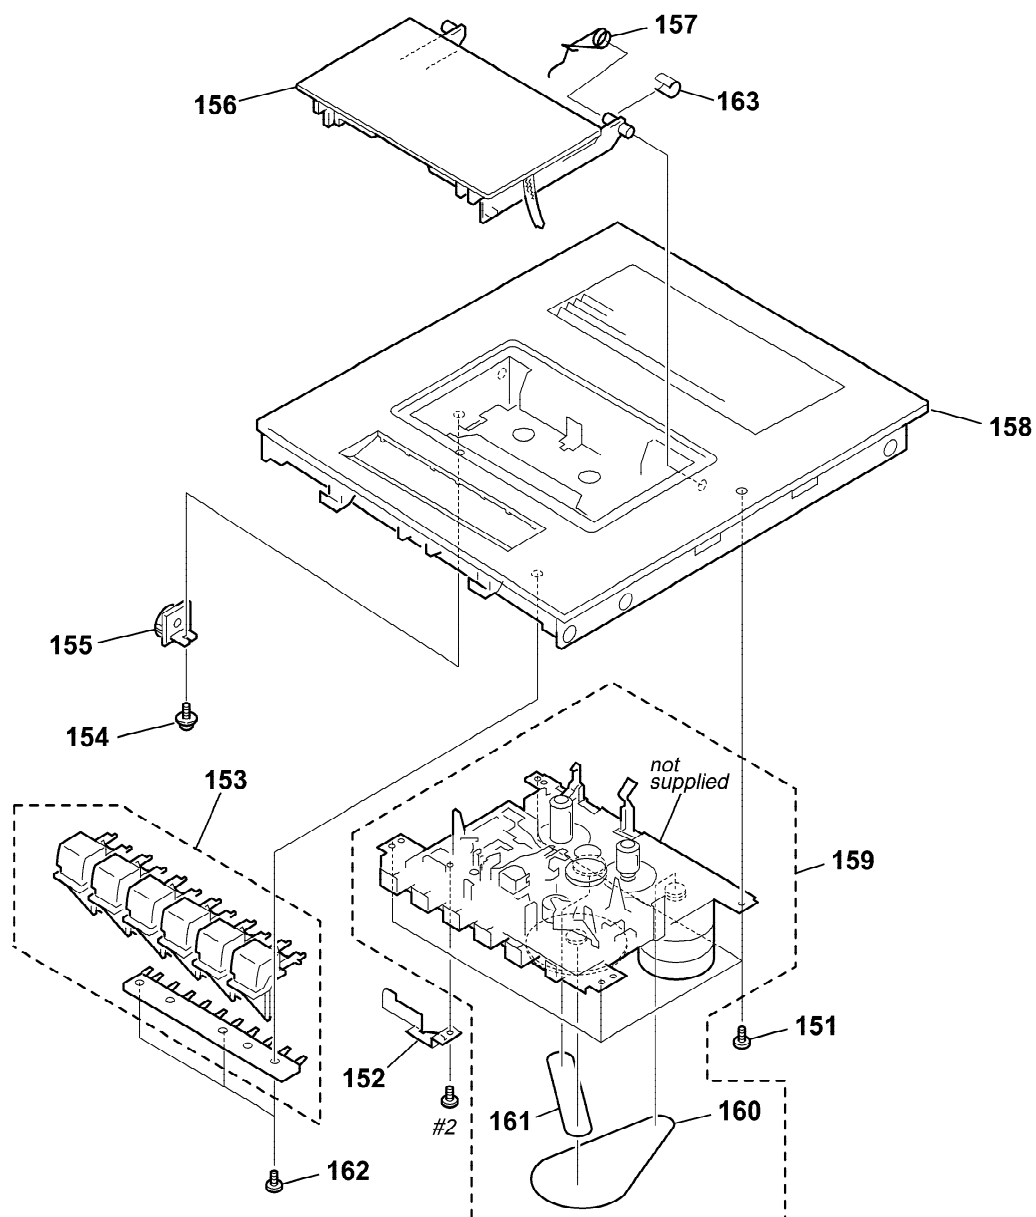

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>
151	4-951-620-01	SCREW (2.6X8), +BVTP		158	2-649-128-21	PANEL, TOP (US)	
152	2-649-154-01	LEVER (REG)		159	1-797-375-11	DECK, MECHANICAL	
153	2-649-132-01	BUTTON (CASS)					
154	3-921-725-01	SCREW (2.6X10), +PWH		160	2-670-389-01	BELT (1)	
155	3-047-468-01	DAMPER		161	3-214-817-01	BELT (2)	
				162	3-252-827-01	SCREW (B2.6), (+) BV TAPPING	
156	2-649-131-01	BOX, CASSETTE		163	3-917-753-41	CUSION (SP)	
157	2-649-152-01	SPRING (CASS)		#2	7-685-850-04	SCREW +BVTT 2X3 (S)	
158	2-649-128-11	PANEL, TOP (EXCEPT US)					

7-5. CD SECTION AND BASE UNIT (BU-K6BD83S-WOD) SECTION

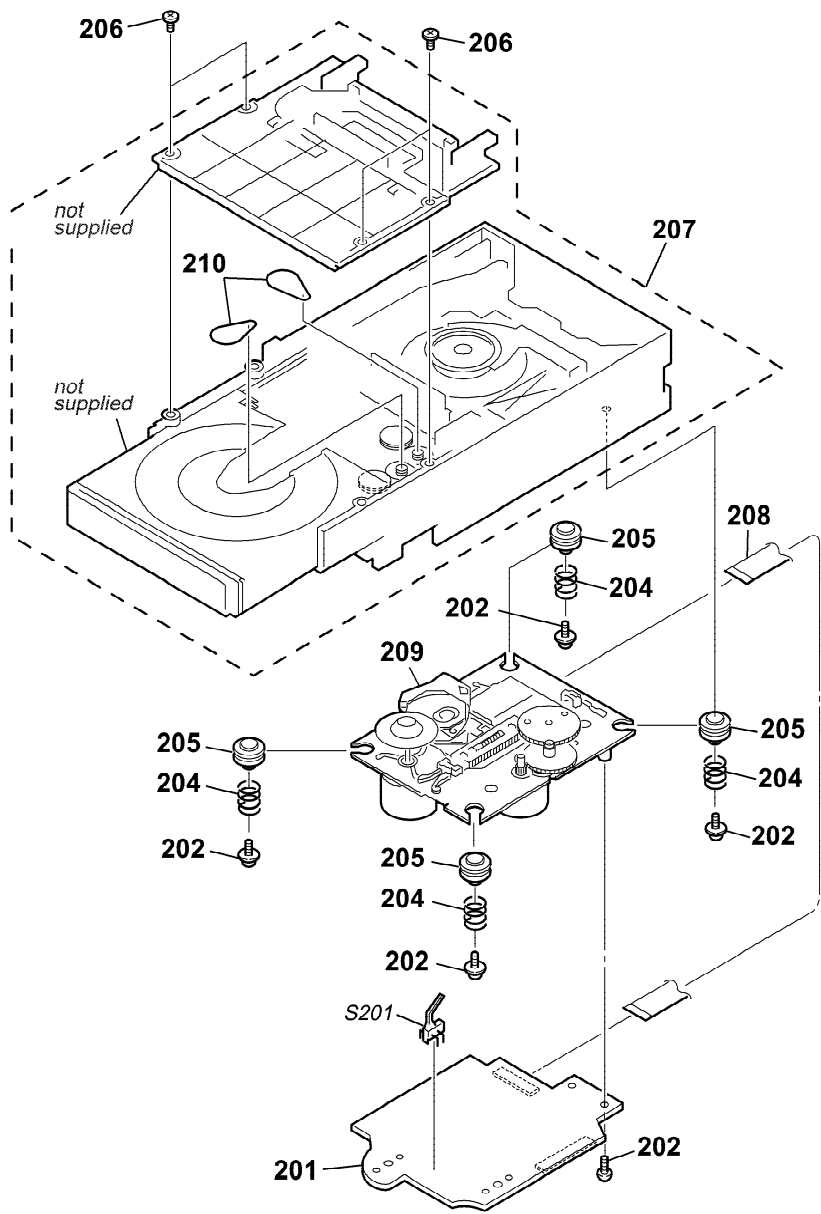

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
201	A-1134-279-A	BD83S BOARD, COMPLETE (US, CND, E3, SP, AUS)		206	4-951-620-01	SCREW (2.6X8), +BVTP	
201	A-1179-506-A	BD83S BOARD, COMPLETE (AEP, UK, CET, KR)		207	1-797-193-12	MECHANICAL, CD (DLM3A23-11)	
202	4-985-672-01	SCREW (+PTPWHM2.6), FLOATING		208	1-827-992-11	WIRE (FLAT TYPE) (16 CORE)	
204	4-227-045-31	SPRING (INSULATOR), COIL		△ 209	A-4735-357-A	OP BASE ASSY (KSM213DHAP/ZRP1)	
205	4-227-549-11	INSULATOR		210	2-632-062-01	BELT (DLM3A)	
				S201	1-771-853-11	SWITCH, DETECTION (LIMIT)	

SECTION 8

ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS**
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable
- CAPACITORS**
uF: μ F
- COILS**
uH: μ H
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS**
In each case, u: μ , for example:
uA. . . : μ A. . . uPA. . . : μ PA. .
uPB. . . : μ PB. . uPC. . . : μ PC. .
uPD. . . : μ PD. .
- Abbreviation**
AUS : Australian model
CET : East European and Russian models
CND : Canadian model
E3 : 240V AC area in E model
KR : Korean model
SP : Singapore model

When indicating parts by reference number, please include the board name.

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
	A-1144-850-A	AMP BOARD, COMPLETE *****		R203	1-216-841-11	METAL CHIP 47K 5%	1/10W
		< CAPACITOR >		R204	1-216-841-11	METAL CHIP 47K 5%	1/10W
				R205	1-216-833-11	METAL CHIP 10K 5%	1/10W
C201	1-162-960-11	CERAMIC CHIP 220PF 10% 50V		R206	1-216-833-11	METAL CHIP 10K 5%	1/10W
C202	1-162-960-11	CERAMIC CHIP 220PF 10% 50V		R207	1-216-809-11	METAL CHIP 100 5%	1/10W
C203	1-126-963-11	ELECT 4.7uF 20% 50V		R208	1-216-809-11	METAL CHIP 100 5%	1/10W
C204	1-126-963-11	ELECT 4.7uF 20% 50V		R209	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
C205	1-162-927-11	CERAMIC CHIP 100PF 5% 50V		R210	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
C206	1-162-927-11	CERAMIC CHIP 100PF 5% 50V		R211	1-216-841-11	METAL CHIP 47K 5%	1/10W
C207	1-162-966-11	CERAMIC CHIP 0.0022uF 10% 50V		R212	1-216-841-11	METAL CHIP 47K 5%	1/10W
C208	1-162-966-11	CERAMIC CHIP 0.0022uF 10% 50V		R213	1-216-833-11	METAL CHIP 10K 5%	1/10W
C209	1-162-915-11	CERAMIC CHIP 10PF 0.5PF 50V		R214	1-216-833-11	METAL CHIP 10K 5%	1/10W
C210	1-162-915-11	CERAMIC CHIP 10PF 0.5PF 50V		R215	1-216-821-11	METAL CHIP 1K 5%	1/10W
C211	1-162-966-11	CERAMIC CHIP 0.0022uF 10% 50V		R216	1-216-821-11	METAL CHIP 1K 5%	1/10W
C212	1-162-966-11	CERAMIC CHIP 0.0022uF 10% 50V		R217	1-216-821-11	METAL CHIP 1K 5%	1/10W
C244	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V		R218	1-216-821-11	METAL CHIP 1K 5%	1/10W
C251	1-165-621-91	CERAMIC CHIP 0.1uF 50V		R219	1-216-821-11	METAL CHIP 1K 5%	1/10W
C252	1-165-621-91	CERAMIC CHIP 0.1uF 50V		R220	1-216-821-11	METAL CHIP 1K 5%	1/10W
C253	1-162-966-11	CERAMIC CHIP 0.0022uF 10% 50V		R221	1-216-837-11	METAL CHIP 22K 5%	1/10W
C254	1-162-966-11	CERAMIC CHIP 0.0022uF 10% 50V		R222	1-216-837-11	METAL CHIP 22K 5%	1/10W
		< DIODE >		R223	1-216-833-11	METAL CHIP 10K 5%	1/10W
D241	6-500-335-01	DIODE MC2838-T112-1		R224	1-216-833-11	METAL CHIP 10K 5%	1/10W
		< EARTH TERMINAL >		R225	1-216-837-11	METAL CHIP 22K 5%	1/10W
EP201	1-537-770-21	TERMINAL BOARD, GROUND		R226	1-216-837-11	METAL CHIP 22K 5%	1/10W
		< IC >		R227	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
IC202	6-708-919-01	IC STK432-050		R228	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
		< TRANSISTOR >		R231	1-216-813-11	METAL CHIP 220 5%	1/10W
				R232	1-216-813-11	METAL CHIP 220 5%	1/10W
Q201	6-551-270-01	TRANSISTOR 2SA2026		R233	1-216-833-11	METAL CHIP 10K 5%	1/10W
Q202	6-551-270-01	TRANSISTOR 2SA2026		R234	1-216-833-11	METAL CHIP 10K 5%	1/10W
Q241	8-729-120-28	TRANSISTOR 2SC1623-L5L6		Δ R235	1-216-361-31	METAL OXIDE 0.22 5%	2W
Q242	8-729-600-22	TRANSISTOR 2SA1235-F		Δ R236	1-216-361-31	METAL OXIDE 0.22 5%	2W
Q243	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R241	1-216-833-11	METAL CHIP 10K 5%	1/10W
Q244	8-729-600-22	TRANSISTOR 2SA1235-F		R242	1-216-833-11	METAL CHIP 10K 5%	1/10W
		< RESISTOR >		R243	1-216-821-11	METAL CHIP 1K 5%	1/10W
R201	1-216-864-11	SHORT CHIP 0		R244	1-216-845-11	METAL CHIP 100K 5%	1/10W
R202	1-216-864-11	SHORT CHIP 0		R245	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
				R246	1-216-833-11	METAL CHIP 10K 5%	1/10W
				R247	1-216-853-11	METAL CHIP 470K 5%	1/10W
				R248	1-216-833-11	METAL CHIP 10K 5%	1/10W
				R249	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
				R251	1-216-809-11	METAL CHIP 100 5%	1/10W
				R252	1-216-809-11	METAL CHIP 100 5%	1/10W

HCD-EC50

Ver. 1.3

AMP BD83S

Ref. No.	Part No.	Description			Remark
R253	1-216-833-11	METAL CHIP	10K	5%	1/10W
		< THERMISTOR >			
TH241	1-805-217-21	THERMISTOR (1012)			
		< CABLE HOLDER >			
WH101	1-824-030-21	HOLDER, CABLE 5P			
WH102	1-824-030-21	HOLDER, CABLE 5P			

	A-1134-279-A	BD83S BOARD, COMPLETE			
		(US, CND, E3, SP, AUS)			
	A-1179-506-A	BD83S BOARD, COMPLETE (AEP, UK, CET, KR)			

		< CAPACITOR >			
C101	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C102	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C103	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
		(US, CND, E3, SP, AUS)			
C103	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
		(AEP, UK, CET, KR)			
C104	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C105	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
		(US, CND, E3, SP, AUS)			
C105	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
		(AEP, UK, CET, KR)			
C107	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C108	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C109	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C110	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C111	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C112	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
		(US, CND, E3, SP, AUS)			
C112	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
		(AEP, UK, CET, KR)			
C113	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
		(US, CND, E3, SP, AUS)			
C113	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
		(AEP, UK, CET, KR)			
C201	1-128-995-21	ELECT CHIP	100uF	20%	10V
C202	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C203	1-128-995-21	ELECT CHIP	100uF	20%	10V
C204	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C205	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C206	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C207	1-128-995-21	ELECT CHIP	100uF	20%	10V
C208	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C210	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C213	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C214	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C215	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C217	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C218	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C219	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C220	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C221	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C222	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C223	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C224	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C226	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C227	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C230	1-162-927-11	CERAMIC CHIP	100PF	5%	50V

Ref. No.	Part No.	Description	Remark		
C232	1-164-360-11	CERAMIC CHIP 0.1uF	16V		
C251	1-164-315-11	CERAMIC CHIP 470PF	5%	50V	
C252	1-162-968-11	CERAMIC CHIP 0.0047uF	10%	50V	
C253	1-164-315-11	CERAMIC CHIP 470PF	5%	50V	
C254	1-162-968-11	CERAMIC CHIP 0.0047uF	10%	50V	
C256	1-107-826-11	CERAMIC CHIP 0.1uF	10%	16V	
C257	1-107-826-11	CERAMIC CHIP 0.1uF	10%	16V	
C258	1-164-230-11	CERAMIC CHIP 220PF	5%	50V	
C260	1-117-863-11	CERAMIC CHIP 0.47uF	10%	6.3V	
C261	1-162-970-11	CERAMIC CHIP 0.01uF	10%	25V	
C264	1-162-964-11	CERAMIC CHIP 0.001uF	10%	50V	
C265	1-107-826-11	CERAMIC CHIP 0.1uF	10%	16V	
C266	1-162-915-11	CERAMIC CHIP 10PF	0.5PF	50V	
C267	1-162-910-11	CERAMIC CHIP 5PF	0.25PF	50V	
C268	1-162-915-11	CERAMIC CHIP 10PF	0.5PF	50V	
C271	1-107-826-11	CERAMIC CHIP 0.1uF	10%	16V	
C272	1-164-360-11	CERAMIC CHIP 0.1uF		16V	
C273	1-164-315-11	CERAMIC CHIP 470PF	5%	50V	
C274	1-107-826-11	CERAMIC CHIP 0.1uF	10%	16V	
C275	1-162-910-11	CERAMIC CHIP 5PF	0.25PF	50V	
C276	1-165-908-11	CERAMIC CHIP 1uF	10%	10V	
C277	1-165-908-11	CERAMIC CHIP 1uF	10%	10V	
C291	1-164-315-11	CERAMIC CHIP 470PF	5%	50V	
C292	1-164-315-11	CERAMIC CHIP 470PF	5%	50V	
C301	1-164-360-11	CERAMIC CHIP 0.1uF		16V	
C303	1-137-710-11	CERAMIC CHIP 10uF	20%	6.3V	
C304	1-165-908-11	CERAMIC CHIP 1uF	10%	10V	
C321	1-162-964-11	CERAMIC CHIP 0.001uF	10%	50V	
C322	1-165-908-11	CERAMIC CHIP 1uF	10%	10V	
C323	1-128-995-21	ELECT CHIP 100uF	20%	10V	
C401	1-128-394-11	ELECT CHIP 220uF	20%	10V	
C404	1-164-360-11	CERAMIC CHIP 0.1uF		16V	
C405	1-164-360-11	CERAMIC CHIP 0.1uF		16V	
C406	1-164-360-11	CERAMIC CHIP 0.1uF		16V	
C424	1-164-360-11	CERAMIC CHIP 0.1uF		16V	
C451	1-165-176-11	CERAMIC CHIP 0.047uF	10%	16V	
< CONNECTOR >					
CN301	1-770-425-51	CONNECTOR, FFC/FPC 16P			
< IC >					
IC201	8-753-246-30	IC CXD3014A-201R			
IC202	6-708-736-01	IC BD18KA5FP-E2			
IC402	6-705-808-01	IC BA5947FM-E2			
< TRANSISTOR >					
Q321	6-551-120-01	TRANSISTOR	2SA2119K		
< RESISTOR >					
R101	1-216-809-11	METAL CHIP	100	5%	1/10W
R102	1-216-809-11	METAL CHIP	100	5%	1/10W
R103	1-216-809-11	METAL CHIP	100	5%	1/10W
R104	1-216-809-11	METAL CHIP	100	5%	1/10W
R105	1-216-809-11	METAL CHIP	100	5%	1/10W
R107	1-216-809-11	METAL CHIP	100	5%	1/10W
R108	1-216-809-11	METAL CHIP	100	5%	1/10W
R109	1-216-809-11	METAL CHIP	100	5%	1/10W
R110	1-216-809-11	METAL CHIP	100	5%	1/10W
R111	1-216-809-11	METAL CHIP	100	5%	1/10W
R112	1-216-809-11	METAL CHIP	100	5%	1/10W

BD83S

JACK

MAIN

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R113	1-216-809-11	METAL CHIP	100	5%	1/10W	L105	1-216-295-91	SHORT CHIP	0		
R201	1-216-295-91	SHORT CHIP	0			L106	1-216-295-91	SHORT CHIP	0		
R202	1-216-295-91	SHORT CHIP	0					< RESISTOR >			
R203	1-500-445-21	FERRITE, EMI (SMD) (2012)									
R207	1-216-295-91	SHORT CHIP	0			R119	1-216-805-11	METAL CHIP	47	5%	1/10W
R250	1-216-857-11	METAL CHIP	1M	5%	1/10W	R120	1-216-805-11	METAL CHIP	47	5%	1/10W
R252	1-216-833-11	METAL CHIP	10K	5%	1/10W	R151	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R253	1-216-821-11	METAL CHIP	1K	5%	1/10W	R152	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R254	1-216-833-11	METAL CHIP	10K	5%	1/10W	R175	1-216-841-11	METAL CHIP	47K	5%	1/10W
R255	1-216-821-11	METAL CHIP	1K	5%	1/10W	R176	1-216-841-11	METAL CHIP	47K	5%	1/10W
R256	1-216-837-11	METAL CHIP	22K	5%	1/10W	*****					
R257	1-216-845-11	METAL CHIP	100K	5%	1/10W						
R258	1-216-849-11	METAL CHIP	220K	5%	1/10W	A-1144-848-A	MAIN BOARD, COMPLETE				
R260	1-216-864-11	SHORT CHIP	0					*****			
R265	1-216-829-11	METAL CHIP	4.7K	5%	1/10W			< CAPACITOR >			
R266	1-216-821-11	METAL CHIP	1K	5%	1/10W	C101	1-128-550-11	ELECT	2200uF	20%	50V
R267	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	C102	1-128-550-11	ELECT	2200uF	20%	50V
R268	1-216-833-11	METAL CHIP	10K	5%	1/10W	C105	1-165-621-91	CERAMIC CHIP	0.1uF		50V
R270	1-216-821-11	METAL CHIP	1K	5%	1/10W	C106	1-165-621-91	CERAMIC CHIP	0.1uF		50V
R271	1-216-857-11	METAL CHIP	1M	5%	1/10W	C110	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V
R275	1-216-809-11	METAL CHIP	100	5%	1/10W	C111	1-126-933-11	ELECT	100uF	20%	16V
R276	1-216-841-11	METAL CHIP	47K	5%	1/10W	C112	1-126-943-11	ELECT	2200uF	20%	25V
R277	1-216-809-11	METAL CHIP	100	5%	1/10W	C113	1-126-942-61	ELECT	1000uF	20%	25V
R278	1-216-809-11	METAL CHIP	100	5%	1/10W	C114	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V
R280	1-216-864-11	SHORT CHIP	0			C116	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
R291	1-216-809-11	METAL CHIP	100	5%	1/10W	C121	1-117-863-11	CERAMIC CHIP	0.47uF	10%	6.3V
R292	1-216-809-11	METAL CHIP	100	5%	1/10W	C131	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
R321	1-216-789-11	METAL CHIP	2.2	5%	1/10W	C132	1-165-621-91	CERAMIC CHIP	0.1uF		50V
R322	1-216-789-11	METAL CHIP	2.2	5%	1/10W	C133	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
R323	1-216-864-11	SHORT CHIP	0			C134	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
R324	1-216-845-11	METAL CHIP	100K	5%	1/10W	C151	1-126-933-11	ELECT	100uF	20%	16V
R401	1-216-295-91	SHORT CHIP	0			C152	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V
R421	1-216-864-11	SHORT CHIP	0			C153	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V
R423	1-216-833-11	METAL CHIP	10K	5%	1/10W	C155	1-164-156-11	CERAMIC CHIP	0.1uF		25V
R451	1-216-837-11	METAL CHIP	22K	5%	1/10W	C156	1-164-156-11	CERAMIC CHIP	0.1uF		25V
R452	1-216-833-11	METAL CHIP	10K	5%	1/10W	C158	1-165-621-91	CERAMIC CHIP	0.1uF		50V
		< VIBRATOR >				C159	1-165-621-91	CERAMIC CHIP	0.1uF		50V
X201	1-795-101-21	VIBRATOR, CERAMIC (16.9344MHz)				C181	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V
*****						C182	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V
						C183	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V
	A-1144-828-A	JACK BOARD, COMPLETE				C184	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V
		*****				C191	1-126-923-91	ELECT	220uF	20%	10V
		< CAPACITOR >				C192	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V
C139	1-164-156-11	CERAMIC CHIP	0.1uF		25V	C193	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V
C140	1-164-156-11	CERAMIC CHIP	0.1uF		25V	C194	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V
C141	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C195	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V
C142	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C196	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V
		< CONNECTOR >				C197	1-126-925-91	ELECT	470uF	20%	10V
CNP171	1-815-449-11	PIN, CONNECTOR (PWB) 8P				C198	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V
		< JACK >				C401	1-126-956-91	ELECT	0.1uF	20%	50V
J102	1-815-629-11	JACK (PHONES)				C402	1-126-933-11	ELECT	100uF	20%	16V
J105	1-566-822-51	JACK (AUDIO IN)				C403	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V
		< COIL >				C404	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
						C405	1-126-956-91	ELECT	0.1uF	20%	50V
						C406	1-125-837-91	CERAMIC CHIP	1uF	10%	6.3V
L103	1-469-152-11	FERRITE, EMI (SMD) (2012)				C407	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
L104	1-469-152-11	FERRITE, EMI (SMD) (2012)				C408	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
						C409	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V
						C410	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V
						C412	1-126-925-91	ELECT	470uF	20%	10V

HCD-EC50

MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C413	1-126-933-11	ELECT	100uF 20% 16V	C816	1-115-467-11	CERAMIC CHIP 0.22uF 10% 10V	
C415	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	C817	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V	
C416	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V				
C417	1-126-957-11	ELECT	0.22uF 20% 50V	C818	1-216-864-11	SHORT CHIP 0	
C418	1-126-957-11	ELECT	0.22uF 20% 50V	C819	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
				C820	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C421	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	C821	1-165-176-11	CERAMIC CHIP 0.047uF 10% 16V	
C431	1-115-467-11	CERAMIC CHIP	0.22uF 10% 10V	C822	1-162-962-11	CERAMIC CHIP 470PF 10% 50V	
C432	1-115-467-11	CERAMIC CHIP	0.22uF 10% 10V				
C433	1-162-962-11	CERAMIC CHIP	470PF 10% 50V	C823	1-162-918-11	CERAMIC CHIP 18PF 5% 50V	
C434	1-162-962-11	CERAMIC CHIP	470PF 10% 50V	C824	1-162-918-11	CERAMIC CHIP 18PF 5% 50V	
				C825	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
C437	1-162-962-11	CERAMIC CHIP	470PF 10% 50V	C826	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	
C438	1-162-962-11	CERAMIC CHIP	470PF 10% 50V	C827	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	
C501	1-162-923-11	CERAMIC CHIP	47PF 5% 50V				
C502	1-162-923-11	CERAMIC CHIP	47PF 5% 50V	C828	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	
C503	1-162-962-11	CERAMIC CHIP	470PF 10% 50V	C829	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
				C830	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C504	1-162-962-11	CERAMIC CHIP	470PF 10% 50V	C831	1-117-863-11	CERAMIC CHIP 0.47uF 10% 6.3V	
C505	1-165-176-11	CERAMIC CHIP	0.047uF 10% 16V	C832	1-117-863-11	CERAMIC CHIP 0.47uF 10% 6.3V	
C506	1-165-176-11	CERAMIC CHIP	0.047uF 10% 16V				
C507	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C833	1-117-863-11	CERAMIC CHIP 0.47uF 10% 6.3V	
C508	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C834	1-126-923-91	ELECT 220uF 20% 10V	
				C835	1-115-467-11	CERAMIC CHIP 0.22uF 10% 10V	
C509	1-126-966-11	ELECT	33uF 20% 50V	C836	1-115-467-11	CERAMIC CHIP 0.22uF 10% 10V	
C510	1-126-966-11	ELECT	33uF 20% 50V	C838	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V	
C511	1-162-962-11	CERAMIC CHIP	470PF 10% 50V				
C512	1-162-962-11	CERAMIC CHIP	470PF 10% 50V	C839	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V	
C513	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	C840	1-117-863-11	CERAMIC CHIP 0.47uF 10% 6.3V	
				C841	1-126-965-91	ELECT 22uF 20% 50V	
C514	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	C843	1-162-960-11	CERAMIC CHIP 220PF 10% 50V	
C515	1-162-923-11	CERAMIC CHIP	47PF 5% 50V	C847	1-162-968-11	CERAMIC CHIP 0.0047uF 10% 50V	
C522	1-162-927-11	CERAMIC CHIP	100PF 5% 50V				
C523	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C848	1-162-968-11	CERAMIC CHIP 0.0047uF 10% 50V	
C524	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C851	1-165-176-11	CERAMIC CHIP 0.047uF 10% 16V	
				C852	1-162-915-11	CERAMIC CHIP 10PF 0.5PF 50V	
C525	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C853	1-164-227-11	CERAMIC CHIP 0.022uF 10% 25V	
C526	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	C854	1-162-915-11	CERAMIC CHIP 10PF 0.5PF 50V	
C527	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V				
C528	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	C855	1-162-962-11	CERAMIC CHIP 470PF 10% 50V	
C529	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	C856	1-162-910-11	CERAMIC CHIP 5PF 0.25PF 50V	
C530	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V			< FILTER >	
C531	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V				
C532	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	CF802	1-579-554-21	FILTER, CERAMIC	
C543	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	CF803	1-781-962-21	FILTER, CERAMIC	
C544	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V			< CONNECTOR >	
C551	1-126-965-91	ELECT	22uF 20% 50V	CNP151	1-819-136-11	PIN, CONNECTOR 8P	
C561	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V	CNP201	1-819-133-11	PIN, CONNECTOR	
C562	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V	CNP202	1-815-446-11	PIN, CONNECTOR (PWB) 5P	
C564	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	CNP501	1-815-445-11	PIN, CONNECTOR (PWB) 4P	
C565	1-115-156-11	CERAMIC CHIP	1uF 10V	CNP502	1-815-444-11	PIN, CONNECTOR (PWB) 3P	
C567	1-130-479-00	MYLAR	0.0047uF 5% 50V	* CNP802	1-506-680-11	PLUG, CONNECTOR (2.5MM) 3P (ANTENNA)	
C801	1-126-933-11	ELECT	100uF 20% 16V	CNS104	1-779-291-11	CONNECTOR, FFC (LIF (NON-ZIF)) 23P	
C802	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	CNS111	1-779-295-11	CONNECTOR, FFC (LIF (NON-ZIF)) 27P	
C803	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V			< DIODE >	
C804	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V				
C806	1-162-964-11	CERAMIC CHIP	0.001uF 10% 50V	D107	6-501-046-01	DIODE 1N5402-F46	
C807	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V	D108	6-501-046-01	DIODE 1N5402-F46	
C809	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	D109	6-501-046-01	DIODE 1N5402-F46	
C810	1-115-467-11	CERAMIC CHIP	0.22uF 10% 10V	D110	6-501-046-01	DIODE 1N5402-F46	
C811	1-164-156-11	CERAMIC CHIP	0.1uF 25V	D111	6-500-522-31	DIODE 10EDB40-TB5	
C812	1-164-156-11	CERAMIC CHIP	0.1uF 25V				
C813	1-126-923-91	ELECT	220uF 20% 10V	D113	6-500-522-31	DIODE 10EDB40-TB5	
C815	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	D131	6-500-522-31	DIODE 10EDB40-TB5	

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
D132	8-719-000-07	DIODE MC2836		Q153	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D154	6-500-335-01	DIODE MC2838-T112-1		Q154	8-729-600-22	TRANSISTOR 2SA1235-F	
D156	8-719-000-07	DIODE MC2836		Q191	8-729-036-86	TRANSISTOR KTC3203Y-AT	
D191	6-500-522-31	DIODE 10EDB40-TB5		Q192	8-729-036-86	TRANSISTOR KTC3203Y-AT	
D192	6-500-522-31	DIODE 10EDB40-TB5		Q507	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D193	8-719-083-58	DIODE UDZSTE-173.9B		Q801	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D802	6-501-369-01	DIODE SV230-TB-E		Q802	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
D803	6-501-369-01	DIODE SV230-TB-E		< RESISTOR >			
D812	8-719-062-51	DIODE 1PS226-115		R101	1-216-825-11	METAL CHIP 2.2K 5% 1/10W	
D813	8-719-062-51	DIODE 1PS226-115		R103	1-216-841-11	METAL CHIP 47K 5% 1/10W	
D814	8-719-062-51	DIODE 1PS226-115		R104	1-216-841-11	METAL CHIP 47K 5% 1/10W	
D851	6-501-142-01	DIODE SVC347A-TL-E		R105	1-216-841-11	METAL CHIP 47K 5% 1/10W	
< EARTH TERMINAL >				R106	1-216-837-11	METAL CHIP 22K 5% 1/10W	
EP102	1-537-770-21	TERMINAL BOARD, GROUND		R107	1-216-837-11	METAL CHIP 22K 5% 1/10W	
< IC >				R108	1-216-825-11	METAL CHIP 2.2K 5% 1/10W	
IC401	6-702-895-01	IC BD3881FV		R109	1-216-789-11	METAL CHIP 2.2 5% 1/10W	
IC801	6-708-840-01	IC LV23003VA		R110	1-216-789-11	METAL CHIP 2.2 5% 1/10W	
< JACK >				R111	1-216-809-11	METAL CHIP 100 5% 1/10W	
J101	1-536-708-81	TERMINAL BOARD, PUSH (4P) (SPEAKER)		R112	1-216-809-11	METAL CHIP 100 5% 1/10W	
< JUMPER RESISTOR >				R113	1-216-809-11	METAL CHIP 100 5% 1/10W	
JR101	1-216-864-11	SHORT CHIP 0		R114	1-216-809-11	METAL CHIP 100 5% 1/10W	
JR102	1-216-864-11	SHORT CHIP 0		R115	1-247-807-31	CARBON 100 5% 1/4W	
JR103	1-216-864-11	SHORT CHIP 0		R116	1-247-807-31	CARBON 100 5% 1/4W	
JR104	1-216-864-11	SHORT CHIP 0		R117	1-247-807-31	CARBON 100 5% 1/4W	
JR105	1-216-864-11	SHORT CHIP 0		R118	1-247-807-31	CARBON 100 5% 1/4W	
JR801	1-216-864-11	SHORT CHIP 0		R121	1-216-849-11	METAL CHIP 220K 5% 1/10W	
JR802	1-216-864-11	SHORT CHIP 0		R123	1-216-853-11	METAL CHIP 470K 5% 1/10W	
JR803	1-216-864-11	SHORT CHIP 0		R124	1-216-809-11	METAL CHIP 100 5% 1/10W	
< COIL >				R125	1-216-837-11	METAL CHIP 22K 5% 1/10W	
L101	1-456-107-11	COIL, AIR-CORE		R127	1-249-401-11	CARBON 47 5% 1/4W	
L102	1-456-107-11	COIL, AIR-CORE		R128	1-249-401-11	CARBON 47 5% 1/4W	
L501	1-456-094-11	TRANSFORMER, BIAS OSCILLATION		R129	1-249-401-11	CARBON 47 5% 1/4W	
L803	1-433-741-11	TRANSFORMER, IF		R130	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
L804	1-457-163-11	COIL, AIR-CORE		R131	1-216-841-11	METAL CHIP 47K 5% 1/10W	
L805	1-457-162-11	COIL, AIR-CORE		R132	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
L806	1-457-168-11	COIL, DET		R133	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
L851	1-457-161-11	COIL, AM ANTENNA		R134	1-216-817-11	METAL CHIP 470 5% 1/10W	
L852	1-456-596-11	COIL, MW OSC		R135	1-216-817-11	METAL CHIP 470 5% 1/10W	
< TRANSISTOR >				R136	1-216-817-11	METAL CHIP 470 5% 1/10W	
Q102	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R137	1-216-817-11	METAL CHIP 470 5% 1/10W	
Q121	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R138	1-216-817-11	METAL CHIP 470 5% 1/10W	
Q122	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R139	1-216-817-11	METAL CHIP 470 5% 1/10W	
Q131	6-550-889-01	TRANSISTOR 2SC5938-T112-1B		R140	1-216-817-11	METAL CHIP 470 5% 1/10W	
Q132	6-550-889-01	TRANSISTOR 2SC5938-T112-1B		R142	1-216-845-11	METAL CHIP 100K 5% 1/10W	
Q133	8-729-027-38	TRANSISTOR DTA144EKA-T146		R144	1-216-817-11	METAL CHIP 470 5% 1/10W	
Q134	1-801-806-11	TRANSISTOR DTC144EKA		R145	1-216-817-11	METAL CHIP 470 5% 1/10W	
Q135	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R146	1-216-817-11	METAL CHIP 470 5% 1/10W	
Q137	6-550-889-01	TRANSISTOR 2SC5938-T112-1B		R147	1-216-817-11	METAL CHIP 470 5% 1/10W	
Q138	6-550-889-01	TRANSISTOR 2SC5938-T112-1B		R148	1-216-817-11	METAL CHIP 470 5% 1/10W	
Q151	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R149	1-216-817-11	METAL CHIP 470 5% 1/10W	
Q152	8-729-600-22	TRANSISTOR 2SA1235-F		R150	1-216-817-11	METAL CHIP 470 5% 1/10W	
				R153	1-216-849-11	METAL CHIP 220K 5% 1/10W	
				R154	1-216-849-11	METAL CHIP 220K 5% 1/10W	
				R155	1-216-841-11	METAL CHIP 47K 5% 1/10W	
				R156	1-216-833-11	METAL CHIP 10K 5% 1/10W	
				R157	1-216-825-11	METAL CHIP 2.2K 5% 1/10W	
				R158	1-216-833-11	METAL CHIP 10K 5% 1/10W	

HCD-EC50

MAIN

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
R159	1-216-833-11	METAL CHIP	10K	5%	1/10W	R501	1-216-809-11	METAL CHIP	100	5%	1/10W
R160	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R502	1-216-809-11	METAL CHIP	100	5%	1/10W
R161	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R503	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R162	1-216-809-11	METAL CHIP	100	5%	1/10W	R504	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R163	1-216-833-11	METAL CHIP	10K	5%	1/10W	R505	1-216-833-11	METAL CHIP	10K	5%	1/10W
R164	1-216-837-11	METAL CHIP	22K	5%	1/10W	R506	1-216-833-11	METAL CHIP	10K	5%	1/10W
R165	1-216-833-11	METAL CHIP	10K	5%	1/10W	R507	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R166	1-216-837-11	METAL CHIP	22K	5%	1/10W	R508	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R167	1-216-833-11	METAL CHIP	10K	5%	1/10W	R509	1-216-853-11	METAL CHIP	470K	5%	1/10W
R168	1-216-833-11	METAL CHIP	10K	5%	1/10W	R510	1-216-853-11	METAL CHIP	470K	5%	1/10W
R169	1-216-833-11	METAL CHIP	10K	5%	1/10W	R511	1-216-861-11	METAL CHIP	2.2M	5%	1/10W
R170	1-216-833-11	METAL CHIP	10K	5%	1/10W	R512	1-216-861-11	METAL CHIP	2.2M	5%	1/10W
R171	1-216-833-11	METAL CHIP	10K	5%	1/10W	R513	1-216-809-11	METAL CHIP	100	5%	1/10W
R172	1-216-833-11	METAL CHIP	10K	5%	1/10W	R514	1-216-809-11	METAL CHIP	100	5%	1/10W
R174	1-216-809-11	METAL CHIP	100	5%	1/10W	R515	1-216-805-11	METAL CHIP	47	5%	1/10W
R177	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R516	1-216-805-11	METAL CHIP	47	5%	1/10W
R178	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R517	1-216-845-11	METAL CHIP	100K	5%	1/10W
R179	1-216-864-11	SHORT CHIP	0			R518	1-216-845-11	METAL CHIP	100K	5%	1/10W
R180	1-216-864-11	SHORT CHIP	0			R519	1-216-845-11	METAL CHIP	100K	5%	1/10W
R181	1-216-797-11	METAL CHIP	10	5%	1/10W	R520	1-216-845-11	METAL CHIP	100K	5%	1/10W
R182	1-216-797-11	METAL CHIP	10	5%	1/10W	R521	1-216-837-11	METAL CHIP	22K	5%	1/10W
R183	1-216-797-11	METAL CHIP	10	5%	1/10W	R522	1-216-837-11	METAL CHIP	22K	5%	1/10W
R184	1-216-797-11	METAL CHIP	10	5%	1/10W	R523	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R185	1-247-807-31	CARBON	100	5%	1/4W	R524	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R186	1-247-807-31	CARBON	100	5%	1/4W	R525	1-216-833-11	METAL CHIP	10K	5%	1/10W
R191	1-216-821-11	METAL CHIP	1K	5%	1/10W	R526	1-216-833-11	METAL CHIP	10K	5%	1/10W
R194	1-249-401-11	CARBON	47	5%	1/4W	R527	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R195	1-216-809-11	METAL CHIP	100	5%	1/10W	R528	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R196	1-216-809-11	METAL CHIP	100	5%	1/10W	R529	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R197	1-249-401-11	CARBON	47	5%	1/4W	R530	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R198	1-249-401-11	CARBON	47	5%	1/4W	R531	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R199	1-247-807-31	CARBON	100	5%	1/4W	R532	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R200	1-247-807-31	CARBON	100	5%	1/4W	R533	1-216-833-11	METAL CHIP	10K	5%	1/10W
R402	1-216-809-11	METAL CHIP	100	5%	1/10W	R534	1-216-833-11	METAL CHIP	10K	5%	1/10W
R403	1-216-821-11	METAL CHIP	1K	5%	1/10W	R535	1-216-813-11	METAL CHIP	220	5%	1/10W
R404	1-216-813-11	METAL CHIP	220	5%	1/10W	R536	1-216-813-11	METAL CHIP	220	5%	1/10W
R405	1-216-813-11	METAL CHIP	220	5%	1/10W	R541	1-216-837-11	METAL CHIP	22K	5%	1/10W
R406	1-216-821-11	METAL CHIP	1K	5%	1/10W	R542	1-216-833-11	METAL CHIP	10K	5%	1/10W
R410	1-216-845-11	METAL CHIP	100K	5%	1/10W	R543	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R411	1-216-821-11	METAL CHIP	1K	5%	1/10W	R544	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R412	1-216-813-11	METAL CHIP	220	5%	1/10W	R545	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R419	1-216-837-11	METAL CHIP	22K	5%	1/10W	R560	1-216-821-11	METAL CHIP	1K	5%	1/10W
R420	1-216-837-11	METAL CHIP	22K	5%	1/10W	R561	1-216-837-11	METAL CHIP	22K	5%	1/10W
R423	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R564	1-216-793-11	METAL CHIP	4.7	5%	1/10W
R424	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R565	1-216-793-11	METAL CHIP	4.7	5%	1/10W
R425	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R801	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R426	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R802	1-216-797-11	METAL CHIP	10	5%	1/10W
R427	1-216-845-11	METAL CHIP	100K	5%	1/10W	R803	1-216-797-11	METAL CHIP	10	5%	1/10W
R428	1-216-845-11	METAL CHIP	100K	5%	1/10W	R804	1-216-864-11	SHORT CHIP	0		
R429	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R805	1-216-845-11	METAL CHIP	100K	5%	1/10W
R430	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R806	1-216-864-11	SHORT CHIP	0		
R433	1-216-837-11	METAL CHIP	22K	5%	1/10W	R807	1-216-845-11	METAL CHIP	100K	5%	1/10W
R434	1-216-837-11	METAL CHIP	22K	5%	1/10W	R808	1-216-833-11	METAL CHIP	10K	5%	1/10W
R439	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R809	1-216-821-11	METAL CHIP	1K	5%	1/10W
R440	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R811	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R441	1-216-841-11	METAL CHIP	47K	5%	1/10W	R812	1-216-817-11	METAL CHIP	470	5%	1/10W
R442	1-216-841-11	METAL CHIP	47K	5%	1/10W	R813	1-216-833-11	METAL CHIP	10K	5%	1/10W
						R814	1-216-809-11	METAL CHIP	100	5%	1/10W

Ref. No.	Part No.	Description	Remark
R815	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
R816	1-216-833-11	METAL CHIP 10K 5%	1/10W
R817	1-216-833-11	METAL CHIP 10K 5%	1/10W
R818	1-216-841-11	METAL CHIP 47K 5%	1/10W
R819	1-216-833-11	METAL CHIP 10K 5%	1/10W
R820	1-216-821-11	METAL CHIP 1K 5%	1/10W
R822	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
R827	1-216-809-11	METAL CHIP 100 5%	1/10W
R829	1-216-845-11	METAL CHIP 100K 5%	1/10W
R830	1-216-841-11	METAL CHIP 47K 5%	1/10W
R832	1-216-864-11	SHORT CHIP 0	
R833	1-216-833-11	METAL CHIP 10K 5%	1/10W
R834	1-216-837-11	METAL CHIP 22K 5%	1/10W
R835	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
R836	1-216-833-11	METAL CHIP 10K 5%	1/10W
R837	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
R838	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
R839	1-216-809-11	METAL CHIP 100 5%	1/10W
R840	1-216-837-11	METAL CHIP 22K 5%	1/10W
R841	1-216-809-11	METAL CHIP 100 5%	1/10W
R842	1-216-841-11	METAL CHIP 47K 5%	1/10W
R843	1-216-853-11	METAL CHIP 470K 5%	1/10W
R844	1-216-797-11	METAL CHIP 10 5%	1/10W
R845	1-216-801-11	METAL CHIP 22 5%	1/10W
R846	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
R848	1-216-821-11	METAL CHIP 1K 5%	1/10W
R849	1-216-837-11	METAL CHIP 22K 5%	1/10W
R850	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
R851	1-216-837-11	METAL CHIP 22K 5%	1/10W
R852	1-216-801-11	METAL CHIP 22 5%	1/10W
R853	1-216-845-11	METAL CHIP 100K 5%	1/10W
R855	1-216-853-11	METAL CHIP 470K 5%	1/10W
R859	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
R860	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
R863	1-216-837-11	METAL CHIP 22K 5%	1/10W
< RELAY >			
RY131	1-755-307-11	RELAY	
< SWITCH >			
SW501	1-762-369-11	SWITCH, SLIDE (REC/PB)	
< CABLE HOLDER >			
WH171	1-819-972-11	HOLDER, CABLE 8P	
WH203	1-824-027-21	HOLDER, CABLE 3P	
< VIBRATOR >			
X801	1-767-388-21	VIBRATOR, CRYSTAL (75kHz)	

Ref. No.	Part No.	Description	Remark
	A-1144-849-A	PANEL BOARD, COMPLETE *****	
	2-649-117-01	HOLDER (LCD)	
	2-649-178-01	PLATE, LIGHT GUIDE	
	2-649-179-01	SHEET (LCD)	
	2-665-175-01	SHEET REFLECTOR	
< CAPACITOR >			
C671	1-126-965-91	ELECT 22uF 20%	50V
C672	1-100-566-91	CERAMIC CHIP 0.1uF 10%	25V
C701	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C702	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
C703	1-126-933-11	ELECT 100uF 20%	16V
C704	1-126-925-91	ELECT 470uF 20%	10V
C705	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
C706	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C707	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C708	1-162-923-11	CERAMIC CHIP 47PF 5%	50V
C709	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C710	1-115-467-11	CERAMIC CHIP 0.22uF 10%	10V
C711	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C712	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C713	1-162-923-11	CERAMIC CHIP 47PF 5%	50V
C714	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C715	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C716	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C717	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C718	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C719	1-165-176-11	CERAMIC CHIP 0.047uF 10%	16V
C720	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C722	1-162-968-11	CERAMIC CHIP 0.0047uF 10%	50V
C723	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C724	1-162-923-11	CERAMIC CHIP 47PF 5%	50V
C725	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C726	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C727	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C728	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C729	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C730	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C731	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C732	1-162-919-11	CERAMIC CHIP 22PF 5%	50V
C733	1-162-919-11	CERAMIC CHIP 22PF 5%	50V
C734	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C735	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C737	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C738	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C739	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C741	1-162-960-11	CERAMIC CHIP 220PF 10%	50V
C742	1-162-960-11	CERAMIC CHIP 220PF 10%	50V
C743	1-162-960-11	CERAMIC CHIP 220PF 10%	50V
< CONNECTOR >			
CNS671	1-784-735-11	CONNECTOR, FFC 13P	
CNS701	1-779-295-11	CONNECTOR, FFC (LIF (NON-ZIF)) 27P	
< DIODE >			
D701	8-719-083-57	DIODE UDZSTE-173.6B	

HCD-EC50

PANEL

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
D702	8-719-000-07	DIODE MC2836		R668	1-216-817-11	METAL CHIP 470	5% 1/10W
D703	8-719-062-51	DIODE 1PS226-115		R669	1-216-841-11	METAL CHIP 47K	5% 1/10W
		< IC >		R670	1-216-817-11	METAL CHIP 470	5% 1/10W
IC701	6-806-138-01	IC MB90802-108		R671	1-216-841-11	METAL CHIP 47K	5% 1/10W
IC703	6-600-446-01	IC RPM7240-H18		R672	1-216-837-11	METAL CHIP 22K	5% 1/10W
		< JUMPER RESISTOR >		R673	1-216-837-11	METAL CHIP 22K	5% 1/10W
JR701	1-216-864-11	SHORT CHIP 0		R674	1-216-837-11	METAL CHIP 22K	5% 1/10W
JR702	1-216-864-11	SHORT CHIP 0		R675	1-216-837-11	METAL CHIP 22K	5% 1/10W
JR703	1-216-864-11	SHORT CHIP 0		R676	1-216-837-11	METAL CHIP 22K	5% 1/10W
JR704	1-216-864-11	SHORT CHIP 0		R677	1-216-837-11	METAL CHIP 22K	5% 1/10W
		< COIL >		R678	1-216-817-11	METAL CHIP 470	5% 1/10W
L701	1-216-864-11	SHORT CHIP 0		R679	1-216-837-11	METAL CHIP 22K	5% 1/10W
L702	1-216-864-11	SHORT CHIP 0		R681	1-216-837-11	METAL CHIP 22K	5% 1/10W
		< LIQUID CRYSTAL DISPLAY >		R682	1-216-849-11	METAL CHIP 220K	5% 1/10W
LCD702	1-805-973-11	DISPLAY PANEL, LIQUID CRYSTAL		R683	1-216-841-11	METAL CHIP 47K	5% 1/10W
		< LED >		R684	1-216-789-11	METAL CHIP 2.2	5% 1/10W
LED701	6-501-139-01	DIODE SELU2B10A-SLF62 (BACK LIGHT)		R685	1-216-837-11	METAL CHIP 22K	5% 1/10W
LED702	8-719-060-44	DIODE SLR-342VRT32 (STANDBY)		R686	1-216-829-11	METAL CHIP 4.7K	5% 1/10W
		< TRANSISTOR >		R687	1-216-829-11	METAL CHIP 4.7K	5% 1/10W
Q661	1-801-806-11	TRANSISTOR DTC144EKA		R688	1-216-789-11	METAL CHIP 2.2	5% 1/10W
Q662	8-729-040-76	TRANSISTOR KTA1273-Y-AT		R689	1-216-833-11	METAL CHIP 10K	5% 1/10W
Q663	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R691	1-216-841-11	METAL CHIP 47K	5% 1/10W
Q664	8-729-600-22	TRANSISTOR 2SA1235-F		R692	1-216-817-11	METAL CHIP 470	5% 1/10W
Q665	8-729-024-43	TRANSISTOR 2SA1365-T112-1EF		R693	1-216-841-11	METAL CHIP 47K	5% 1/10W
Q666	8-729-047-62	TRANSISTOR 2SC3440-T12-1F		R694	1-216-817-11	METAL CHIP 470	5% 1/10W
Q667	8-729-024-43	TRANSISTOR 2SA1365-T112-1EF		R695	1-216-841-11	METAL CHIP 47K	5% 1/10W
Q668	8-729-047-62	TRANSISTOR 2SC3440-T12-1F		R696	1-216-817-11	METAL CHIP 470	5% 1/10W
Q669	8-729-024-43	TRANSISTOR 2SA1365-T112-1EF		R697	1-216-817-11	METAL CHIP 470	5% 1/10W
Q670	8-729-047-62	TRANSISTOR 2SC3440-T12-1F		R698	1-216-841-11	METAL CHIP 47K	5% 1/10W
Q671	8-729-024-43	TRANSISTOR 2SA1365-T112-1EF		R701	1-216-821-11	METAL CHIP 1K	5% 1/10W
Q672	8-729-047-62	TRANSISTOR 2SC3440-T12-1F		R702	1-216-821-11	METAL CHIP 1K	5% 1/10W
Q701	8-729-600-22	TRANSISTOR 2SA1235-F		R703	1-216-829-11	METAL CHIP 4.7K	5% 1/10W
Q702	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R704	1-216-821-11	METAL CHIP 1K	5% 1/10W
Q703	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R705	1-216-821-11	METAL CHIP 1K	5% 1/10W
Q704	1-801-806-11	TRANSISTOR DTC144EKA		R706	1-216-821-11	METAL CHIP 1K	5% 1/10W
Q705	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R707	1-216-821-11	METAL CHIP 1K	5% 1/10W
Q706	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R708	1-216-821-11	METAL CHIP 1K	5% 1/10W
Q707	8-729-120-28	TRANSISTOR 2SC1623-L5L6		R709	1-216-821-11	METAL CHIP 1K	5% 1/10W
		< RESISTOR >		R710	1-216-829-11	METAL CHIP 4.7K	5% 1/10W
R651	1-216-841-11	METAL CHIP 47K	5% 1/10W	R711	1-216-837-11	METAL CHIP 22K	5% 1/10W
R652	1-216-841-11	METAL CHIP 47K	5% 1/10W	R712	1-216-829-11	METAL CHIP 4.7K	5% 1/10W
R653	1-216-841-11	METAL CHIP 47K	5% 1/10W	R713	1-216-833-11	METAL CHIP 10K	5% 1/10W
R657	1-216-853-11	METAL CHIP 470K	5% 1/10W	R714	1-216-833-11	METAL CHIP 10K	5% 1/10W
R661	1-216-841-11	METAL CHIP 47K	5% 1/10W	R715	1-216-821-11	METAL CHIP 1K	5% 1/10W
R662	1-216-841-11	METAL CHIP 47K	5% 1/10W	R716	1-216-821-11	METAL CHIP 1K	5% 1/10W
R663	1-216-841-11	METAL CHIP 47K	5% 1/10W	R717	1-216-821-11	METAL CHIP 1K	5% 1/10W
R664	1-216-841-11	METAL CHIP 47K	5% 1/10W	R718	1-216-821-11	METAL CHIP 1K	5% 1/10W
R665	1-216-841-11	METAL CHIP 47K	5% 1/10W	R719	1-216-821-11	METAL CHIP 1K	5% 1/10W
R666	1-216-817-11	METAL CHIP 470	5% 1/10W	R721	1-216-817-11	METAL CHIP 470	5% 1/10W
R667	1-216-841-11	METAL CHIP 47K	5% 1/10W	R722	1-216-849-11	METAL CHIP 220K	5% 1/10W
				R723	1-216-825-11	METAL CHIP 2.2K	5% 1/10W
				R724	1-216-821-11	METAL CHIP 1K	5% 1/10W
				R725	1-216-821-11	METAL CHIP 1K	5% 1/10W
				R726	1-216-845-11	METAL CHIP 100K	5% 1/10W
				R727	1-216-833-11	METAL CHIP 10K	5% 1/10W
				R728	1-216-833-11	METAL CHIP 10K	5% 1/10W
				R730	1-216-833-11	METAL CHIP 10K	5% 1/10W
				R731	1-216-833-11	METAL CHIP 10K	5% 1/10W

PANEL

PT

TRANSISTOR

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R733	1-216-841-11	METAL CHIP	47K	5%	1/10W	SW705	1-762-875-21	SWITCH, KEYBOARD (DISPLAY)			
R734	1-216-817-11	METAL CHIP	470	5%	1/10W	SW706	1-762-875-21	SWITCH, KEYBOARD (EQ)			
R735	1-216-821-11	METAL CHIP	1K	5%	1/10W	SW708	1-762-875-21	SWITCH, KEYBOARD (▲)			
R736	1-216-833-11	METAL CHIP	10K	5%	1/10W	SW709	1-762-875-21	SWITCH, KEYBOARD (DISC 1)			
R738	1-216-833-11	METAL CHIP	10K	5%	1/10W	SW710	1-762-875-21	SWITCH, KEYBOARD (DISC 2)			
R739	1-216-833-11	METAL CHIP	10K	5%	1/10W	SW711	1-762-875-21	SWITCH, KEYBOARD (STOP ■)			
R742	1-216-821-11	METAL CHIP	1K	5%	1/10W	SW712	1-762-875-21	SWITCH, KEYBOARD (TUNING -/I<<I/◀◀)			
R743	1-216-821-11	METAL CHIP	1K	5%	1/10W	SW713	1-762-875-21	SWITCH, KEYBOARD (TUNING +/I>>I/▶▶)			
R744	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	SW714	1-762-875-21	SWITCH, KEYBOARD (FUNCTION)			
R745	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	SW715	1-762-875-21	SWITCH, KEYBOARD (TUNER/BAND)			
R746	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	SW716	1-762-875-21	SWITCH, KEYBOARD (CD ▶II)			
R747	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	SW719	1-762-875-21	SWITCH, KEYBOARD (DISC 3)			
R748	1-216-841-11	METAL CHIP	47K	5%	1/10W	SW720	1-762-875-21	SWITCH, KEYBOARD (DISC SKIP/EX-CHANGE)			
R749	1-216-821-11	METAL CHIP	1K	5%	1/10W	SW721	1-762-875-21	SWITCH, KEYBOARD (PLAY MODE/TUNING MODE)			
R750	1-216-821-11	METAL CHIP	1K	5%	1/10W	< VIBRATOR >					
R751	1-216-845-11	METAL CHIP	100K	5%	1/10W	X701	1-760-252-12	VIBRATOR, CRYSTAL (32.768kHz)			
R753	1-216-809-11	METAL CHIP	100	5%	1/10W	X702	1-795-054-51	VIBRATOR, CERAMIC (4.19MHz)			
R754	1-216-833-11	METAL CHIP	10K	5%	1/10W	*****					
R755	1-216-864-11	SHORT CHIP	0			A-1144-825-A PT BOARD, COMPLETE					
R756	1-216-821-11	METAL CHIP	1K	5%	1/10W	*****					
R757	1-216-845-11	METAL CHIP	100K	5%	1/10W	< CAPACITOR >					
R758	1-216-821-11	METAL CHIP	1K	5%	1/10W	C051	1-165-621-91	CERAMIC CHIP	0.1uF	50V	
R759	1-216-809-11	METAL CHIP	100	5%	1/10W	C052	1-164-156-11	CERAMIC CHIP	0.1uF	25V	
R760	1-216-845-11	METAL CHIP	100K	5%	1/10W	C053	1-100-385-91	CERAMIC CHIP	0.47uF	25V	
R761	1-216-841-11	METAL CHIP	47K	5%	1/10W	C054	1-100-385-91	CERAMIC CHIP	0.47uF	25V	
R762	1-216-833-11	METAL CHIP	10K	5%	1/10W	C055	1-100-385-91	CERAMIC CHIP	0.47uF	25V	
R763	1-216-837-11	METAL CHIP	22K	5%	1/10W	< DIODE >					
R764	1-216-837-11	METAL CHIP	22K	5%	1/10W	D051	8-719-000-07	DIODE MC2836			
R765	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	D052	6-500-335-01	DIODE MC2838-T112-1			
R766	1-216-837-11	METAL CHIP	22K	5%	1/10W	< COIL >					
R767	1-216-849-11	METAL CHIP	220K	5%	1/10W	△L001	1-402-663-11	TRANSFORMER, LINE FILTER (LFT)			
R768	1-216-833-11	METAL CHIP	10K	5%	1/10W	< TRANSFORMER >					
R769	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	△PT002	1-443-846-11	TRANSFORMER, POWER			
R770	1-216-841-11	METAL CHIP	47K	5%	1/10W	< RESISTOR >					
R771	1-216-821-11	METAL CHIP	1K	5%	1/10W	R051	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R772	1-216-817-11	METAL CHIP	470	5%	1/10W	R052	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R773	1-216-833-11	METAL CHIP	10K	5%	1/10W	< RELAY >					
R774	1-216-837-11	METAL CHIP	22K	5%	1/10W	△RY001	1-755-334-11	RELAY, AC POWER			
R775	1-216-841-11	METAL CHIP	47K	5%	1/10W	*****					
R776	1-216-821-11	METAL CHIP	1K	5%	1/10W	A-1146-444-A TRANSISTOR BOARD, COMPLETE					
R777	1-216-817-11	METAL CHIP	470	5%	1/10W	*****					
R778	1-216-821-11	METAL CHIP	1K	5%	1/10W	< CAPACITOR >					
R779	1-216-809-11	METAL CHIP	100	5%	1/10W	C118	1-164-156-11	CERAMIC CHIP	0.1uF	25V	
R780	1-216-841-11	METAL CHIP	47K	5%	1/10W	C119	1-100-566-91	CERAMIC CHIP	0.1uF	10%	25V
R781	1-216-833-11	METAL CHIP	10K	5%	1/10W	< IC >					
R784	1-216-845-11	METAL CHIP	100K	5%	1/10W	IC101	8-759-701-59	IC NJM78M09FA			
R785	1-216-833-11	METAL CHIP	10K	5%	1/10W						
R786	1-216-797-11	METAL CHIP	10	5%	1/10W						
R787	1-216-805-11	METAL CHIP	47	5%	1/10W						
R788	1-216-864-11	SHORT CHIP	0								
< SWITCH >											
SW700	1-786-417-11	SW, RTRY RE012307PVB30F (VOLUME)				C118	1-164-156-11	CERAMIC CHIP	0.1uF	25V	
SW701	1-762-875-21	SWITCH, KEYBOARD (I/⏻)				C119	1-100-566-91	CERAMIC CHIP	0.1uF	25V	
SW702	1-762-875-21	SWITCH, KEYBOARD (DSGX)				< IC >					
SW703	1-762-875-21	SWITCH, KEYBOARD (⏮→)									
SW704	1-762-875-21	SWITCH, KEYBOARD (⏭+)									
						IC101	8-759-701-59	IC NJM78M09FA			

HCD-EC50

Ver. 1.3

TRANSISTOR

Ref. No.	Part No.	Description	Remark
< CABLE HOLDER >			
WH103	1-824-027-21	HOLDER, CABLE 3P	

MISCELLANEOUS			

61	1-824-048-21	WIRE (FLAT TYPE) (27 CORE)	
103	1-828-974-21	WIRE (FLAT TYPE) (13 CORE)	
105	1-828-643-21	WIRE (FLAT TYPE) (23 CORE)	
159	1-797-375-11	DECK, MECHANICAL (H21SB-C05)	
207	1-797-193-12	MECHANICAL, CD (DLM3A23-11)	
208	1-827-992-11	WIRE (FLAT TYPE) (16 CORE)	
△ 209	A-4735-357-A	OP BASE ASSY (KSM213DHAP/ZRP1)	
△ ACW001	1-769-079-51	CORD, POWER (KR)	
△ ACW001	1-775-790-81	CORD, POWER (AUS)	
△ ACW001	1-790-757-51	CORD, POWER (US,CND)	
△ ACW001	1-830-891-11	CORD, POWER (UK)	
△ ACW001	1-831-370-11	CORD, POWER (AEP, CET, SP)	
△ ACW001	1-832-377-11	CORD, POWER (E3)	
M901	1-787-396-11	D. C. FAN (50 SQUARE) (E3, SP, KR, AUS)	
△ PT001	1-443-845-11	TRANSFORMER, POWER (US, CND)	
△ PT001	1-443-910-11	TRANSFORMER, POWER (AEP, UK, CET)	
△ PT001	1-443-911-11	TRANSFORMER, POWER (E3, SP, KR, AUS)	
S201	1-771-853-11	SWITCH, DETECTION (LIMIT)	

REVISION HISTORY

Clicking the version allows you to jump to the revised page.

Also, clicking the version at the top of the revised page allows you to jump to the next revised page.

[illegible]