

S6. Replacement Parts List

- Note: 1.* Be sure to make your orders of replacement parts according to this list.
2. IMPORTANT SAFETY NOTICE
Components identified with the mark  have the special characteristics for safety.
When replacing any of these components, use only the same type.
3. Unless otherwise specified,
All resistors are in OHMS, K=1,000 OHMS. All capacitors are in MICRO-FARADS (uf), P=uuF.
4. The marking (RTL) indicates the retention time is limited for this item. After the discontinuation of this assembly in production, it will no longer be available.

E.S.D. standards for Electrostatically Sensitive Devices, refer to “PREVENTION OF ELECTROSTATIC DISCHARGE (ESD) TO ELECTROSTATICALLY SENSITIVE (ES) DEVICES” section.

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
##	VEP03H98CP	MAIN PCB UNIT	1	TM700EG,EP,EF,EB,EC (RTL) E.S.D.
##	VEP03H98CQ	MAIN PCB UNIT	1	TM700EE,GC,GK (RTL) E.S.D.
##	VEP03H98CN	MAIN PCB UNIT	1	TM700P,PC,PU,GD (RTL) E.S.D.
##	VEP03H98DP	MAIN PCB UNIT	1	SD700EG,EP,EF,EB,EC, SD707EG (RTL) E.S.D.
##	VEP03H98DQ	MAIN PCB UNIT	1	SD700EE,GC,GN (RTL) E.S.D.
##	VEP03H87B	FLASH PCB UNIT	1	(RTL) E.S.D.
##	VEP20C84A	FRONT PCB UNIT	1	(RTL) E.S.D.
##	VEP29224A	EVF BL PCB UNIT	1	(RTL) E.S.D.
##	VEP04956A	MIC AMP PCB UNIT	1	(RTL) E.S.D.
##	VEP27225A	MF SENS PCB UNIT	1	(RTL) E.S.D.
##	VEP01A32A	BATT CATCHER PCB UNIT	1	(RTL) E.S.D.
##	VEP26330A	MONITOR PCB UNIT	1	(RTL) E.S.D.
##	VEP04957A	MIC AMP FPC UNIT	1	(RTL) E.S.D.
##	VEP20C85A	CAM FUNC PCB UNIT	1	(RTL)
##	VEP06G50A	SIDE R OP PCB UNIT	1	(RTL) E.S.D.
##	VEP03H87B	FLASH PCB UNIT		(RTL) E.S.D.
C3302	ECJ0EB1E472K	C.CAPACITOR CH 25V 4700P	1	
C3303	ECJ0EB1E472K	C.CAPACITOR CH 25V 4700P	1	
C3901	ECJ0EC1H220J	C.CAPACITOR CH 50V 22P	1	
C3902	ECJ0EC1H220J	C.CAPACITOR CH 50V 22P	1	
C3903	ECJ0EC1H220J	C.CAPACITOR CH 50V 22P	1	
C3904	ECJ0EC1H220J	C.CAPACITOR CH 50V 22P	1	
C3905	ECJ0EC1H220J	C.CAPACITOR CH 50V 22P	1	
C3906	ECJ0EB1C103K	C.CAPACITOR CH 16V 0.01U	1	
C3907	ECJ0EB1C103K	C.CAPACITOR CH 16V 0.01U	1	
C3910	F3G0J107A017	C.CAPACITOR CH 6.3V 100U	1	
C3911	F1G0J1050007	C.CAPACITOR CH 6.3V 1U	1	
C3950	F1G1A104A012	C.CAPACITOR CH 10V 0.1U	1	
C7001	F1G0J1050007	C.CAPACITOR CH 6.3V 1U	1	
C7002	ECJ0EC1H150J	C.CAPACITOR CH 50V 15P	1	
C7003	F1J1A106A043	C.CAPACITOR CH 10V 10U	1	
C7004	F2A2F6000001	ALUMINUM NON-SOLID ELECTR	1	
C7005	F1K2E4730005	C.CAPACITOR 250V 0.047U	1	
C7010	F1K2E223A004	C.CAPACITOR 250V 0.022U	1	
D7002	B0ECGP000006	DIODE	1	E.S.D.
D7003	DA2JF8100L	DIODE	1	E.S.D.
HS3901	K1NA09E00115	SD CARD SLOT	1	
IC7001	C0ZBZ0001710	IC	1	E.S.D.
JK3301	K2HZ112E0001	D-TERMINAL	1	
L7001	G1C470MA0249	CHIP INDUCTOR 47UH	1	
LB3301	J0JCC0000408	FILTER	1	
LB3302	J0JCC0000408	FILTER	1	
LB3303	J0JCC0000408	FILTER	1	
LB3304	J0JCC0000276	FILTER	1	
LB3305	J0JCC0000276	FILTER	1	
LB3306	J0JCC0000276	FILTER	1	
P7001	K1KA02B00292	CONNECTOR 2P	1	
P7002	K1KA02BA0022	CONNECTOR 2P	1	
PS7001	K1KB30AA0116	CONNECTOR 30P	1	
Q3901	B1ADKB000015	TRANSISTOR	1	E.S.D.
Q7005	B1JBLP000014	TRANSISTOR	1	E.S.D.
R3311	ERJ2GEJ102X	M.RESISTOR CH 1/16W 1K	1	
R3312	ERJ3RED750V	SURFACE MOUNTING FI & D0	1	
R3313	ERJ3RED750V	SURFACE MOUNTING FI & D0	1	
R3314	ERJ3RED750V	SURFACE MOUNTING FI & D0	1	
R3315	ERJ3RED750V	SURFACE MOUNTING FI & D0	1	
R3901	ERJ2GEJ220	M.RESISTOR CH 1/16W 22	1	
R3902	ERJ2GEJ220	M.RESISTOR CH 1/16W 22	1	
R3903	ERJ2GEJ220	M.RESISTOR CH 1/16W 22	1	
R3904	ERJ2GEJ220	M.RESISTOR CH 1/16W 22	1	

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
R3905	ERJ2GEJ220	M.RESISTOR CH 1/16W 22	1	
R3906	D0YAR0000007	M.RESISTOR CH 1/10W 0	1	
R3907	ERJ2GEJ102X	M.RESISTOR CH 1/16W 1K	1	
R3908	ERJ2GEJ103	M.RESISTOR CH 1/10W 10K	1	
R3909	ERJ2GEJ102X	M.RESISTOR CH 1/16W 1K	1	
R3910	ERJ2GEJ271	M.RESISTOR CH 1/10W 270	1	
R3911	ERJ2GEJ331	M.RESISTOR CH 1/16W 330	1	
R3912	ERJ2GEJ333	M.RESISTOR CH 1/16W 33K	1	
R3913	D0GB150JA057	M.RESISTOR CH 1/10W 15	1	
R3914	ERJ3GEY0R00	M.RESISTOR CH 1/10W 0	1	
R7001	ERJ2GEJ683	M.RESISTOR CH 1/16W 68K	1	
R7002	D1BD8203A119	SURFACE MOUNTING PRECISIO	1	
R7003	ERJ2RHD222	M.RESISTOR CH 1/16W 22K	1	
R7004	ERJ8GEYJ105V	M.RESISTOR CH 1/4W 1M	1	
R7006	ERJ2RHD471X	M.RESISTOR CH 1/16W 470	1	
R7007	ERJ3GEYJ104	M.RESISTOR CH 1/10W 100K	1	
R7011	ERJ3GEYJ104	M.RESISTOR CH 1/10W 100K	1	
R7015	ERJ3GEYJ560	M.RESISTOR CH 1/10W 56	1	
△ R7099	D1JBR102A006	M.RESISTOR CH 1/16W 1K	1	
RX3901	EXB28V103JX	RESISTOR NETWORKS	1	
T7001	G5DYZ0000025	SURFACE MOUNTING SWITCHIN	1	
##	VEP20C84A	FRONT PCB UNIT		(RTL) E.S.D.
C4901	ECJ0EB1E472K	C.CAPACITOR CH 25V 4700P	1	
C4902	ECJ0EB1E472K	C.CAPACITOR CH 25V 4700P	1	
C4903	F1G0J1050007	C.CAPACITOR CH 6.3V 1U	1	
C4905	F3F0J226A032	T.CAPACITOR CH 6.3V 22U	1	
C4906	F3F0J226A032	T.CAPACITOR CH 6.3V 22U	1	
C4908	F1G0J1050007	C.CAPACITOR CH 6.3V 1U	1	
C4909	F1G0J1050007	C.CAPACITOR CH 6.3V 1U	1	
C4910	F3F0J226A032	T.CAPACITOR CH 6.3V 22U	1	
C4913	F1H0J475A010	C.CAPACITOR CH 6.3V 4.7U	1	
C4923	F1G0J1050007	C.CAPACITOR CH 6.3V 1U	1	
C6401	F1J0J106A049	C.CAPACITOR CH 6.3V 10U	1	
C6405	F1G1A104A012	C.CAPACITOR CH 10V 0.1U	1	
D6401	B3AAB0000334	LED	1	E.S.D.
D6402	B3ADB0000147	DIODE	1	E.S.D.
FP6400	K1MY08BA0370	CONNECTOR 8P	1	
FP6402	K1MY06BA0370	CONNECTOR 6P	1	
FP6403	K1MN33AA0094	CONNECTOR 33P	1	
IR6401	B3RBB0000013	REMOTE SENSOR	1	
JK4901	K2HC104B0047	JK, EXT MIC	1	
JK4902	K2HC106E0007	JACK, AV	1	
LB4923	J0JCC0000276	FILTER	1	
LB4924	J0JCC0000276	FILTER	1	
LB4926	J0JCC0000276	FILTER	1	
LB4927	J0JCC0000276	FILTER	1	
LB4928	J0JCC0000276	FILTER	1	
LB4929	J0JCC0000276	FILTER	1	
LB4930	J0JHC0000078	FILTER	1	
Q4901	B1ABDF000017	TRANSISTOR	1	E.S.D.
Q4902	B1ADCF000161	TRANSISTOR	1	E.S.D.
Q4903	B1ABDF000017	TRANSISTOR	1	E.S.D.
Q4904	B1ADCF000161	TRANSISTOR	1	E.S.D.
Q4907	B1ABDF000017	TRANSISTOR	1	E.S.D.
Q4908	B1ABDF000017	TRANSISTOR	1	E.S.D.
Q6401	B1ADGD000005	TRANSISTOR	1	E.S.D.
QR6401	B1GBCFJK0001	TRANSISTOR	1	E.S.D.
QR6403	B1GDCFFYY0010	TRANSISTOR	1	E.S.D.
R4901	ERJ6GEYJ331V	M.RESISTOR CH 1/8W 330	1	
R4902	ERJ2GEJ472	M.RESISTOR CH 1/10W 4.7K	1	
R4904	ERJ6GEYJ562V	M.RESISTOR CH 1/8W 5.6K	1	
R4905	ERJ2GEJ471	M.RESISTOR CH 1/10W 470	1	
R4906	ERJ6GEYJ103V	M.RESISTOR CH 1/8W 10K	1	

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks	Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
R4907	ERJ6GEYJ154V	M.RESISTOR CH 1/8W 150K	1		FP4801	K1MY08BA0370	CONNECTOR 8P	1	
R4908	D0HB563ZA002	RESISTOR	1		FP4802	K1MN21AA0035	CONNECTOR 21P	1	
R4908	ERJ6GEYJ563	M.RESISTOR CH 1/8W 56K	1		FP4803	K1MY12BA0370	CONNECTOR 12P	1	
R4909	ERJ2GEJ102X	M.RESISTOR CH 1/16W 1K	1		FP4804	K1MY04BA0370	CONNECTOR 4P	1	
R4910	ERJ2GEJ562	M.RESISTOR CH 1/10W 5.6K	1		IC4801	C0ABBB000369	IC	1	E.S.D.
R4911	ERJ2GEJ151	M.RESISTOR CH 1/10W 150	1		IC4802	C0ABBB000369	IC	1	E.S.D.
R4912	ERJ2GEJ471	M.RESISTOR CH 1/10W 470	1		IC4803	C0ABBB000369	IC	1	E.S.D.
R4913	ERJ6GEYJ103V	M.RESISTOR CH 1/8W 10K	1						
R4914	ERJ6GEYJ154V	M.RESISTOR CH 1/8W 150K	1		Q4801	B1ABDF000017	TRANSISTOR	1	E.S.D.
R4915	D0HB563ZA002	RESISTOR	1						
R4915	ERJ6GEYJ563	M.RESISTOR CH 1/8W 56K	1		R4801	ERJ6GEYG392	M.RESISTOR CH 1/10W 3.9K	1	
R4916	ERJ2GEJ102X	M.RESISTOR CH 1/16W 1K	1		R4802	ERJ6GEYG392	M.RESISTOR CH 1/10W 3.9K	1	
R4917	ERJ2GEJ562	M.RESISTOR CH 1/10W 5.6K	1		R4803	ERJ6GEYG392	M.RESISTOR CH 1/10W 3.9K	1	
R4918	ERJ2GEJ151	M.RESISTOR CH 1/10W 150	1		R4804	ERJ6GEYG392	M.RESISTOR CH 1/10W 3.9K	1	
R4920	ERJ6GEYJ562V	M.RESISTOR CH 1/8W 5.6K	1		R4805	ERJ6GEYG392	M.RESISTOR CH 1/10W 3.9K	1	
R4922	ERJ2GEJ223	M.RESISTOR CH 1/16W 22K	1		R4806	ERJ2GEJ183	M.RESISTOR CH 1/10W 18K	1	
R4923	ERJ2GEJ683	M.RESISTOR CH 1/16W 68K	1		R4807	ERJ2GEJ683	M.RESISTOR CH 1/16W 68K	1	
R4924	ERJ2GEJ473Y	M.RESISTOR CH 1/10W 47K	1		R4808	ERJ2GEJ183	M.RESISTOR CH 1/10W 18K	1	
R4925	ERJ2GEJ2R2X	M.RESISTOR CH 1/16W 2.2	1		R4809	ERJ2GEJ683	M.RESISTOR CH 1/16W 68K	1	
R6402	ERJ2RKD330	M.RESISTOR CH 1/16W 33	1		R4810	ERJ2GEJ183	M.RESISTOR CH 1/10W 18K	1	
R6403	ERJ2GEJ101	M.RESISTOR CH 1/10W 100	1		R4811	ERJ2GEJ683	M.RESISTOR CH 1/16W 68K	1	
R6412	ERJ3GEYJ390	M.RESISTOR CH 1/10W 39	1		R4812	ERJ2GEJ183	M.RESISTOR CH 1/10W 18K	1	
R6413	ERJ3GEYJ390	M.RESISTOR CH 1/10W 39	1		R4813	ERJ2GEJ683	M.RESISTOR CH 1/16W 68K	1	
R6416	ERJ2GEJ473Y	M.RESISTOR CH 1/10W 47K	1		R4814	ERJ2GEJ183	M.RESISTOR CH 1/10W 18K	1	
R6417	ERJ2GEJ472	M.RESISTOR CH 1/10W 4.7K	1		R4815	ERJ2GEJ683	M.RESISTOR CH 1/16W 68K	1	
					R4816	ERJ2GEJ472	M.RESISTOR CH 1/10W 4.7K	1	
VA4901	D4ED18R00008	VARISTOR	1		R4817	ERJ2GEJ223	M.RESISTOR CH 1/16W 22K	1	
VA4902	D4ED18R00008	VARISTOR	1		R4818	ERJ2GEJ333	M.RESISTOR CH 1/16W 33K	1	
					R6405	ERJ2GEJ222	M.RESISTOR CH 1/10W 2.2K	1	
##	VEP29224A	EVF BL PCB UNIT		(RTL) E.S.D.	ZB6401	K3ZZ00500014	BATTERY HOLDER	1	
C801	F1G1C104A080	C.CAPACITOR CH 16V 0.1U	1						
C802	F1G1C104A080	C.CAPACITOR CH 16V 0.1U	1						
C803	ECJ1VB1A105K	C.CAPACITOR CH 10V 1U	1						
					##	VEP27225A	MF SENS PCB UNIT		(RTL) E.S.D.
D801	B0BC6R2A0266	DIODE	1	E.S.D.	FP6701	K1MY06BA0370	CONNECTOR 6P	1	
D803	B3AFB0000129	DIODE	1	E.S.D.	Q6701	B3NBA0000017	TRANSISTOR	1	E.S.D.
D804	B0BC5R6A0266	DIODE	1	E.S.D.	Q6702	B3NBA0000017	TRANSISTOR	1	E.S.D.
FP801	K1MN21AA0094	CONNECTOR 21P	1		R6701	ERJ2GEJ101	M.RESISTOR CH 1/10W 100	1	
FP802	K1MY20BA0370	CONNECTOR 20P	1		R6702	ERJ2GEJ101	M.RESISTOR CH 1/10W 100	1	
					R6703	ERJ2GEJ332	M.RESISTOR CH 1/16W 3.3K	1	
Q801	B1ABDF000017	TRANSISTOR	1	E.S.D.	R6704	ERJ2GEJ332	M.RESISTOR CH 1/16W 3.3K	1	
R801	ERJ2RHD562	M.RESISTOR CH 1/16W 5.6K	1						
R802	ERJ2RKD910	M.RESISTOR CH 1/16W 91	1						
R803	ERJ2GEJ105	M.RESISTOR CH 1/10W 1M	1		##	VEP01A32A	BATT CATCHER PCB UNIT		(RTL) E.S.D.
R804	ERJ2RHD122	M.RESISTOR CH 1/16W 1.2K	1						
R805	ERJ2RHD122	M.RESISTOR CH 1/16W 1.2K	1		C851	F1G1C104A080	C.CAPACITOR CH 16V 0.1U	1	
R806	ERJ2RHD222	M.RESISTOR CH 1/16W 2.2K	1		C852	F1J0J106A049	C.CAPACITOR CH 6.3V 10U	1	
					C853	F1J0J106A049	C.CAPACITOR CH 6.3V 10U	1	
					C854	F1G0J1050007	C.CAPACITOR CH 6.3V 1U	1	
##	VEP04956A	MIC AMP PCB UNIT		(RTL) E.S.D. 「電池」	C855	F1G0J1050007	C.CAPACITOR CH 6.3V 1U	1	
					C856	F1G1C104A080	C.CAPACITOR CH 16V 0.1U	1	
⚠ B6401	ML-614S/ZTK	BATTERY	1	[ENERGY]	C857	F1G1C104A080	C.CAPACITOR CH 16V 0.1U	1	
					C858	F1H0J225A002	C.CAPACITOR CH 6.3V 2.2U	1	
C4801	ECJ0EB1A473K	C.CAPACITOR CH 10V 0.047U	1		C859	F1H0J225A002	C.CAPACITOR CH 6.3V 2.2U	1	
C4802	ECJ0EC1H680J	C.CAPACITOR CH 50V 68P	1		C860	F1G0J1050007	C.CAPACITOR CH 6.3V 1U	1	
C4803	ECJ0EB1A473K	C.CAPACITOR CH 10V 0.047U	1		C861	F1G1C104A080	C.CAPACITOR CH 16V 0.1U	1	
C4804	ECJ0EC1H680J	C.CAPACITOR CH 50V 68P	1		C862	F1G1C104A080	C.CAPACITOR CH 16V 0.1U	1	
C4805	ECJ0EB1A473K	C.CAPACITOR CH 10V 0.047U	1		C863	ECJ1VB1A105K	C.CAPACITOR CH 10V 1U	1	
C4806	ECJ0EC1H680J	C.CAPACITOR CH 50V 68P	1		C864	F1G0J1050007	C.CAPACITOR CH 6.3V 1U	1	
C4807	ECJ0EB1A473K	C.CAPACITOR CH 10V 0.047U	1		C865	F1G1C104A080	C.CAPACITOR CH 16V 0.1U	1	
C4808	ECJ0EC1H680J	C.CAPACITOR CH 50V 68P	1		C6301	F1G1A104A012	C.CAPACITOR CH 10V 0.1U	1	
C4809	ECJ0EB1A473K	C.CAPACITOR CH 10V 0.047U	1		C6302	F1G1A104A012	C.CAPACITOR CH 10V 0.1U	1	
C4810	ECJ0EC1H680J	C.CAPACITOR CH 50V 68P	1		C6306	F1G0J1050007	C.CAPACITOR CH 6.3V 1U	1	
C4811	F1G1H4710004	C.CAPACITOR CH 50V 470P	1		C6307	F1G0J1050007	C.CAPACITOR CH 6.3V 1U	1	
C4812	F1G1H4710004	C.CAPACITOR CH 50V 470P	1		C6308	F1G1H1020008	C.CAPACITOR CH 50V 1000P	1	
C4813	F1G1H4710004	C.CAPACITOR CH 50V 470P	1		C6309	F1G1H1020008	C.CAPACITOR CH 50V 1000P	1	
C4814	F1G1H4710004	C.CAPACITOR CH 50V 470P	1		C6310	F3F0J476A032	C.CAPACITOR CH 25V 0.01U	1	
C4815	F1G1H4710004	C.CAPACITOR CH 50V 470P	1						
C4816	F3F0J226A032	T.CAPACITOR CH 6.3V 22U	1		FP6301	K1MN23AA0035	CONNECTOR 23P	1	
C4817	F3F0J226A032	T.CAPACITOR CH 6.3V 22U	1		FP6302	K1MY08BA0370	CONNECTOR 8P	1	
C4818	F1G0J1050007	C.CAPACITOR CH 6.3V 1U	1						

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
IC851	C1AB00002388	IC	1	E.S.D.
IC6301	EWTS9CVE11	IC	1	E.S.D.
IC6302	C0DBGFC00009	IC	1	E.S.D.
JK6751	K4ZZ04000049	JACK, BATTERY CATCH	1	
PP601	K1KB50AA0094	CONNECTOR 50P	1	
R851	ERJ2GEJ102X	M.RESISTOR CH 1/16W 1K	1	
R852	ERJ2RHD511	M.RESISTOR CH 1/16W 510	1	
R853	ERJ2RHD102X	M.RESISTOR CH 1/16W 1K	1	
VA6751	D4ED18R00008	VARISTOR	1	
##	VEP26330A	MONITOR PCB UNIT		(RTL) E.S.D.
C502	F1G1A104A012	C.CAPACITOR CH 10V 0.1U	1	
C504	F1G1H1020008	C.CAPACITOR CH 50V 1000P	1	
C505	F1G1H1020008	C.CAPACITOR CH 50V 1000P	1	
C506	F1G1H1020008	C.CAPACITOR CH 50V 1000P	1	
C507	F1G1H1020008	C.CAPACITOR CH 50V 1000P	1	
C901	F1G1E1040001	SURFACE MOUNTING MULTILAY	1	
C902	F1H0J475A010	C.CAPACITOR CH 6.3V 4.7U	1	
C903	F1G0J1050007	C.CAPACITOR CH 6.3V 1U	1	
C905	F1G0J1050007	C.CAPACITOR CH 6.3V 1U	1	
C906	ECJ1VB1A105K	C.CAPACITOR CH 10V 1U	1	
C907	F1G0J1050007	C.CAPACITOR CH 6.3V 1U	1	
C908	ECJ1VB1A105K	C.CAPACITOR CH 10V 1U	1	
C909	F1G0J1050007	C.CAPACITOR CH 6.3V 1U	1	
C910	ECJ1VB1A105K	C.CAPACITOR CH 10V 1U	1	
C911	F1G0J1050007	C.CAPACITOR CH 6.3V 1U	1	
C912	F1H1E105A116	C.CAPACITOR CH 25V 1U	1	
C913	F1H1E105A116	C.CAPACITOR CH 25V 1U	1	
C914	F1G0J1050007	C.CAPACITOR CH 6.3V 1U	1	
C915	F1G0J1050007	C.CAPACITOR CH 6.3V 1U	1	
C916	F1G0J1050007	C.CAPACITOR CH 6.3V 1U	1	
C917	ECJ1VB1A105K	C.CAPACITOR CH 10V 1U	1	
C918	ECJ1VB1A105K	C.CAPACITOR CH 10V 1U	1	
C919	F1G1C104A080	C.CAPACITOR CH 16V 0.1U	1	
D901	B0BC016A0267	DIODE	1	E.S.D.
D902	B3AFB0000321	DIODE	1	E.S.D.
D903	B3AFB0000321	DIODE	1	E.S.D.
D904	B3AFB0000321	DIODE	1	E.S.D.
D905	B3AFB0000321	DIODE	1	E.S.D.
D906	B0JCCD000003	DIODE	1	E.S.D.
D907	B0JCCD000003	DIODE	1	E.S.D.
FP901	K1MY16BA0159	CONNECTOR 16P	1	
FP902	K1MY12BA0159	CONNECTOR 12P	1	
FP903	K1MY04BA0370	CONNECTOR 4P	1	
FP904	K1MY41BA0369	CONNECTOR 41P	1	
FP905	K1MN04B00071	CONNECTOR 4P	1	
R506	ERJ2GEJ104	M.RESISTOR CH 1/10W 100K	1	
R507	ERJ2GEJ104	M.RESISTOR CH 1/10W 100K	1	
R901	ERJ2GEJ824	M.RESISTOR CH 1/16W 820K	1	
R902	ERJ3GEY0R00	M.RESISTOR CH 1/10W 0	1	
R903	ERJ3GEY0R00	M.RESISTOR CH 1/10W 0	1	
##	VEP04957A	MIC AMP FPC UNIT		(RTL) E.S.D.
PP6003	K1KA20A00275	CONNECTOR 20P	1	
##	VEP20C85A	CAM FUNC PCB UNIT		(RTL)
S6601	K0F111A00589	SWITCH	1	

[illegible]

Ref.No.	Part No.	Part Name & Description	Pcs	Remarks	Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
6	VEP03H89D	ESD PCB UNIT	1	(TM700) (RTL) E.S.D.					
7	VWJ2172	ESD FPC	1	(TM700)					
33	VYK3Q67	FRONT CASE UNIT	1	(-K)					
33	VYK3Q68	FRONT CASE UNIT	1	(-S)					
34	VYK3Q71	BARIA CASE UNIT	1						
35	VGL1326	TARY PANEL LIGHT	1						
36	VGL1309	AF PANEL LIGHT	1						
37	N9ZZ00000415	BARRIER MOTOR UNIT	1						
38	EFN-MVBH7ZC	FLASH	1						
39	VGQ0K50	LENS ORNAMENT SHEET	1						
40	VGQ0K49	MF FRONT FRAME	1						
41	VGQ0K51	MF SHEET	1						
42	VGQ0K53	MF PCB HOLDER	1						
43	VEP27225A	MF SENS PCB UNIT	1	(RTL) E.S.D.					
44	VWJ2134	MF SENS FPC	1						
45	K0RE00900046	OPERATION BUTTON UNIT	1						
46	VYK3Q38	TOP CASE UNIT	1	(-K)					
46	VYK3Q40	TOP CASE UNIT	1	(-S)					
47	VMP9581	TOP FRAME	1						
48	VEP20C85A	CAM FUNC PCB UNIT	1	(RTL)					
49	VGU0F89	CAMERA OP BUTTON	1						
50	VGQ0K85	CAMERA OP CASE	1						
51	VMP9616	CAMERA OP ANGLE	1						
52	VGQ0K35	MIC CASE	1						
53	VGQ0C85	MIC CUSHION (A)	1						
54	VGQ0C86	MIC CUSHION (B)	1						
55	VGQ0C87	MIC CUSHION (C)	1						
56	VGQ0L66	MIC SHEET	1						
57	VEP24186B	ECM FPC UNIT	1						
78	VEP04956A	MIC AMP PCB UNIT	1	(RTL) E.S.D.					
79	VEP04957A	MIC AMP FPC UNIT	1	(RTL) E.S.D.					
80	VYK3Q32	COVER BOARD UNIT	1						
81	VYK3Q51	SIDE CASE (L) UNIT	1						
82	VYK3Q31	SENSOR COVER UNIT	1						
85	VEP20C84A	FRONT PCB UNIT	1	(RTL) E.S.D.					
99	VGQ0M74	CUSHION	1						
100	VGQ0M76	SHEET	1						
B14	VHD1814	SCREW	1						
B15	VHD1814	SCREW	1						
B16	VHD1814	SCREW	1						
B17	VHD1814	SCREW	1						
B18	XQN16+BJ5FN	SCREW	1						
B19	XQN16+BJ5FN	SCREW	1						
B20	XQN16+BJ10FN	SCREW	1						
B21	XQN14+BJ5FN	SCREW	1						
B26	XQN16+B3FN	SCREW	1						
B27	XQN16+B3FN	SCREW	1						
B28	XQN16+BJ4FN	SCREW	1						
B29	XQN16+BJ4FN	SCREW	1						
B30	XQN16+BJ4FN	SCREW	1						
B31	XQN16+BJ4FN	SCREW	1						
B32	XQN16+BJ4FN	SCREW	1						
B33	XQN16+BJ4FN	SCREW	1						
B34	XQN16+BJ4FN	SCREW	1						
B35	XQN16+BJ4FN	SCREW	1						
B36	XQN16+BJ4FN	SCREW	1						
B37	XQN16+BJ4FN	SCREW	1						
B47	VHD1907	SCREW	1						
B48	VHD1907	SCREW	1						
B57	VHD2189	SCREW	1						
B66	XQN16+B4FJK	SCREW	1						
B67	XQN16+B4FJK	SCREW	1						
B68	XQN16+B4FJK	SCREW	1						
B69	XQN16+B4FJK	SCREW	1						
B70	XQN16+B4FJK	SCREW	1						
B71	XQN16+B4FJK	SCREW	1						
B72	XQN16+B4FJK	SCREW	1						
B73	XQN16+B4FJK	SCREW	1						
B75	XQN16+B4FJK	SCREW	1						
B82	XQN16+B3FN	SCREW	1						
B83	XQN16+B3FN	SCREW	1						

[illegible]

[illegible]


[illegible]

[illegible]


Ref.No.	Part No.	Part Name & Description	Pcs	Remarks	Ref.No.	Part No.	Part Name & Description	Pcs	Remarks
301	K2GJYDC00004	DC CABLE	1						
302	K1HY12YY0004	MULTI D/RCA CABLE	1						
303	K1HY04YY0032	USB CABLE	1						
305	N2QAC000024	REMOTE CONTROL UNIT	1						
△ 306	DE-A51CB	POWER CHARGERS	1	TM700EG, EP, EF, EB, EC, EE, PU, GC, GT, GD, SD700EG, EP, EF, EB, EC, EE, GC, GN, SD707EG					
△ 306	DE-A51BB	AC ADAPTOR	1	TM700P, PC					
△ 306	DE-A51DA	AC ADAPTOR	1	TM700GK					
307	VG00C14	TOUCH PEN	1						
308	VYC0996	ATTACHMENT SHOE UNIT	1						
309		CD-ROM	1	TM700EG, EP, EF, EB, EC, EE, P, PC, PU, GC, GT, GD, SD700EG, EP, EF, EB, EC, EE, GC, GN, SD707EG					
310	VPF1294	BAG, POLYETHYLENE	1						
△ 311	VQT2M81	OPERATING INSTRUCTIONS	1	TM700EG, SD700EG, SD707EG					
△ 311	VQT2M82	OPERATING INSTRUCTIONS	1	TM700EG, SD700EG, SD707EG					
△ 311	VQT2M83	OPERATING INSTRUCTIONS	1	TM700EG, SD700EG, SD707EG					
△ 311	VQT2M88	OPERATING INSTRUCTIONS	1	TM700EP, SD700EP					
△ 311	VQT2M89	OPERATING INSTRUCTIONS	1	TM700EP, SD700EP					
△ 311	VQT2M84	OPERATING INSTRUCTIONS (FRENCH)	1	TM700EF, SD700EF					
△ 311	VQT2M90	OPERATING INSTRUCTIONS (ENGLISH)	1	TM700EB, SD700EB					
△ 311	VQT2M85	OPERATING INSTRUCTIONS	1	TM700EC, SD700EC					
△ 311	VQT2M86	OPERATING INSTRUCTIONS	1	TM700EC, SD700EC					
△ 311	VQT2M87	OPERATING INSTRUCTIONS	1	TM700EC, SD700EC					
△ 311	VQT2M94	OPERATING INSTRUCTIONS (RUSSIAN)	1	TM700EE, SD700EE					
△ 311	VQT2M95	OPERATING INSTRUCTIONS (UKRAINIAN)	1	TM700EE, SD700EE					
△ 311	VQT2M75	OPERATING INSTRUCTIONS	1	TM700P, PC					
△ 311	VQT2M76	OPERATING INSTRUCTIONS (CANADIAN FRENCH)	1	TM700PC					
△ 311	VQT2M77	OPERATING INSTRUCTIONS (ENGLISH)	1	TM700PU					
△ 311	VQT2M78	OPERATING INSTRUCTIONS	1	TM700PU					
△ 311	VQT2M91	OPERATING INSTRUCTIONS	1	TM700GC, SD700GC					
△ 311	VQT2M92	OPERATING INSTRUCTIONS	1	TM700GC, SD700GC					
△ 311	VQT2M93	OPERATING INSTRUCTIONS	1	TM700GC, SD700GC					
△ 311	VQT2M79	OPERATING INSTRUCTIONS (CHINESE (SIMPLIFIED))	1	TM700GT					
△ 311	VQT2M97	OPERATING INSTRUCTIONS (CHINESE (TRADITIONAL))	1	TM700GK					
△ 311	VQT2M96	OPERATING INSTRUCTIONS (ENGLISH)	1	SD700GN					
△ 311	VQT2M80	OPERATING INSTRUCTIONS	1	TM700GD					
312	VFF0612	CD-ROM (O/I)	1	TM700GC, SD700GC					
312	VFF0613	CD-ROM (O/I)	1	TM700EG, EP, EC, SD700EG, EP, EC, SD707EG					
313	VP62D65	PACKING CASE	1	TM700EG, EP, EF, EB, EC, EE, PU, GC, GT, GD					
313	VP62D64	PACKING CASE	1	TM700P, PC					
313	VYQ5243	PACKING CASE UNIT	1	TM700GKK					
313	VP62D71	PACKING CASE	1	(SD700)					
313	VP62K32	PACKING CASE	1	SD707EGK					
313	VYQ5563	PACKING CASE UNIT	1	SD707EGS					
314	VPN6971	PAD	1						
315	VPF1377	PROTECT BAG	1						
△ 316	K2CT39A00002	AC CABLE	1	TM700EB, GC, SD700EB, GC					
△ 317	K2CA2CA00025	AC CABLE	1	TM700P, PC, PU					
△ 317	K2CA29A00021	AC CABLE	1	TM700GT					
△ 317	K2CA2YY00070	AC CABLE	1	TM700GK					
△ 320	K2CJ29A00002	AC CABLE	1	SD700GN					
321	----	BATTERY PACK	1						
△ 324	K2CQ29A00002	AC CABLE	1	TM700EG, EP, EF, EC, EE, GC, SD700EG, EP, EF, EC, EE, GC, SD707EG					
△ 324	K2CR29A00001	AC CABLE	1	TM700GD					

S7. Exploded View


S7.1. Frame and Casing Section (1)

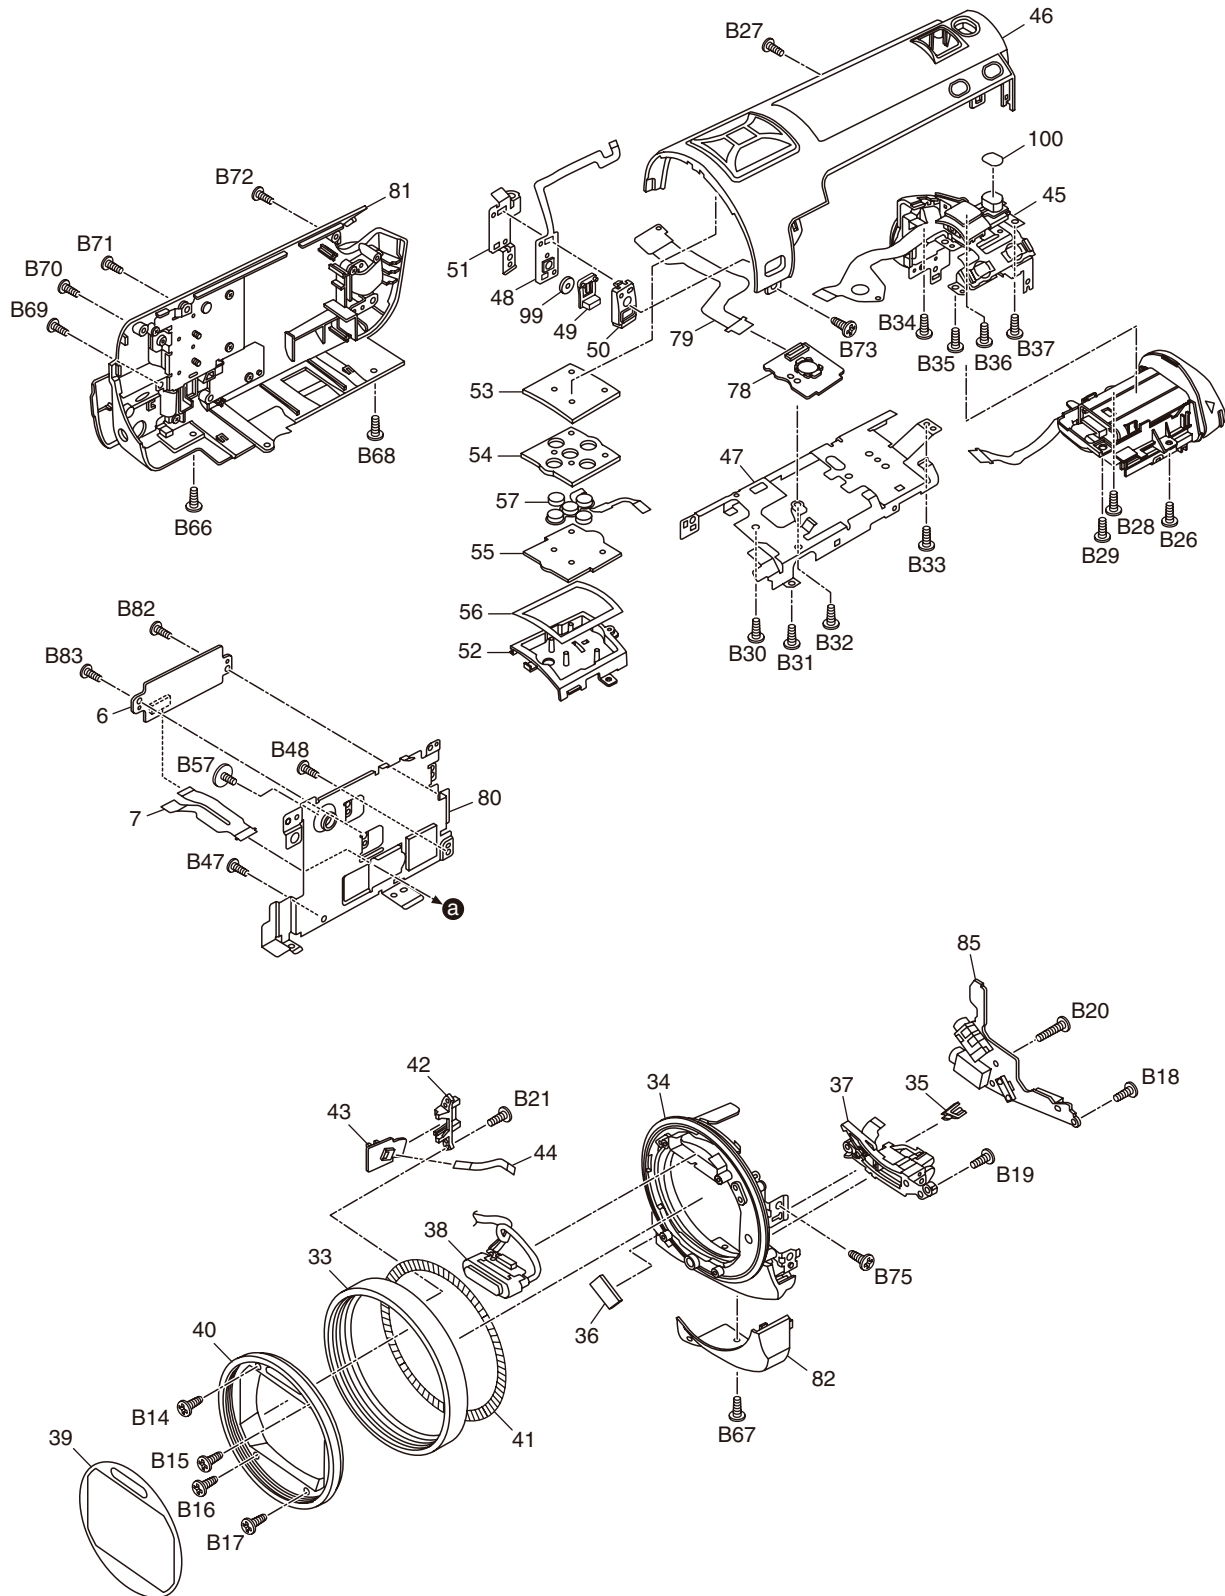


S7.2. Frame and Casing Section (2)

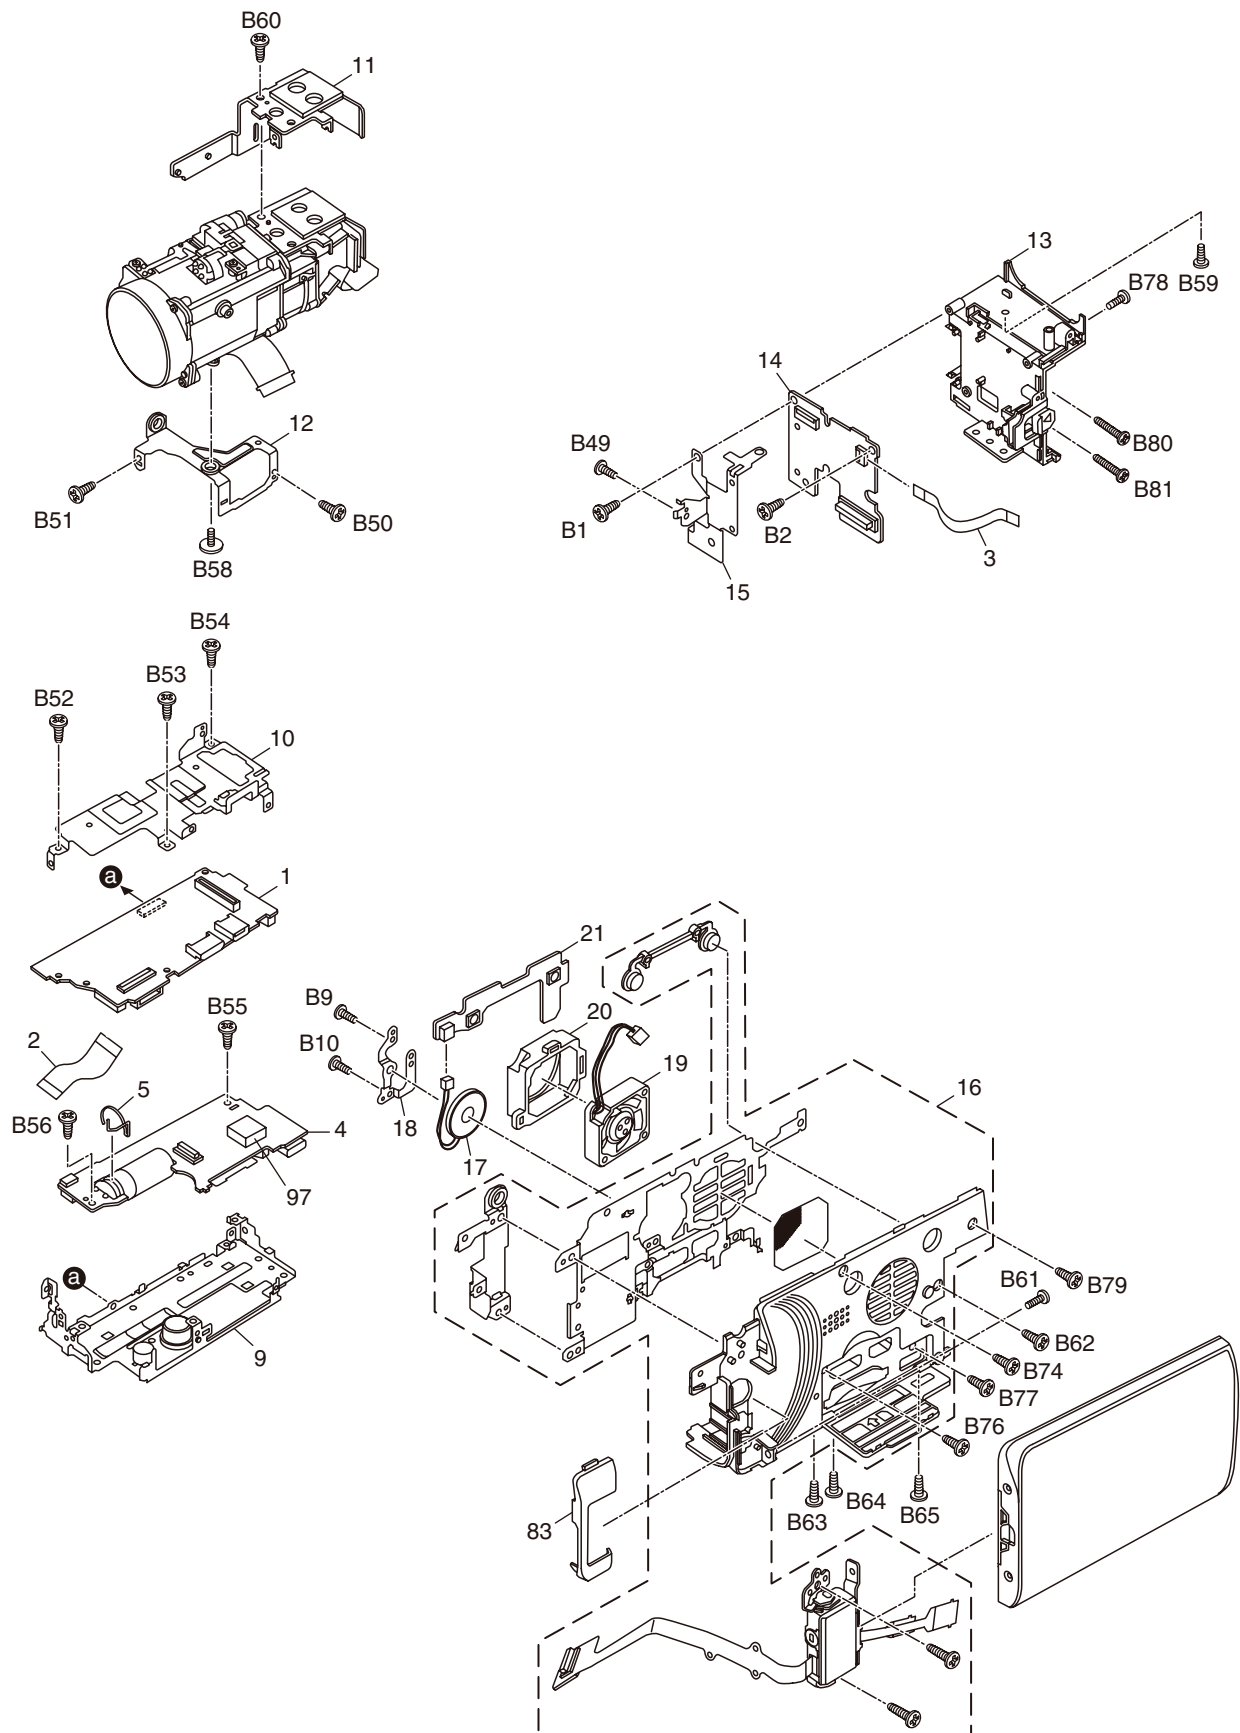


S7.3. EVF Section

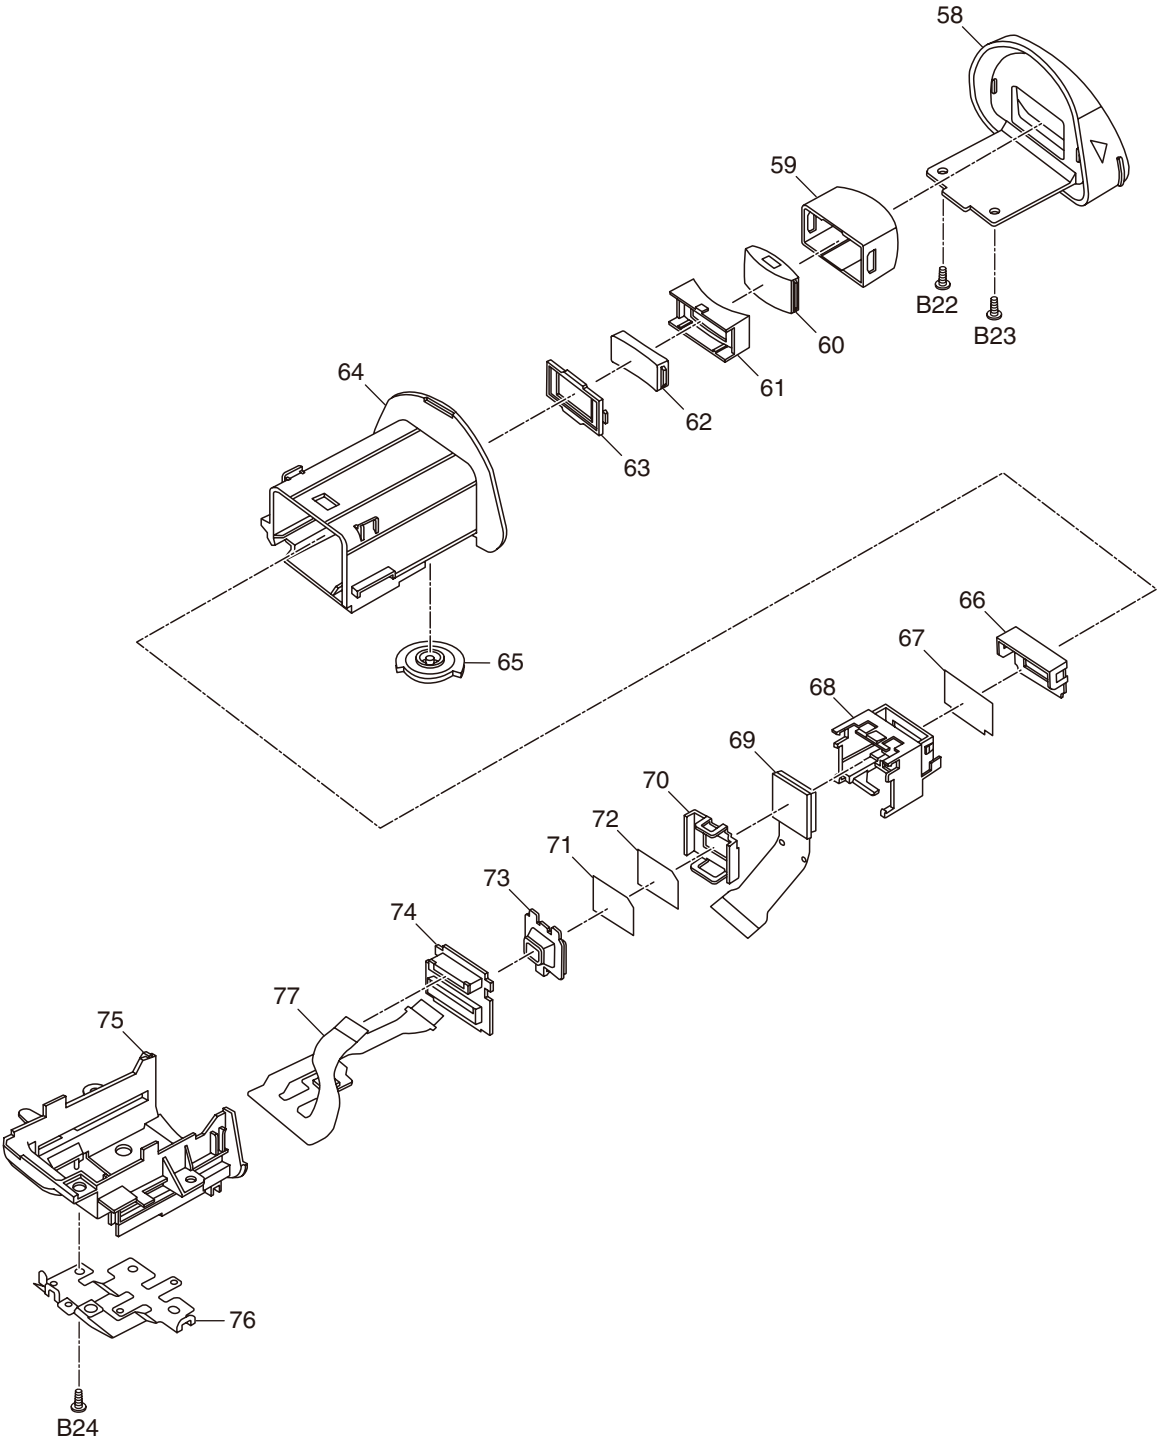

S7.4. LCD Section

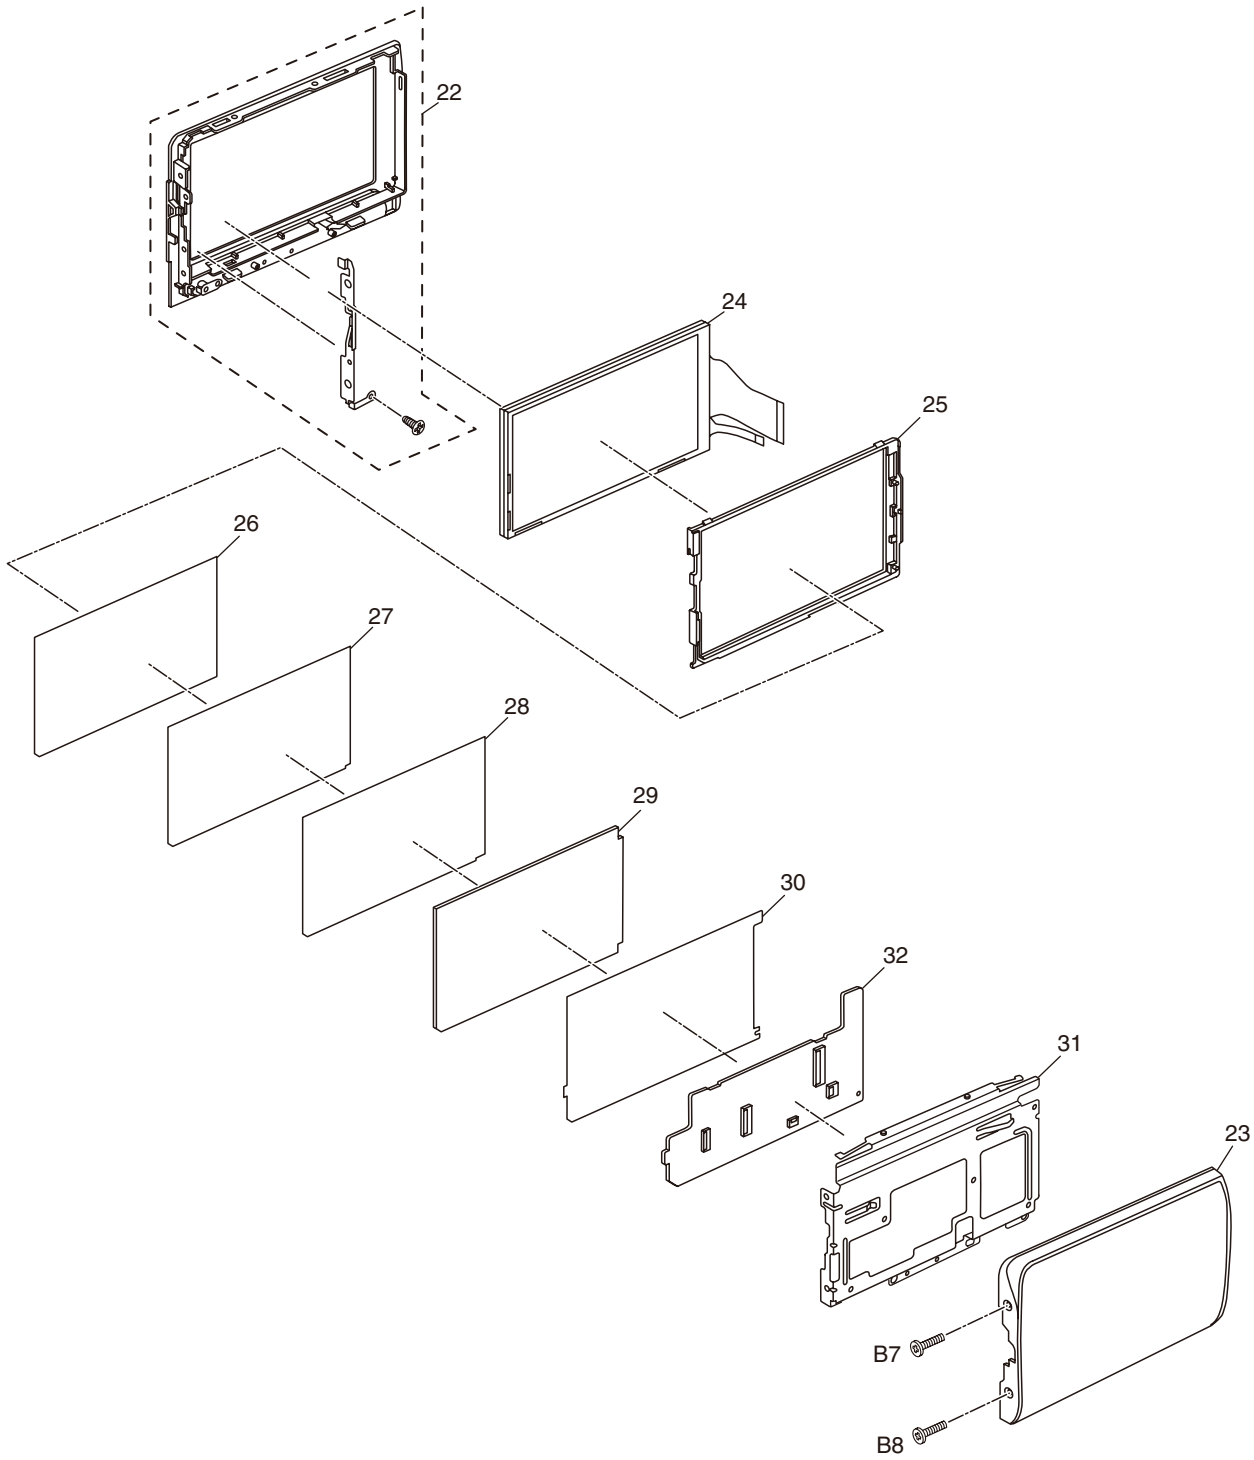

S7.5. Camera Lens Section

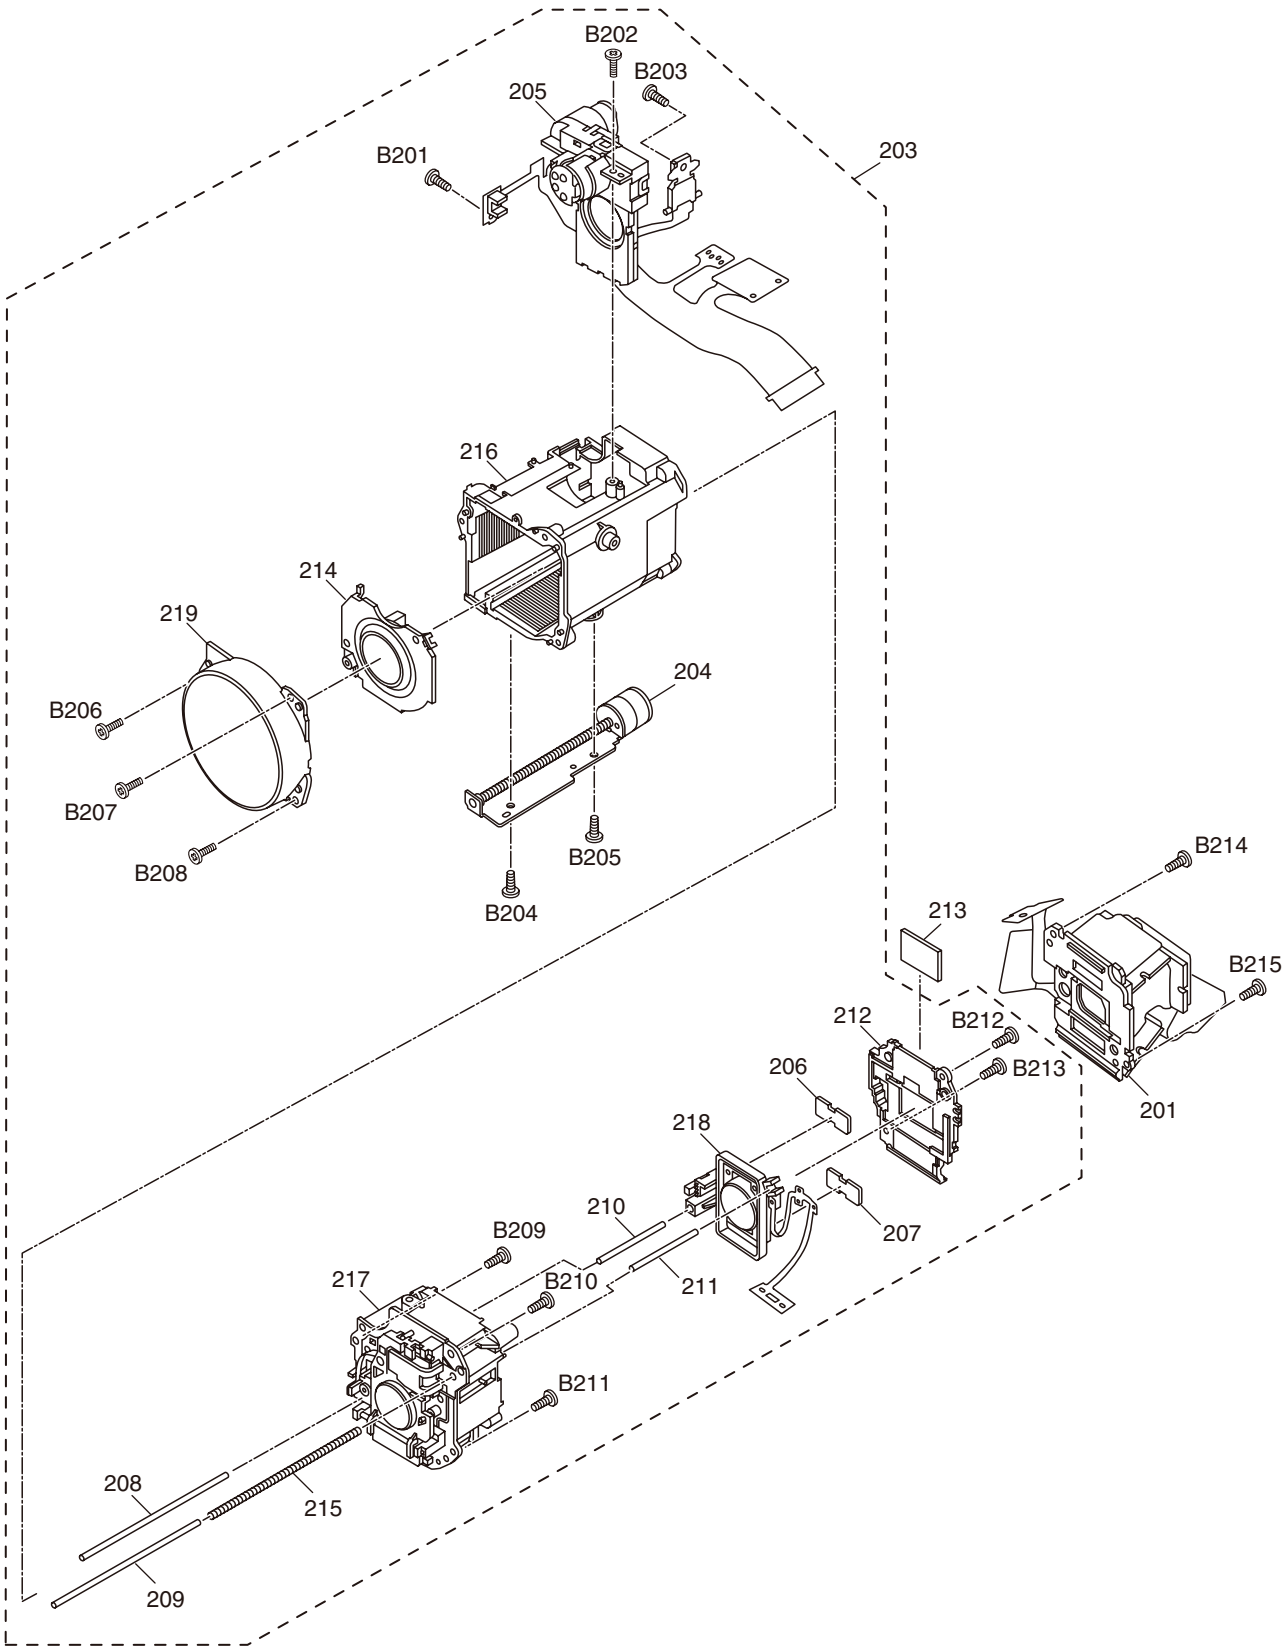

S7.6. Packing Parts and Accessories Section

