

# Service Manual

Microwave Oven



**NN-A774SBEPG**  
**NN-A734MBEPG**  
**NN-A764WBEPG**  
**NN-A764WBWPG**



## ! WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity must be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with this service information by anyone else could result in serious injury or death.

## IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by (!) in the schematic diagrams, circuit board diagrams, exploded views and replacement parts lists. It is essential that these critical parts are replaced with parts specified by the manufacturer, preventing shock, fire or other hazards. Do not modify the original design without permission from the manufacturer.

**Panasonic®**

## EPG

Power source	230 V AC Single Phase 50Hz
Power requirements	Microwave 1250W
	Grill 1350W
	Convection 1470W
	Combi 2770W
Output (IEC60705)	Microwave 1000W
	Grill1300W
	Convection 1400W
Microwave frequency	2450Mhz
Timer	99 min 99 second
Oven cavity size	27L
Outside dimensions	510mm(W) x 477mm(D) X 304MM (H)
Inside dimensions	359mm(W) X 352mm(D) x 217mm(H)
Weight	15Kg
Specifications subject to change without notice	

## WPG

Power source	230 V AC Single Phase 50Hz
Power requirements	Microwave 1260W
	Grill 1360W
	Convection 1470W
	Combi 2150W
Output (IEC60705)	Microwave 1000W
	Grill1300W
	Convection 1400W
Microwave frequency	2450Mhz
Timer	99 min 99 second
Oven cavity size	27L
Outside dimensions	510mm(W) x 477mm(D) X 304MM (H)
Inside dimensions	359mm(W) X 352mm(D) x 217mm(H)
Weight	15Kg
Specifications subject to change without notice	

# 1 Contents

1	Contents . . . . .	3
2	Feature Chart . . . . .	4
3	Control Panel . . . . .	5
4	Inverter Warnings . . . . .	6
5	Schematic Diagram. . . . .	7
6	Wiring Diagram . . . . .	8
7	Description of the Operation Sequence . . . . .	9
8	Cautions to be Observed when Troubleshooting . . . . .	11
9	Part Replacement Proceedure . . . . .	14
10	Component Test Proceedure . . . . .	17
11	Measurements and Adjustments . . . . .	19
12	Troubleshooting Guide . . . . .	20
13	Parts List . . . . .	26
14	Exploded View . . . . .	29
15	Door Assy . . . . .	30
16	Escutcheon Base. . . . .	32
17	Packing and Accesories . . . . .	34
18	Trim Kit. . . . .	35
19	Digital Programmer Circuit. . . . .	36


## 2 Feature Chart

Function	EPG Models
Microwave	4
Grill	1
Convection	17
Combi	Yes
Weight Reheat	1
Weight Cook	4
Weight Combination	11
Weight Defrost	2
Weight Crisp	1
Delay / Stand	Yes
Kg / lb	No
Stage Cooking	1
Clock	24 h
Word prompt	French, Dutch, English, German, Italian, Spanish, Polish, no language

Function	WPG Model
Microwave	4
Grill	1
Convection	17
Combi	Yes
Weight Reheat	1
Weight Cook	4
Weight Combination	9
Weight Defrost	2
Weight Crisp	0
Delay / Stand	Yes
Kg / lb	No
Stage Cooking	1
Clock	24 h
Word prompt	French, German, English, Italian, no language

### 3 Control Panel

NN-A774/NN-A734/NN-A764\*

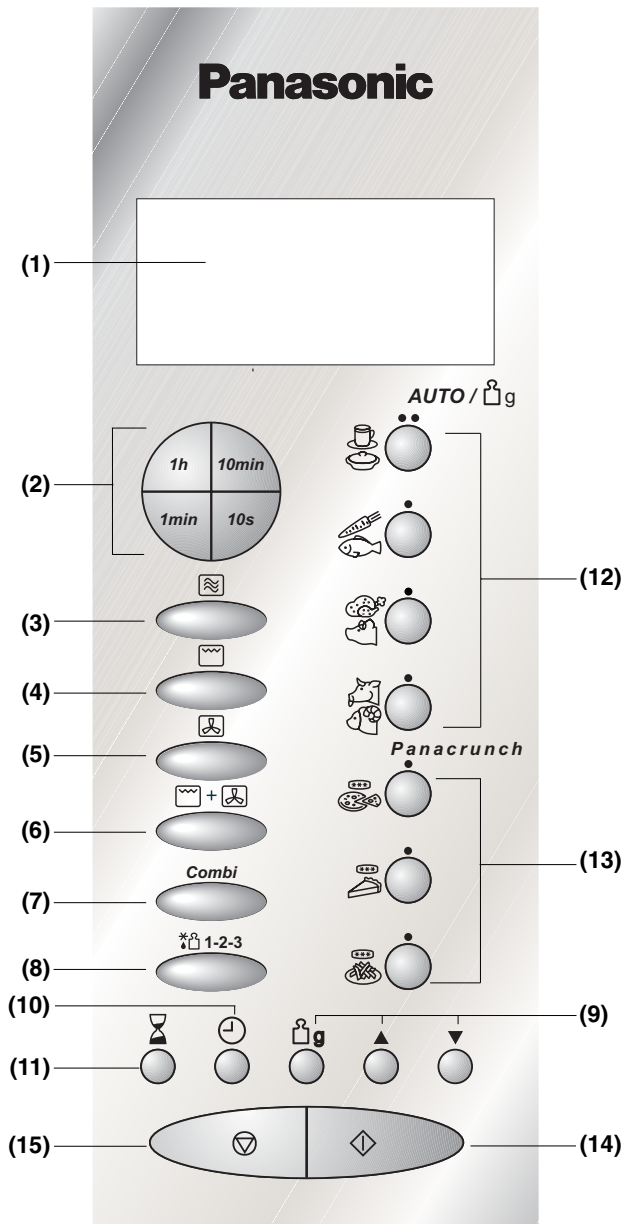

- (1) Display Window
- (2) Time Pads
- (3) Microwave Power Pad
- (4) Grill Power Pad
- (5) Convection Pad
- (6) Grill Convection Pad
- (7) Combination Pad
- (8) Auto Defrost Pad
- (9) Weight Select Pads
- (10) Clock Pad
- (11) Delay/Stand Pad
- (12) Auto Weight Program Pads
- (13) Panacrunch Program Pads
- (14) Start Pad:

Press to start operating the oven.

If during cooking the door is opened or Stop/Cancel Pad is pressed once, Start Pad has to be pressed again to continue cooking.

- (15) Stop/Cancel Pad:


**Before cooking:** one press clears your instructions.

**During cooking:** one press temporarily stops the cooking program. Another press cancels all your instructions and the time of day will appear in the display.

\*The design of your control panel may vary from the panel displayed (depending on colour), but the words on the pads will be the same.

## 4 Inverter Warnings

The inverter circuit board supplies the magnetron tube with a very high voltage (4000 volts).

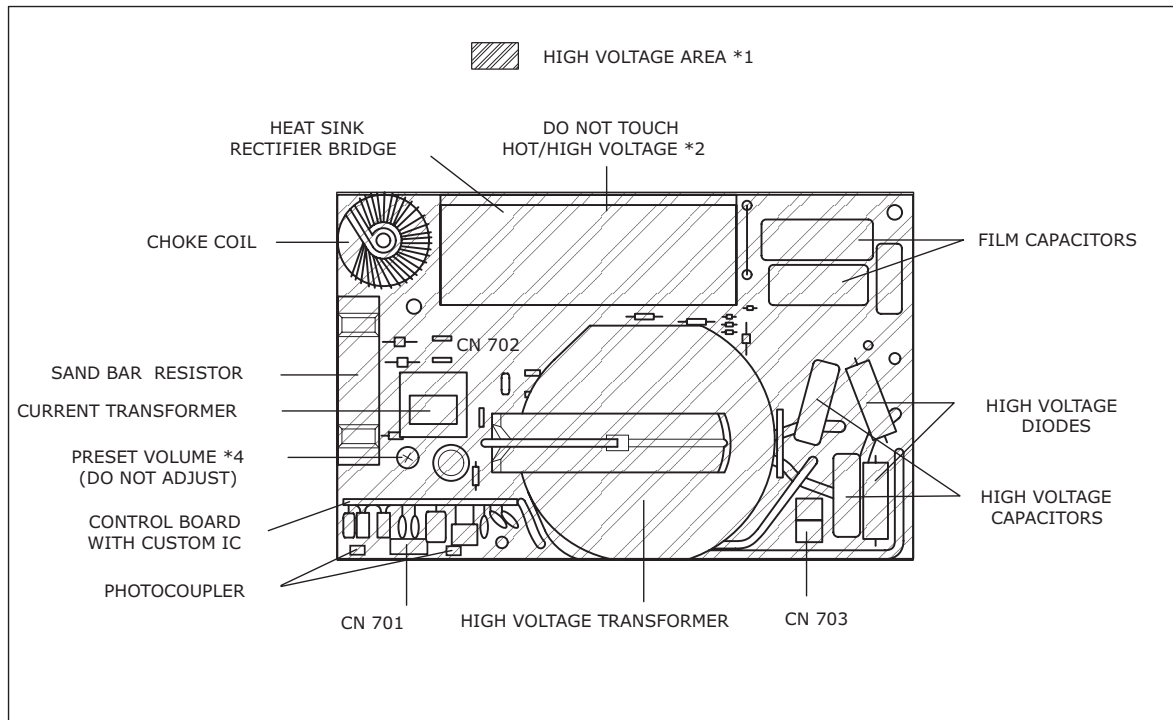

### Danger

- The inverter circuit board operates at high voltages and high temperatures.

### The Inverter PCB

- Operates at a very high voltage and current.
- Has an aluminium heat sink which becomes very hot.
- Has capacitors in the circuitry that hold a high voltage charge even when the oven is not operating.

### Warning

- Do not touch the high voltage circuit. When replacing the board care must be taken to avoid possible electric shock.
- Do not touch the aluminium heat sink as it is part of the high voltage circuit and becomes very hot.
- **Do not attempt to repair the inverter PCB, this can be very dangerous. Replace the high voltage inverter circuit as a complete unit.**
- Do not adjust or tamper with the pre-set volume on the inverter board. It is very dangerous to adjust this pre-set without proper test equipment.
- Do not operate the microwave oven when the inverter grounding plate and fixing screw is loose. It is very dangerous to operate the inverter circuit board without a proper ground connection.



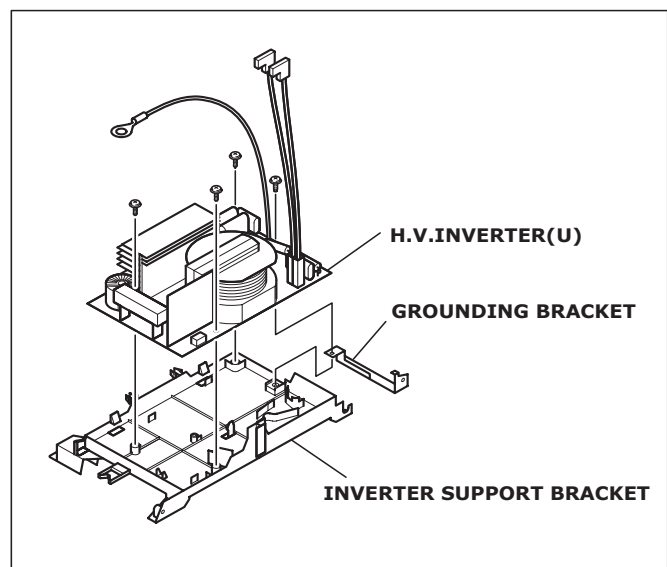


figure 1 Assembly of the inverter circuit board



## 5 Schematic Diagram

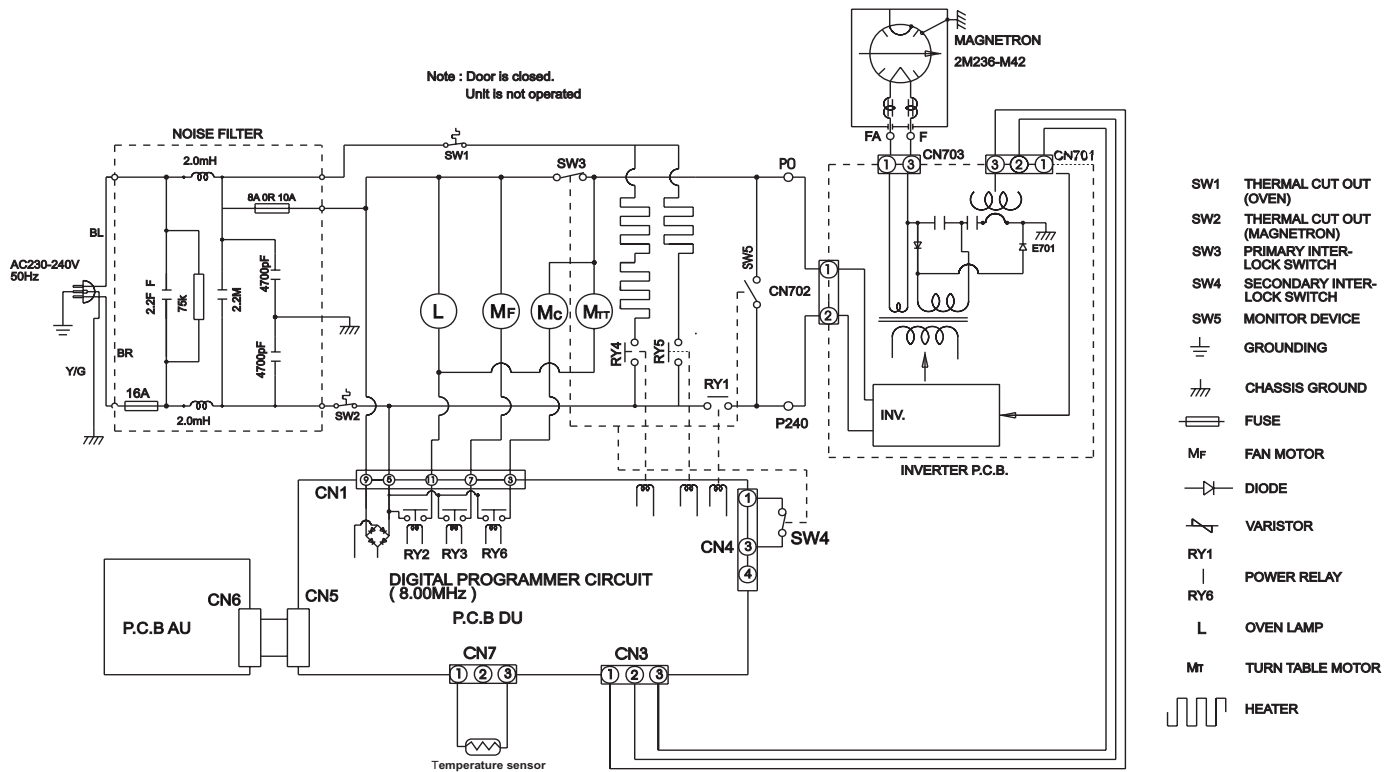



6 Wiring Diagram

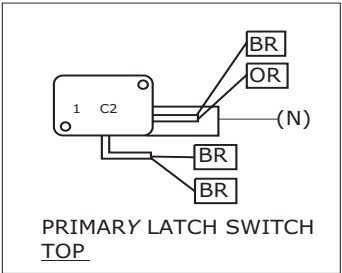

NOTE WHEN REPLACING ANY COMPONENTS RECONNECT THE WIRE HARNESS ACCORDING TO THE COLOURS BELOW  
COLOURS INDICATED INSIDE BRACKETS ( ) INDICATE THE COLOUR OF THE CONNECTOR HOUSING

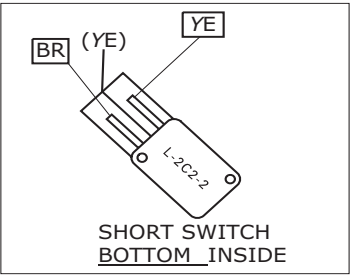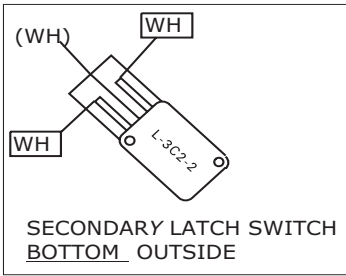

CAUTION  
HEAT SINK  
(HOT TO THE TOUCH)  
DO NOT TOUCH  
AND TEMPERATURE

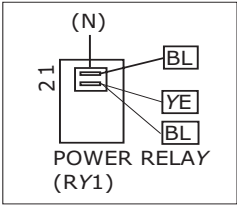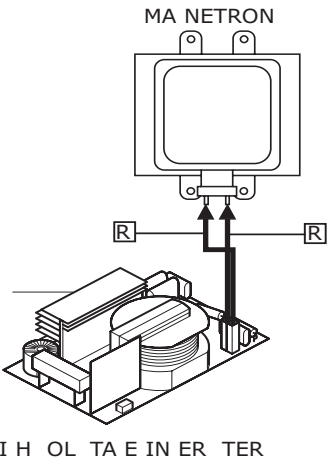

SYMBOL	COLOUR
BL	BLUE
BK	BLACK
BR	BROWN
WH	WHITE
YE	YELLOW
N	NATURAL
R	RED



## 7 Description of the Operating Sequence

### 7.1 Variable power cooking control

The output power is controlled by the inverter power supply. The level of output from the inverter circuit is controlled by a pulse width modulated signal from the digital programmer circuit (DPC). The digital programmer circuit operates relay RY1 to supply power to the inverter circuit.

**NOTE:** If the microwave cooking time is longer than 3 minutes, the cooling fan will operate for 1 minute to cool the oven and its electronic components.

### 7.2 Auto weight defrost, Auto weight Cook

When an auto control feature is selected and the start

pad pressed:

1. The digital programmer circuit determines the power level and the cooking time and indicates the operating state in the display. The table shows the corresponding cooking times and weights for the selected category.
2. When the cooking time in the display window has elapsed, the oven turns off automatically via the control signal from the digital programmer circuit.

**Note: After auto cooking if the oven temperature is over the predetermined temperature the fan motor rotates to cool the oven and its components.**

#### EPG MODEL

Auto weight defrost

Category	1st Touch weight	Cooking time
Defrost Small Pieces	300g	5 Min 40 Sec
Defrost Big Piece	600g	7 Min 30 Sec
Frozen Bred	100g	3 Min 55 Sec

Auto Weight Cook

Category	1st Touch volume/weight	Cooking time
1. Cup	150cc	1 Min 20 Sec
2. Bowl	300cc	2 Min 20 Sec
3. Reheat Meal	500g	3 Min 35 Sec
4. Gratin	400g	12 Min 00 Sec
5. Fresh Vegetables	500g	12 Min 30 Sec
6. Fresh Fish	300g	4 Min 00 Sec
7. Chicken Pieces	500g	13 Min 00 Sec
8. Whole Chicken	1200g	21 Min 55 Sec
9. Pork	1000g	28 Min 20 Sec
10. Beef	800g	23 Min 25 Sec
11. Lamb	1200g	28 Min 00 Sec
12. Chilled Pizza	300g	8 Min 10 Sec
13. Frozen Pizza	200g	10 Min 00 Sec
14. Chilled Quiche	300g	6 Min 54 Sec
15. Frozen Quiche	300g	11 Min 30 Sec
16. Fries	300g	14 Min 00 Sec

#### WPG MODEL

Auto weight defrost

Category	1st Touch weight	Cooking time
Small Pieces	500g	6 Min 42 Sec
Big Pieces	1000g	21 Min 15 Sec
Frozen Bread and Rolls	50g	6 Min 00 Sec

## Auto Weight Cook

Category	1st Touch weight	Cooking time
1. Reheat	300g	3 Min 00 Sec
2. Frozen Reheat	300g	7 Min 00 Sec
3. Vegetables	500g	10 Min 20 Sec
4. Fish	500g	5 Min 00 Sec
5. Rice	200g	14 Min 45 Sec
6. Rice Pudding	600g	4 Min 00 Sec
7. Roast Pork	1000g	36 Min 20 Sec
8. Roast Beef	700g	16 Min 25 Sec
9. Poultry	500g	16 Min 15 Sec
10. Frozen Chicken Pieces	500g	23 Min 50 Sec
11. Jacket Potatoes	500g	14 Min 00 Sec
12. Fresh Lasagne Gratin	1000g	20 Min 20 Sec
13. Frozen Pizza	300g	12 Min 30 Sec
14. Frozen Potato products	300g	17 Min 00 Sec

## 8 Cautions to be Observed when Troubleshooting

The microwave oven is a high voltage, high current device. Although it is free from danger in ordinary use, extreme care should be taken during repair.

**Caution:** Servicemen should remove their watches whenever working close to or replacing the magnetron.

### 8.1 Check the grounding

Do not operate the microwave oven on a two wire extension cord. The microwave oven is designed to be used only when grounded. It is imperative that the appliance is properly grounded before beginning repair work.

### 8.2 Inverter Warnings

**DANGER, HIGH VOLTAGE AND HIGH TEMPERATURES ON THE INVERTER POWER SUPPLY**

This high voltage inverter power supply supplies very high voltage and current to the magnetron. Though it is free from danger in ordinary use, extreme care should be taken during repair. This circuit looks like a TV flyback transformer, however, the currents and voltages in this circuit are very high, this means this circuit is extremely dangerous.

The aluminium heat sink is also energized with high voltage, never touch this heat sink when the microwave oven is plugged into the mains outlet. The collector of the power device (IGBT) is directly connected to the aluminium heat sink.

The aluminium heat sink becomes very hot when the inverter circuit operates. Never touch this heat sink during operation and allow time for it to cool down before servicing the microwave oven.

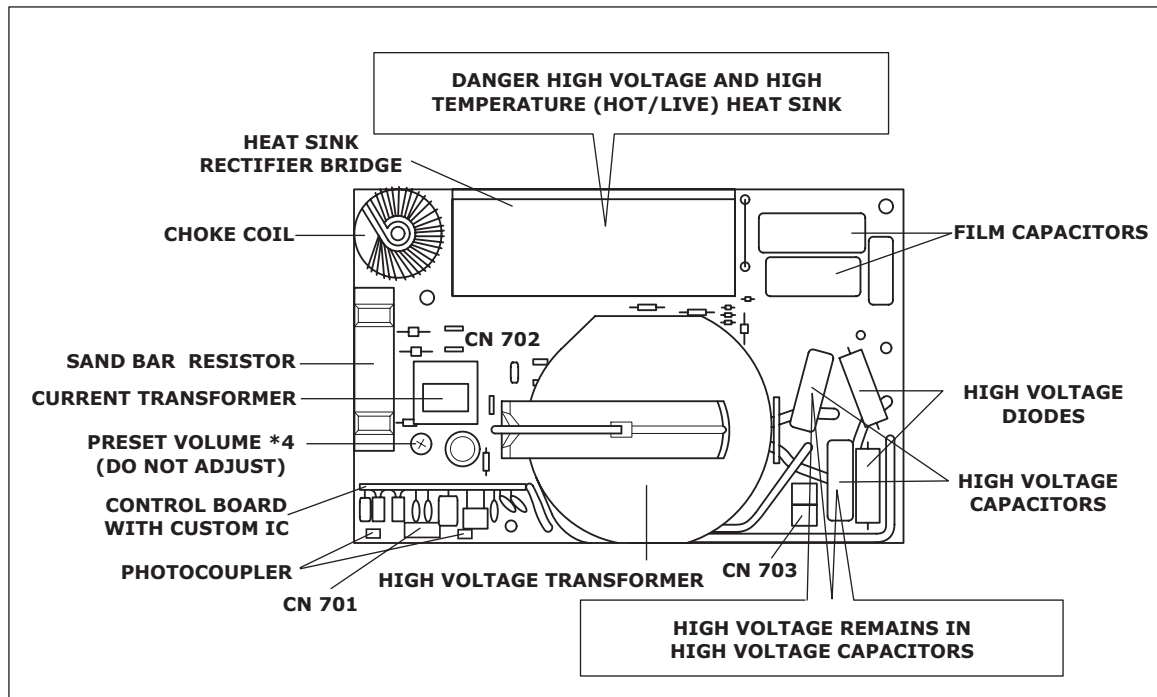


figure 3HV Inverter warning

#### WARNING INVERTER POWER SUPPLY GROUNDING

Check the high voltage inverter power supply circuit grounding. The high voltage inverter circuit board must be connected to the microwave oven chassis. If the inverter board is not grounded it exposes very high voltages and causes extreme DANGER! Ensure that the inverter circuit is properly grounded via the inverter earth bracket.

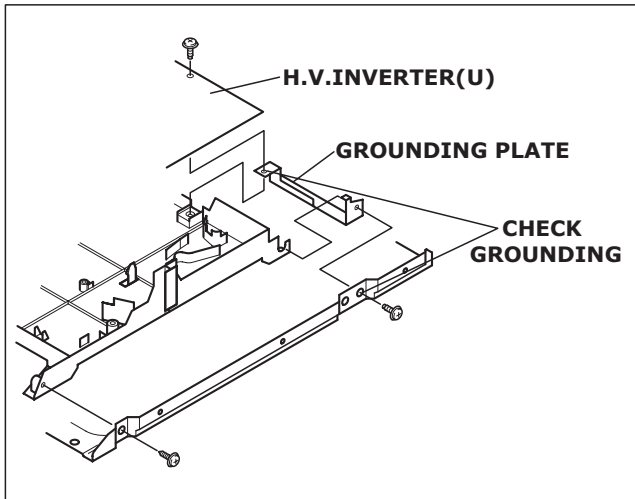


figure 4 Grounding of the inverter circuit board

#### WARNING! DISCHARGE THE HIGH VOLTAGE CAPACITORS

For about 30 seconds after the oven is turned off, an electric charge remains in the high voltage capacitors on the inverter circuit board.

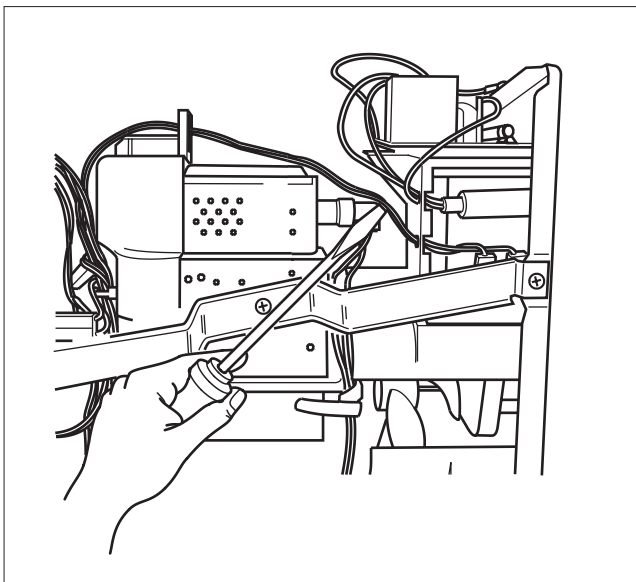


figure 5 Discharging the high voltage capacitors

1. Before replacing or testing parts discharge these high voltage capacitors by shorting the inverter output terminal to the microwave oven chassis
2. Remove the power plug from the mains outlet
3. Ensure that the high voltage lead is connected to the inverter output terminals and the magnetron input terminals.
4. Short the magnetron input terminal to the microwave oven chassis using an insulated handle screwdriver.
5. Always touch the microwave oven chassis and then the magnetron terminal.

#### WARNING

There is high voltage with high current capabilities in the primary, secondary windings, choke coil and heat sink on the inverter circuit. When power is connected to the microwave oven, it is extremely dangerous to

work on or near these inverter circuit components. **DO NOT** measure the voltage in the high voltage circuit including the filament voltage of the magnetron.

#### WARNING

Never touch any circuit wiring during operation.

### 8.3 Part replacement

When replacing any component in the microwave oven, always ensure that the power cord is removed from the wall outlet.

### 8.4 When the 10A fuse is blown due to the operation of the short switch

#### WARNING

Always replace both the short switch and the primary latch switch when the 10A 250V fuse is blown due to the operation of the short switch. It is also important to change the power relay 1 (RY1) when the continuity test shows shorted contacts.

1. This is mandatory. Refer to "adjustments and measurements" for the location of these switches.
2. When replacing the fuse, confirm that it has the appropriate rating for these models.
3. When replacing faulty switches, be sure the mounting tabs are not bent, broken or deficient in their ability to hold the switches.

### 8.5 Oven cavity apertures

Never insert a wire or any other metal object through the lamp holes or other apertures in the oven cavity, because such objects may work as an antenna and cause microwave leakage.

### 8.6 Confirm after repair

1. After repair or replacement of parts, make sure that the screws of the oven are neither loose nor missing. Microwaves might leak if screws are not properly tightened.
2. Make sure that all electrical connections are tight before inserting the plug into the wall outlet.
3. Check for microwave energy leakage. (Refer to procedure for measuring microwave energy leakage).

#### CAUTION MICROWAVE ENERGY

Microwave energy is emitted from the magnetron antenna into the oven cavity via the wave guide. Do not operate the microwave oven if the door is defective, the magnetron is not fitted correctly or the outer panel is removed.

#### IMPORTANT NOTICE

When the microwave oven is operating the following components carry a potential above 240VAC.

- Magnetron
- High voltage transformer (Located on inverter)
- High voltage diodes (Located on inverter )
- High voltage capacitors (Located on inverter )

Pay special attention in these areas.

When the appliance is operated with the door hinges or magnetron fixed incorrectly, the microwave leakage can reach more than  $5\text{mW}/\text{cm}^3$ . After repair or replacing parts, it is very important to check if the magnetron and the door hinges are correctly fixed.

## **8.7 Sharp edges**

Please use caution when unpacking, installing or moving the unit, as some exposed edges may be sharp to touch and cause injury if not handled with care.

## 9 Parts Replacement Procedure

### 9.1 Magnetron

1. Discharge the high voltage capacitors on the inverter circuit.
2. Remove the 1 screw holding air guide A.
3. Remove the 2 screws holding the tie bar.
4. Remove the oven lamp and lead wire harness from air guide A.
5. Remove the air guide A.
6. Disconnect the 2 high voltage leads from the magnetron.
7. Remove the 4 screws holding the magnetron.

**NOTE: After replacing the magnetron, tighten the mounting screws so there is no gap between the waveguide and the magnetron, this prevents microwave leakage.**

#### Caution

When replacing the magnetron, ensure that the antenna gasket is in place.

#### Note

The magnetron used for this model is unique for the inverter power supply system. Only fit the magnetron listed in the service manual parts list.

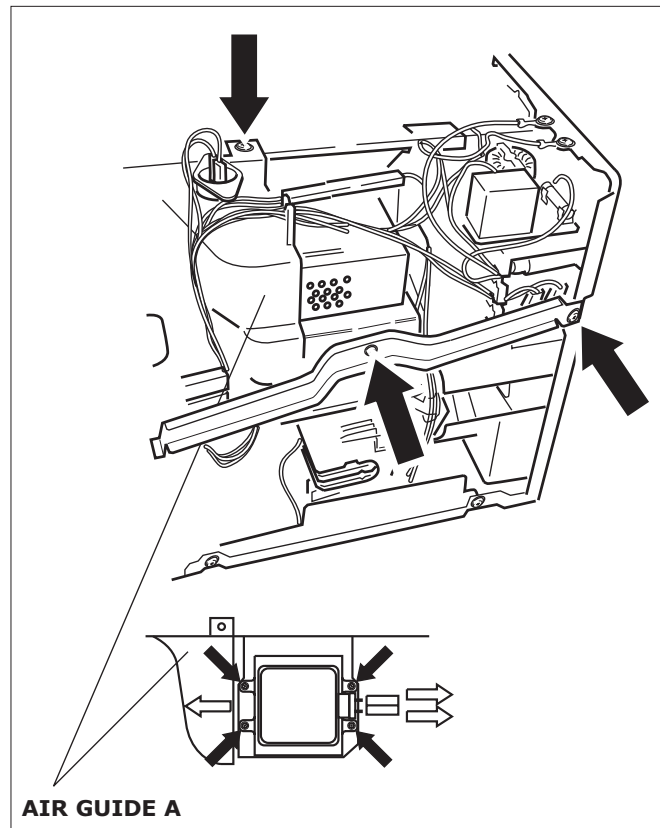


figure 6 Removal of the magnetron

### 9.2 Inverter circuit

1. Discharge the high voltage capacitors.
2. Remove 2 screws holding the tie bar.
3. Unplug the H.V. Lead wires from the magnetron.

4. Remove the 1 screw holding the earth wire to the magnetron.
5. Remove the connector CN701 and CN702 from the inverter PCB. figure 8
6. Remove the 2 screws holding the inverter support-base to the oven chassis.
7. Carefully remove the inverter circuit board and support base from the oven.
8. Remove the air guide E.
9. Remove the 4 screws holding the inverter circuit board to the inverter support base. Figure 7

#### Caution

#### When replacing the inverter circuit

1. Check the grounding plate is in place.
2. Securely tighten the grounding plate screw through the side of the oven chassis.
3. Connect the 3 lead wire plugs into the correct sockets.
4. Ensure there is enough space between the heat sink and other components. Check that no lead wires are touching the aluminium heat sink.

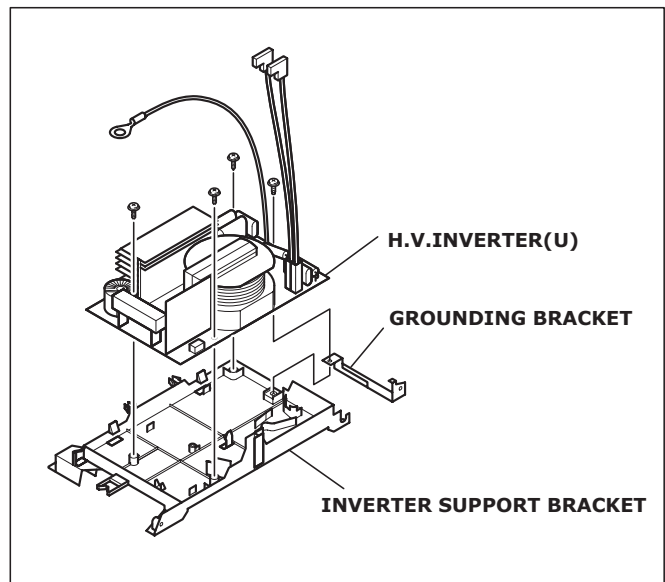


figure 7 Removal of the inverter PCB.

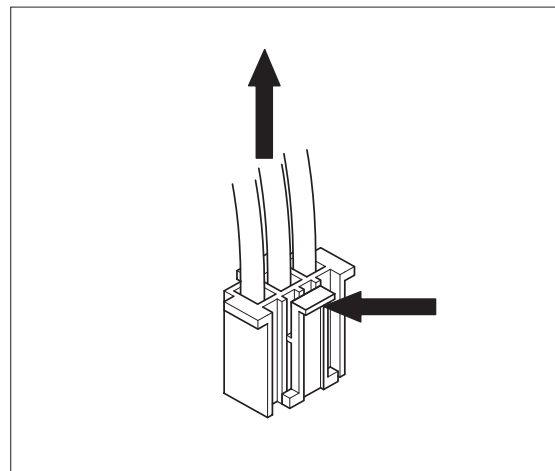


figure 8 Disconnecting the PCB locking plug.

### 9.3 Digital Programmer Circuit (DPC) and membrane key board.

NOTE: Ground any static electric from your body before handling the digital programmer circuit (DPC).

1. Disconnect all lead wire plugs from the DPC.
2. Release the ribbon cable from the DPC.
3. Remove 2 screws holding the escutcheon base to the microwave oven chassis. To remove the escutcheon base; open the microwave oven door and slide the escutcheon base upward slightly.
4. Remove the 6 screws holding the DPC DU assembly.
5. Remove the door lever.
6. Remove the 7 screws holding the DPC AU assembly.

#### To remove escutcheon pad.

1. Remove the escutcheon bracket from the escutcheon base by freeing the 4 catch hooks.
2. Peel away the display window from the inside of the base.
3. Remove the membrane assembly by pushing from the inside of the base and then peeling it away from the outside surface.

NOTE:

1. When installing a new escutcheon key board, make sure that the surface of the escutcheon base is cleared, avoiding problems such as shorted contacts and uneven surfaces.
2. When replacing a stainless / aluminium escutcheon assembly, ensure that the stainless facia is earthed to the escutcheon back plate via the earth spring.

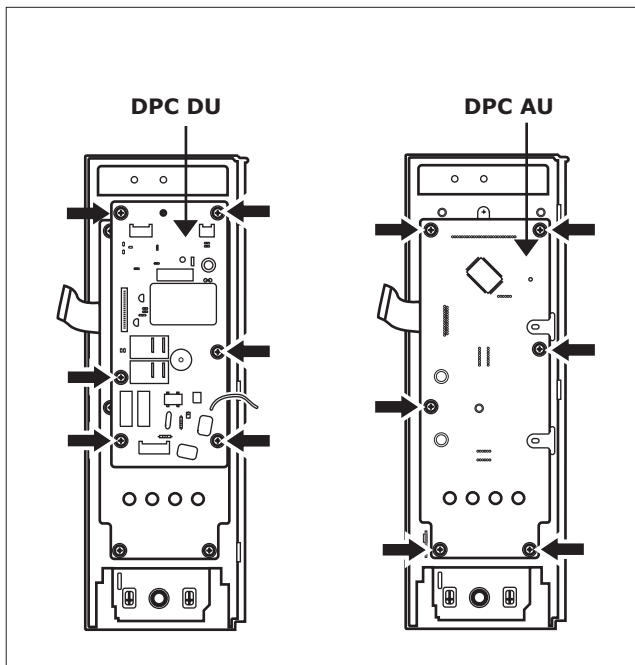


figure 9 Removal of DPC AU and DPC DU

### 9.4 Low voltage transformer and/or power relays (RY1)

Note

**Ground your body to discharge static charges before handling the DPC.**

1. Carefully remove all solder from the terminal pins of the low voltage transformer / power relays using a 30W soldering iron and a solder sucker.
2. With all of the terminal pins cleaned and separated from the DPC contacts, remove the defective transformer/power relays and install the new components making sure that the terminal pins are inserted completely. Carefully re-solder all terminal contacts carefully.

#### Note

**Do not use a soldering iron of more than 30 watts on DPC contacts**

### 9.5 Fan Motor

1. Remove 2 screws to remove the tie bar.
2. Disconnect the 2 lead wires from the fan motor terminals.
3. Disconnect all lead wires from the noise filter.
4. Remove the noise filter.
5. Remove 2 screws to remove cover B.
6. Remove 2 screws holding the orifice assembly.
7. Remove 2 screws holding the fan motor assembly.
8. Detach the orifice assembly and the fan motor assembly from the microwave oven.
9. Remove the fan blade from the fan motor by pulling outward.

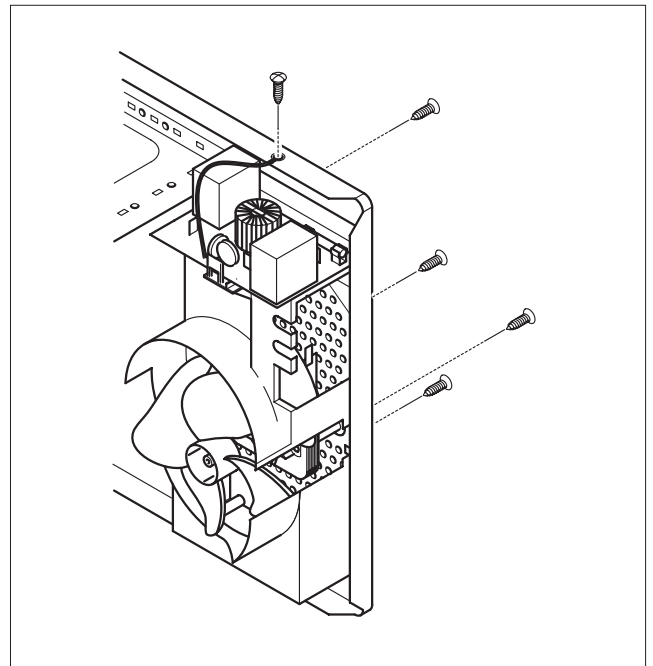


figure 10 Removing the fan motor.

### 9.6 Door replacement

1. Carefully lever door C away from Door E using a flat blade screwdriver.
2. Remove 4 screws holding the door E to the door A assembly.
3. Remove the door screen B by unclipping the screen B from the door A catch hooks. Take care when removing the door screen B from door A, it is possible to damage the catch hooks on the door A.
4. Remove the door key and spring from the door E.

**After replacing component parts of the door, follow the instructions below for proper installation and adjustment of the door, this is to prevent microwave leakage.**

1. When mounting the door to the oven, adjust the door parallel to the bottom of the oven face plate by adjusting the upper hinge.
2. Adjust the door so there is no play between the inner door surface and the front of the microwave oven. If the door assembly is not mounted properly, microwave energy may leak from the clearance between the door and microwave oven.
3. Perform the microwave leakage test.

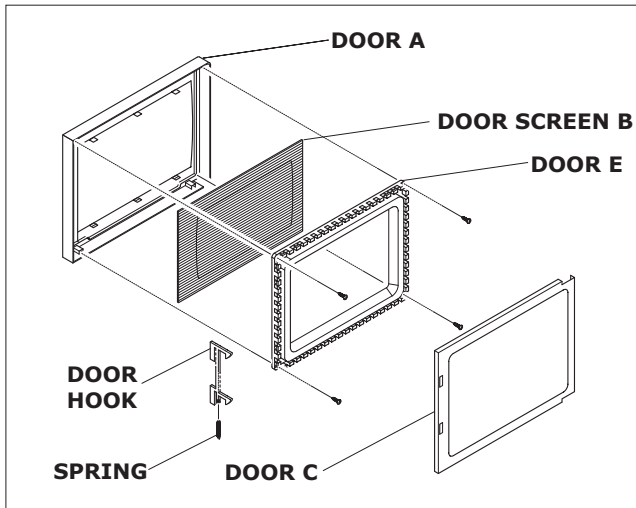


figure 11 Disassembly of the door.

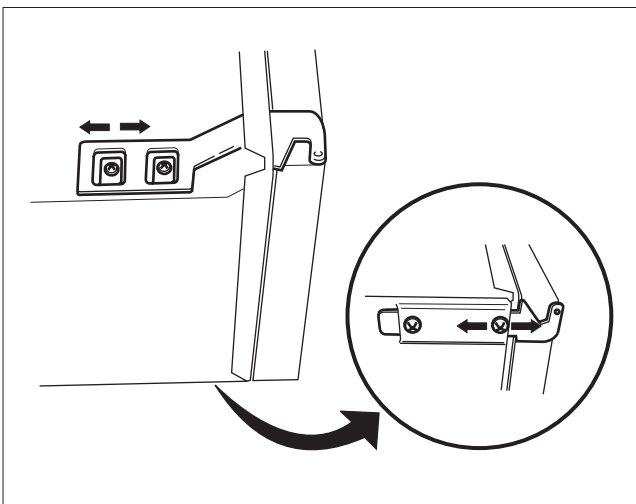


figure 12 Adjusting the door hinge.

## 9.7 Turntable Motor

1. Remove the motor cover by breaking it off at the 8 spots indicated by the arrows.
2. Disconnect the two lead wires connected to the turntable motor.
3. Remove the 2 screws holding the turntable motor.

Note: After breaking off the motor cover, make sure no sharp edges are exposed by trimming off the edges or bending them inside.

Note: To secure the motor cover use a 4 x 6 screw.

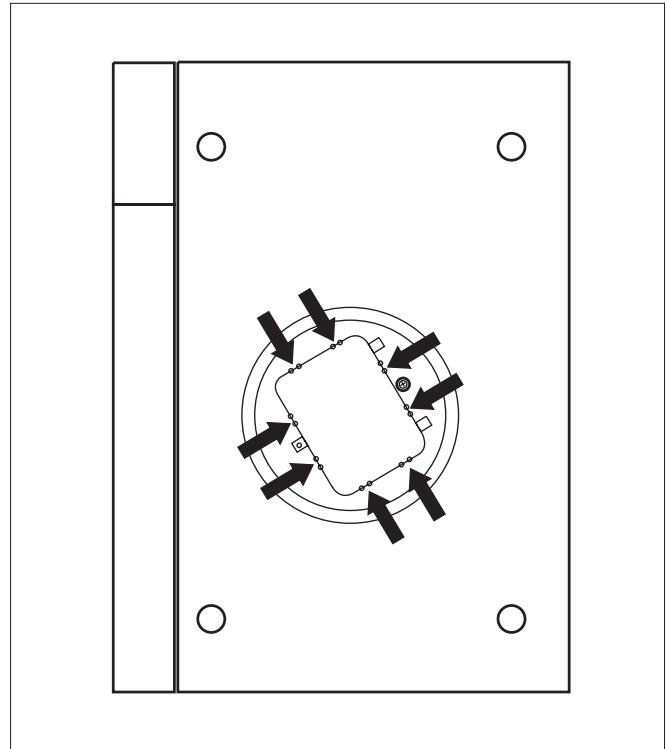


figure 13 Removing the turntable motor cover.

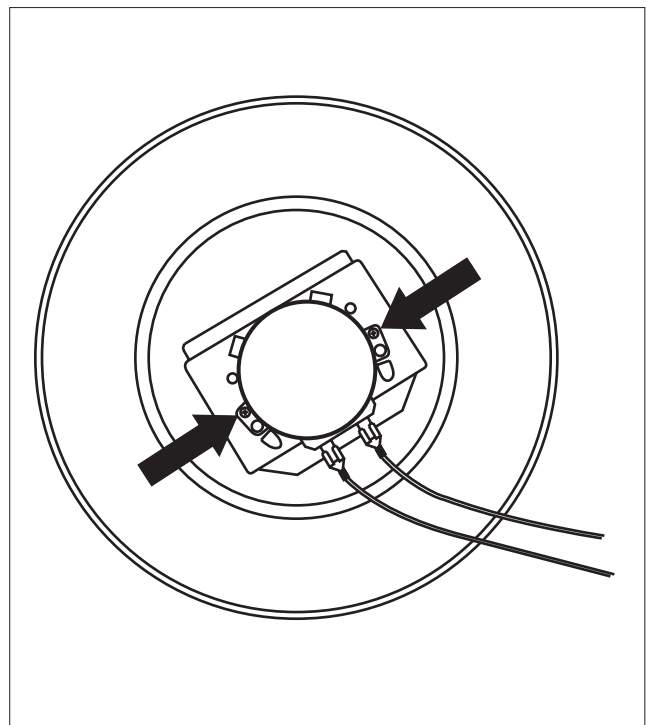


figure 14 Removing the two screws fixing the turntable motor.



## 10 Component Test Procedure

### Caution

- The inverter circuit operates at high voltages.
- Never attempt to measure the high voltage on the inverter circuit.
- Before touching any oven components, or wiring, always unplug the oven from its power source and discharge the high voltage capacitors.

### 10.1 Primary latch switch, secondary latch switch and power relay B interlocks.

1. Unplug the lead wires from the contact terminals of RY1, check the continuity across these terminals using an ohm meter set to the lowest resistance scale.
2. Unplug the lead wires to the primary latch switch and secondary latch switch.
3. Test the continuity of each switch with an ohm meter set to the lowest resistance scale. The test must be completed with the microwave oven door open and closed.
4. Normal continuity readings should be as follows.

	Door Open	Door Closed
Primary Latch Switch	$\infty \Omega$ (Open)	$0 \Omega$ (Close)
Secondary Latch switch	$\infty \Omega$ (Open)	$0 \Omega$ (Close)
Power relay B	$\infty \Omega$ (Open)	$\infty \Omega$ (Close)

### 10.2 Short switch and monitor circuit

1. Unplug the lead wires from the high voltage inverter primary terminals.
2. Connect the test probes of the ohm meter to these leads.
3. Test the continuity of the short switch with the door open and the door closed using a ohm meter set to the lowest resistance scale.

	Door Open	Door Closed
Monitor switch	$0 \Omega$	$\infty \Omega$

### 10.3 Magnetron

Continuity checks can only indicate an open filament or a shorted magnetron. To diagnose an open filament or shorted magnetron:

1. Disconnect the high voltage lead wires from the magnetron input terminals.
2. Check the continuity across the magnetron filament terminals, a good magnetron indicates a resistance of 1 ohm or less.

3. Check the continuity between each filament terminal and the magnetron case, a good magnetron indicates infinite  $\infty$  resistance.

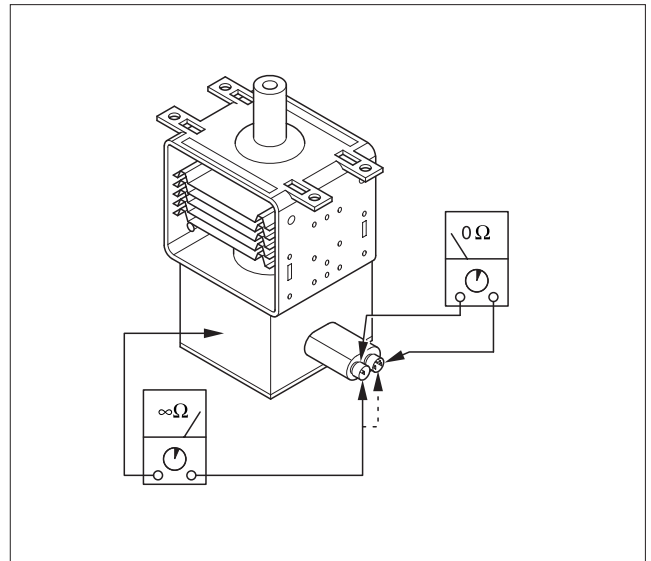


figure 15Testing the magnetron

### 10.4 Push button keyboard

Check the continuity between the switch terminals on the DPC AU, by tapping an appropriate pad on the keyboard and measuring the resistance across the corresponding tracks on the ribbon cable.

### 10.5 Inverter power supply

#### Caution

DO NOT try to repair this inverter power supply. Replace this inverter power supply as a unit.

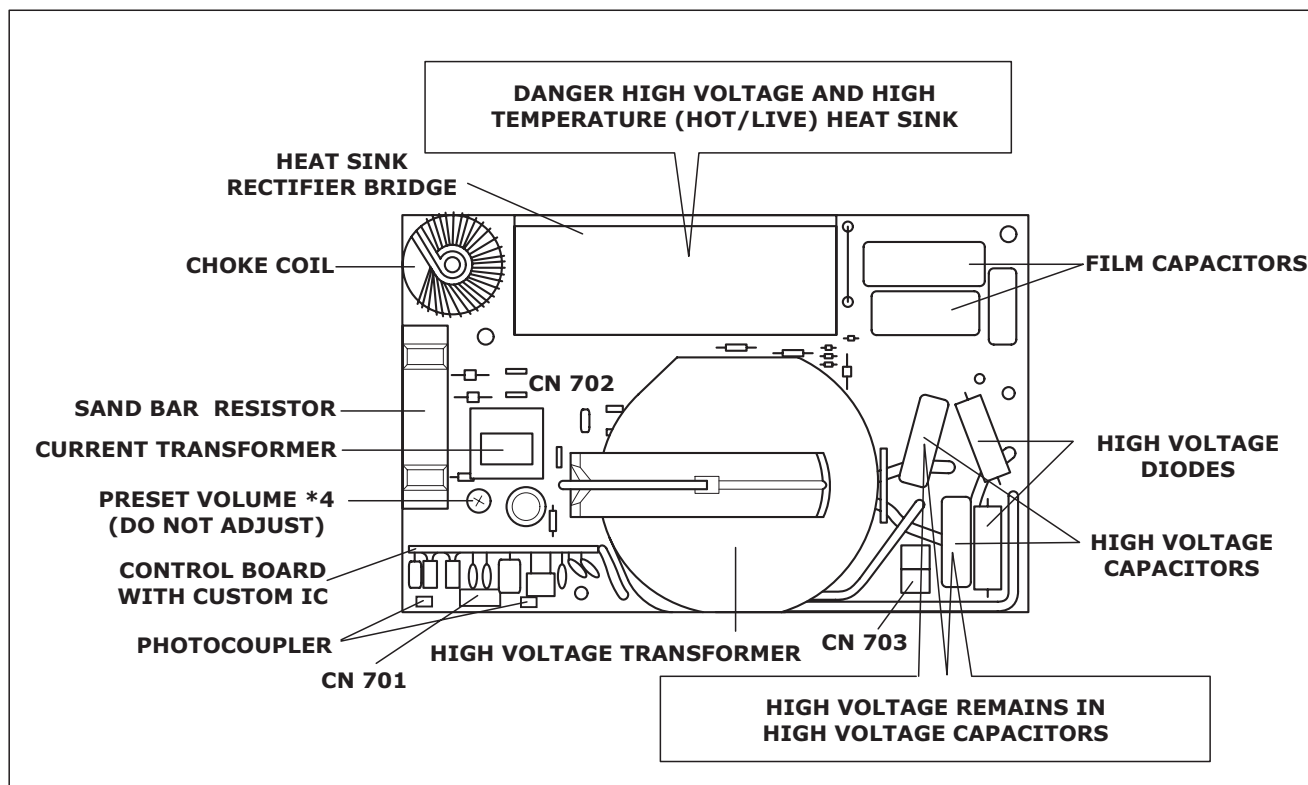


figure 16 Inverter circuit board layout

## 10.6 Inverter power supply unit

### Warning

Do not attempt to make any measurements in the high voltage circuit of the inverter or magnetron.

See troubleshooting of the inverter circuit and magnetron on to determine if the inverter power supply is still functioning.

# 11 Measurements and Adjustments

## Warning

- Only replace parts with parts from the original manufacturer.
- When the 10 amp fuse is blown due to the operation of the short switch, you must replace the primary latch switch and short switch. Then follow the installation procedures below.
- Interlock switch replacement - When replacing faulty switches, check the mounting tabs on the door-hook assembly are not bent, broken or deficient in their ability to hold the switches.
- Refer to the schematic and wiring diagram to ensure the plug connectors on the wire harness are connected to correct switches.

## 11.1 Installation of primary latch switch, secondary latch switch and short switch.

1. When mounting the primary latch-switch, secondary latch-switch and short latch-switch to the door hook assembly. Follow the instructions in figure 17.
2. NOTE: No specific adjustment during the insulation of each switch into the door hook is necessary.
3. When mounting the door hook assembly to the oven assembly, adjust the door hook assembly by moving it in the direction of the arrow figure 17. Ensuring the door does not have any play in it. Check for play by pulling the door assembly. Make sure that the latch keys move smoothly after adjustment is completed. Completely tighten the screws holding the door hook assembly to the oven assembly.
4. Reconnect the short switch, primary switch and secondary latch switches and check the continuity of the monitor circuit and latch switches by following the component test procedures on .

## 11.2 Measurement of microwave output

The output power of the magnetron can be determined by performing the IEC standard test. However, due to the complexity of the IEC test procedures, it is recommended you test the magnetron using the simple method outlined below.

Necessary equipment:

- 1 litre beaker.
- Glass thermometer.
- Wrist watch or stop watch.

NOTE: Check the line voltage under load. Low line voltage lowers the magnetron output. Take the temperature readings and heating time as accurate as possible.

1. Fill the beaker with exactly one liter of tap water. Stir the water using the thermometer and record the waters temperature (Record as T1).
2. Place the beaker on the center of the glass cook plate.
3. Operate the Microwave for 1 Minute on FULL power.

4. Stir the water again and read the temperature of the water. (Record as T2).
5. The normal temperature rise at the high power position for each model is shown in the table figure 18

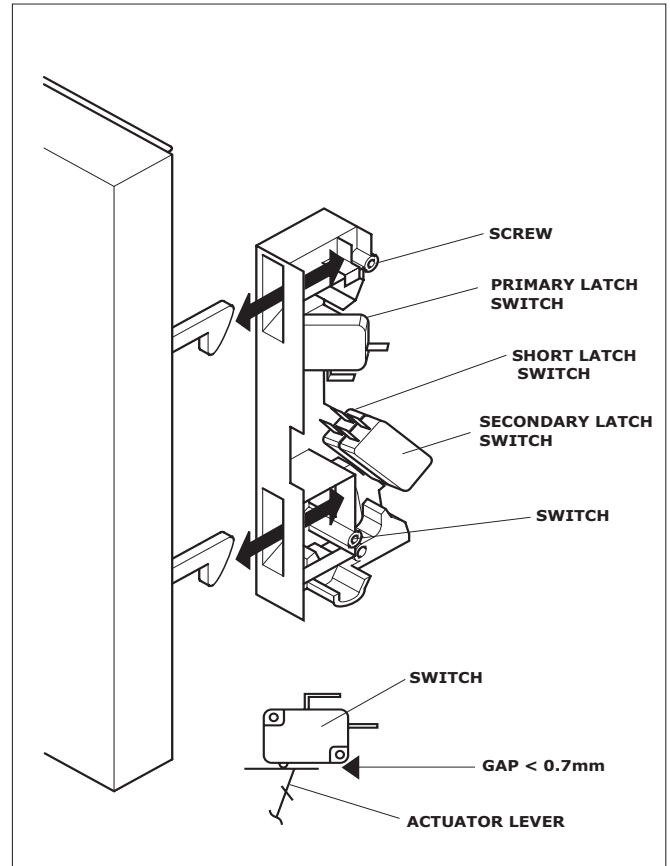


figure 17 Adjustment of latch switches

RATED OUTPUT	TEMPERATURE RISE
1000W	8°C (Degrees centigrade)

figure 18 Temperature rise

## 12 Troubleshooting Guide

### Caution

1. Do not try to repair the H.V. Inverter power supply. Replace the inverter circuit board as a complete unit.
2. Do not adjust the preset volume on the Inverter. It is very dangerous to repair or adjust without special test equipment, the inverter handles very high voltage and current.
3. Do not attempt to measure the voltages in the microwave oven high voltage circuit.
4. Always discharge the high voltage capacitors on the inverter circuit board before troubleshooting.
5. When checking the continuity of the components on the H.V. inverter circuit, unsolder and remove one leg of the component from circuit board. Checking the continuity of these components when both legs are soldered into the board may result in a false reading or damage to your meter.
6. When disconnecting a plastic connector from a terminal, you must hold the plastic connector and not the lead wire, otherwise the lead wire may become open circuit.
7. Do not touch components on the digital programmer circuit, this circuit is sensitive to static electricity.
8. When working with the digital programmer board ensure your body is connected to ground to discharge any static charge.
9. 240 VAC is present on the digital programmer circuit. (Terminals of the power relays and the primary circuit of the low voltage transformer). When troubleshooting, be cautious of possible electric shock.

To ensure the complaint is not due to operator error, check the operation of the oven by following the procedures explained in the operating instruction book.

## 12.1 Troubleshooting (no operation)

	Symptom	Cause	Correction
1.	Oven is dead. Fuse is OK No display and no operation at all.	1. Open or loose lead wire harness. 2. Open low voltage transformer. 3. Defective DPC AU or DPC DU	
2.	Oven does not accept key input (Program).	1. Key input is not in sequence. 2. Shorted push button on DPC AU 3. Defective DPC AU.	Refer to operation procedure. Refer to DPC troubleshooting
3.	Oven lamp and turntable motor turn on when the microwave oven is plugged in with the door closed.	1. Maladjusted or loose wiring of secondary latch switch. 2. Defective secondary latch switch.	Adjust door and latch switches.
4.	Timer starts to countdown but no microwave oscillation.	1. Maladjusted latch switches. 2. Open or loose connection of high voltage circuit, including the magnetron filament circuit.  NOTE: A large contact resistance lowers the magnetron filament voltage reducing the magnetron output or causing intermittent operation.  3. Defective high voltage component Inverter circuit or Magnetron. 4. Open or loose wiring of power relay (RY1) 5. Defective primary latch switch. 6. Defective power relay RY1 or DPC AU or DPC DU.	Adjust door and latch switches.      Check high voltage components according to the component test procedure.

## 12.2 Troubleshooting (fuse blown)

	Symptom	Cause	Correction
1.	No display and no operation at all. 10A Fuse is Blown	1. Shorted lead wire harness. 2. Defective primary latch switch (NOTE 1) 3. Defective short switch (NOTE 1) 4. Defective Inverter power supply. (Refer to inverter circuit test procedure on page)	Check adjustment of the Door, Primary, secondary and short latch switches.
		NOTE 1: All of these switches must be replaced at the same time. (Refer to adjustment instructions page) Check continuity of power relay RY1 Replace this relay if it is short circuit.	

## 12.3 Troubleshooting (other problems)

	Symptom	Cause	Correction
1.	Microwave output is low. Oven takes a long time to cook food.	1. Decrease in power source voltage. 2. Open or loose wiring of magnetron filament circuit causing intermittent oscillation. 3. Ageing of magnetron	Consult electrician. Refer to output test procedures.  Change magnetron
2.	Loud Buzzing noise can be heard.	1. Loose fan or fan motor	
3.	Turntable motor does not rotate.	1. Open or loose wiring of turntable motor. 2. Defective turntable motor	
4.	Oven stops operation during cooking cycle.	1. Open or loose wiring of primary and secondary latch switch.	Adjust door and latch switches.
5.	Oven returns to "plug in" state 9 seconds after the start pad is pressed in sensor cooking mode.	1. Open steam sensor circuit. 2. Defective steam sensor.	

## 12.4 Troubleshooting the inverter by input voltage

Troubleshooting the Inverter circuit and magnetron

Microwave oven shuts down between 15 - 33 seconds.


If the microwave oven shuts down after a short period of time while operating in micropower mode, conduct the following test.

The microwave oven must be set in self test mode to activate the self diagnostic failure code system.



When oven is set in test mode, place water load (1Ltr) in the oven, set micropower to high and time for 1 minute, press start.

H97, H98 appears in the display window for a short time after start key is pressed and there is no microwave oscillation.

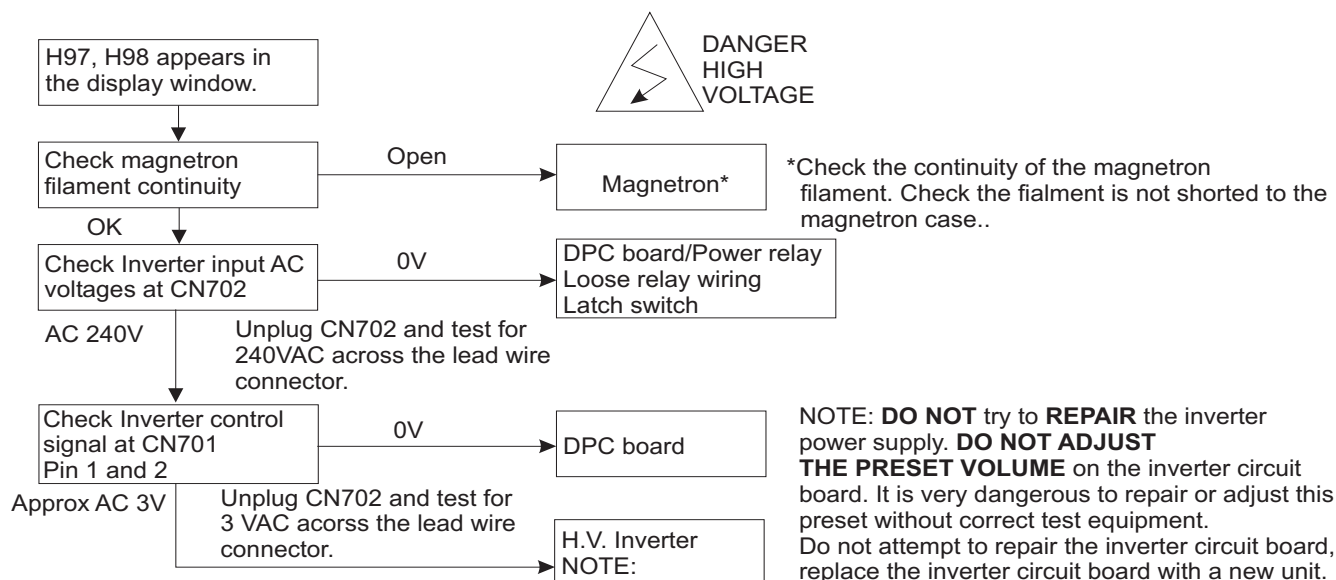

## 12.5 Troubleshooting inverter by microwave oven input current

This is an alternative way to test the inverter circuit by monitoring the input current to the microwave oven.

The microwave oven shuts down between 15 and 33 seconds


If the microwave oven shuts down after a short period of time while operating in micropower mode, conduct the following test.

The microwave oven must be set in self test mode to activate the self diagnostic failure code system.



When the microwave oven is set in test mode, place a water load (1Ltr) in the oven, set micropower to high and time to 1 minute, press start.

A short time after the start pad is pressed, H97, H98 appears in the display window and the magnetron does not oscillate.

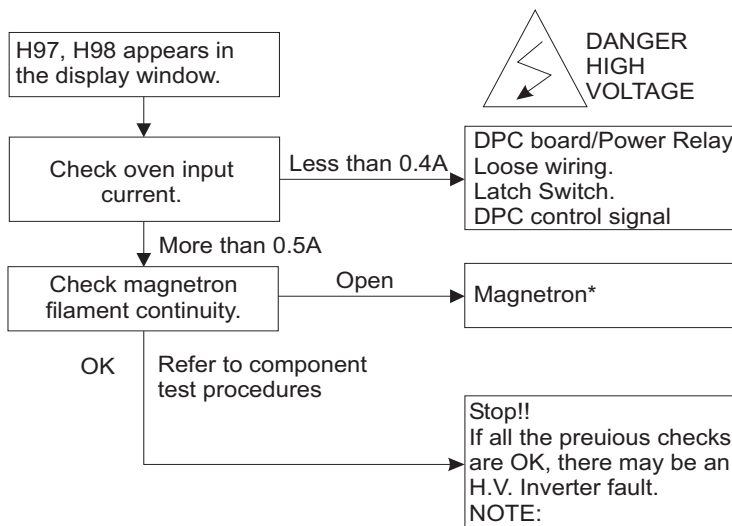

\*Check the continuity of the magnetron filament. Check the filament is not shorted to the magnetron case..

NOTE: **DO NOT** try to **REPAIR** the inverter power supply. **DO NOT ADJUST THE PRESET VOLUME** on the inverter circuit board. It is very dangerous to repair or adjust this preset without correct test equipment. Do not attempt to repair the inverter circuit board, replace the inverter circuit board with a new unit.

## 12.6 Digital programmer circuit troubleshooting


SYMPTOM	STEP	CHECK	RESULT	CORRECTION
No display when the microwave oven is first plugged in.  Microwave oven is dead	1	Fuse pattern on DPC	Normal	STEP 2
			Open (Note1)	Shorted circuit ZNR-LVT-Lamp
	2	IC10 pin 9 12V line	Abnormal 0V	IC10
			Normal 12V	Step 3
	3	IC-1 pin 73 (Emitter of Q10)	Abnormal	ZB10 Q10 Ribbon cable
			Normal 5V	Step 4
	4	IC-1 pin 27 (pin 15 of IC220)	Abnormal	IC-220
			Normal	IC1 CX1
<b>NOTE</b> The procedure for repairing the fuse pattern on the DPC is as follows: <b>1. Fuse pattern PF2 open circuit</b> a) Remove the jumper wire PF2 b) Move the jumper wire PF3 into the position of PF2 and solder in place. Replace the DPC if both the fuse pattern PF2 and PF3 are open circuit. Note: After repairing the fuse pattern on the DPC, check the varistor for any burns and measure the winding resistance of the low-voltage transformer primary coil.				
No key input	1	Push button switch	Abnormal	Push button switch
			Normal	IC-1
No beep sound	1	IC1 pin 12	Abnormal	IC-1
			Normal	IC-220 BZ310
Power relay (RY2 ) does not operate	1	IC-1 pin 23 during operation	Abnormal	
			Normal 5V	
	2	Create a short circuit between pin 6 and pin 16 of IC-2	RY2 does not turn on	RY2
			RY2 turns on	IC-220
No microwave oscillation	1	IC-1 pin 18 and 16 during high power operation	Abnormal	IC-1
			Normal 18 - 5V 16 - 5V	Step 2
	2	Q221 transistor		
Dark or unclear display	1	Replace display	Abnormal	Display
			Normal	IC-1
Missing segments in display		Replace IC-1	Abnormal	IC-1
			Normal	Display



Microwave oven shuts down between 15 - 33 seconds. Set the microwave oven to test mode (See page ) Set to high power 1 minute. H97 or H98 appears in the display and the microwave oven stops working Program for 1 minute and perform the following test	1	Unplug CN702 connector and measure the voltage between the terminals	Abnormal	1. Latch switch 2. DPC/Power relay
			Normal	Step 2
	2	Unplug CN703 connector and measure the voltage at Pin 1	Abnormal	DPC
			Normal	1. Magnetron 2. Inverter circuit


## 12.7 Checking the semiconductors using a resistance meter

### Diode

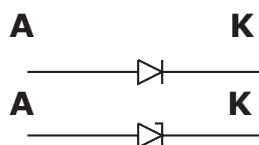


	Forward	Reverse
A - K	Low $\Omega$	$\infty$

### Transistor

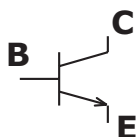


	Forward	Reverse
B - E	Low $\Omega$	$\infty$
B - C	Low $\Omega$	$\infty$
C - E	$\infty$	$\infty$

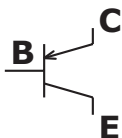

	Forward	Reverse
E - B	Low $\Omega$	$\infty$
C - B	Low $\Omega$	$\infty$
C - E	$\infty$	$\infty$

### Digital transistor

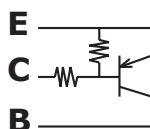

	Forward	Reverse
E - B	10 -30 k $\Omega$	10 -30 k $\Omega$
C - B	50 -90 k $\Omega$	$\infty$
C - E	40 -60 k $\Omega$	$\infty$

## 13 Parts List


- When ordering parts quote the part number, do not use the description of the part.
- Components identified by the following symbol (!) have special safety characteristics. Only replace these parts with parts supplied by the original manufacturer.

Ref. No.		Part No.	Part Description		Comments
1		XTWANE 4 + 8BN	Screw	1	
2		E41194V00GP	Exhaust Guide D	1	
3		E6061002	Strike	1	
4		XTWANE 4+8BN	Screw	1	
5		E10584V00SBP	Back Plate Cover A	1	
6		E41074V00GP	Exhaust Guide B	1	
7		E096400TBBK	Cushion Rubber	1	
8	(!)	E61454V20BP	Thermal Cut-Out	1	
9		XTWANE 4+8BN	Screws	3	
10		E66804V00BP	Heater Cover B	1	
11		E22424V00BP	Adiabatic Material	1	
12	(!)	E490S4V00BP	Circulation Fan Motor	1	
13		E41804V00BP	Motor Bracket	1	
14		XTBANE 4+8BN	Screws	3	
15		E41594V00BP	Cooling Fan	1	
16		E41614V00BP	Fan Spacer A	1	
17		XTWANE 4+8BN	Screws	3	
18		XTBANE 4 + 8BN	Screws	2	
19		E66794V00BP	Heater Cover A	1	
20	(!)	E630G8000BP	Heater Unit	1	
21	(!)	E22394V00BP	Circulation Fan	1	
22		E41634V00BP	Fan Spacer C	1	
23		XNG4EVSL	Nut	1	
24		E64174V00BP	Heater Bracket A	1	
25		XTWANE 4 + 8BN	Screw	1	
26		E00069000EP	Warning Label	1	
27		E10594V00BP	Back Plate Cover B	1	
28		XTWANE 4+8BN	Screws	2	
29		E22594V00BP	Adiabatic Material D	1	
30	(!)	E030A6R10BP	Lead Wire Harness	1	
31	(!)	E67597550GP	10A Fuse	1	
32	(!)	ANE6230P10GN	16A Fuse	1	
33	(!)	E607X4N30BP	Noise Filter	1	
34	(!)	E400A4760JP	Fan Motor	1	
35		E41444N30BP	Upper Orifice	1	
36		E42094N30BP	Lower Orifice	1	
37		E4008-1640	Fan Blade	1	
38		E09020000AF	Cushion Rubber	1	
39		E09020000AA	Cushion Rubber	1	
40		E20994N30GP	Reinforcement Bracket A	1	
41		E40254N40GS	Air Guide A	1	
42	(!)	E610T5D00BP	Lamp Assembly	1	
43		E22364V10BP	Right Hand Heater Panel	1	
44		XTW4 +12T	Screw	1	
45		E31374830AP	Hook Spacer B	1	
46		E31384830AP	Hook Spacer C	1	
47	(!)	E61425180AP	Secondary Latch Switch	1	
48	(!)	E61785180AP	Short Switch	1	

Ref. No.		Part No.	Part Description		Comments
49	(!)	AEE6142-1450	Primary Latch Switch	1	
50		E30208000BP	Door Hook	1	
51		AEE9108A20GN	Holder	1	
52		XTWANE 4+ 12B	Screws	4	For Magnetron
53	(!)	2M236-M42G1	Magnetron	1	
54		E22434V00BP	Adiabatic Material	1	
55		XTWANE 4 + 8BN	Screw	1	
56		AEE0926000AN	Cushion Rubber	1	
57		E66014V00GP	Inverter Earth Bracket	1	
58		E65854V00BP	Inverter Support Bracket	1	
59	(!)	E606Y4V00BP	Inverter	1	Exchangeable
60		E09250000BD	Cushion Rubber	1	
61		E40474V00BP	Air Guide E	1	
62		E09020000AA	Cushion Rubber	1	
63		E10014N30BP	Base Plate	1	
64		E09270000AH	Cushion Rubber	1	
65		E09270000AM	Cushion Rubber	1	
66		E1008-1180	Rubber Foot	4	
67		E09270000AM	Cushion Rubber	1	
68		XTWA 4+12CF	Screws	6	
69		E110D5D20SBP	Outer Panel	1	A774SB
69		E110D6B20HBP	Outer Panel	1	A764WB
69		E110D5D20NBP	Outer Panel	1	A734MB
70		XTW 3+6B	Screws	2	
71	(!)	E63268960JP	Turntable Motor	1	
72		E01507870EP	Outer Panel Warning Label	1	EPG Models
72		E01505870GS	Outer Panel Warning Label	1	WPG Model
73		XTWA 4 + 12CF	Screw	1	
74		XTWA 4 + 12DF	Screw	1	
75		E30074L00GP	Lower Hinge	1	
76		AEE2177-F80	Pulley Shaft Washer	1	
77		E21315870GP	Pulley Shaft	1	
78		XST4 + W5V	Screw	1	
79		E20554L00GS	Cover A	1	
80		E30064N30BP	Upper Hinge	1	
81		XTWA 4+12CF	Screws	2	
82	(!)	E200A6R00BP	Oven cavity	1	
83		E64604N30BP	Heater Support Bracket	1	
84		E64604N30BP	Heater Support Bracket	1	
85		E03594N30GP	Lead Wire Grill Link	1	
86		XTWANE4 + 8BN	Screw	1	
87	(!)	E630G4n30gp	Quartz Heater	2	
88		E40244V00GP	Exhaust Guide A	1	
89		XTWANE 4+8BN	Screw	1	
90		E09230000AL	Cushion Rubber	1	
91		XTWANE 4+8BN	Screw	1	
92	(!)	E605A-1960	Temperature Sensor	1	
93	(!)	E901C5870GP	Power cord	1	EPG Models
93	(!)	E901C55870WP	Power cord	1	WPG Model
94	(!)	E030E4N30BP	H.V Lead Wire	1	
95		E90314V00BP	Holder	1	
96		E90314VOOBP	Holder	1	


Ref. No.		Part No.	Part Description		Comments
97		E67579000BP	Heater bracket D	1	
98		E22784V00SGP	Upper Heater Cover	1	
99		E00064080BP	Warning Label	1	

## 14 Exploded View

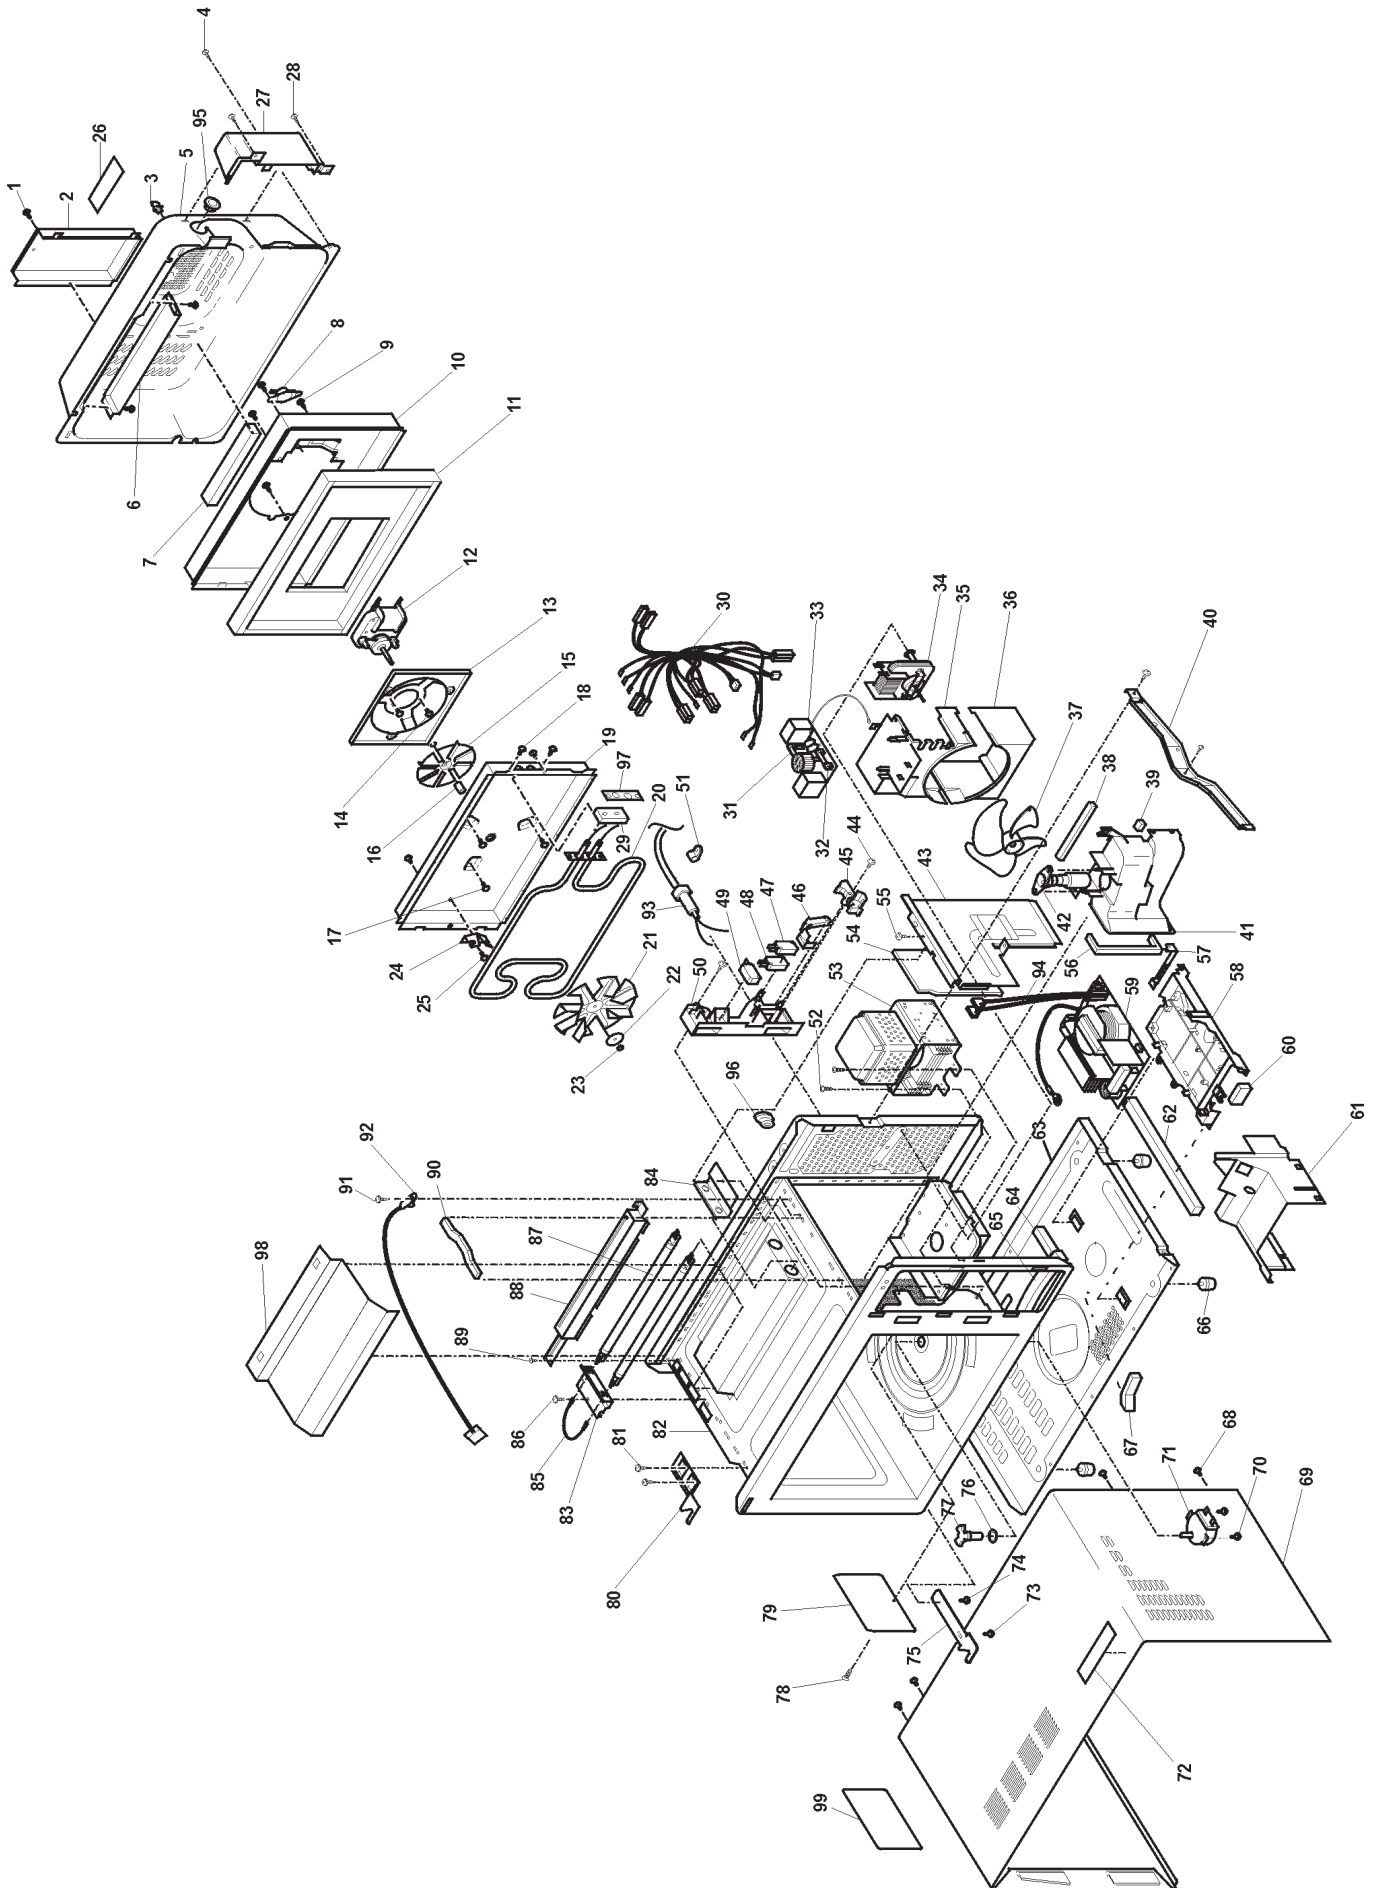

# 15 Door Assembly


A774SB

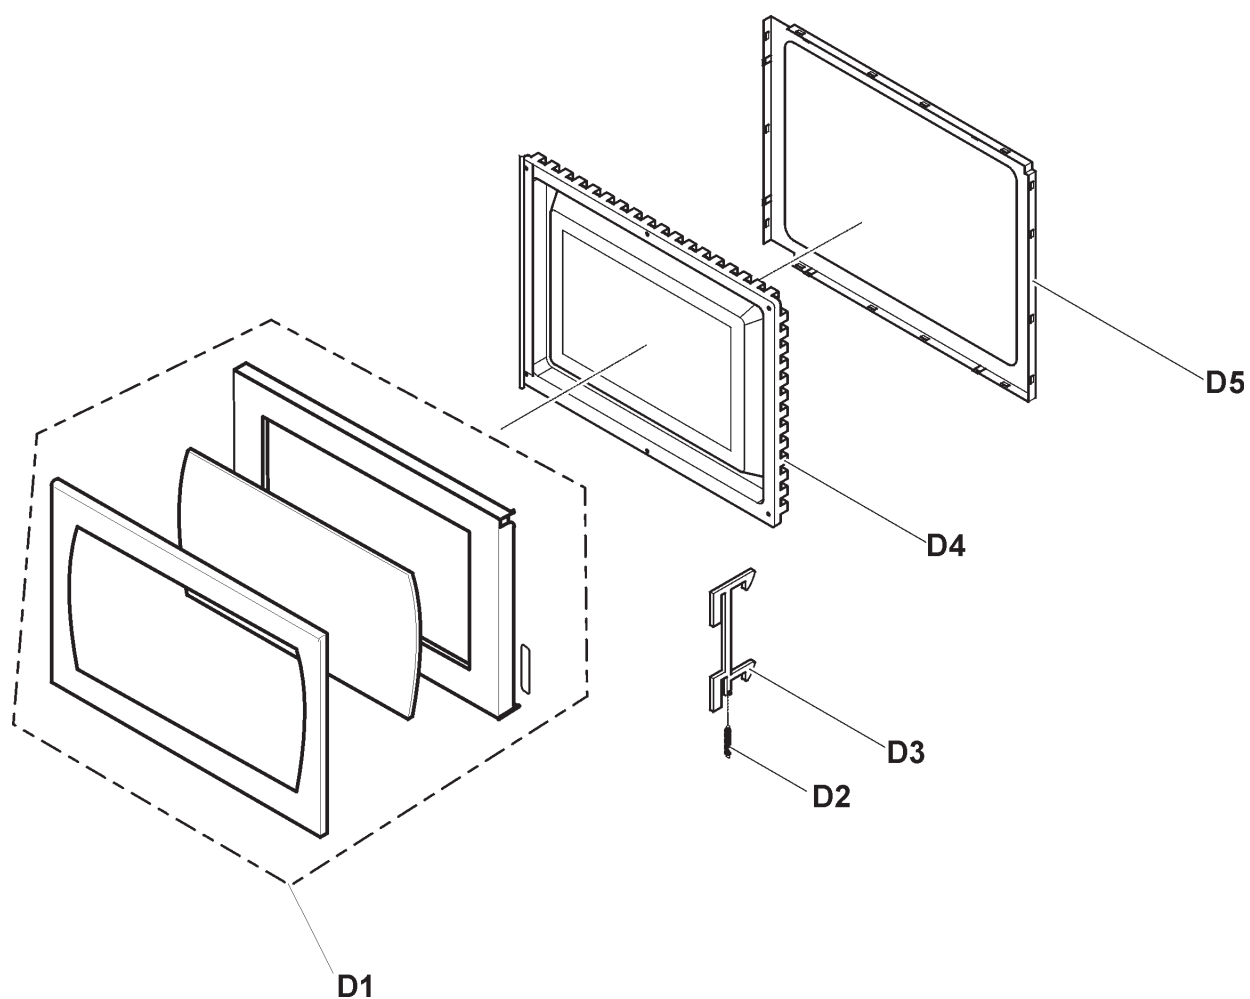

Ref no	Part Number	Part name & description	Qty	Remarks
D1	E302A6R10SEP	DOOR A ASSEMBLY	1	A774SB
D2	E30214000AP	DOOR KEY SPRING	1	
D3	E30184L00GS	DOOR KEY	1	
D4	(!) E302K6R00BP	DOOR E ASSEMBLY	1	
D5	E30854V00BP	DOOR C	1	

**NOTE:** When ordering any Door component also order door C as this part may become damaged during disassembly

**A734MB, A764WB.**

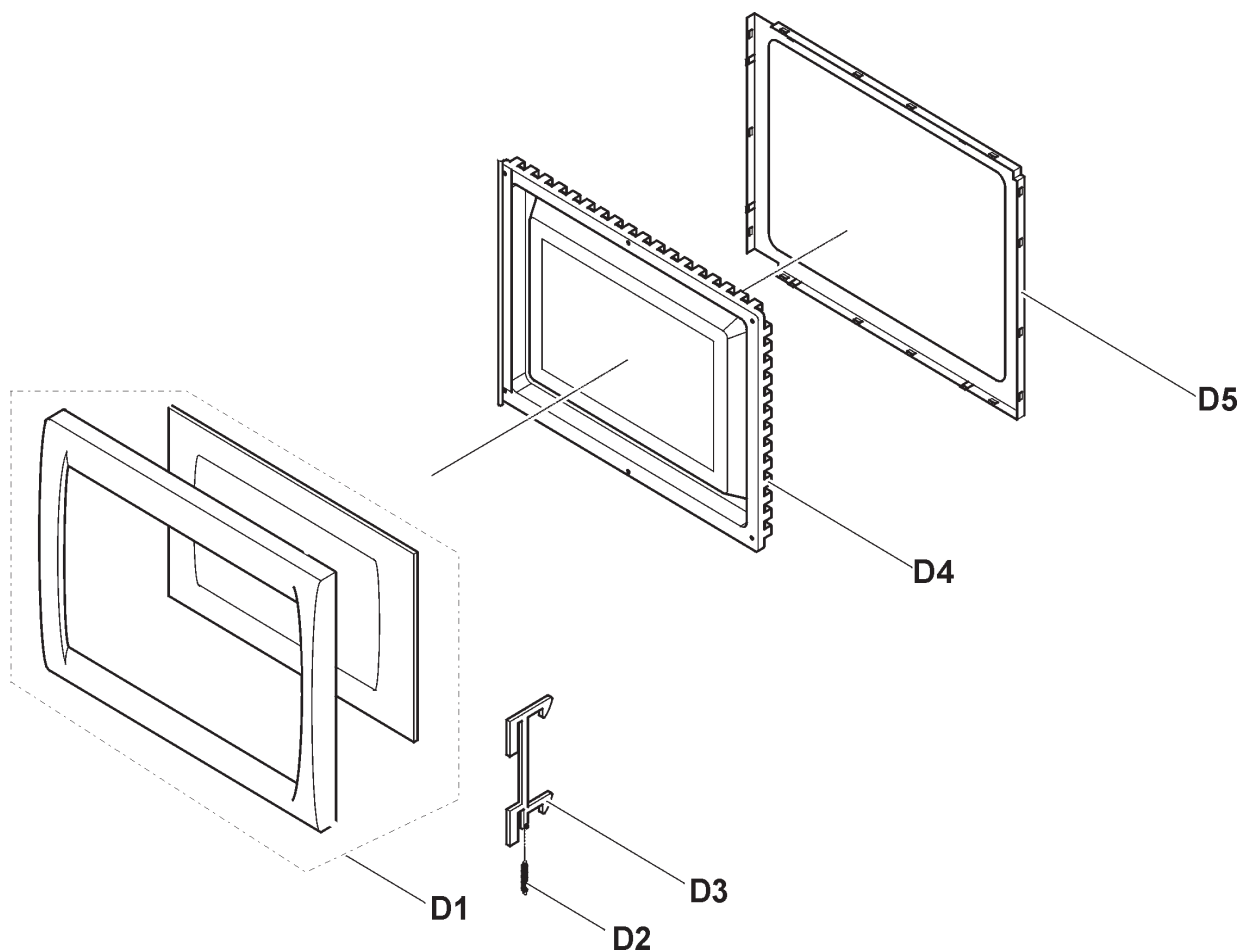


Ref no		Part Number	Part name & description	Qty	Remarks
D1		E302A6R10NBP	DOOR A ASSEMBLY	1	A734MB
D1		E302A6R10HBP	DOOR A ASSEMBLY	1	A764WB
D2		E30214000AP	DOOR KEY SPRING	1	
D3		E30184L00GS	DOOR KEY	1	
D4	(!)	E302K6R00BP	DOOR E ASSEMBLY	1	
D5		E30854V00BP	DOOR C	1	

**NOTE: When ordering any Door component also order door C as this part may become damaged during disassembly.**

# 16 Escutcheon Base


NN-A774SB

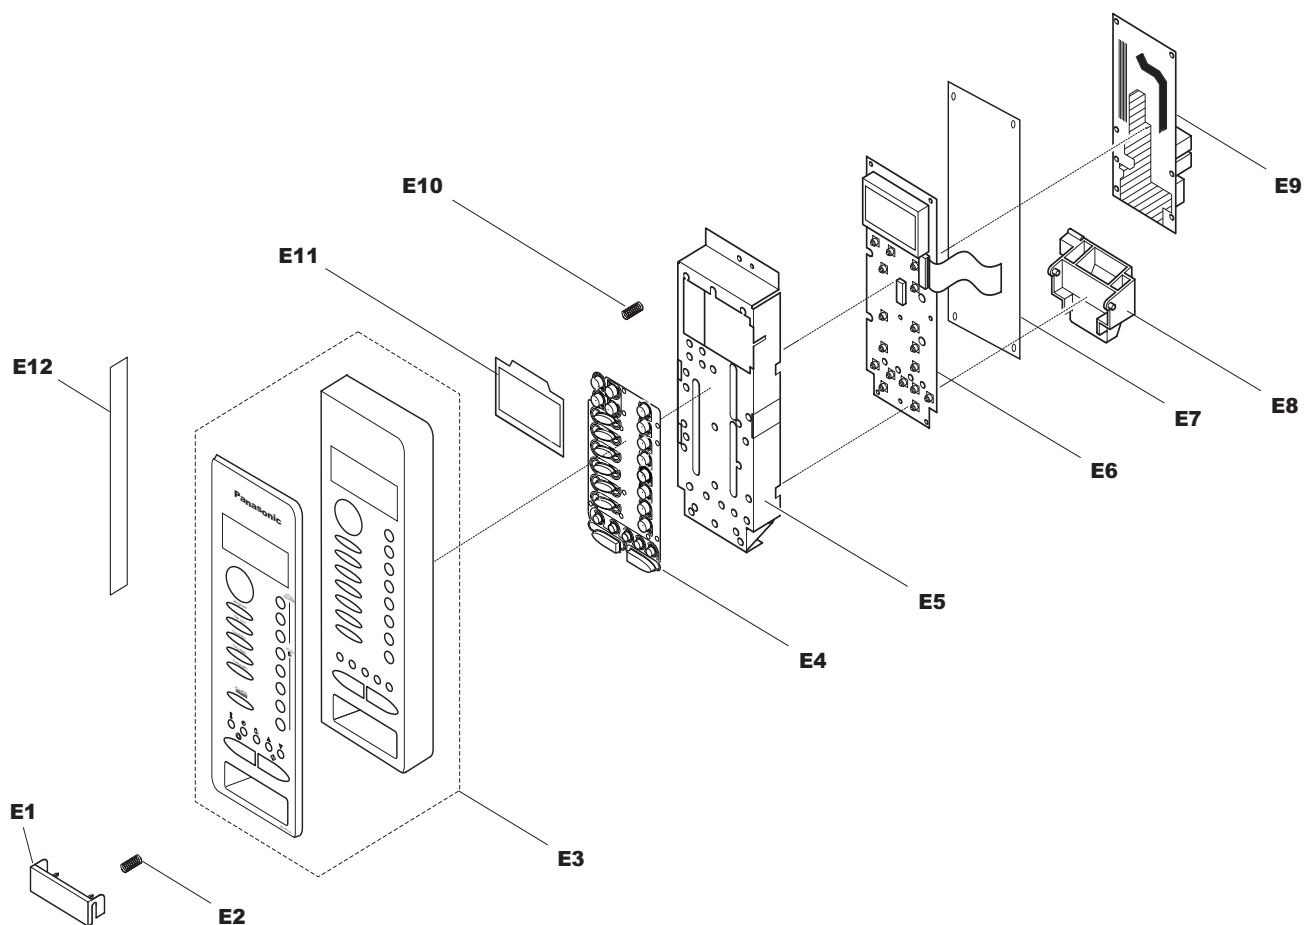

Ref. No.	Part No.	Part Name & Description	Qty	Remarks
E1	E80725D00SBP	Door Opening Button	1	
E2	E80378A0AG	Door Opening Spring	1	
E3	E800S6R10SBP	Escutcheon Base Unit	1	
E4	E80246R10SEP	Operation Button	1	A774SB
E5	E81276R00SBP	Escutcheon Backplate	1	
E6	(!) E603L6R10EP	PCB A.U.	1	
E7	E60704V00SBP	Insulation Sheet	1	
E8	E82564V00SBP	Door Opening Lever	1	
E9	(!) E603Y6R00BP	PCB D.U.	1	
E10	E80874L00SGS	Earth Spring	1	
E11	E81896R00SBP	Display Window	1	
E13	(!) E00076R10SEP	Nameplate	1	A774SB



## **NN-A754, NN-A724**

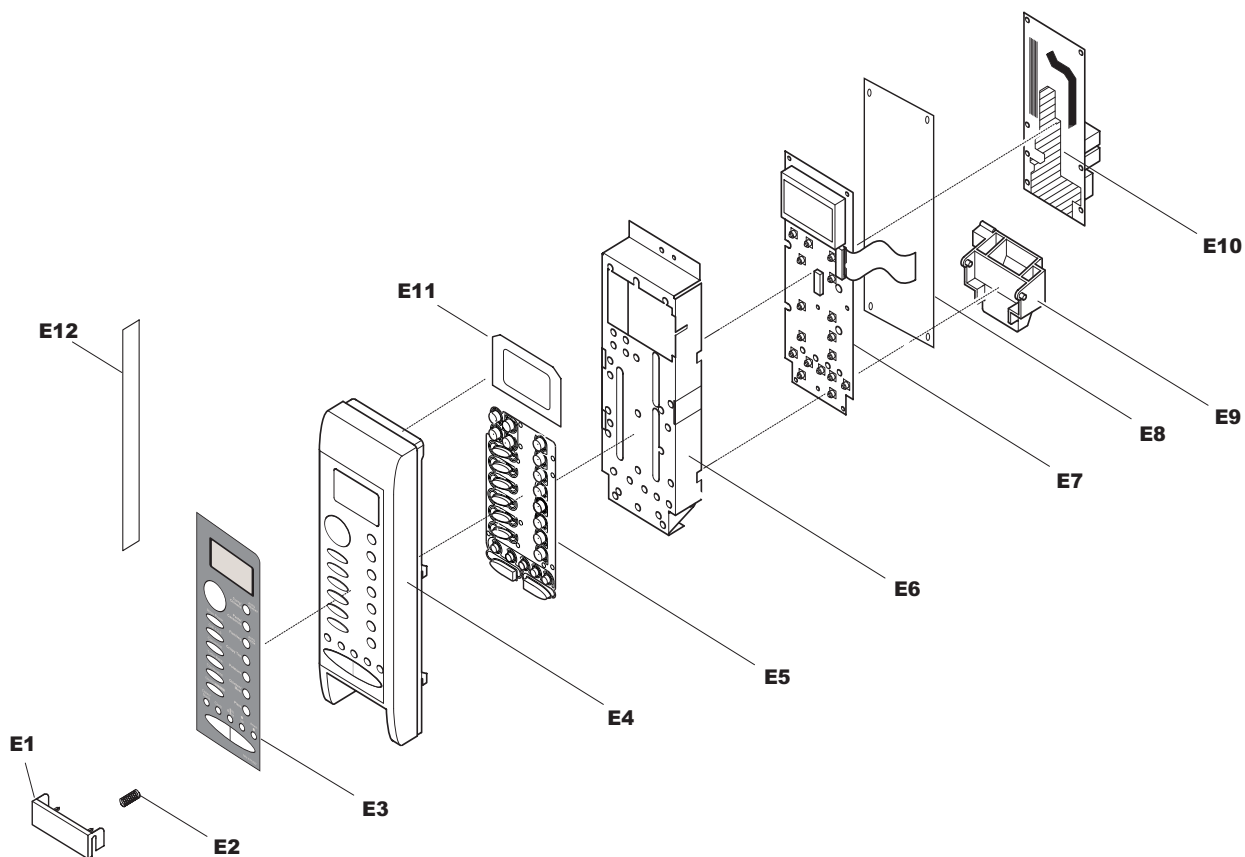


Ref. No.		Part No.	Part Name & Description	Qty	Remarks
E1		E80726R00HBP	Door Opening Button	1	A764WB
E1		E80726R00NBP	Door Opening Button	1	A734MB
E2		E80378A0AG	Door Opening Spring	1	
E3		E83376R10HEP	Escutcheon Sheet	1	A764WBEPG, A734MB
E3		E83376R10HSP	Escutcheon Sheet	1	A764WBWPG
E4		E80346R00HBP	Escutcheon Base	1	A764WB
E4		E80346R00NBP	Escutcheon Base	1	A734MB
E5		E80246R10HEP	Operation Buttons	1	
E6		E81276R00BP	Back Plate	1	
E7	(!)	E603L6R10EP	PCB A.U.	1	A764WBEPG, A734MBEPG
E7	(!)	E603L6R10SP	PCB A.U.	1	A764WBWPG
E8		E60704V00SBP	Insulation Sheet	1	
E9		E82564V00SBPP	Door Opening Lever	1	
E10	(!)	E603Y6R00BP	PCB D.U.	1	
E11		E83266R00BP	Escutcheon Sheet B	1	
E12	(!)	E00076R10HEP	Nameplate	1	A764WBEPG
E12	(!)	E00076R10NGP	Nameplate	1	A734MBEPG
E12	(!)	E00076R10HWP	Nameplate	1	A764MBWPG

NOTE: When replacing the escutcheon base, you must transfer the serial number of the microwave oven to the new base. Therefore, when ordering an escutcheon base, also order the blank name plate for your model. Write the model number and serial number on this nameplate and fix the nameplate to the new escutcheon base.

NOTE: When replacing the stainless escutcheon assembly, check the fascia is earthed to the back plate with the earth spring.


## 17 Packing and Accessories

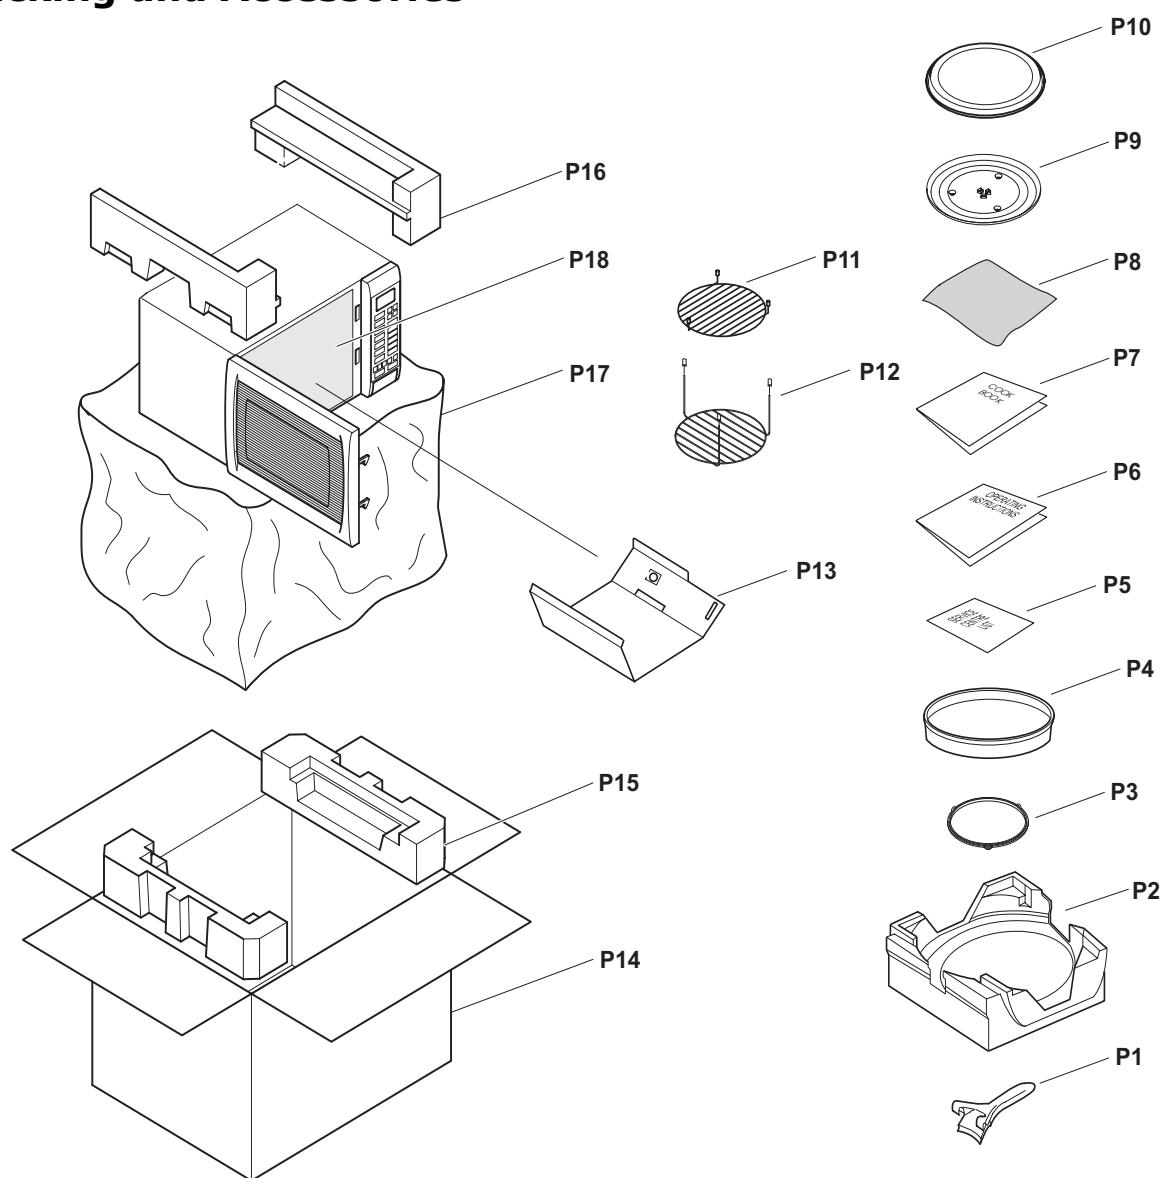

Ref. No.	Part No.	Part Name & Description	Qty	Remarks
P1	E10859040BP	Pan Handle	1	
P2	E01134N80EP	Tray Styrol	1	
P3	E290D4N00BP	Roller Ring	1	
P4	E060W9040ET	Crispy Pan	1	
P5	E01695750BP	Service Centre List	1	
P6	E00036R10EP	Operating Instruction	1	EPG Models
P6	E00036R10WP	Operating Instruction	1	WPG Model
P7	E000B6R10EP	Cook Book	1	EPG Models
P7	E000B6R10EP	Cook Book	1	WPG Model
P8	E02146A60KT	Foam Sheet	1	
P9	E06014N30BP	Glass Tray	1	
P10	E06015020VP	Enamel Tray	1	EPG Models only
P11	E060V8020BP	Wire Rack (med)	1	
P12	E060V6520UP	Wire Rack	1	
P13	E01084V40UP	Tray Packing	1	
P14	E01026R00BP	Carton Box	1	
P15	E01054V00BP	Lower Filler	1	
P16	E01044V00BP	Upper Filler	1	

Ref. No.		Part No.	Part Name & Description	Qty	Remarks
P17		EE02146700BP	Door Sheet	1	
P18		E01109010GS	Vinyl Bag	1	

18 Trim Kit Accessories

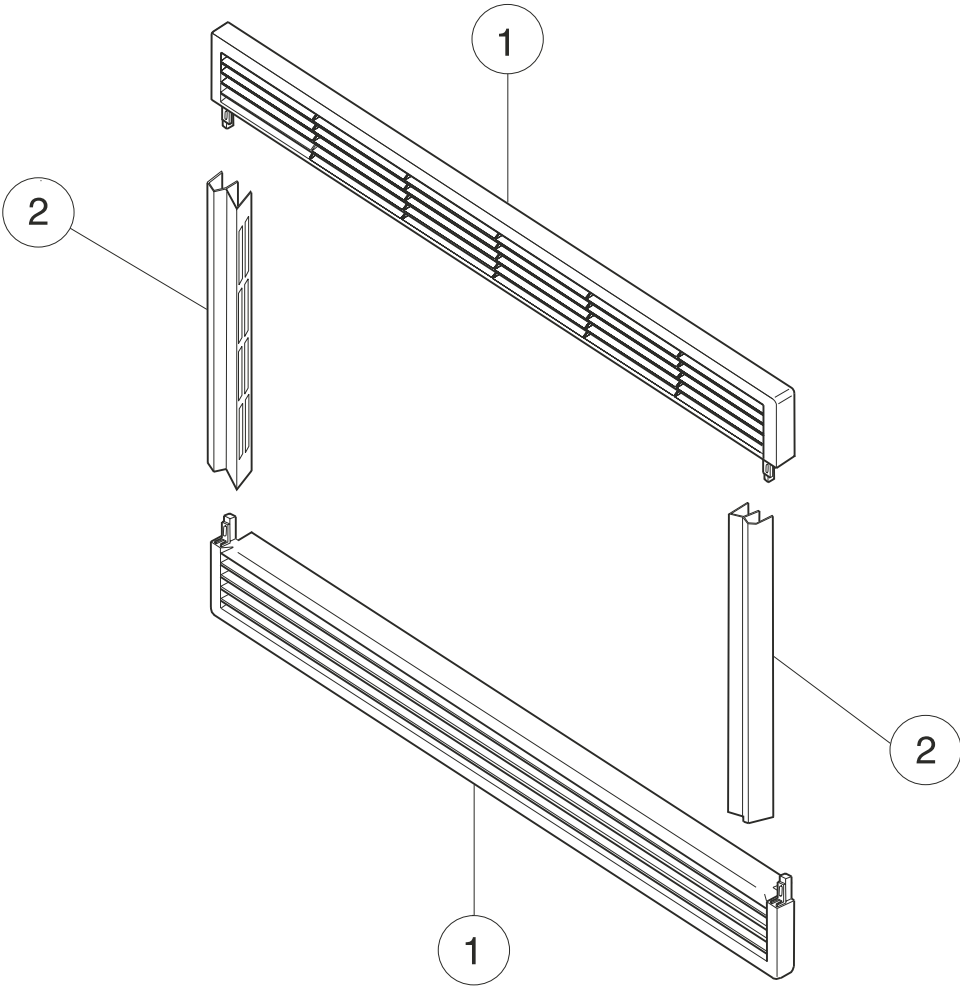

Trim Model No.	Top and Bottom Strip ref 1	Qty	Left and Right Strip ref 2	Qty	Remarks
NN-TKA70AB	E1603A510ABP	2	E1601A510ABP	2	A714AB
NN-TKA70MB	E1603A510NBP	2	E1601A510NBP	2	A734MB
NN-TKA70WB	E1603A510HBP	2	E1601A510HBP	2	A74WB
	E000QA820BP				Installation Guide

# 19 Digital Programmer Circuit

