

# Service Manual

## Refrigerator

MODEL : FRS(N)-U20IA\* / FRU-571I~  
FRS(N)-U20DA\* / FRU-541D~  
FRS(N)-U20EA\* / FRU-541E~  
FRS(N)-U20FA\* / FRU-541F~  
FRS(N)-U20GA\* / FRU-541G~

### ✓ Caution

: In this Manual, some parts can be changed for improving, their performance without notice in the parts list. So, if you need the latest parts information, please refer to PPL(Parts Price List) in Service Information Center



# CONTENTS

<b>1. WARNINGS AND PRECAUTIONS FOR SAFETY</b> .....	2
<b>2. EXTERNAN VIEW</b>	
2-1. External Size .....	3
2-2. Name of Each Parts .....	6
<b>3. SPECIFICATION</b> .....	11
<b>4. OPERATION AND FUNCTIONS</b> .....	14
<b>5. CIRCUIT OPERATION</b>	
5-1. Power Circuit Diagram .....	34
5-2. Function of Each Sensor .....	35
5-3. Relay Function .....	37
5-4. Fan Function .....	39
<b>6. DIAGRAM</b>	
6-1. Wiring Diagram .....	40
6-2. Circuit Diagram of Main PCB .....	42
<b>7. COMPONENT LOCATE VIEW</b> .....	46
<b>8. HOW TO CHECK EACH PARTS</b>	
8-1. Hose Ice Maker Tube .....	48
8-2. Bracket Geared Motor .....	49
8-3. Dispenser Micro Switch .....	50
8-4. Dispenser Solenoid Valve .....	51
8-5. Main PCB .....	52
8-6. Ice Maker .....	53
<b>9. TROUBLE DIAGNOSIS</b>	
9-1. Power Failure .....	56
9-2. Freezer Compartment .....	57
9-3. Refrigerator Compartment .....	63
9-4. Operation Noise of Refrigerator .....	67
9-5. Door .....	74
<b>10. COOLING CYCLE HEAVY REPAIR</b>	
10-1. Summary of Heavy Repair .....	75
10-2. Precaution during Heavy Repair .....	76
10-3. Practical Work for Heavy Repair .....	77
10-4. Standard Regulations for Heavy Repair .....	79
10-5. Brazing Reference Drawing .....	80
<b>11. INSTALLATION GUIDE</b>	
11-1. Installation Preparation .....	81
11-2. If the Refrigerator can not enter the Door .....	82
11-3. Refrigerator Leveling & Door Adjustment .....	84
11-4. Water Line Installation .....	85
11-5. Dispenser Water Flow .....	87
<b>12. EXPLODED VIEW &amp; PARTS LIST</b>	
12-1. FRS(N)-U20IA .....	88
12-2. FRS(N)-U20DA .....	98
12-3. FRS(N)-U20EA .....	109
12-4. FRS(N)-U20FA .....	120
12-4. FRS(N)-U20GA .....	131

## 1. WARNINGS AND PRECAUTIONS FOR SAFETY


Please observe the following safety precautions in order to use safely and correctly the refrigerator and to prevent accident and danger during repair.

1. Be care of an electric shock. Disconnect power cord from wall outlet and wait for more than three minutes before replacing PCB parts.  
Shut off the power whenever replacing and repairing electric components.
2. When connecting power cord, please wait for more than five minutes after power cord was disconnected from the wall outlet.
3. Please check if the power plug is pressed down by the refrigerator against the wall.  
If the power plug was damaged, it may cause fire or electric shock.
4. If the wall outlet is over loaded, it may cause fire.  
Please use its own individual electrical outlet for the refrigerator.
5. Please make sure the outlet is properly earthed, particularly in wet or damp area.
6. Use standard electrical components when replacing them.
7. Make sure the hook is correctly engaged.  
Remove dust and foreign materials from the housing and connecting parts.
8. Do not fray, damage, machine, heavily bend, pull out or twist the power cord.
9. Please check the evidence of moisture intrusion in the electrical components.  
Replace the parts or mask it with insulation tapes if moisture intrusion was confirmed.
10. Do not touch the icemaker with hands or tools to confirm the operation of geared motor.
11. Do not let the customers repair, disassemble and reconstruct the refrigerator for themselves.  
It may cause accident, electric shock, or fire.
12. Do not store flammable materials such as ether, benzene, alcohol, chemicals, gas, or medicine in the refrigerator.
13. Do not put flower vase, cup, cosmetics, chemicals, etc., or container with full of water on the top of the refrigerator.
14. Do not put glass bottles with full of water into the freezer.  
The contents shall freeze and break the glass bottles.
15. When you scrap the refrigerator, please disconnect the door gasket first and scrap it where children are not accessible.


## 2. EXTERNAL VIEWS

### 2-1. External Size


■ FRS(N)-U201A

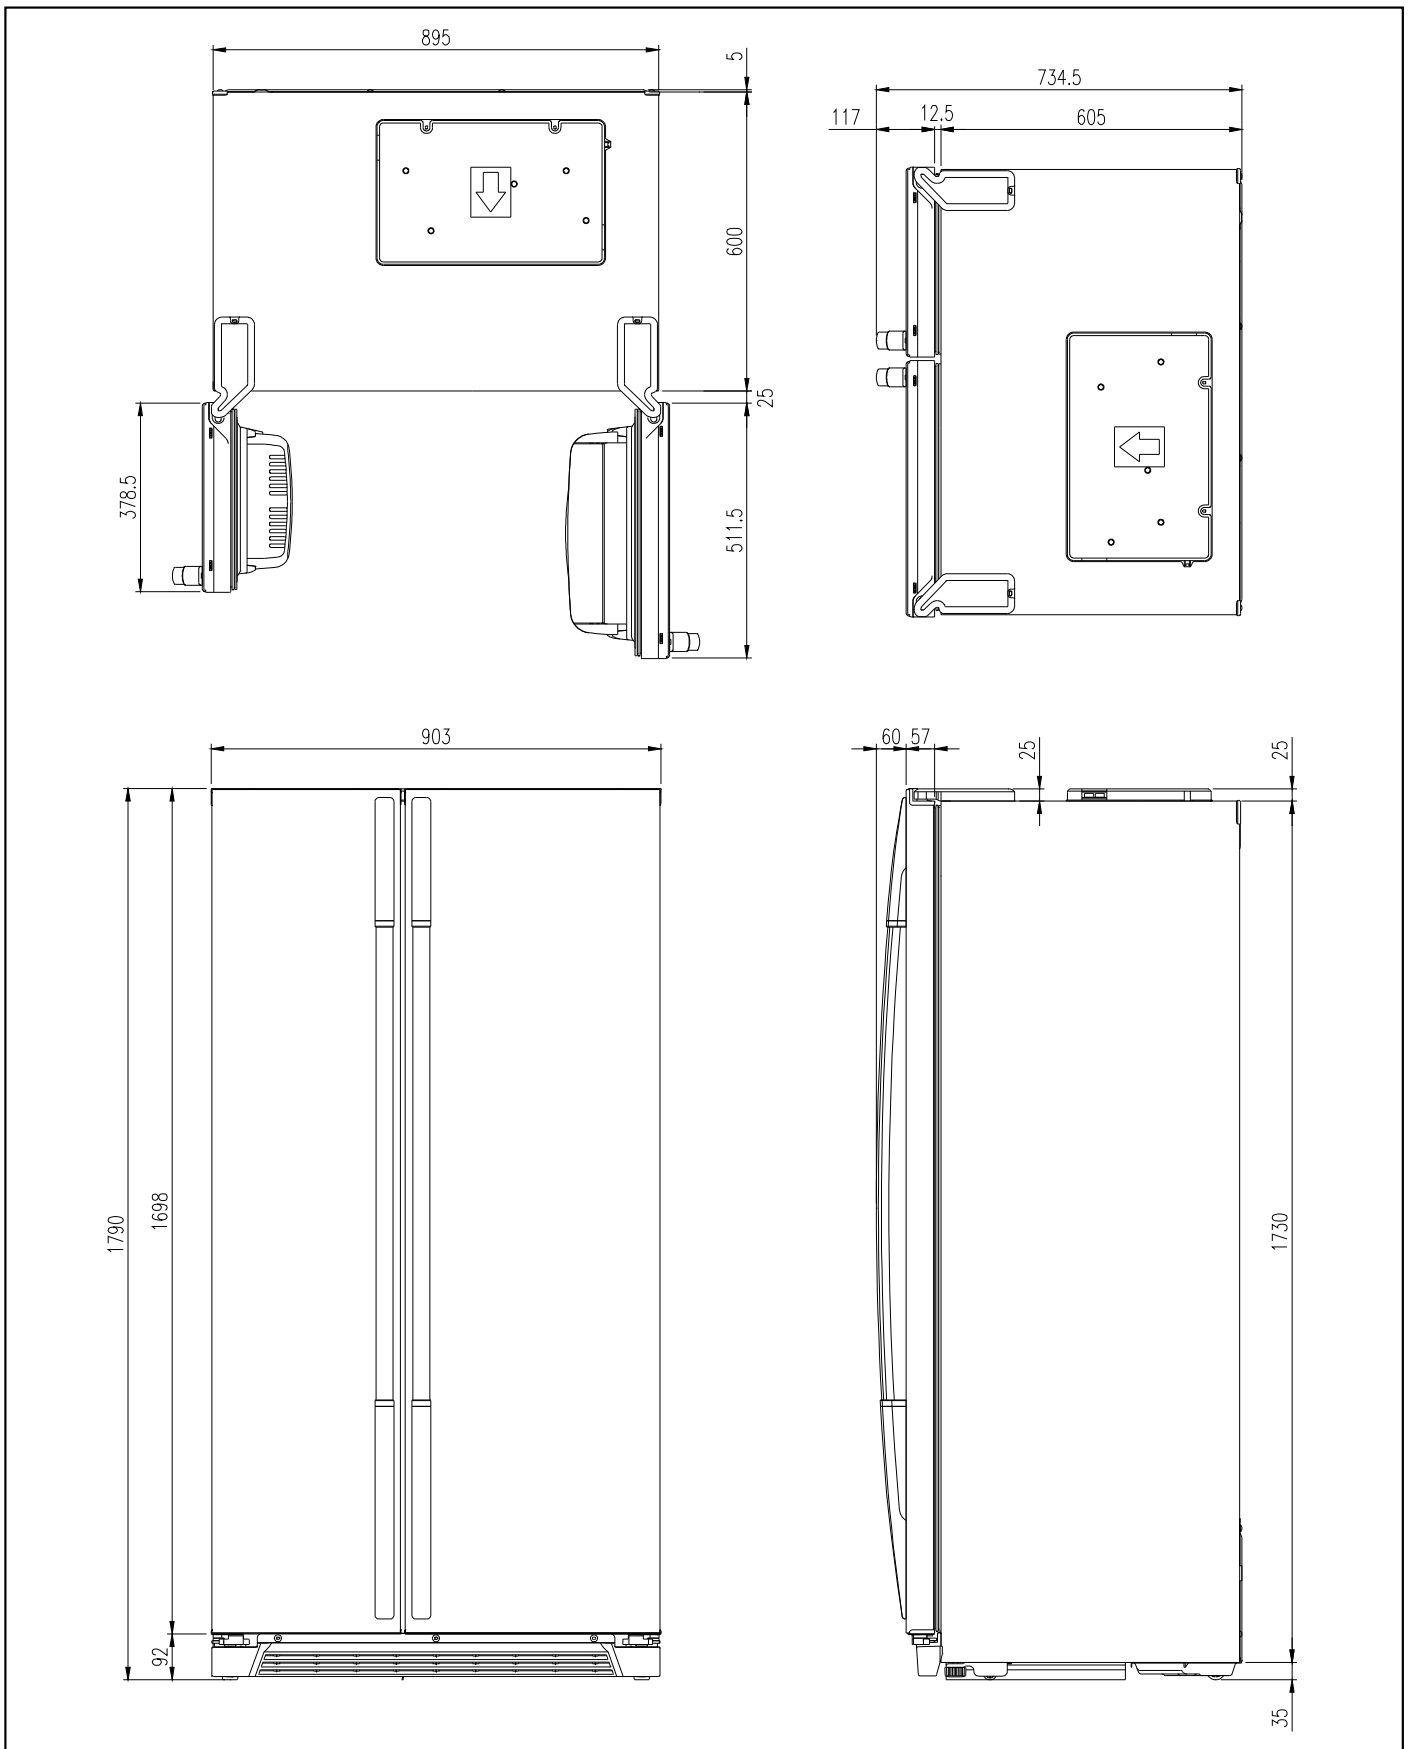

■ FRS(N)-U20DA / FRS(N)-U20EA

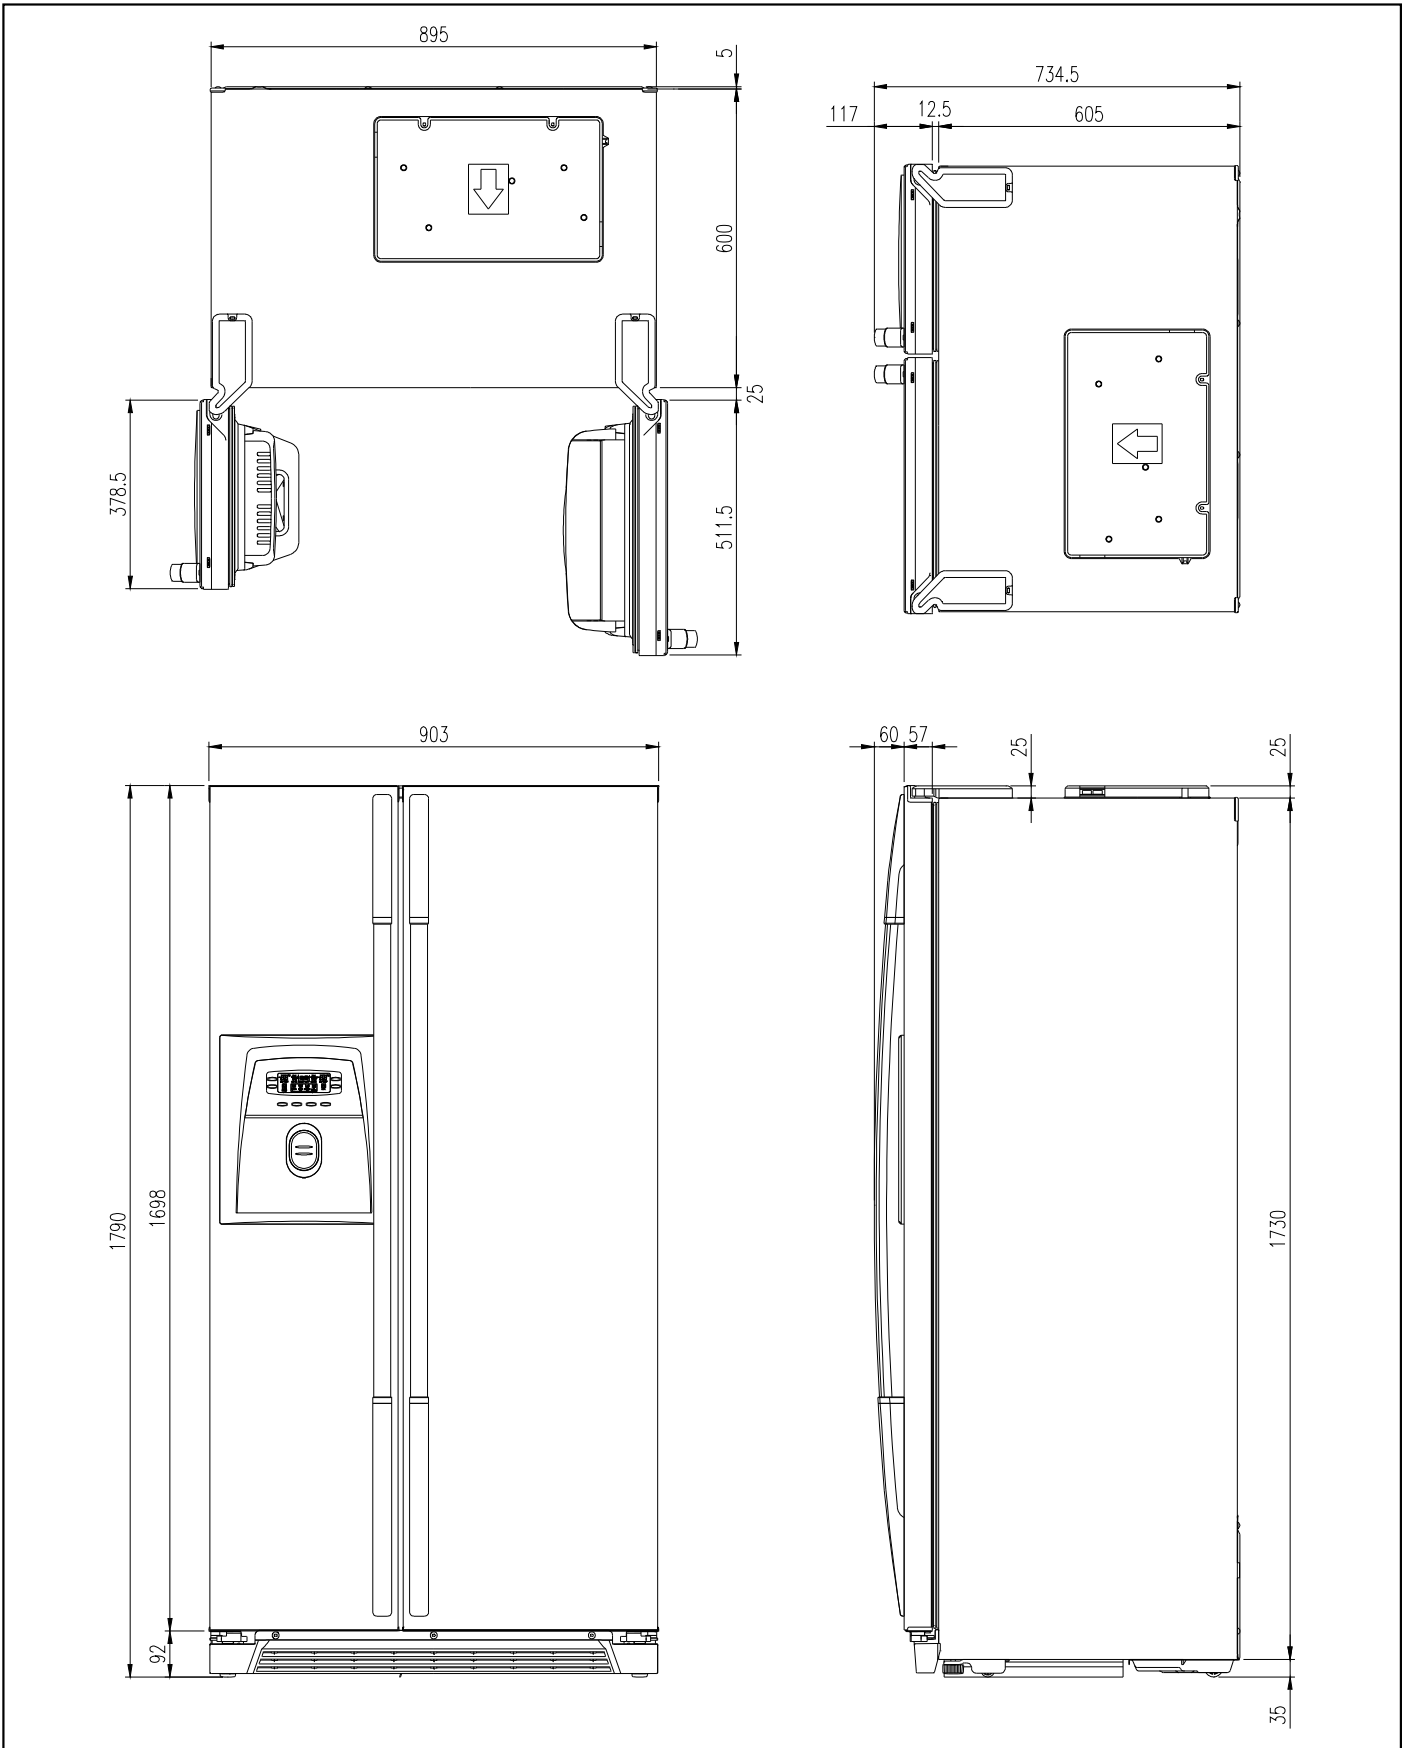


■ FRS(N)-U20FA / FRS(N)-U20GA

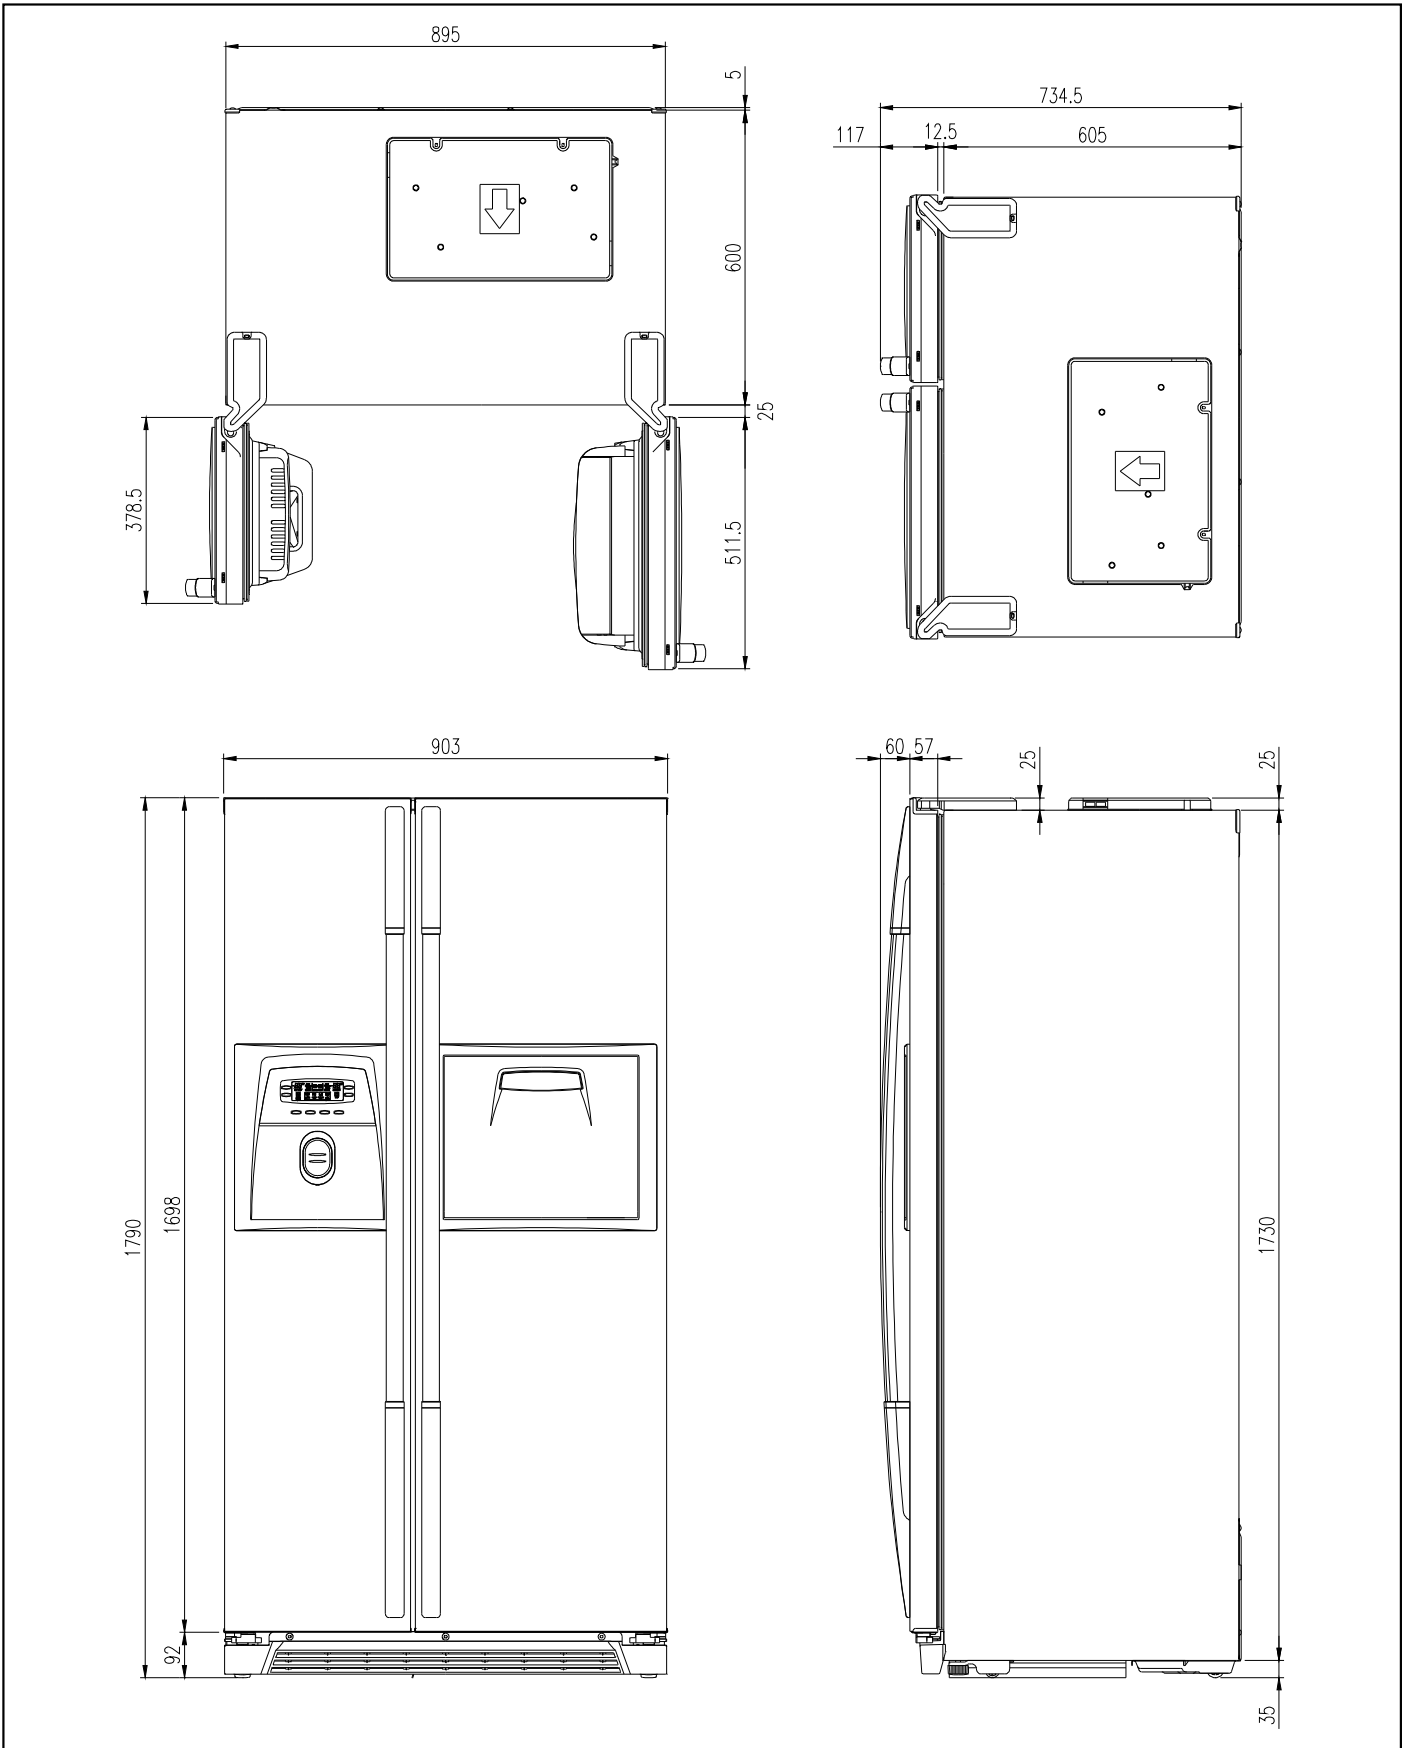


## 2-2. Name of Each Parts

■ FRS(N)-U201A

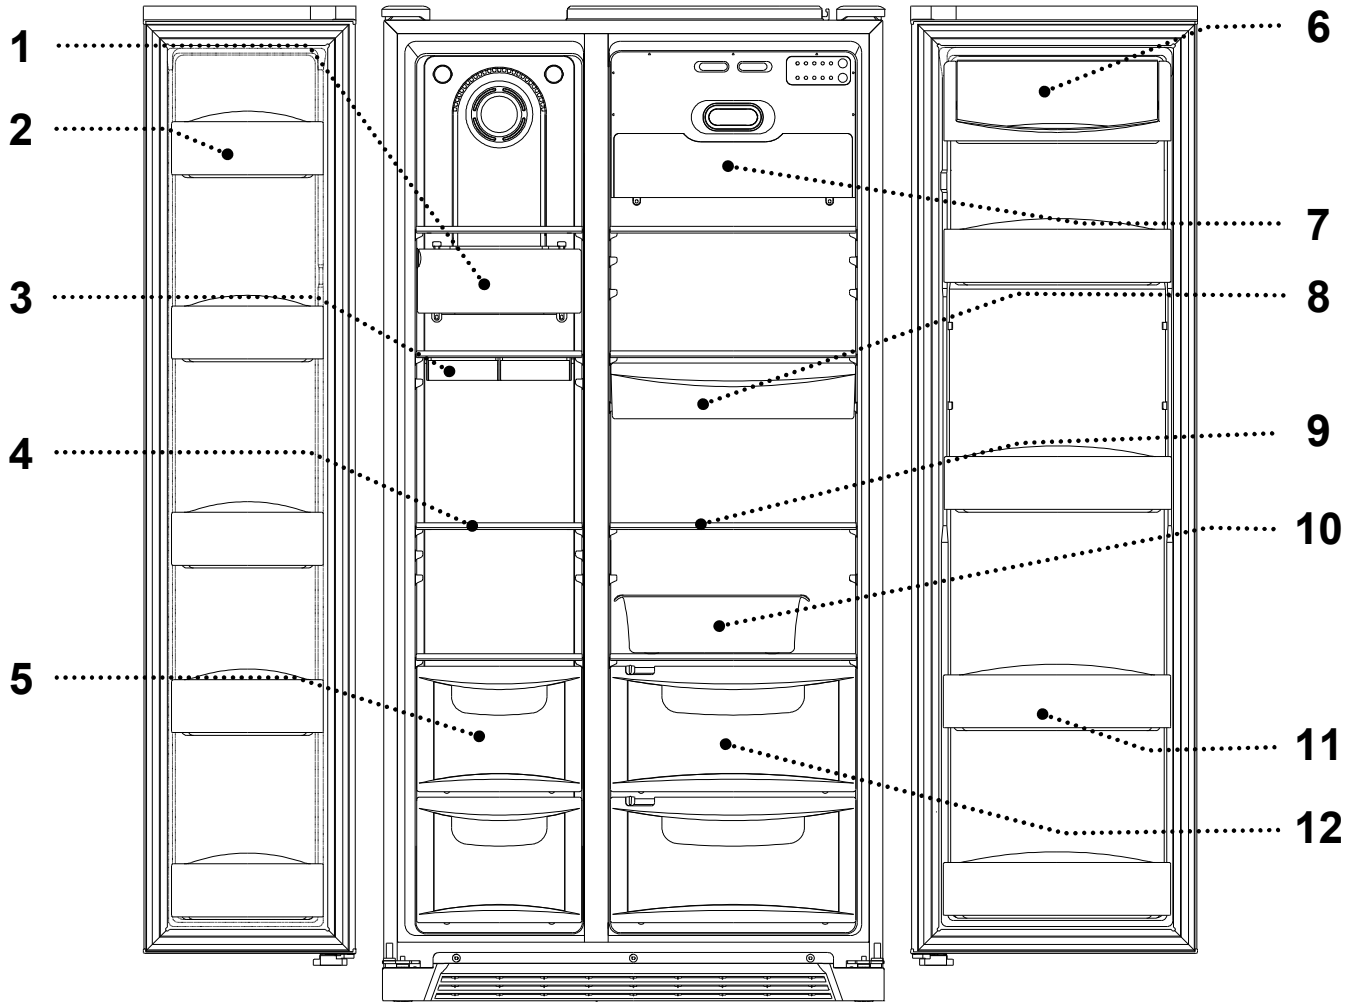

Freezer Compartment	Refrigerator Compartment
1. Freezer light	6. Dairy pocket
2. Freezer pocket	7. Refrigerator light
3. Ice tray	8. Chilled case
4. Freezer shelf	9. Refrigerator shelf
5. Freezer case	10. Movable Egg case
	11. Refrigerator pocket
	12. Refrigerator case


■ FRS(N)-U20DA

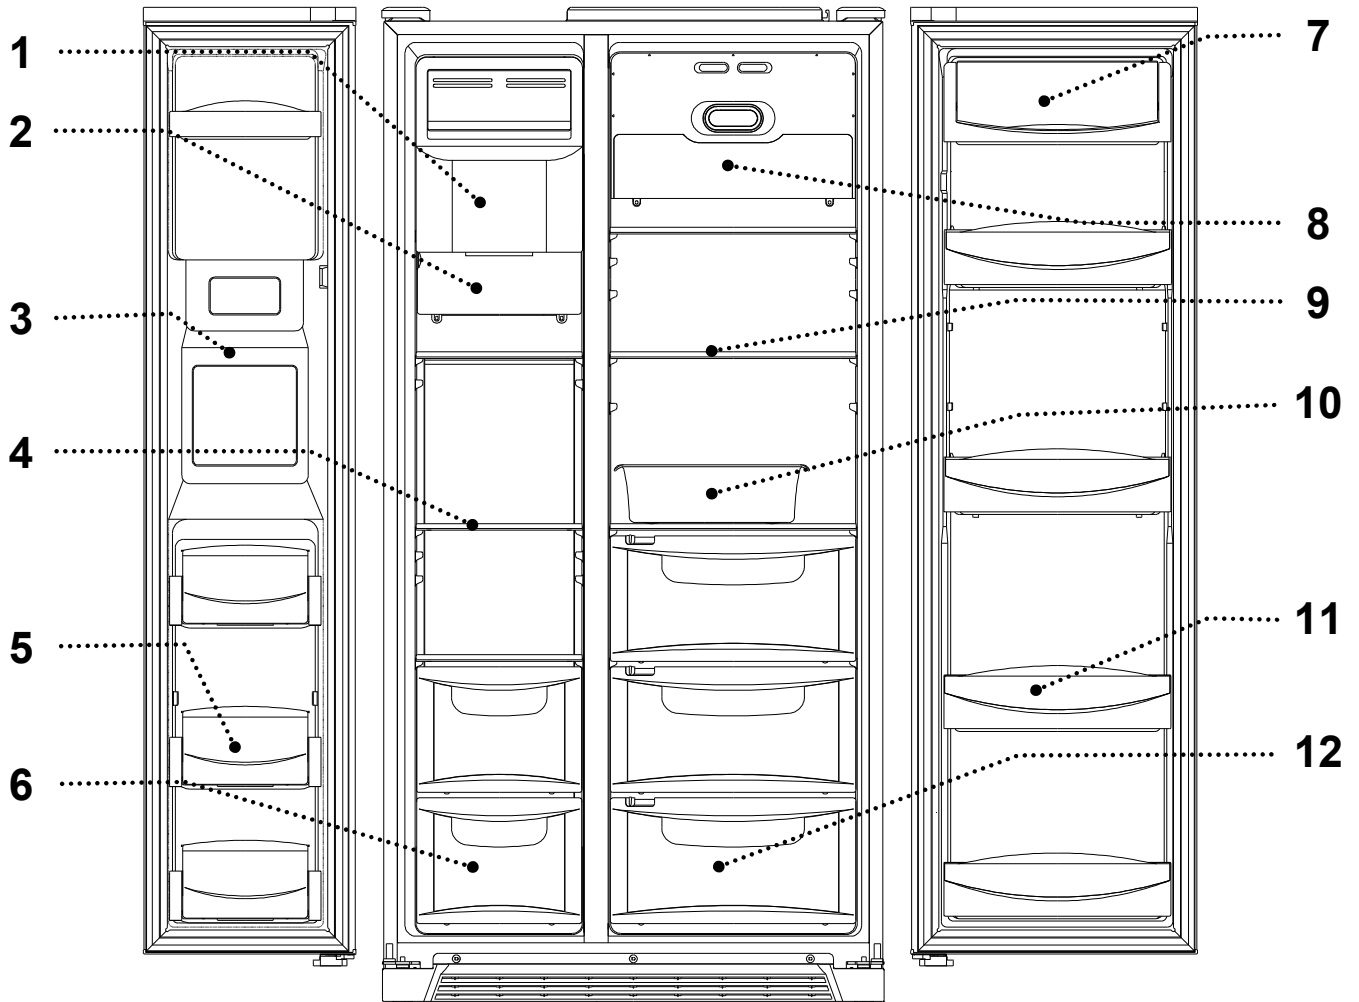

Freezer Compartment	Refrigerator Compartment
1. Ice cubes storage case	7. Dairy pocket
2. Freezer light	8. Refrigerator light
3. Water/Ice dispenser	9. Refrigerator shelf
4. Freezer shelf	10. Movable egg case
5. Freezer pocket	11. Refrigerator pocket
6. Freezer case	12. Refrigerator case




■ FRS(N)-U20EA

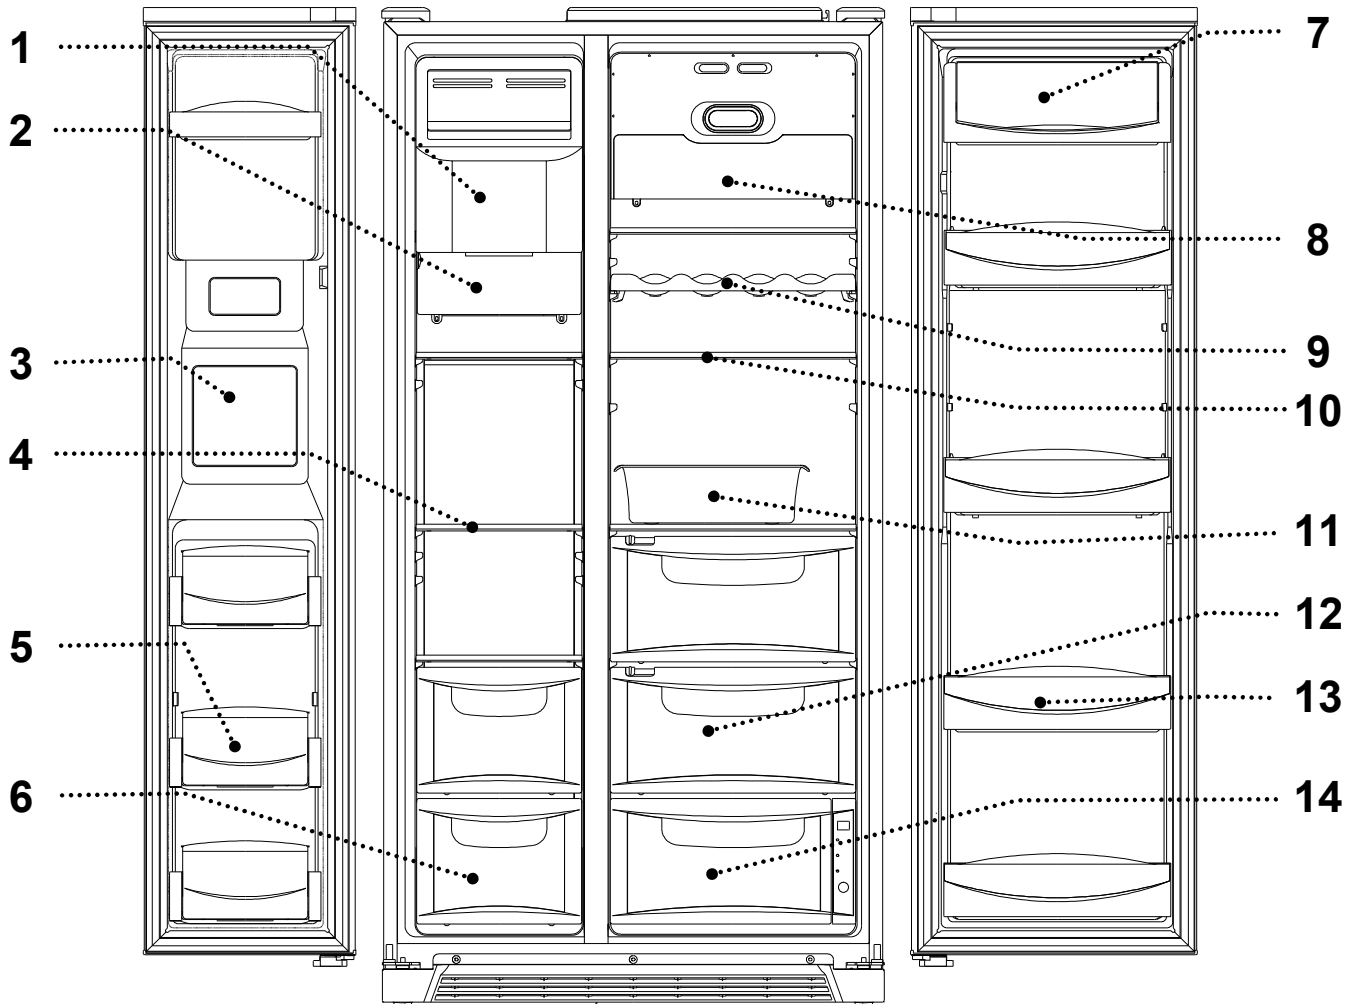


Freezer Compartment	Refrigerator Compartment
1. Ice cubes storage case	7. Dairy pocket
2. Freezer light	8. Refrigerator light
3. Water/Ice dispenser	9. Shelf wine (option)
4. Freezer shelf	10. Refrigerator shelf
5. Freezer pocket	11. Movable egg case
6. Freezer case	12. Refrigerator case
	13. Refrigerator pocket
	14. Magic cool zone

■ FRS(N)-U20FA

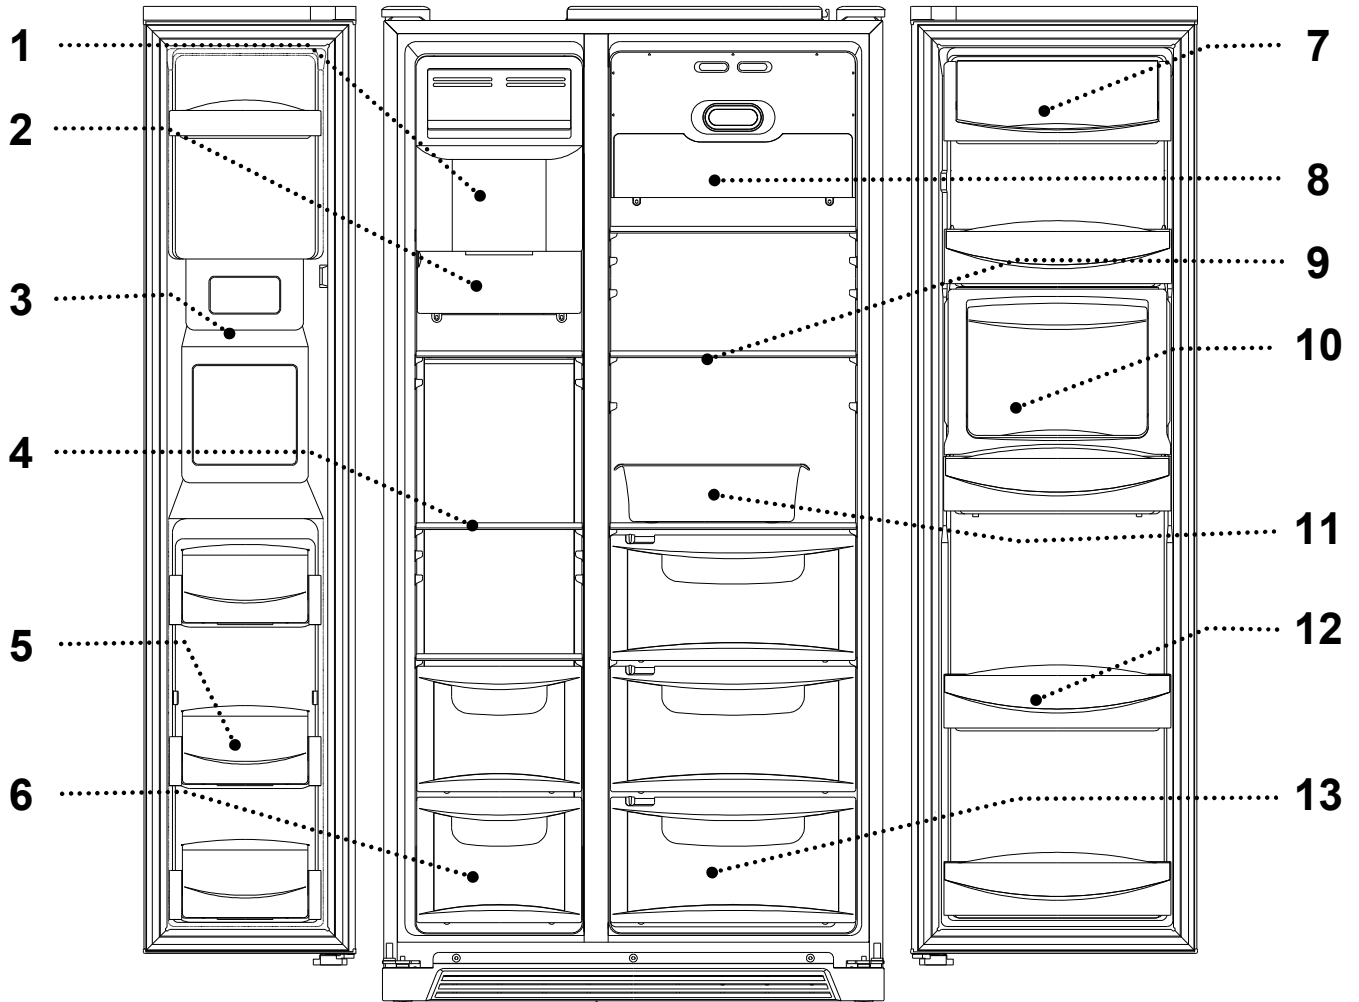

Freezer Compartment	Refrigerator Compartment
1. Ice cubes storage case	7. Dairy pocket
2. Freezer light	8. Refrigerator light
3. Water/Ice dispenser	9. Refrigerator shelf
4. Freezer shelf	10. Homebar pocket
5. Freezer pocket	11. Movable egg case
6. Freezer case	12. Refrigerator pocket
	13. Refrigerator case

■ FRS(N)-U20GA

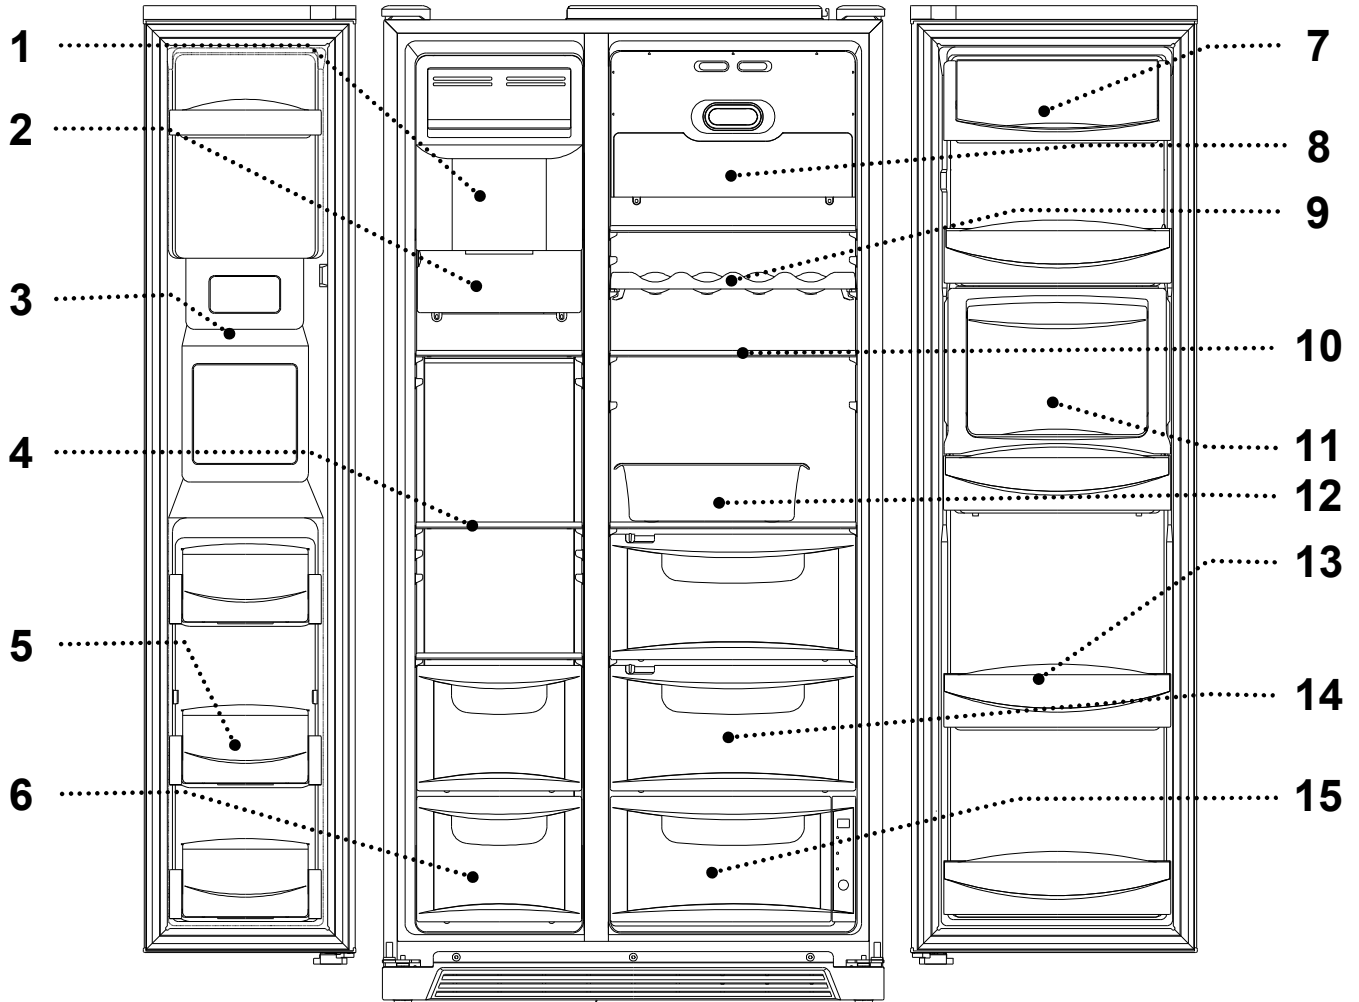

Freezer Compartment	Refrigerator Compartment
1. Ice cubes storage case	7. Dairy pocket
2. Freezer light	8. Refrigerator light
3. Water/Ice dispenser	9. Shelf wine (option)
4. Freezer shelf	10. Refrigerator shelf
5. Freezer pocket	11. Homebar pocket
6. Freezer case	12. Movable egg case
	13. Refrigerator pocket
	14. Refrigerator case
	15. Magic cool zone

### 3. SPECIFICATION

#### 3-1. Specification

Item		Specification				
Model Name		FRS(N)-U20IA	FRS(N)-U20DA	FRS(N)-U20EA	FRS(N)-U20FA	FRS(N)-U20GA
ISO Gross Volume (Li)	Total	570 Li	541 Li	525 Li	541Li	536 Li
	Freezer	209 Li	184 Li	178 Li	184 Li	184 Li
	Refrigerator	361 Li	357 Li	337 Li	357 Li	352 Li
ISO Storage Volume (Li)	Total	537 Li	504 Li	504 Li	504 Li	500 Li
	Freezer	198 Li	170 Li	170 Li	170 Li	170 Li
	Refrigerator	339 Li	334 Li	334 Li	334 Li	330 Li
Weight		104kg	113kg	115kg	115kg	117kg
External Dimension (Width x Depth x Height)		903 mm x 734.5mm x 1790 mm				
C Y C L E	Evaporator	Fin Type				
	Condenser	Fan Cooling System				
	Dryer	Molecular Sieve XH-9				
	Capillary Tube	IDΦ0.7 × T0.55 × L2200				

<b>Compressor</b>	Description	<b>HPL30YG-5</b>	<b>MK183Q-L2U</b>	<b>MK4A5Q-R1U</b>
	Part Code	395S130R50	3956183D50	3956145250
	Refrigerant ( g )	R-134a (190g)	R-134a (190g)	R-600a (76g)
<b>SWITCH P RELAY AS</b>	Description	<b>308NHB, S330</b>	<b>265RHB, S330</b>	
	Part Code	3018129810	3011402100	

<b>CORD POWER AS</b>	Description	<b>CP-2PIN (EUROPE)</b>	<b>BS-1363</b>	<b>KP-550 (AUSTRALIA)</b>	<b>CP-2PIN (Other Country)</b>
	Part Code	3011346700	3011347300	3011301080	3011347400

Item		Specification				
Model Name		FRS(N)-U20IA	FRS(N)-U20DA	FRS(N)-U20EA	FRS(N)-U20FA	FRS(N)-U20GA
S E N S O R	D-Sensor	PBN-43				
	F-Sensor	PBN-38				
	R-Sensor	PBN-43				
H E A T E R	Defrost Heater	AC220V / 192W				
	Main Duct Heater	AC220V / 7W				
	Louver Heater	AC220V / 8W				
	Dispenser Heater	-	AC220V / 5W			
	Water Pipe Heater	-	AC220V / 5W			
	Homebar Heater	-			AC220V / 10W	
E L E C T R I C A L  P A R T S	Main Fuse (Power cord)	AC250V 12A				
	Fuse Temp (Defrost)	AC250V , 10A , 77℃				
	F-Fan Motor	DC13V / 2050±100 rpm				
	R-Fan Motor	DC13V / 1850±100 rpm				
	Condenser Fan Motor	DC13V / 1100±100 rpm				
	F-Lamp	AC230~240V / 25W (2EA)				
	R-Lamp	AC230~240V / 25W (2EA)				
	Door Switch , F / R	SP201R-7DL / SP201R-7DR (SPF101B-2D / SPF101B-1D)				


※ ( ) is the specification for the model which use R-600a(refrigerant)

Refrigerant	Model Name				
R-134a	FRS-U20IA	FRS-U20DA	FRS-U20EA	FRS-U20FA	FRS-U20GA
R-600a	FRN-U20IA	FRN-U20DA	FRN-U20EA	FRN-U20FA	FRN-U20GA

## 4. OPERATION AND FUNCTIONS

### 4-1. Display


#### 4-1-1. FRS(N)-U20IA

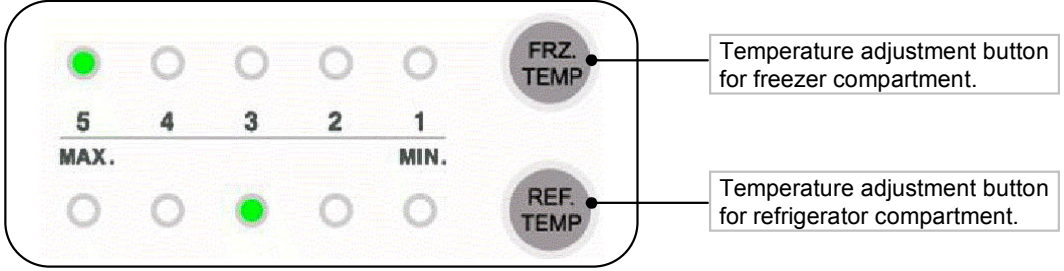INPUT	CONTROL OBJECT																								
FRZ.TEMP, REF.TEMP	Inner Control (Lamp-LED)																								
CONTENTS																									
																									
REMARKS																									
<p>1. "FRZ.TEMP" Button</p> <ol style="list-style-type: none"> <li>1) Temperature control of Freezer compartment</li> <li>2) 5 step mode of successive temperature mode.</li> <li>3) Initial mode by power input : "3"</li> </ol> <p>※Whenever pressing button, setting is repeated in the order of Medium(3) → Medium Max(4) → Max(5) → Min(1) → Medium Min(2).</p> <table border="1" data-bbox="156 1198 1165 1317"> <thead> <tr> <th>Temperature Chang</th> <th>Min</th> <th>Medium Min</th> <th>Mid</th> <th>Medium Max</th> <th>Max</th> </tr> </thead> <tbody> <tr> <td>Temp indication</td> <td>1</td> <td>2</td> <td>3</td> <td>4</td> <td>5</td> </tr> </tbody> </table> <p>2. "REF.TEMP" button.</p> <ol style="list-style-type: none"> <li>1) Temperature control of Refrigerator compartment</li> <li>2) 5 step mode of successive temperature mode.</li> <li>3) Initial mode by power input : "3"</li> </ol> <p>※Whenever pressing button, setting is repeated in the order of Medium(3) → Medium Max(4) → Max(5) → Min(1) → Medium Min(2).</p> <table border="1" data-bbox="156 1617 1165 1736"> <thead> <tr> <th>Temperature Change</th> <th>Min</th> <th>Medium Min</th> <th>Mid</th> <th>Medium Max</th> <th>Max</th> </tr> </thead> <tbody> <tr> <td>Temp indication</td> <td>1</td> <td>2</td> <td>3</td> <td>4</td> <td>5</td> </tr> </tbody> </table> <p>※ The actual inner temperature varies depending on the food status, as the indicated setting temperature is a target temperature, not actual temperature within refrigerator.</p> <p>※ Refrigeration function is weak in the initial time. Please adjust temperature as above after using refrigerator for minimum 2~3 days.</p>		Temperature Chang	Min	Medium Min	Mid	Medium Max	Max	Temp indication	1	2	3	4	5	Temperature Change	Min	Medium Min	Mid	Medium Max	Max	Temp indication	1	2	3	4	5
Temperature Chang	Min	Medium Min	Mid	Medium Max	Max																				
Temp indication	1	2	3	4	5																				
Temperature Change	Min	Medium Min	Mid	Medium Max	Max																				
Temp indication	1	2	3	4	5																				

4-1-2. FRS(N)-U20DA / EA / FA / GA

INPUT	CONTROL OBJECT
Front PCB button FREEZER SET, REFRIGERATOR SET SUPER FREEZER, SUPER REFRIGERATOR RESET FILTER, WATER / ICE, ICE MAKER LOCK ,LOCK	FCP C-LED

CONTENTS	REMARKS
----------	---------

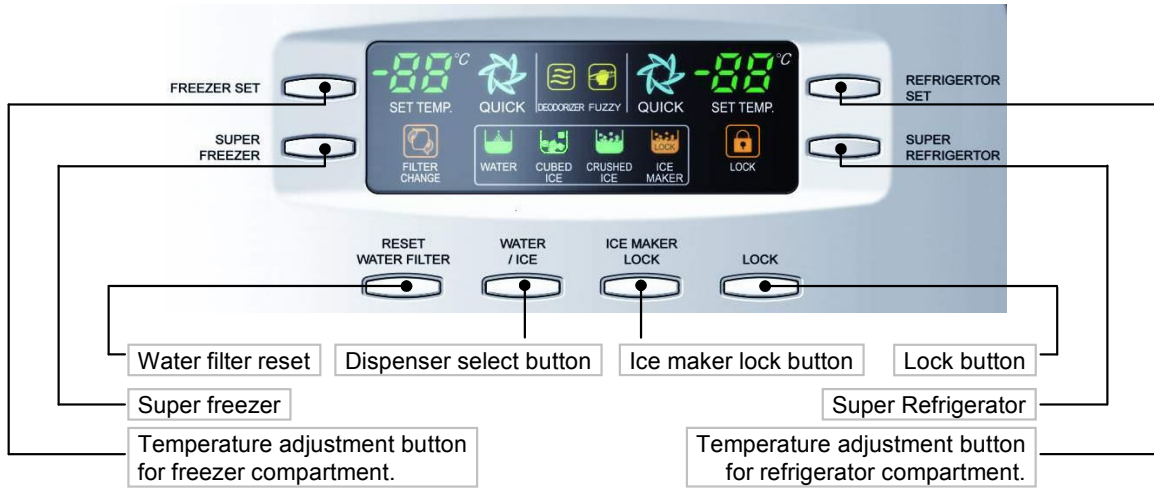

1. Display control

FCP-LED	Control
88 DISPLAY (SET TEMP.)	Initial mode : Freezer & Refrigerator set→ Medium (-19℃/4℃)
SUPER FREEZER, SUPER REFRIGERATOR ICON	Dial
FUZZY, DEODORIZER ICON	Always ON
WATER / CUBED ICE / CRUSHED ICE ICON	Dial
LOCK ICON	Dial
ICE MAKER LOCK ICON	Dial
FILTER CHANGE ICON	After six month, LED ON

2. "FREEZER SET" Button

- 1) Temperature control of freezer compartment
  - 2) 7 step mode of successive temperature mode.
  - 3) Initial mode by power input : "Medium(-19℃)"
- ※ Whenever pressing button, setting is repeated in the order of  
 Medium (-19℃) → Medium Max 1 (-20℃) → Medium Max 2 (-21℃) → Max (-22℃)  
 → Min (-16℃) → Medium Min 2 (-17℃) → Medium Min 2 (-18℃).

Letters are indicated on 88 Display LED

Temperature Change	Min	Medium Min 1	Medium Min 2	Medium	Medium Max 1	Medium Max 2	Max
Temp indication	-16℃	-17℃	-18℃	-19℃	-20℃	-21℃	-22℃

3. "SUPER FREEZER" Button

When this mode is chosen, the icon (FREEZER QUICK) is ON.

CONTENTS	REMARKS												
<p>4. "REFRIGERATOR SET" button.</p> <p>1) Temperature control of Refrigerator compartment</p> <p>2) 5 step mode of successive temperature mode.</p> <p>3) Initial mode by power input : "Medium (4℃)"</p> <p>※ Whenever pressing button, setting is repeated in the order of Medium (4℃) → Medium Max (3℃) → Max (2℃) → Min (6℃) → Medium Min (5℃).</p> <p>Letters are indicated on 88 Display LED</p> <table border="1" style="width: 100%; text-align: center;"> <tr> <td>Temperature Change</td> <td>Min</td> <td>Medium Min</td> <td style="background-color: #ADD8E6;">Mid</td> <td>Medium Max</td> <td>Max</td> </tr> <tr> <td>Temp indication</td> <td>6℃</td> <td>5℃</td> <td style="background-color: #ADD8E6;">4℃</td> <td>3℃</td> <td>2℃</td> </tr> </table> <p>5. "SUPER REFRIGERATOR" button.</p> <p>When this mode is chosen, the icon (REFRIGERATOR QUICK) is ON.</p> <p>6. "WATER / ICE" button</p> <p>1) Select Water / Cubed Ice / Crushed Ice.</p> <p>2) Icon lights up to show your selection is on. Initial mode by power input : "Water" mode.</p> <p>3) The mode of Cubed Ice or Crushed Ice continues for 1 hour and then changes to Water. (Water icon turns ON)</p> <p>7. "ICE MAKER LOCK" button</p> <p>1) Start by pushing "ICE MAKER LOCK" button</p> <p style="margin-left: 20px;">① "ICE MAKER LOCK" icon is on</p> <p style="margin-left: 20px;">② "WATER" icon is always on</p> <p>2) Stop by pushing "ICE MAKER LOCK" button again</p> <p style="margin-left: 20px;">① "ICE MAKER LOCK" icon is off</p> <p style="margin-left: 20px;">② "WATER" icon is on</p> <p>8. "RESET WATER FILTER" button</p> <p>1) The normal (ICON OFF) is on for 6 month after are first power input.</p> <p>2) After six months, icon is ON.</p> <p>3) How to reset Filter information</p> <p style="margin-left: 20px;">① Push the "RESET WATER FILTER" button for 3 seconds after change.</p> <p>9. "LOCK" button</p> <p>1) This button stops operation of different button.</p> <p style="margin-left: 20px;">① "LOCK" icon is on</p> <p style="margin-left: 20px;">② Press this button to lock out this case and to keep temperature and function setting.</p> <p>2) Push "LOCK" button again for more than a second to stop it.</p> <p>※ The actual inner temperature varies depending on the food status, as the indicated setting temperature is a target temperature, not actual temperature within refrigerator.</p> <p>※ Refrigeration function is weak in the initial time. Please adjust temperature as above after using refrigerator for minimum 2~3 days.</p>	Temperature Change	Min	Medium Min	Mid	Medium Max	Max	Temp indication	6℃	5℃	4℃	3℃	2℃	<p><b>REFERENCE :</b> Please wait for 2-3 seconds in order to take final ice or drops of water when taking out cup from the pressing switches after taking ice or water.</p>
Temperature Change	Min	Medium Min	Mid	Medium Max	Max								
Temp indication	6℃	5℃	4℃	3℃	2℃								




## 4-2. Defrost Mode

INPUT	CONTROL OBJECT	
1. Defrosting Cycle	1. Comp 2. F-Fan 3. R-Fan 4. D-Heater	
CONTENTS		REMARKS
<p>1. Defrost Mode</p> <div style="display: flex; align-items: flex-start;"> <div style="margin-right: 20px;"> <pre> graph TD     A[Pre-Cool] --&gt; B[Heater Defrosting]     B --&gt; C[Pause]     C --&gt; D[Fan-Delay]           </pre> </div> <div> <p><b>Pre-Cool</b></p> <p>1) Time : 50 minutes            2) Comp , F-fan : ON                R-fan : Control                D-HTR : OFF            3) If F-sensor <math>\leq -27^{\circ}\text{C}</math>, then Pre-Cool becomes. OFF</p> <p><b>Heater Defrosting</b></p> <p>1) Comp, F-fan, R-fan : OFF                D-HTR : ON</p> <p>2) Time limit            30 seconds : Heater is ON regardless of D-sensor temperature right after defrosting start            30 minutes : in case of D1- Error            80 minutes : in normal control state            3) If D-sensor <math>\geq 13^{\circ}\text{C}</math>, Heater Defrosting is OFF</p> <p><b>Pause</b></p> <p>Time : 7 minutes            Comp, F-fan, R-fan, Heater etc. : OFF</p> <p><b>Fan-Delay</b></p> <p>1) Time : 5 minutes            Comp : ON and F-fan, R-fan, Heater : OFF</p> </div> </div> <p>2.The defrost mode start with the following conditions</p> <ol style="list-style-type: none"> <li>1) Total operation time of comp. becomes : 6,8,10,..... 24 hours.             <ol style="list-style-type: none"> <li>① Comp. operating rate : more 85%</li> <li>② Total door open time : 2 minutes (Any door, F or R open time is over 2 minutes.)</li> <li>③ Any error mode : R1, F1, D1, F3, RT/S, Door-switch etc.)</li> </ol> </li> <li>2) Defrosting mode starts unconditionally as long as total comp. work time is 24 hours, even if the above conditions 1) are not satisfied.</li> <li>3) Defrosting mode starts immediately as long as total time of [comp. ON + comp. OFF] is over 60 hours, even if the above 1) and 2) conditions are not satisfied.</li> </ol> <p>3. In providing initial power (or returning power failure)</p> <p>If D-sensor temp. <math>\leq 3.5^{\circ}\text{C}</math>, defrosting mode starts .</p>		

CONTENTS	REMARKS
----------	---------

4. Flow Chart of Defrosting Start

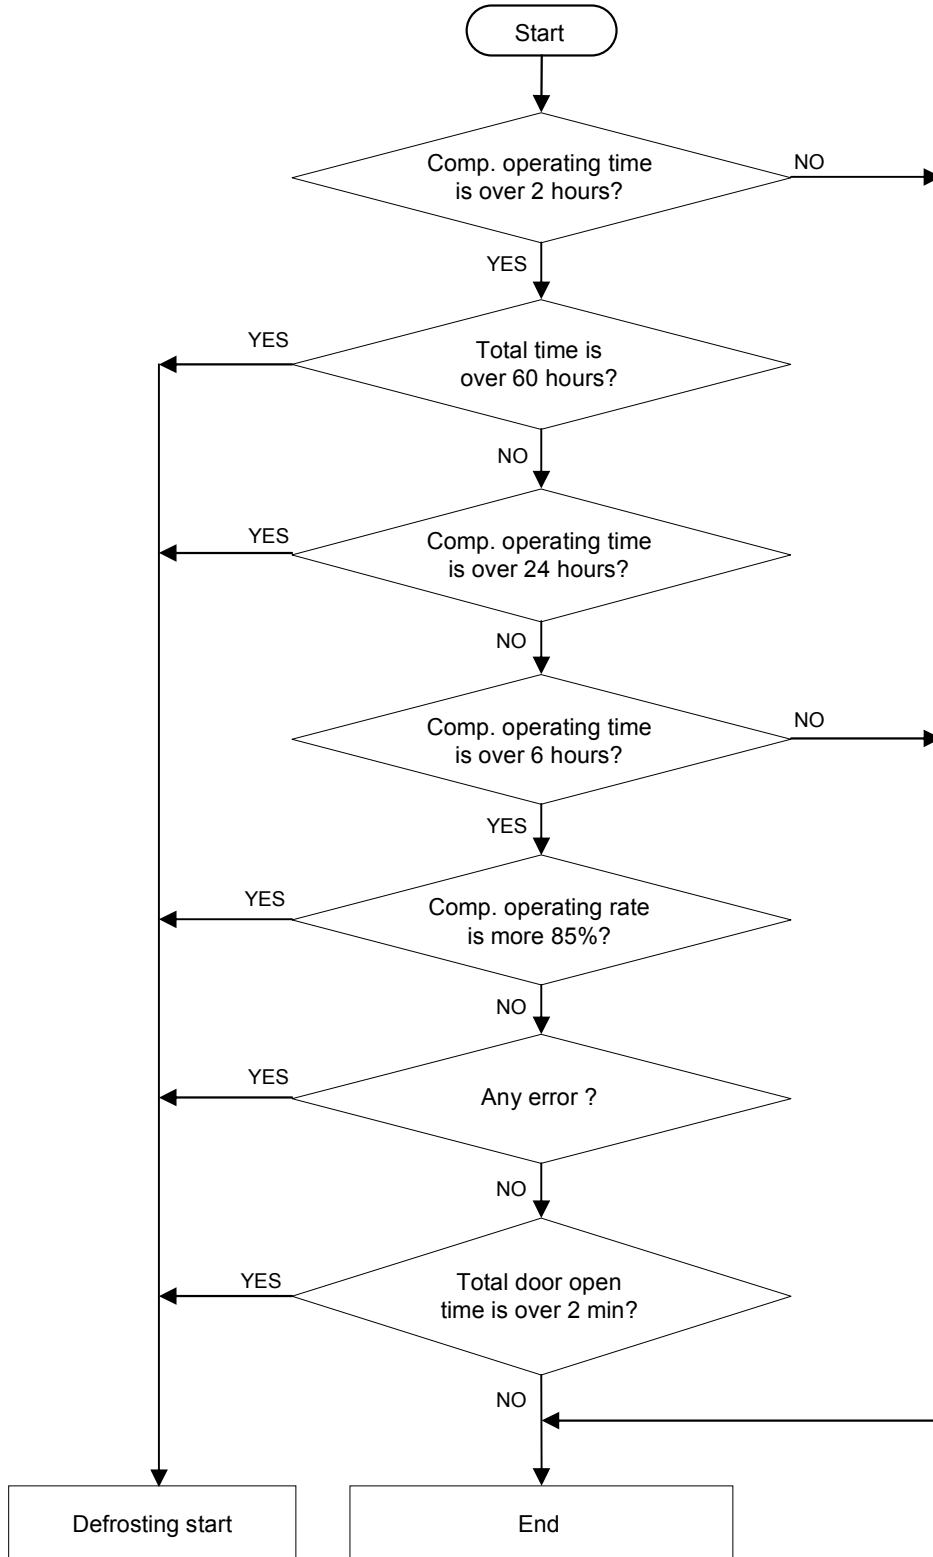

REMARKS

### 4-3. c (Forced Defrosting) Mode

INPUT	CONTROL OBJECT	
1. Defrosting Cycle	1. Comp 2. F-Fan 3. R-Fan 4. D-Heater	
CONTENTS		REMARKS
<p>1. A/S Defrosting Mode (Heater defrost → Pause → Fan Delay)</p> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; padding: 5px; margin-right: 10px; text-align: center;"> <b>Heater Defrosting</b> </div> <div style="margin-right: 10px;">↓</div> <div style="border: 1px solid black; padding: 5px; margin-right: 10px; text-align: center;"> <b>Pause</b> </div> <div style="margin-right: 10px;">↓</div> <div style="border: 1px solid black; padding: 5px; text-align: center;"> <b>Fan-Delay</b> </div> </div> <p><b>Heater Defrosting</b>                      1) Comp, F-fan, R-fan : OFF                         D-HTR : ON                      2) Time limit                         30 seconds : Heater is ON regardless of D-sensor temperature right after defrosting start                         30 minutes : in case of D1-Error                         80 minutes : in normal control state                      3) If D-sensor ≥ 13 °C, Heater Defrosting is OFF</p> <p><b>Pause</b>                      Time : 7 minutes                      Comp, F-fan, R-fan, Heater etc. : OFF</p> <p><b>Fan-Delay</b>                      1) Time : 5 minutes                         Comp : ON                         F-fan, R-fan, Heater : OFF</p> <p>2. How to start                      1) Push "REF.TEMP" button 5 times while pushing "FRZ.TEMP" button simultaneously. ----- FRS-U201A                      2) In "LOCK" mode, push "REFRIGERATOR SET" button 5 times while pushing "FREEZER SET" button simultaneously. ----- FRS(N)-U20DA</p> <p>3. How to proceed                      1) Delete Pre-cool mode. (Others are same as normal defrosting)                      2) Heater is ON regardless of D-sensor temp. at first 30 seconds. (Check of defrosting current)</p>		

### 4-4. Fan Voltage of Control Mode

INPUT	CONTROL OBJECT									
1. F-Sensor 2. R-Sensor	1. F-FAN, R-FAN, C-FAN									
CONTENTS		REMARKS								
<p>1. Fan voltage of control mode</p> <table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <thead> <tr> <th style="width: 25%;">FAN</th> <th style="width: 25%;">F-FAN</th> <th style="width: 25%;">R-FAN</th> <th style="width: 25%;">C-FAN</th> </tr> </thead> <tbody> <tr> <td>Voltage</td> <td>13 V</td> <td>13 V</td> <td>13 V</td> </tr> </tbody> </table> <p>※ Refer to the 5-4. (Fan Function )</p>		FAN	F-FAN	R-FAN	C-FAN	Voltage	13 V	13 V	13 V	
FAN	F-FAN	R-FAN	C-FAN							
Voltage	13 V	13 V	13 V							

#### 4-5. Louver Heater Control

INPUT	CONTROL OBJECT
1. Comp	Louver Heater
CONTENTS	
It is linked with comp.	
REMARKS	

#### 4-6. Buzzer or Alarm Control

INPUT	CONTROL OBJECT
1. Control (Inner or F-PCB) buttons 2. Door Switch 3. Initial Power Input	Buzzer
CONTENTS	
1. Buzzer sounds if any button of Inner Control is pushed. 2. Buzzer sounds 4 times 3 seconds after initial power input. 3. Buzzer sounds for 3 or 1 times in case of A/S forced defrosting and short (pull down) operation or explanation mode. 4. If door is open, buzzer sounds after every 1 minutes for 5 minutes (Door open alarm)	
REMARKS	

#### 4-7. Control of Interior Lights (FRS(N)-U20DA / EA / FA / GA)

INPUT	CONTROL OBJECT
1. Refrigerator door switch 2. Freezer door switch 3. Home bar door switch 4. Dispenser switch	Lamp
CONTENTS	
1. Control refrigerator compartment lights R-Lights turn ON/OFF by R-door switch ON/OFF (※ For 10 minutes after sensing door open, the lights turn off automatically through door close is not sensed.)  2. Control of freezer compartment lights. F-Light turn ON/OFF by F-door switch ON/OFF (※ For 10 minutes after sensing door open, the lights turn off automatically through door close is not sensed.)  3. R-lights ON/OFF by home bar door switch ON/OFF. ( for only model with home bar ) R-lights turn ON for 10 minutes after sensing home bar door switch open.  4. Dispenser lamp control ( for only model with water/ice dispenser ) Dispenser lamp turns ON/OFF by Dispenser switch. Dispenser lamp turns ON for 4 seconds after sensing switch close.	
REMARKS	

## 4-8. Demonstration







### 4-8-1. FRS(N)-U20IA

INPUT	CONTROL OBJECT
1. FRZ. TEMP 2. Door Switch	Comp F/R-Fan Heater
CONTENTS	
1. Start Open and close "Freezer door switch" 5 times while pushing "FRZ. TEMP" button simultaneously. 2. Control 1) All other electrical components are OFF except for F-fan / R-fan 2) Fan Control Door open → Fan ON / Door close → Fan OFF. 3) Display control "FRZ. LED" and "REF. LED" are ON in good order 3. Stop 1) During Demo mode, push "Freezer door switch" open and close 5 times while pushing "FRZ. TEMP" button simultaneously. 2) Power in again	REMARKS

### 4-8-2. FRS(N)-U20DA / EA / FA / GA

INPUT	CONTROL OBJECT
1. "FREEZER SET, WATER/ICE" Button , Door switch	Comp F/R-Fan Heater
CONTENTS	
1. Start Push "ICE/WATER" button 5 times while pushing "FREEZER SET" button simultaneously. 2. Control 1) All other electrical components are OFF except for F-fan / R-fan 2) Fan Control Door OPEN → Fan ON / Door close → Fan OFF. 3. Stop or termination 1) During Demo mode, push "ICE/WATER" button 5 times while pushing "FREEZER SET" button simultaneously. 2) Power in again	REMARKS

#### 4-9. Compensation of R-sensor ON/OFF Point

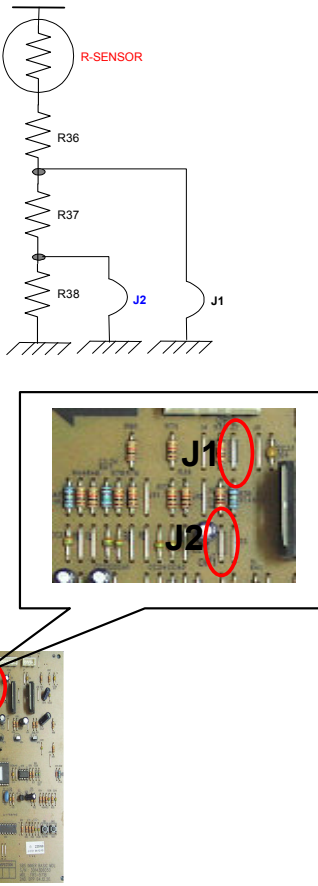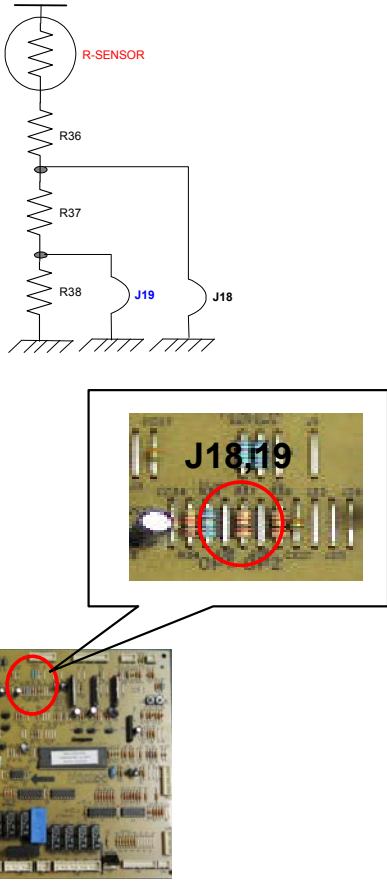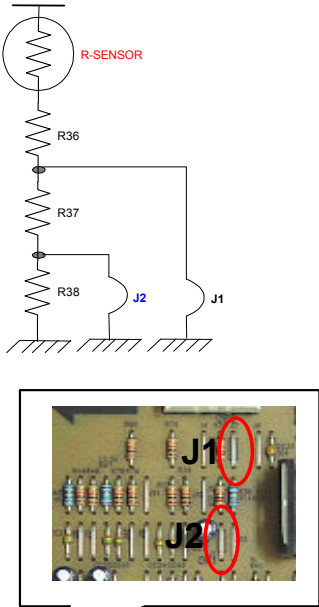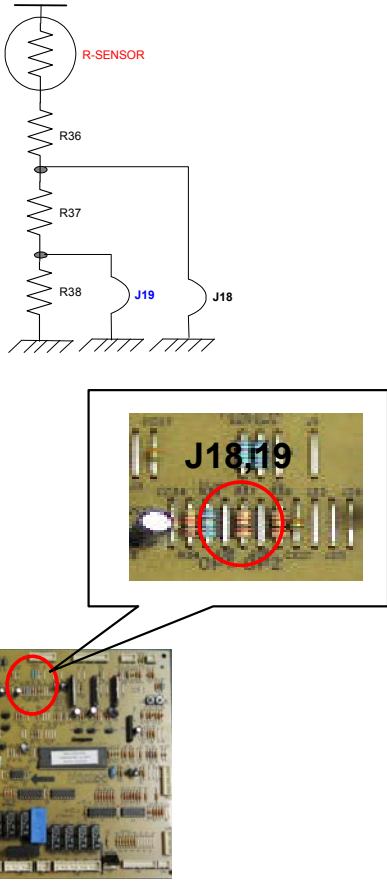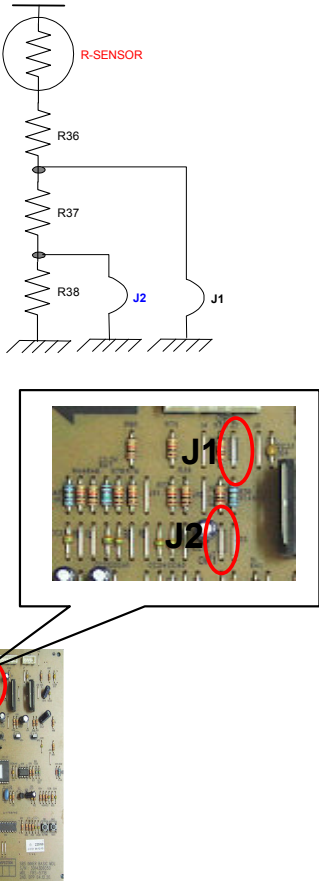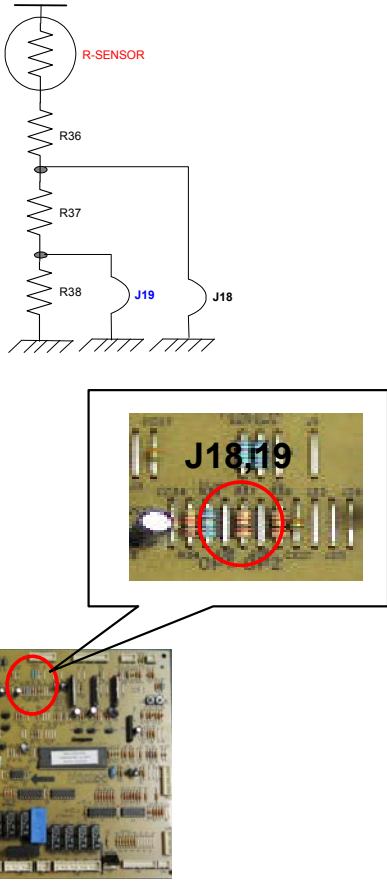INPUT	CONTROL OBJECT																										
Main PCB	Resistance of R-sensor Mid ON/OFF Point																										
CONTENTS		REMARKS																									
<p>Compensation of R-sensor ON/OFF temp. (down)</p> <p>In case temperature of refrigerator compartment is weak or insufficient, take the following action.</p> <table border="1" data-bbox="143 651 1214 1644"> <thead> <tr> <th data-bbox="143 651 679 703">FRS(N)-U20IA</th> <th data-bbox="679 651 1214 703">FRS(N)-U20DA/EA/FA/GA</th> </tr> </thead> <tbody> <tr> <td data-bbox="143 703 679 1644">  </td> <td data-bbox="679 703 1214 1644">  </td> </tr> </tbody> </table>		FRS(N)-U20IA	FRS(N)-U20DA/EA/FA/GA			<p>※ Refer to the 5-2. (Function of each sensor)</p>																					
FRS(N)-U20IA	FRS(N)-U20DA/EA/FA/GA																										
																											
<p>R36 : R-SENSOR standard resistance in normal mode (31.4K)</p> <p>R37 : In case of weak ref., cut J1 (or J18) to down the standard resistance by 1.5deg(2K)</p> <p>R38 : In case of weak ref., cut J2 (or J19) to down the standard resistance by 1.5deg(2K)</p> <table border="1" data-bbox="260 1800 999 2033"> <tbody> <tr> <td rowspan="3">FRS(N) -U20IA</td> <td>J1</td> <td>-</td> <td>cut</td> <td>cut</td> </tr> <tr> <td>J2</td> <td>-</td> <td>-</td> <td>cut</td> </tr> <tr> <td>Temperature compensation</td> <td>0°C</td> <td>-1.5°C</td> <td>3°C</td> </tr> <tr> <td rowspan="3">FRS(N) -U20DA</td> <td>J18</td> <td>-</td> <td>cut</td> <td>cut</td> </tr> <tr> <td>J19</td> <td>-</td> <td>-</td> <td>cut</td> </tr> <tr> <td>Temperature compensation</td> <td>0°C</td> <td>-1.5°C</td> <td>3°C</td> </tr> </tbody> </table>		FRS(N) -U20IA	J1	-	cut	cut	J2	-	-	cut	Temperature compensation	0°C	-1.5°C	3°C	FRS(N) -U20DA	J18	-	cut	cut	J19	-	-	cut	Temperature compensation	0°C	-1.5°C	3°C
FRS(N) -U20IA	J1		-	cut	cut																						
	J2		-	-	cut																						
	Temperature compensation	0°C	-1.5°C	3°C																							
FRS(N) -U20DA	J18	-	cut	cut																							
	J19	-	-	cut																							
	Temperature compensation	0°C	-1.5°C	3°C																							

## 4-10. Error Display

### 4-10-1. FRS(N)-U20IA (LED Display of Inner Control)

INPUT	CONTROL OBJECT																									
Temperature Control Buttons	Lamp LED of Inner control																									
CONTENTS		REMARKS																								
<p>1. How to start</p> <p>1) Press "FRZ.TEMP" button 5 times while pressing "REF.TEMP" button at the same time.</p> <p>2. How to stop</p> <p>1) Push "FRZ.TEMP" button 1 time.</p> <p>2) It stops automatically in 4 minutes from the start.</p> <p>3. All the error codes are reset if they turn to be normal.</p> <p>4. Error display</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 50%;">CONTENTS</th> <th style="width: 50%;">Display</th> </tr> </thead> <tbody> <tr> <td>F-sensor : open ("Lo"), short ("Hi")</td> <td>FRZ. LED "5" is on and off</td> </tr> <tr> <td>R-sensor : open ("Lo"), short ("Hi")</td> <td>FRZ. LED "4" is on and off</td> </tr> <tr> <td>RT-sensor : open ("Lo"), short ("Hi")</td> <td>FRZ. LED "3" is on and off</td> </tr> <tr> <td>D-sensor : open ("Lo"), short ("Hi")</td> <td>FRZ. LED "2" is on and off</td> </tr> <tr> <td>R-Door Switch : defective</td> <td>FRZ. LED "1" is on and off</td> </tr> <tr> <td>F-Door Switch : defective</td> <td>REF. LED "5" is on and off</td> </tr> <tr> <td>Cycle : defective</td> <td>REF. LED "3" is on and off</td> </tr> <tr> <td>Return after defrosting : defective</td> <td>REF. LED "2" is on and off</td> </tr> <tr> <td>EEPROM : defective</td> <td>REF. LED "1" is on and off</td> </tr> <tr> <td>Full Down mode</td> <td>REF. LED "1" is on</td> </tr> <tr> <td>Forced defrost mode for A/S</td> <td>REF. LED "1" is on and off (twice)</td> </tr> </tbody> </table> <p>(Full down mode and forced defrost mode are displayed while pressing "REF.TEMP" button at the error display mode)</p>		CONTENTS	Display	F-sensor : open ("Lo"), short ("Hi")	FRZ. LED "5" is on and off	R-sensor : open ("Lo"), short ("Hi")	FRZ. LED "4" is on and off	RT-sensor : open ("Lo"), short ("Hi")	FRZ. LED "3" is on and off	D-sensor : open ("Lo"), short ("Hi")	FRZ. LED "2" is on and off	R-Door Switch : defective	FRZ. LED "1" is on and off	F-Door Switch : defective	REF. LED "5" is on and off	Cycle : defective	REF. LED "3" is on and off	Return after defrosting : defective	REF. LED "2" is on and off	EEPROM : defective	REF. LED "1" is on and off	Full Down mode	REF. LED "1" is on	Forced defrost mode for A/S	REF. LED "1" is on and off (twice)	
CONTENTS	Display																									
F-sensor : open ("Lo"), short ("Hi")	FRZ. LED "5" is on and off																									
R-sensor : open ("Lo"), short ("Hi")	FRZ. LED "4" is on and off																									
RT-sensor : open ("Lo"), short ("Hi")	FRZ. LED "3" is on and off																									
D-sensor : open ("Lo"), short ("Hi")	FRZ. LED "2" is on and off																									
R-Door Switch : defective	FRZ. LED "1" is on and off																									
F-Door Switch : defective	REF. LED "5" is on and off																									
Cycle : defective	REF. LED "3" is on and off																									
Return after defrosting : defective	REF. LED "2" is on and off																									
EEPROM : defective	REF. LED "1" is on and off																									
Full Down mode	REF. LED "1" is on																									
Forced defrost mode for A/S	REF. LED "1" is on and off (twice)																									

**CONTENTS**

**REMARKS**

5. Control way of Errors (if any)

1) "F-sensor" error

Cause : F-sensor open or short

Control : Condition of ambient temperature

How to reset : If F-sensor is normal, the error is terminal temperature.

RT-S	~ 9℃	~ 15℃	~ 21℃	~ 31℃	~ 41℃	Over 41℃
ON/OFF (min)	14 / 50	16 / 41	27 / 45	26 / 22	35 / 20	35 / 20

2) "R-sensor" error

Cause : R-sensor open or short

Control : Condition of ambient temperature

How to reset : If R-sensor is normal, the error is terminal temperature.

RT-S	~ 9℃	~ 15℃	~ 21℃	~ 31℃	~ 41℃	Over 41℃
ON/OFF (min)	OFF	3 / 50	2 / 10	3 / 7	4 / 6	6 / 4

3) "RT-sensor" error

Cause : RT-sensor open or short (full down)

Control : Normal operation, deletion of control by RT-sensor

If RT-sensor is normal, the error is terminated automatically.

4) "D-sensor" error

Cause : D-sensor open or short (full down)

Control : Time limit (30 min) of defrosting return

If D-sensor is normal, the error is terminated automatically.

5) "Door" error

Cause : in case it senses that door is open for more than 1 hour.

Control : Deletion of function related door switch sensing

If door switch (open & close) is sensed, the error is terminated automatically.

6) "Cycle" error

Cause : in case comp. works for over 3 hours when D-sensor temp. is over -5℃

Control : normal operation

When D-sensor temp. is below -5℃ in comp. off it is terminated.

7) "Return after defrosting" error

Cause : in case defrosting return is done by time limit of 80 min

Control : Deletion of Pre-cool mode in defrosting mode

If defrosting return is done by D-sensor, it is terminated.

8) A/S forced defrosting mode

Push "REFRIGERATOR SET" button 5 times while pushing "FREEZER SET" button Simultaneously.

Control : A/S forced defrosting control (Pre-cool is deleted)



If D-sensor temp. is over 10℃, the mode is terminated automatically.

When all error code is normal, the Refrigerator reset



#### 4-10-2. FRS(N)-U20DA/EA/FA/GA (CLED Display of Front PCB)

INPUT	CONTROL OBJECT																																							
Temperature Control Buttons	88 Display CLED																																							
CONTENTS		REMARKS																																						
<p>1. How to start</p> <p>1) Under "LOCK" mode, press "SUPER FREEZER" button 5 times while pressing "FREEZER SET" button at the same time.</p> <p>2) The front CLED displays as the right diagram shows ( [Ex.] Time Display of 0003 signifies 3 minutes of power on time.)</p> <p>3) Press "FREEZER SET" button and the following value is displayed successively.</p> <ul style="list-style-type: none"> <li>① Time</li> <li>② F-Sensor temperature</li> <li>③ D-Sensor temperature</li> <li>④ R-Sensor temperature</li> <li>⑤ RT-Sensor temperature</li> <li>⑥ P Factor display (Refer to water supply mode of automatic icemaker)</li> <li>⑦ Filter remaining time until change (First check ; 4,320Hr) Refer to Filter Information Reset of CLED of front control panel.</li> </ul> <p>4) Error is displayed only if there is any ; it is skipped if no error.</p> <p>2. How to stop</p> <p>1) Push "LOCK" button 1 time.</p> <p>2) It stops automatically in 4 minutes from the start.</p> <p>3. All the error Codes are reset if they turn to be normal.</p> <p>4. Error code</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 20%;">ERROR CODE</th> <th>CONTENTS</th> </tr> </thead> <tbody> <tr><td><i>F1</i></td><td>F-sensor : disconnection ("Lo"), short ("Hi")</td></tr> <tr><td><i>r1</i></td><td>R-sensor : disconnection ("Lo"), short ("Hi")</td></tr> <tr><td><i>rt</i></td><td>RT-sensor : disconnection ("Lo"), short ("Hi")</td></tr> <tr><td><i>d1</i></td><td>D-sensor : disconnection ("Lo"), short ("Hi")</td></tr> <tr><td><i>dr</i></td><td>R-Door Switch : defective</td></tr> <tr><td><i>dF</i></td><td>F-Door Switch : defective</td></tr> <tr><td><i>dH</i></td><td>Home bar Door Switch : defective</td></tr> <tr><td><i>El</i></td><td>l-sensor : disconnection ("Lo"), short ("Hi")</td></tr> <tr><td><i>EF</i></td><td>Flow sensor : defective</td></tr> <tr><td><i>Et</i></td><td>Horizontal switch : error</td></tr> <tr><td><i>Eg</i></td><td>Water supply : error</td></tr> <tr><td><i>ES</i></td><td>Micro switch : error</td></tr> <tr><td><i>EA</i></td><td>Drop the ice while Et</td></tr> <tr><td><i>Eu</i></td><td>Full ice switch : error</td></tr> <tr><td><i>C1</i></td><td>Cycle : abnormal or defective</td></tr> <tr><td><i>F3</i></td><td>Return after defrosting : abnormal or defective</td></tr> <tr><td><i>Co</i></td><td>Display Full Down mode</td></tr> <tr><td><i>D2</i></td><td>Display forced defrost mode for A/S</td></tr> </tbody> </table>		ERROR CODE	CONTENTS	<i>F1</i>	F-sensor : disconnection ("Lo"), short ("Hi")	<i>r1</i>	R-sensor : disconnection ("Lo"), short ("Hi")	<i>rt</i>	RT-sensor : disconnection ("Lo"), short ("Hi")	<i>d1</i>	D-sensor : disconnection ("Lo"), short ("Hi")	<i>dr</i>	R-Door Switch : defective	<i>dF</i>	F-Door Switch : defective	<i>dH</i>	Home bar Door Switch : defective	<i>El</i>	l-sensor : disconnection ("Lo"), short ("Hi")	<i>EF</i>	Flow sensor : defective	<i>Et</i>	Horizontal switch : error	<i>Eg</i>	Water supply : error	<i>ES</i>	Micro switch : error	<i>EA</i>	Drop the ice while Et	<i>Eu</i>	Full ice switch : error	<i>C1</i>	Cycle : abnormal or defective	<i>F3</i>	Return after defrosting : abnormal or defective	<i>Co</i>	Display Full Down mode	<i>D2</i>	Display forced defrost mode for A/S	
ERROR CODE	CONTENTS																																							
<i>F1</i>	F-sensor : disconnection ("Lo"), short ("Hi")																																							
<i>r1</i>	R-sensor : disconnection ("Lo"), short ("Hi")																																							
<i>rt</i>	RT-sensor : disconnection ("Lo"), short ("Hi")																																							
<i>d1</i>	D-sensor : disconnection ("Lo"), short ("Hi")																																							
<i>dr</i>	R-Door Switch : defective																																							
<i>dF</i>	F-Door Switch : defective																																							
<i>dH</i>	Home bar Door Switch : defective																																							
<i>El</i>	l-sensor : disconnection ("Lo"), short ("Hi")																																							
<i>EF</i>	Flow sensor : defective																																							
<i>Et</i>	Horizontal switch : error																																							
<i>Eg</i>	Water supply : error																																							
<i>ES</i>	Micro switch : error																																							
<i>EA</i>	Drop the ice while Et																																							
<i>Eu</i>	Full ice switch : error																																							
<i>C1</i>	Cycle : abnormal or defective																																							
<i>F3</i>	Return after defrosting : abnormal or defective																																							
<i>Co</i>	Display Full Down mode																																							
<i>D2</i>	Display forced defrost mode for A/S																																							

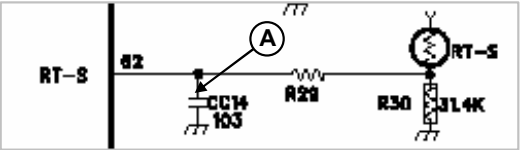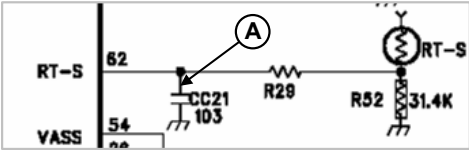CONTENTS	REMARKS
<p>5. Control way of Error (if any)</p> <p>1) "F1" error  Cause : F-sensor disconnection or short  Check point : Measure the resistance between both terminals after separating CN8 (or CN15) of the Main PCB. (Refer to the 5-2.)  If F-sensor is disconnected or shorted , change the F-sensor in the freezer compartment.  How to reset : If F-sensor is normal, the error is terminal temperature.</p> <p>2) "R1" error  Cause : R-sensor disconnection or short  Check point : Measure the resistance between both terminals after separating CN7 (or CN14) of the Main PCB. (Refer to the 5-2.)  If R-sensor is disconnected or shorted , change the F-sensor in the refrigerator compartment.  How to reset : If R-sensor is normal, the error is terminal temperature.</p> <p>3) "rt" error  Cause : RT-sensor disconnection or short (full down)  Check point : Measure the voltage of "A" part on the Main PCB.  If the voltage is 0.5V~4.5V, it is normal.  If the voltage is 0V (short) or 5V (disconnected), change the RT-sensor on the Main PCB  How to reset : If RT-sensor is normal, the error is terminated automatically.</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  <p>&lt; FRS(N)-U20IA &gt;</p> </div> <div style="text-align: center;">  <p>&lt; FRS(N)-U20DA &gt;</p> </div> </div> <p>4) "d1" error  Cause : D-sensor disconnection or short (full down)  Check point : Measure the resistance between both terminals after separating CN8 (or CN15) of the Main PCB. (Refer to the 5-2.)  If D-sensor is disconnected or shorted , change the D-sensor on the evaporator.  How to reset : If D-sensor is normal, the error is terminated automatically.</p> <p>5) Door error ("dF" "dR" "dH" on display)  Cause : in case it senses that door is open for more than 1 hour.  Check point : F/R door is opened or not.</p> <p>6) "C1" error  Cause : in case comp. works for over 3 hours when D-sensor temp. is over -5℃  Check point : Refrigerant leakage.</p> <p>7) "F3" error  Cause : in case defrosting return is done by time limit of 80 min  Check point : Measure the resistance between both terminals of the defrost heater.  (Assembled with evaporator)  If the resistance is ∞Ω (disconnected) or 0Ω (short) change the</p> <p>8) "d2" mode (A/S forced defrosting mode)  Push "REFRIGERATOR SET" button 5 times while pushing "FREEZER SET" button simultaneously.  Control : A/S forced defrosting control (Pre-cool is deleted)  If D-sensor temp. is over 10℃, the mode is terminated automatically.  Refer to the 4-3. .</p>	

CONTENTS	REMARKS
<p>9) "EI" ERROR  Cause : I-SENSOR disconnection / short  Check point : Measure the resistance between both terminals after separating CN11 of the Main PCB. (Refer to the 5-2.)  If F-sensor is disconnected or shorted , change the I-sensor in the automatic ice maker.</p> <p>10) "EF" ERROR  Cause : When Flow-sensor ERROR (There is no Pulse during some time)  The number of pulse signal is below 10 by 1 sec during water supply.  Check point : Water supply line</p> <p>11) "Eg" ERROR  Cause : I-sensor temp (5min after water supply) doesn't go up.  Check the I-sensor or water supply line.</p> <p>12) "ES" error (MICRO switch error)  Cause : When it senses 1min continuously  Check the MICRO switch of the dispenser.</p> <p>13) "Ea" error  Cause : Malfunction of ice drop motor.  Check the motor by pushing test switch.</p> <p>14) "Eu" error  Cause : Switch (which senses if the ice is full or not) is in error.  Control : When dropping the ice, the motor just rotates 90 degree.  Termination : When the switch is in normal.</p> <p>15) "EA" ERROR  Cause : When sensing Ice dropping by time 3 times in level sensor SW Error.  Control : Stop of Ice Maker  Termination : With normal level switch.  Re-input of power or push if icemaker test switch.</p> <p>16) "Et" ERROR  Cause : Level switch error (No pulse is sensed for some time)  Control : By time (Supply mode is skipped)  Termination : Normal condition.</p> <p>* When all ERROR CODE is normal, the Refrigerator reset</p>	

## 4-11. Summary of Function

### 4-11-1. FRS(N)-U20IA (Inner Control)

INPUT	CONTROL OBJECT									
Each button	Resistance of R-sensor Mid ON/OFF Point									
CONTENTS		REMARKS								
Element A/S Function <table border="1" style="margin-top: 10px;"> <tbody> <tr> <td style="text-align: center;">Forced Defrosting</td> <td style="text-align: center;">“FRZ.TEMP” + “REF.TEMP” 5 times</td> </tr> <tr> <td style="text-align: center;">Pull Down</td> <td style="text-align: center;">“REF.TEMP”+ “FRZ.DOOR” OPEN/CLOSE 5 times</td> </tr> <tr> <td style="text-align: center;">Demo function</td> <td style="text-align: center;">“FRZ.TEMP”+ “FRZ.DOOR” OPEN/CLOSE 5 times</td> </tr> <tr> <td style="text-align: center;">Error display</td> <td style="text-align: center;">“REF.TEMP”+ “FRZ.TEMP” 5 times</td> </tr> </tbody> </table>		Forced Defrosting	“FRZ.TEMP” + “REF.TEMP” 5 times	Pull Down	“REF.TEMP”+ “FRZ.DOOR” OPEN/CLOSE 5 times	Demo function	“FRZ.TEMP”+ “FRZ.DOOR” OPEN/CLOSE 5 times	Error display	“REF.TEMP”+ “FRZ.TEMP” 5 times	
Forced Defrosting	“FRZ.TEMP” + “REF.TEMP” 5 times									
Pull Down	“REF.TEMP”+ “FRZ.DOOR” OPEN/CLOSE 5 times									
Demo function	“FRZ.TEMP”+ “FRZ.DOOR” OPEN/CLOSE 5 times									
Error display	“REF.TEMP”+ “FRZ.TEMP” 5 times									

### 4-11-2. FRS(N)-U20DA/EA/FA/GA (Front PCB)

INPUT	CONTROL OBJECT															
Each button	Resistance of R-sensor Mid ON/OFF Point															
CONTENTS		REMARKS														
1. All the modes are started “LOCK” mode (except “FILTER RESET” mode) 2. Element A/S Function <table border="1" style="margin-top: 10px;"> <tbody> <tr> <td style="text-align: center;">Forced Defrosting</td> <td style="text-align: center;">“FREEZER SET” + “REFRIGERATOR SET” 5 times</td> </tr> <tr> <td style="text-align: center;">Reset water filter</td> <td style="text-align: center;">Push “RESET WATER FILTER” for 3 seconds</td> </tr> <tr> <td style="text-align: center;">Demo function</td> <td style="text-align: center;">“REFRIGERATOR SET” + “WATER/ICE” 5 times</td> </tr> <tr> <td style="text-align: center;">Pull Down</td> <td style="text-align: center;">“REFRIGERATOR SET”+ “FREEZER SET”+ “WATER/ICE”5 times</td> </tr> <tr> <td style="text-align: center;">Error display</td> <td style="text-align: center;">“FREEZER SET”+ “SUPER FREEZER” 5 times</td> </tr> <tr> <td style="text-align: center;">EEPROM clear</td> <td style="text-align: center;">“WATER/ICE”+ “RESET WATER FILTER” 5times</td> </tr> <tr> <td style="text-align: center;">Ice maker test</td> <td style="text-align: center;">“WATER/ICE” + “ICE MAKER LOCK” 5 times</td> </tr> </tbody> </table>		Forced Defrosting	“FREEZER SET” + “REFRIGERATOR SET” 5 times	Reset water filter	Push “RESET WATER FILTER” for 3 seconds	Demo function	“REFRIGERATOR SET” + “WATER/ICE” 5 times	Pull Down	“REFRIGERATOR SET”+ “FREEZER SET”+ “WATER/ICE”5 times	Error display	“FREEZER SET”+ “SUPER FREEZER” 5 times	EEPROM clear	“WATER/ICE”+ “RESET WATER FILTER” 5times	Ice maker test	“WATER/ICE” + “ICE MAKER LOCK” 5 times	
Forced Defrosting	“FREEZER SET” + “REFRIGERATOR SET” 5 times															
Reset water filter	Push “RESET WATER FILTER” for 3 seconds															
Demo function	“REFRIGERATOR SET” + “WATER/ICE” 5 times															
Pull Down	“REFRIGERATOR SET”+ “FREEZER SET”+ “WATER/ICE”5 times															
Error display	“FREEZER SET”+ “SUPER FREEZER” 5 times															
EEPROM clear	“WATER/ICE”+ “RESET WATER FILTER” 5times															
Ice maker test	“WATER/ICE” + “ICE MAKER LOCK” 5 times															

#### 4-12. Back up Function (FRS(N)-U20DA/EA/FA/GA)

INPUT	CONTROL OBJECT
None	1. F-FAN, R-FAN, C-FAN
CONTENTS	REMARKS
1. Filter Exchange Information : Record as a real-time from the point of power input 2. P Factor (Information about Ice Maker)	


#### 4-13. Automatic Icemaker ( FRS(N)-U20DA/EA/FA/GA)

INPUT	CONTROL OBJECT
Full ice sensing switch Ice Maker Lock Sensors	Ice separating motor
CONTENTS	REMARKS
<p>1. Flow of ice making</p> <pre> graph TD     START([START]) --&gt; IM[Ice making mode]     IM -- "(water supply stand by)" --&gt; ISM[Ice separating mode]     ISM --&gt; WSM[Water supply mode]     WSM --&gt; WSCM[Water supply check mode]     WSCM --&gt; RETURN([RETURN])     </pre> <p>       ▶ Ice is being made        ▶ Ice tray is twisted to separate ice cubes        ▶ Water is supplied to ice tray        ▶ Check is water is supplied OK.     </p> <p>1) Press TEST switch under the Icemaker for more than 1 second and test starts.        * Test mode starts from ice separating mode.        * In case test switch has an error of short, test is done only once.</p>	

CONTENTS	REMARKS
----------	---------

- 2) With the initial power input, Ice tray turns to be horizontal and ice making mode starts.
  
- 3) Control of water hose heater
  - \* Heater is always ON if RT-sensor has an error or RT is below 15 degree.
  - \* Heater is always ON for 60 minutes (max. Limit time) if Flow-sensor has an error
  
- 4) Water supply stand-by
  - Condition : if ice is sensed full
  - Operation : proceeds to Ice making mode (Ice separating and water supply Modes stop)
  
- 5) Crusher Function
  - It stops operation when freezer door is open
  - It operates if freezer door is closed.


2 Ice making mode

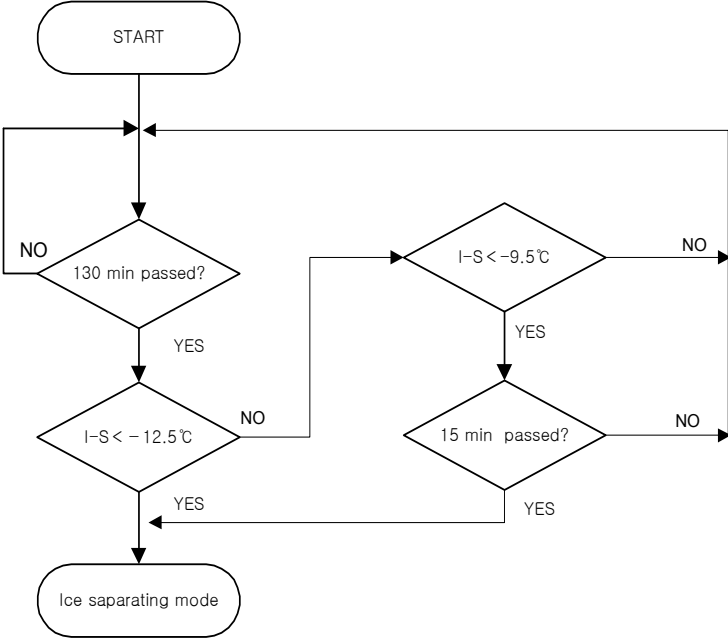

- 1) Ice making stops if ice-sensor is below -12.5°C after 130 minutes.
  
- 2) Ice making also stops if ice-sensor is below -9.5°C for 15 minutes, though ice-sensor is not below -12.5°C after 130 minutes.
  
- 3) In case of ice sensor, ice making stops after 4.8 hours.


CONTENTS	REMARKS
----------	---------

**3. Ice separating (drop) mode**

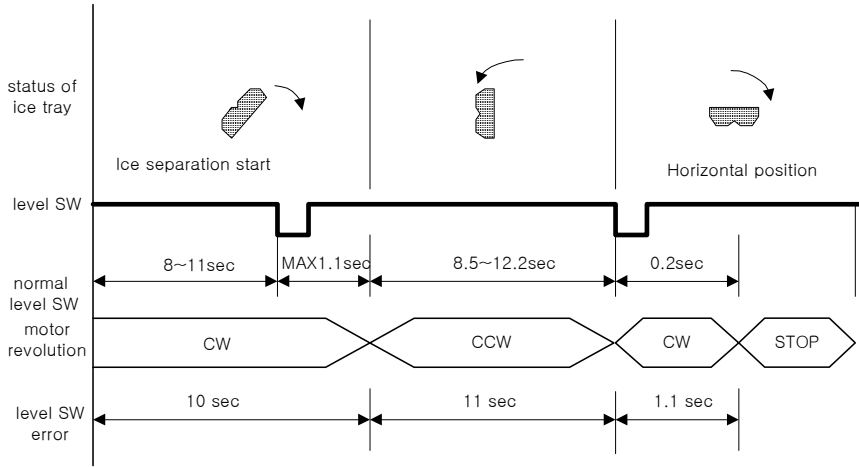

- 1) Time of each zone used to verify level switch error
- 2) The rotation of motor is sensed at each zone
- 3) In case of level switch error, ice separation is done by time.
- 4) If ice separating motor has error, the mode stop.

**4. Water supply mode**

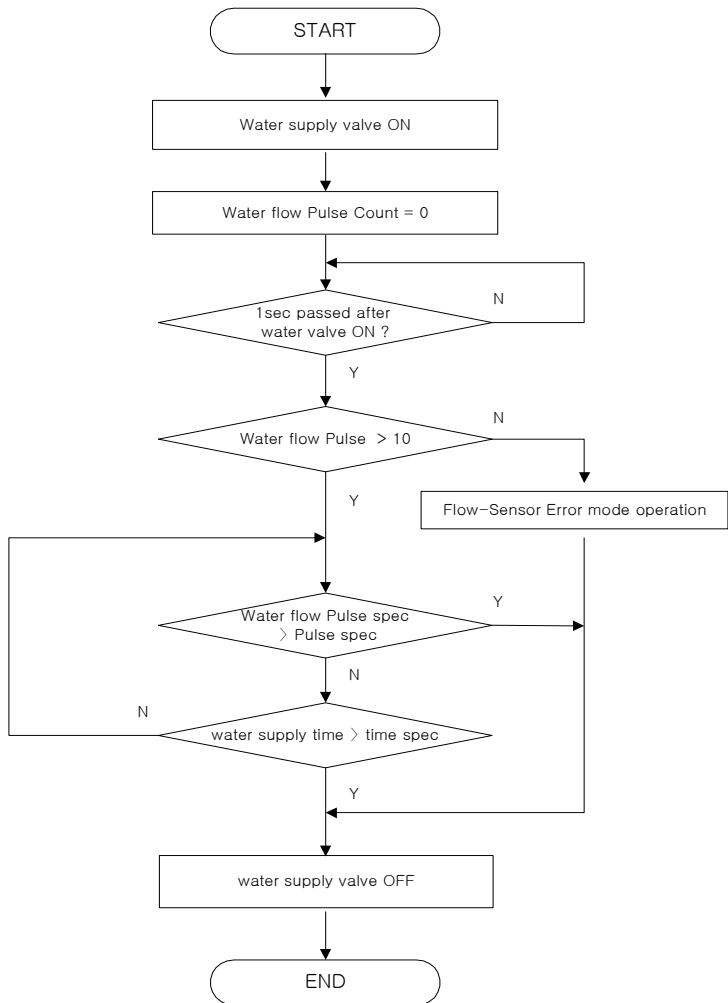


CONTENTS	REMARKS														
<p>1) Water supply valve is open when water supply mode starts after separation of ices.</p> <p>2) Water is supplied by time in case sensor has error.</p> <p>3) Factor valve is variable which can be useful in AS action</p> <p>① Water flow pulse is set to 238 if flow sensor is in normal condition. (If water is supplied by time, maximum water supply time 165 seconds)</p> <p>② In case water flow sensor has error, water time is 5.5 seconds.</p> <p>5. Water supply check mode 5 minutes after water supply the status can be checked by RT-sensor and increase of temp. Ice sensor.</p> <table border="1" style="width: 100%; text-align: center;"> <tr> <td>RT-S</td> <td>9℃ ↓</td> <td>~15℃</td> <td>~21℃</td> <td>~31℃</td> <td>~41℃</td> <td>41℃ ↑</td> </tr> <tr> <td>I-S</td> <td>-10℃</td> <td>-9℃</td> <td>-8℃</td> <td>-7℃</td> <td>-6℃</td> <td>-5℃</td> </tr> </table>	RT-S	9℃ ↓	~15℃	~21℃	~31℃	~41℃	41℃ ↑	I-S	-10℃	-9℃	-8℃	-7℃	-6℃	-5℃	
RT-S	9℃ ↓	~15℃	~21℃	~31℃	~41℃	41℃ ↑									
I-S	-10℃	-9℃	-8℃	-7℃	-6℃	-5℃									

#### 4-14. Dispenser Control Function

INPUT	CONTROL OBJECT
Dispenser switch WATER/ICE Button ICE MAKER LOCK Button Freezer Door Switch	Dispenser Lamp Crusher Motor Flap Solenoid Crusher Solenoid Dispenser Water Valve
CONTENTS	REMARKS
<p>1) Initial mode : water (Mode change : Water → Cubed ice → Crushed ice) - Selected icon LED turns ON and others are OFF.</p> <p>2) ICE MAKER LOCK Button Icemaker Lock function and its ICON Turn ON/OFF by pressing the button.</p> <p>3) Display</p> <p>① Water ICON turns ON as default mode</p> <p>② The ICON of each mode turns ON by pressing its button. (If display switch makes error during operation of a mode, its ICON turns OFF)</p> <p>③ When Icemaker Lock ICON turns ON.</p> <p>- ICE MAKER LOCK ICON turns ON</p> <p>- If it is in the mode of Cubed Ice or Crushed Ice, the mode is changed to Water and Water ICON turns ON</p> <p>- If there is no button input for 1 hour after selecting Cubed Ice or Crushed Ice the mode turns to Water (default)</p>	




#### 4-15. Temperature control of "Magic Cool Zone" compartment (FRS(N)-U20EA/GA)

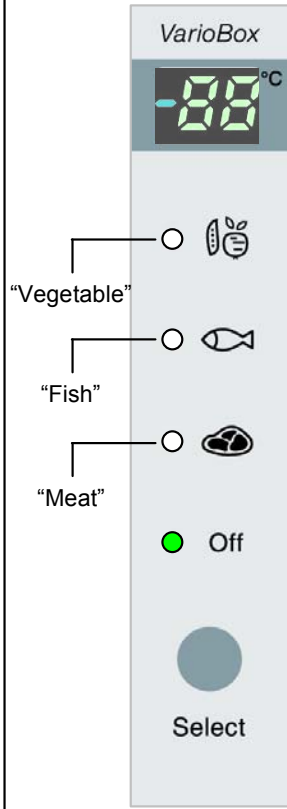INPUT		CONTROL OBJECT																									
1. R-Fan 2. "Magic Cool Zone" sensor 3. "SELECT" button		1. "Magic Cool Zone" damper 2. Damper heater																									
CONTENTS			REMARKS																								
1. "Select" button 1) Temperature control of "Magic Cool Zone" compartment 2) 4 step mode of successive temperature mode. Initial mode by power input : "OFF" ("Off" → "Vegetable" → "Fish" → "Meat" → "Off") Letters are indicated on "88" display LED																											
<table border="1"> <thead> <tr> <th rowspan="3">Mode</th> <th rowspan="3">Display</th> <th colspan="2">Damper Open/Close point</th> </tr> <tr> <th>Open</th> <th>Close</th> </tr> <tr> <th>Temp (°C)</th> <th>Temp (°C)</th> </tr> </thead> <tbody> <tr> <td>Power input</td> <td>Off</td> <td>-</td> <td>-</td> </tr> <tr> <td>1'st Press</td> <td>Vegetable</td> <td>3</td> <td>9</td> </tr> <tr> <td>2'nd Press</td> <td>Fish</td> <td>-1</td> <td>3</td> </tr> <tr> <td>3'rd Press</td> <td>Meat</td> <td>-3</td> <td>1</td> </tr> </tbody> </table>				Mode	Display	Damper Open/Close point		Open	Close	Temp (°C)	Temp (°C)	Power input	Off	-	-	1'st Press	Vegetable	3	9	2'nd Press	Fish	-1	3	3'rd Press	Meat	-3	1
Mode	Display	Damper Open/Close point																									
		Open				Close																					
		Temp (°C)		Temp (°C)																							
Power input	Off	-	-																								
1'st Press	Vegetable	3	9																								
2'nd Press	Fish	-1	3																								
3'rd Press	Meat	-3	1																								
2. Normal Stepping motor Control (It is linked with Refrigerator Fan (R-Fan))																											
<table border="1"> <thead> <tr> <th>R-Fan</th> <th>"Magic Cool Zone" damper</th> <th>Remark</th> </tr> </thead> <tbody> <tr> <td>ON</td> <td>Always close</td> <td></td> </tr> <tr> <td>OFF</td> <td>Each mode ON/OFF Control</td> <td></td> </tr> </tbody> </table>			R-Fan	"Magic Cool Zone" damper	Remark	ON	Always close		OFF	Each mode ON/OFF Control																	
R-Fan	"Magic Cool Zone" damper	Remark																									
ON	Always close																										
OFF	Each mode ON/OFF Control																										
3. Damper heater control 1) Damper open → Damper heater OFF 2) Damper close → Damper heater ON																											
4. How to check error mode (Temp. display and forced damper Open/Close) 1) How to start Push "Select" button for 2 seconds. ① Initial display : "sensor temp." display. (if sensor is normal) "Er" display. (if sensor is disconnected or short) ② Press "Select" button 1 time : "OP" display. (forced damper open ) ③ Press "Select" button 2 time : "CL" display. (forced damper close ) 2) How to stop It stops automatically in 20 sec. from the start.																											
5. Control way for "Magic Cool Zone" sensor error. 1) If "Magic Cool Zone" sensor is disconnected or short. 2) Damper open and close by below table. Control (Condition of "Select" button)																											
<table border="1"> <thead> <tr> <th colspan="2" rowspan="2">Condition</th> <th colspan="4">"Select"</th> </tr> <tr> <th>"Off"</th> <th>"Vegetable"</th> <th>"Fish"</th> <th>"Meat"</th> </tr> </thead> <tbody> <tr> <td rowspan="2">R-Fan</td> <td>ON</td> <td>Close</td> <td>Close</td> <td>Close</td> <td>Close</td> </tr> <tr> <td>OFF</td> <td>Close</td> <td>Close</td> <td>After 2min open from R-Fan off, and then close</td> <td>Open</td> </tr> </tbody> </table>			Condition		"Select"				"Off"	"Vegetable"	"Fish"	"Meat"	R-Fan	ON	Close	Close	Close	Close	OFF	Close	Close	After 2min open from R-Fan off, and then close	Open				
Condition		"Select"																									
		"Off"	"Vegetable"	"Fish"	"Meat"																						
R-Fan	ON	Close	Close	Close	Close																						
	OFF	Close	Close	After 2min open from R-Fan off, and then close	Open																						


CONTENTS	REMARKS
----------	---------

4) Control Flow & Timing Chart


① Crushed Ice

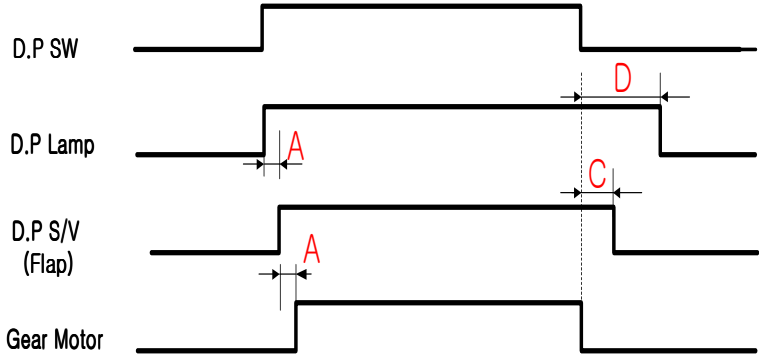

② Cubed Ice

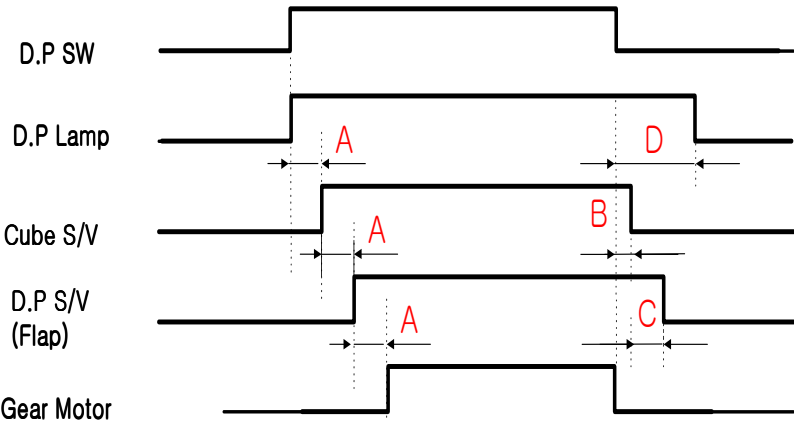

③ Water

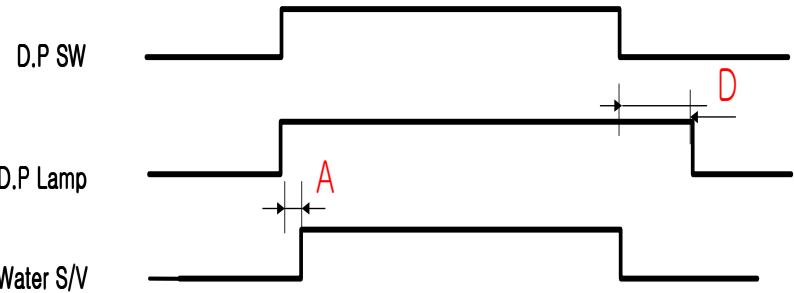


Delay time : A = 500ms, B = 500ms, C = 2.0s, D = 5.0s


## 5. CIRCUIT OPERATION

### 5-1. Power Circuit Diagram

#### ■ FRS(N)-U20IA

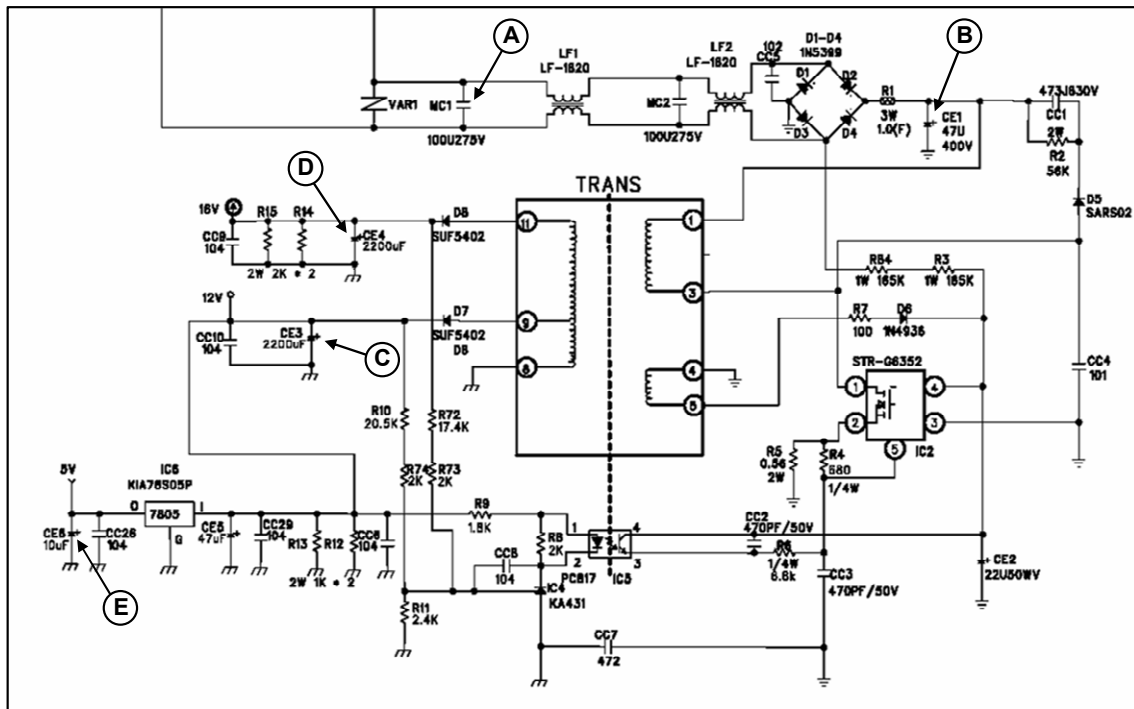

#### ■ FRS(N)-U20DA/EA/FA/GA

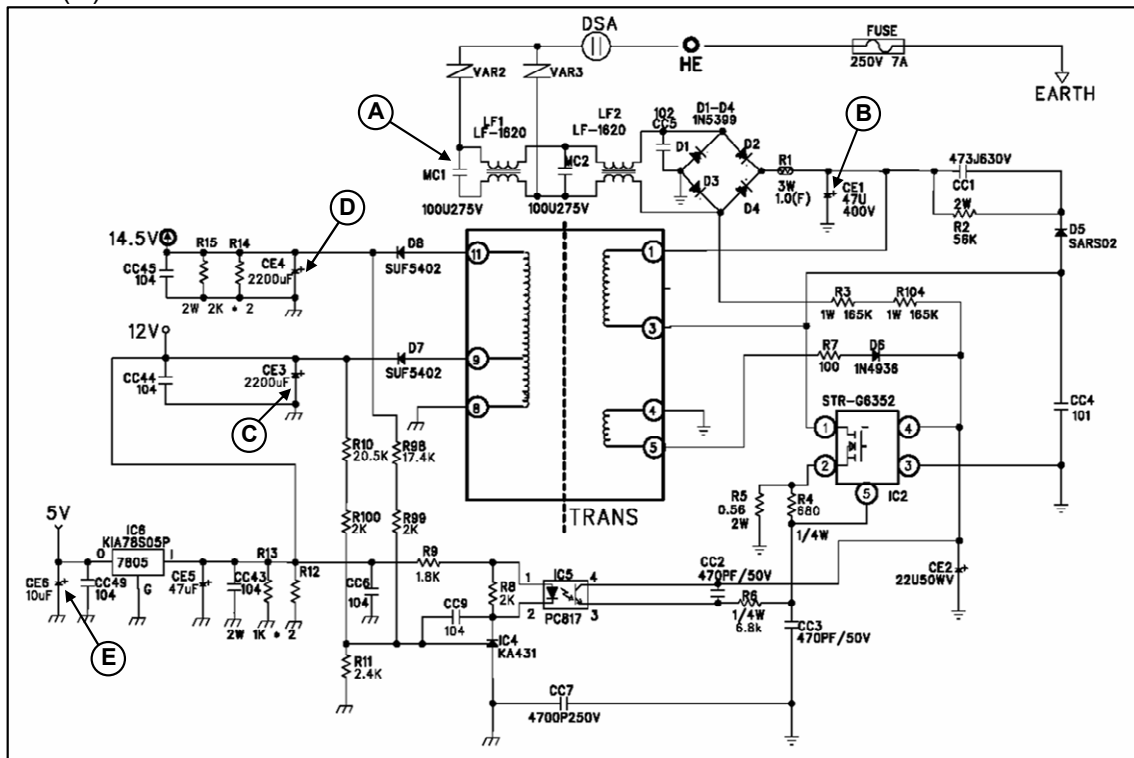

※ Voltage of every part


Parts	A	B	C	D	E
MC1					
CE1					
CE3					
CE4					
CE6					
Voltage	230Vdc	310Vac	12Vdc	14.5Vdc	5Vdc

※ **Caution** : Since high voltage (DC310V) is maintained at the power terminal, please take a measure after more than 3minutes have passed after removing power cords in the abnormal operation of a circuit.

## 5-2. Function of Each Sensor

### ■ FRS(N)-U201A

CONTENTS	REMARKS
----------	---------

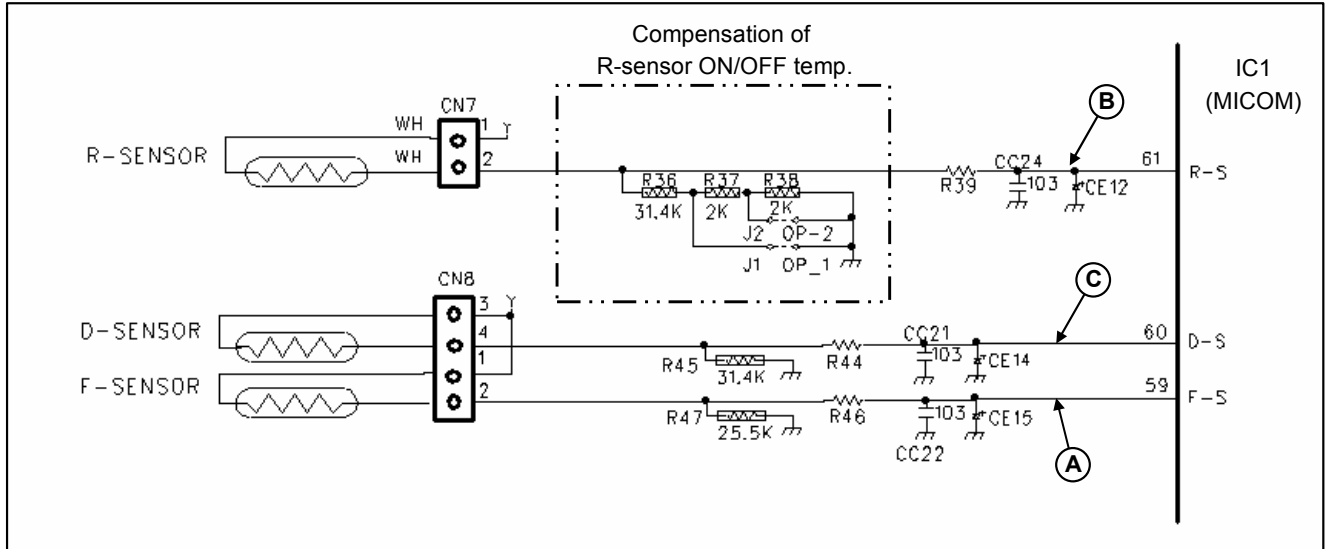

#### [F-sensor]

- 1) It senses the temperature of freezer compartment and control Comp., F-fan ON/OFF
- 2) How it works;

Working Point	Low ON	Mid OFF	High OFF
Working Temp.	-11 °C	-16 °C	-19 °C
Resistance	≒ 9.32kΩ	≒ 15.19kΩ	≒ 15.58kΩ
Sensing Voltage	≒ 3.24V	≒ 2.93V	≒ 2.73V

#### [R-sensor]

- 1) It senses the temperature of refrigerator compartment and control R-fan ON/OFF
- 2) How it works;

Working Point	Low ON	Mid OFF	High OFF
Working Temp.	7.7 °C	5.2 °C	3.2 °C
Resistance	≒ 23.33kΩ	≒ 24.05kΩ	≒ 24.76kΩ
Sensing Voltage	≒ 2.96V	≒ 2.83V	≒ 2.72V

#### [D-sensor]

- 1) It senses return point of defrosting heater.
- 2) How it works;


Working Point	Return point of defrosting heater
Working Temp.	13 °C
Resistance	≒ 22.56kΩ
Sensing Voltage	≒ 3.08V

\* In case temperature of refrigerator compartment is weak or insufficient though comp. and R-fan operate in normal way;

- 1) Cut J1 on the M-PCB, then temp. is lowered 1.5 °C than [Mid OFF point]
- 2) Cut J1 and J2 on the M-PCB, then the temp. is lowered 3 °C.

■ FRS(N)-U20DA/EA/FA/GA

CONTENTS	REMARKS
----------	---------

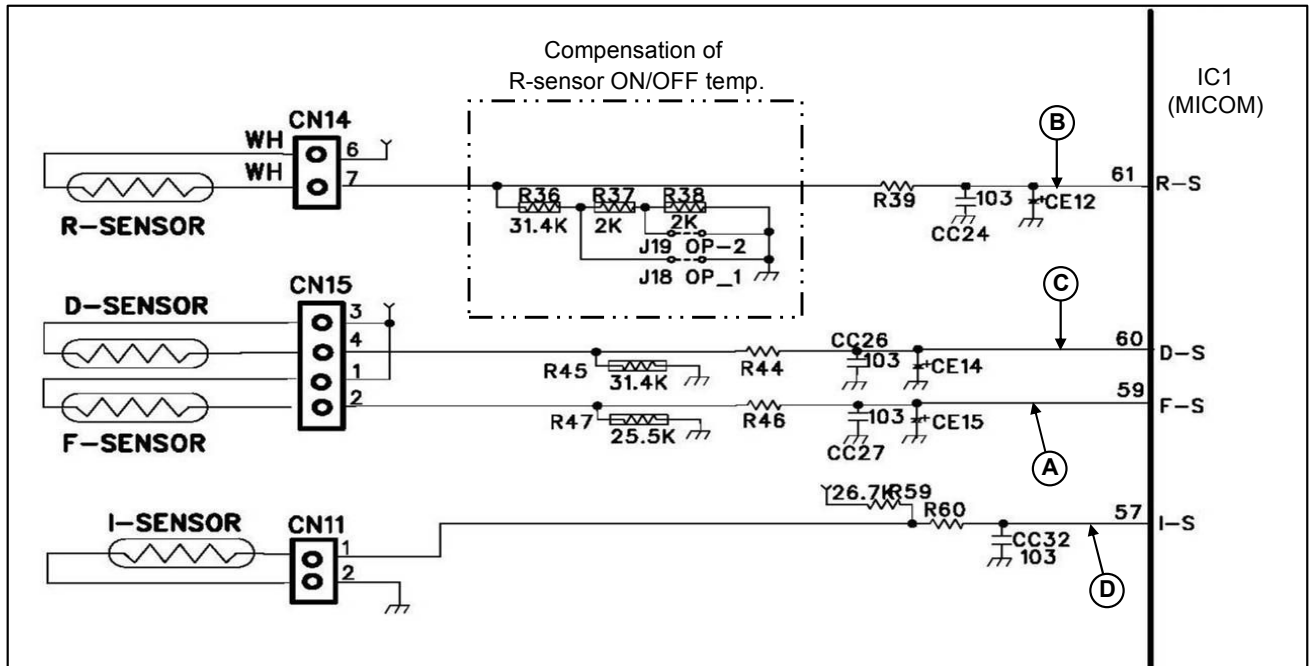

[F-sensor (A)]

- 1) It senses the temperature of freezer compartment and control Comp., F-fan ON/OFF
- 2) How it works;

Working Point	Low ON	Mid OFF	High OFF
Working Temp.	-11 °C	-16 °C	-19 °C
Resistance	≒ 9.32kΩ	≒ 15.19kΩ	≒ 15.58kΩ
Sensing Voltage	≒ 3.24V	≒ 2.93V	≒ 2.73V

[R-sensor (B)]

- 1) It senses the temperature of refrigerator compartment and control R-fan ON/OFF
- 2) How it works;

Working Point	Low ON	Mid OFF	High OFF
Working Temp.	7.7 °C	5.2 °C	3.2 °C
Resistance	≒ 23.33kΩ	≒ 24.05kΩ	≒ 24.76kΩ
Sensing Voltage	≒ 2.96V	≒ 2.83V	≒ 2.72V

[D-sensor (C)]

- 1) It senses return point of defrosting heater.
- 2) How it works;


Working Point	Return point of defrosting heater
Working Temp.	13 °C
Resistance	≒ 22.56kΩ
Sensing Voltage	≒ 3.08V

\* In case temperature of refrigerator compartment is weak or insufficient, though comp. and R-fan operate in normal way;

- 1) Cut J18 on the M-PCB, then temp. is lowered 1.5 °C than [Mid OFF point]
- 2) Cut J18 and J19 on the M-PCB, then the temp. is lowered 3 °C


## 5-3. Relay Function

### ■. FRS(N)-U201A

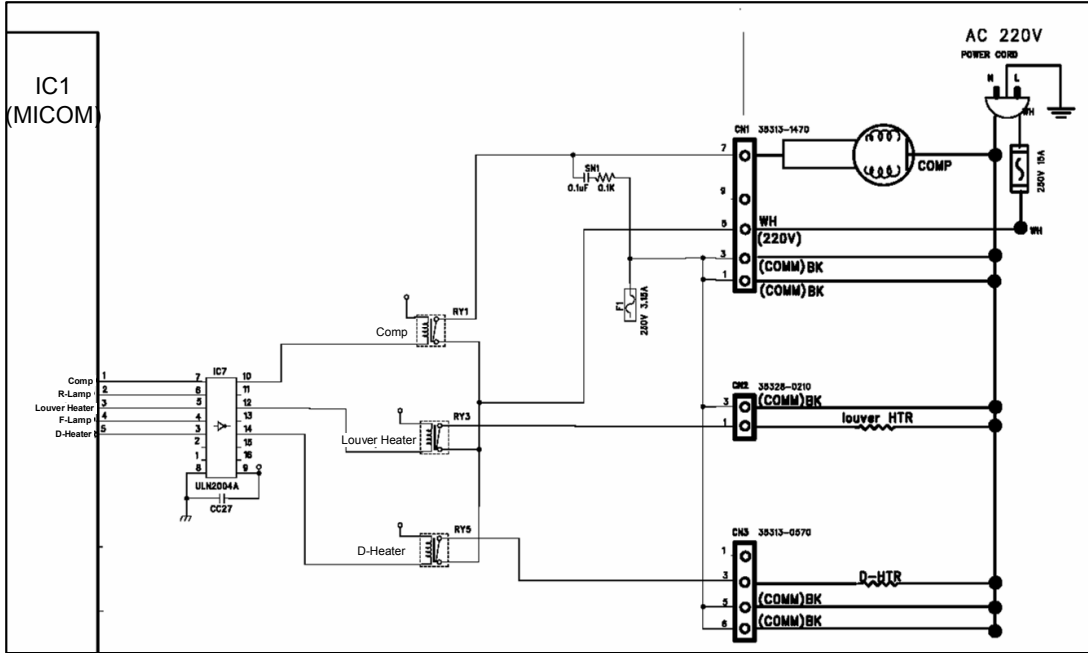CONTENTS				REMARKS																												
<p>1. Circuit Diagram</p> 																																
<p>2. How it works;</p> <table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <thead> <tr> <th rowspan="2">Control</th> <th rowspan="2">Control Mode Method</th> <th colspan="2">ON Condition</th> <th colspan="2">OFF Condition</th> </tr> <tr> <th>MICOM Port</th> <th>IC ULN2004 Output pin</th> <th>MICOM Port</th> <th>IC ULN2004 Output pin</th> </tr> </thead> <tbody> <tr> <td>Comp</td> <td>Relay 1</td> <td>#1 ≒ 5.0V</td> <td>#10 ≒ 0.7V</td> <td>#1 ≒ 0V</td> <td>#10 ≒ 12V</td> </tr> <tr> <td>Louver Heater</td> <td>Relay 3</td> <td>#3 ≒ 5.0V</td> <td>#12 ≒ 0.7V</td> <td>#3 ≒ 0V</td> <td>#12 ≒ 12V</td> </tr> <tr> <td>D-Heater</td> <td>Relay 5</td> <td>#5 ≒ 5.0V</td> <td>#14 ≒ 0.7V</td> <td>#5 ≒ 0V</td> <td>#14 ≒ 12V</td> </tr> </tbody> </table>					Control	Control Mode Method	ON Condition		OFF Condition		MICOM Port	IC ULN2004 Output pin	MICOM Port	IC ULN2004 Output pin	Comp	Relay 1	#1 ≒ 5.0V	#10 ≒ 0.7V	#1 ≒ 0V	#10 ≒ 12V	Louver Heater	Relay 3	#3 ≒ 5.0V	#12 ≒ 0.7V	#3 ≒ 0V	#12 ≒ 12V	D-Heater	Relay 5	#5 ≒ 5.0V	#14 ≒ 0.7V	#5 ≒ 0V	#14 ≒ 12V
Control	Control Mode Method	ON Condition		OFF Condition																												
		MICOM Port	IC ULN2004 Output pin	MICOM Port	IC ULN2004 Output pin																											
Comp	Relay 1	#1 ≒ 5.0V	#10 ≒ 0.7V	#1 ≒ 0V	#10 ≒ 12V																											
Louver Heater	Relay 3	#3 ≒ 5.0V	#12 ≒ 0.7V	#3 ≒ 0V	#12 ≒ 12V																											
D-Heater	Relay 5	#5 ≒ 5.0V	#14 ≒ 0.7V	#5 ≒ 0V	#14 ≒ 12V																											

CONTENTS	REMARKS
----------	---------

1. Circuit Diagram

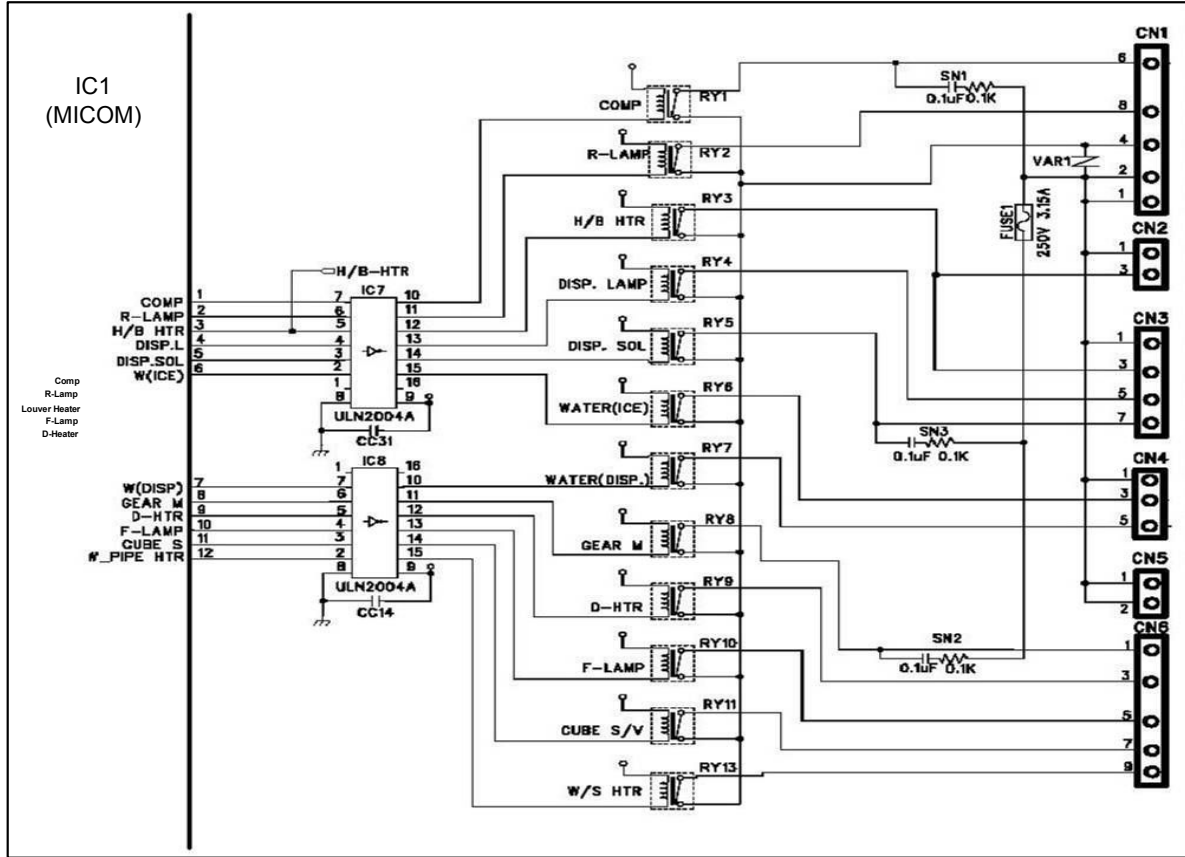


2. How it works;

Control	Control Mode Method	ON Condition		OFF Condition			
		MICOM Port	IC ULN2004 Output pin	MICOM Port	IC ULN2004 Output pin		
Comp	Relay 1	#1 ≐ 5.0V	IC7	#10 ≐ 0.7V	IC7	#10 ≐ 12V	
R-Lamp	Relay 2	#2 ≐ 5.0V		#11 ≐ 0.7V		#2 ≐ 0V	#11 ≐ 12V
H/B Heater	Relay 3	#3 ≐ 5.0V		#12 ≐ 0.7V		#3 ≐ 0V	#12 ≐ 12V
Dispenser-Lamp	Relay 4	#4 ≐ 5.0V		#13 ≐ 0.7V		#4 ≐ 0V	#13 ≐ 12V
Dispenser-Solenoid	Relay 5	#5 ≐ 5.0V		#14 ≐ 0.7V		#5 ≐ 0V	#14 ≐ 12V
Water (Ice)	Relay 6	#6 ≐ 5.0V		#15 ≐ 0.7V		#6 ≐ 0V	#15 ≐ 12V
Water (Dispenser)	Relay 7	#7 ≐ 5.0V	IC8	#10 ≐ 0.7V	IC8	#10 ≐ 12V	
Geared-Motor	Relay 8	#8 ≐ 5.0V		#11 ≐ 0.7V		#8 ≐ 0V	#11 ≐ 12V
D-Heater	Relay 9	#9 ≐ 5.0V		#12 ≐ 0.7V		#9 ≐ 0V	#12 ≐ 12V
F-Lamp	Relay 10	#10 ≐ 5.0V		#13 ≐ 0.7V		#10 ≐ 0V	#13 ≐ 12V
Cube-Solenoid	Relay 11	#11 ≐ 5.0V		#14 ≐ 0.7V		#11 ≐ 0V	#14 ≐ 12V
Water Pipe Heater	Relay 12	#12 ≐ 5.0V		#15 ≐ 0.7V		#12 ≐ 0V	#15 ≐ 12V


## 5-4. Fan Function

### 1. Circuit Diagram

#### ■ FRS(N)-U20IA

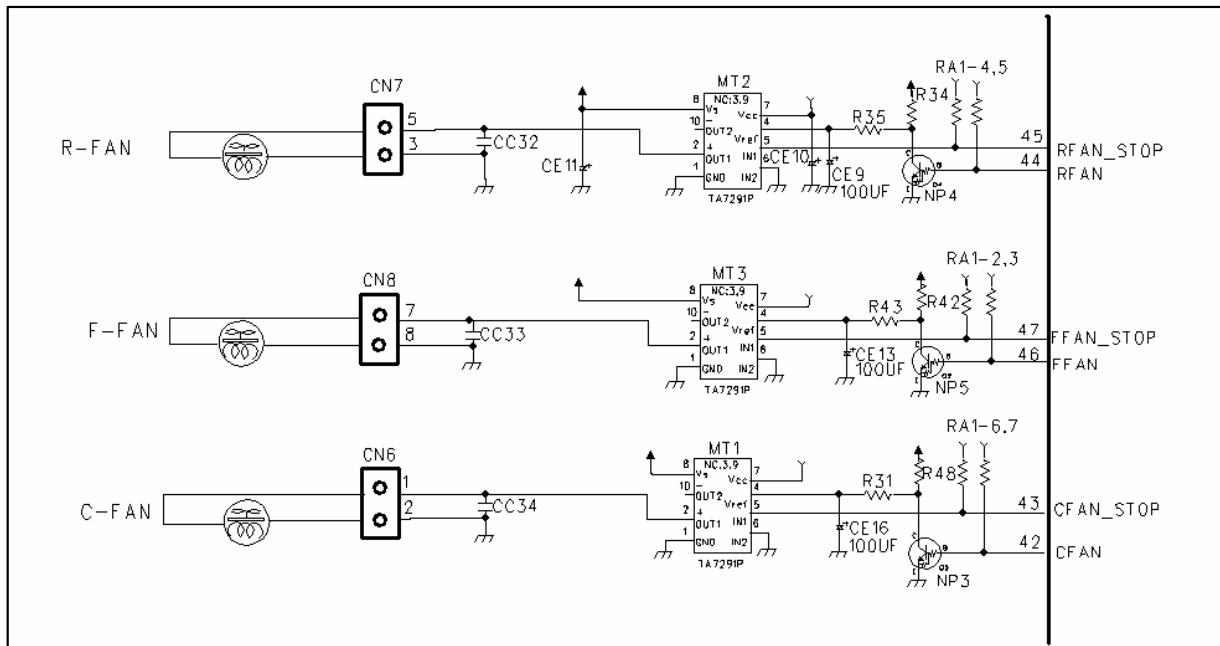

#### ■ FRS(N)-U20DA/EA/FA/GA

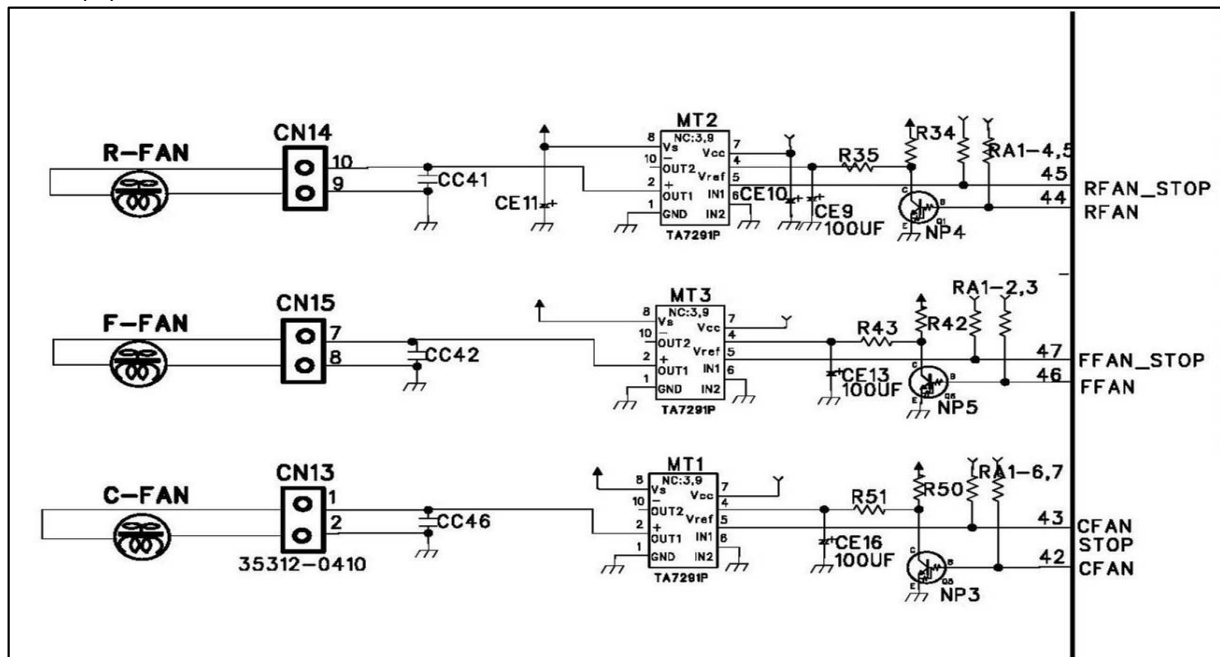

### 2. Explanation for the operation

\* TA7291P is the drive IC for the only DC motor, and used for control of the fan motor

\* One input and output is used for the control of the fan motor

Input	Output	Remark
Motor IC No.5 Pin (R:MT2/F:MT3/C:MT1)	Motor IC No.2 Pin (R:MT2/F:MT3/C:MT1)	
High	High	13V
Low	Low	Stop


- Vref is the reference voltage for the adjustment of the output voltage by the voltage distribution of Vs (Maximum output voltage), and the output voltage applied to the fan is determined by the PWM control using the software.




## 6. DIAGRAM

### 6-1. Wiring Diagram

#### ■ FRS(N)-U201A

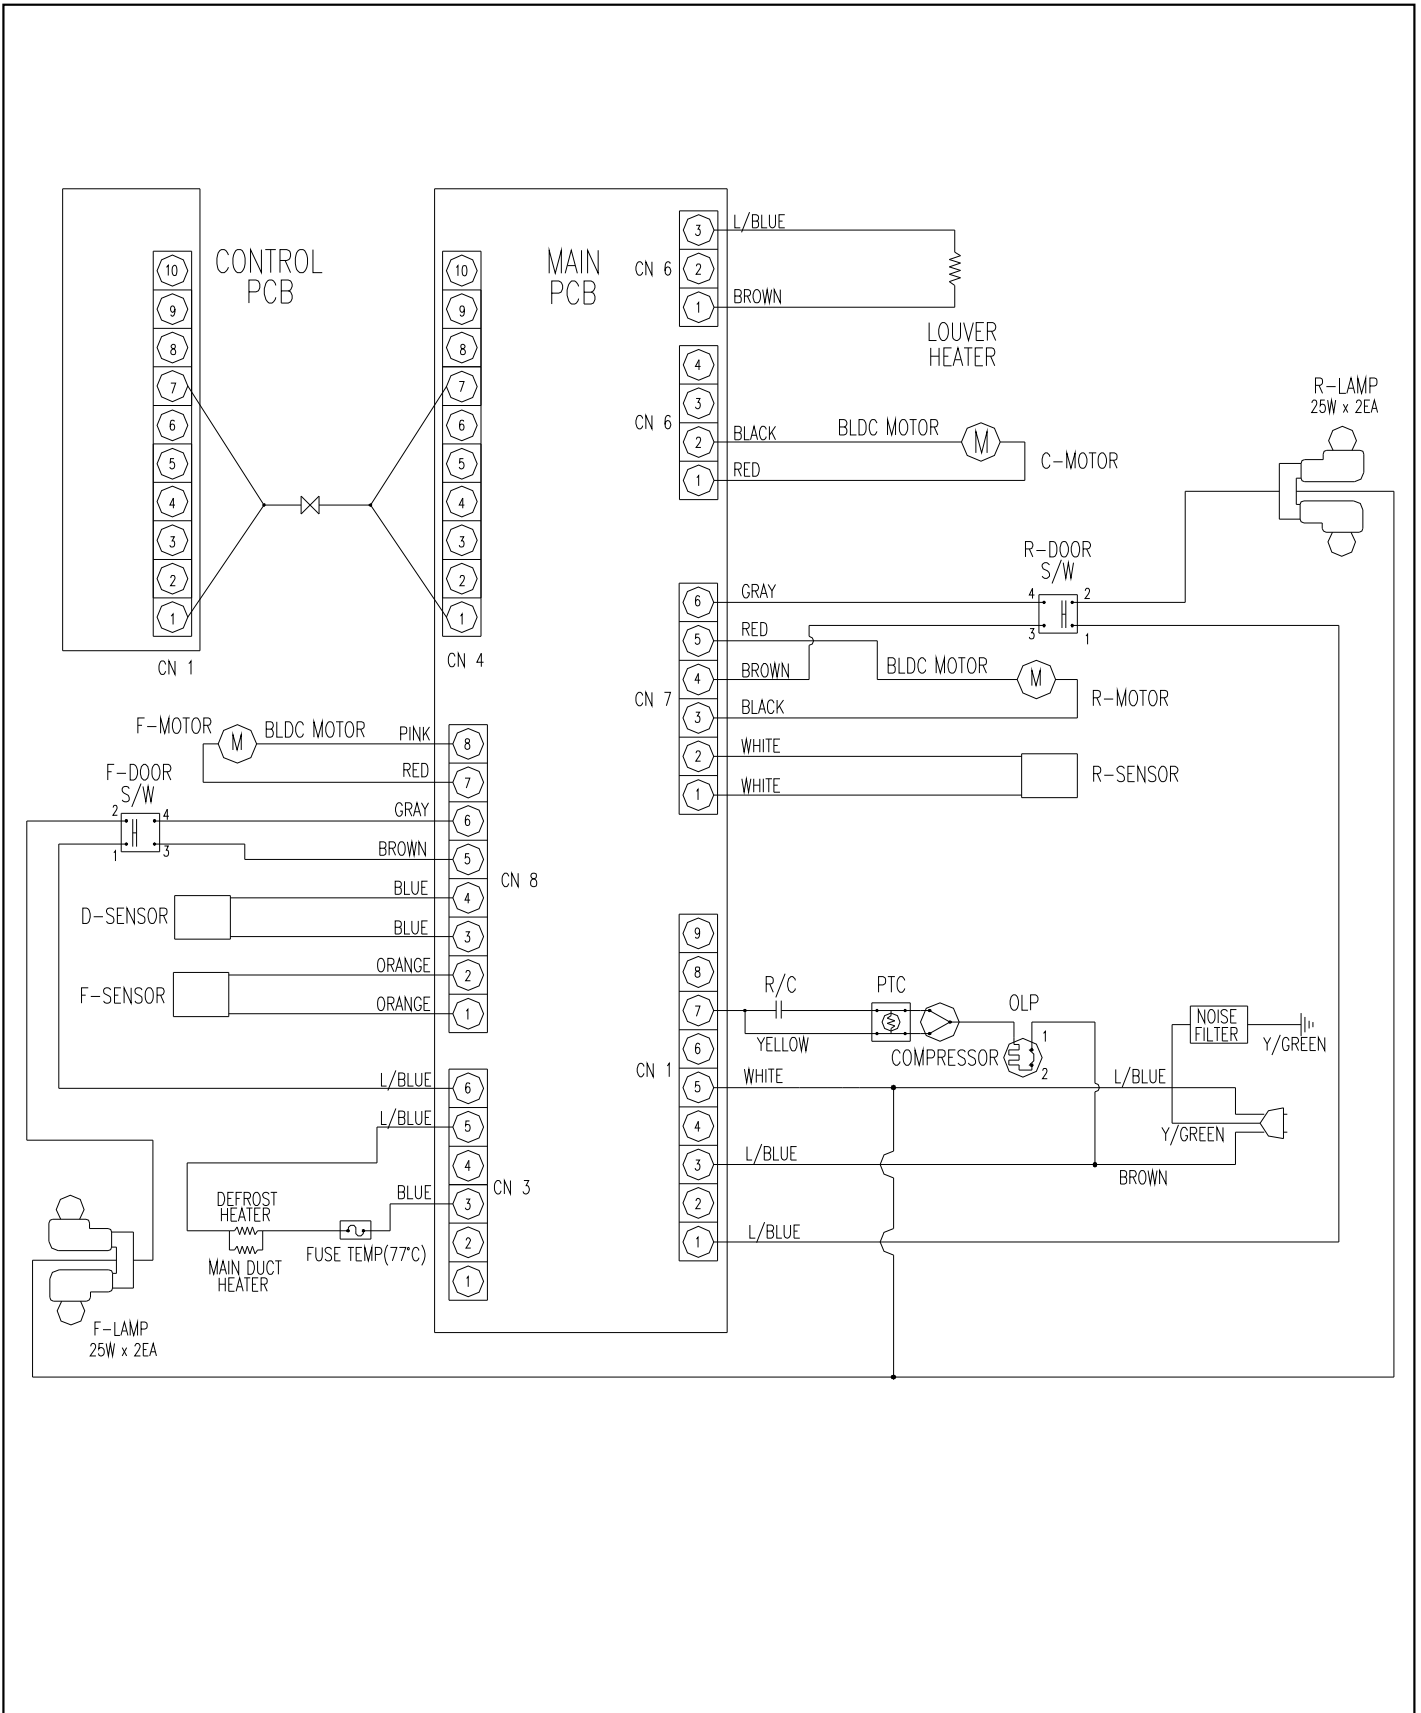


FRS(N)-U20DA / EA / FA / GA

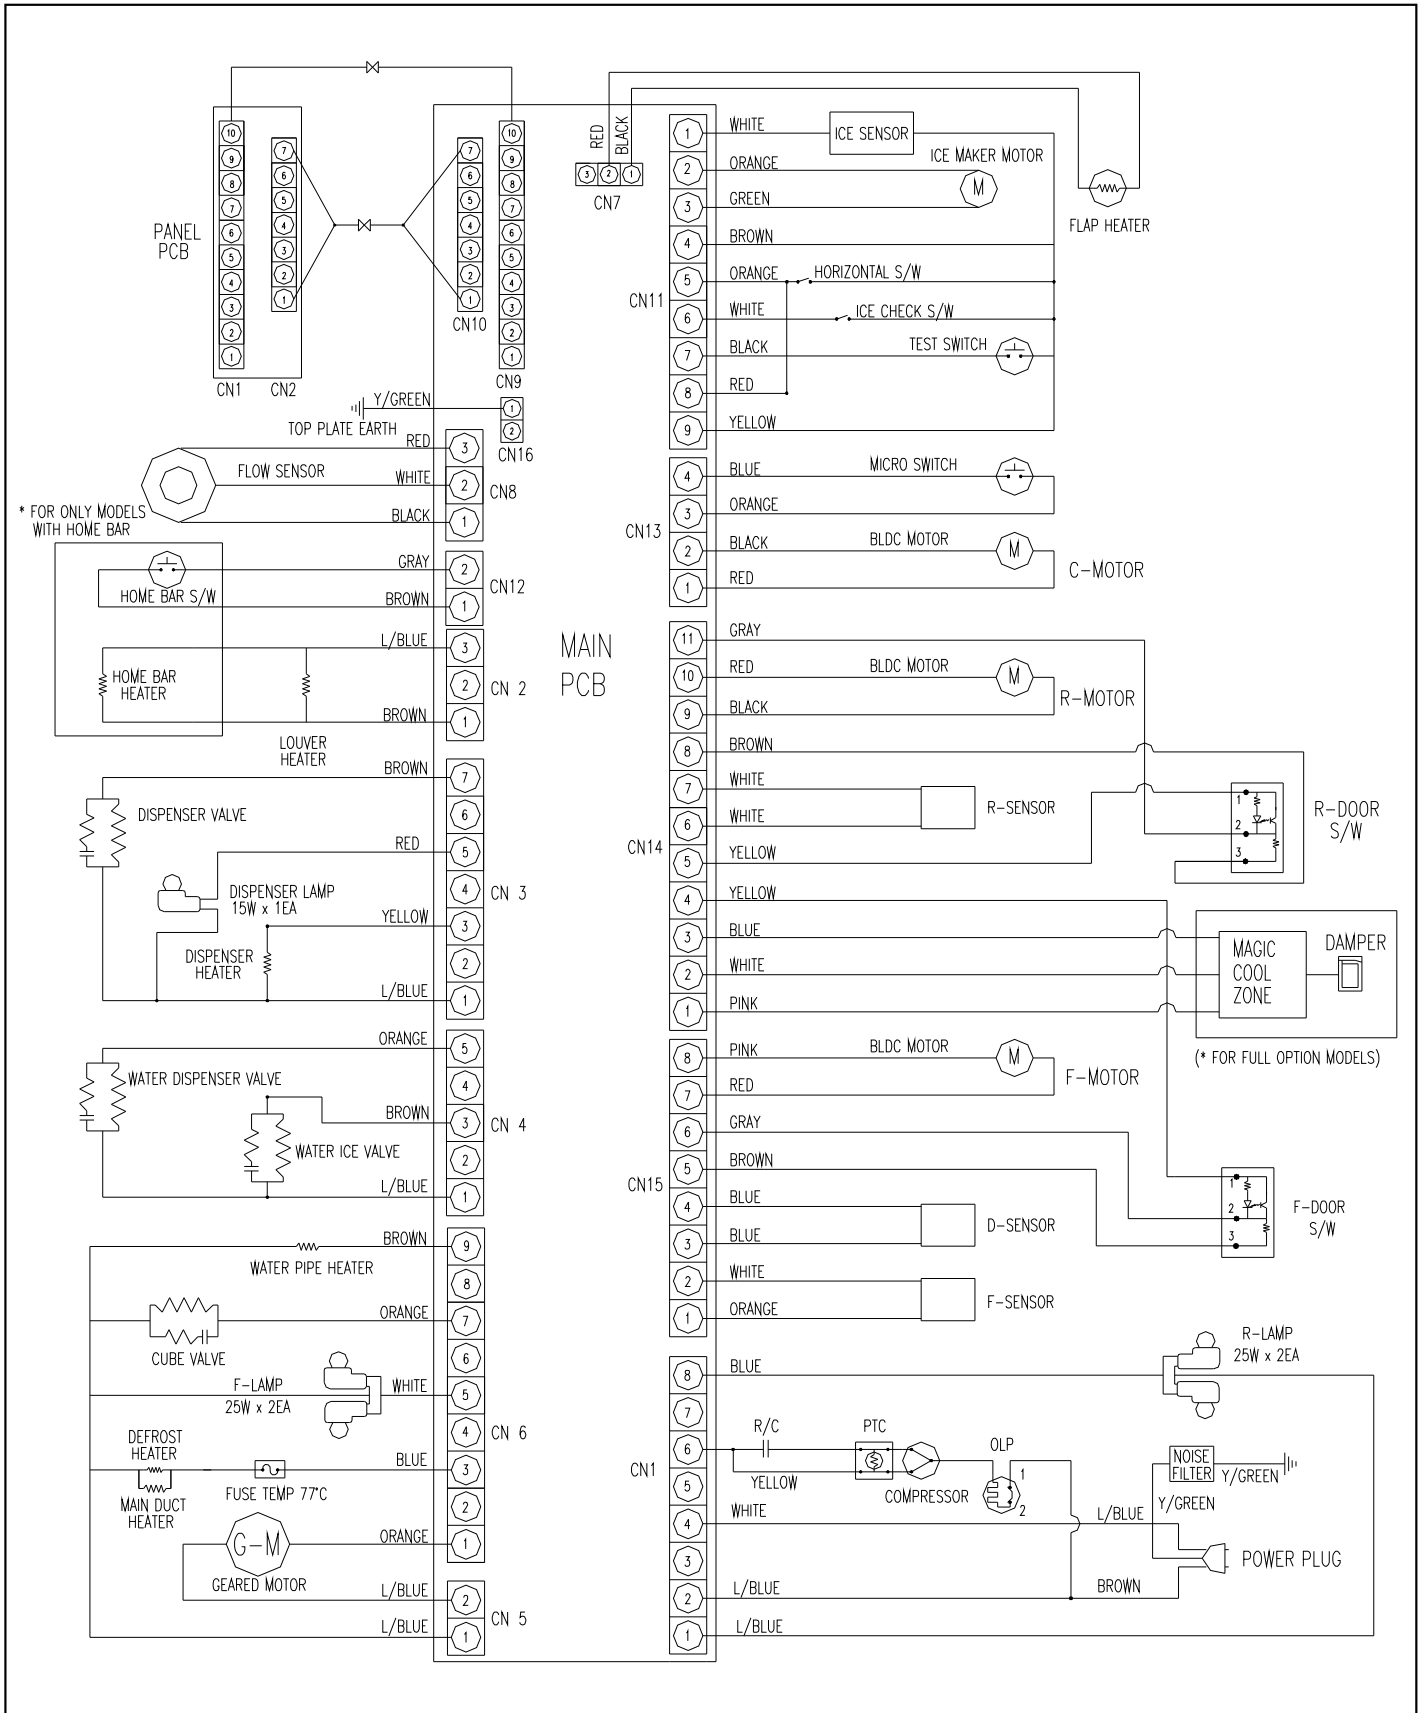


## 6-2. Circuit Diagram of Main PCB


### FRS(N)-U201A

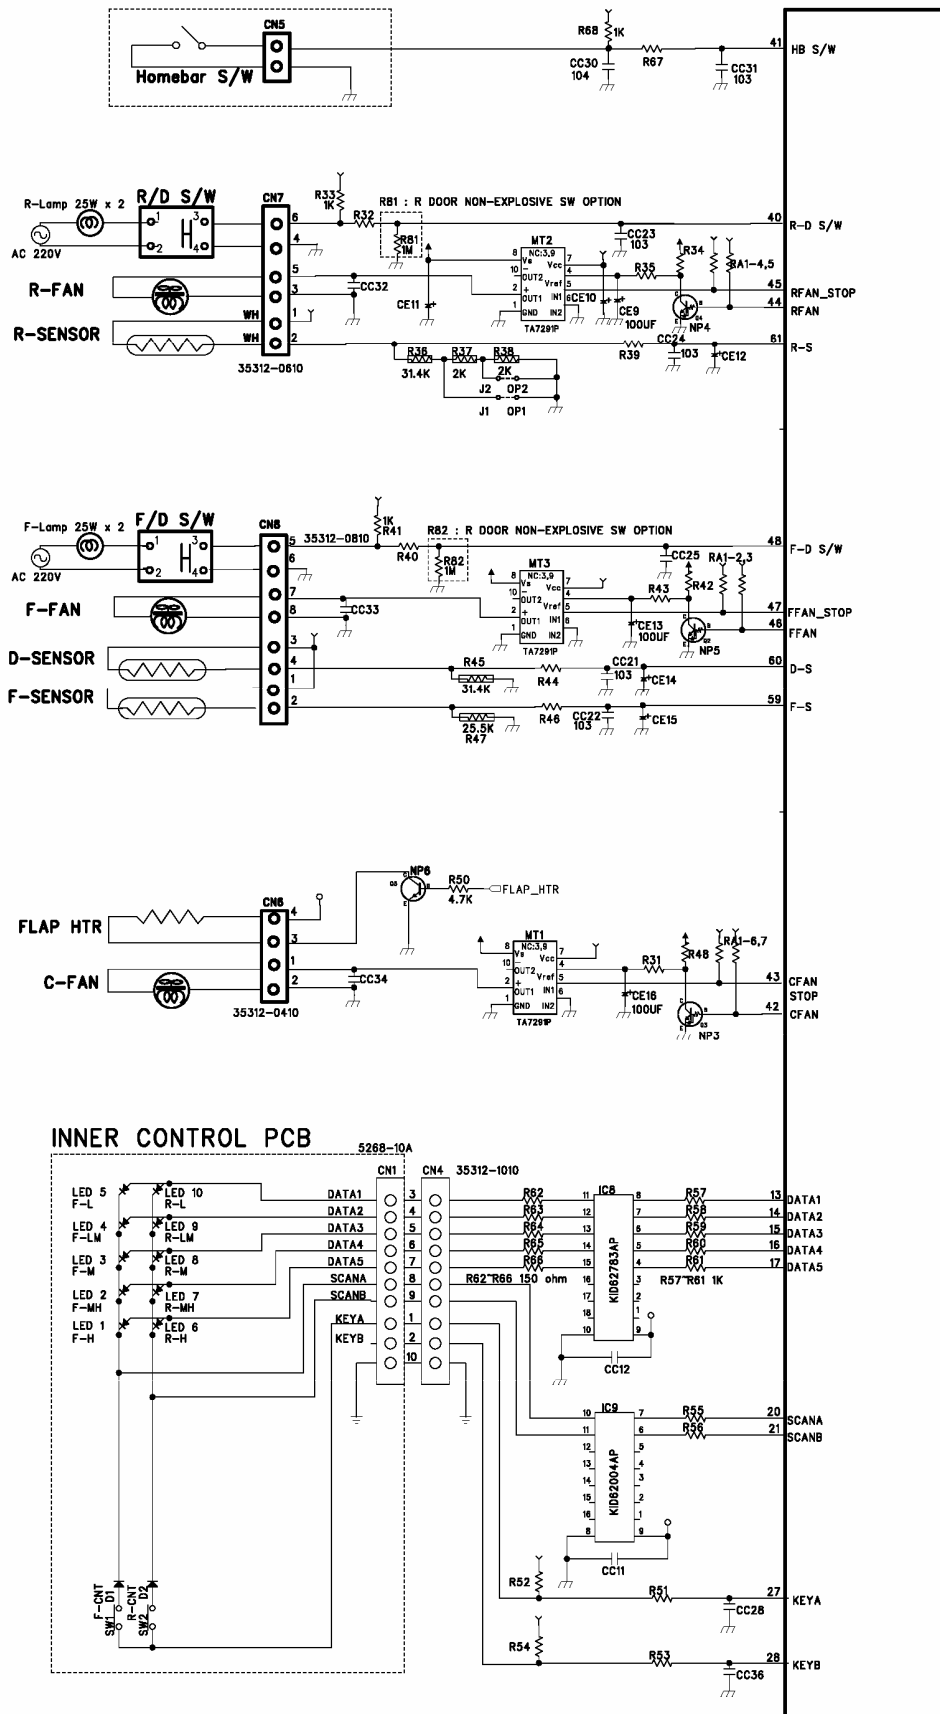


# M - PCB

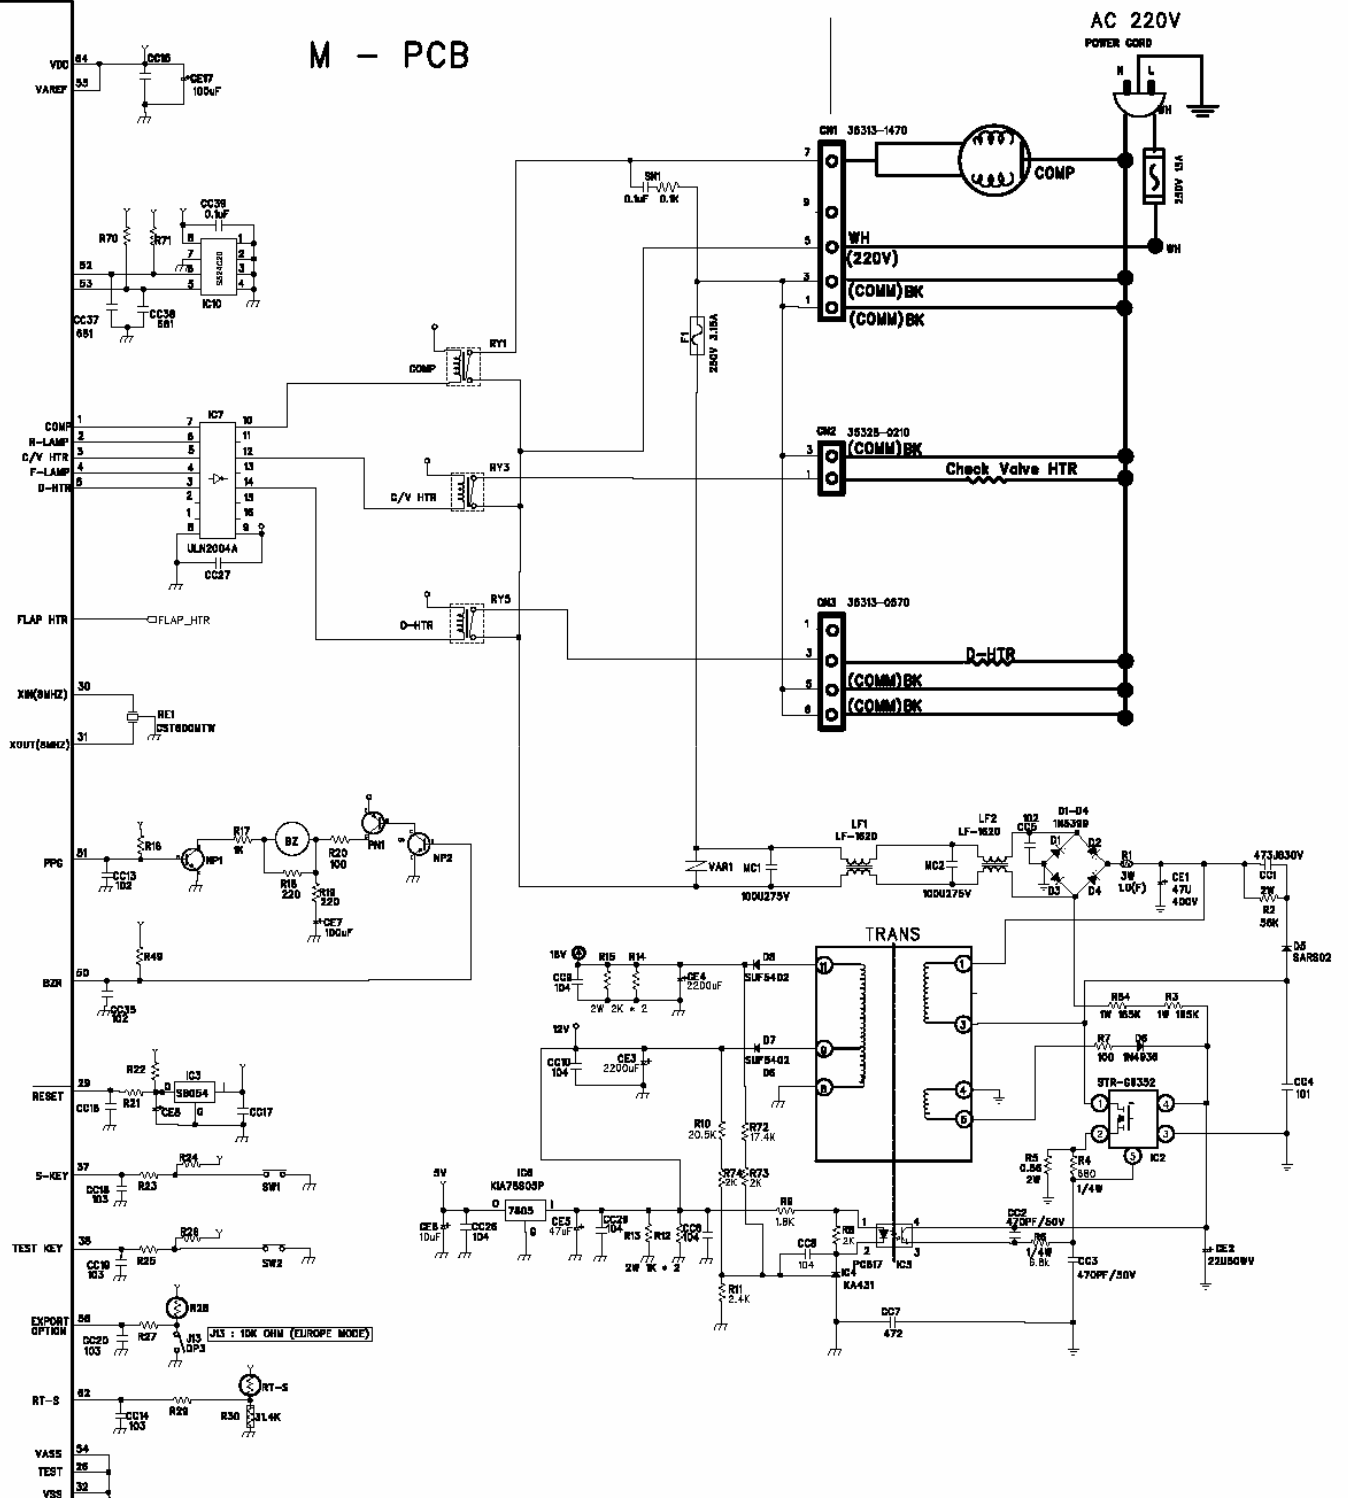


FRS(N)-U20DA / EA / FA / GA

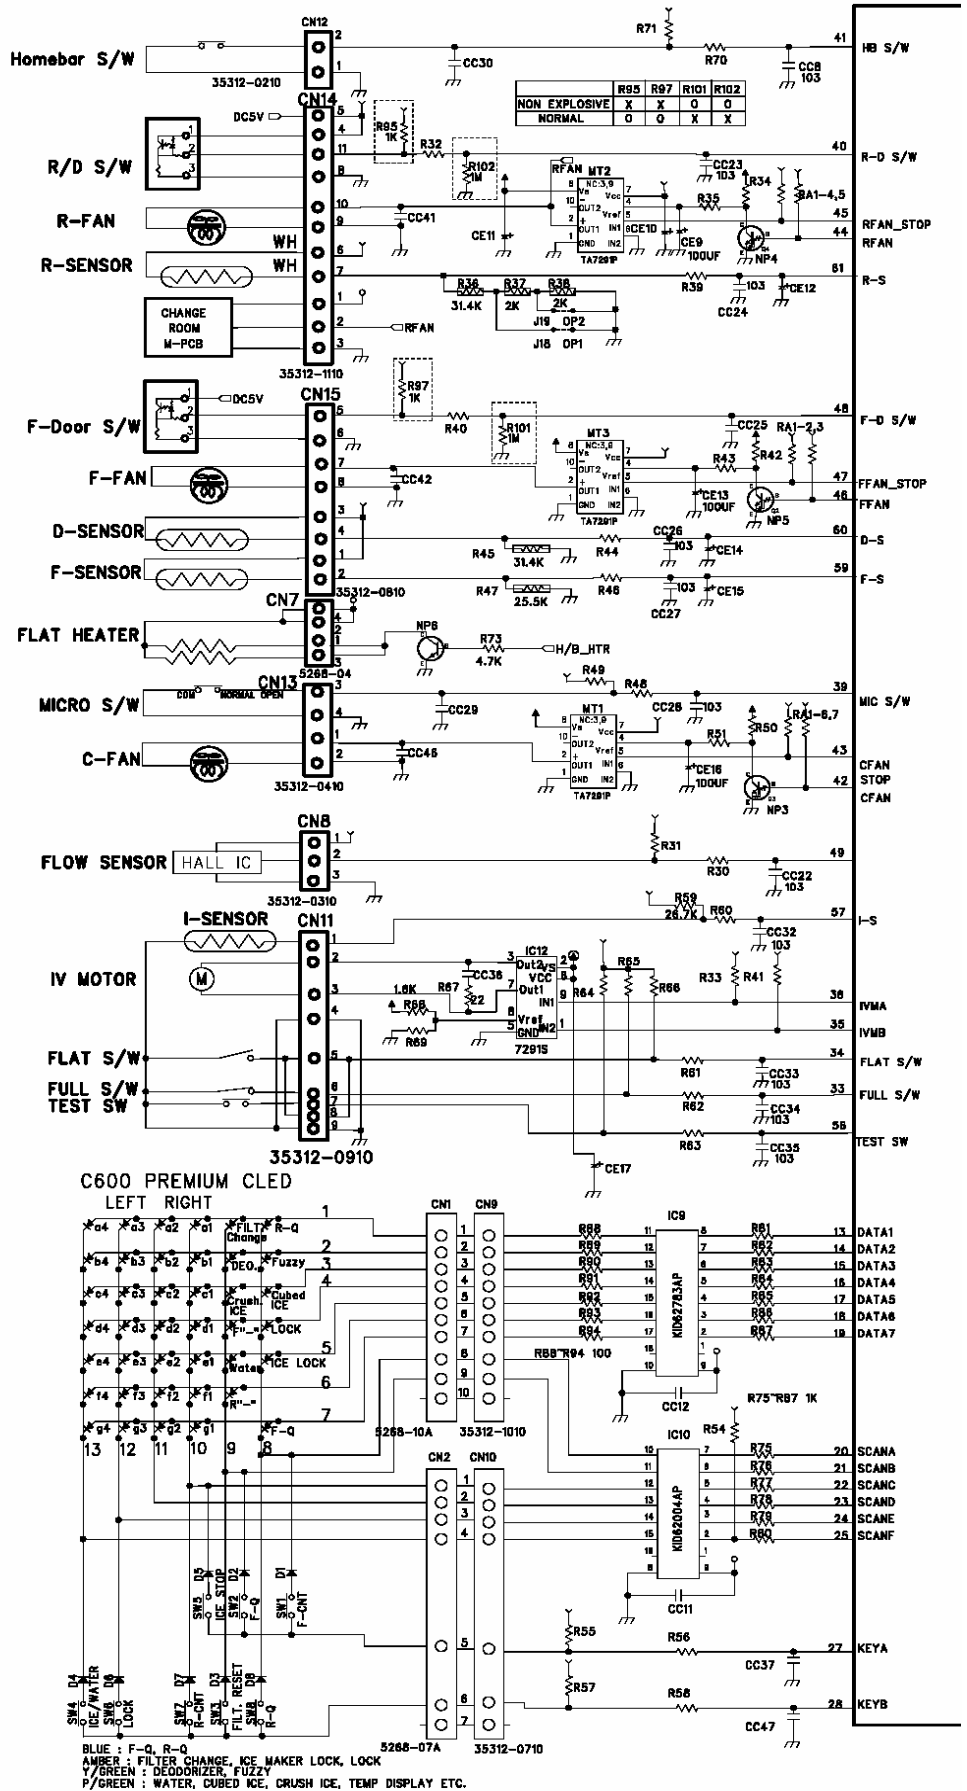

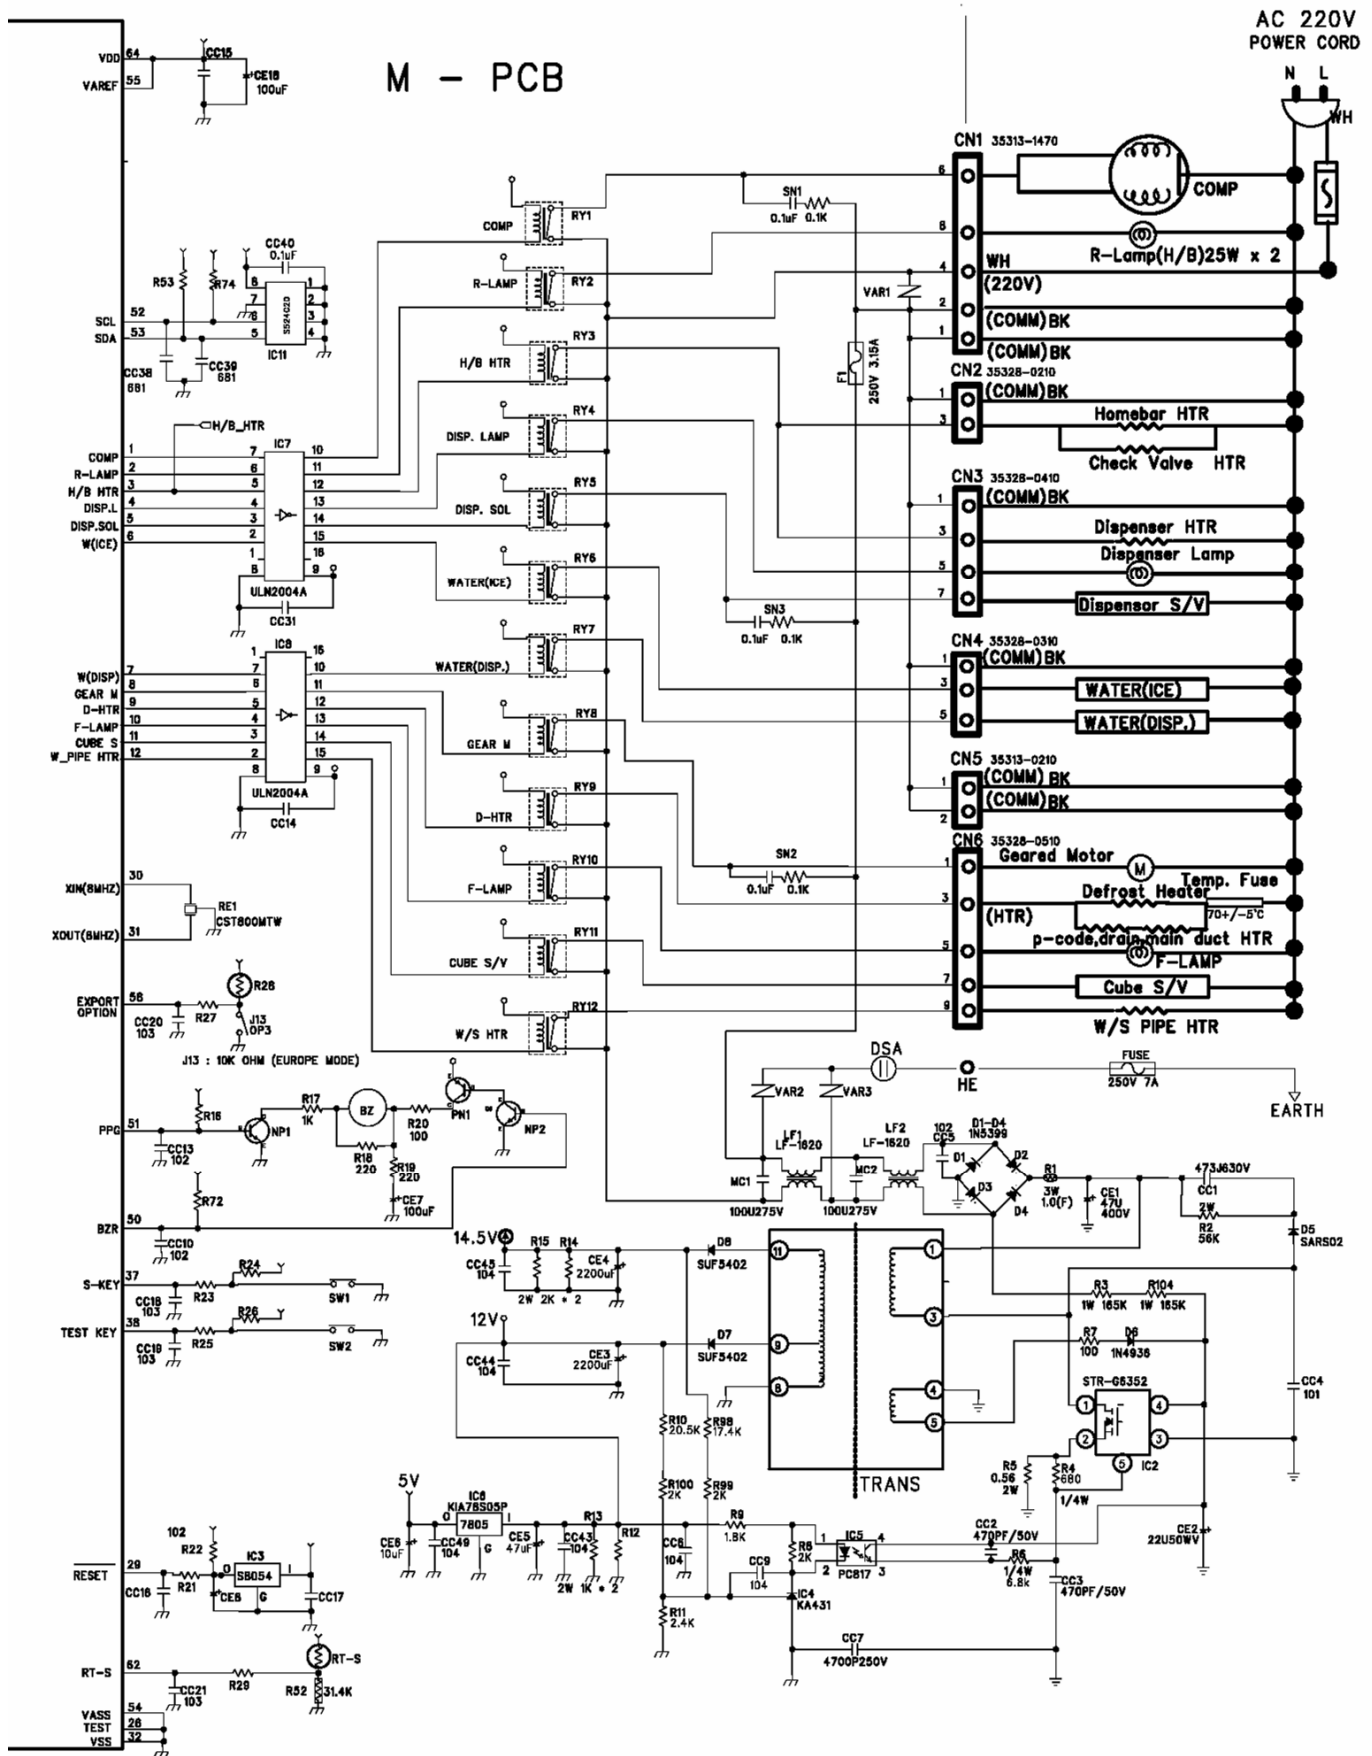

## 7. COMPONENT LOCATE VIEW

### 7-1. Front View

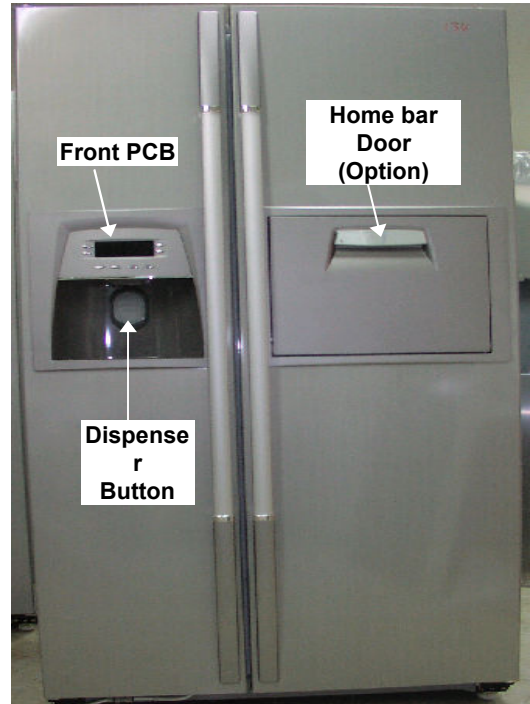

### 7-2. Inner View


Automatic Ice Maker  
F-Fan Motor  
Geared Motor



F-Door Switch  
F-Sensor  
F-Lamp

Freezer Compartment  
(FRS(N)-U20DA)


R-Fan Motor  
R-Sensor  
R-Lamp

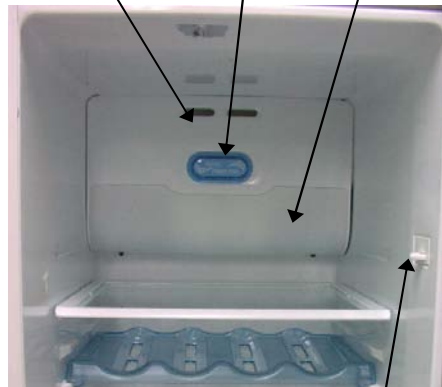

R-Door Switch

Refrigerator Compartment  
(FRS(N)-U20DA)


R-Sensor  
Inner Controller

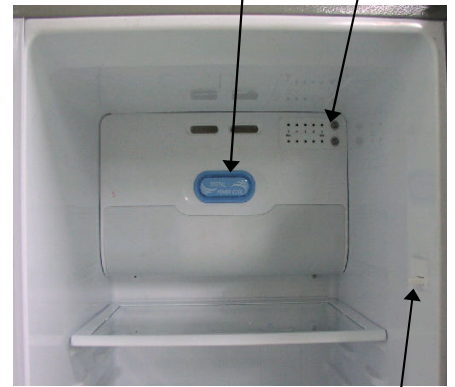


R-Door Switch

Refrigerator Compartment  
(FRS(N)-U201A)

### 7-3. Evaporator

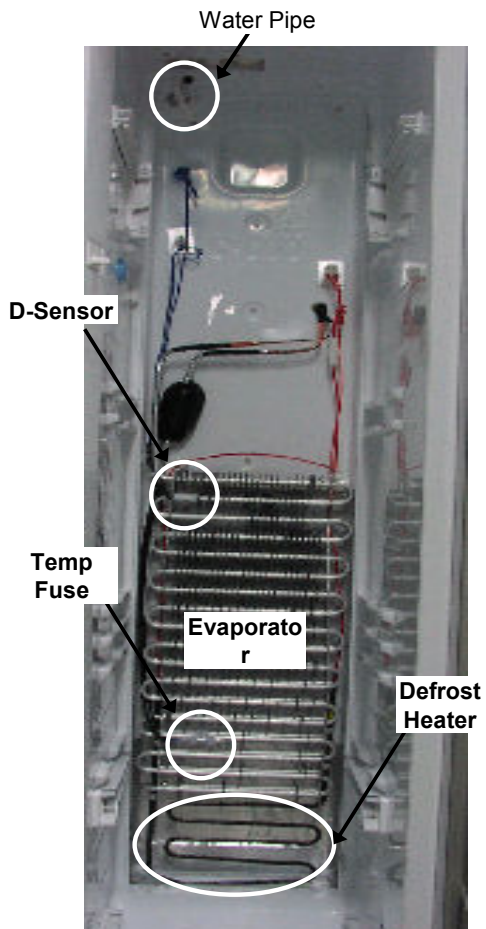

### 7-4. Machine Compartment

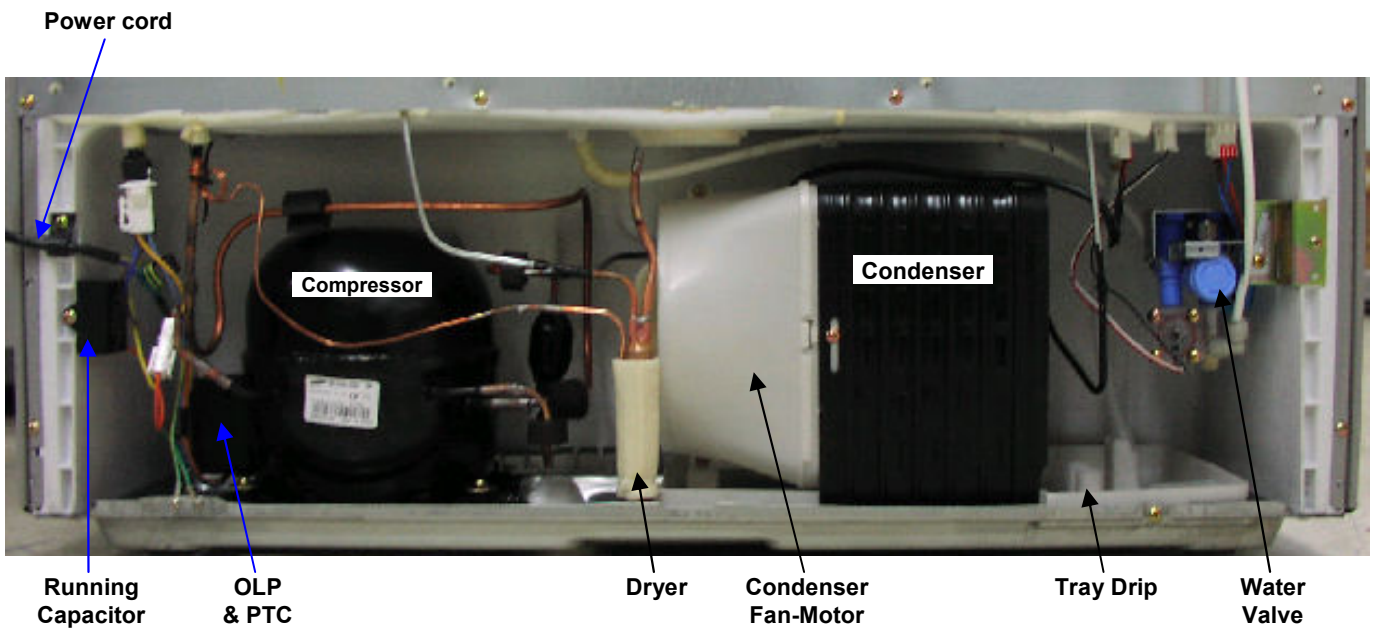










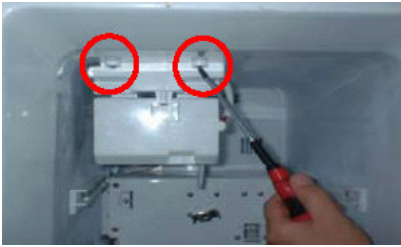

## 8. HOW TO CHECK EACH PARTS

### 8-1. Hose Ice Maker Tube Assembly

#### 1) Disassembling Procedure




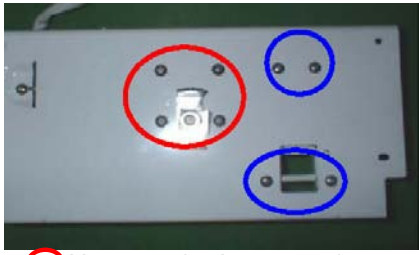



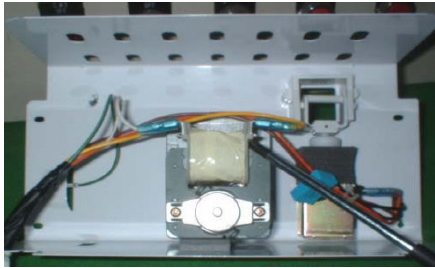
NO	DISASSEMBLING PROCEDURE	NO	DISASSEMBLING PROCEDURE
1	 <p>▷ Pull forward Ice Storage Case</p>	5	 <p>▷ Remove 2 screws at the Cove Guide Cab W/Tube A.</p>
2	 <p>▷ Remove 2 screws.</p>	6	 <p>▷ Disassemble Cover Guide Cab W/Tube A</p>
3	 <p>▷ Pull forward Ice Maker.</p>	7	 <p>▷ Pull forward Hose Ice Maker Tube As.</p>
4	 <p>▷ Remove Water Hose Heater's 2P housing.</p>	8	 <p>▷ Check Hose Ice Maker Tube As.</p>

#### 2) How to check Hose Ice Maker Tube As.



How to check	CRITERION
 <p>▷ Measure the resistance of two wire</p>	<p>▷ Good: <math>9680\Omega(\pm 8\%)</math> (<math>8900 \sim 10456\Omega</math>)</p> <p>▷ If defective, change</p>

## 8-2. Bracket Geared Motor Assembly

### 1) Disassembling Procedure



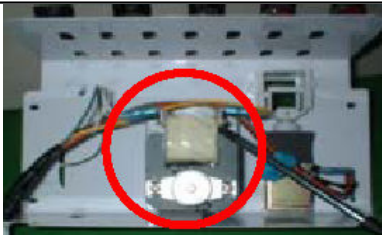

NO	DISASSEMBLING PROCEDURE	NO	DISASSEMBLING PROCEDURE
1	 <p>▷ Remove 2 screws.</p>	4	 <p>▷ Pull forward Bracket Geared Motor.</p>
2	 <p>▷ Unscrew (4 points).</p>	5	 <p>  Unscrew (red 4 screws).   Unscrew (blue 4 screws).         </p>
3	 <p>▷ Separate 6 pin housing of Bracket Geared Motor from the top connector.</p>	6	 <p>▷ Check Solenoid Valve and Geared Motor.</p>

### 2) How to Check Hose Ice Maker Tube Assembly


PARTS	SPEC.	HOW TO CHECK	CRITERION
Geared Motor	<p>▷ SPEC. NAME :DAG-6502DEC</p> <p>▷ VOLTAGE :220/240V,50Hz</p>	 <p>▷ Check resistance value of 2 terminals with a Multi Tester.</p>	<p>▷ GOOD : 11.3Ω(±10%) (10.8 ~ 12.7Ω)</p> <p>▷ DEFECTIVE ; Change the Geared Motor.</p>
Cube Sol Valve	<p>▷ SPEC. NAME :Cube SN8</p> <p>▷ VOLTAGE :220/240V,50Hz</p>	 <p>▷ Check resistance value of 2 terminals with a Multi Tester.</p>	<p>▷ GOOD : 145Ω(±8%) (133 ~ 156Ω)</p> <p>▷ DEFECTIVE ; Change the Cube Sol Valve.</p>

## 8-3. Dispenser Micro Switch

### 1) Disassembling Procedure

NO	DISASSEMBLING PROCEDURE	NO	DISASSEMBLING PROCEDURE
1	 <p>▷ Insert (-) screw driver into bottom hole of Dispenser Button Guide. Pull up forward to remove the guide. (Be careful not to damage guide surface.)</p>	3	 <p>▷ Separate wire connectors from Micro Switch.</p>
2	 <p>▷ Remove Micro switch.</p>	4	 <p>▷ Check Micro Switch.</p>




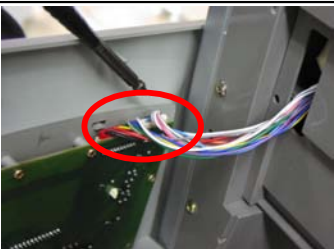

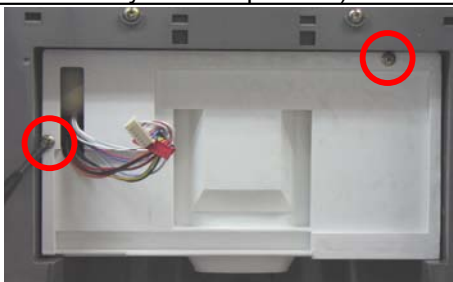

### 2) How to Check Micro Switch

PARTS	HOW TO CHECK	CRITERION									
<p>SPEC. NAME : VP333A-OD-8</p> <p>VOLTAGE : 125V, 3A</p>	 <p>▷ Check both terminals (red circle) with a Multi Tester (Tester Mode : Resistance (Ω)).</p>	<p>▷ GOOD :</p> <table border="1"> <thead> <tr> <th>Tact Switch (Blue Circle)</th> <th>Terminals (Red circle)</th> <th>Tester Result (Resistance Mode)</th> </tr> </thead> <tbody> <tr> <td>ON (Close)</td> <td>Connected</td> <td>Some Value</td> </tr> <tr> <td>OFF (Open)</td> <td>Disconnected</td> <td>No value (0)</td> </tr> </tbody> </table> <p>▷ DEFECTIVE : Change Micro Switch.</p>	Tact Switch (Blue Circle)	Terminals (Red circle)	Tester Result (Resistance Mode)	ON (Close)	Connected	Some Value	OFF (Open)	Disconnected	No value (0)
Tact Switch (Blue Circle)	Terminals (Red circle)	Tester Result (Resistance Mode)									
ON (Close)	Connected	Some Value									
OFF (Open)	Disconnected	No value (0)									





## 8-4. Dispenser Solenoid Valve

### 1) Disassembling Procedure


NO	DISASSEMBLING PROCEDURE	NO	DISASSEMBLING PROCEDURE
1	 <p>▷ Insert (-) screw driver into bottom left groove of Cover Dispenser Box. Pull forward with a snap.(Be careful not to damage cover and door surface.)</p>	4	  <p>▷ Separate 2 terminals from Sol Valve and 2P Housings from Cover Ice Flap.</p>
2	 <p>▷ Separate 2 housings of 10P / 7P from Front PCB. (Do not hold only wires to pull out.)</p>	5	 <p>▷ Unscrew (3 points) to remove Sol Valve.</p>
3	 <p>▷ Unscrew (2 points) to remove Box Dispenser Shut.</p>	6	 <p>▷ Unscrew (1 point) to remove Cover Ice Flap.</p>




### 2) How to Check Micro Switch

PARTS	SPEC.	HOW TO CHECK	CRITERION
Dispenser Sol Valve	<p>▷ SPEC. NAME :SOL2003-01B</p> <p>▷ VOLTAGE :220/240V,50Hz</p>	 <p>▷ Check resistance value of both terminals with a tester.</p>	<p>▷ Good : 215Ω(±10%) (193 ~ 236Ω)</p> <p>▷ DEFECTIVE : 0 Change Sol Valve.</p>
Flap Heater Assembly	<p>▷ VOLTAGE :DC 12V,1.5W</p>	 <p>▷ Check resistance value of both terminals with a tester.</p>	<p>▷ GOOD : 96Ω(±8%) (88 ~ 104Ω)</p> <p>▷ DEFECTIVE ; Change Flap Heater AS.</p>

## 8-5. Main PCB


### ■ FRS(N)-U201A


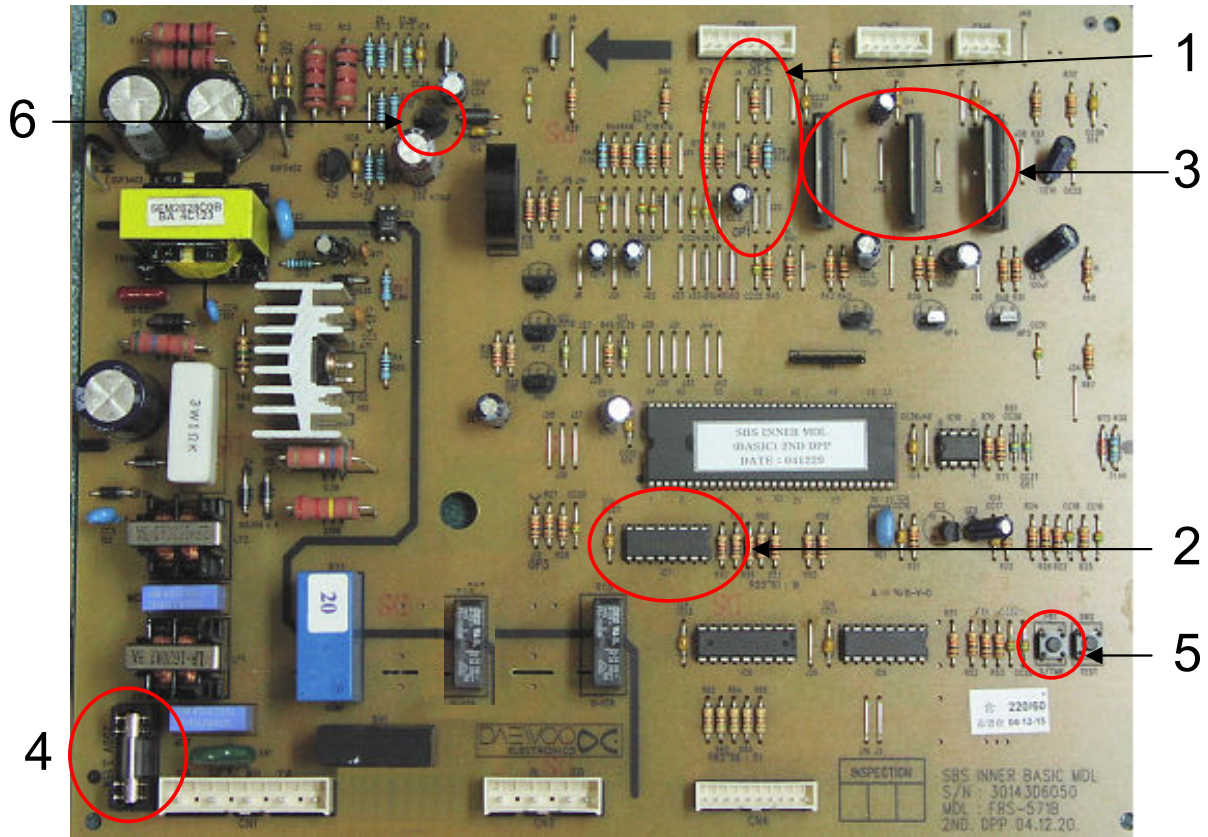


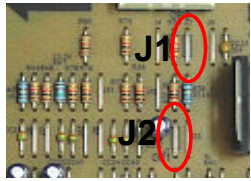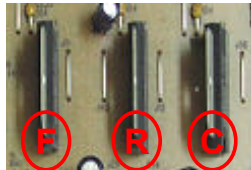
NO	ITEM	CHECK POINT	REMARK
1	Compensation of Weak Refrigeration → Making R-temp cooler	 <p>* Used when making R-temp. down to compensate for weak refrigeration without changing FCP temp. setting.            ▷ Cutting of J1 ; down by 1.5°C            ▷ Cutting of J1, J2 ; down by 3°C</p>	
2	Relay Power Controller	<p>* To check normal voltage of each electrical devices to &amp; from Mi-com.            ▷ Check input &amp; output voltage of MICOM and IC7</p>	
3	Fan Power Controller	  <p>* To check input &amp; output voltage of Fan            ▷ #2 : Input            ▷ #5 : Output</p>	
4	Electric Current Fuse	<p>* To check when each device does not work (250V,3.15A)</p>	
5	Time Shortening Switch	<p>* To shorten time in PCB checkup (Pressing 1 time is regarded as 1 minute has passed.)</p>	
6	Regulator IC(5V)	<p>* To check voltage of MICOM and IC            Voltage check of IC#6 (Input :12V,Output : 5V)</p>	




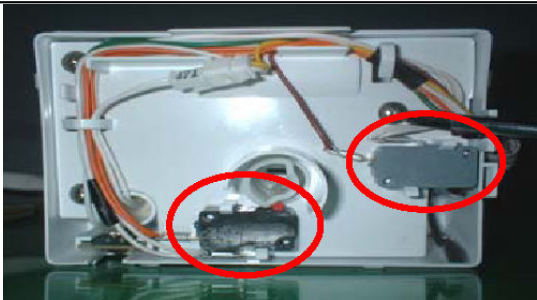


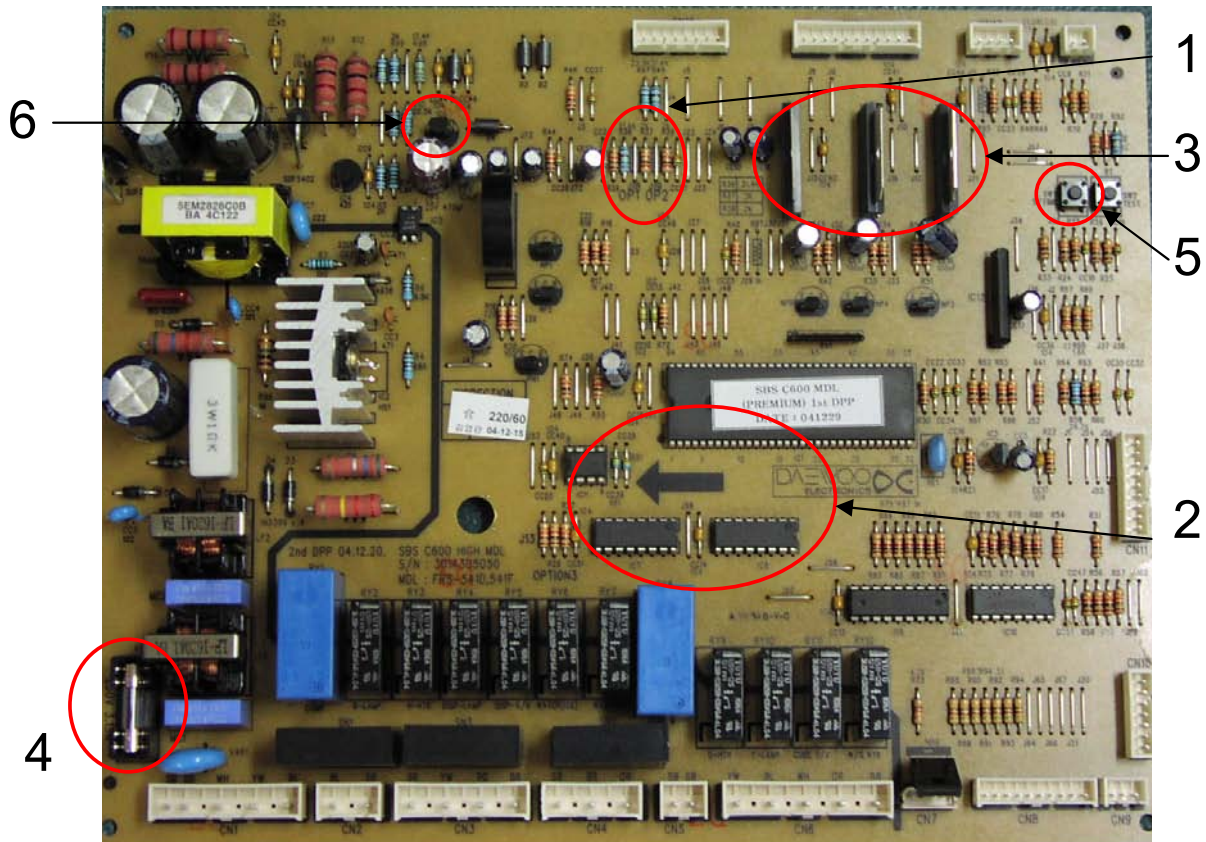
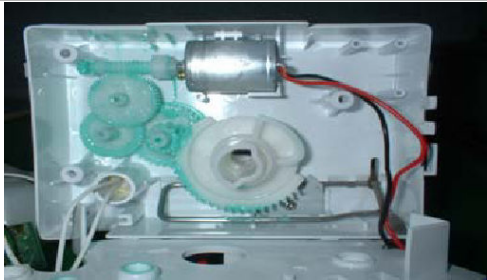

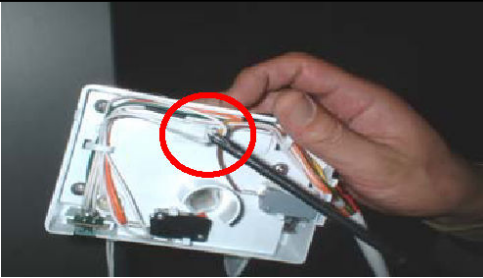

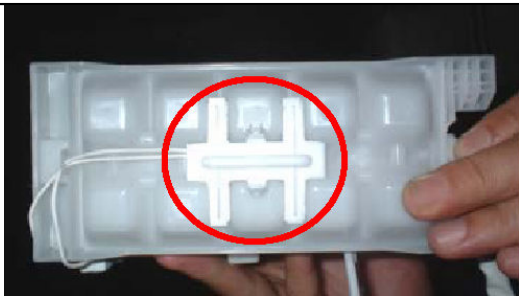
■ FRS(N)-U20DA/EA/FA/GA

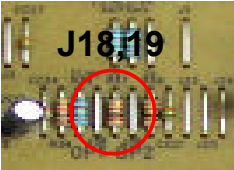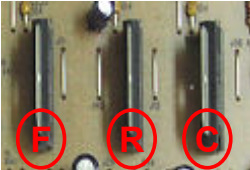

NO	ITEM	CHECK POINT	REMARK
1	Compensation of Weak Refrigeration → Making R-temp cooler	 <p>* Used when making R-temp. down to compensate for weak refrigeration without changing FCP temp. setting.                      ▷ Cutting of J18 ; down by 1.5 °C                      ▷ Cutting of J18, J19 ; down by 3 °C</p>	
2	Relay Power Controller	<p>* To check normal voltage of each electrical devices to &amp; from Mi-com.                      ▷ Check input &amp; output voltage of MICOM and IC7, 8.</p>	
3	Fan Power Controller	  <p>* To check input &amp; output voltage of Fan                      ▷ #2 : Input                      ▷ #5 : Output</p>	
4	Electric Current Fuse	<p>* To check when each device does not work (250V,3.15A)</p>	
5	Time Shortening Switch	<p>* To shorten time in PCB checkup (Pressing 1 time is regarded as 1 minute has passed.)</p>	
6	Regulator IC(5V)	<p>* To check voltage of MICOM and IC                      Voltage check of IC#6 (Input :12V,Output : 5V)</p>	





## 8-6. Ice Maker

### 1) Disassembling Procedure

NO	DISASSEMBLING PROCEDURE	NO	DISASSEMBLING PROCEDURE
1	 <p>▷ Remove 2 screws on top front of ice maker.</p>	6	 <p>▷ Remove full ice sensing switch and level switch.</p>
2	 <p>▷ Pull forward ice maker.</p>	7	 <p>▷ Unscrew (3 points) Plate Gear Fixture.</p>
3	 <p>▷ Unscrew Fixture of Frame Ice Maker.</p>	8	 <p>▷ Check if ice dropping motor is normal (OK).</p>
4	 <p>▷ Separate Ice Maker Assembly from Frame Ice Maker.</p>	9	 <p>▷ Remove 2 pin housing from Plate Gear Fixture.</p>
5	 <p>▷ Separate Cover I/M (A) from Cover I/M (B) with a (-) screw driver.</p>	10	 <p>▷ Remove I-sensor (ice sensor) from Case Icing As.</p>

\* Follow the reverse order when assembling.


## 2) How to Check Ice Maker

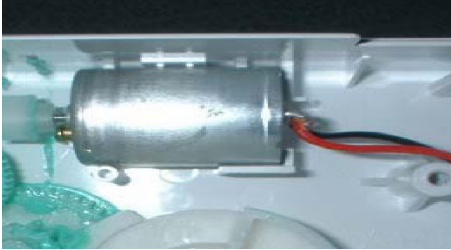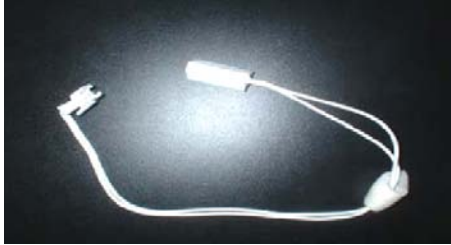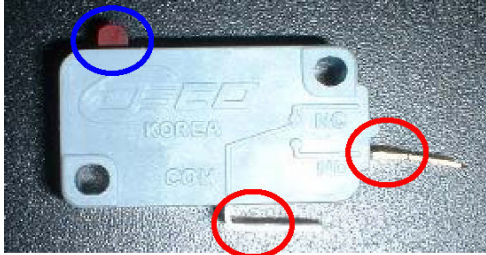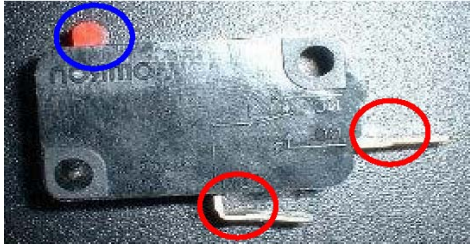PARTS	HOW TO CHECK	CRITERION									
Ice Dropping Motor	 <p>▷ Check resistance value of 2 wires with a Multi Tester.</p>	<p>▷ GOOD : RS-360RH-14250 : 6 ~ 14Ω</p> <p>▷ DEFECTIVE : Change the motor.</p>									
I-Sensor (Ice Sensor)	 <p>▷ Check resistance value of 2 wires with a Multi Tester.</p>	<p>▷ GOOD : 4.4 ~ 50kΩ (It depends on surround temp.)</p> <p>▷ DEFECTIVE : Change the sensor.</p>									
Full Ice Sensing Switch	 <p>▷ Check resistance value of 2 terminals with a Multi Tester.</p>	<p>▷ GOOD :</p> <table border="1" data-bbox="903 1081 1513 1312"> <thead> <tr> <th>Tact Switch (Blue Circle)</th> <th>Terminals (Red circle)</th> <th>Tester Result (Resistance Mode)</th> </tr> </thead> <tbody> <tr> <td>ON (Close)</td> <td>Connected</td> <td>Some Value</td> </tr> <tr> <td>OFF (Open)</td> <td>Disconnected</td> <td>No value (0)</td> </tr> </tbody> </table> <p>▷ DEFECTIVE : Change the switch.</p>	Tact Switch (Blue Circle)	Terminals (Red circle)	Tester Result (Resistance Mode)	ON (Close)	Connected	Some Value	OFF (Open)	Disconnected	No value (0)
Tact Switch (Blue Circle)	Terminals (Red circle)	Tester Result (Resistance Mode)									
ON (Close)	Connected	Some Value									
OFF (Open)	Disconnected	No value (0)									
Level Switch	 <p>▷ Check resistance value of 2 terminals with a Multi Tester.</p>	<p>▷ GOOD :</p> <table border="1" data-bbox="903 1507 1513 1738"> <thead> <tr> <th>Tact Switch (Blue Circle)</th> <th>Terminals (Red circle)</th> <th>Tester Result (Resistance Mode)</th> </tr> </thead> <tbody> <tr> <td>ON (Close)</td> <td>Connected</td> <td>Some Value</td> </tr> <tr> <td>OFF (Open)</td> <td>Disconnected</td> <td>No value (0)</td> </tr> </tbody> </table> <p>▷ DEFECTIVE : Change the switch.</p>	Tact Switch (Blue Circle)	Terminals (Red circle)	Tester Result (Resistance Mode)	ON (Close)	Connected	Some Value	OFF (Open)	Disconnected	No value (0)
Tact Switch (Blue Circle)	Terminals (Red circle)	Tester Result (Resistance Mode)									
ON (Close)	Connected	Some Value									
OFF (Open)	Disconnected	No value (0)									



## 9. TROUBLE DIAGNOSIS

### 9-1. Faulty Start (F/R lights OFF , F-PCB Power OFF)

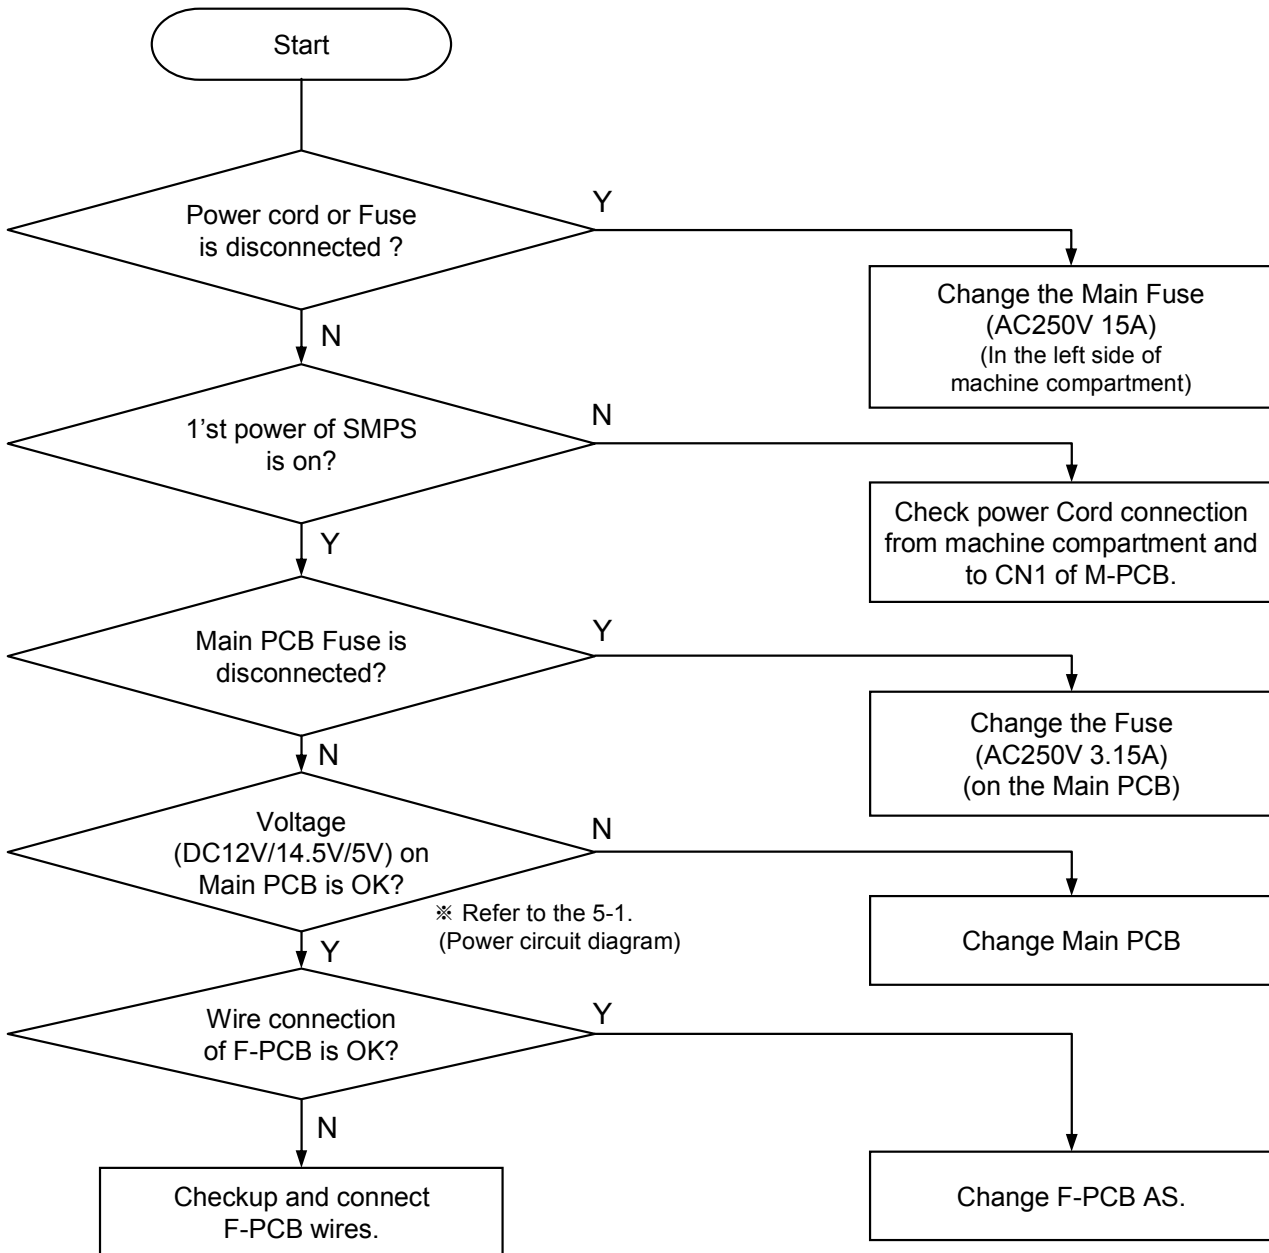

#### ※ How to replace Front PCB




- 1) Insert a flat tip driver into the left down groove of panel frame and snap it out smoothly.
- 2) Separate 2 housings of 10P / 7P from Front PCB. (Do not hold only wires to pull out.)
- 3) Unscrew (7 points) to remove Front PCB.

\* Follow the reverse order when assembling.

## 9-2. Freezer Compartment

### 9-2-1. Freezing failure . (Foods are not frozen / cold.)

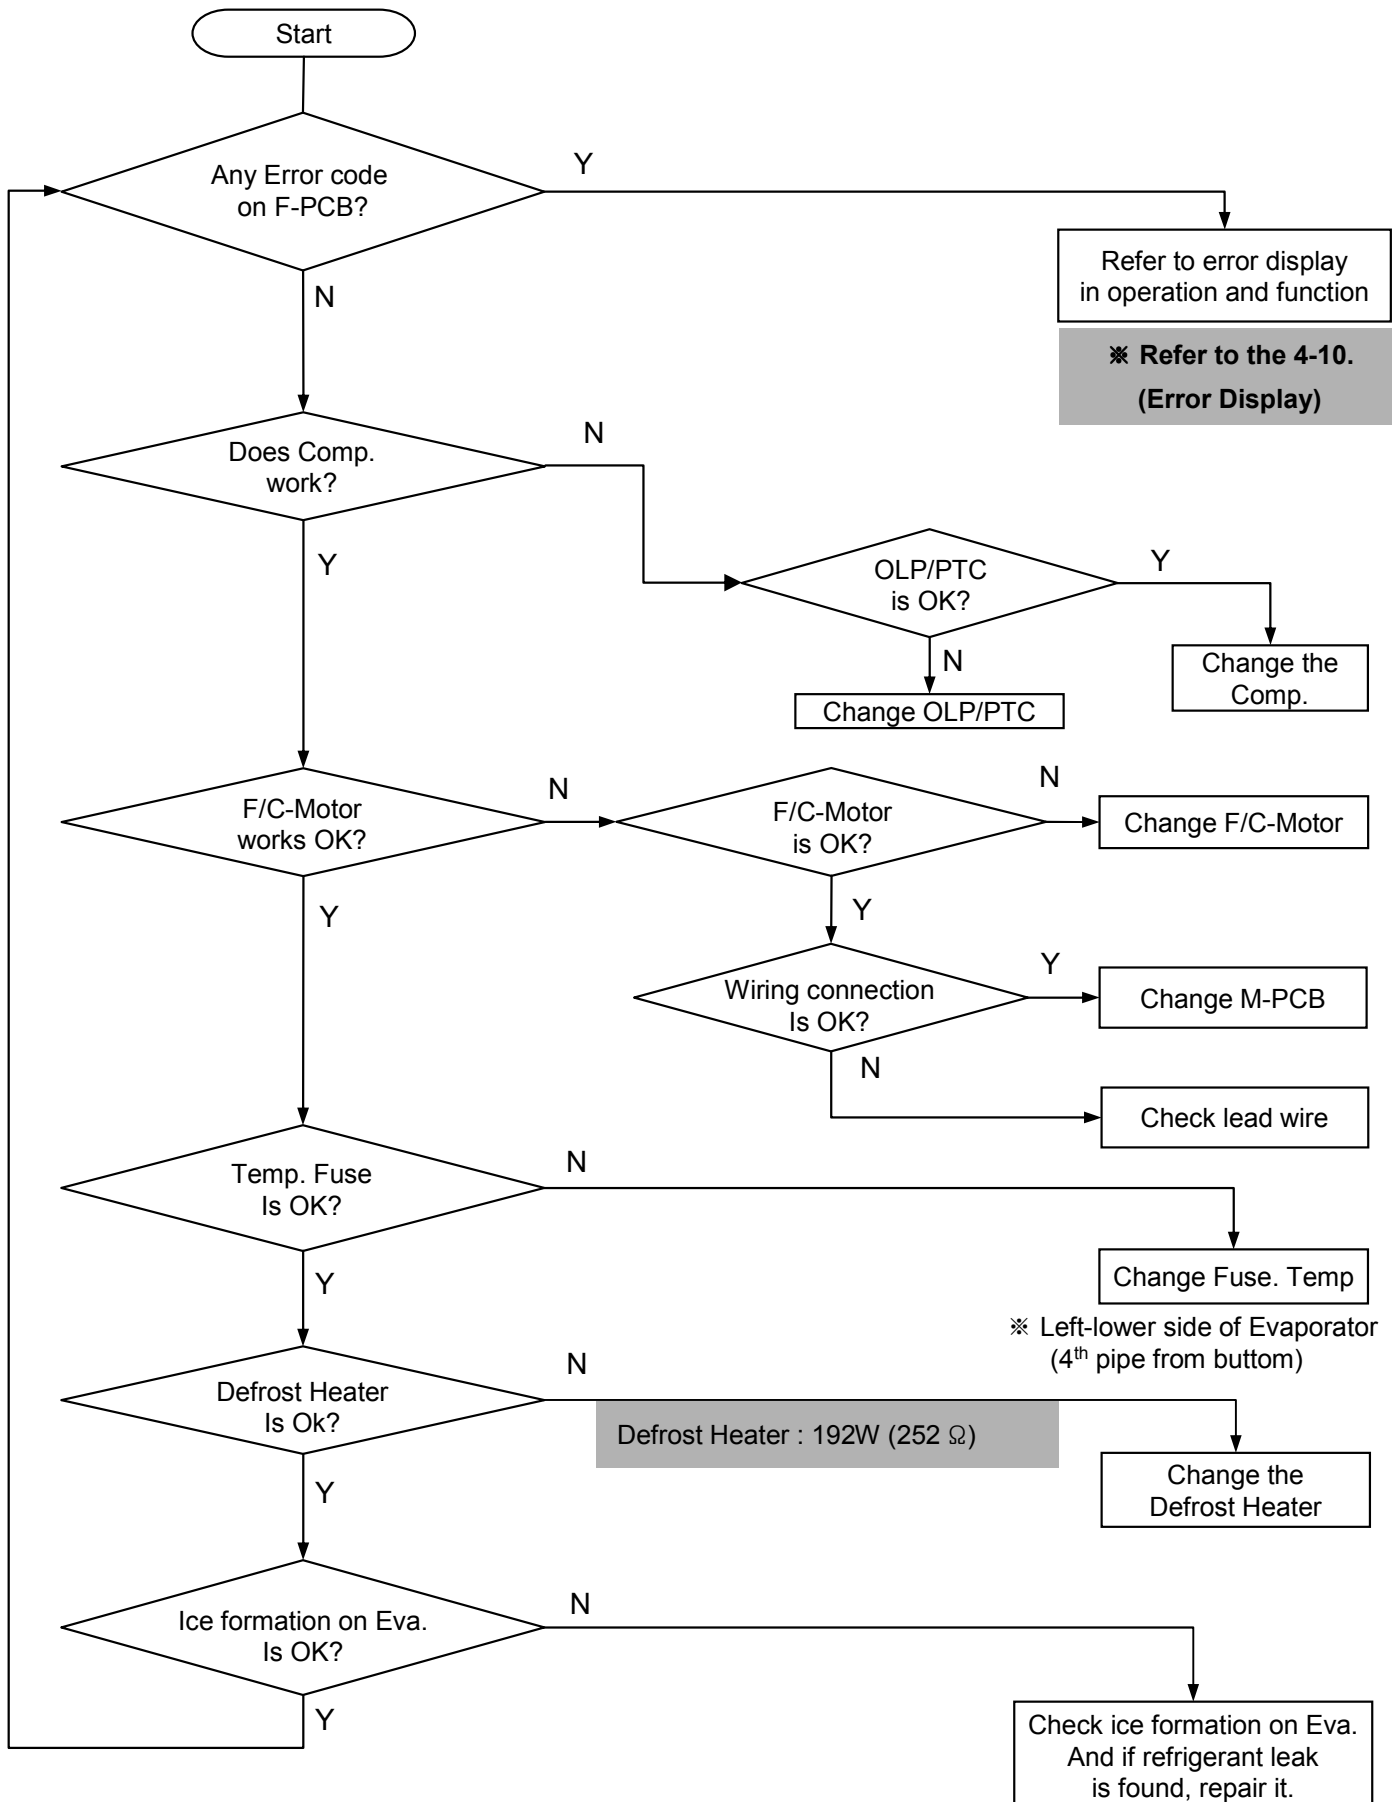

## Removing and replacing Freezer parts

(1)



- 1) Remove foods.
- 2) Remove Ice Bucket, shelves and cases in Freezer compartment.

(2)



- \* Remove 2 screws of Ice Maker.

(4)



- \* Remove 4 screws of Geared Motor.

(3)



- \* Remove the Housing of Ice Maker AS. (Right side)


(5)



- \* Remove the Housing of Geared Motor AS. (Center)

## Removing and replacing Freezer parts

(6)

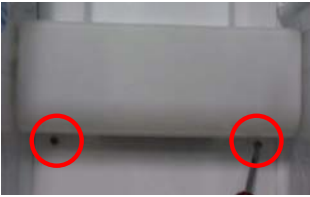

\* Remove light cover screws.

(7)



\* Pull down smoothly the bottom of light cover to remove.

(8)



\* Remove the screw of bracket F-Lamp.

(9)



\* Remove the left housing.

(10)



\* Pull out smoothly the bracket F-Lamp AS. to remove.

(11)



\* Hold the end of F-Fan cover and pull forward slowly.

(12)



\* Remove the screw cap on the F-Louver A with a flat tip driver.

(13)




\* Remove 3 screws of F-Louver A.

(14)



\* Hold the end of F-Louver A and pull forward slowly.

(15)

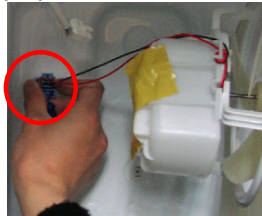

\* Remove the housing.

(16)



\* Remove the screw of F-Return cover and pull out cover.


(17)




\* Hold the end of F-Louver B and pull forward slowly.




**Removing and replacing Freezer parts**

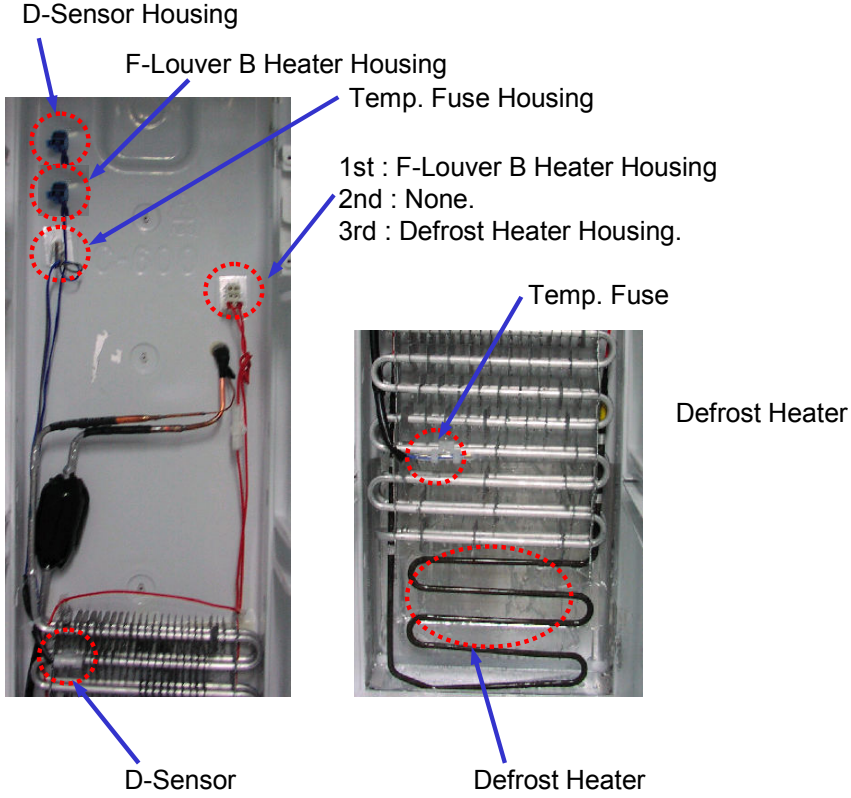

9-2-2. Ice Formation on F-Louver

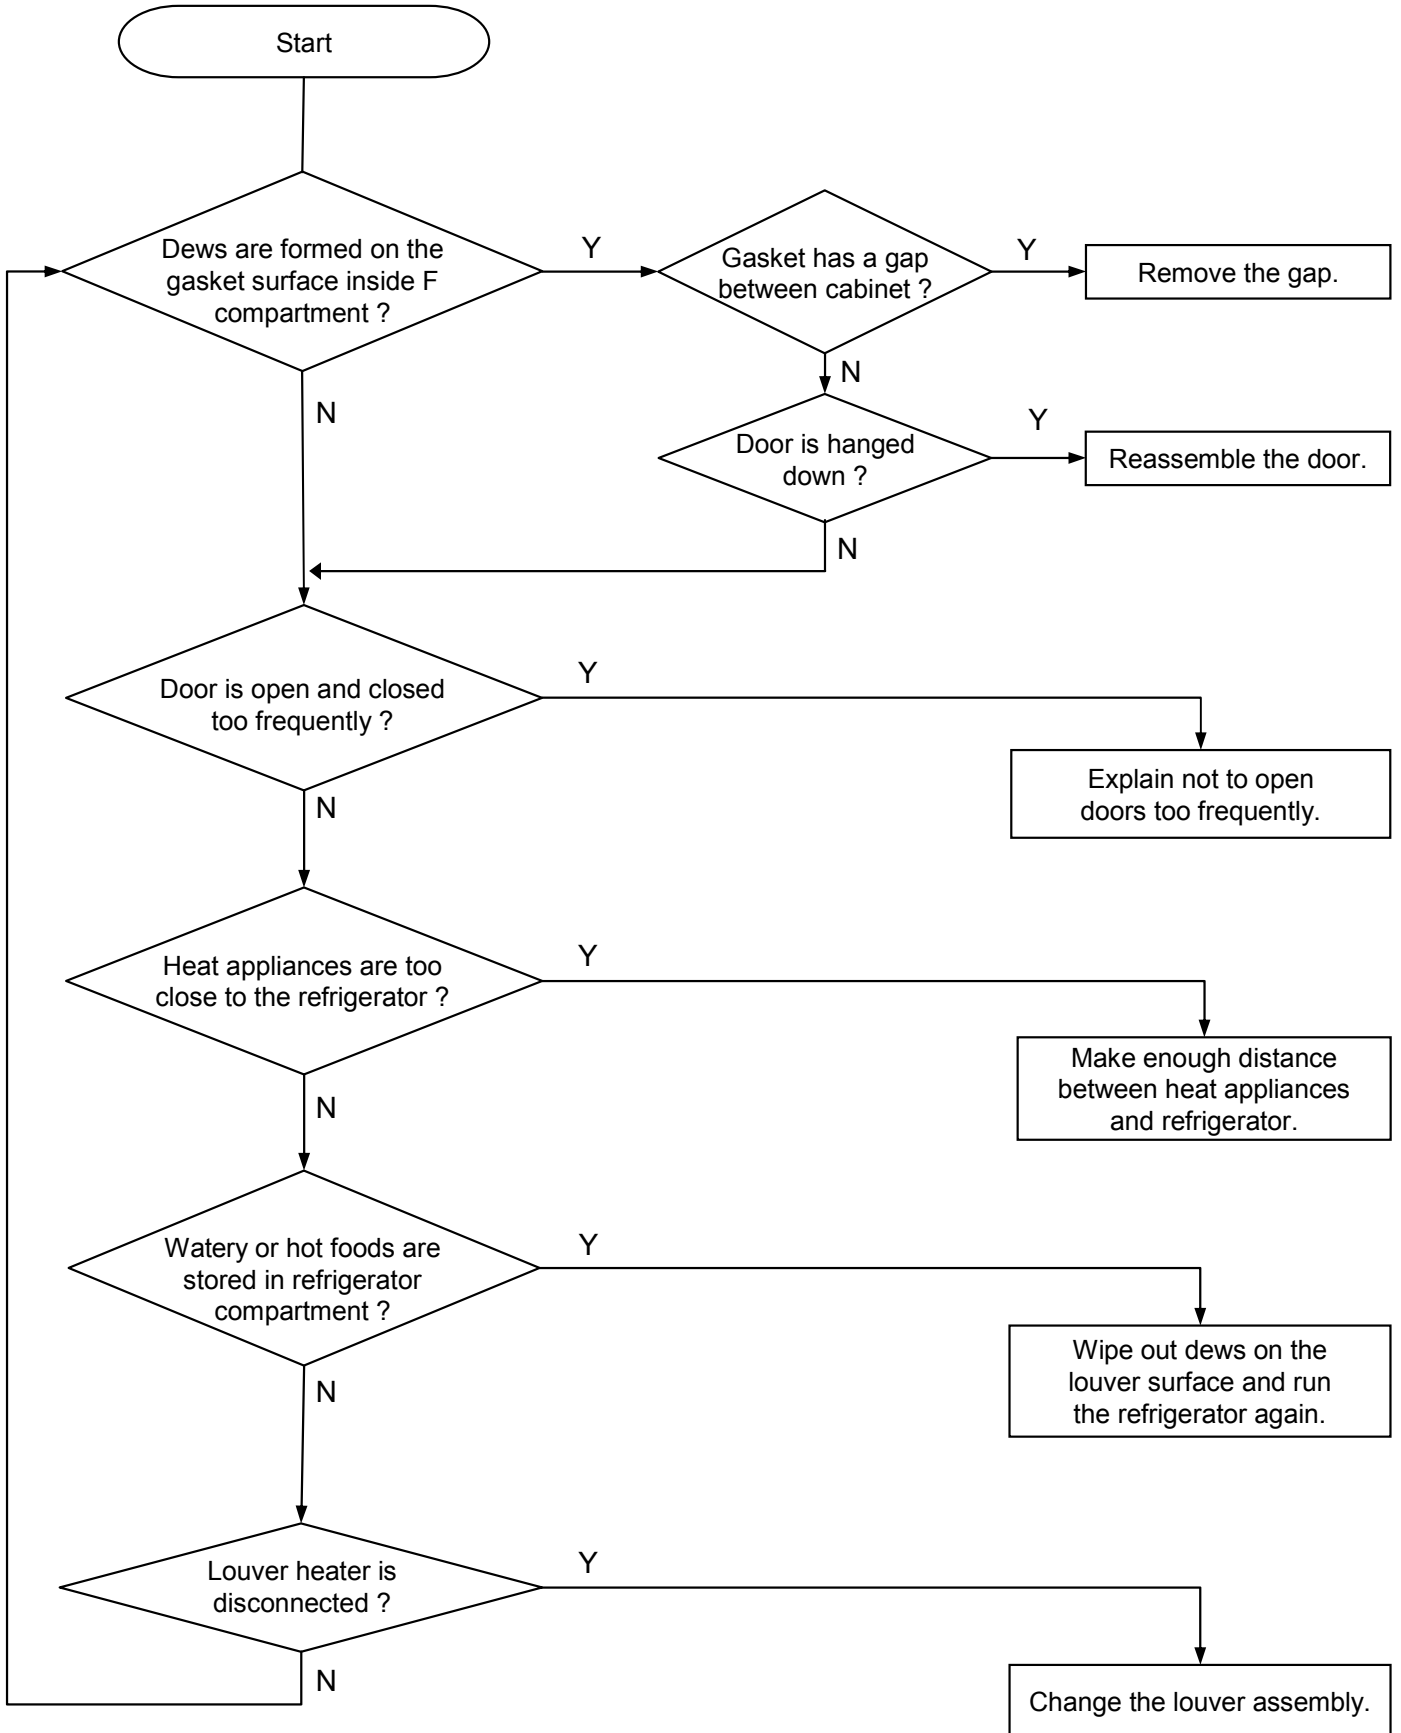

9-2-3. Disconnection / breaking of Freezer Lights Wires

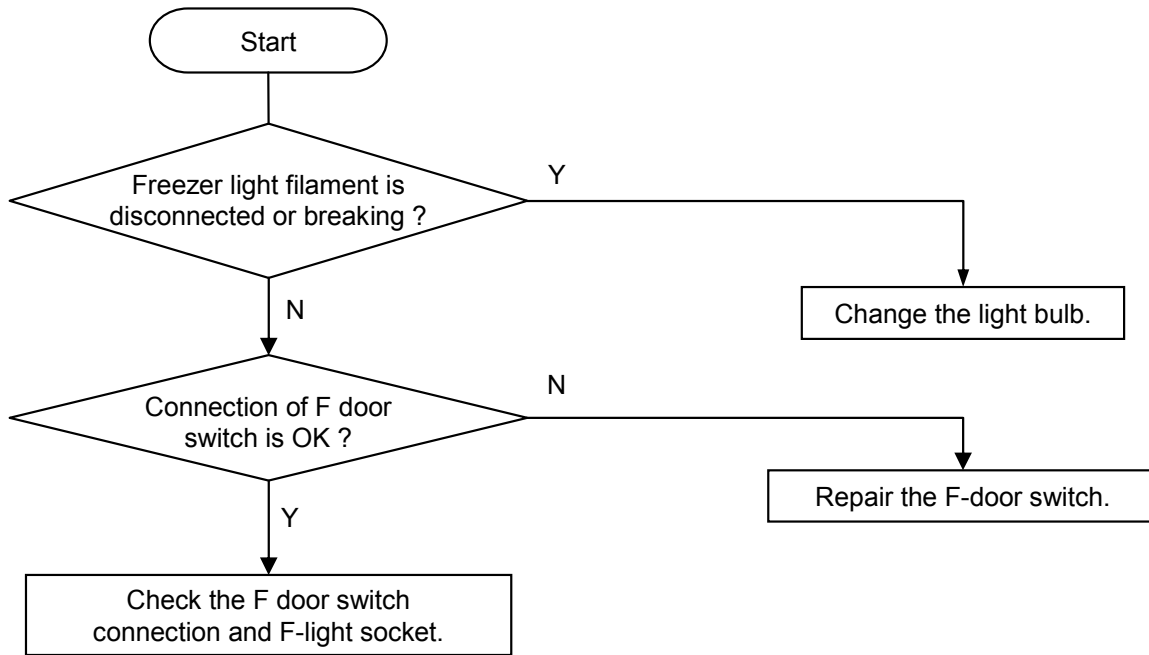

**Change of F Lights**

**Change of F Door Switch**



① \* Remove 2 screws of light cover.



② \* Hold the bottom of light cover and pull forward to remove.




③ \* Change the light bulb. (AC240V 25W)

※ Follow the reverse order of disassembling after changing the light.



① \* Insert a flat tip screw driver into a gap of door switch to pull forward.

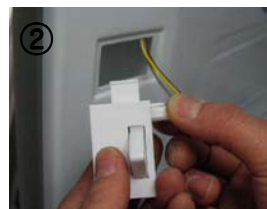


② \* Disconnect the housing and change the switch for a new one.

※ Be careful when changing the switch. F and R door switch are different in type and shape.

※ Follow the reverse order of disassembling after changing the switch.


### 9-3. Refrigerator Compartment

#### 9-3-1. Refrigeration failure (Foods does not get cool or cold soon.)

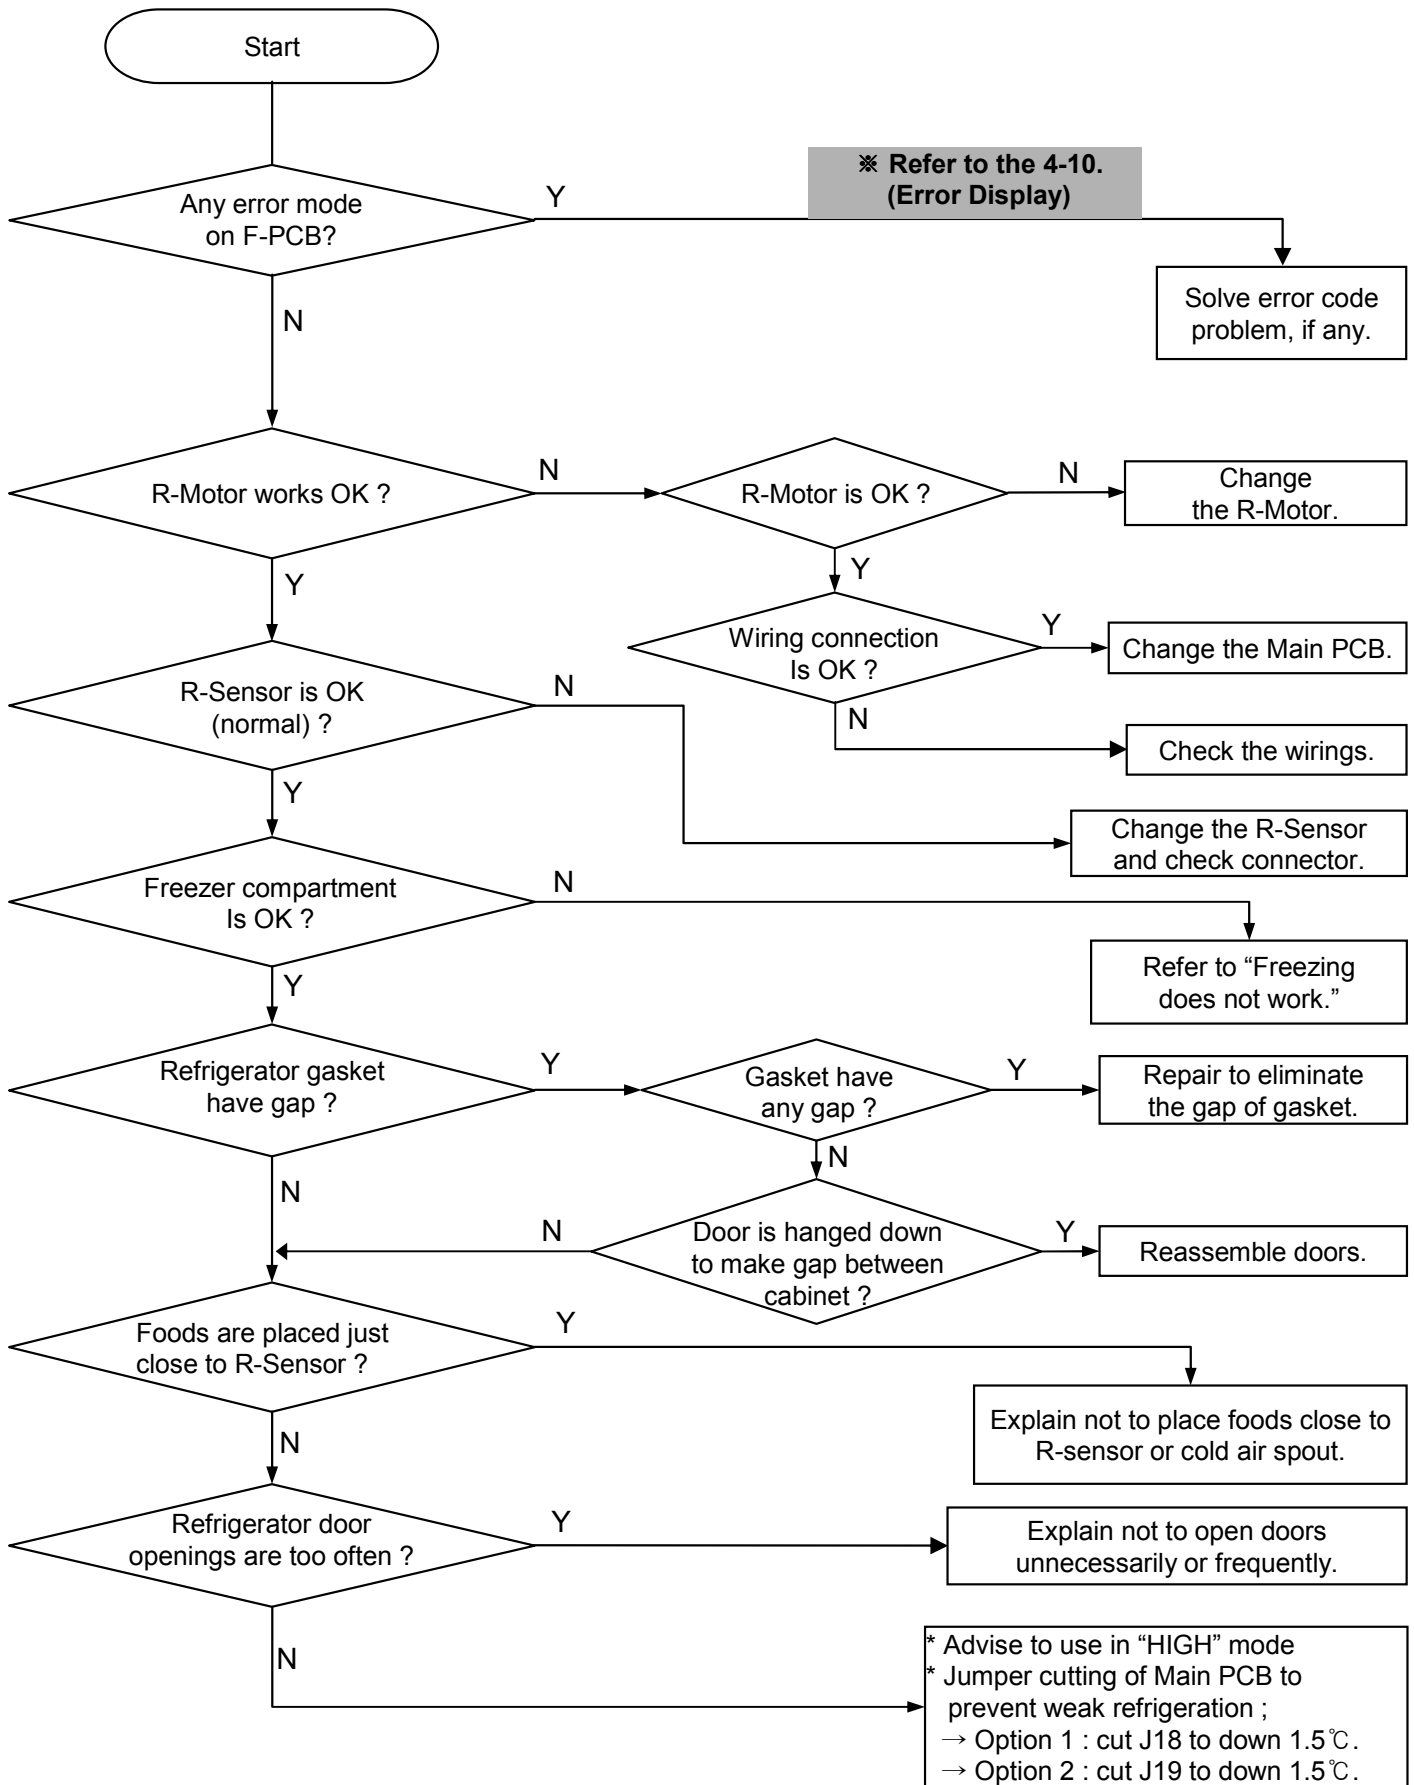



9-3-2. Disconnection / Breaking of Refrigerator Lights Wires

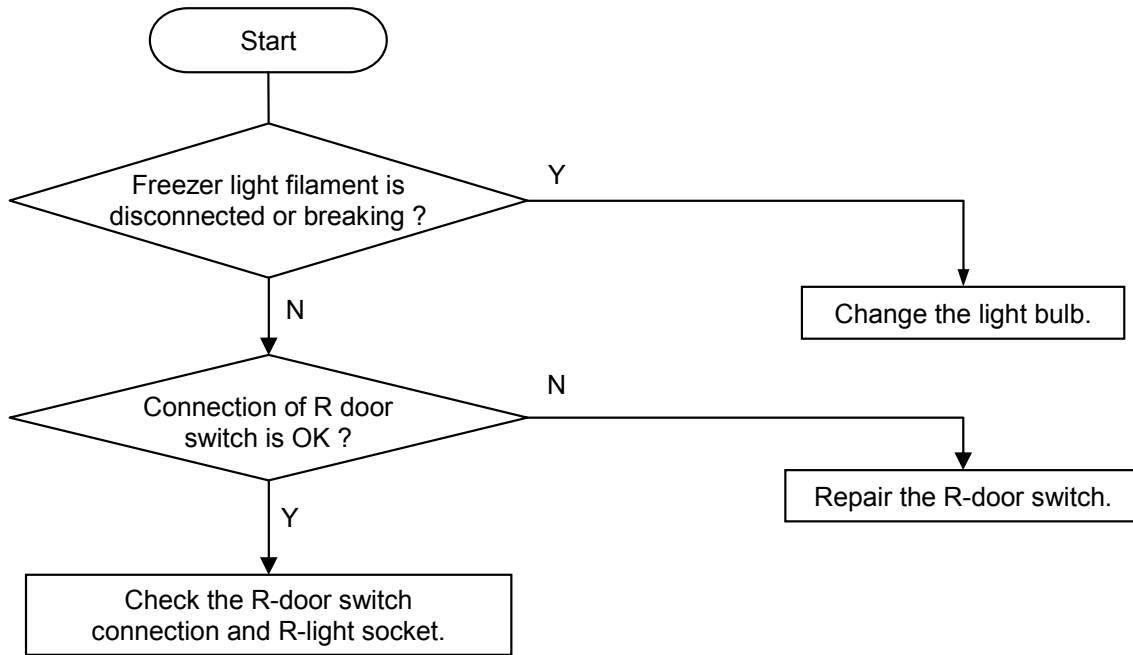

**Change of F Lights**



\* Remove screws of light cover.



\* Hold the bottom of cover and pull forward to remove.



\* Change the light bulbs. (AC240V 25W)

※ Follow the reverse order of disassembling after changing the light.

**Change of F Door Switch**



\* Insert a flat tip screw driver into a gap of door switch to pull forward.




\* Disconnect the housing and change the switch for a new one.


※ Be careful when changing the switch. F and R door switch are different in type and shape.

※ Follow the reverse order of disassembling after changing the switch.


9-3-3. Dews on Refrigerator Compartment

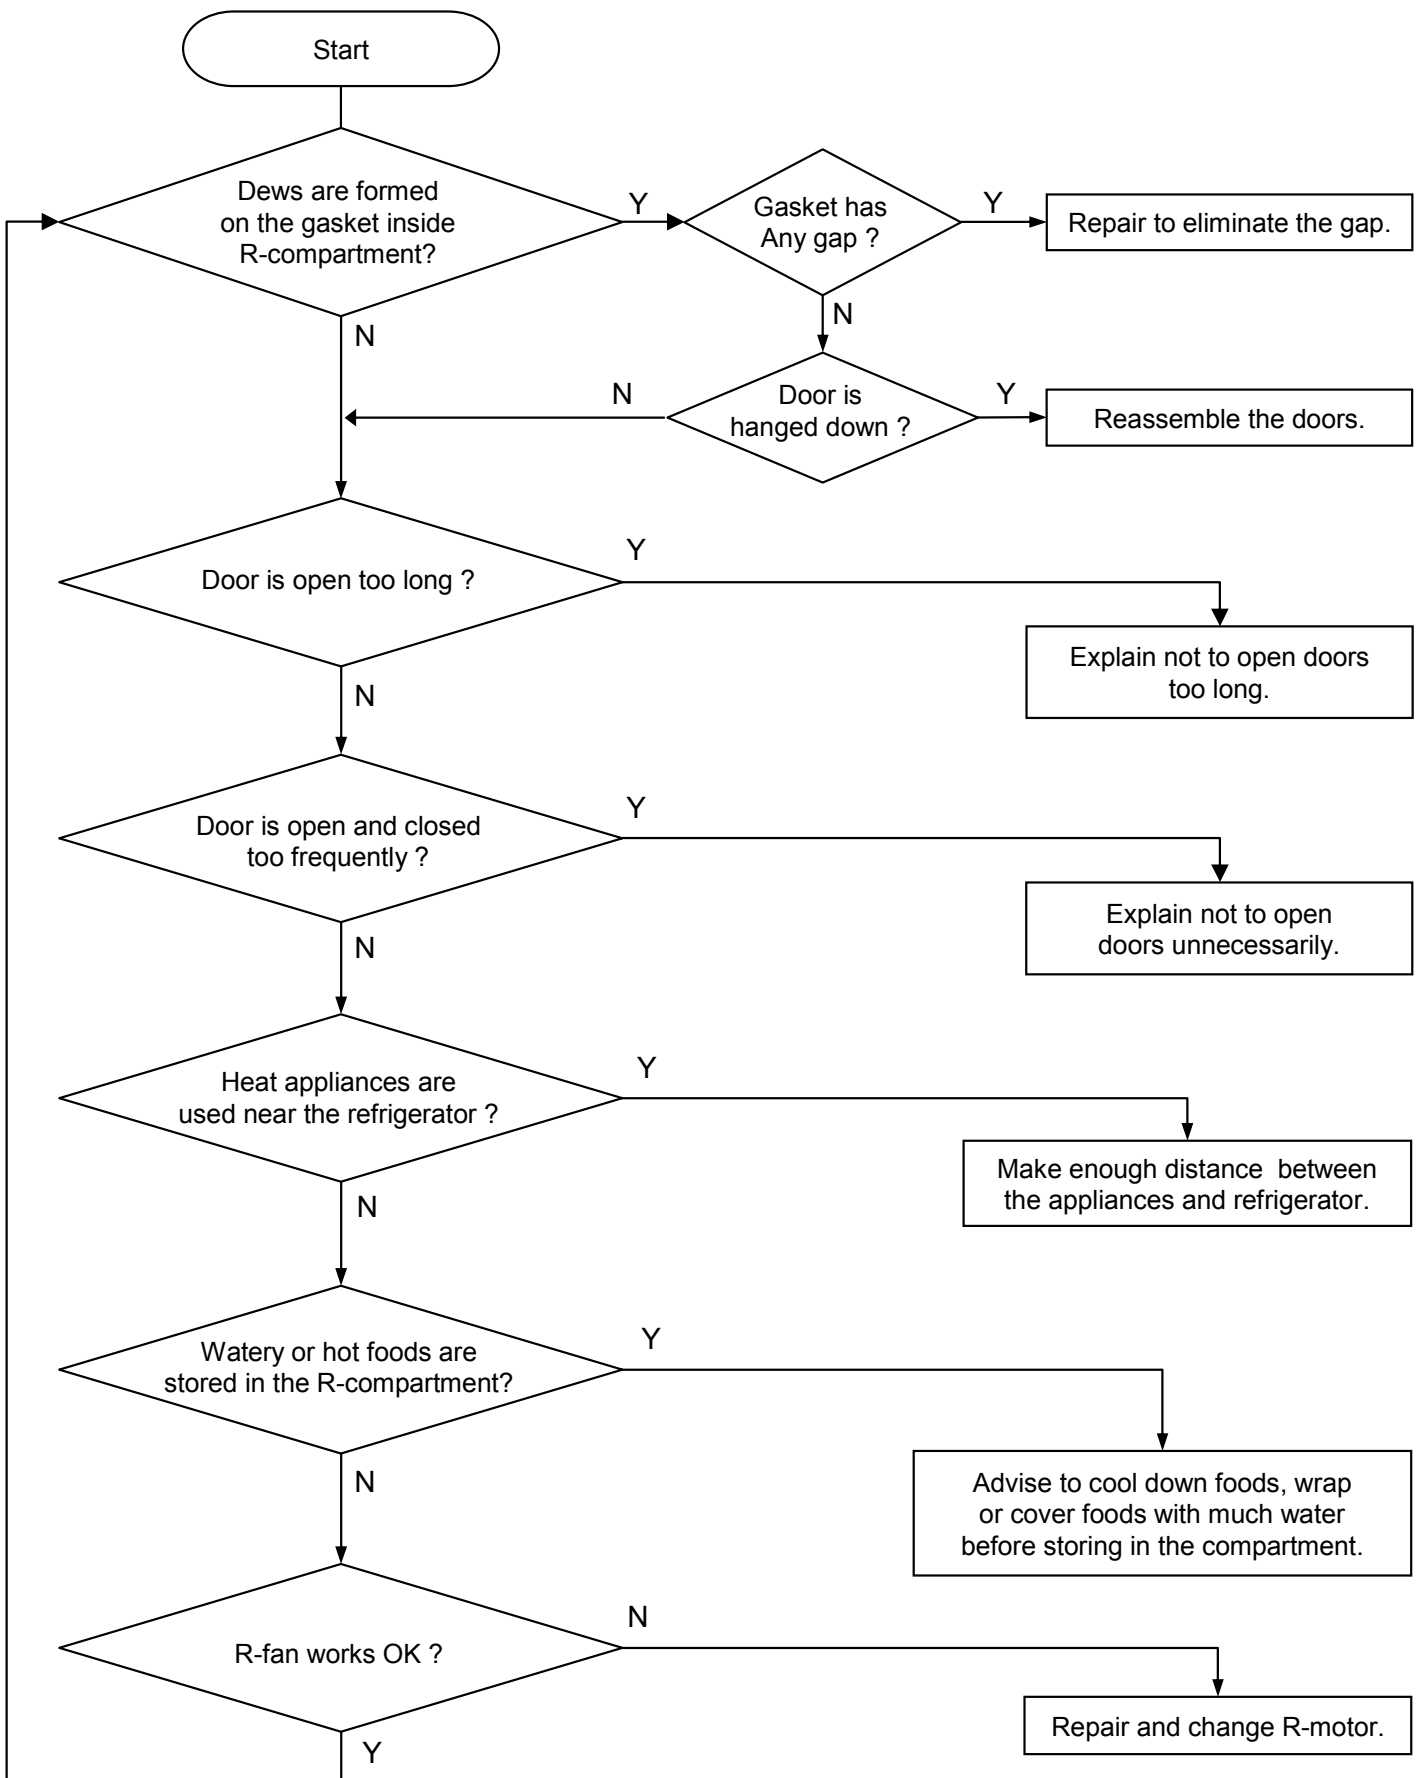

9-3-4. Excessive Refrigeration of Vegetable Case

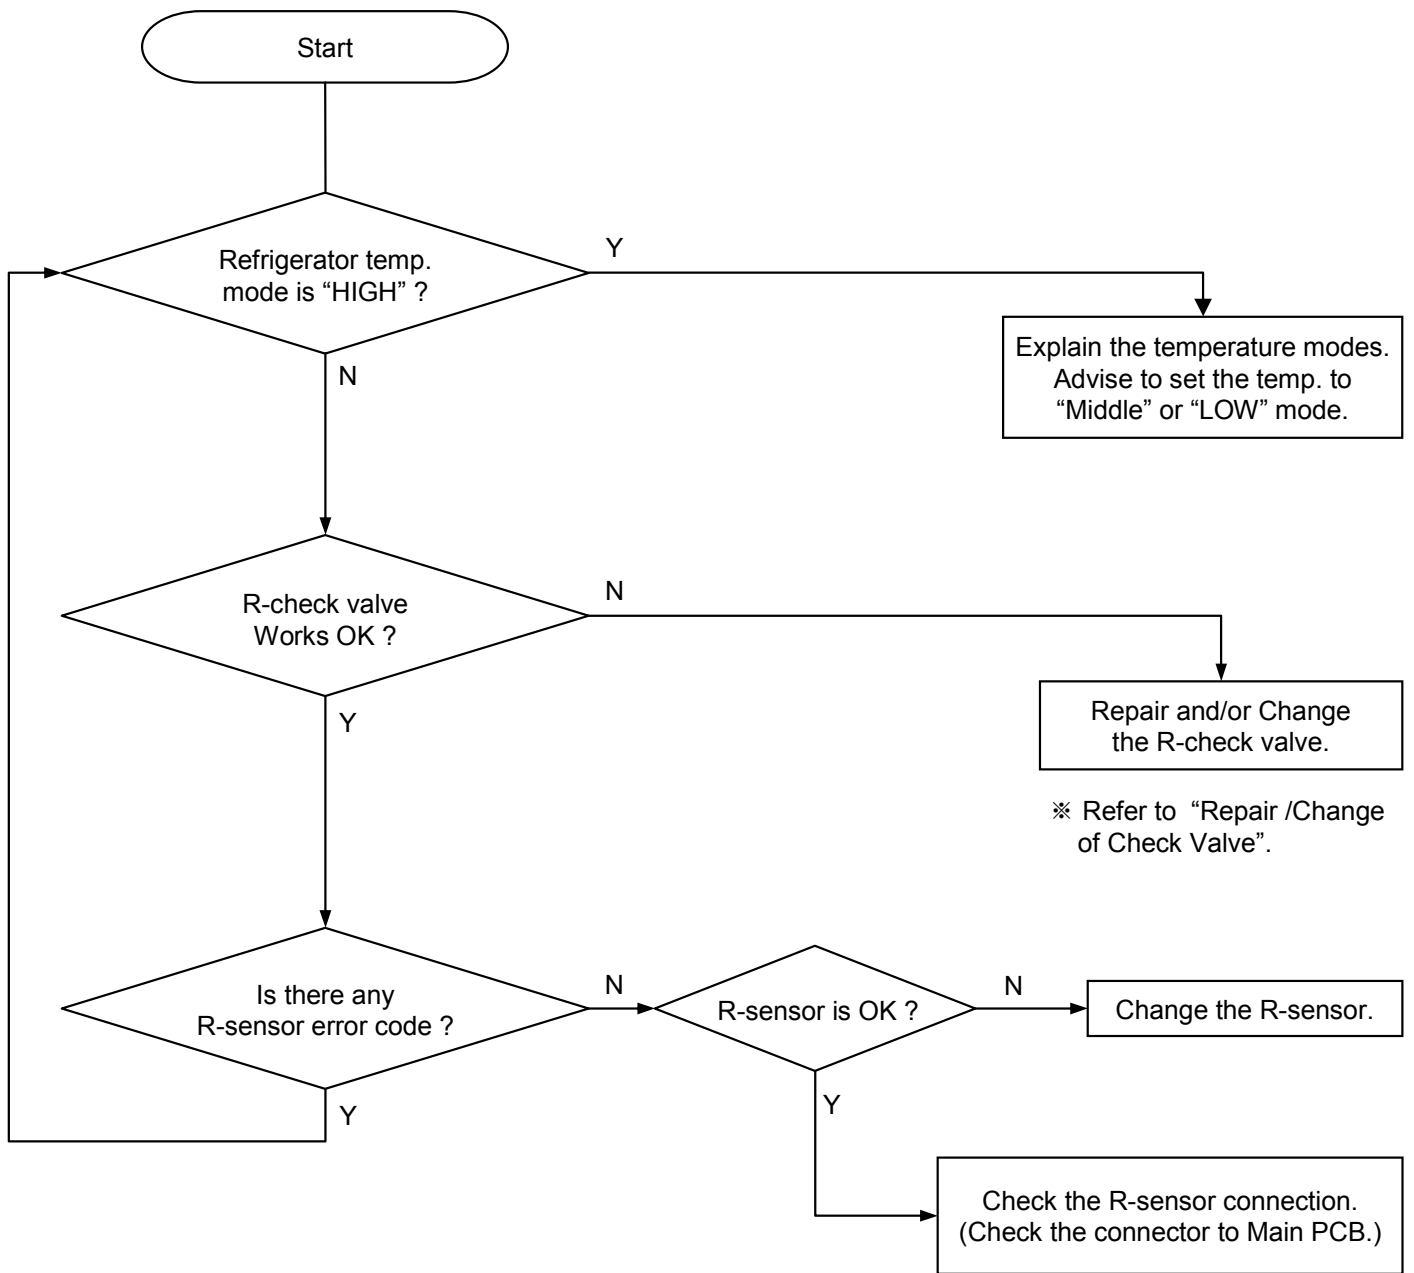

## Removing of Check Valve

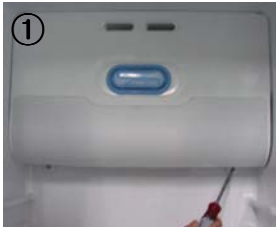

\* Remove screws of light cover.



\* Hold the bottom and right of damper to pull down to remove.



\* Hold the bottom of cover and pull forward to remove.



\* Lift up a piece of Check Valve Flap and insert a finger to the valve frame to hold out.



\* Disconnect light housing.




\* Remove screws with a (+)screw driver.



## 9-4. Operation Noise of Refrigerator


### 9-4-1. Comp. operation Noise

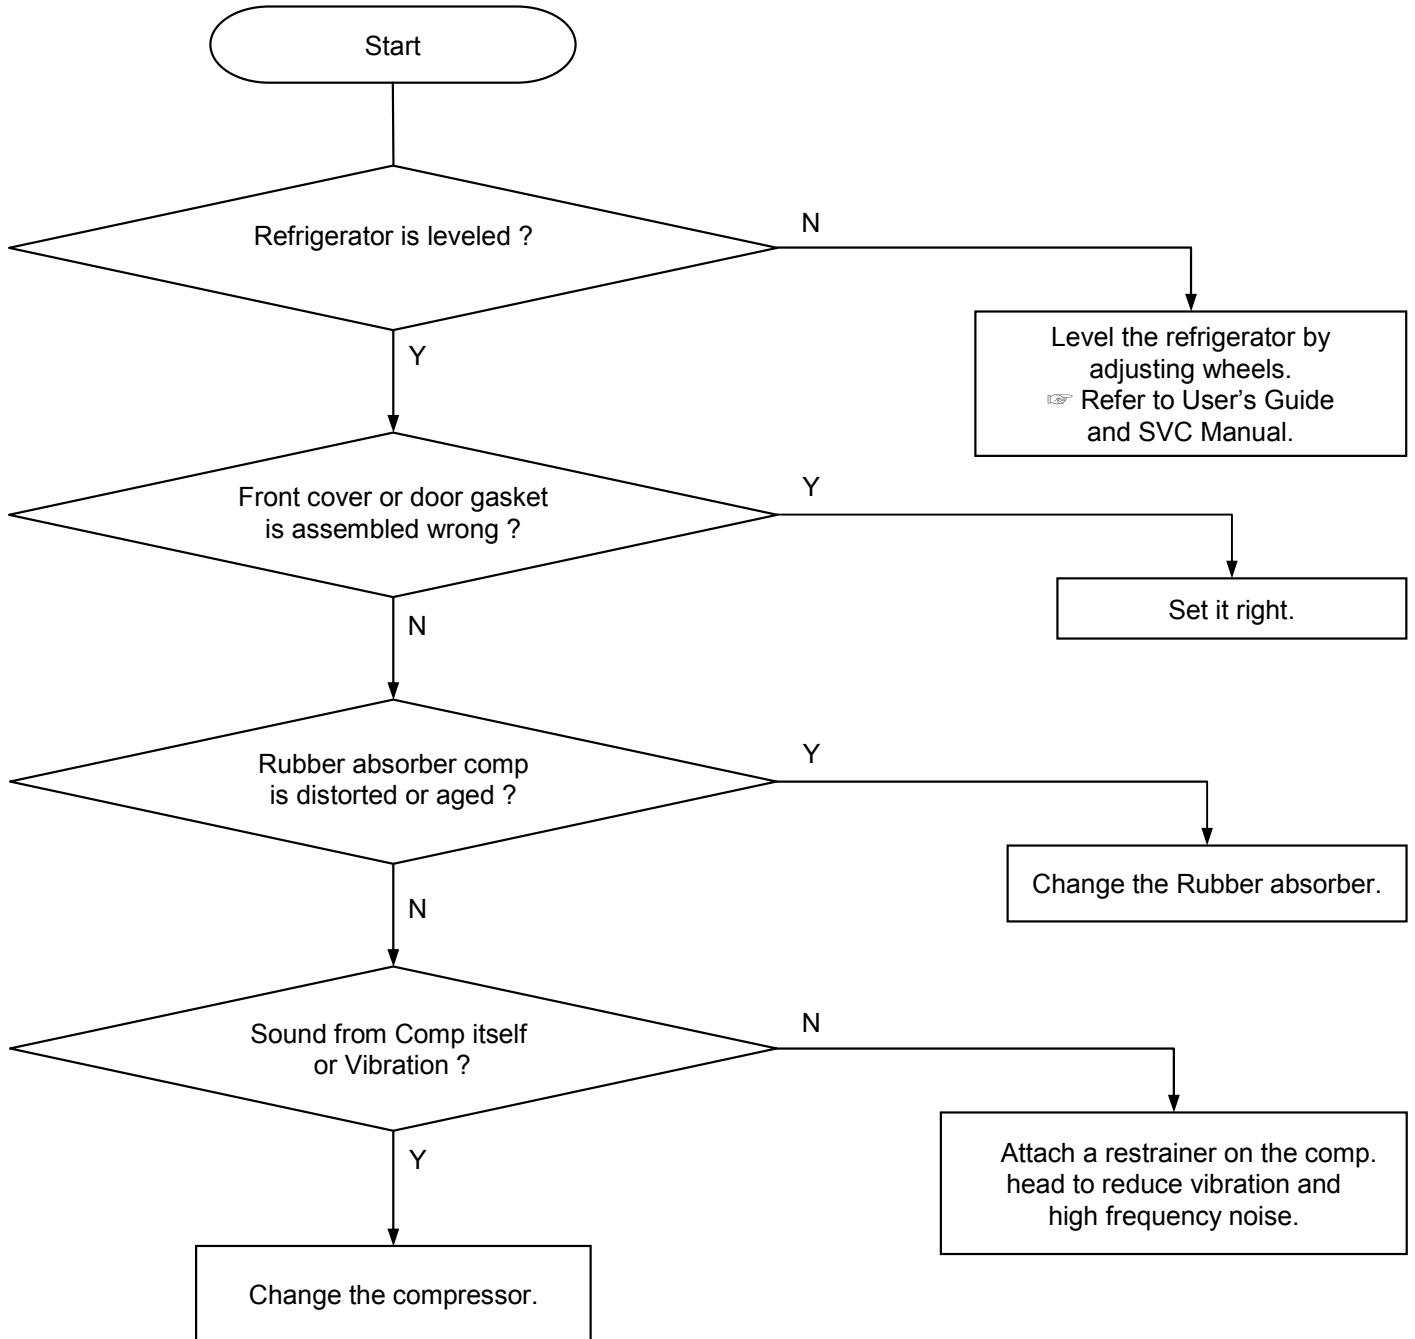

#### Remarks

- Compressor sound is somewhat normal because it works like a heart to circulate the refrigerant in the pipes during the refrigerator operation.
- Rattling or metallic touch sound of motor, piston of comp. can be heard when it starts or stops.

9-4-2. Refrigerant Flow Sound

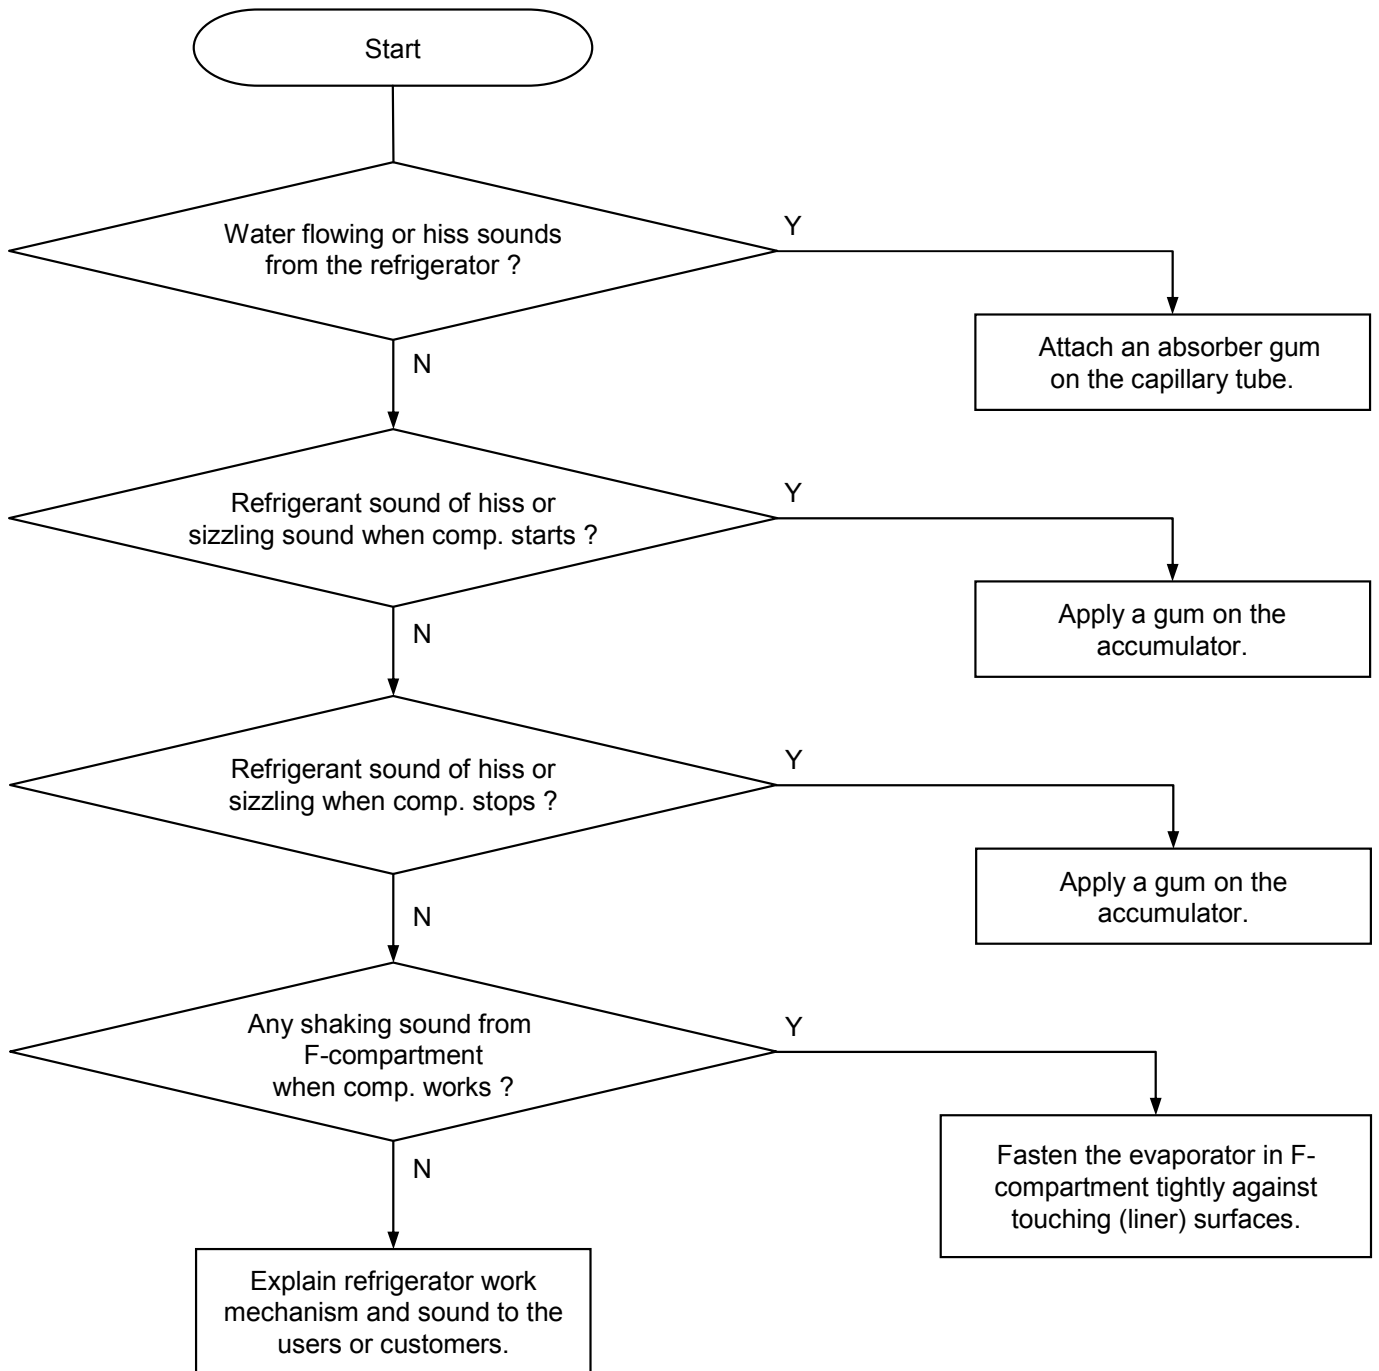


Remarks

● Water flowing sound, hiss or sizzling sound can make while refrigerant in the pipes is changing from liquid to gas state when comp. starts or stops. It is normal to the refrigerator.

## Troubleshooting of Evaporator Sound

### 1. Hiss Sound from Capillary Tube

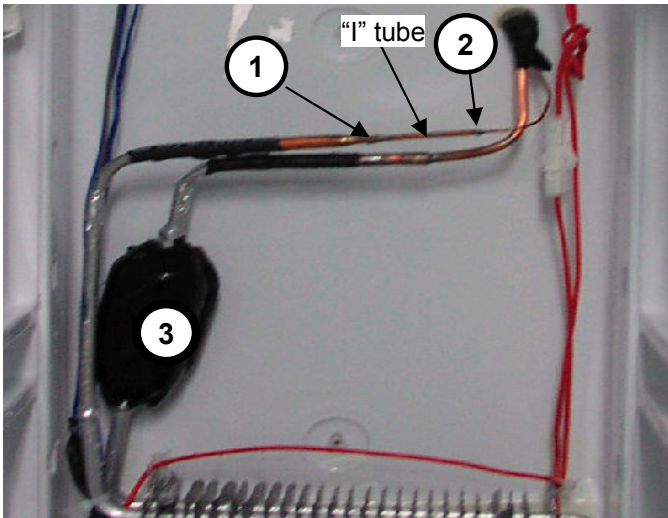


1) "1" tube is used to connect the capillary tube and evaporator.  
(2 welding points : ①, ②)

2) When such a sound is made, attach a absorber on the tube including 2 welding points.

### 2. Sizzling Sound from Accumulator

Attach a absorber on point ③ (accumulator).


### 3. Shaking or trembling Sound of Evaporator

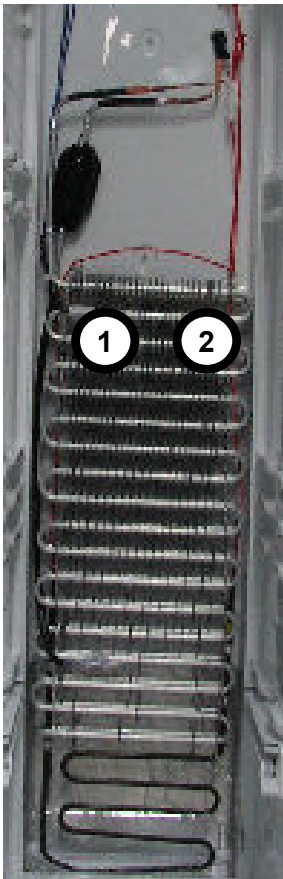

1) Check whether evaporator is fastened tight with the fasteners of ①, ②.

2) Insert a soft spacer (EPS) between left and right wall. Evaporator not to be shaken or trembled during refrigerator operation.

9-4-3. Fan Noise

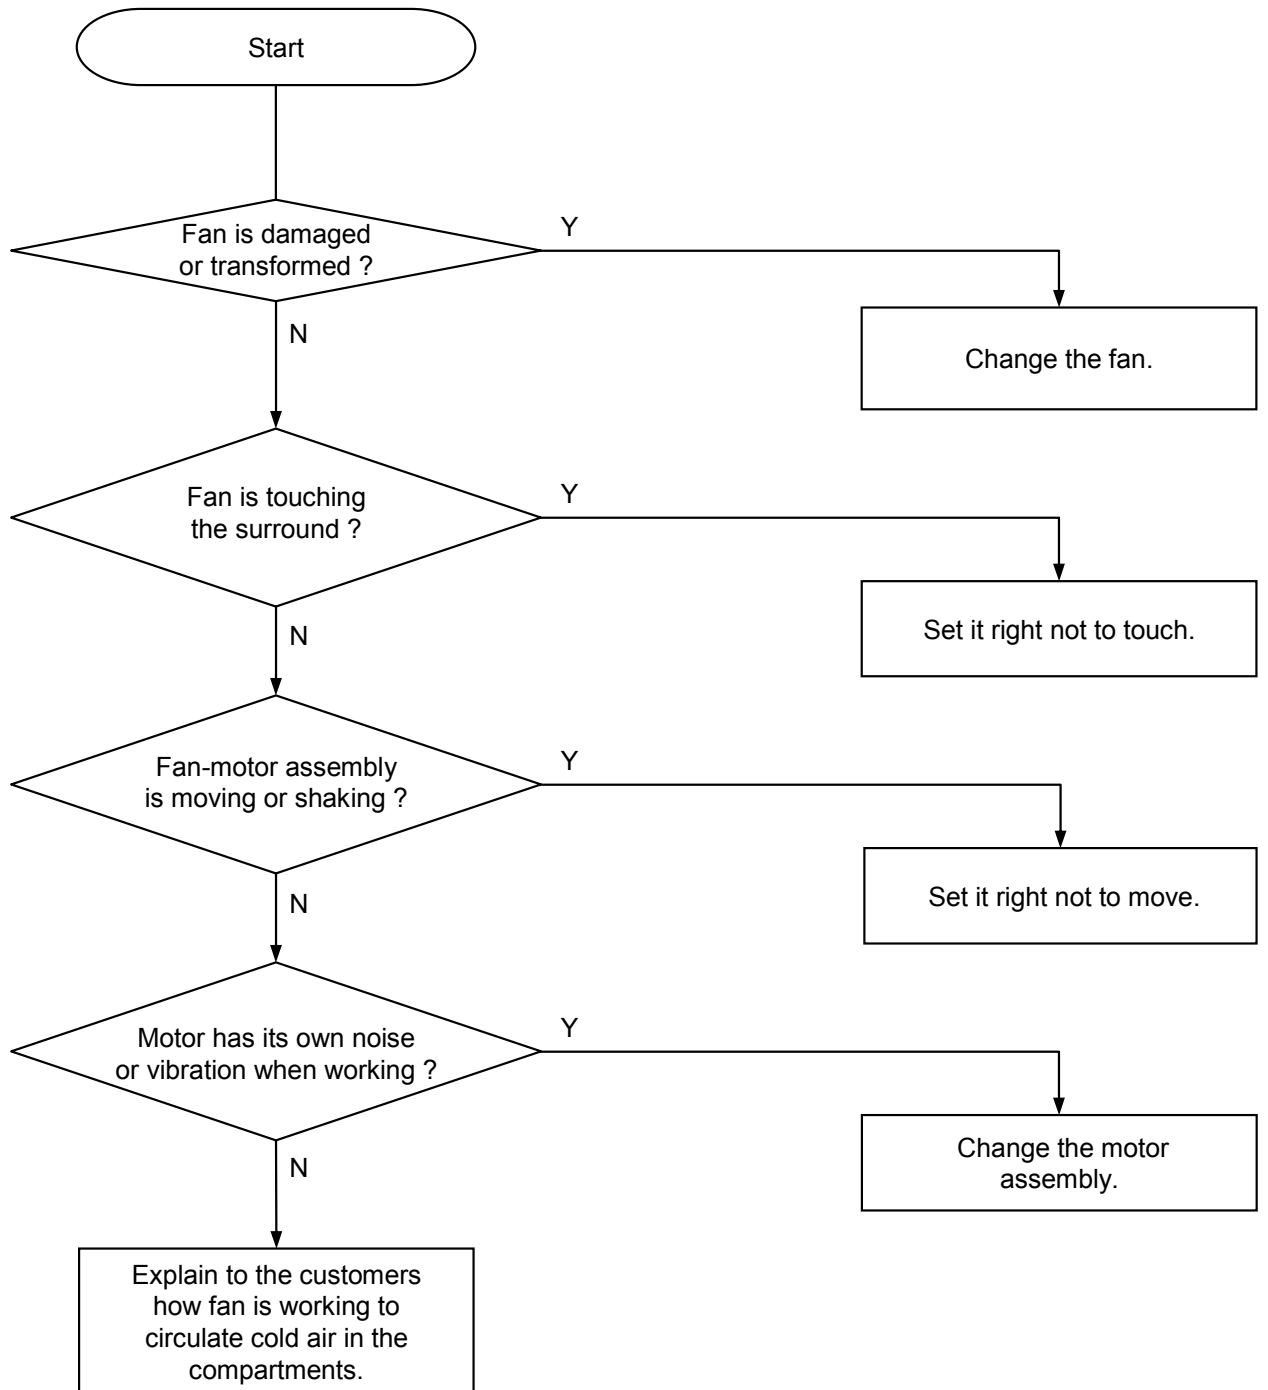

Remarks

● The fan is sending out cold air to circulate it through the compartments.  
 When the air is touching the surface of louver or liner wall, such sound can make.



## Troubleshooting of Fan Noise


### 1. Fixing or Fastening of Fan Motor



1) Check if fan motor frame of the assembly is fastened tightly with screws to the liner wall. Unless it is tight, vibration of shaking can make.

2) Check if fan motor and fan are hanged down. Fan working sound can be louder if they are not set right.


### 2. Any Touch Sound from Fan

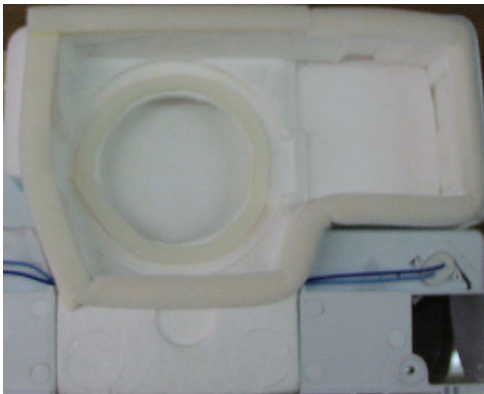

1) Check if sealing sponge on the insulator touches the fan. If so, set it again not to touch it.

2) If any damage on the insulator around the fan rotation is found, set the fan motor assembly right not to touch it.


9-4-4. Pipe Noise

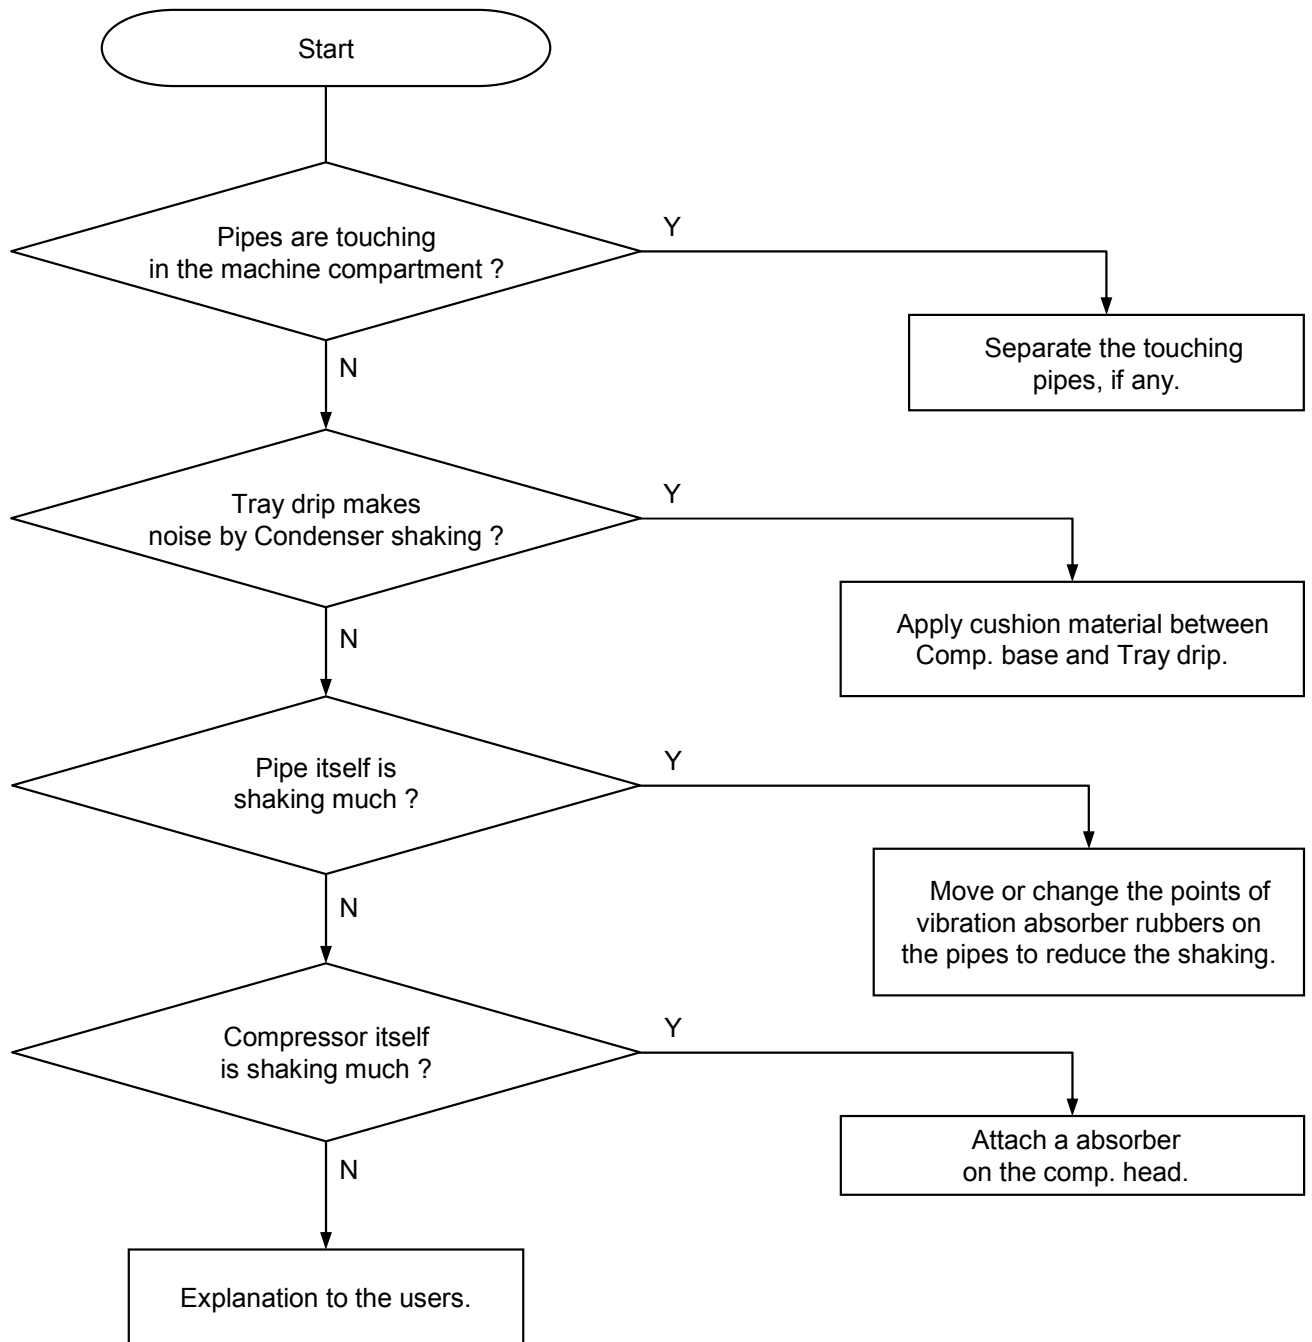

Remarks
<ul style="list-style-type: none"> <li>● Refrigerant is erupting rapidly from the compressor to circulate pipes, so pipe shaking noise can make to some degree.</li> <li>● In case compressor vibration is sent to a pipe directly, apply vibration absorber rubbers to welding points of the pipe and comp. or to a much bent point on the pipe.</li> </ul>

## 9-5. Door

### 9-5-1. Door Opening Alarm Continues though the door is closed.

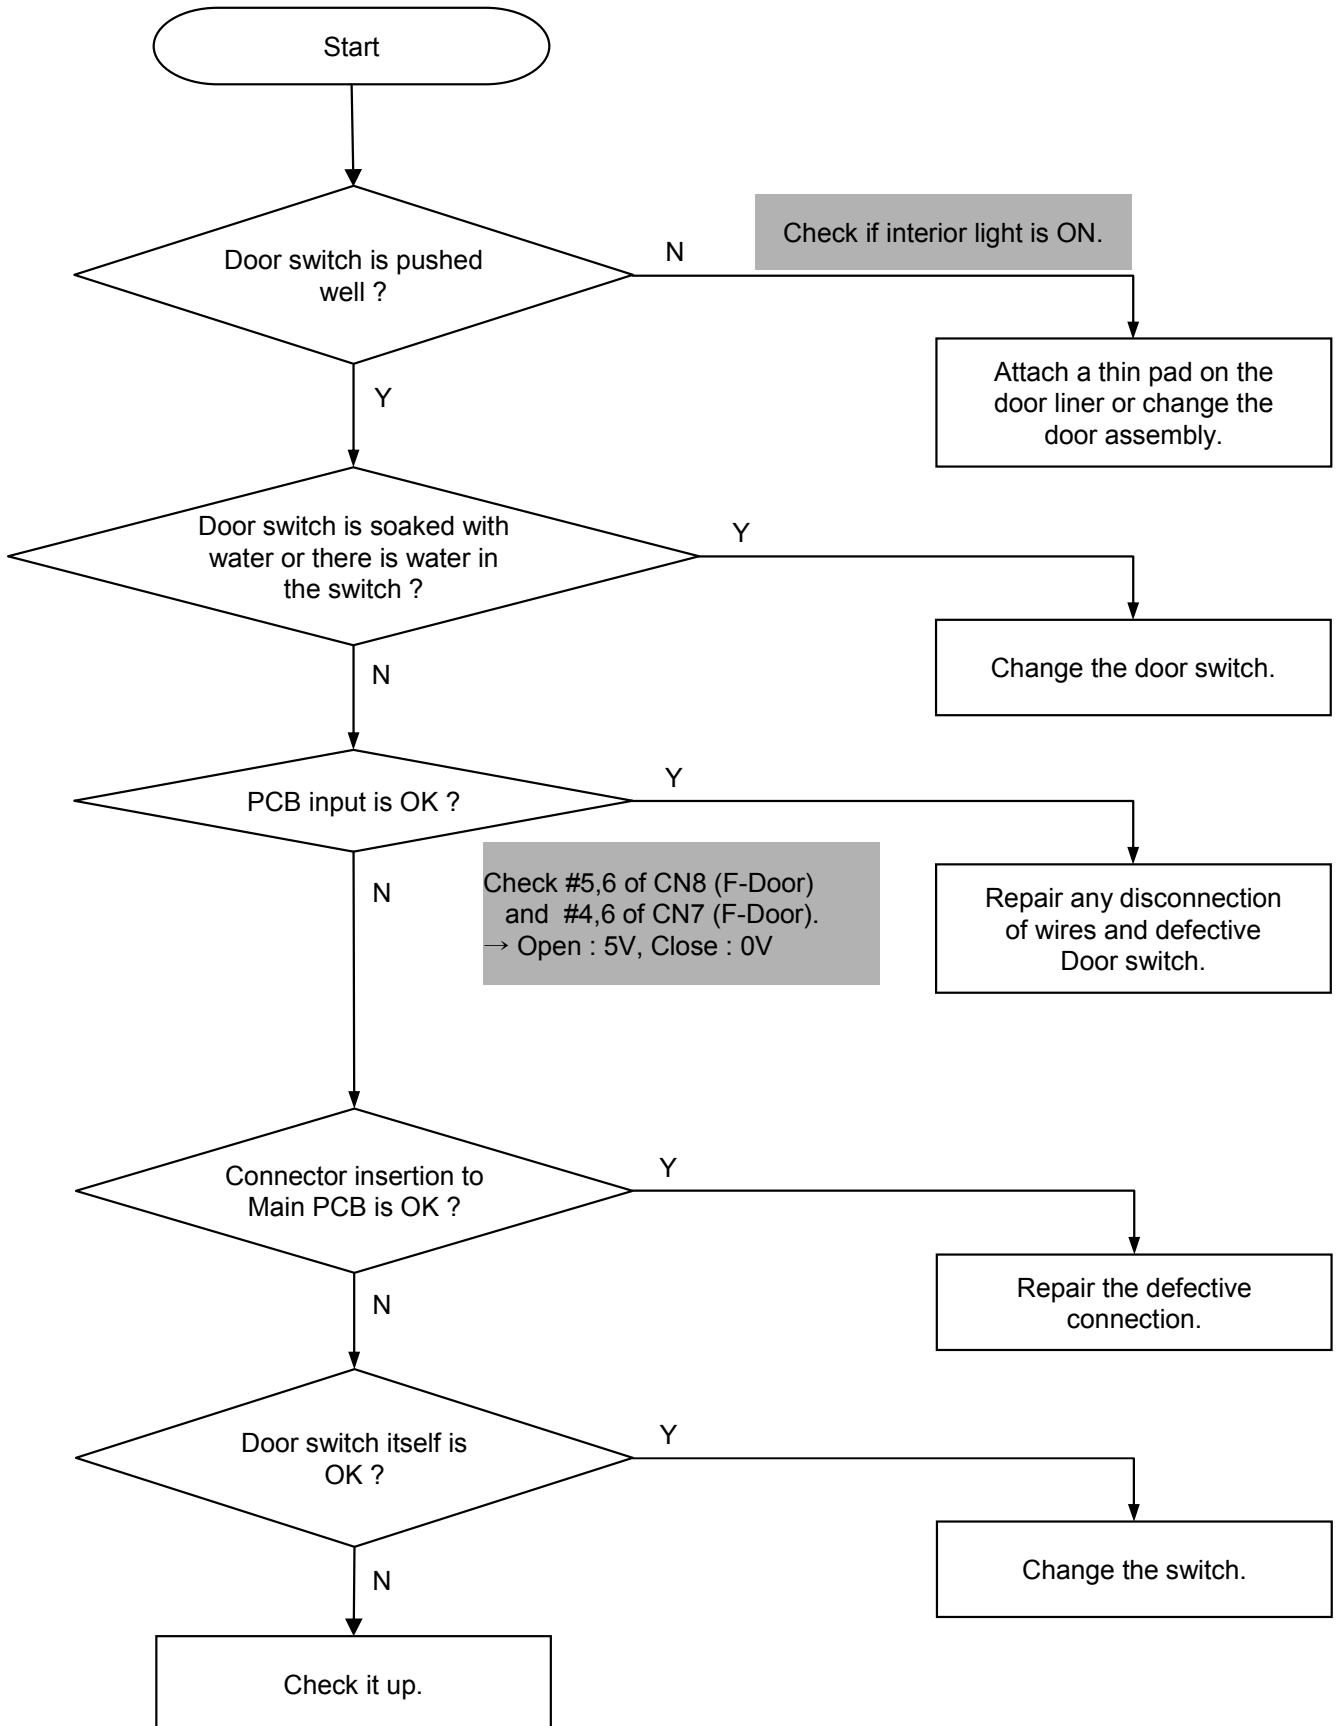


## 10. COOLING CYCLE HEAVY REPAIR



### 10-1. Summary of Heavy Repair



Process	Contents	Tools
Remove refrigerant Residuals	* Cut charging pipe ends (Comp. & Dryer) and discharge refrigerant from drier and compressor.	* Nipper, side cutters
Parts replacement and welding	* Confirm refrigerant (R-134a or R-600a) and oil for compressor and drier. * Confirm N2 sealing and packing conditions before use. Use good one for welding and assembly. * Weld under nitrogen gas atmosphere. * Repair in a clean and dry place.	* Pipe Cutter, Gas welder, N2 gas
Vacuum	* Evacuate for more than forty minutes after connecting manifold gauge hose and vacuum pump to high (drier) and low (compressor) pressure sides.	* Vacuum pump , Manifold gauge.
Refrigerant charging and charging inlet welding	* Weigh and control the bombe in a vacuum conditions with electronic scales and charge through compressor inlet (Process tube). * Charge while refrigerator operates). * Weld carefully after inlet pinching.	* Bombe (mass cylinder), refrigerant manifold gauge, electronic scales, punching off flier, gas welding machine
Check refrigerant leak and cooling capacity	* Check leak at weld joints. Note :Do not use soapy water for check. * Check cooling capacity → Check condenser manually to see if warm. → Check hot pipe manually to see if warm. → Check frost formation on the whole surface of the evaporator.	* Electronic Leak Detector, Driver.
Compressor compartment and tools arrangement	* Remove flux from the silver weld joints with soft brusher wet rag. (Flux may be the cause of corrosion and leaks.) *Clean tools and store them in a clean tool box or in their place.	* Copper brush, Rag, Tool box
Transportation and installation	* Installation should be conducted in accordance with the standard installation procedure. (Leave space of more than 5 cm from the wall for compressor compartment cooling fan mounted model.)	


## 10-2. Precautions During Heavy Repair

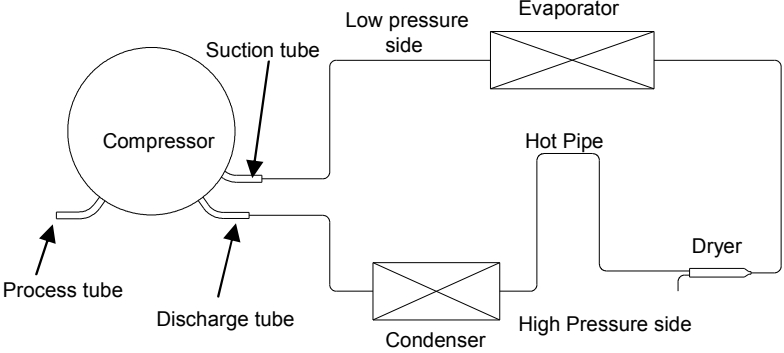Items	Precautions
Use of tools.	1) Use special parts and tools for R-134a or R-600a
Removal of retained refrigerant.	<p>1) Remove retained refrigerant more than 5 minutes after turning off a refrigerator. (If not, oil will leak inside.)</p> <p>2) Remove retained refrigerant by cutting first high pressure side (drier part) with a nipper and then cut low pressure side. (If the order is not observed, oil leak will happen.)</p>  <p>The diagram illustrates a refrigeration cycle. On the left is a circular compressor with three tubes: a 'Process tube' on the left, a 'Suction tube' on top, and a 'Discharge tube' on the bottom. The 'Suction tube' leads to the 'Low pressure side' of the cycle, which includes an 'Evaporator' (represented by a rectangle with an 'X' inside). The 'Discharge tube' leads to the 'High Pressure side', which includes a 'Condenser' (also a rectangle with an 'X' inside). A 'Hot Pipe' connects the condenser to a 'Drier' (a small horizontal cylinder). The cycle then returns to the compressor.</p>
Replacement of drier.	1) Be sure to replace drier when repairing pipes and injecting refrigerant.
Nitrogen blowing welding.	1) Weld under nitrogen atmosphere in order to prevent oxidation inside a pipe. (Nitrogen pressure : 0.1~0.2 kg/cm2.)
Others.	<p>1) Nitrogen only should be used when cleaning inside of cycle pipes inside and sealing.</p> <p>2) Check leakage with an electronic leakage tester.</p> <p>3) Be sure to use a pipe cutter when cutting pipes.</p> <p>4) Be careful not the water let intrude into the inside of the cycle.</p>

### 10-3. Practical Work for Heavy Repair

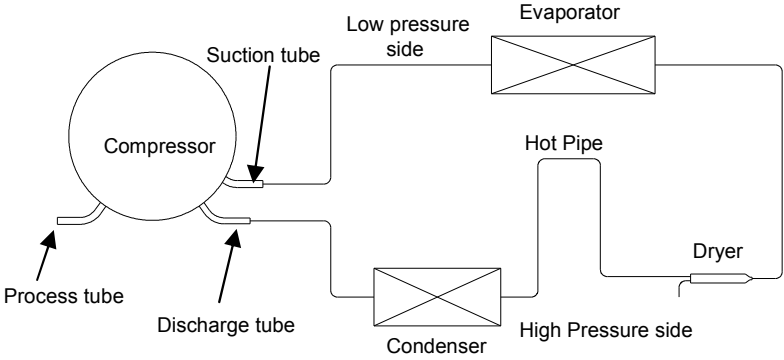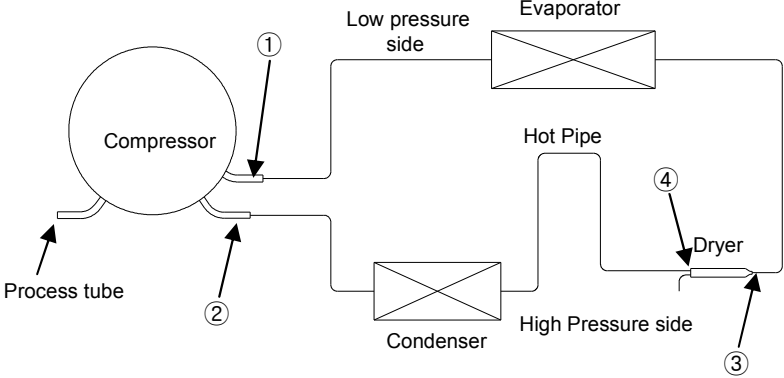Items	Precautions
<p>1. Removal of residual refrigerant.</p>	<p>1) Remove residual refrigerant more than 5 minutes later after turning off the refrigerator. ( If not, compressor oil may leak inside.)                  2) Remove retained refrigerant slowly by cutting first high pressure side (drier part) with a nipper and then cut low pressure side.</p> 
<p>2. Nitrogen blowing welding.</p>	 <p>* <b>When replacing a drier:</b>                  Weld ① and ② parts by blowing nitrogen (0.1~0.2kg/cm<sup>2</sup>) to high pressure side after assembling a drier.</p> <p>* <b>When replacing a compressor:</b>                  Weld ③ and ④ parts by blowing nitrogen to the low pressure side.                  Note) For other parts, nitrogen blowing is not necessary because it does not produce oxidized scales inside pipe because of its short welding time.</p> <p>※ <b>KEYPOINTING</b>                  Welding without nitrogen blowing produces oxidized scales inside a pipe, Which affect on performance and reliability of a product.</p>

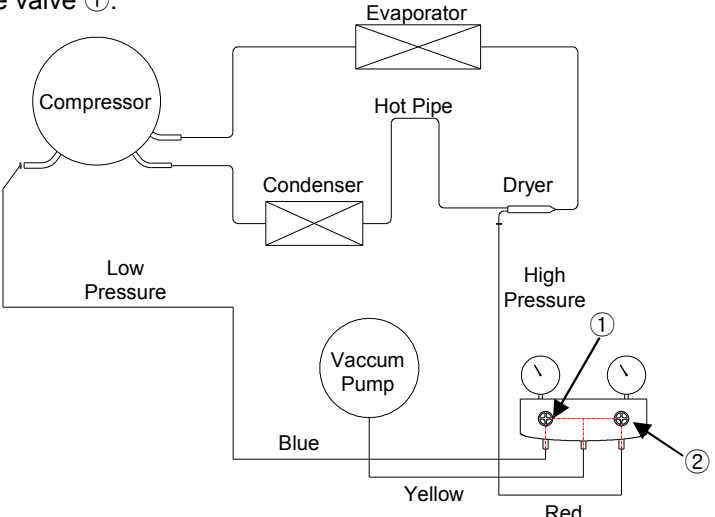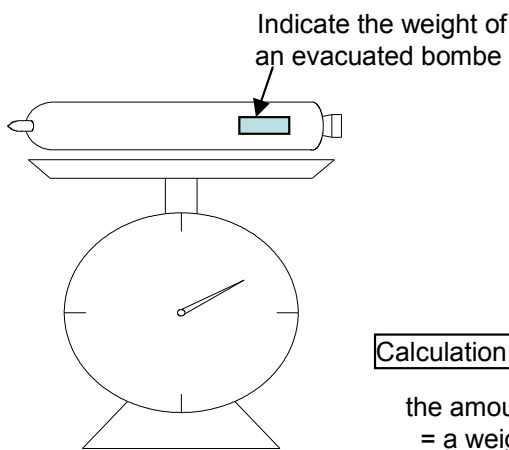Items	Precautions
<p>3.Vacuum degassing.</p>	<p><b>* Pipe Connection</b> Connect a red hose to the high pressure side and a blue hose to the low pressure side.</p> <p><b>* Vacuum Sequence</b> Open ①,② valves and evacuate for 40 minutes. Close valve ①.</p>  <p><b>※ KEYPOINTING</b></p> <ol style="list-style-type: none"> <li>1) If power is applied during vacuum degassing, vacuum degassing shall be more effective.</li> <li>2) Operate compressor while charging refrigerant. (It is easier and more certain to do like this.)</li> </ol>
<p>4.Refrigerant charging.</p>	<p><b>* Charging sequence</b></p> <ol style="list-style-type: none"> <li>1) Check the amount of refrigerant supplied to each model after completing vacuum degassing.</li> <li>2) Evacuate bombe with a vacuum pump.</li> <li>3) Measure the amount of refrigerant charged. <ul style="list-style-type: none"> <li>- Measure the weight of an evacuated bombe with an electronic scale.</li> <li>- Charge refrigerant into a bombe and measure the weight. Calculate the weight of refrigerant charged into the bombe by subtracting the weight of an evacuated bombe.</li> </ul> </li> </ol>  <p><b>※ KEYPOINTING</b></p> <ol style="list-style-type: none"> <li>1) Be sure to charge the refrigerant at around 25°C.</li> <li>2) Be sure to keep -5g in the winter and +5g in summer.</li> </ol> <p><b>Calculation of amount of refrigerant charged</b></p> <p>the amount of refrigerant charged = a weight after charging - a weight before charging (a weight of an evacuated cylinder)</p>

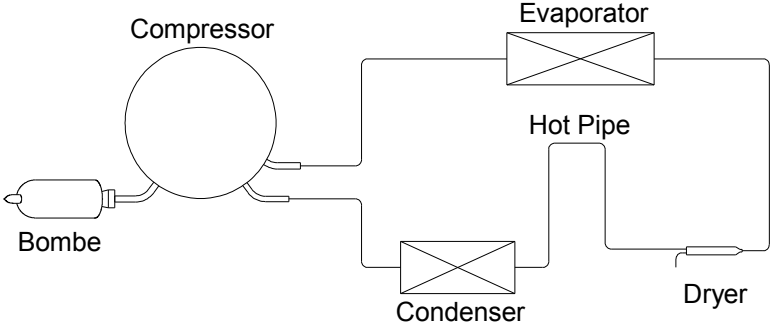
Items	Precautions
4.Refrigerant charging.	<p>4) Refrigerant Charging            Charge refrigerant while operating a compressor as shown above.            5) Pinch a charging pipe with a pinch-off plier after completion of charging.            6) Braze the end of a pinched charging pipe with copper brazer and take a gas leakage test on the welded parts.</p> 
5. Gas-leakage test	* Take a leakage test on the welded or suspicious area with an electronic leakage tester.
6. Pipe arrangement in each cycle	* Check each pipe is placed in its original place before closing a cover back-M/C after completion of work.

#### 10-4. Standard Regulations for Heavy Repair

<ol style="list-style-type: none"> <li>1) Observe the safety precautions for gas handling.</li> <li>2) Use JIG (or wet towel) in order to prevent electric wires from burning during welding. (In order to prevent insulation break and accident.)</li> <li>3) The inner case shall be melted and insulation material (polyurethane) shall be burnt if not cared during welding inner case parts.</li> <li>4) The copper pipe shall be oxidized by overheating if not cared during welding.</li> <li>5) Not allow the aluminum pipes to contact to copper pipes. (In order to prevent corrosion.)</li> <li>6) Make sure that the inner diameter should not be distorted while cutting a capillary tube.</li> <li>7) Be sure that a suction pipe and a filling tube should not be substituted each other during welding. ( High efficiency pump.)</li> </ol>
---



### 10-5. Brazing Reference Drawings.

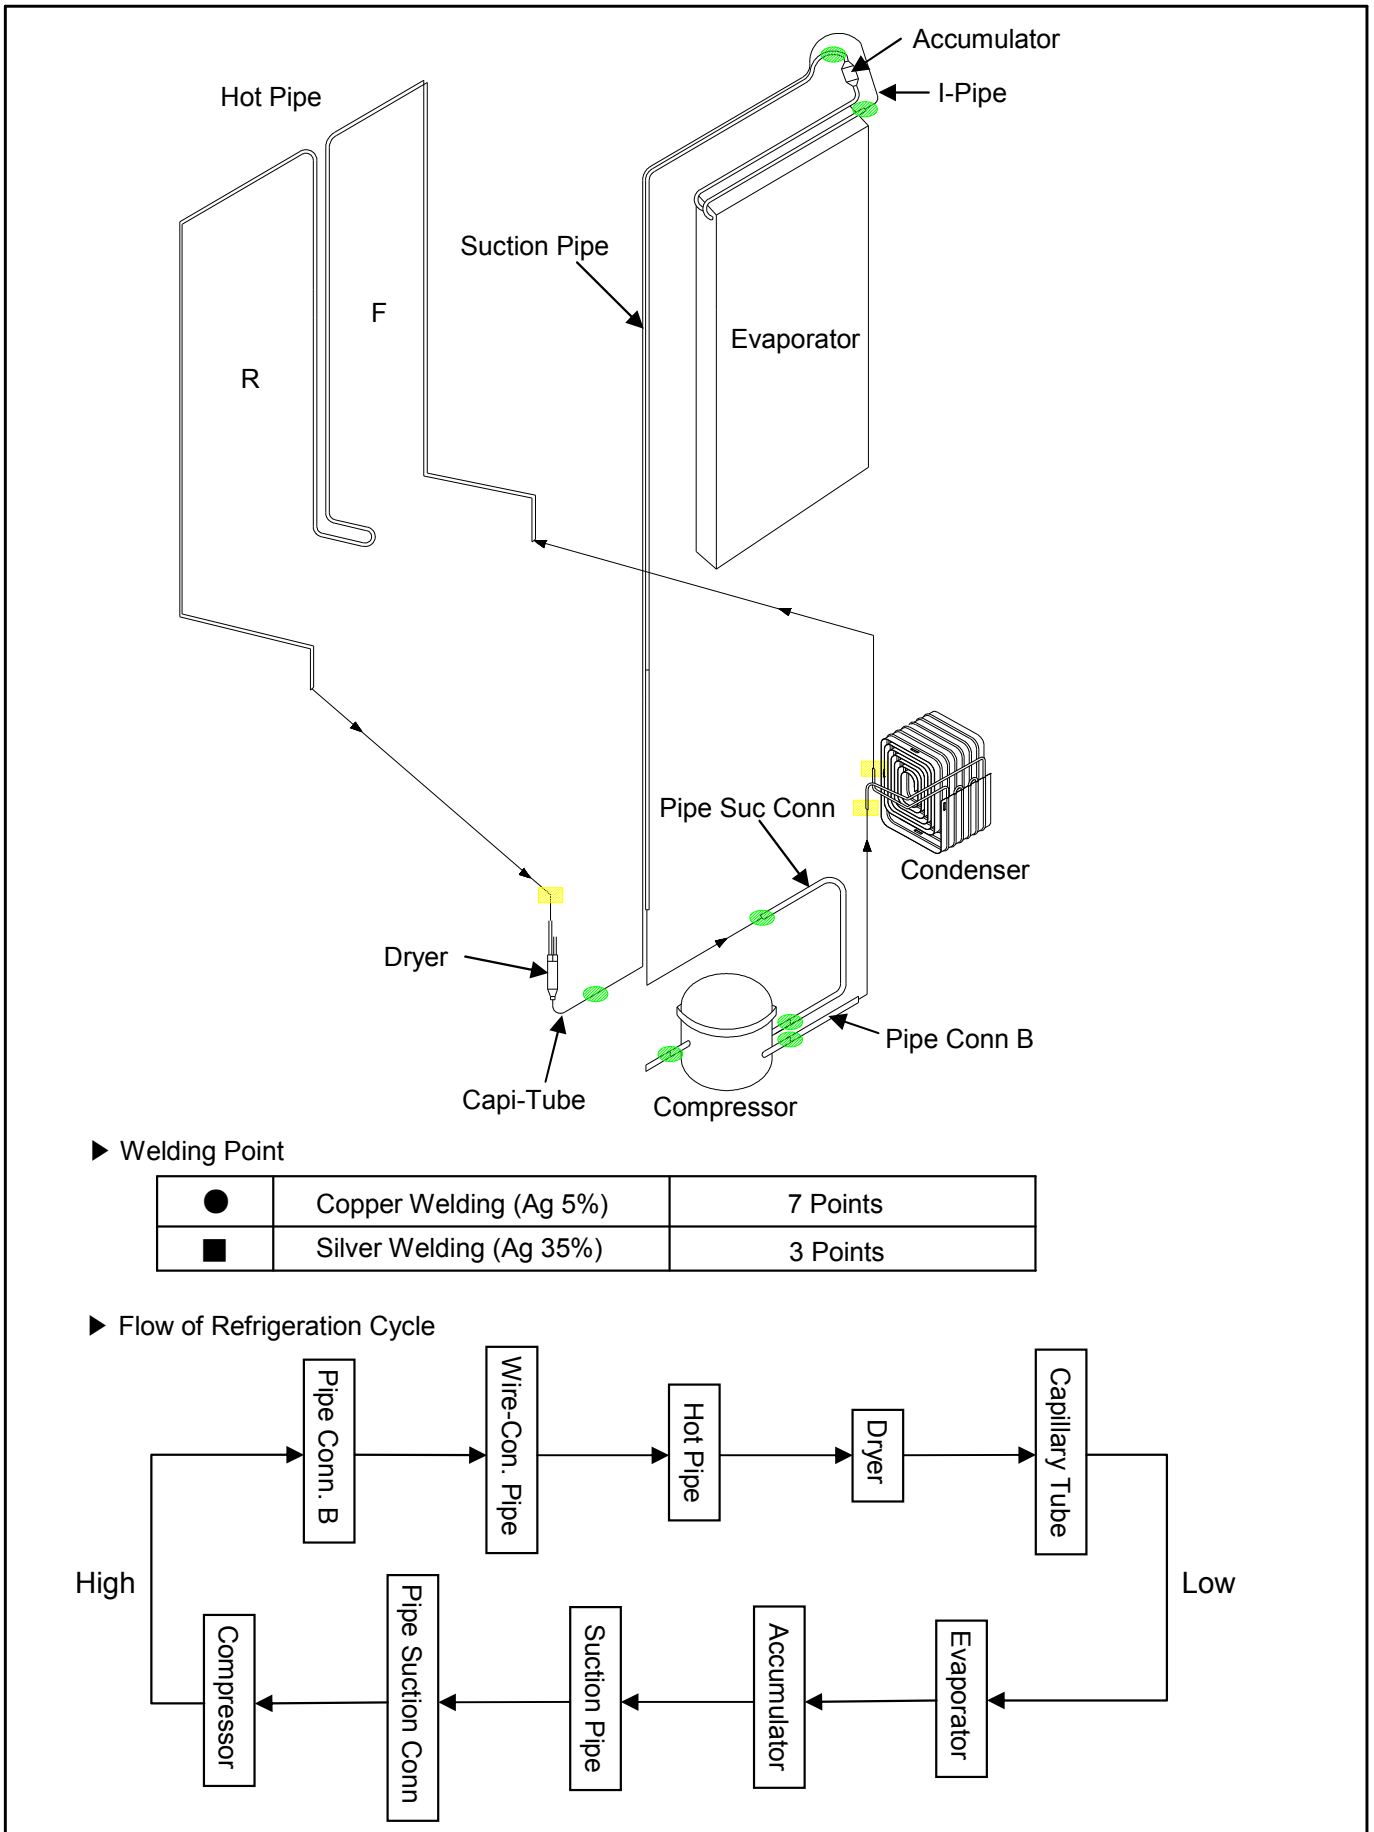


## 11. INSTALLATION GUIDE

### 11-1. Installation Preparation


**Check if the refrigerator can pass a doorway or enter a door first.**

Dimensions( including Door Handles)	
(Width*Depth*Height)	903mm X 734.5mm X 1790mm

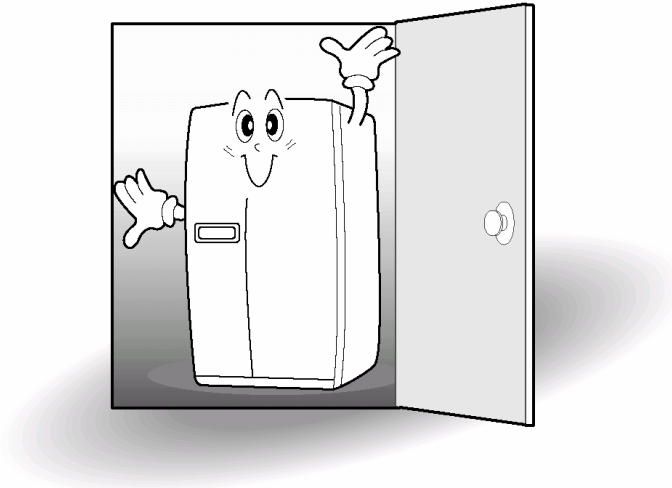


### Find a suitable place to install

Sufficient space from refrigerator back to the  
\* wall for free air ventilation

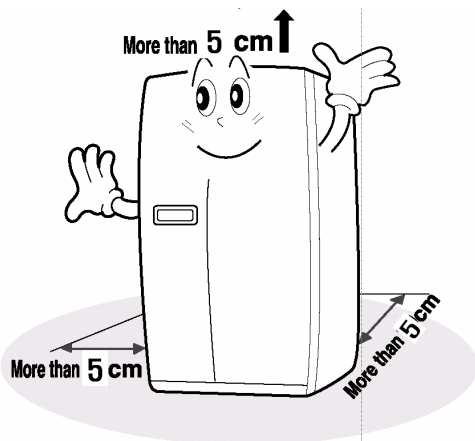

\* Avoid direct sunlight.





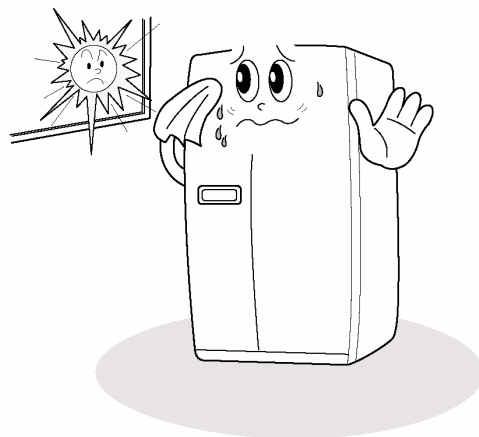


Once the installation place is ready follow the installation instructions.  
If surround temperature of refrigerator is low (below 10°C),  
foods can be frozen or the refrigerator can work in abnormal way.





11-2. If the refrigerator can not enter the door

**Removing Freezer Door**

※ Remove front bottom cover first, if it is attached.

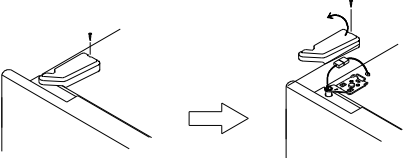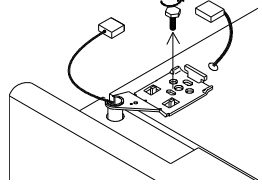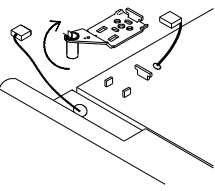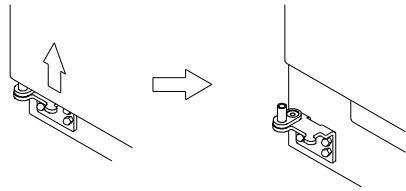
<p><b>1</b> Remove front bottom cover first, Pull out the left collar of the coupling first, then hold the coupling and pull out the left water tube.</p> 	<p><b>2</b> Unscrew top hinge cover with a screw driver. Remove the hinge cover.</p> 	<p><b>3</b> Turn top hinge bolt counterclockwise. Disconnect the harness wires.</p> 
<p><b>4</b> Lift up the front of hinge to remove. (After the hinge is removed the door can fall down forward. Be careful !)</p> 	<p><b>5</b> Be careful not to damage the water line when removing the door.</p> 	

**Removing Refrigerator Door**

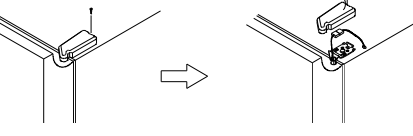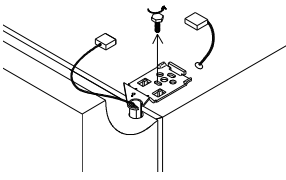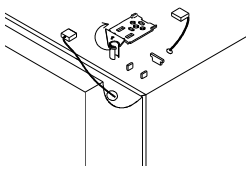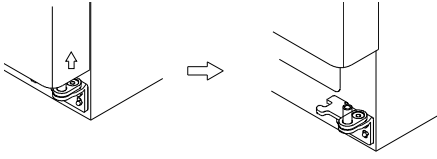
<p><b>1</b> Unscrew top hinge cover with a screw driver. Remove the hinge cover.</p> 	<p><b>2</b> Turn top hinge fastener counterclockwise. Disconnect harness wires.</p> 	<p><b>3</b> Lift up the front of hinge to remove. (After the hinge is removed the door can fall down forward. Be careful !)</p> 
<p><b>4</b> Lift the door straight up to remove.</p> 		

## Replacing Freezer Door


- 1** Insert the water tube into the hole Of the bottom hinge pin first, then Insert the bottom of freezer door into the bottom hinge pin.

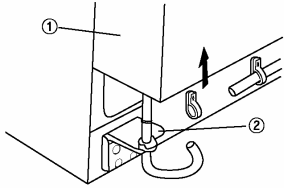


- 2** Insert the bottom hole of freezer door straight to the bottom hinge pin.

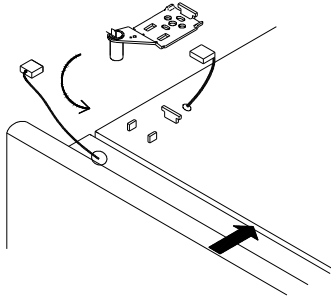

- 3** Let the top of door close to the cabinet and insert the top hinge pin to the top hole of freezer door. ( Insert the back of hinge to the groove of protrusion first, then front to the top hole of door.)

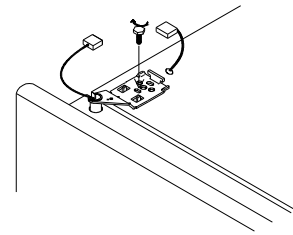

- 4** Turn the hinge fastener tightly to The end. Connect harness wire and screw ground wire.

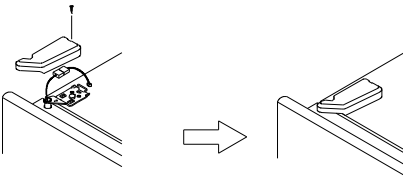


- 5** Insert the water tube far into the coupling.




## Replacing Refrigerator Door


- 1** Insert the bottom hole of refrigerator door straight to the bottom hinge pin.

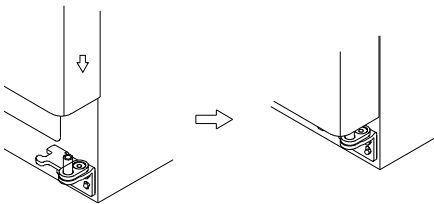

- 2** Let the top of door close to the cabinet and insert the top hinge pin to the top hole of refrigerator door. ( Insert the back of hinge to the groove of protrusion first, then front to the top hole of door.)

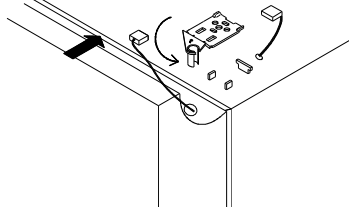

- 3** Turn the hinge fastener tightly to the end. Connect harness wirings and screw ground wire. Click and screw the top hinge cover.

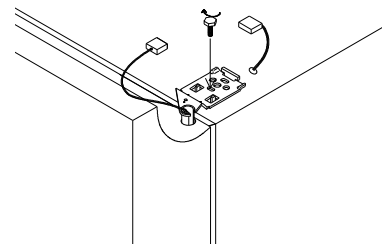


### 11-3. Refrigerator Leveling & Door Adjustment

※ Refrigerator must be level in order to maintain optimal performance and desirable front appearance.  
(If the floor beneath the refrigerator is uneven, freezer and refrigerator doors look unbalanced.)


#### In case freezer door is lower than refrigerator door

Insert a screw driver (flat tip) into a groove of the left wheel (bottom of freezer) and turn it clockwise until the door is balanced.  
(clockwise to raise freezer door ;  
counterclockwise to lower)

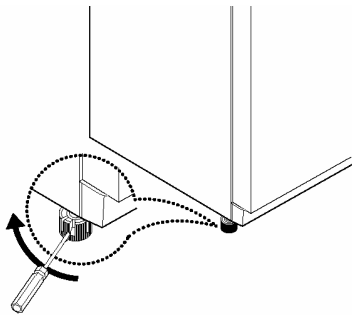

#### In case refrigerator door is lower than refrigerator door

Insert a screw driver (flat tip) into a groove of the right wheel (bottom of refrigerator) and turn it clockwise until the door is balanced.  
(clockwise to raise refrigerator door ;  
counterclockwise to lower)

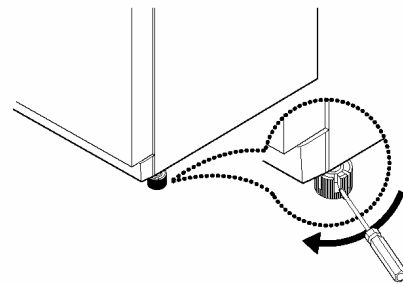

#### Caution

The front of refrigerator needs to be higher just a little than the back for easy door closing, but if the wheel is raised too much for door balance, i.e. front of refrigerator is too higher than the back, it can be difficult to open the door.


## 11-4. Water Line Installation

### How to install Water Line

- The water pressure should be 3kgf/cm<sup>2</sup> or more to run the automatic icemaker.
  - ※ Checkup your tap water pressure ; if a cup of 180cc is full within 10 seconds, the pressure is OK.
- When installing the water tubes, ensure they are not close to Any hot surface.
- The water filter only "filters" water ; it does not eliminate any bacteria or microbes.
- If the water pressure is not so high to run the icemaker, call the local plumber to get an additional water pressure pump.
- The filter life depends on the amount of use. We recommend you replace the filter at least once every 6months.
  - ※ When attaching the filter, place it for easy access (removing & replacing)
- After installation of refrigerator and water line system, select [WATER] on your control panel and press it for 2~3 minutes to supply water into the water tank and dispense water.
- Use sealing tape to every connection of pipes/tubes to ensure there is no water leak.
- The water tube should be connected to the cold water line.

### WATER SUPPLY KIT

- ※ Check the parts below for installing water supply. Some other necessary parts are available at your local service agents.


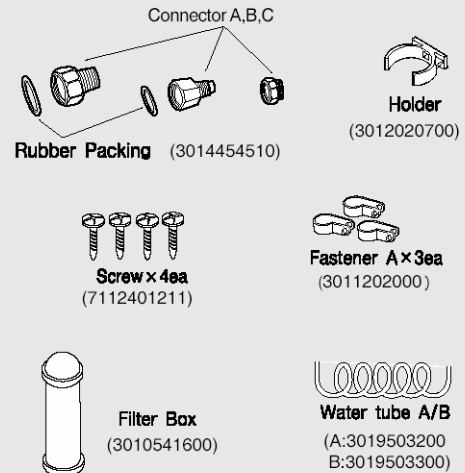


### Installation Procedure

#### 1. Join connector to water tap

- First lock the main tap water valve.
  - Check if connector B and C has its own rubber packing ring in it.
- Join Connector C to the water tap, then Connector B to connector C with a wrench or spanner.
- Insert water pipe into Connector-B and join Connector-A with a wrench or spanner.
- In case Connector-C does not fit water tap join Connector-B directly to the tap. (See Figure B.)
  - ※ If no connector fits water tap, call your local service.
- Unlock main tap water valve, open tap water and check if any water leaks on each joins.


Place the rubber washer inside the tap connector and screw onto the water tap.

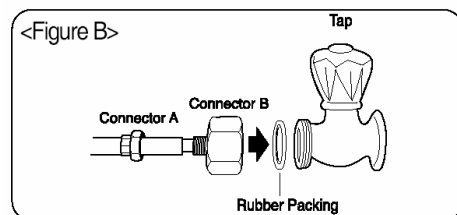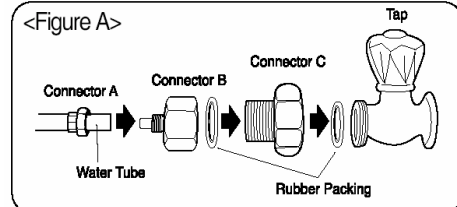

#### 2. Get ready to install water line


- Measure an approximate distance between the filter and the Water Tube and cut the tube off filter vertically.
- Connect the tubes to the filter as the figure shows.

Leave a sufficient distance when cutting the tubes.

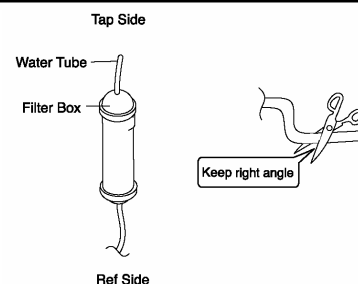


### 3. Remove any substance from filter

- 1) Open the main tap water valve and check if water comes out of the Water Tube.
- 2) Check if the Water Valve is open in case water does not come out.
- 3) Leave the valve open until clean water is coming out.  
※ Initial water may contain some substances out of filter (manufacturing process).

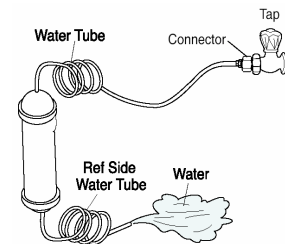


### 4. Attach the filter box

- 1) Screw and fasten the filter holder to the left/right side of the back of refrigerator.  
※ In case the holder is not fastened well, remove the back paper of the tape on the filter holder and attach it.
- 2) Insert the filter box into the holder.

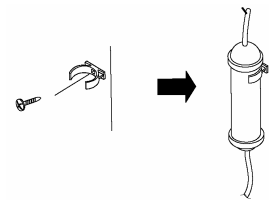

### 5. Connect water tube


- 1) Remove the rear cover at the bottom back of the refrigerator.
- 2) Insert the fastening ring into the Water tube.  
(Be careful to follow the direction of the nut.)
- 3) Insert the Water Tube into the top of Water Valve, turn the nut clockwise to fasten it. (The Water valve is to the right of the motor.)
- 4) Check for any bent tubes or water leaks; if so, re-check installation procedure.
- 5) Replace the rear cover. (The Water Tube should be placed between the groove of the refrigerator back and motor cover.)

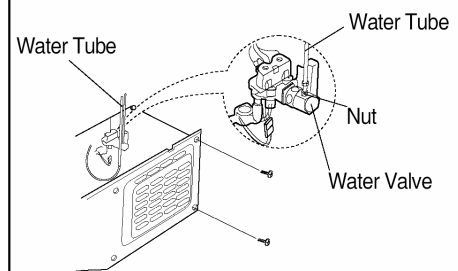

Set the tube upright as the figure shows.


### 6. Fasten water tube

- 1) Fasten the Water Tube with the [Fastener A].
- 2) Check if the tube is bent or squeezed. If so, set it right to prevent any water leak.

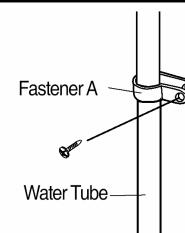


### 7. After installation

- 1) Plug the refrigerator, press the [WATER] button on the control panel for 2~3 minutes to remove any air (bubble) in the pipes and drain out the initial water.
- 2) Check the water leak again through the water supply system (tubes, connectors and pipes) Rearrange the tubes again and do not move the refrigerator.

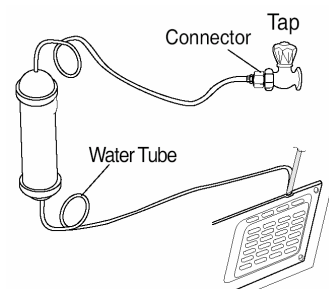

## 11-5. Dispenser Water Flow

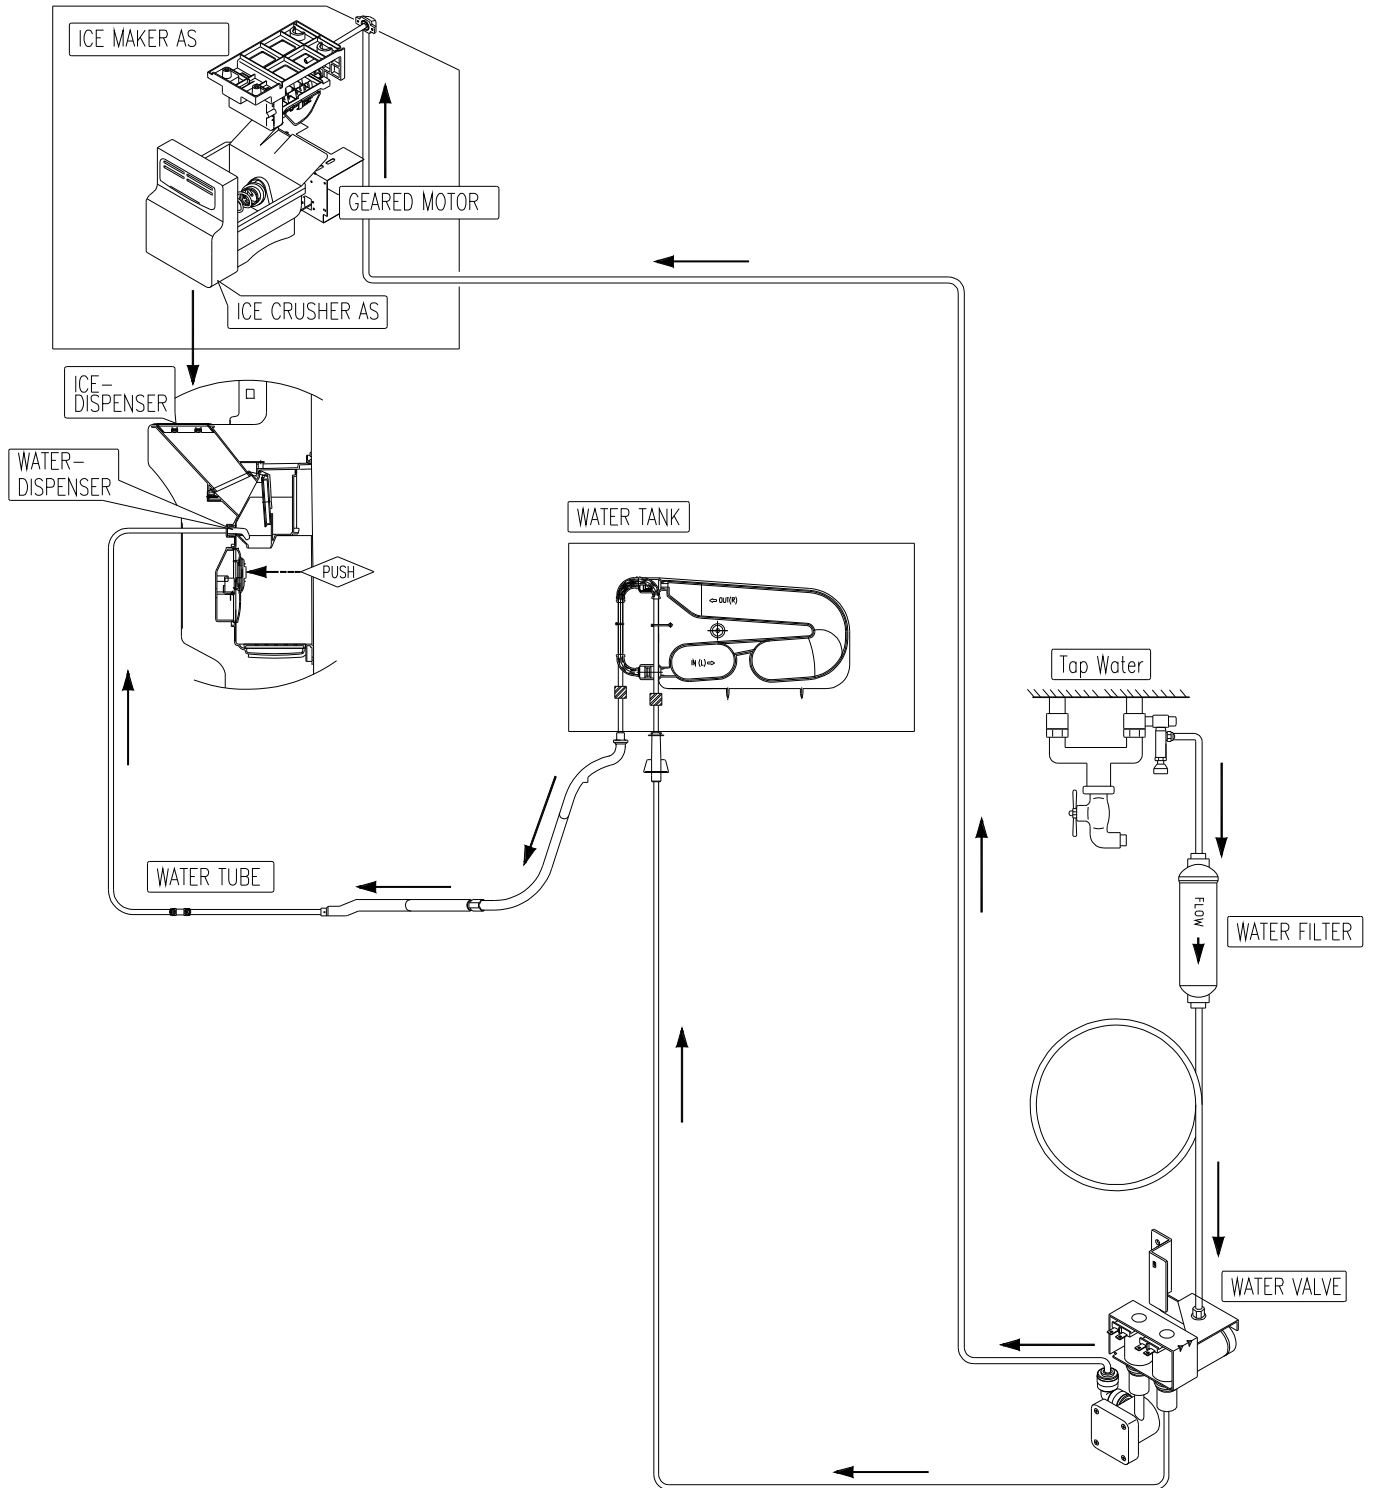





## 12. EXPLODED VIEW & PARTS LIST

12-1. FRS(N)-U201A


### CABINET

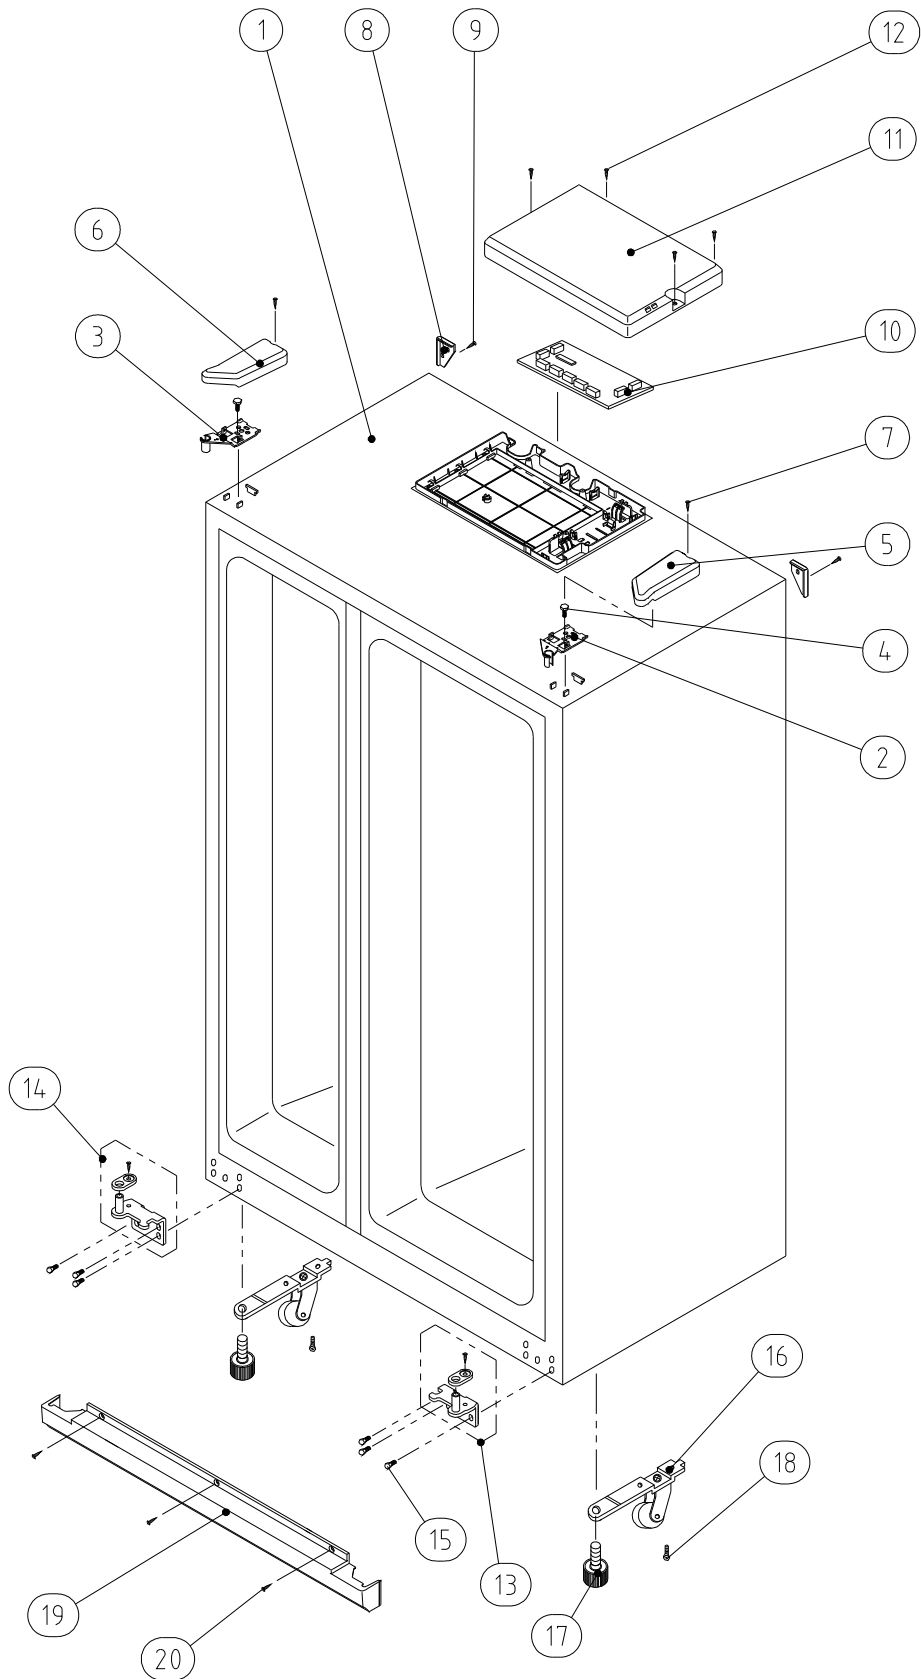


**MECH ROOM**

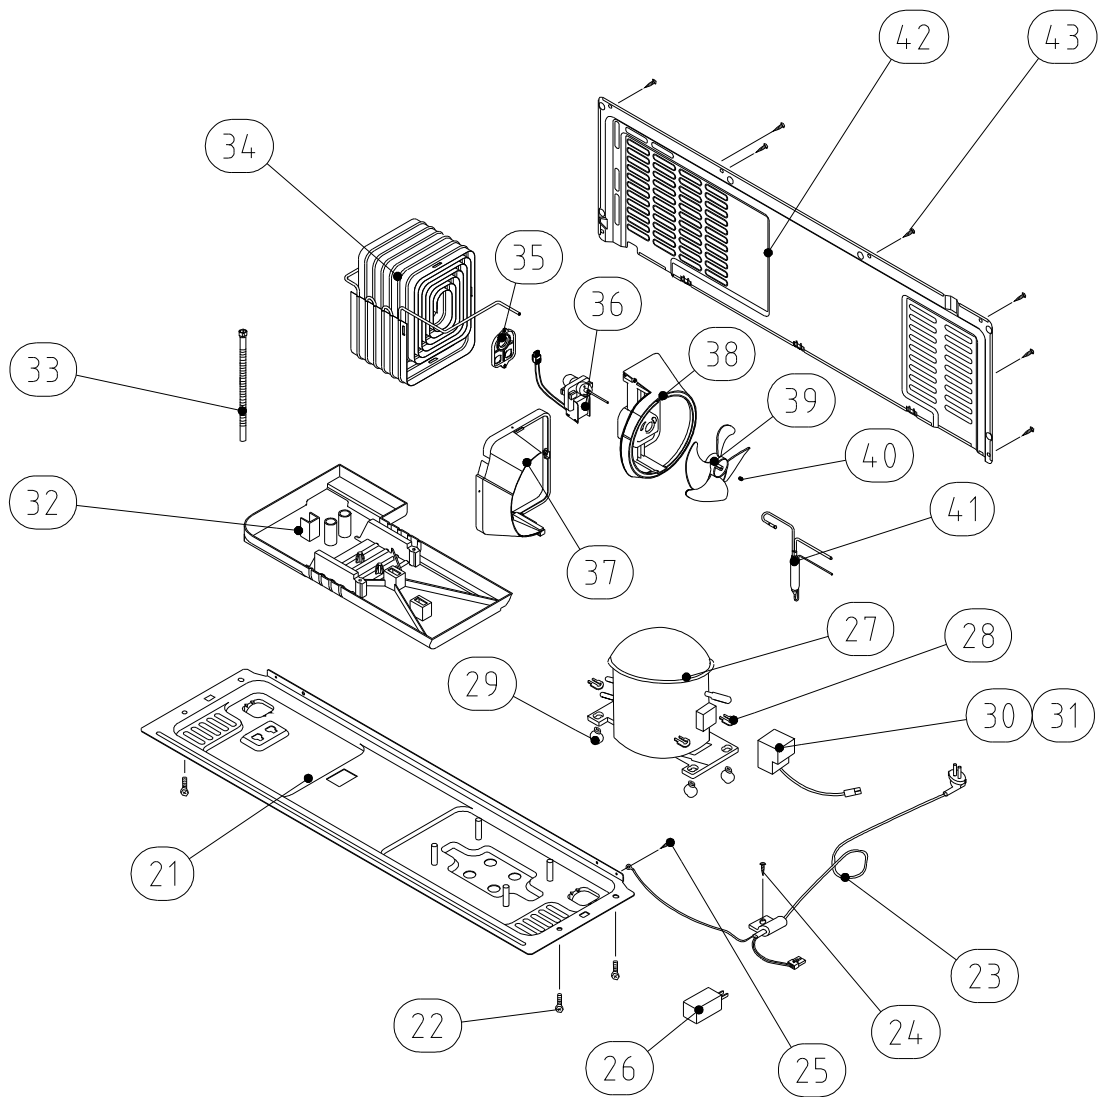


# R ROOM

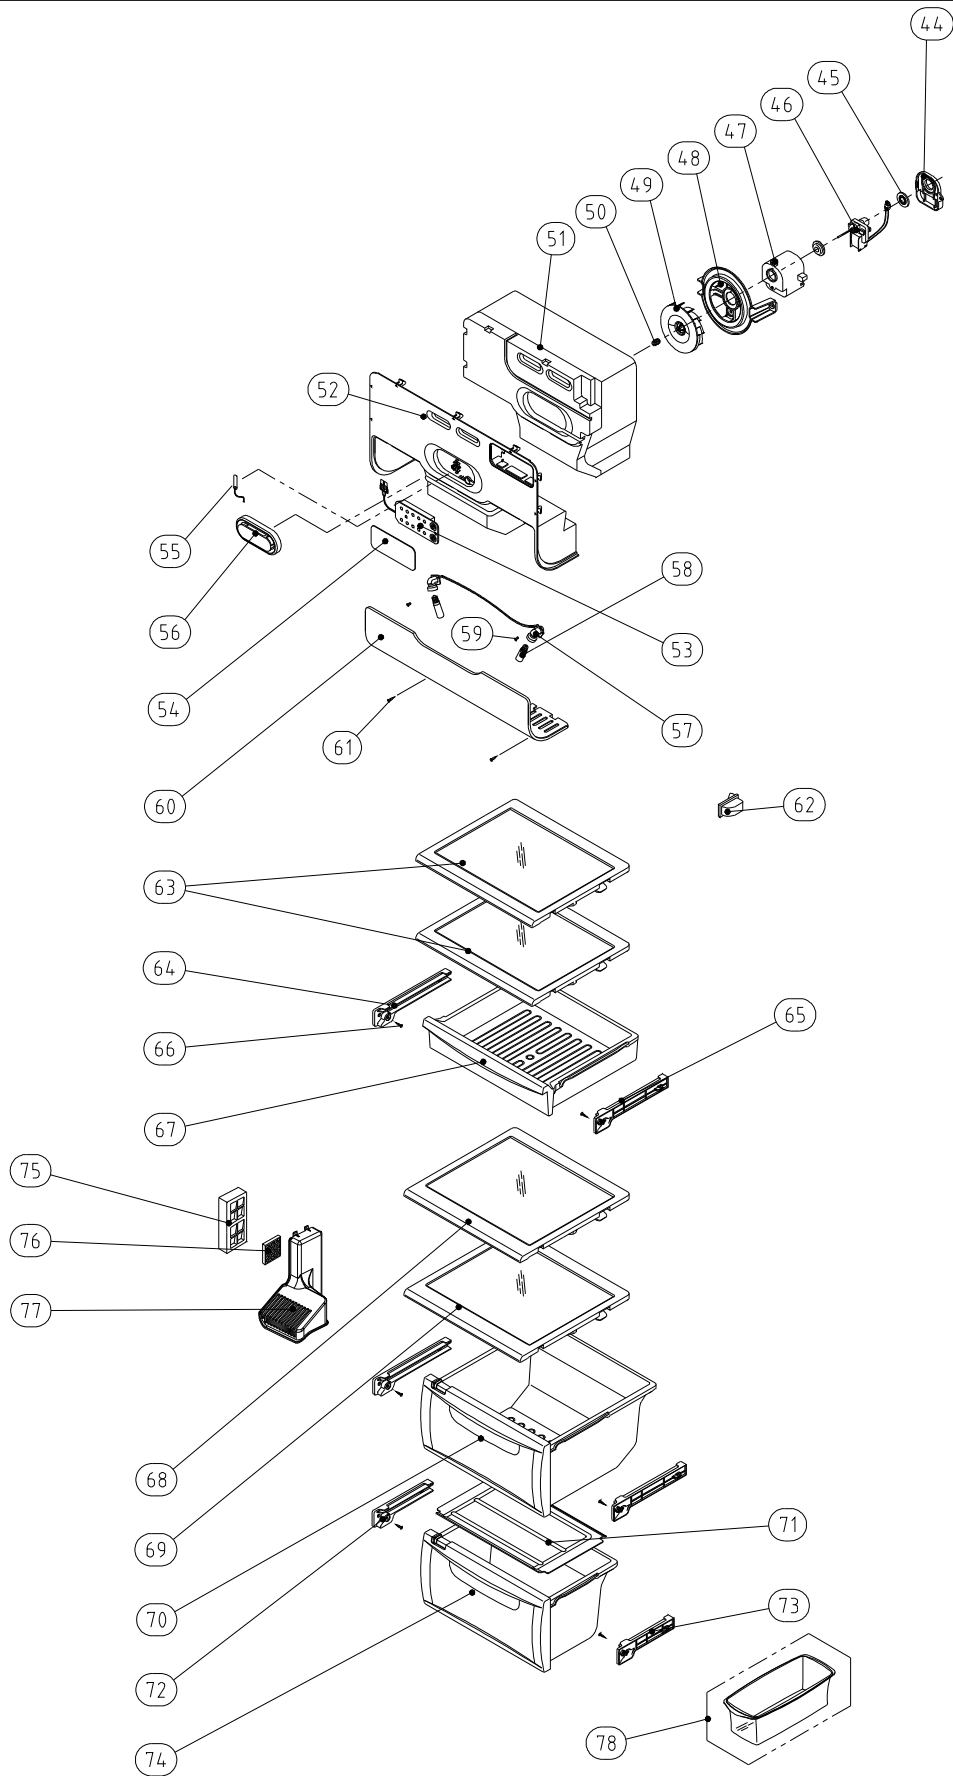


# F ROOM

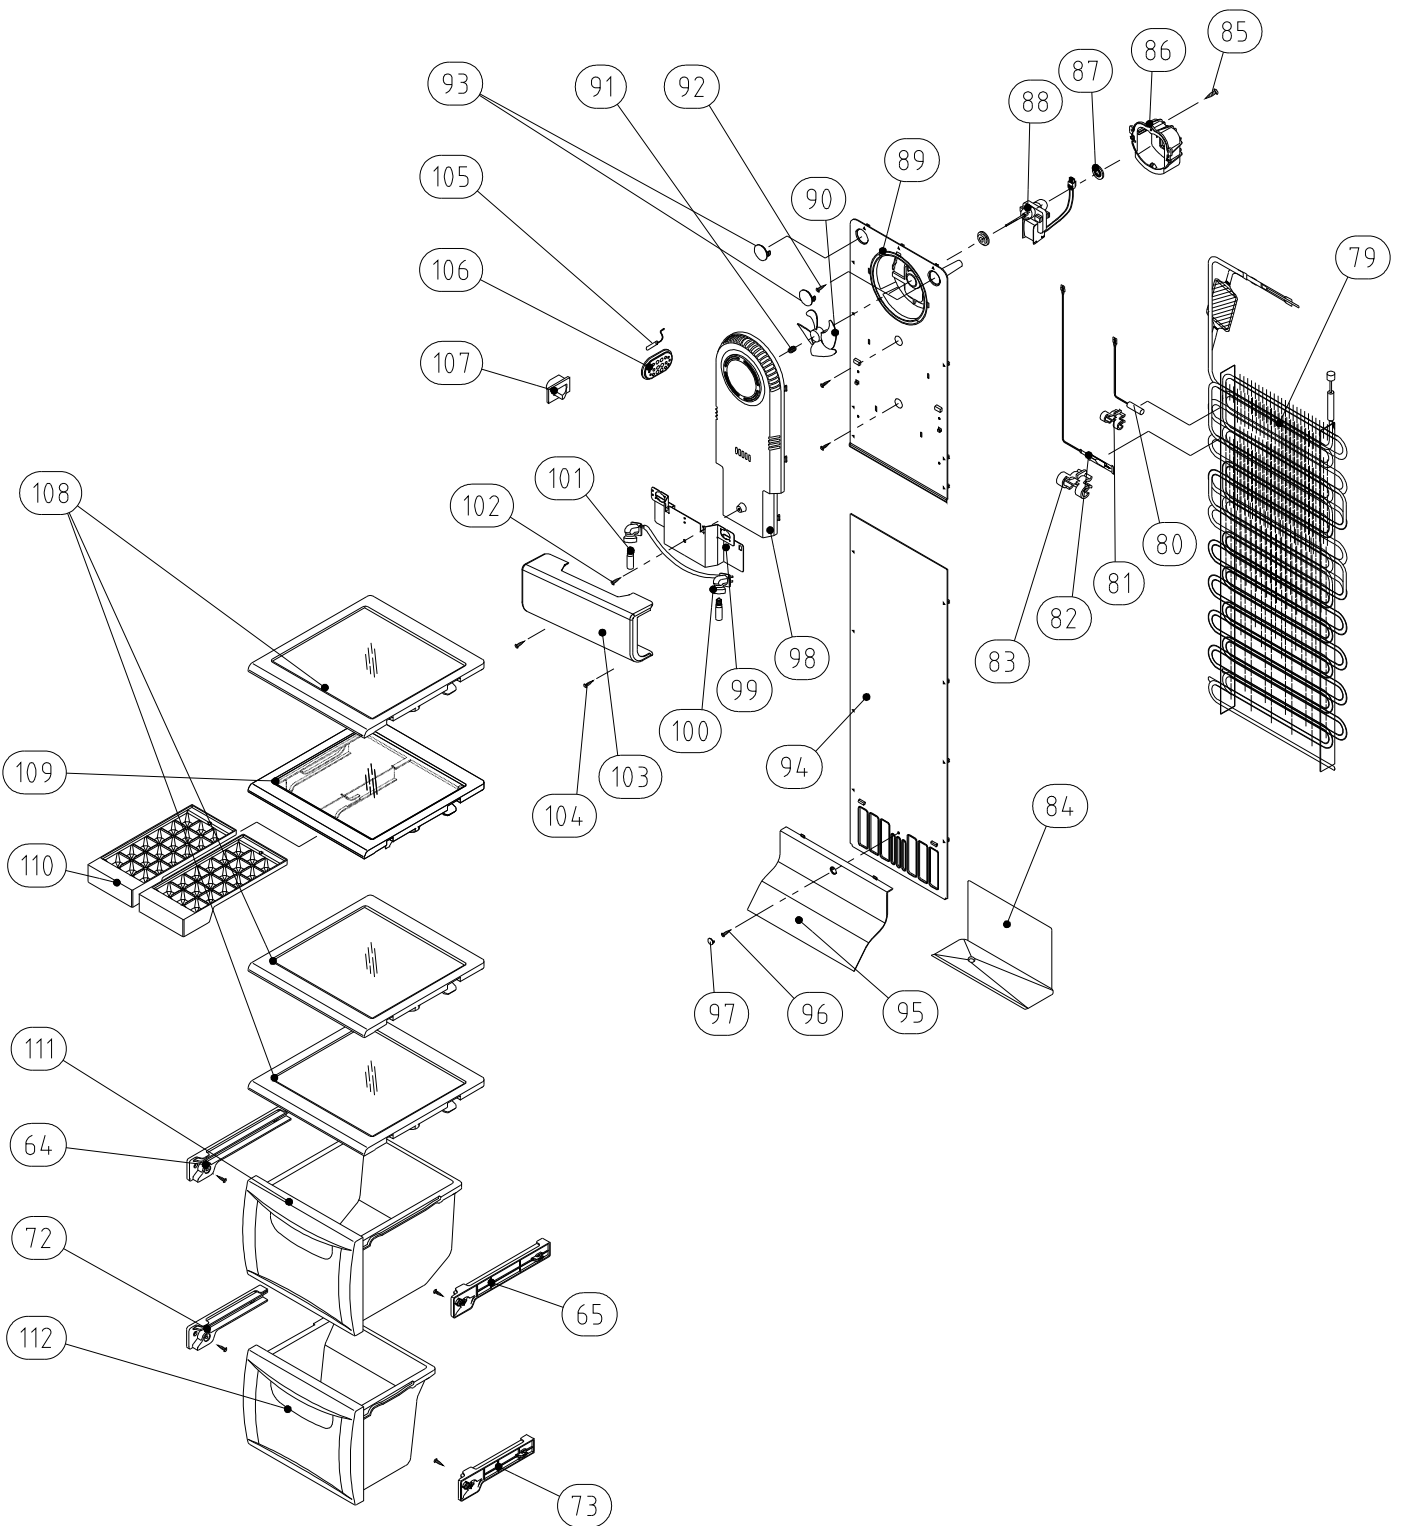

**F DOOR**

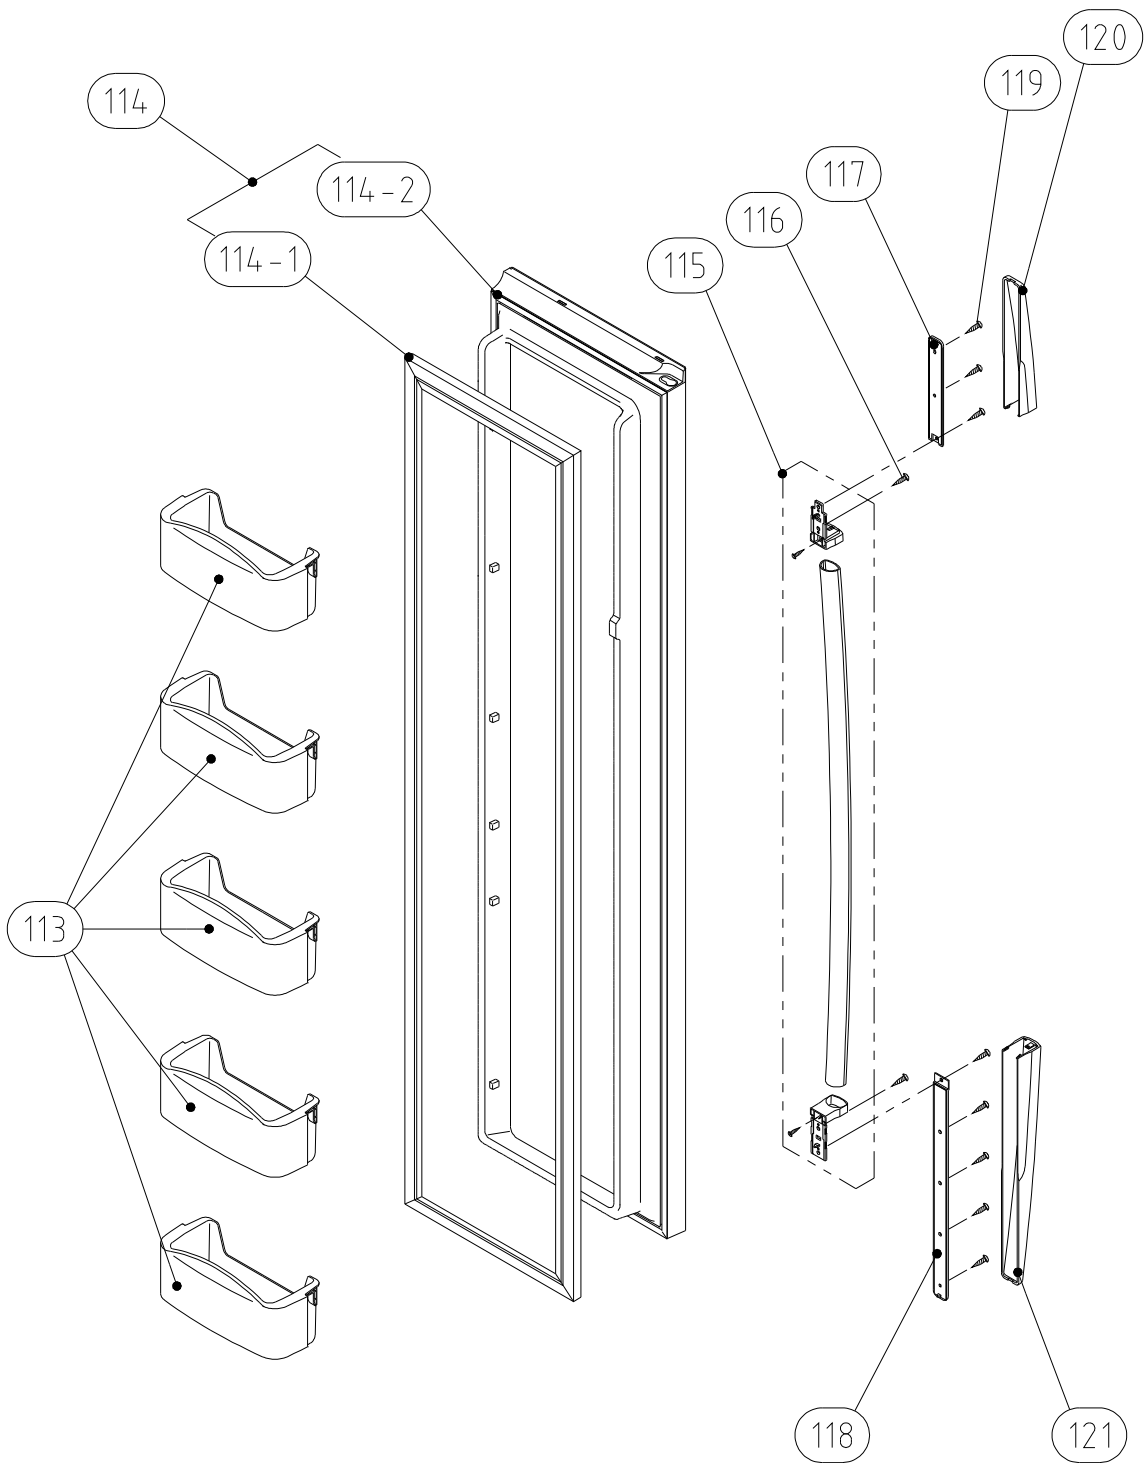

**R DOOR**

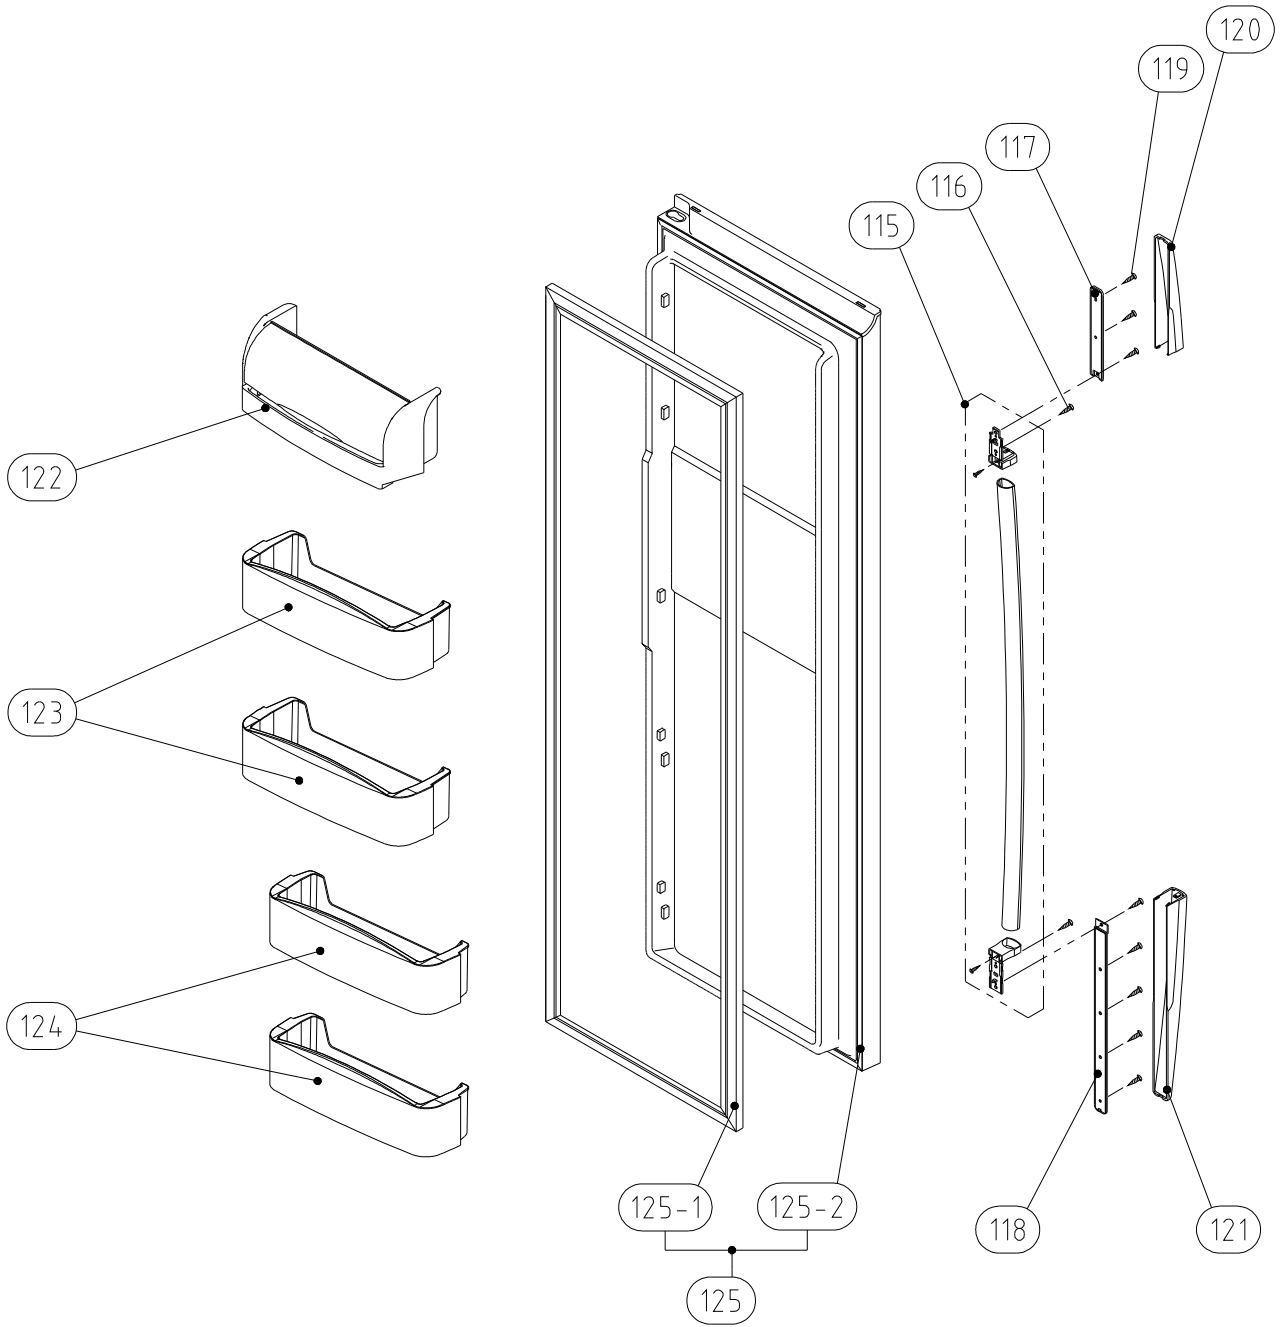

NO	PART CODE	PART NAME	Q'ty	SPECIFICATION	REMARK
1	3000057700	ASSY CAB URT	1	FRU-571I	
2	3012924400	HINGE *T *R AS	1	PO T3.0+PAINT	
3	3012924300	HINGE *T *L AS	1	PO T3.0+PAINT	
4	3016042300	SPECIAL *T HI BOLT	2	6X13 SWCH18A	
5	3011446200	COVER *T HI *R	1	PP	
6	3011446100	COVER *T HI *L	1	PP	
7	7112401211	SCREW TAPPING	2	T1 TRS 4X12 MFZN	
8	3010968400	CAP CAB COVER	2	PP	
9	7112401211	SCREW TAPPING	2	T1 TRS 4X12 MFZN	
10	30143D6060	PCB MAIN AS	1	FRU-571I	
11	3011446000	COVER MAIN PCB BOX	1	PP(V-235)	
12	7112401211	SCREW TAPPING	4	T1 TRS 4X12 MFZN	
13	3012924000	HINGE *U *R AS	1	P/O T5.0 + PAINT	
14	3012923900	HINGE *U *L AS	1	P/O T5.0 + PAINT	
15	3016001240	SPECIAL BOLT *T	6	6X22 SWCH22A(YL)	
16	3010657200	BRACKET ADJ FOOT	2	SPCC T3.0	
17	3012105100	FOOT ADJ AS	2	PP	
18	3016001240	SPECIAL BOLT *T	2	6X22 SWCH22A(YL)	
19	3011447200	COVER CAB BRKT	1	PP	
20	7142401511	SCREW TAPPING	3	T2 TRS 4X16 MFZN	
21	3010340400	BASE COMP AS	1	FRU-571I	
22	3016003300	SPEICAL BOLT	4	T2 M6.5X20	
23	3011346700	CORD POWER AS	1	FRU-571I	
24	7112401211	SCREW TAPPING	1	T1 TRS 4X12 MFZN	
25	7051401065	SCREW MACHINE	1	PAN 4X10 SW BSNI	
26	3016401920	CAPACITOR RUN	1	400VAC 5UF	
27	3956183D50	COMP	1	MK183Q-L2U	
28	3016002500	SPECIAL WASHER	4	SK-5, T0.8	
29	3010101600	RUBBER ABSORBER COMP	4	NBR	
30	3018129600	SWITCH P RELAY AS	1	265RHB,330	
31	3811402100	COVER RELAY	1	DS3-3NORYL S/S	
32	3011181300	CASE VAPORI AS	1	PP	
33	3013201710	HOSE DRN B	1	PE FRB-5970NB	
34	3014461510	PIPE WICON AS	1	TSW OD4.76XT0.7	
35	3012021700	FIXTURE MOTR	1	PP	
36	3015916100	MOTOR C FAN AS	1	DC-2213DWCA-3	
37	3018500300	M/BELL B	1	PP	
38	3018500200	M/BELL A	1	PP	
39	3011834700	FAN	1	ABS OD3.17XD150	

NO	PART CODE	PART NAME	Q'ty	SPECIFICATION	REMARK
40	3011200500	CLAMP FAN	1	SUS 304	
41	3016808100	DRYER AS	1	C1220T-M OD19.05XL135	
42	3011497000	COVER MACH ROOM AS	1	SBHG T0.35	
43	7112401211	SCREW TAPPING	7	T1 TRS 4X12 MFZN	
44	3012214100	FRAME CHECK VALVE AS	1	FRU-571I	
45	3012023700	FIXTURE MOTOR S3	1	PP(NATURAL)	
46	3010107100	ABSORBER MOTOR	2	NBR	
47	3015916000	MOTOR R FAN AS	1	D4612AAA20	
48	3012023900	FIXTURE MOTOR S2	1	PP(NATURAL)	
49	3012023800	FIXTURE MOTOR S1	1	PP(NATURAL)	
50	3011835400	FAN R	1	ABS OD3.17XD110	
51	3011200510	CLAMP FAN	1	SUS 304	
52	3013357300	INSU DAMP AS	1	F-PS	
53	3011444400	COVER DAMP	1	PP	
54	3014235200	PANEL INNER CONTROL AS	1	PC-FILM	
55	3014570900	PLATE INNER CONTROL	1	PC-FILM	
56	3014807100	SENSOR R AS	1	PBN-43B	
57	3011445700	COVER R SENSOR	1	ABS+SPRAY	
58	3017906500	SOCKET R LAMP AS	1	250V/1A	
59	3013602500	LAMP	2	AC 240V 25W(S)	
60	7121300811	SCREW TAPPING	2	T2S PAN 3X8	
61	3015510800	WINDOW R LAMP	1	MIPS	
62	3016002720	SPECIAL CAP SCREW	2	SM18C	
63	3018124000	SWITCH LAMP *R	1	SP201R-7DR	
64	3017842810	SHELF R A AS	2	FRAME+NUDE GLASS+FIX	
65	3012514500	GUIDE CASE A *L AS	3	ABS	
66	3012514600	GUDIE CASE A *R AS	3	ABS	
67	7122401611	SCREW TAPPING	10	T2S TRS 4X16 MFZN	
68	3011185700	CASE CHILD	1	GPPS	
69	3017843300	SHELF R C AS	1	FRAME+NUDE GLASS+FIX	
70	3017842910	SHELF R B AS	1	FRAME+NUDE GLASS+FIX	
71	3011114600	CASE VEGETB B AS	1	CASE+SILK+FRAME+KNOB	
72	3011446700	COVER VEGETB CASE B	1	GPPS	
73	3012529700	GUIDE CASE C *L AS	2	ABS	
74	3012529800	GUIDE CASE C *R AS	2	ABS	
75	3011114700	CASE VEGETB C AS	1	CASE+SILK+FRAME+KNOB	
76	3018701800	DEO ANTI AS	1	W40XT5XL40	
77	3011445900	COVER RETURN DUCT	1	PP	
78	3011171310	CASE EGG AS	1	CASE+VINYL	




NO	PART CODE	PART NAME	Q'ty	SPECIFICATION	REMARK
79	3017053500	EVA AS	1	FRU-571I	
79-1	3012818300	HEATER SHEATH AS	1	AC220V/ 192W	
79-2	3014806900	SENSOR D AS	1	PBN-43	
79-3	3012023600	FIXTURE D SENS	1	PP	
79-4	3017202000	FUSE TEMP AS	1	AC250V 10A 77C	
79-5	4017Z90590	FIXTURE FUSE TEMP	1	PP	
80	3012529000	GUIDE DRN	1	GA	
81	7122401211	SCREW TAPPING	1	T2S TRS 4X12 MFZN	
82	3012007800	FIXTURE MOTOR A	1	HIPS	
83	3010107100	ABSORBER MOTOR	2	NBR	
84	3015915900	MOTOR F FAN	1	D4612AAA21	
85	3018921300	LOUVER F A	1	ABS	
86	3011834500	FAN	1	ABS OD3.17XD130	
87	3011200510	CLAMP FAN	1	SUS 304	
88	7122401611	SCREW TAPPING	3	T2S TRS 4X16 MFZN	
89	3010968600	CAP F LOUVER B	2	HIPS	
90	3018921500	LOUVER F B AS	1	HIPS	
91	3011443200	COVER F RETURN	1	HIPS	
92	7122401611	SCREW TAPPING	1	T2S TRS 4X16 MFZN	
93	3010924600	CAP F LOUVER	2	HIPS	
94	3001401700	COVER F FAN AS	1	FRU-571I	
95	3014531900	PLATE F LAMP	1	SGCC T0.8	
96	3017906600	SOCKET F LAMP AS	1	250V 1A	
97	3013602500	LAMP	1	240V 25W	
98	7112401211	SCREW TAPPING	1	T1 TRS 4X12 MFZN	
99	3015510700	WINDOW F LAMP	1	MIPS	
100	3016002720	SPECIAL CAP SCREW	2	SM18C	
101	3014807000	SENSOR F AS	1	PT-38	
102	3011442600	COVER F SENS	1	ABS	
103	3018124010	SWITCH LAMP *L	1	SP201R-7DL	
104	3017842610	SHELF F AS	3	FRAME+NUDE GLASS+FIX	
105	3017842700	SHELF F ICE AS	1	FRAME+NUDE GLASS+FIX	
106	3011186300	CASE ICING	2	PP	
107	3011114800	CASE F A AS	1	CASE+SILK+FRAME	
108	3011114900	CASE F B AS	1	CASE+SILK+FRAME	
109	3019026600	POCKET F	5	HIPS+SILK	
110	3000060400	ASSY F DR	1	FRU-571I	
110-1	3012318800	GASKET F DR AS	1	PVC	
110-2	3000057900	ASSY F DR URT	1	FRU-571I	




12-2. FRS(N)-U20DA


**CABINET**

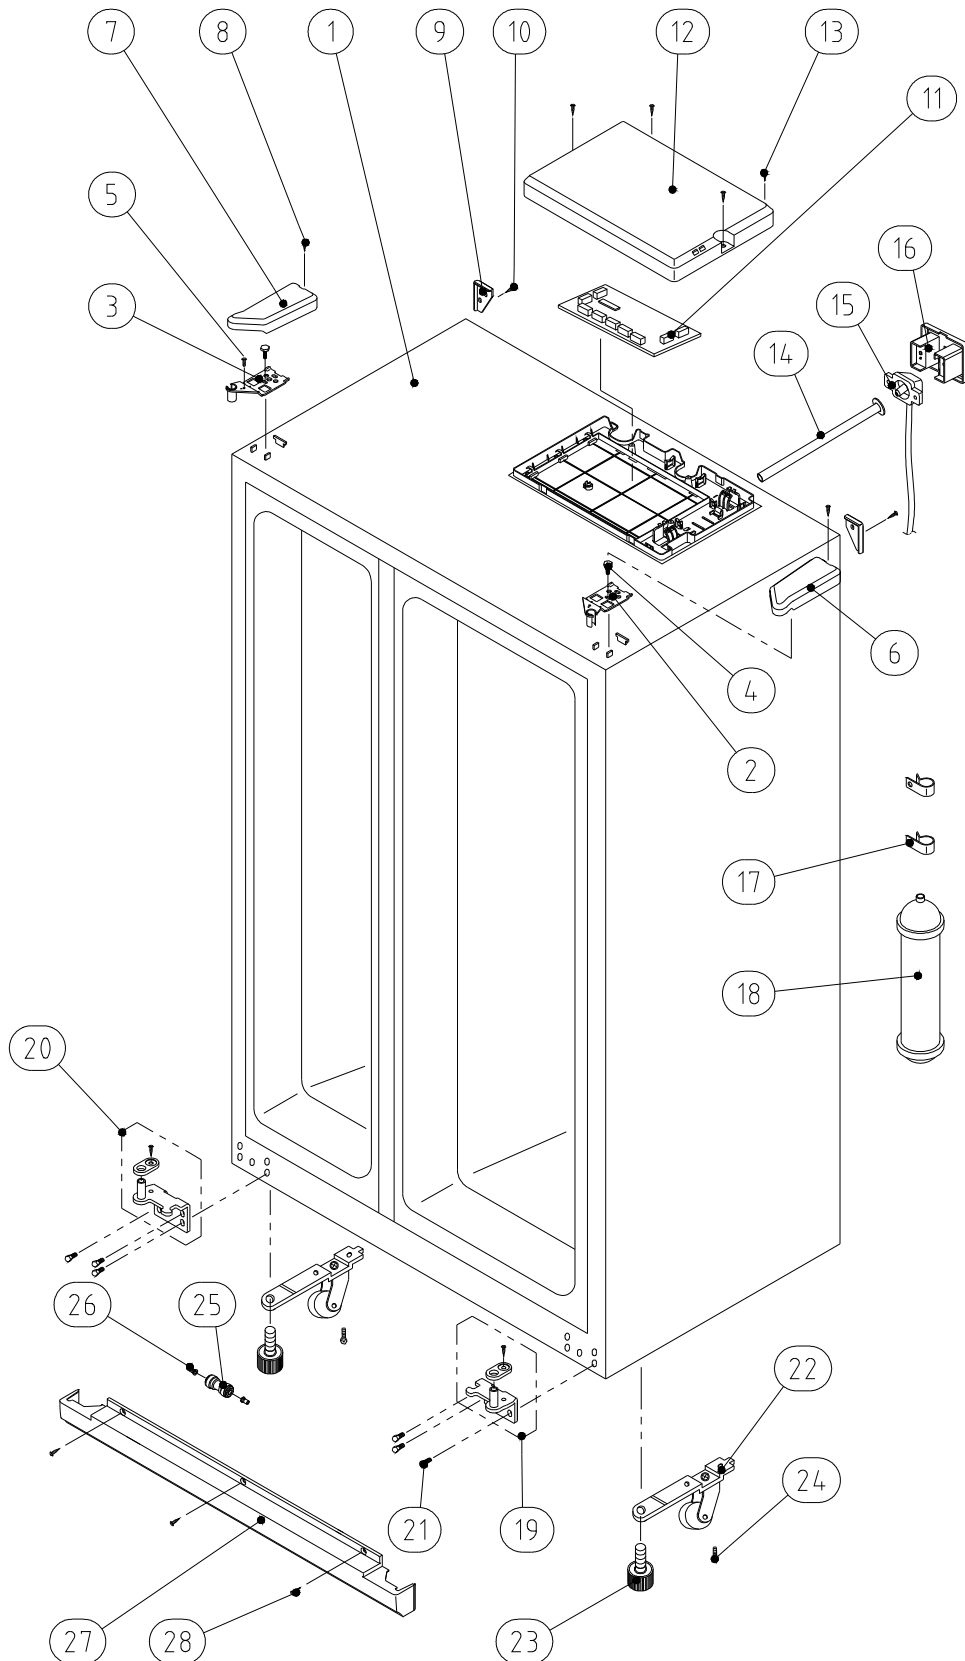


# MECH ROOM

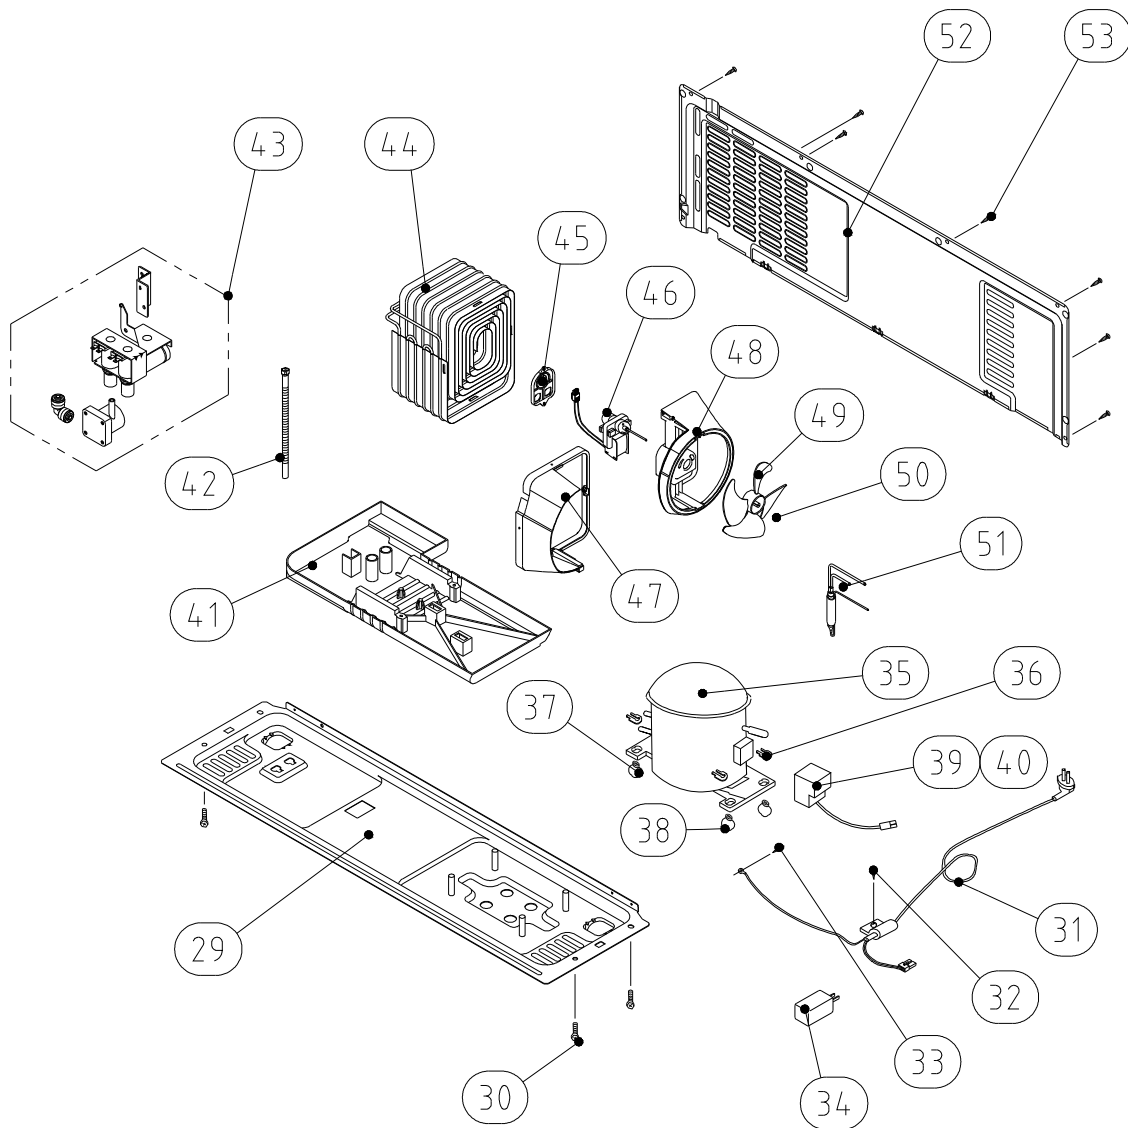


# R ROOM

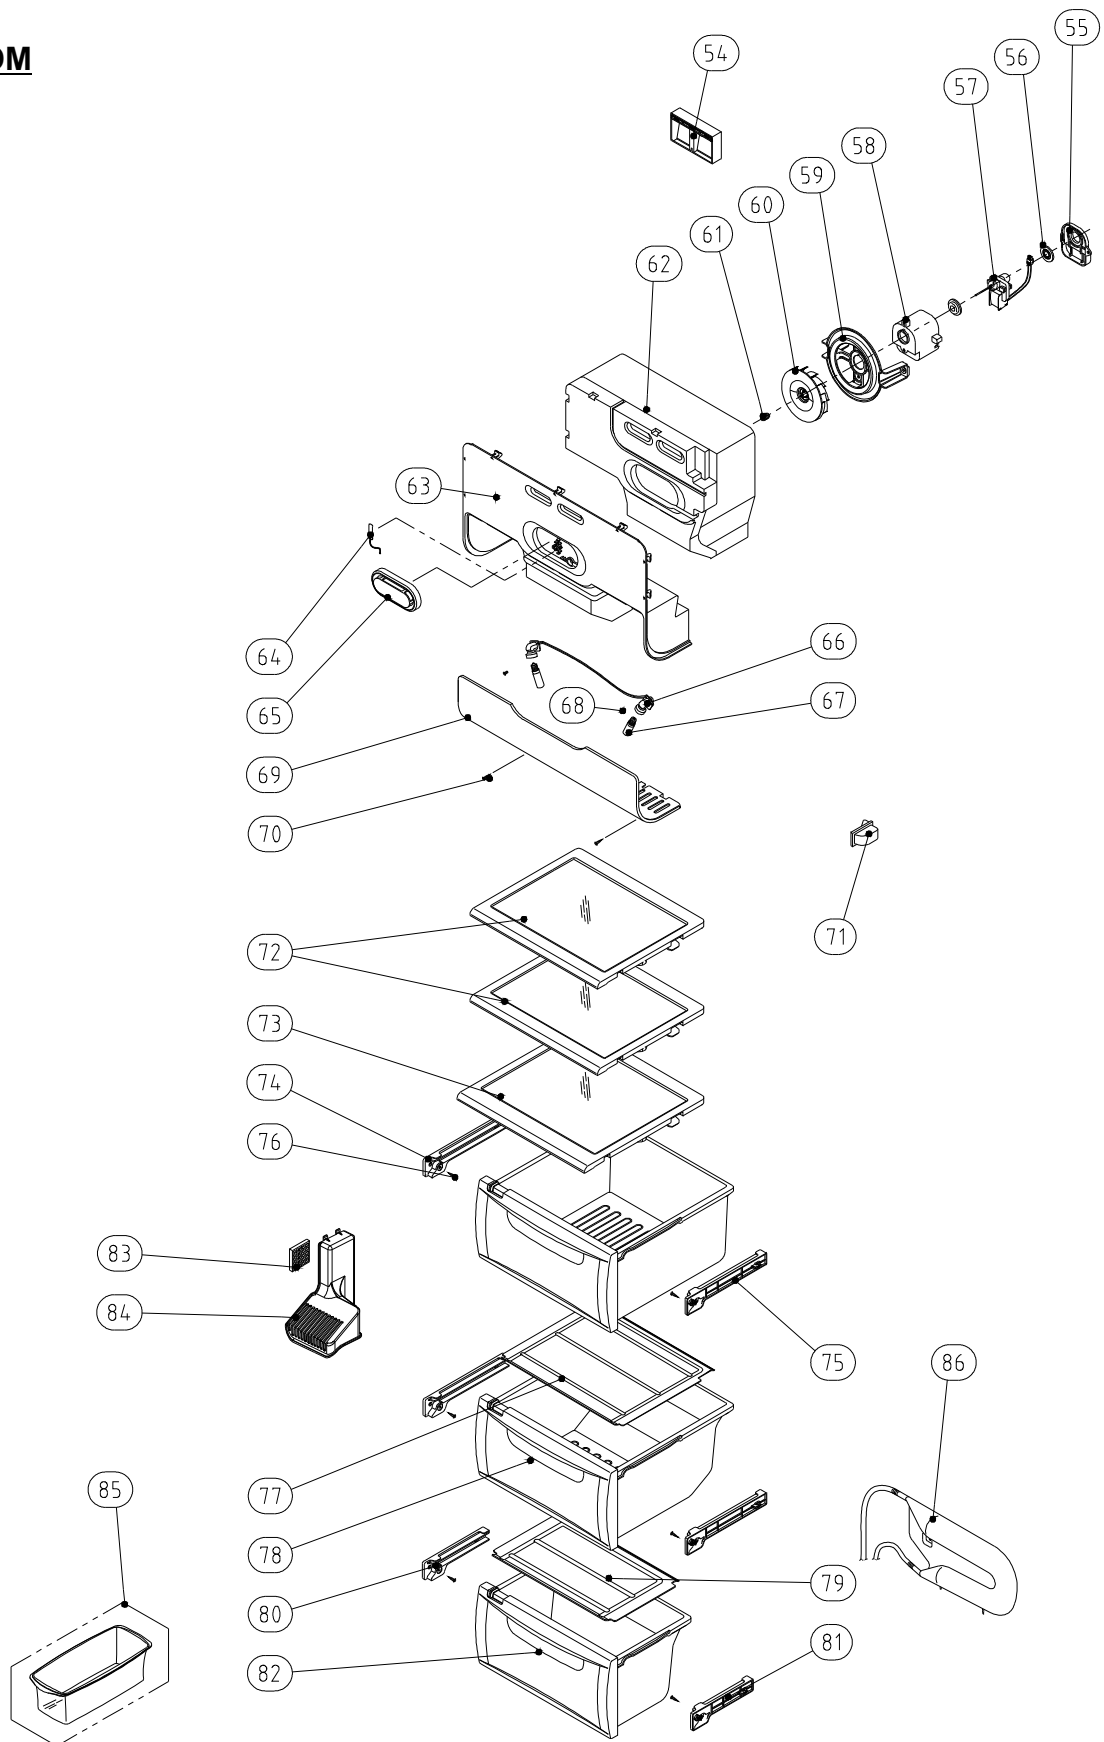


# F ROOM

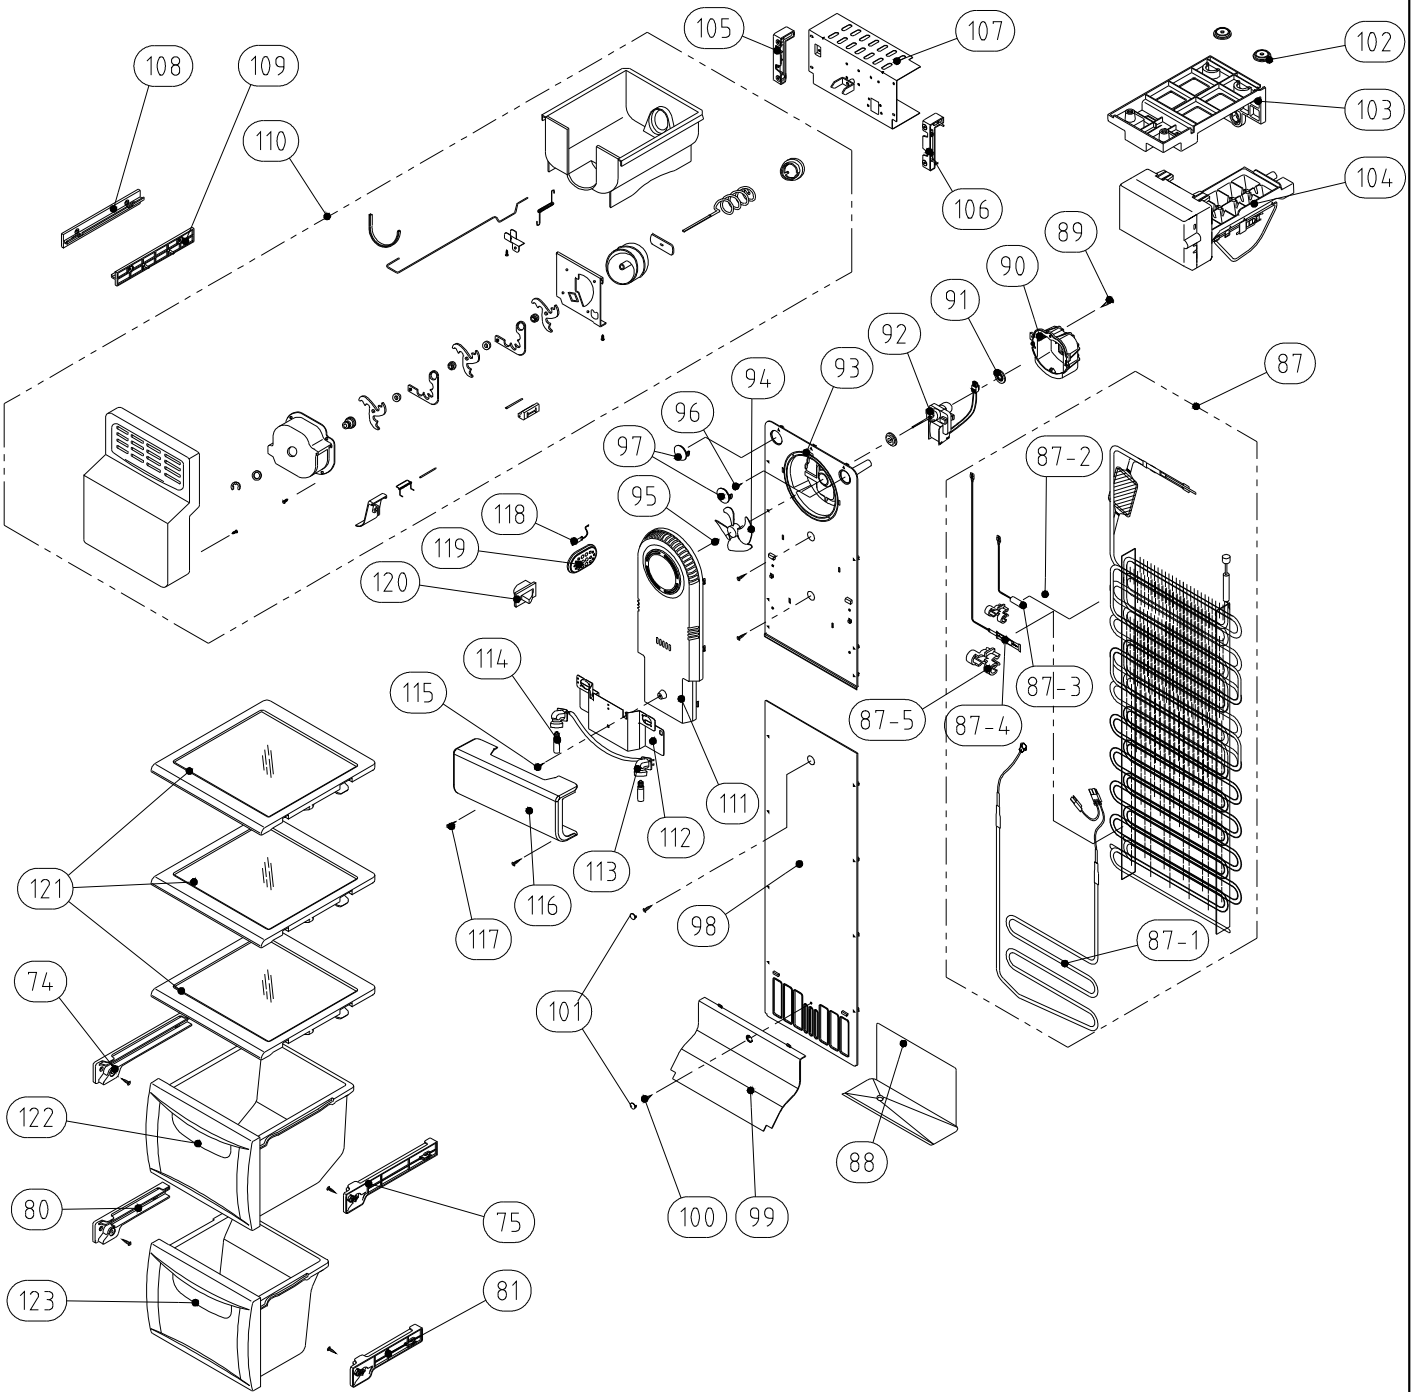

# F DOOR

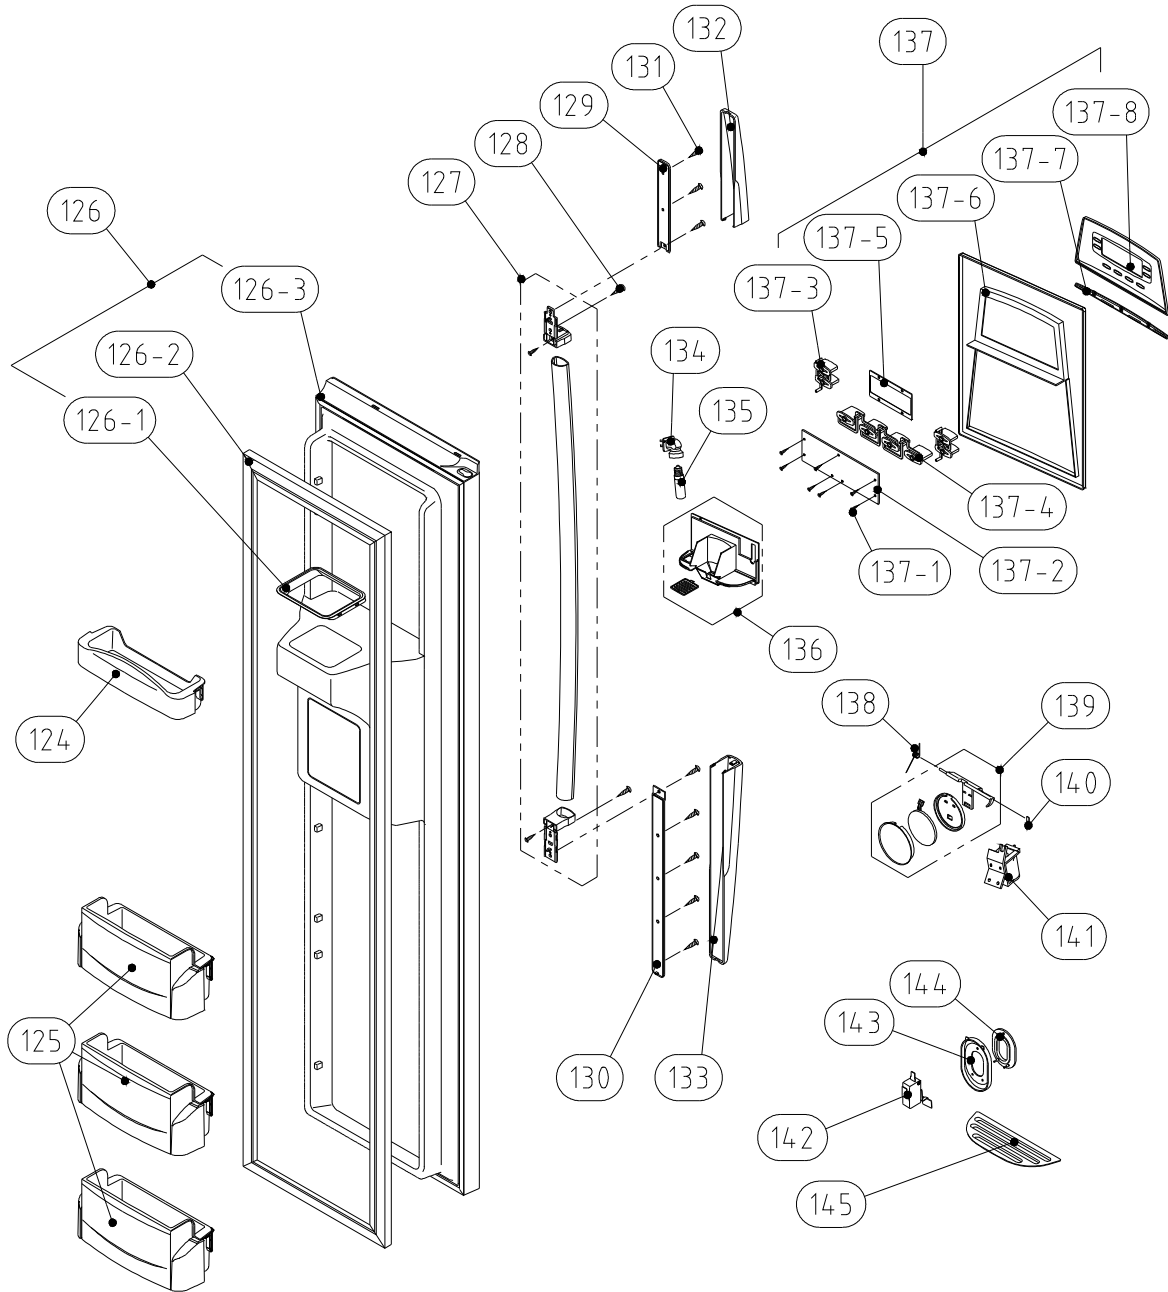

**R DOOR**

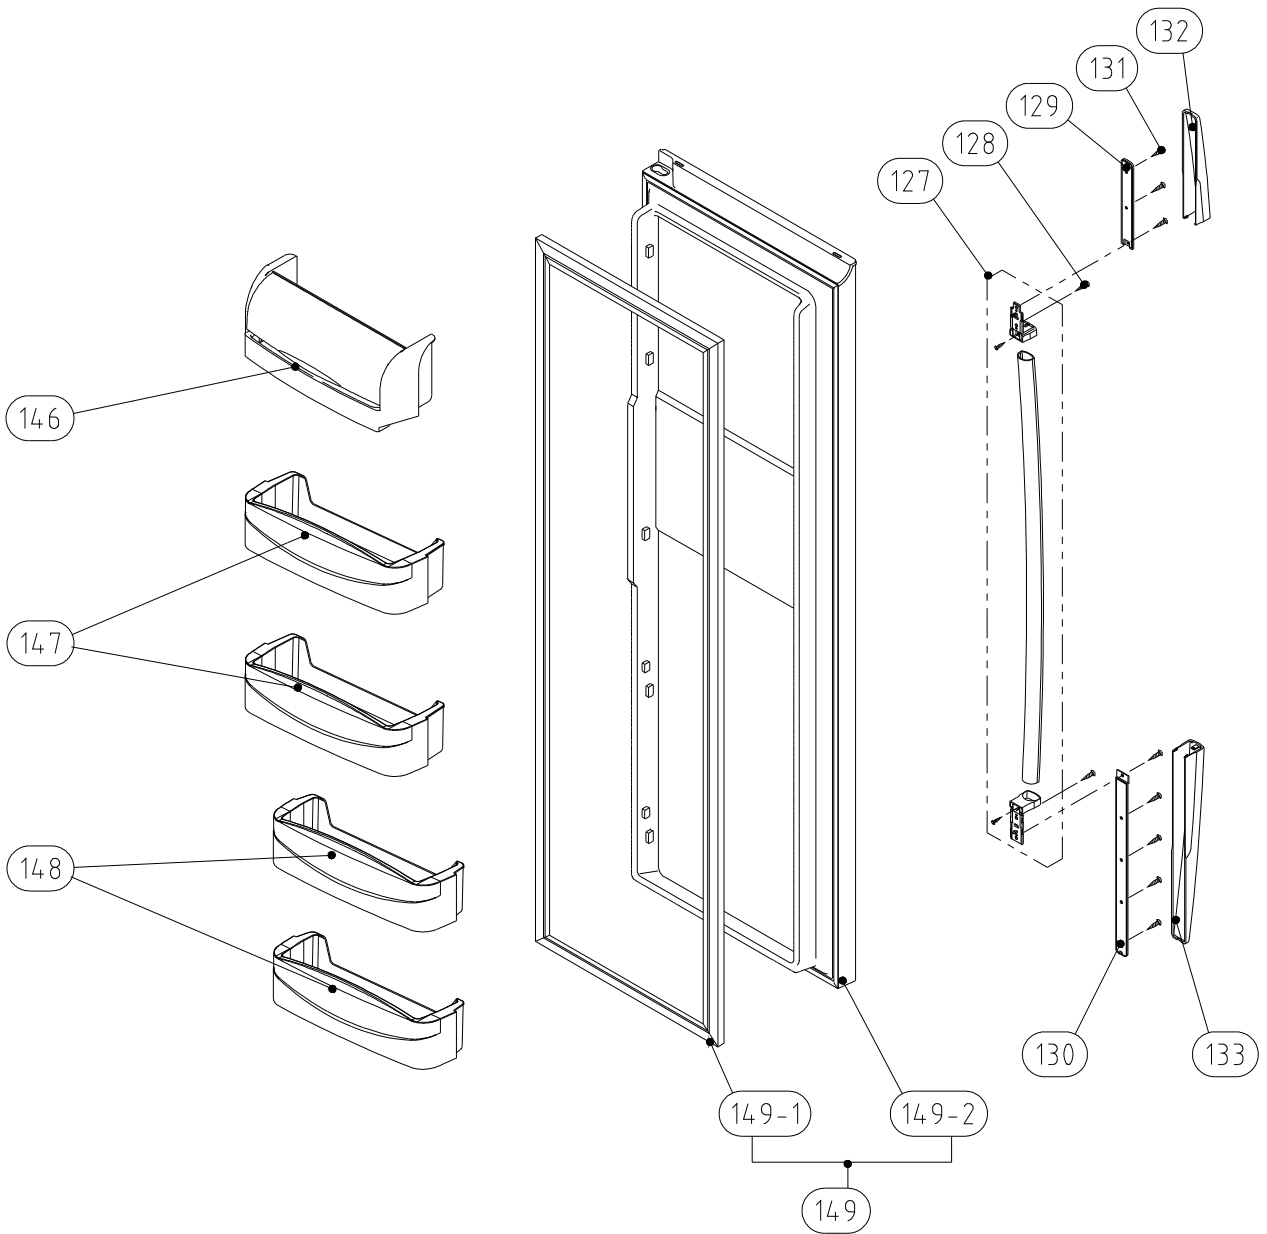



NO	PART CODE	PART NAME	Q'ty	SPECIFICATION	REMARK
1	3000057710	ASSY CAB URT	1	FRU-541D	
2	3012924400	HINGE *T *R AS	1	PO T3.0+PAINT	
3	3012924300	HINGE *T *L AS	1	PO T3.0+PAINT	
4	3016042300	SPECIAL *T HI BOLT	2	6X13 SWCH18A	
5	7051401065	SCREW MACHINE	1	PAN 4X10 SW BSNI	
6	3011446200	COVER *T HI *R	1	PP	
7	3011446100	COVER *T HI *L	1	PP	
8	7112401211	SCREW TAPPING	2	T1 TRS 4X12 MFZN	
9	3010968400	CAP CAB COVER	2	PP	
10	7112401211	SCREW TAPPING	2	T1 TRS 4X12 MFZN	
11	30143D5060	PCB MAIN AS	1	FRU-541D	
12	3011446000	COVER MAIN PCB BOX	1	PP(V-235)	
13	7112401211	SCREW TAPPING	4	T1 TRS 4X12 MFZN	
14	3013224800	HOSE ICE MAKER TUBE AS	1	FRU-541D	
15	3012530200	GUIDE CAB W/TUBE A AS	1	FRU-541D	
16	3011444100	COVER GUIDE CAB W/T A	1	HIPS	
17	3011202000	CLAMP WATER TUBE A	2	PA-66, 5N	
18	3019974800	S/PAER FILTER WATER AS	1	FR-S660CW	
19	3012924000	HINGE *U *R AS	1	P/O T5.0 + PAINT	
20	3012923900	HINGE *U *L AS	1	P/O T5.0 + PAINT	
21	3016001240	SPECIAL BOLT *T	6	6X22 SWCH22A(YL)	
22	3010657200	BRACKET ADJ FOOT	2	SPCC T3.0	
23	3012105100	FOOT ADJ AS	2	PP	
24	3016001240	SPECIAL BOLT *T	2	6X22 SWCH22A(YL)	
25	3013064200	HOLDER TUBE A	1	ACETAL	
26	3012019500	FIXTURE TUBE FIT B	2	PP	
27	3011447200	COVER CAB BRKT	1	PP	
28	7142401511	SCREW TAPPING	3	T2 TRS 4X16 MFZN	
29	3010340400	BASE COMP AS	1	FRU-571I	
30	3016003300	SPEICAL BOLT	4	T2 M6.5X20	
31	3011346700	CORD POWER AS	1	FRU-571I	
32	7112401211	SCREW TAPPING	1	T1 TRS 4X12 MFZN	
33	7051401065	SCREW MACHINE	1	PAN 4X10 SW BSNI	
34	3016401920	CAPACITOR RUN	1	400VAC 5UF	
35	3956145250	COMP	1	MK4A5Q-R1U	
36	3016002500	SPECIAL WASHER	4	SK-5, T0.8	
37	3010101600	RUBBER ABSORBER COMP	2	NBR	
38	3010101480	ABSORBER COMP AS	2	FRU-541D	
39	3018129600	SWITCH P RELAY AS	1	265RHB,330	

NO	PART CODE	PART NAME	Q'ty	SPECIFICATION	REMARK
40	3811402200	COVER RELAY	1	MK4A5Q-R1U S/S (R600A)	
41	3011181300	CASE VAPORI AS	1	PP	
42	3013201710	HOSE DRN B	1	PE FRB-5970NB	
43	3015402300	VALVE WATER AS	1	FR-S660CW	
44	3014461510	PIPE WICON AS	1	TSW OD4.76XT0.7	
45	3012021700	FIXTURE MOTR	1	PP	
46	3015916100	MOTOR C FAN AS	1	DC-2213DWCA-3	
47	3018500300	M/BELL B	1	PP	
48	3018500200	M/BELL A	1	PP	
49	3011834700	FAN	1	ABS OD3.17XD150	
50	3011200500	CLAMP FAN	1	SUS 304	
51	3016808100	DRYER AS	1	C1220T-M OD19.05XL135	
52	3011497000	COVER MACH ROOM AS	1	SBHG T0.35	
53	7112401211	SCREW TAPPING	7	T1 TRS 4X12 MFZN	
54	3012214100	FRAME CHECK VALVE AS	1	FRU-571I	
55	3012023700	FIXTURE MOTOR S3	1	PP(NATURAL)	
56	3010107100	ABSORBER MOTOR	2	NBR	
57	3015916000	MOTOR R FAN AS	1	D4612AAA20	
58	3012023900	FIXTURE MOTOR S2	1	PP(NATURAL)	
59	3012023800	FIXTURE MOTOR S1	1	PP(NATURAL)	
60	3011835400	FAN R	1	ABS OD3.17XD110	
61	3011200510	CLAMP FAN	1	SUS 304	
62	3013357300	INSU DAMP AS	1	F-PS	
63	3011445200	COVER DAMP	1	HIPS	
64	3014807100	SENSOR R AS	1	PBN-43B	
65	3011445700	COVER R SENSOR	1	ABS+SPRAY	
66	3017906500	SOCKET R LAMP AS	1	250V/1A	
67	3013602500	LAMP	2	AC 240V 25W(S)	
68	7121300811	SCREW TAPPING	2	T2S PAN 3X8	
69	3015510800	WINDOW R LAMP	1	MIPS	
70	3016002720	SPECIAL CAP SCREW	2	SM18C	
71	3018128600	SWITCH LAMP *R	1	SPF101B-1D	
72	3017842800	SHELF R A AS	2	FRAME+PRINTED GLASS+FIX	
73	3017842900	SHELF R B AS	1	FRAME+PRINTED GLASS+FIX	
74	3012514500	GUIDE CASE A *L AS	3	ABS	
75	3012514600	GUDIE CASE A *R AS	3	ABS	
76	7122401611	SCREW TAPPING	10	T2S TRS 4X16 MFZN	
77	3011446600	COVER VEGETB A	1	GPPS	
78	3011114600	CASE VEGETB B AS	1	CASE+SILK+FRAME+KNOB	


NO	PART CODE	PART NAME	Q'ty	SPECIFICATION	REMARK
79	3011446700	COVER VEGETB CASE B	1	GPPS	
80	3012529700	GUIDE CASE C *L AS	2	ABS	
81	3012529800	GUIDE CASE C *R AS	2	ABS	
82	3011114700	CASE VEGETB C AS	1	CASE+SILK+FRAME+KNOB	
83	3018701800	DEO ANTI AS	1	W40XT5XL40	
84	3011445900	COVER RETURN DUCT	1	PP	
85	3011171310	CASE EGG AS	1	CASE+VINYL	
86	3018201000	TANK WATER AS	1	FRU-541D	
87	3017053500	EVA AS	1	FRU-571I	
87-1	3012818300	HEATER SHEATH AS	1	AC220V/ 192W	
87-2	3014806900	SENSOR D AS	1	PBN-43	
87-3	3012023600	FIXTURE D SENS	1	PP	
87-4	301720200	FUSE TEMP AS	1	AC250V 10A 77C	
87-5	4017Z90590	FIXTURE FUSE TEMP	1	PP	
88	3012529000	GUIDE DRN	1	GA	
89	7122401211	SCREW TAPPING	1	T2S TRS 4X12 MFZN	
90	3012007800	FIXTURE MOTOR A	1	HIPS	
91	3010107100	ABSORBER MOTOR	2	NBR	
92	3015915900	MOTOR F FAN	1	D4612AAA21	
93	3018921300	LOUVER F A	1	ABS	
94	3011834500	FAN	1	ABS OD3.17XD130	
95	3011200510	CLAMP FAN	1	SUS 304	
96	7122401611	SCREW TAPPING	3	T2S TRS 4X16 MFZN	
97	3010968600	CAP F LOUVER B	2	HIPS	
98	3018921500	LOUVER F B AS	1	HIPS	
99	3011443200	COVER F RETURN	1	HIPS	
100	7122401611	SCREW TAPPING	1	T2S TRS 4X16 MFZN	
101	3010924600	CAP F LOUVER	2	HIPS	
102	3012013200	FIXTURE C	2	PP	
103	3012205600	FRAME ICE MAKER	1	HIPS	
104	3000025920	ASSY ICE MAKER	1	FRU-541D(R600A)	
105	3012517800	GUIDE G/MOTR BRKT *L	1	ABS	
106	3012517900	GUIDE G/MOTR BRKT *R	1	ABS	
107	3010658100	BRACKET G/MOTR AS	1	FRS-541D	
108	3012520510	GUIDE ICE CRUSHER *L	1	ABS	
109	3012517710	GUIDE ICE CRUSHER *R	1	ABS	
110	3011115200	CASE ICE CRUSHER AS	1	FRU-541D	
111	3001401700	COVER F FAN AS	1	FRU-571I	
112	3014531900	PLATE F LAMP	1	SGCC T0.8	

NO	PART CODE	PART NAME	Q'ty	SPECIFICATION	REMARK
113	3017906600	SOCKET F LAMP AS	1	250V 1A	
114	3013602500	LAMP	1	240V 25W	
115	7112401211	SCREW TAPPING	1	T1 TRS 4X12 MFZN	
116	3015510700	WINDOW F LAMP	1	MIPS	
117	3016002720	SPECIAL CAP SCREW	2	SM18C	
118	3014807000	SENSOR F AS	1	PT-38	
119	3011442600	COVER F SENS	1	ABS	
120	3018128500	SWITCH LAMP *L	1	SPF101B-2D	
121	3017842600	SHELF F AS	3	FRAME+PRINTED GLASS+FIX	
122	3011114800	CASE F A AS	1	CASE+SILK+FRAME	
123	3011114900	CASE F B AS	1	CASE+SILK+FRAME	
124	3019026700	POCKET F *T	1	HIPS+SILK	
125	3019027400	POCKET F AS	3	BASE+DECO+SILK	
126	3000060410	ASSY F DR	1	FRU-541D	
126-1	3010964600	CAP ICE PATH FRAME	1	HIPS	
126-2	3012318800	GASKET F DR AS	1	PVC	
126-3	3000003700	ASSY F DR URT	1	FRU-541D	
127	3012641500	HANDLE AS	1	FRU-571I	
128	3016002700	SPECIAL SCREW	2	WASR+TRS5X16 MFZN	
129	3010339500	BASE HANDLE *T	1	HIPS	
130	3010339600	BASE HANDLE *U	1	HIPS	
131	7112401211	SCREW TAPPING	8	T1 TRS 4*12 MFZN	
132	3011446400	COVER HNDL DECO *T	1	ABS+SPRAY	
133	3011446500	COVER HNDL DECO *U	1	ABS+SPRAY	
134	3017903702	SOCKET DISP LAMP AS	1	250V 1A 14BASE	
135	3013600020	LAMP	1	240V/15W(E14,CC5A)	
136	3010544000	BOX DISPNS ICE SHUT AS	1	FRU-541D	
137	3011494700	COVER DISPNS BOX AS	1	FRU-541D	
137-1	7173300811	SCREW TAPPITE	7	TT2 BIN 3X8 MFZN	
137-2	30143D5160	PCB FRONT AS	1	FRU-541D	
137-3	3016304800	BUTTON CONTROL B	2	ABS+AL	
137-4	3016304700	BUTTON CONTROL A	1	ABS+AL	
137-5	3015510900	WINDOW F PCB	1	PMMA	
137-6	3011446300	COVER DISPNS BOX	1	ABS+SPRAY	
137-7	3011636900	DECO DISPNS COVR	1	ABS+AL	
137-8	3014235100	PANEL F PCB	1	ABS+SPRAY	
138	3015102200	SPRING ICE D/LEVER	1	SUS	
139	3011495300	COVER ICE FLAP AS	1	FRU-541D	
140	3012019700	FIXTURE ICE SHUT LVR	1	SUS	




12-3. FRS(N)-U20EA


**CABINET**

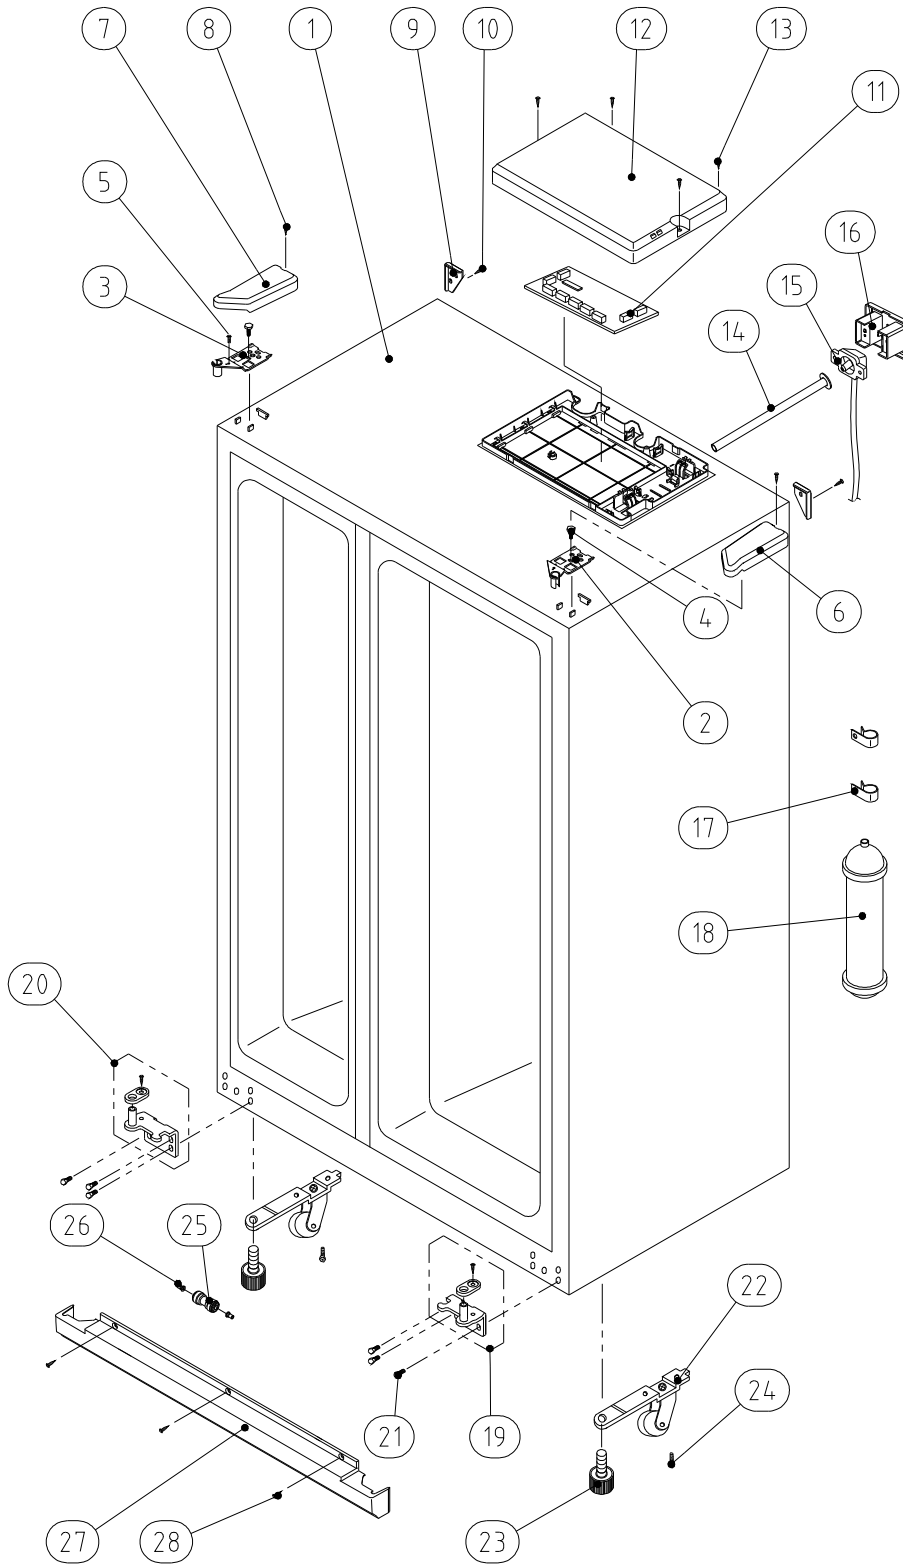

**MECH ROOM**

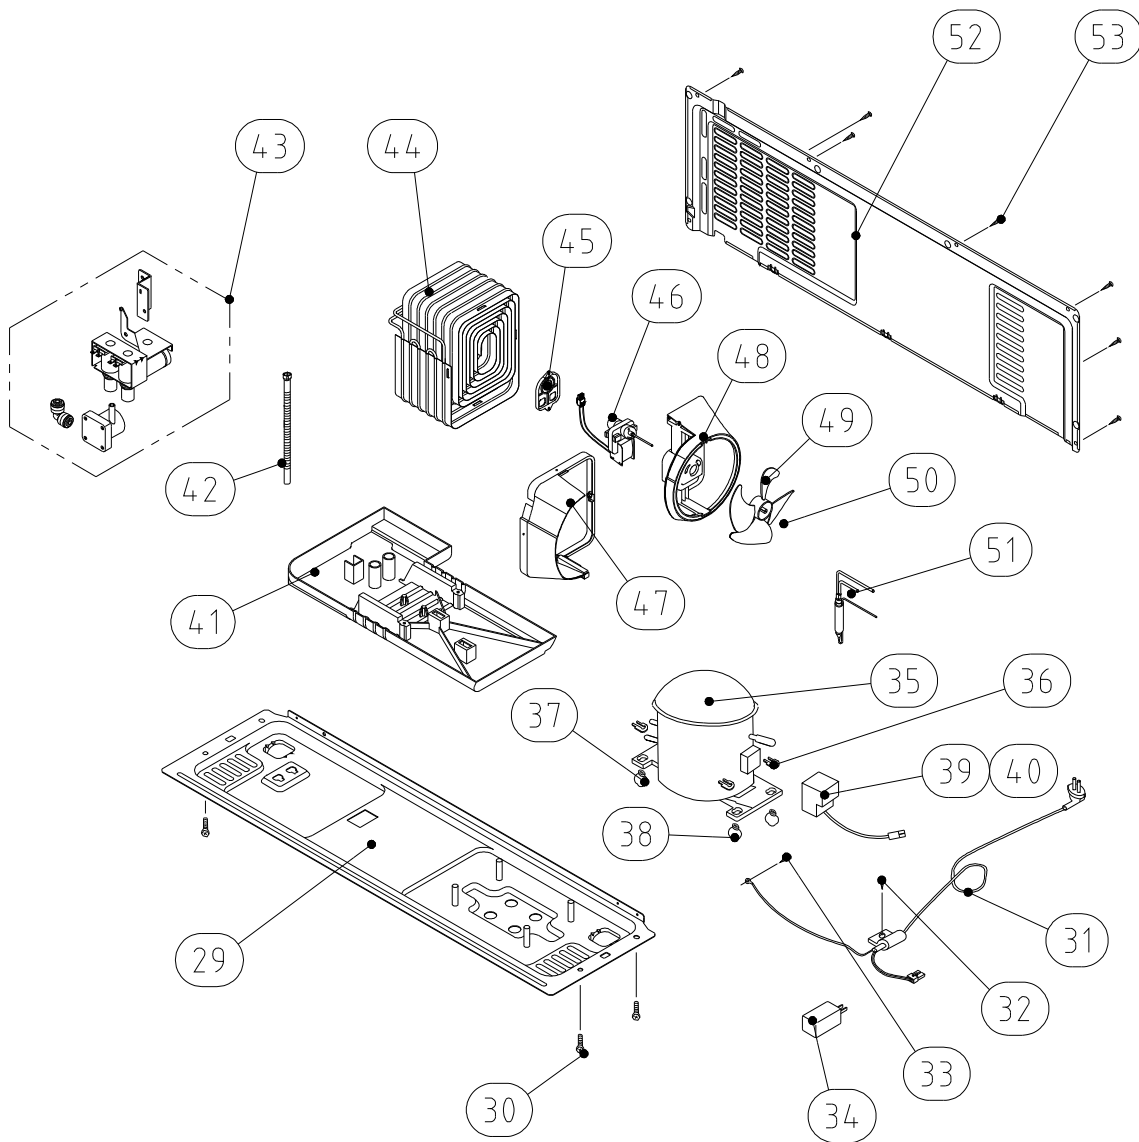


# R ROOM

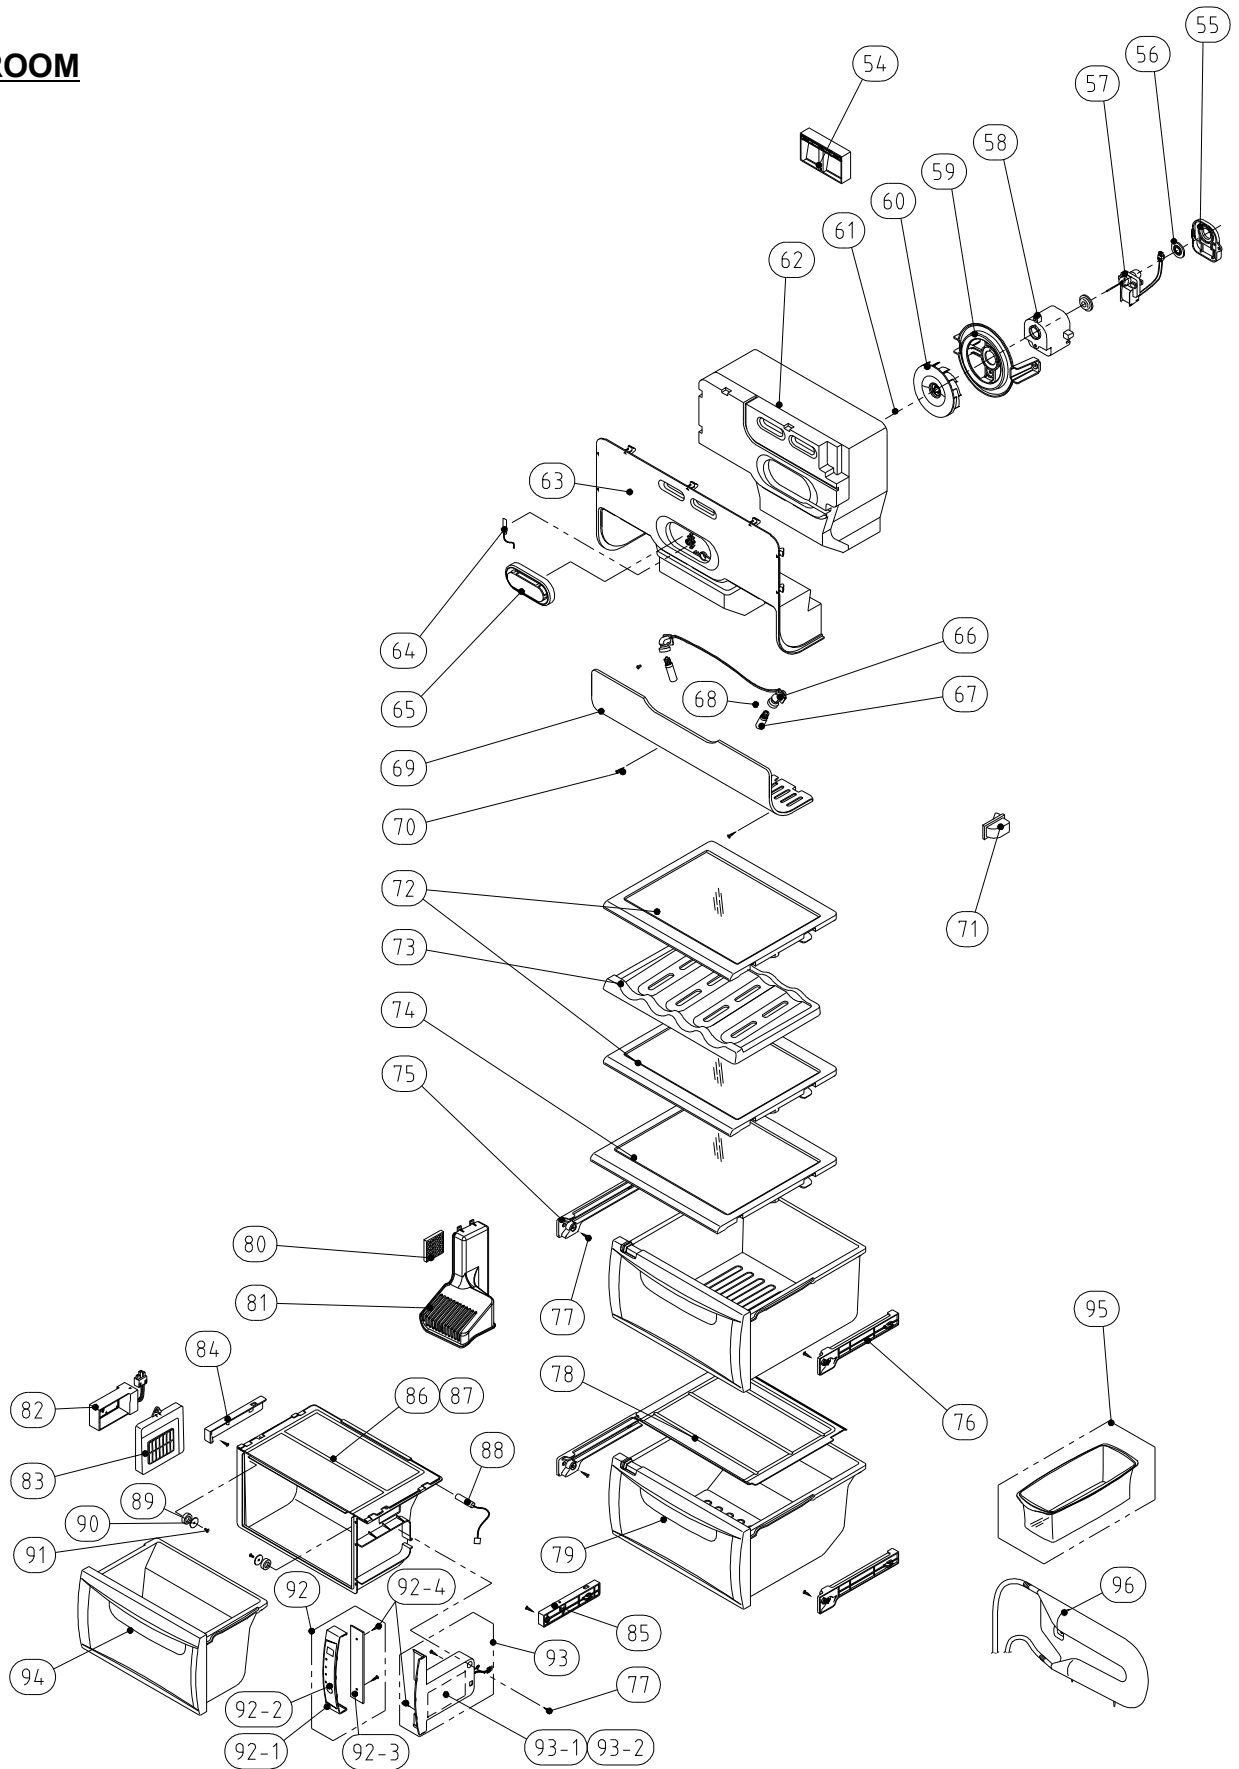





# F ROOM

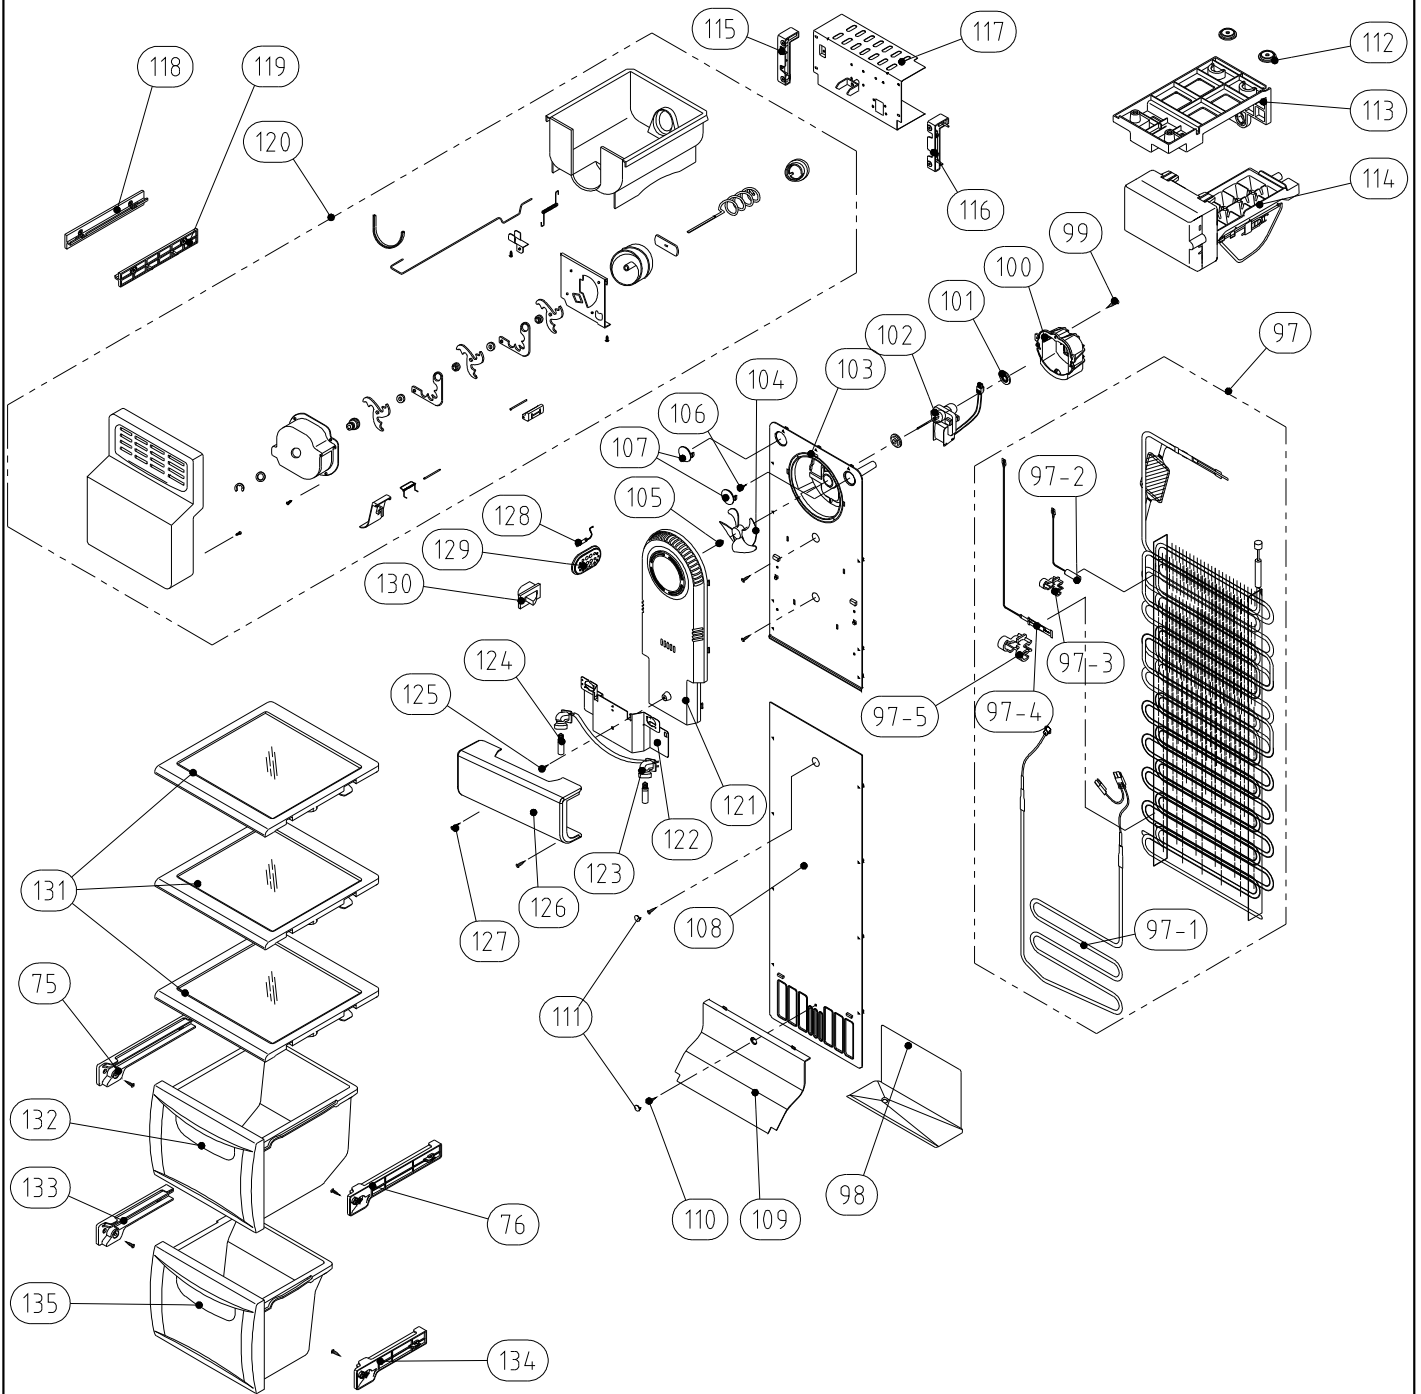

# F DOOR

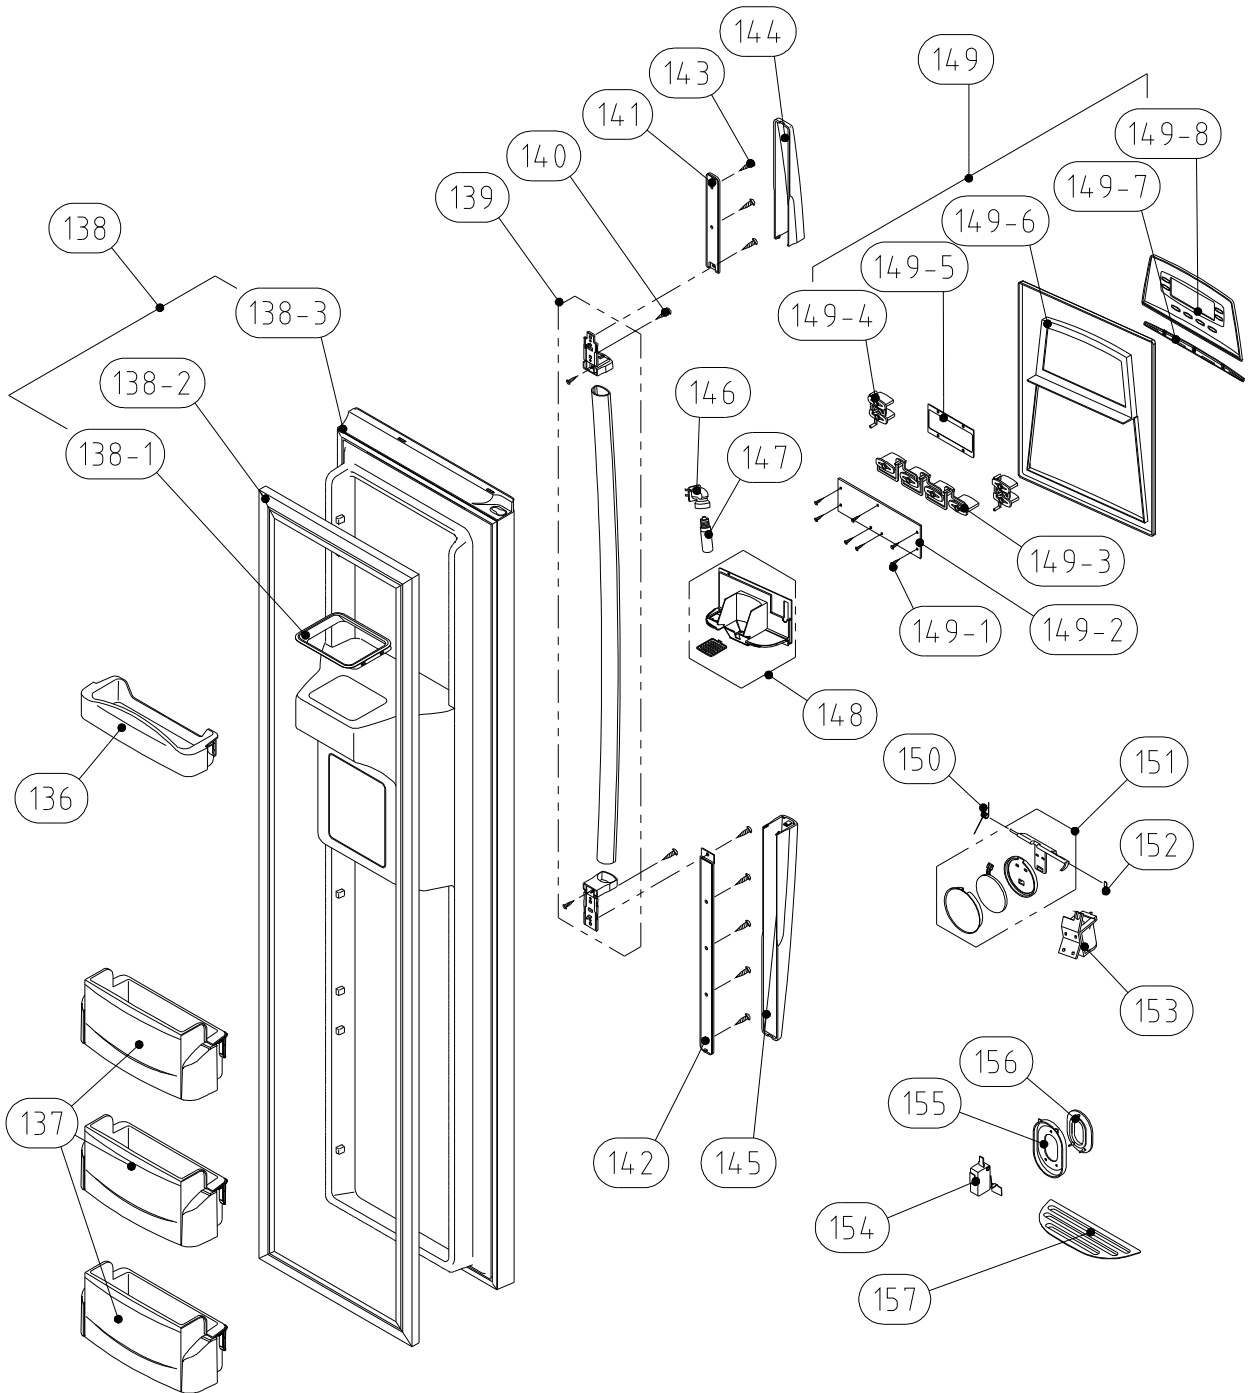

**R DOOR**

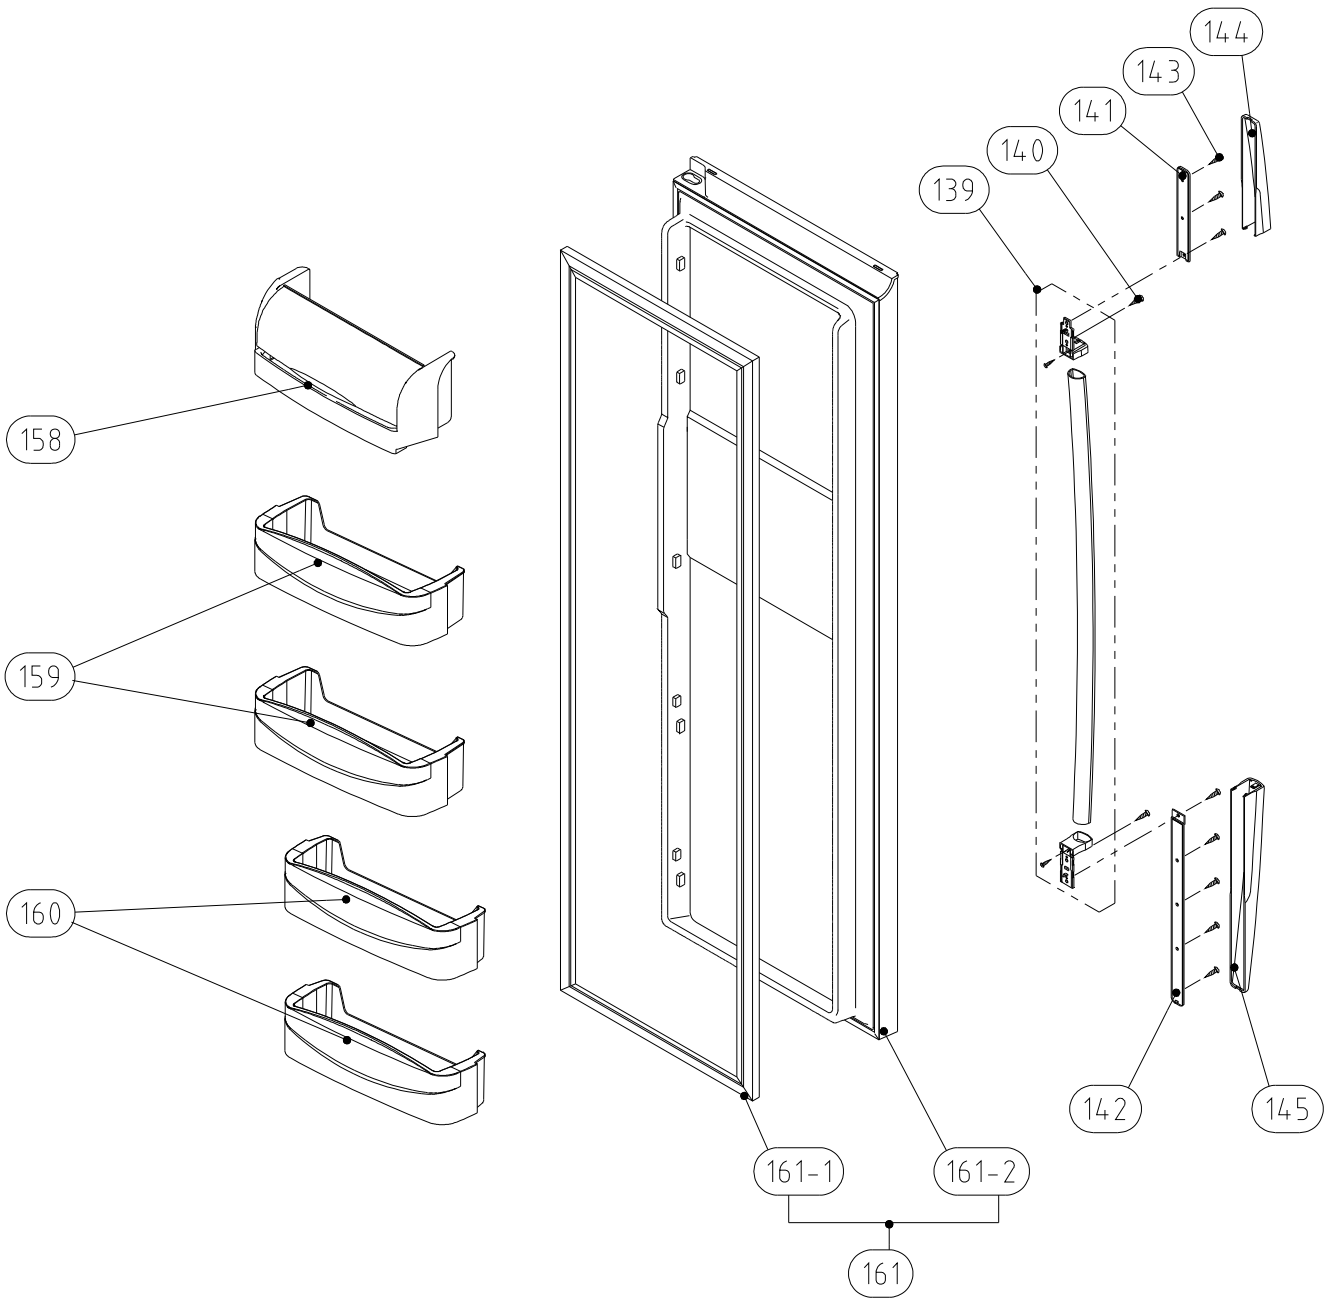

NO	PART CODE	PART NAME	Q'ty	SPECIFICATION	REMARK
1	3000057710	ASSY CAB URT	1	FRU-541D	
2	3012924400	HINGE *T *R AS	1	PO T3.0+PAINT	
3	3012924300	HINGE *T *L AS	1	PO T3.0+PAINT	
4	3016042300	SPECIAL *T HI BOLT	2	6X13 SWCH18A	
5	7051401065	SCREW MACHINE	1	PAN 4X10 SW BSNI	
6	3011446200	COVER *T HI *R	1	PP	
7	3011446100	COVER *T HI *L	1	PP	
8	7112401211	SCREW TAPPING	2	T1 TRS 4X12 MFZN	
9	3010968400	CAP CAB COVER	2	PP	
10	7112401211	SCREW TAPPING	2	T1 TRS 4X12 MFZN	
11	30143D5060	PCB MAIN AS	1	FRU-541D	
12	3011446000	COVER MAIN PCB BOX	1	PP(V-235)	
13	7112401211	SCREW TAPPING	4	T1 TRS 4X12 MFZN	
14	3013224800	HOSE ICE MAKER TUBE AS	1	FRU-541D	
15	3012530200	GUIDE CAB W/TUBE A AS	1	FRU-541D	
16	3011444100	COVER GUIDE CAB W/T A	1	HIPS	
17	3011202000	CLAMP WATER TUBE A	2	PA-66, 5N	
18	3019974800	S/PAER FILTER WATER AS	1	FR-S660CW	
19	3012924000	HINGE *U *R AS	1	P/O T5.0 + PAINT	
20	3012923900	HINGE *U *L AS	1	P/O T5.0 + PAINT	
21	3016001240	SPECIAL BOLT *T	6	6X22 SWCH22A(YL)	
22	3010657200	BRACKET ADJ FOOT	2	SPCC T3.0	
23	3012105100	FOOT ADJ AS	2	PP	
24	3016001240	SPECIAL BOLT *T	2	6X22 SWCH22A(YL)	
25	3013064200	HOLDER TUBE A	1	ACETAL	
26	3012019500	FIXTURE TUBE FIT B	2	PP	
27	3011447200	COVER CAB BRKT	1	PP	
28	7142401511	SCREW TAPPING	3	T2 TRS 4X16 MFZN	
29	3010340400	BASE COMP AS	1	FRU-571I	
30	3016003300	SPEICAL BOLT	4	T2 M6.5X20	
31	3011346700	CORD POWER AS	1	FRU-571I	
32	7112401211	SCREW TAPPING	1	T1 TRS 4X12 MFZN	
33	7051401065	SCREW MACHINE	1	PAN 4X10 SW BSNI	
34	3016401920	CAPACITOR RUN	1	400VAC 5UF	
35	3956145250	COMP	1	MK4A5Q-R1U (R-600a)	
36	3016002500	SPECIAL WASHER	4	SK-5, T0.8	
37	3010101600	RUBBER ABSORBER COMP	2	NBR	
38	3010101480	ABSORBER COMP AS	2	FRU-541D	
39	3018129600	SWITCH P RELAY AS	1	265RHB,330	

NO	PART CODE	PART NAME	Q'ty	SPECIFICATION	REMARK
40	3811402200	COVER RELAY	1	MK4A5Q-R1U S/S (R600A)	
41	3011181300	CASE VAPORI AS	1	PP	
42	3013201710	HOSE DRN B	1	PE FRB-5970NB	
43	3015402300	VALVE WATER AS	1	FR-S660CW	
44	3014461510	PIPE WICON AS	1	TSW OD4.76XT0.7	
45	3012021700	FIXTURE MOTR	1	PP	
46	3015916100	MOTOR C FAN AS	1	DC-2213DWCA-3	
47	3018500300	M/BELL B	1	PP	
48	3018500200	M/BELL A	1	PP	
49	3011834700	FAN	1	ABS OD3.17XD150	
50	3011200500	CLAMP FAN	1	SUS 304	
51	3016808100	DRYER AS	1	C1220T-M OD19.05XL135	
52	3011497000	COVER MACH ROOM AS	1	SBHG T0.35	
53	7112401211	SCREW TAPPING	7	T1 TRS 4X12 MFZN	
54	3012214100	FRAME CHECK VALVE AS	1	FRU-571I	
55	3012023700	FIXTURE MOTOR S3	1	PP(NATURAL)	
56	3010107100	ABSORBER MOTOR	2	NBR	
57	3015916000	MOTOR R FAN AS	1	D4612AAA20	
58	3012023900	FIXTURE MOTOR S2	1	PP(NATURAL)	
59	3012023800	FIXTURE MOTOR S1	1	PP(NATURAL)	
60	3011835400	FAN R	1	ABS OD3.17XD110	
61	3011200510	CLAMP FAN	1	SUS 304	
62	3013357300	INSU DAMP AS	1	F-PS	
63	3011445200	COVER DAMP	1	HIPS	
64	3014807100	SENSOR R AS	1	PBN-43B	
65	3011445700	COVER R SENSOR	1	ABS+SPRAY	
66	3017906500	SOCKET R LAMP AS	1	250V/1A	
67	3013602500	LAMP	2	AC 240V 25W(S)	
68	7121300811	SCREW TAPPING	2	T2S PAN 3X8	
69	3015510800	WINDOW R LAMP	1	MIPS	
70	3016002720	SPECIAL CAP SCREW	2	SM18C	
71	3018128600	SWITCH LAMP *R	1	SPF101B-1D	
72	3017842800	SHELF R A AS	2	FRAME+PRINTED GLASS+FIX	
73	3017842500	SHELF WINE	1	GPPS	
74	3017842900	SHELF R B AS	1	FRAME+PRINTED GLASS+FIX	
75	3012514500	GUIDE CASE A *L AS	3	ABS	
76	3012514600	GUDIE CASE A *R AS	3	ABS	
77	7122401611	SCREW TAPPING	10	T2S TRS 4X16 MFZN	
78	3011446600	COVER VEGETB A	1	GPPS	

NO	PART CODE	PART NAME	Q'ty	SPECIFICATION	REMARK
79	3011114600	CASE VEGETB B AS	1	CASE+SILK+FRAME+KNOB	
80	3018701800	DEO ANTI AS	1	W40XT5XL40	
81	3011445900	COVER RETURN DUCT	1	PP	
82	3016767100	DAMPER AS	1	DU24-012	
83	3011450900	COVER DUCT CH RM AS	1	PP+SEAL	
84	3012529500	GUDIE CHANGE RM *L	1	ABS	
85	3012529600	GUDIE CHANGE RM *R	1	ABS	
86	3011446800	COVER CHANGE RM	1	GPPS	
87	3010548200	BOX CHANGE RM	1	HIPS	
88	3014806800	SENSOR M AS	1	PBN-43B	
89	3014700301	ROLLER A	2	PP(NATURAL)	
90	3016003700	SPECIAL WASHER	2	T1.0 OD20	
91	3016040000	SPECIAL SCREW D	2	4X8	
92	3001402500	COVER CONTL CH RM AS	1	COVER+FRONT PCB	
92-1	3011447500	COVER CONTL CH RM	1	HIPS	
92-2	3014533600	PLATE CONTL CH RM	1	PC T0.3	
92-3	30143D5360	PCB SUB FRONT AS	1		
92-4	7173300811	SCREW TAPPITE	4	TT2 BIN 3X8 MFZN	
93	3011115100	CASE CONTL CH RM AS	1	CASE+MAIN PCB	
93-1	3011186200	CASE CONTL CH RM	1	HIPS	
93-2	30143D5260	PCB SUB MAIN AS	1	FRU-541G	
94	3011115000	CASE CHANGE RM AS	1		
95	3011171310	CASE EGG AS	1	CASE+VINYL	
96	3018201000	TANK WATER AS	1	FRU-541D	
97	3017053500	EVA AS	1	FRU-571I	
97-1	3012818300	HEATER SHEATH AS	1	AC220V/ 192W	
97-2	3014806900	SENSOR D AS	1	PBN-43	
97-3	3012023600	FIXTURE D SENS	1	PP	
97-4	301720200	FUSE TEMP AS	1	AC250V 10A 77C	
97-5	4017Z90590	FIXTURE FUSE TEMP	1	PP	
98	3012529000	GUIDE DRN	1	GA	
99	7122401211	SCREW TAPPING	1	T2S TRS 4X12 MFZN	
100	3012007800	FIXTURE MOTOR A	1	HIPS	
101	3010107100	ABSORBER MOTOR	2	NBR	
102	3015915900	MOTOR F FAN	1	D4612AAA21	
103	3018921300	LOUVER F A	1	ABS	
104	3011834500	FAN	1	ABS OD3.17XD130	
105	3011200510	CLAMP FAN	1	SUS 304	
106	7122401611	SCREW TAPPING	3	T2S TRS 4X16 MFZN	


NO	PART CODE	PART NAME	Q'ty	SPECIFICATION	REMARK
107	3010968600	CAP F LOUVER B	2	HIPS	
108	3018921500	LOUVER F B AS	1	HIPS	
109	3011443200	COVER F RETURN	1	HIPS	
110	7122401611	SCREW TAPPING	1	T2S TRS 4X16 MFZN	
111	3010924600	CAP F LOUVER	2	HIPS	
112	3012013200	FIXTURE C	2	PP	
113	3012205600	FRAME ICE MAKER	1	HIPS	
114	3000025920	ASSY ICE MAKER	1	FRU-541D(R600A)	
115	3012517800	GUIDE G/MOTR BRKT *L	1	ABS	
116	3012517900	GUIDE G/MOTR BRKT *R	1	ABS	
117	3010658100	BRACKET G/MOTR AS	1	FRS-541D	
118	3012520510	GUIDE ICE CRUSHER *L	1	ABS	
119	3012517710	GUIDE ICE CRUSHER *R	1	ABS	
120	3011115200	CASE ICE CRUSHER AS	1	FRU-541D	
121	3001401700	COVER F FAN AS	1	FRU-571I	
122	3014531900	PLATE F LAMP	1	SGCC T0.8	
123	3017906600	SOCKET F LAMP AS	1	250V 1A	
124	3013602500	LAMP	1	240V 25W	
125	7112401211	SCREW TAPPING	1	T1 TRS 4X12 MFZN	
126	3015510700	WINDOW F LAMP	1	MIPS	
127	3016002720	SPECIAL CAP SCREW	2	SM18C	
128	3014807000	SENSOR F AS	1	PT-38	
129	3011442600	COVER F SENS	1	ABS	
130	3018128500	SWITCH LAMP *L	1	SPF101B-2D	
131	3017842600	SHELF F AS	3	FRAME+PRINTED GLASS+FIX	
132	3011114800	CASE F A AS	1	CASE+SILK+FRAME	
133	3012529700	GUIDE CASE C *L AS	1	ABS	
134	3012529800	GUIDE CASE C *R AS	1	ABS	
135	3011114900	CASE F B AS	1	CASE+SILK+FRAME	
136	3019026700	POCKET F *T	1	HIPS+SILK	
137	3019027400	POCKET F AS	3	BASE+DECO+SILK	
138	3000060410	ASSY F DR	1	FRU-541D	
138-1	3010964600	CAP ICE PATH FRAME	1	HIPS	
138-2	3012318800	GASKET F DR AS	1	PVC	
138-3	3000003700	ASSY F DR URT	1	FRU-541D	
139	3012641500	HANDLE AS	1	FRU-571I	
140	3016002700	SPECIAL SCREW	2	WASR+TRS5X16 MFZN	
141	3010339500	BASE HANDLE *T	1	HIPS	
142	3010339600	BASE HANDLE *U	1	HIPS	

NO	PART CODE	PART NAME	Q'ty	SPECIFICATION	REMARK
143	7112401211	SCREW TAPPING	8	T1 TRS 4*12 MFZN	
144	3011446400	COVER HNDL DECO *T	1	ABS+SPRAY	
145	3011446500	COVER HNDL DECO *U	1	ABS+SPRAY	
146	3017903702	SOCKET DISP LAMP AS	1	250V 1A 14BASE	
147	3013600020	LAMP	1	240V/15W(E14,CC5A)	
148	3010544000	BOX DISPNS ICE SHUT AS	1	FRU-541D	
149	3011494700	COVER DISPNS BOX AS	1	FRU-541D	
149-1	7173300811	SCREW TAPPITE	7	TT2 BIN 3X8 MFZN	
149-2	30143D5160	PCB FRONT AS	1	FRU-541D	
149-3	3016304700	BUTTON CONTROL A	1	ABS+AL	
149-4	3016304800	BUTTON CONTROL B	2	ABS+AL	
149-5	3015510900	WINDOW F PCB	1	PMMA	
149-6	3011446300	COVER DISPNS BOX	1	ABS+SPRAY	
149-7	3011636900	DECO DISPNS COVR	1	ABS+AL	
149-8	3014235100	PANEL F PCB	1	ABS+SPRAY	
150	3015102200	SPRING ICE D/LEVER	1	SUS	
151	3011495300	COVER ICE FLAP AS	1	FRU-541D	
152	3012019700	FIXTURE ICE SHUT LVR	1	SUS	
153	3015402000	VALVE SOL DISP	1	CUBE SN8	
154	3018125800	SWITCH MICRO	1	VP333A-2D	
155	3012213200	FRAME DISPNS BUTTON	1	ABS	
156	3016304600	BUTTON DISPNS	1	SILICON	
157	3012406900	GRILL DISPENSER	1	ABS	
158	3019027500	POCKET DAIRY AS	1	POCKET+COVER	
159	3019027200	POCKET R *M AS	2	BASE+DECO+SILK	
160	3019027300	POCKET R *S AS	2	BASE+DECO+SILK	
161	3000060500	ASSY R DR	1	FRU-571I	
161-1	3012318900	GASKET R DR AS	1	PVC	
161-2	3000058000	ASSY R DR URT	1	FRU-571I	




12-4. FRS(N)-U20FA


**CABINET**

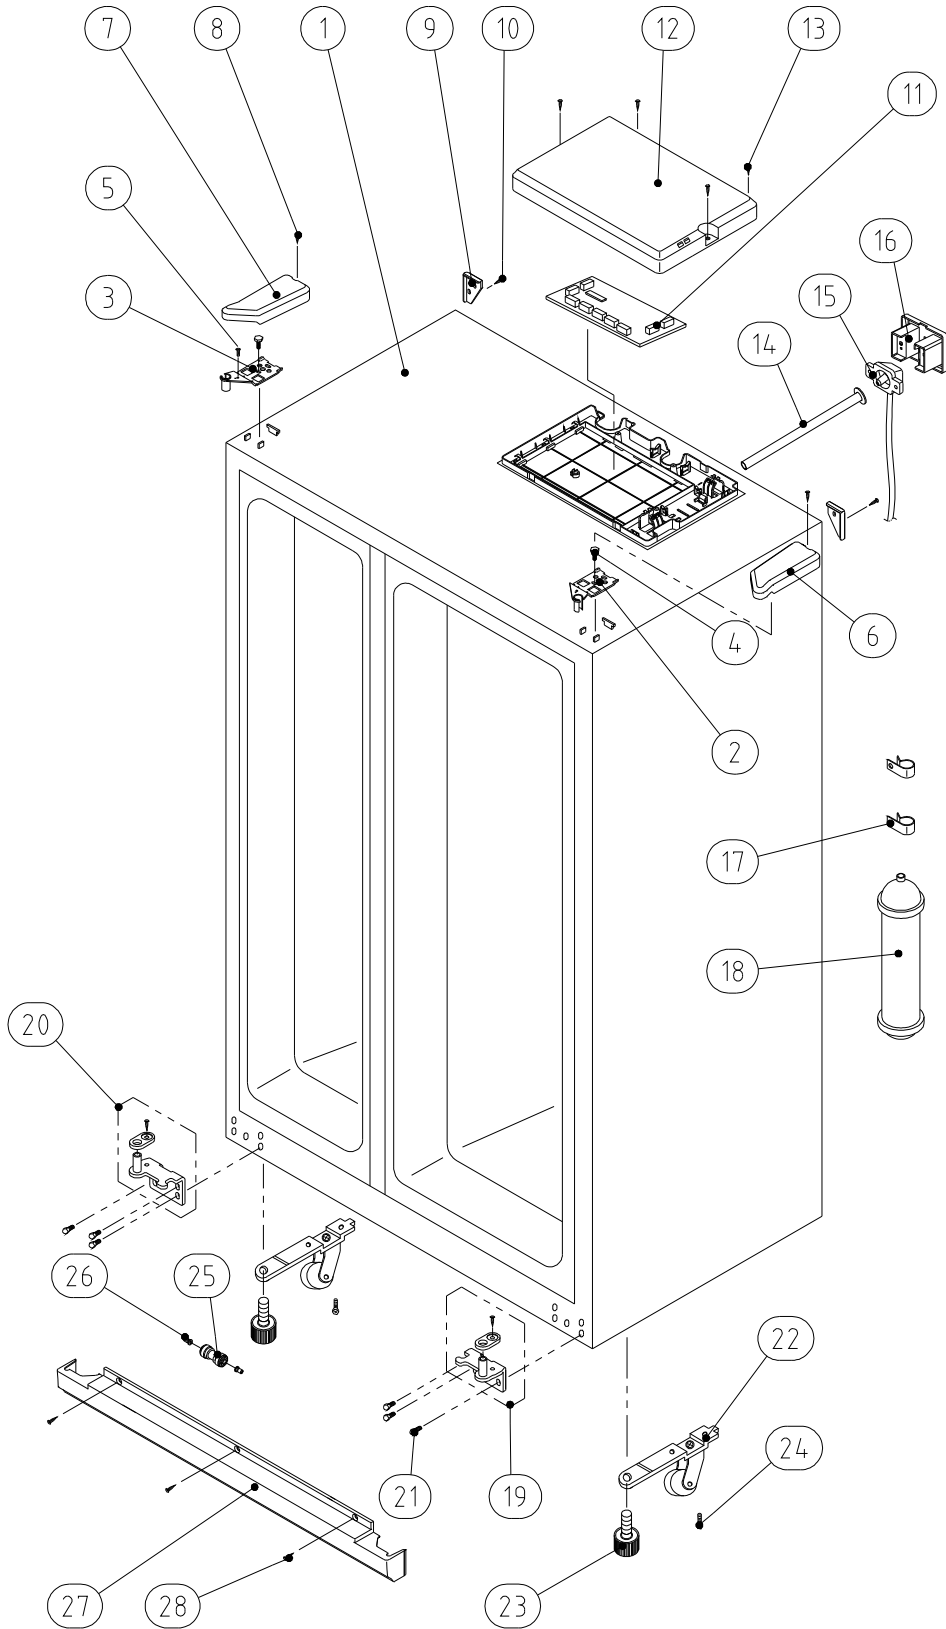


**MECH ROOM**

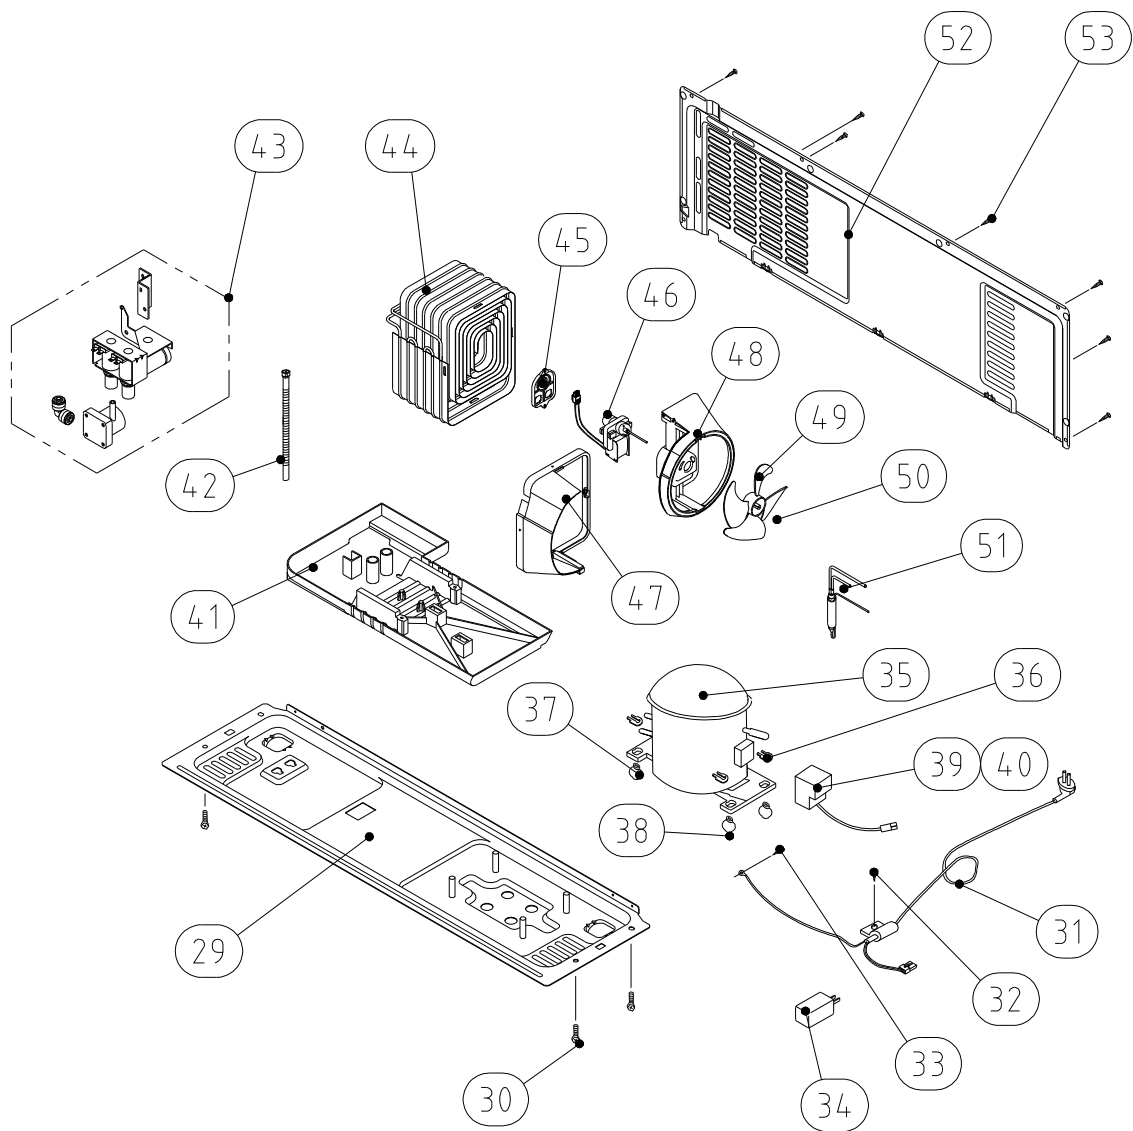


**R ROOM**

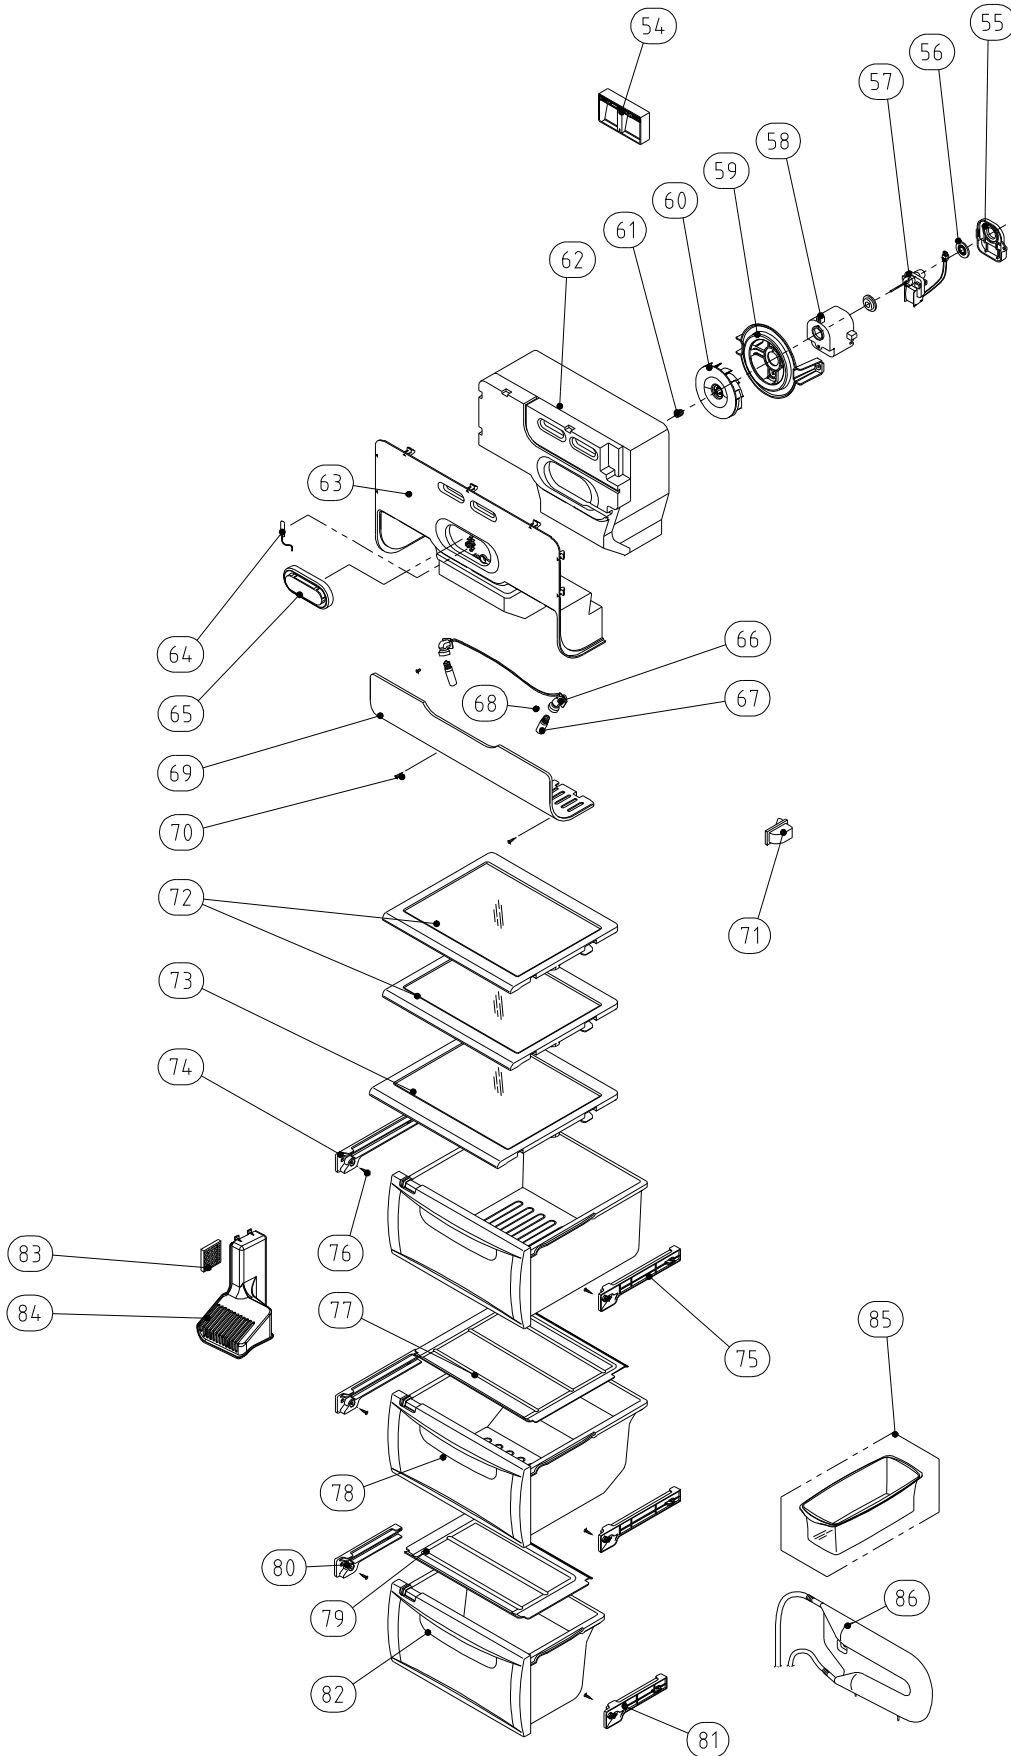


# F ROOM

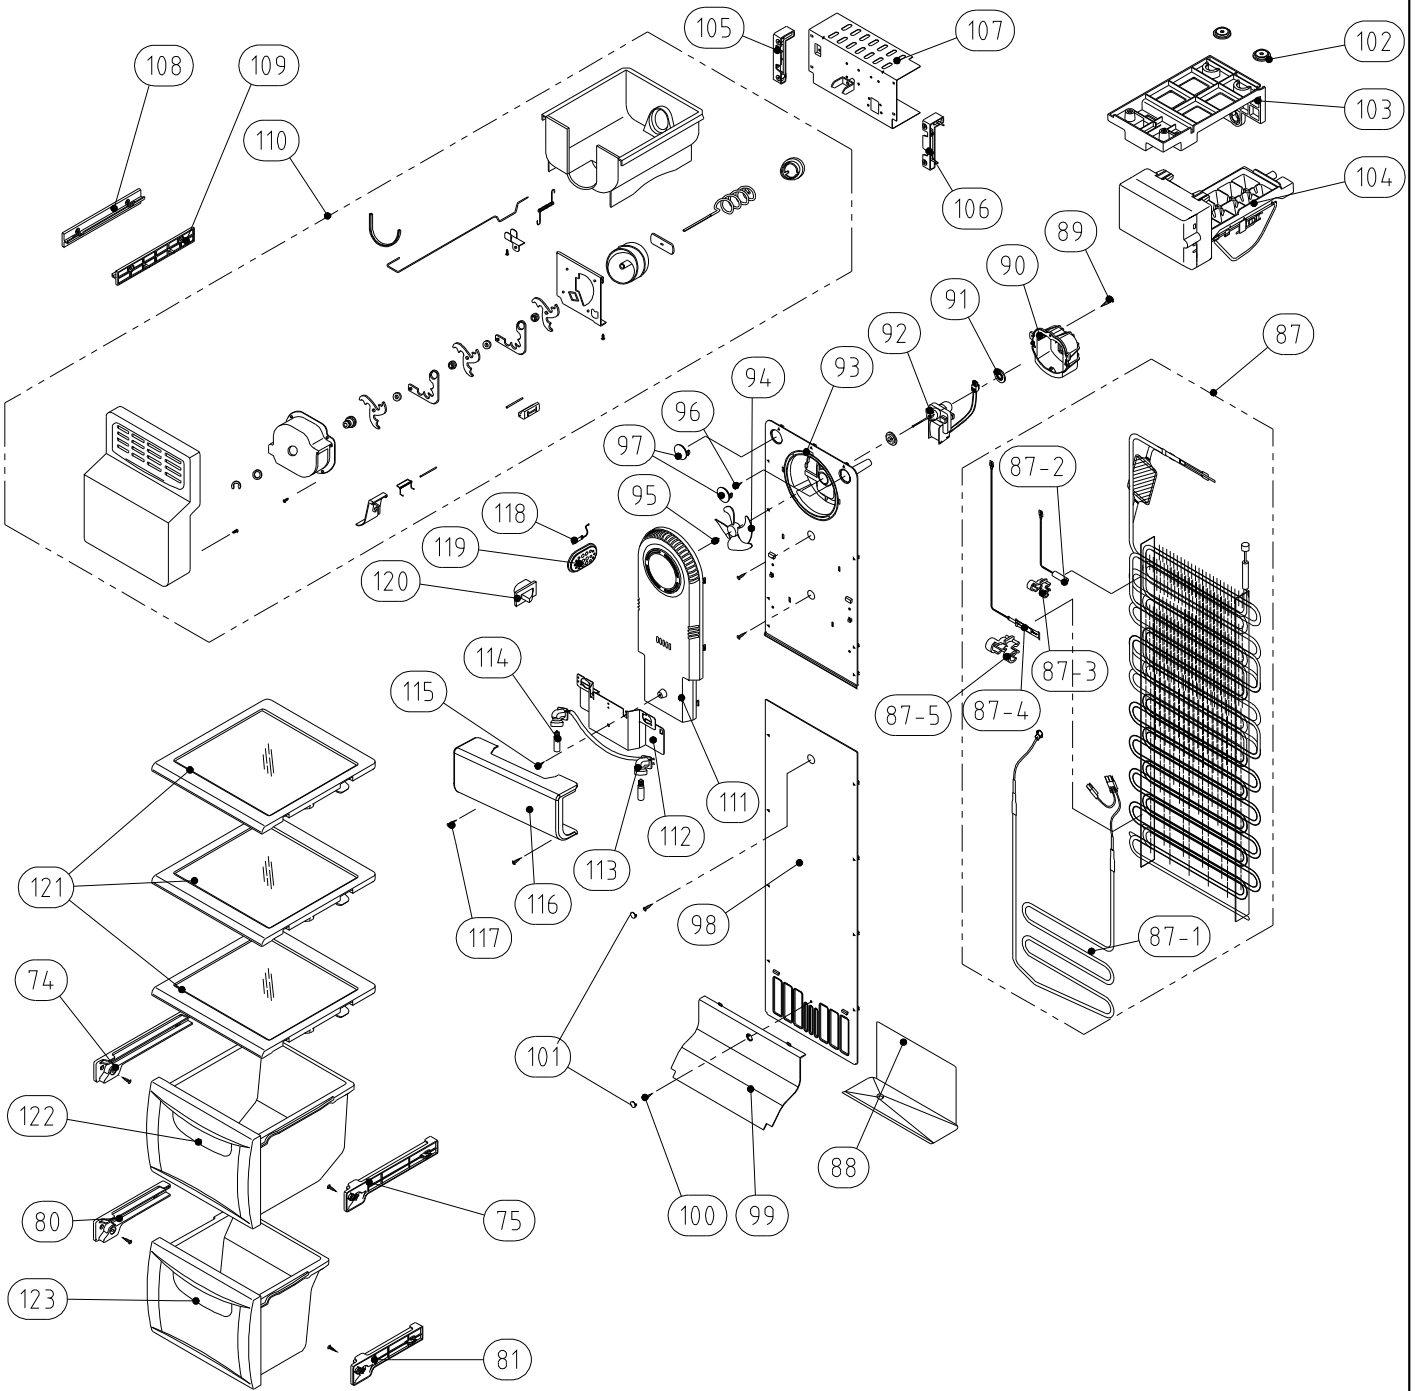

# F DOOR

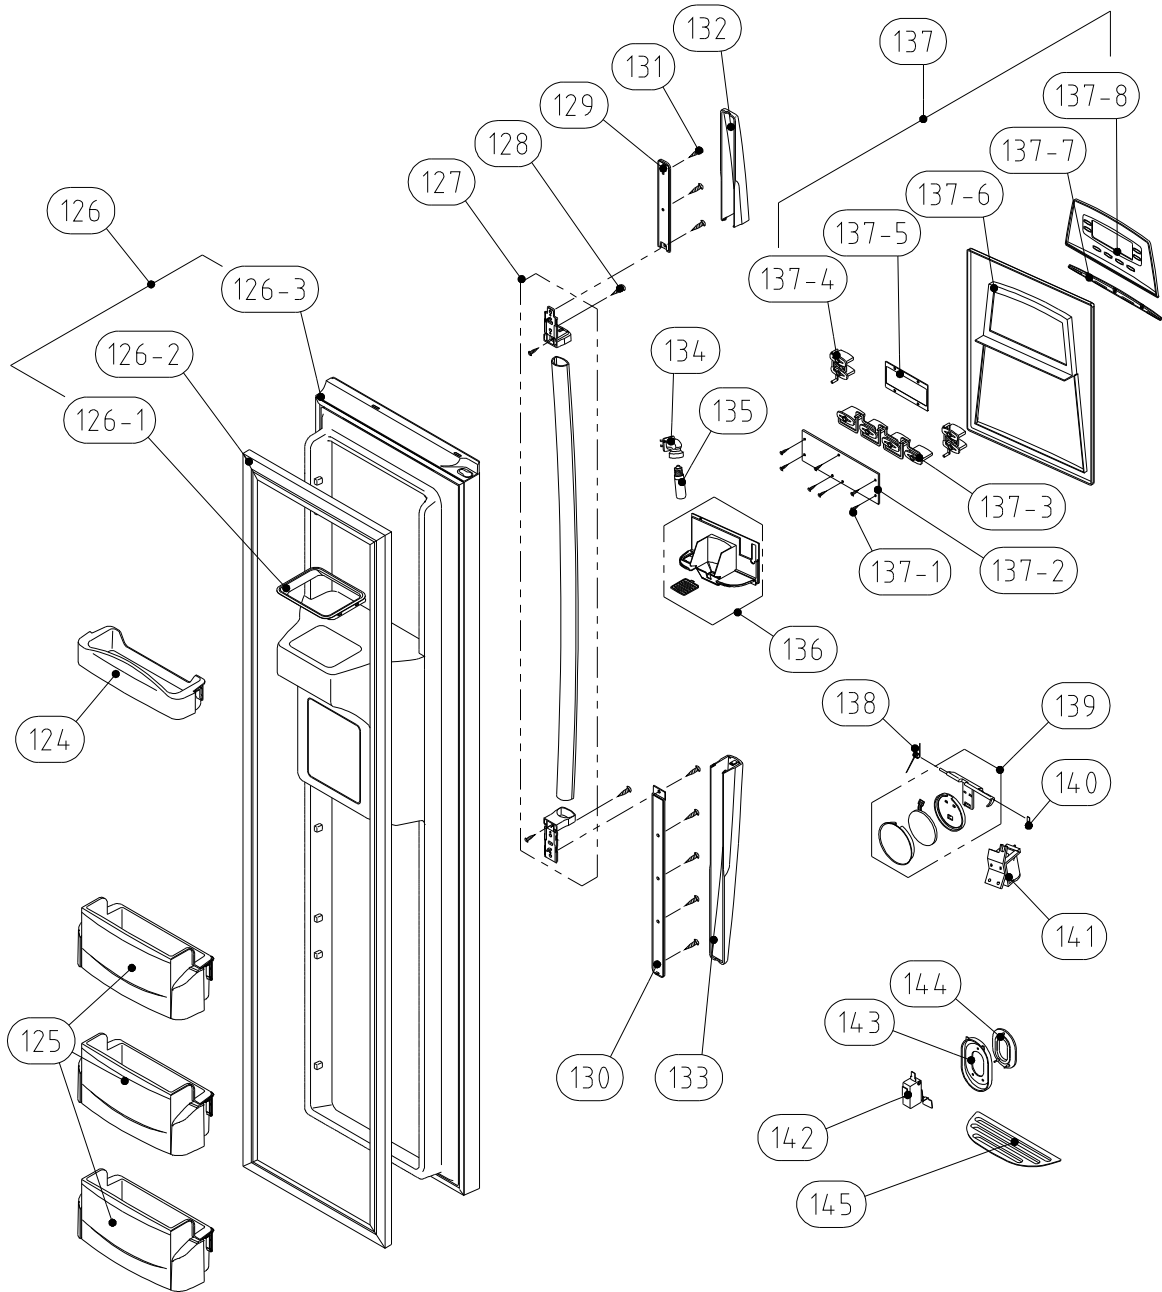

# R DOOR

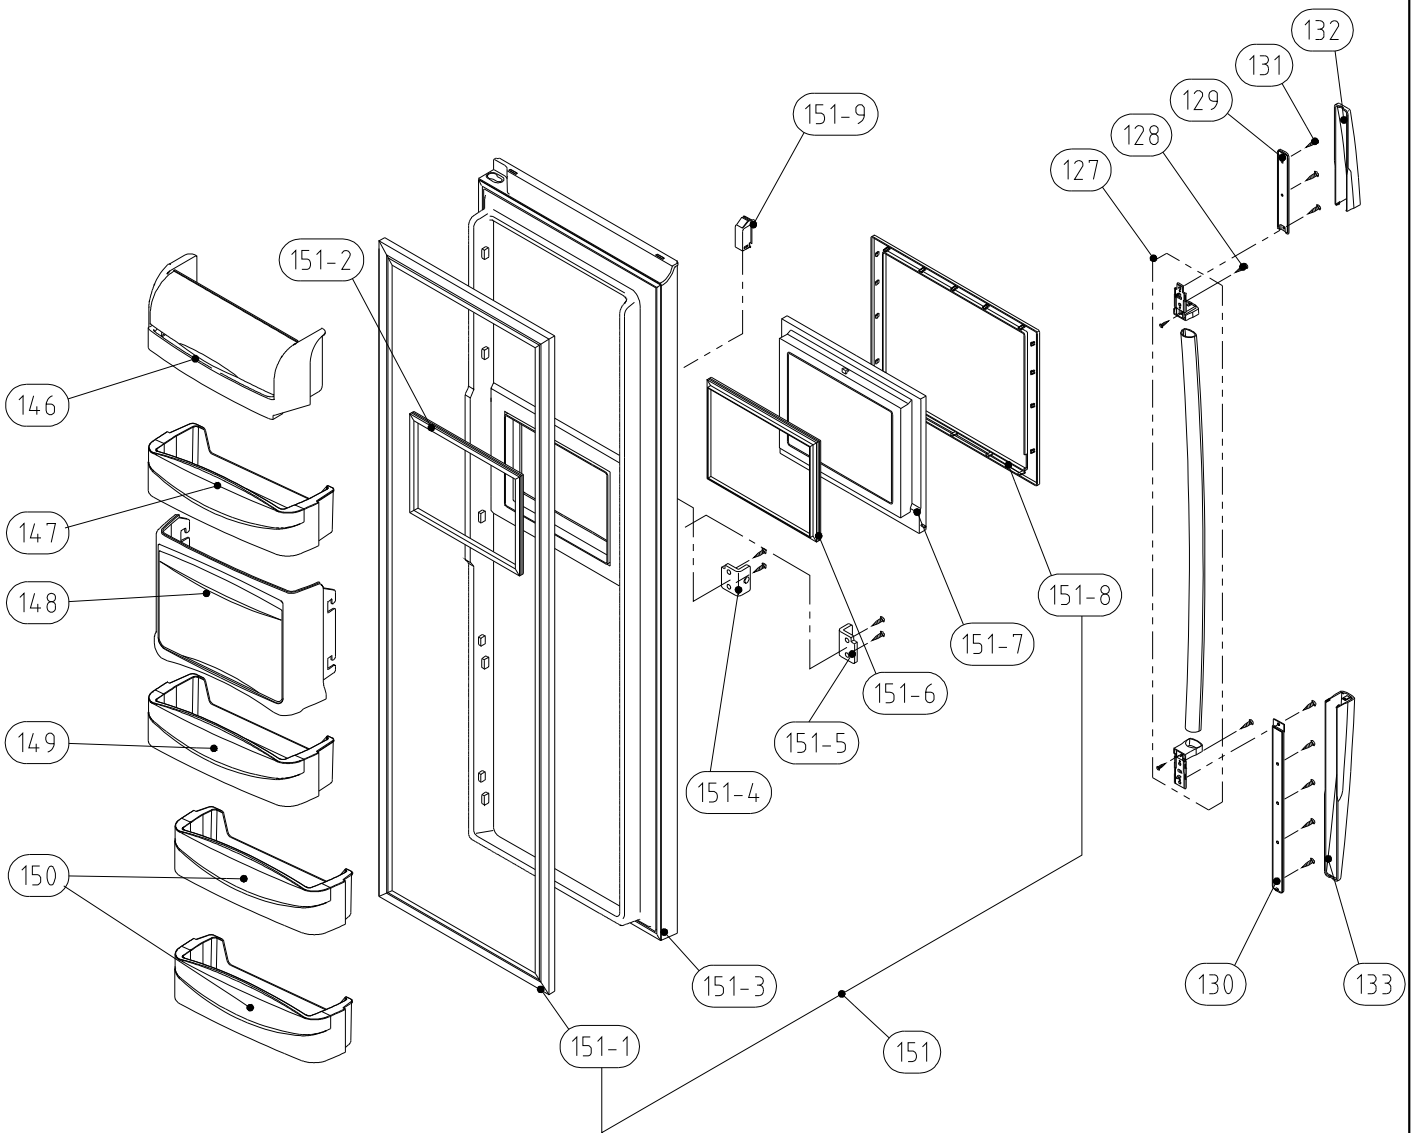

NO	PART CODE	PART NAME	Q'ty	SPECIFICATION	REMARK
1	3000057710	ASSY CAB URT	1	FRU-541D	
2	3012924400	HINGE *T *R AS	1	PO T3.0+PAINT	
3	3012924300	HINGE *T *L AS	1	PO T3.0+PAINT	
4	3016042300	SPECIAL *T HI BOLT	2	6X13 SWCH18A	
5	7051401065	SCREW MACHINE	1	PAN 4X10 SW BSNI	
6	3011446200	COVER *T HI *R	1	PP	
7	3011446100	COVER *T HI *L	1	PP	
8	7112401211	SCREW TAPPING	2	T1 TRS 4X12 MFZN	
9	3010968400	CAP CAB COVER	2	PP	
10	7112401211	SCREW TAPPING	2	T1 TRS 4X12 MFZN	
11	30143D5060	PCB MAIN AS	1	FRU-541D	
12	3011446000	COVER MAIN PCB BOX	1	PP(V-235)	
13	7112401211	SCREW TAPPING	4	T1 TRS 4X12 MFZN	
14	3013224800	HOSE ICE MAKER TUBE AS	1	FRU-541D	
15	3012530200	GUIDE CAB W/TUBE A AS	1	FRU-541D	
16	3011444100	COVER GUIDE CAB W/T A	1	HIPS	
17	3011202000	CLAMP WATER TUBE A	4	PA-66, 5N	
18	3019974800	S/PAER FILTER WATER AS	1	FR-S660CW	
19	3012924000	HINGE *U *R AS	1	P/O T5.0 + PAINT	
20	3012923900	HINGE *U *L AS	1	P/O T5.0 + PAINT	
21	3016001240	SPECIAL BOLT *T	6	6X22 SWCH22A(YL)	
22	3010657200	BRACKET ADJ FOOT	2	SPCC T3.0	
23	3012105100	FOOT ADJ AS	2	PP	
24	3016001240	SPECIAL BOLT *T	2	6X22 SWCH22A(YL)	
25	3013064200	HOLDER TUBE A	1	ACETAL	
26	3012019500	FIXTURE TUBE FIT B	2	PP	
27	3011447200	COVER CAB BRKT	1	PP	
28	7142401511	SCREW TAPPING	3	T2 TRS 4X16 MFZN	
29	3010340400	BASE COMP AS	1	FRU-571I	
30	3016003300	SPEICAL BOLT	4	T2 M6.5X20	
31	3011346700	CORD POWER AS	1	FRU-571I	
32	7112401211	SCREW TAPPING	1	T1 TRS 4X12 MFZN	
33	7051401065	SCREW MACHINE	1	PAN 4X10 SW BSNI	
34	3016401920	CAPACITOR RUN	1	400VAC 5UF	
35	3956145250	COMP	1	MK4A5Q-R1U	
36	3016002500	SPECIAL WASHER	4	SK-5, T0.8	
37	3010101600	RUBBER ABSORBER COMP	2	NBR	
38	3010101480	ABSORBER COMP AS	2	FRU-541D	
39	3018129600	SWITCH P RELAY AS	1	265RHB,330	

NO	PART CODE	PART NAME	Q'ty	SPECIFICATION	REMARK
40	3811402200	COVER RELAY	1	MK4A5Q-R1U S/S (R600A)	
41	3011181300	CASE VAPORI AS	1	PP	
42	3013201710	HOSE DRN B	1	PE FRB-5970NB	
43	3015402300	VALVE WATER AS	1	FR-S660CW	
44	3014461510	PIPE WICON AS	1	TSW OD4.76XT0.7	
45	3012021700	FIXTURE MOTR	1	PP	
46	3015916100	MOTOR C FAN AS	1	DC-2213DWCA-3	
47	3018500300	M/BELL B	1	PP	
48	3018500200	M/BELL A	1	PP	
49	3011834700	FAN	1	ABS OD3.17XD150	
50	3011200500	CLAMP FAN	1	SUS 304	
51	3016808100	DRYER AS	1	C1220T-M OD19.05XL135	
52	3011497000	COVER MACH ROOM AS	1	SBHG T0.35	
53	7112401211	SCREW TAPPING	7	T1 TRS 4X12 MFZN	
54	3012214100	FRAME CHECK VALVE AS	1	FRU-571I	
55	3012023700	FIXTURE MOTOR S3	1	PP(NATURAL)	
56	3010107100	ABSORBER MOTOR	2	NBR	
57	3015916000	MOTOR R FAN AS	1	D4612AAA20	
58	3012023900	FIXTURE MOTOR S2	1	PP(NATURAL)	
59	3012023800	FIXTURE MOTOR S1	1	PP(NATURAL)	
60	3011835400	FAN R	1	ABS OD3.17XD110	
61	3011200510	CLAMP FAN	1	SUS 304	
62	3013357300	INSU DAMP AS	1	F-PS	
63	3011445200	COVER DAMP	1	HIPS	
64	3014807100	SENSOR R AS	1	PBN-43B	
65	3011445700	COVER R SENSOR	1	ABS+SPRAY	
66	3017906500	SOCKET R LAMP AS	1	250V/1A	
67	3013602500	LAMP	2	AC 240V 25W(S)	
68	7121300811	SCREW TAPPING	2	T2S PAN 3X8	
69	3015510800	WINDOW R LAMP	1	MIPS	
70	3016002720	SPECIAL CAP SCREW	2	SM18C	
71	3018128600	SWITCH LAMP *R	1	SPF101B-1D	
72	3017842800	SHELF R A AS	2	FRAME+PRINTED GLASS+FIX	
73	3017842900	SHELF R B AS	1	FRAME+PRINTED GLASS+FIX	
74	3012514500	GUIDE CASE A *L AS	3	ABS	
75	3012514600	GUDIE CASE A *R AS	3	ABS	
76	7122401611	SCREW TAPPING	10	T2S TRS 4X16 MFZN	
77	3011446600	COVER VEGETB A	1	GPPS	
78	3011114600	CASE VEGETB B AS	1	CASE+SILK+FRAME+KNOB	




NO	PART CODE	PART NAME	Q'ty	SPECIFICATION	REMARK
79	3011446700	COVER VEGETB CASE B	1	GPPS	
80	3012529700	GUIDE CASE C *L AS	2	ABS	
81	3012529800	GUIDE CASE C *R AS	2	ABS	
82	3011114700	CASE VEGETB C AS	1	CASE+SILK+FRAME+KNOB	
83	3018701800	DEO ANTI AS	1	W40XT5XL40	
84	3011445900	COVER RETURN DUCT	1	PP	
85	3011171310	CASE EGG AS	1	CASE+VINYL	
86	3018201000	TANK WATER AS	1	FRU-541D	
87	3017053500	EVA AS	1	FRU-571I	
87-1	3012818300	HEATER SHEATH AS	1	AC220V/ 192W	
87-2	3014806900	SENSOR D AS	1	PBN-43	
87-3	3012023600	FIXTURE D SENS	1	PP	
87-4	301720200	FUSE TEMP AS	1	AC250V 10A 77C	
87-5	4017Z90590	FIXTURE FUSE TEMP	1	PP	
88	3012529000	GUIDE DRN	1	GA	
89	7122401211	SCREW TAPPING	1	T2S TRS 4X12 MFZN	
90	3012007800	FIXTURE MOTOR A	1	HIPS	
91	3010107100	ABSORBER MOTOR	2	NBR	
92	3015915900	MOTOR F FAN	1	D4612AAA21	
93	3018921300	LOUVER F A	1	ABS	
94	3011834500	FAN	1	ABS OD3.17XD130	
95	3011200510	CLAMP FAN	1	SUS 304	
96	7122401611	SCREW TAPPING	3	T2S TRS 4X16 MFZN	
97	3010968600	CAP F LOUVER B	2	HIPS	
98	3018921500	LOUVER F B AS	1	HIPS	
99	3011443200	COVER F RETURN	1	HIPS	
100	7122401611	SCREW TAPPING	1	T2S TRS 4X16 MFZN	
101	3010924600	CAP F LOUVER	2	HIPS	
102	3012013200	FIXTURE C	2	PP	
103	3012205600	FRAME ICE MAKER	1	HIPS	
104	3000025920	ASSY ICE MAKER	1	FRU-541D(R600A)	
105	3012517800	GUIDE G/MOTR BRKT *L	1	ABS	
106	3012517900	GUIDE G/MOTR BRKT *R	1	ABS	
107	3010658100	BRACKET G/MOTR AS	1	FRS-541D	
108	3012520510	GUIDE ICE CRUSHER *L	1	ABS	
109	3012517710	GUIDE ICE CRUSHER *R	1	ABS	
110	3011115200	CASE ICE CRUSHER AS	1	FRU-541D	
111	3001401700	COVER F FAN AS	1	FRU-571I	
112	3014531900	PLATE F LAMP	1	SGCC T0.8	

NO	PART CODE	PART NAME	Q'ty	SPECIFICATION	REMARK
113	3017906600	SOCKET F LAMP AS	1	250V 1A	
114	3013602500	LAMP	1	240V 25W	
115	7112401211	SCREW TAPPING	1	T1 TRS 4X12 MFZN	
116	3015510700	WINDOW F LAMP	1	MIPS	
117	3016002720	SPECIAL CAP SCREW	2	SM18C	
118	3014807000	SENSOR F AS	1	PT-38	
119	3011442600	COVER F SENS	1	ABS	
120	3018128500	SWITCH LAMP *L	1	SPF101B-2D	
121	3017842600	SHELF F AS	3	FRAME+PRINTED GLASS+FIX	
122	3011114800	CASE F A AS	1	CASE+SILK+FRAME	
123	3011114900	CASE F B AS	1	CASE+SILK+FRAME	
124	3019026700	POCKET F *T	1	HIPS+SILK	
125	3019027400	POCKET F AS	3	BASE+DECO+SILK	
126	3000060410	ASSY F DR	1	FRU-541D	
126-1	3010964600	CAP ICE PATH FRAME	1	HIPS	
126-2	3012318800	GASKET F DR AS	1	PVC	
126-3	3000003700	ASSY F DR URT	1	FRU-541D	
127	3012641500	HANDLE AS	1	FRU-571I	
128	3016002700	SPECIAL SCREW	2	WASR+TRS5X16 MFZN	
129	3010339500	BASE HANDLE *T	1	HIPS	
130	3010339600	BASE HANDLE *U	1	HIPS	
131	7112401211	SCREW TAPPING	8	T1 TRS 4*12 MFZN	
132	3011446400	COVER HNDL DECO *T	1	ABS+SPRAY	
133	3011446500	COVER HNDL DECO *U	1	ABS+SPRAY	
134	3017903702	SOCKET DISP LAMP AS	1	250V 1A 14BASE	
135	3013600020	LAMP	1	240V/15W(E14,CC5A)	
136	3010544000	BOX DISPNS ICE SHUT AS	1	FRU-541D	
137	3011494700	COVER DISPNS BOX AS	1	FRU-541D	
137-1	7173300811	SCREW TAPPITE	7	TT2 BIN 3X8 MFZN	
137-2	30143D5160	PCB FRONT AS	1	FRU-541D	
137-3	3016304700	BUTTON CONTROL A	1	ABS+AL	
137-4	3016304800	BUTTON CONTROL B	2	ABS+AL	
137-5	3015510900	WINDOW F PCB	1	PMMA	
137-6	3011446300	COVER DISPNS BOX	1	ABS+SPRAY	
137-7	3011636900	DECO DISPNS COVR	1	ABS+AL	
137-8	3014235100	PANEL F PCB	1	ABS+SPRAY	
138	3015102200	SPRING ICE D/LEVER	1	SUS	
139	3011495300	COVER ICE FLAP AS	1	FRU-541D	
140	3012019700	FIXTURE ICE SHUT LVR	1	SUS	


NO	PART CODE	PART NAME	Q'ty	SPECIFICATION	REMARK
141	3015402000	VALVE SOL DISP	1	CUBE SN8	
142	3018125800	SWITCH MICRO	1	VP333A-2D	
143	3012213200	FRAME DISPNS BUTTON	1	ABS	
144	3016304600	BUTTON DISPNS	1	SILICON	
145	3012406900	GRILL DISPENSER	1	ABS	
146	3019027500	POCKET DAIRY AS	1	POCKET+COVER	
147	3019027200	POCKET R *M AS	1	BASE+DECO+SILK	
148	3011187000	CASE H/BAR AS	1	CASE+DOOR	
149	3019027700	POCKET R *H AS	1	BASE+DECO+SILK	
150	3019027300	POCKET R *S AS	2	BASE+DECO+SILK	
151	3000060510	ASSY R DR	1		
151-1	3012318900	GASKET R DR AS	1	PVC	
151-2	3012319300	GASKET H/BAR B AS	1	PVC	
151-3	3000058010	ASSY R DR URT	1	FRU-541F	
151-4	3015204500	STOPPER H/BAR DR *R	1	PO T4.0	
151-5	3015204400	STOPPER H/BAR DR *L	1	PO T4.0	
151-6	3012319400	GASKET H/BAR A AS	1	PVC	
151-7	3011765000	DOOR H/BAR URT AS	1	FRU-541F	
151-8	3011497200	COVER FRAME H/BAR	1	ABS	
151-9	3018125600	SWITCH H/BAR DR AS	1	SP101B-2D1(T)	

12-5. FRS(N)-U20GA


**CABINET**

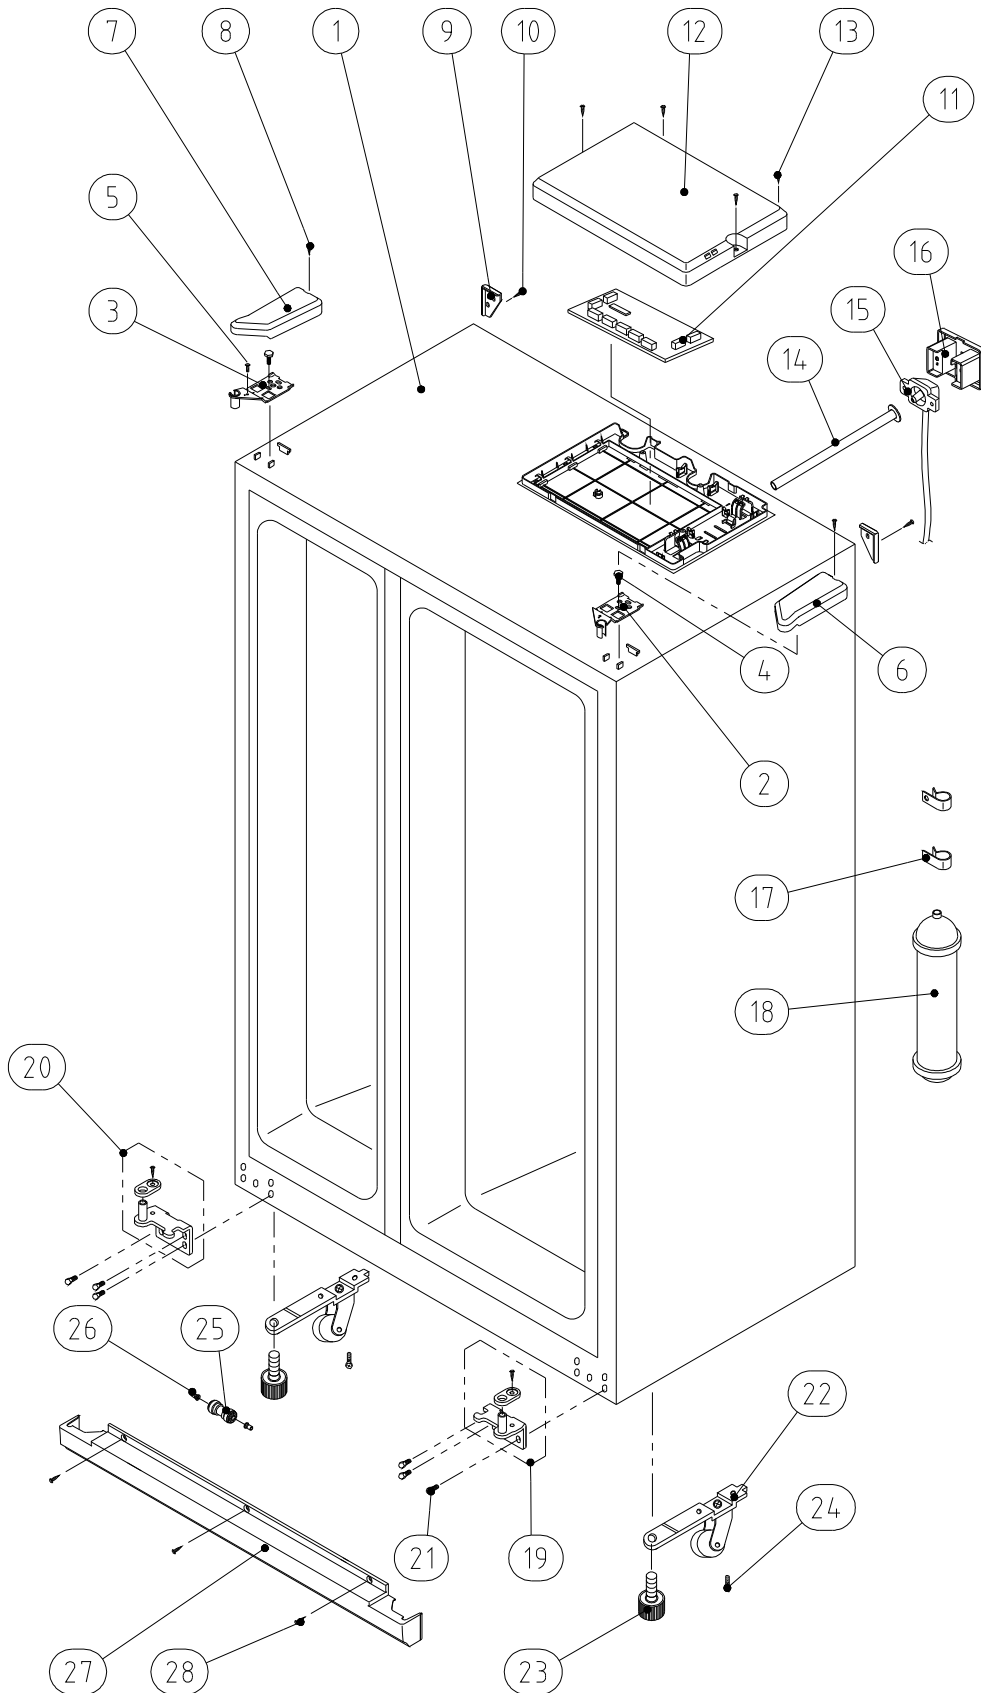


# MECH ROOM

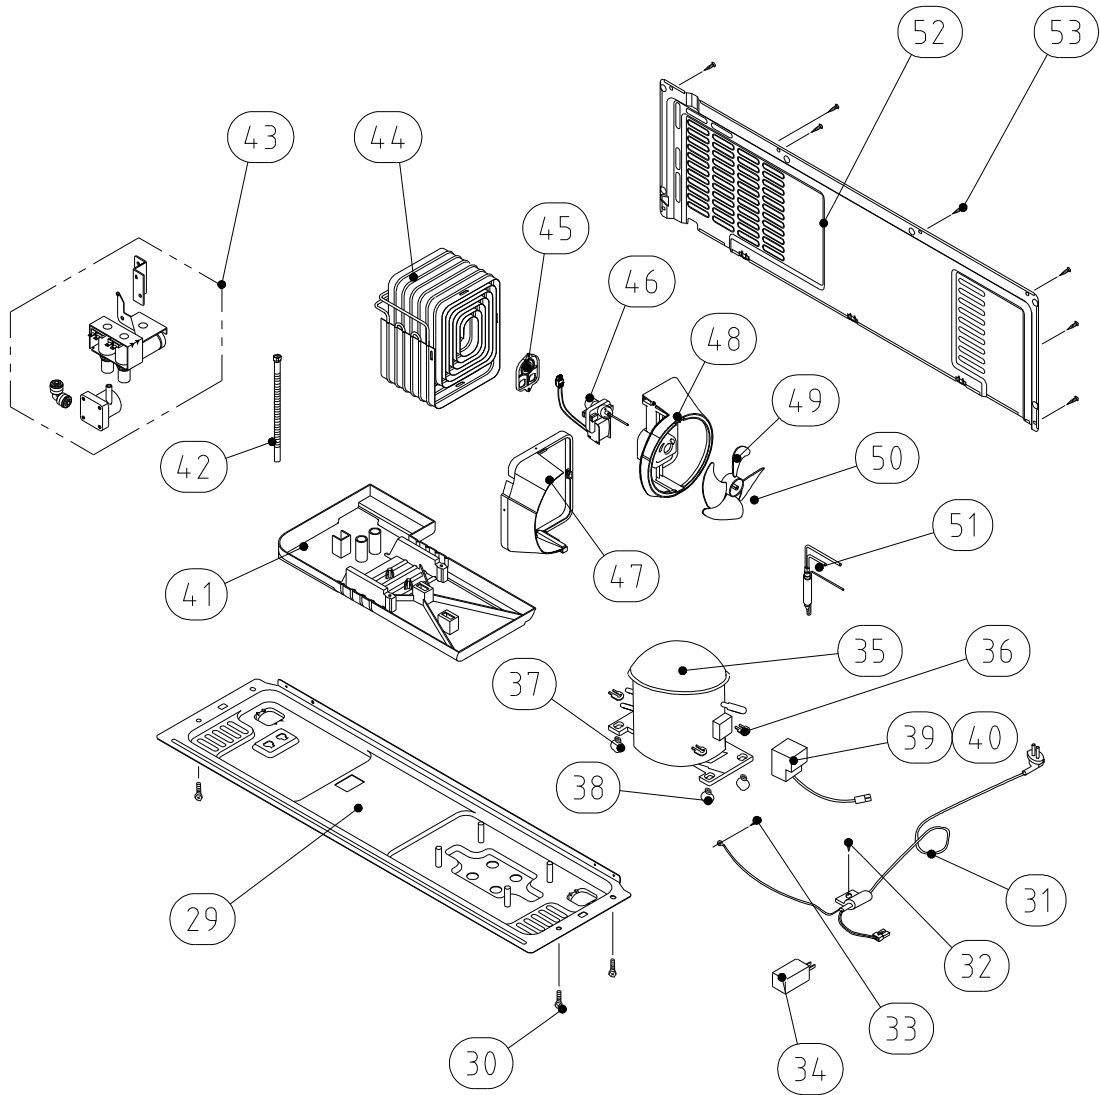


# R ROOM

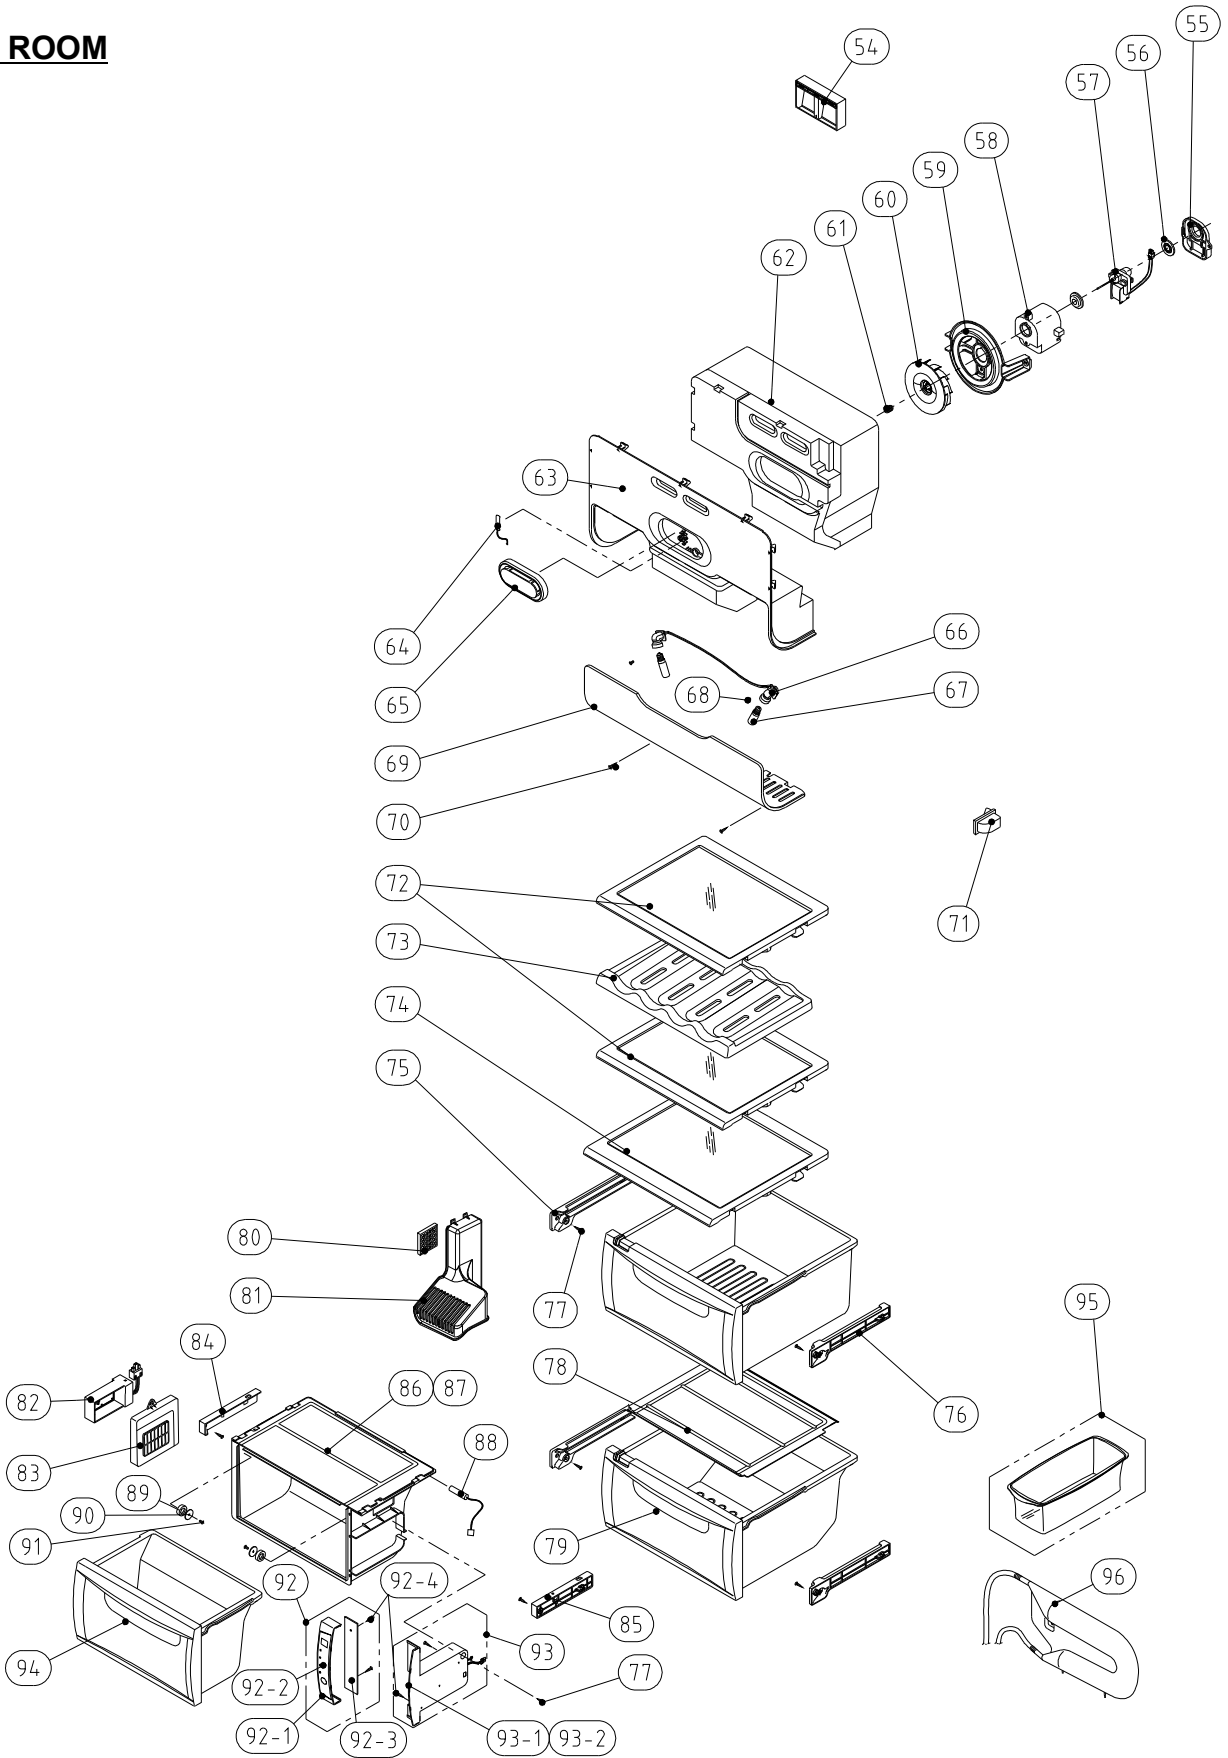

# F ROOM

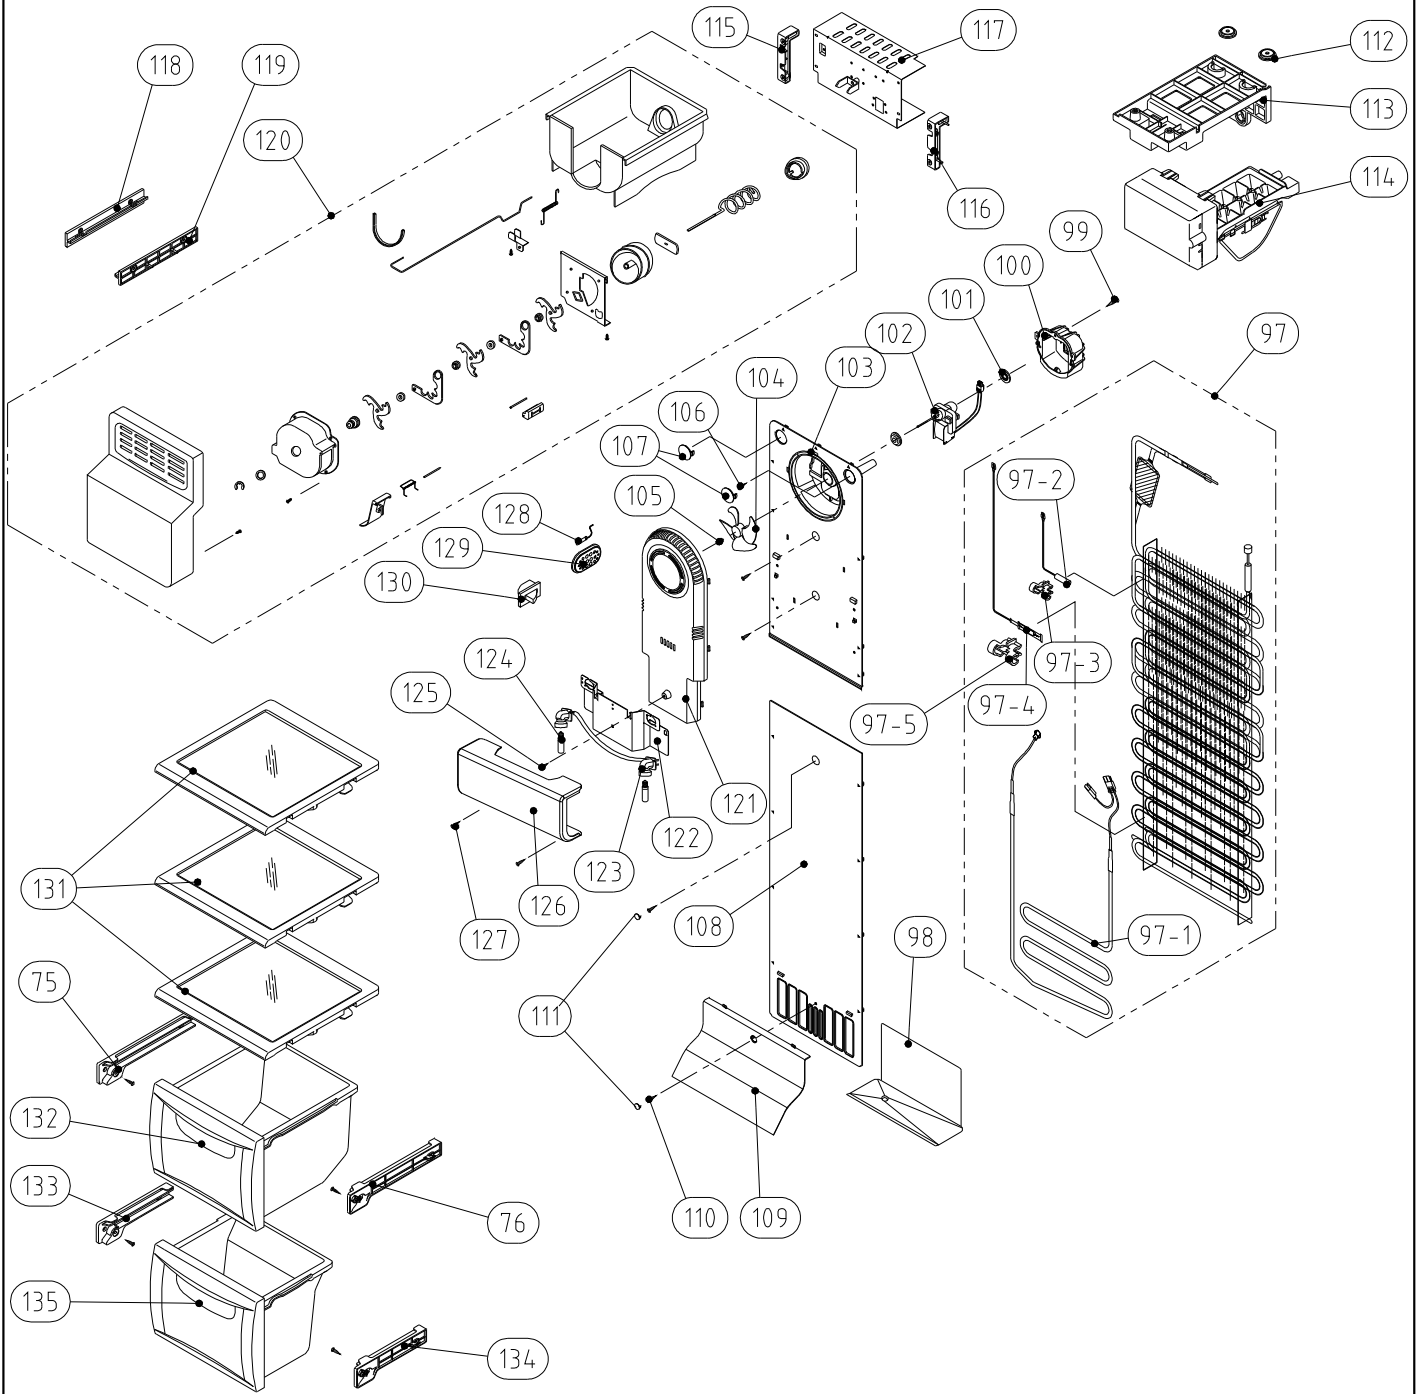


# F DOOR

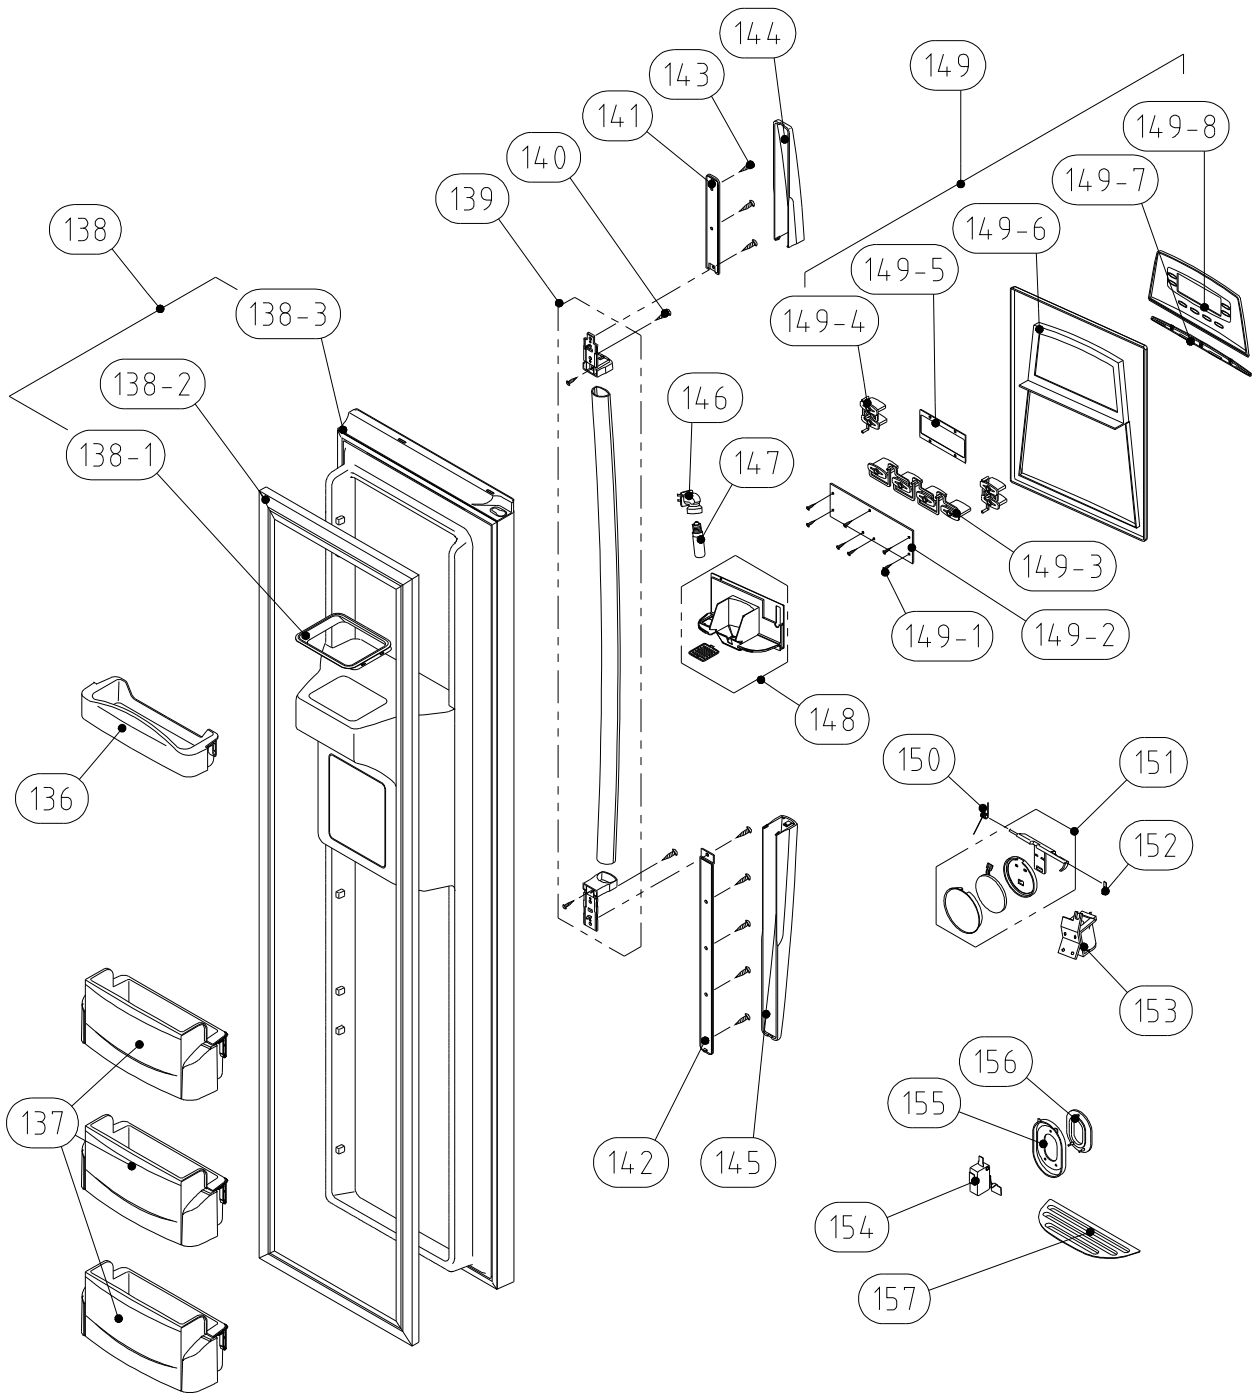



# R DOOR

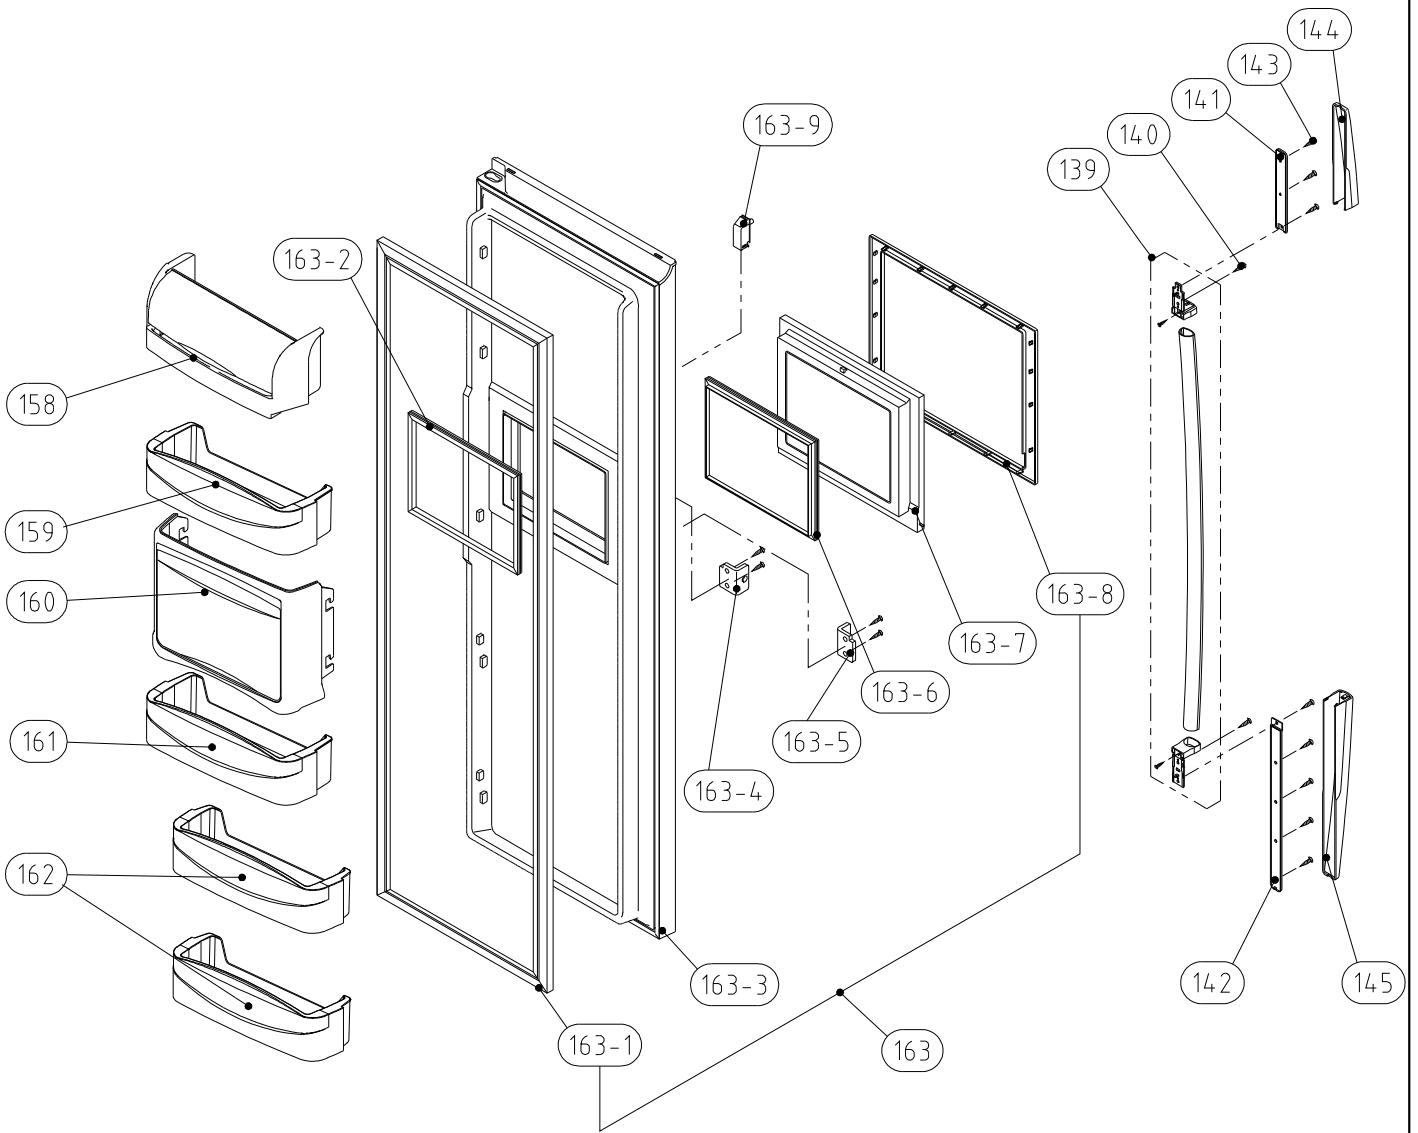

NO	PART CODE	PART NAME	Q'ty	SPECIFICATION	REMARK
1	3000057710	ASSY CAB URT	1	FRU-541D	
2	3012924400	HINGE *T *R AS	1	PO T3.0+PAINT	
3	3012924300	HINGE *T *L AS	1	PO T3.0+PAINT	
4	3016042300	SPECIAL *T HI BOLT	2	6X13 SWCH18A	
5	7051401065	SCREW MACHINE	1	PAN 4X10 SW BSNI	
6	3011446200	COVER *T HI *R	1	PP	
7	3011446100	COVER *T HI *L	1	PP	
8	7112401211	SCREW TAPPING	2	T1 TRS 4X12 MFZN	
9	3010968400	CAP CAB COVER	2	PP	
10	7112401211	SCREW TAPPING	2	T1 TRS 4X12 MFZN	
11	30143D5060	PCB MAIN AS	1	FRU-541D	
12	3011446000	COVER MAIN PCB BOX	1	PP(V-235)	
13	7112401211	SCREW TAPPING	4	T1 TRS 4X12 MFZN	
14	3013224800	HOSE ICE MAKER TUBE AS	1	FRU-541D	
15	3012530200	GUIDE CAB W/TUBE A AS	1	FRU-541D	
16	3011444100	COVER GUIDE CAB W/T A	1	HIPS	
17	3011202000	CLAMP WATER TUBE A	2	PA-66, 5N	
18	3019974800	S/PAER FILTER WATER AS	1	FR-S660CW	
19	3012924000	HINGE *U *R AS	1	P/O T5.0 + PAINT	
20	3012923900	HINGE *U *L AS	1	P/O T5.0 + PAINT	
21	3016001240	SPECIAL BOLT *T	6	6X22 SWCH22A(YL)	
22	3010657200	BRACKET ADJ FOOT	2	SPCC T3.0	
23	3012105100	FOOT ADJ AS	2	PP	
24	3016001240	SPECIAL BOLT *T	2	6X22 SWCH22A(YL)	
25	3013064200	HOLDER TUBE A	1	ACETAL	
26	3012019500	FIXTURE TUBE FIT B	2	PP	
27	3011447200	COVER CAB BRKT	1	PP	
28	7142401511	SCREW TAPPING	3	T2 TRS 4X16 MFZN	
29	3010340400	BASE COMP AS	1	FRU-571I	
30	3016003300	SPEICAL BOLT	4	T2 M6.5X20	
31	3011346700	CORD POWER AS	1	FRU-571I	
32	7112401211	SCREW TAPPING	1	T1 TRS 4X12 MFZN	
33	7051401065	SCREW MACHINE	1	PAN 4X10 SW BSNI	
34	3016401920	CAPACITOR RUN	1	400VAC 5UF	
35	3956145250	COMP	1	MK4A5Q-R1U	
36	3016002500	SPECIAL WASHER	4	SK-5, T0.8	
37	3010101600	RUBBER ABSORBER COMP	2	NBR	
38	3010101480	ABSORBER COMP AS	2	FRU-541D	
39	3018129600	SWITCH P RELAY AS	1	265RHB,330	

NO	PART CODE	PART NAME	Q'ty	SPECIFICATION	REMARK
40	3811402200	COVER RELAY	1	MK4A5Q-R1U S/S (R600A)	
41	3011181300	CASE VAPORI AS	1	PP	
42	3013201710	HOSE DRN B	1	PE FRB-5970NB	
43	3015402300	VALVE WATER AS	1	FR-S660CW	
44	3014461510	PIPE WICON AS	1	TSW OD4.76XT0.7	
45	3012021700	FIXTURE MOTR	1	PP	
46	3015916100	MOTOR C FAN AS	1	DC-2213DWCA-3	
47	3018500300	M/BELL B	1	PP	
48	3018500200	M/BELL A	1	PP	
49	3011834700	FAN	1	ABS OD3.17XD150	
50	3011200500	CLAMP FAN	1	SUS 304	
51	3016808100	DRYER AS	1	C1220T-M OD19.05XL135	
52	3011497000	COVER MACH ROOM AS	1	SBHG T0.35	
53	7112401211	SCREW TAPPING	7	T1 TRS 4X12 MFZN	
54	3012214100	FRAME CHECK VALVE AS	1	FRU-571I	
55	3012023700	FIXTURE MOTOR S3	1	PP(NATURAL)	
56	3010107100	ABSORBER MOTOR	2	NBR	
57	3015916000	MOTOR R FAN AS	1	D4612AAA20	
58	3012023900	FIXTURE MOTOR S2	1	PP(NATURAL)	
59	3012023800	FIXTURE MOTOR S1	1	PP(NATURAL)	
60	3011835400	FAN R	1	ABS OD3.17XD110	
61	3011200510	CLAMP FAN	1	SUS 304	
62	3013357300	INSU DAMP AS	1	F-PS	
63	3011445200	COVER DAMP	1	HIPS	
64	3014807100	SENSOR R AS	1	PBN-43B	
65	3011445700	COVER R SENSOR	1	ABS+SPRAY	
66	3017906500	SOCKET R LAMP AS	1	250V/1A	
67	3013602500	LAMP	2	AC 240V 25W(S)	
68	7121300811	SCREW TAPPING	2	T2S PAN 3X8	
69	3015510800	WINDOW R LAMP	1	MIPS	
70	3016002720	SPECIAL CAP SCREW	2	SM18C	
71	3018128600	SWITCH LAMP *R	1	SPF101B-1D	
72	3017842800	SHELF R A AS	2	FRAME+PRINTED GLASS+FIX	
73	3017842500	SHELF WINE	1	GPPS	
74	3017842900	SHELF R B AS	1	FRAME+PRINTED GLASS+FIX	
75	3012514500	GUIDE CASE A *L AS	3	ABS	
76	3012514600	GUDIE CASE A *R AS	3	ABS	
77	7122401611	SCREW TAPPING	10	T2S TRS 4X16 MFZN	
78	3011446600	COVER VEGETB A	1	GPPS	

NO	PART CODE	PART NAME	Q'ty	SPECIFICATION	REMARK
79	3011114600	CASE VEGETB B AS	1	CASE+SILK+FRAME+KNOB	
80	3018701800	DEO ANTI AS	1	W40XT5XL40	
81	3011445900	COVER RETURN DUCT	1	PP	
82	3016767100	DAMPER AS	1	DU24-012	
83	3011450900	COVER DUCT CH RM AS	1	PP+SEAL	
84	3012529500	GUDIE CHANGE RM *L	1	ABS	
85	3012529600	GUDIE CHANGE RM *R	1	ABS	
86	3011446800	COVER CHANGE RM	1	GPPS	
87	3010548200	BOX CHANGE RM	1	HIPS	
88	3014806800	SENSOR M AS	1	PBN-43B	
89	3014700301	ROLLER A	2	PP(NATURAL)	
90	3016003700	SPECIAL WASHER	2	T1.0 OD20	
91	3016040000	SPECIAL SCREW D	2	4X8	
92	3001402500	COVER CONTL CH RM AS	1	COVER+FRONT PCB	
92-1	3011447500	COVER CONTL CH RM	1	HIPS	
92-2	3014533600	PLATE CONTL CH RM AS	1	PC T0.3	
92-3	30143D5360	PCB SUB FRONT AS	1		
92-4	7173300811	SCREW TAPPITE	4	TT2 BIN 3X8 MFZN	
93	3011115100	CASE CONTL CH RM AS	1	CASE+MAIN PCB	
93-1	3011186200	CASE CONTL CH RM	1	HIPS	
93-2	30143D5260	PCB SUB MAIN AS	1	FRU-541G	
94	3011115000	CASE CHANGE RM AS	1		
95	3011171310	CASE EGG AS	1	CASE+VINYL	
96	3018201000	TANK WATER AS	1	FRU-541D	
97	3017053500	EVA AS	1	FRU-571I	
97-1	3012818300	HEATER SHEATH AS	1	AC220V/ 192W	
97-2	3014806900	SENSOR D AS	1	PBN-43	
97-3	3012023600	FIXTURE D SENS	1	PP	
97-4	301720200	FUSE TEMP AS	1	AC250V 10A 77C	
97-5	4017Z90590	FIXTURE FUSE TEMP	1	PP	
98	3012529000	GUIDE DRN	1	GA	
99	7122401211	SCREW TAPPING	1	T2S TRS 4X12 MFZN	
100	3012007800	FIXTURE MOTOR A	1	HIPS	
101	3010107100	ABSORBER MOTOR	2	NBR	
102	3015915900	MOTOR F FAN	1	D4612AAA21	
103	3018921300	LOUVER F A	1	ABS	
104	3011834500	FAN	1	ABS OD3.17XD130	
105	3011200510	CLAMP FAN	1	SUS 304	
106	7122401611	SCREW TAPPING	3	T2S TRS 4X16 MFZN	

NO	PART CODE	PART NAME	Q'ty	SPECIFICATION	REMARK
107	3010968600	CAP F LOUVER B	2	HIPS	
108	3018921500	LOUVER F B AS	1	HIPS	
109	3011443200	COVER F RETURN	1	HIPS	
110	7122401611	SCREW TAPPING	1	T2S TRS 4X16 MFZN	
111	3010924600	CAP F LOUVER	2	HIPS	
112	3012013200	FIXTURE C	2	PP	
113	3012205600	FRAME ICE MAKER	1	HIPS	
114	3000025920	ASSY ICE MAKER	1	FRU-541D(R600A)	
115	3012517800	GUIDE G/MOTR BRKT *L	1	ABS	
116	3012517900	GUIDE G/MOTR BRKT *R	1	ABS	
117	3010658100	BRACKET G/MOTR AS	1	FRS-541D	
118	3012520510	GUIDE ICE CRUSHER *L	1	ABS	
119	3012517710	GUIDE ICE CRUSHER *R	1	ABS	
120	3011115200	CASE ICE CRUSHER AS	1	FRU-541D	
121	3001401700	COVER F FAN AS	1	FRU-571I	
122	3014531900	PLATE F LAMP	1	SGCC T0.8	
123	3017906600	SOCKET F LAMP AS	1	250V 1A	
124	3013602500	LAMP	1	240V 25W	
125	7112401211	SCREW TAPPING	1	T1 TRS 4X12 MFZN	
126	3015510700	WINDOW F LAMP	1	MIPS	
127	3016002720	SPECIAL CAP SCREW	2	SM18C	
128	3014807000	SENSOR F AS	1	PT-38	
129	3011442600	COVER F SENS	1	ABS	
130	3018128500	SWITCH LAMP *L	1	SPF101B-2D	
131	3017842600	SHELF F AS	3	FRAME+PRINTED GLASS+FIX	
132	3011114800	CASE F A AS	1	CASE+SILK+FRAME	
133	3012529700	GUIDE CASE C *L AS	1	ABS	
134	3012529800	GUIDE CASE C *R AS	1	ABS	
135	3011114900	CASE F B AS	1	CASE+SILK+FRAME	
136	3019026700	POCKET F *T	1	HIPS+SILK	
137	3019027400	POCKET F AS	3	BASE+DECO+SILK	
138	3000060410	ASSY F DR	1	FRU-541D	
138-1	3010964600	CAP ICE PATH FRAME	1	HIPS	
138-2	3012318800	GASKET F DR AS	1	PVC	
138-3	3000003700	ASSY F DR URT	1	FRU-541D	
139	3012641500	HANDLE AS	1	FRU-571I	
140	3016002700	SPECIAL SCREW	2	WASR+TRS5X16 MFZN	
141	3010339500	BASE HANDLE *T	1	HIPS	
142	3010339600	BASE HANDLE *U	1	HIPS	

NO	PART CODE	PART NAME	Q'ty	SPECIFICATION	REMARK
143	7112401211	SCREW TAPPING	8	T1 TRS 4*12 MFZN	
144	3011446400	COVER HNDL DECO *T	1	ABS+SPRAY	
145	3011446500	COVER HNDL DECO *U	1	ABS+SPRAY	
146	3017903702	SOCKET DISP LAMP AS	1	250V 1A 14BASE	
147	3013600020	LAMP	1	240V/15W(E14,CC5A)	
148	3010544000	BOX DISPNS ICE SHUT AS	1	FRU-541D	
149	3011494700	COVER DISPNS BOX AS	1	FRU-541D	
149-1	7173300811	SCREW TAPPITE	7	TT2 BIN 3X8 MFZN	
149-2	30143D5160	PCB FRONT AS	1	FRU-541D	
149-3	3016304700	BUTTON CONTROL A	1	ABS+AL	
149-4	3016304800	BUTTON CONTROL B	2	ABS+AL	
149-5	3015510900	WINDOW F PCB	1	PMMA	
149-6	3011446300	COVER DISPNS BOX	1	ABS+SPRAY	
149-7	3011636900	DECO DISPNS COVR	1	ABS+AL	
149-8	3014235100	PANEL F PCB	1	ABS+SPRAY	
150	3015102200	SPRING ICE D/LEVER	1	SUS	
151	3011495300	COVER ICE FLAP AS	1	FRU-541D	
152	3012019700	FIXTURE ICE SHUT LVR	1	SUS	
153	3015402000	VALVE SOL DISP	1	CUBE SN8	
154	3018125800	SWITCH MICRO	1	VP333A-2D	
155	3012213200	FRAME DISPNS BUTTON	1	ABS	
156	3016304600	BUTTON DISPNS	1	SILICON	
157	3012406900	GRILL DISPENSER	1	ABS	
158	3019027500	POCKET DAIRY AS	1	POCKET+COVER	
159	3019027200	POCKET R *M AS	1	BASE+DECO+SILK	
160	3011187000	CASE H/BAR AS	1	CASE+DOOR	
161	3019027700	POCKET R *H AS	1	BASE+DECO+SILK	
162	3019027300	POCKET R *S AS	2	BASE+DECO+SILK	
163	3000060510	ASSY R DR	1		
163-1	3012318900	GASKET R DR AS	1	PVC	
163-2	3012319300	GASKET H/BAR B AS	1	PVC	
163-3	3000058010	ASSY R DR URT	1	FRU-541F	
163-4	3015204500	STOPPER H/BAR DR *R	1	PO T4.0	
163-5	3015204400	STOPPER H/BAR DR *L	1	PO T4.0	
163-6	3012319400	GASKET H/BAR A AS	1	PVC	
163-7	3011765000	DOOR H/BAR URT AS	1	FRU-541F	
163-8	3011497200	COVER FRAME H/BAR	1	ABS	
163-9	3018125600	SWITCH H/BAR DR AS	1	SP101B-2D1(T)	



DAEWOO ELECTRONICS CORP.  
686, AHYEON-DONG, MAPO-GU,  
SEOUL, KOREA.  
C.P.O. BOX 8003 SEOUL KOREA

PRINTED DATE : JULY 2005